6+

PARASITE DISABLER LASER TANK (PDLT) USER MANUAL



OFFICIALLY LICENSED

SKIBIDI TOILET




FORCE1®

invisible NARRATIVES

2.4G AUTO PAIRING INSTRUCTIONS

1. Install the batteries in the back of the remote control. Turn the remote control on, the indicator light will flash. Turn on the RC tank. The tank and transmitter will pair automatically. If there is any issue, turn everything off, make sure all the batteries are new/charged and then turn the remote and tank on again.
2. Each remote control can only be linked to one remote control car. When the connection is successful, each car will not interfere with each other.
3. If pairing is not successful, it will enter sleep mode after 45 seconds. While playing with the tank, if there is no operation or 5 minutes the tank will enter sleep mode to preserve battery.

REMOTE CONTROL FUNCTION DESCRIPTION

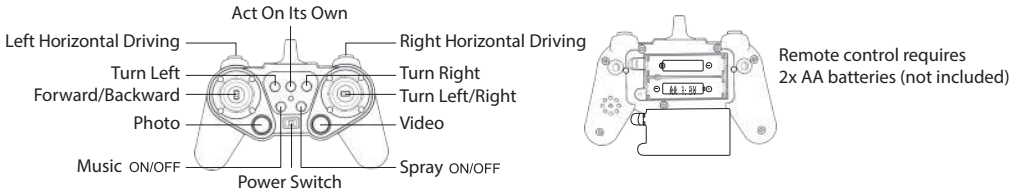


Remote control requires
2x AA batteries (not included)

CHARGING


1. Charge the 3.7v battery before use.
2. Insert the battery's wire plug into the charger's plug paying attention to the correct polarity. Plug the USB end into a USB port for charging.
3. Charging takes 2-3 hours. The light on the charger will be red when charging and will turn off when fully charged.


WARNING: Do not leave the battery on the charger once the battery is fully charged. Do not charge unattended. It is recommended to keep the battery in a lipo safe bag (not included) and do not expose the battery to direct sunlight or heat.

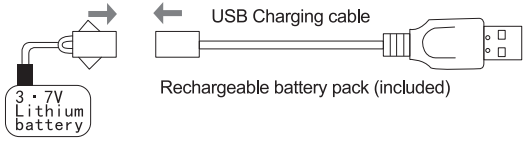

HOW TO INSTALL THE BATTERY


1. Remote control
   a. Open the battery cover of the remote control and install the AA batteries (not included) according to the polarity of the positive and negative poles in the battery compartment of the remote control.
   b. Close the battery cover and replace the screws.
2. Remote control car
   a. Open the battery cover under the car, connect the rechargeable battery to the power socket and put it into the battery compartment under the car.
   b. Close the battery cover and replace the screws.

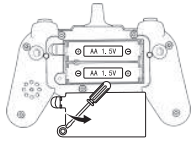

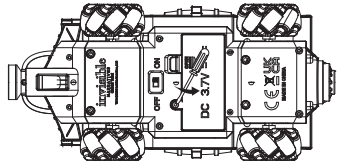

REMOTE CONTROL AND CAR OPERATION

Press the left horizontal button,
the tank moves to the left.

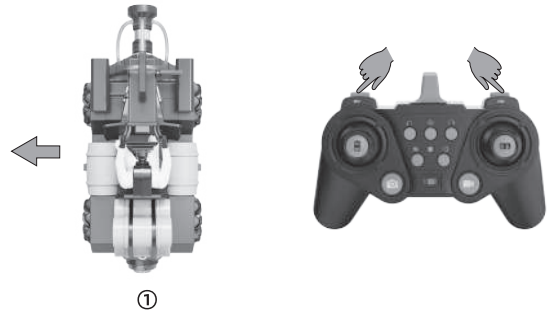

①

Press the right horizontal button,
the tank moves to the right.

②

Press the turn left button,the
tank slowly turns to the left.



③

Press the turn right button,the
tank slowly turns to the right.

④

MOBILE PHONE CONNECT WITH TANK

Download and install APP: SkibidiFPV

This software is suitable for mobile phones in the IOS 9.0 or later and Android 4.4 or later system.

Android IOS


CONNECTION INSTRUCTIONS

1. Power on the tank and put on the flat surface in horizontal position (important).

Put on the flat surface
in horizontal position



2. Turn on “WiFi (WLAN)” of the mobile phone and choose Skibidi RC, return to “SkibidiFPV” after successful connection.

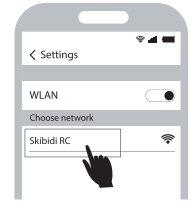

6+

PARASITE DISABLER LASER TANK (PDLT) USER MANUAL



OFFICIALLY LICENSED

SKIBIDI TOILET




FORCE1®


invisible NARRATIVES

2.4G AUTO PAIRING INSTRUCTIONS

1. Install the batteries in the back of the remote control. Turn the remote control on, the indicator light will flash. Turn on the RC tank. The tank and transmitter will pair automatically. If there is any issue, turn everything off, make sure all the batteries are new/charged and then turn the remote and tank on again.
2. Each remote control can only be linked to one remote control car. When the connection is successful, each car will not interfere with each other.
3. If pairing is not successful, it will enter sleep mode after 45 seconds. While playing with the tank, if there is no operation or 5 minutes the tank will enter sleep mode to preserve battery.

REMOTE CONTROL FUNCTION DESCRIPTION

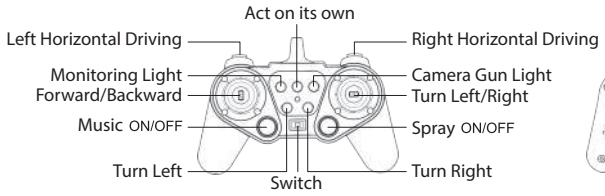

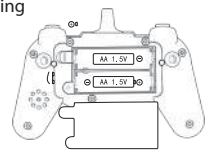


Remote control requires
2x AA batteries (not included)

CHARGING


1. Charge the 3.7v battery before use.
2. Insert the battery's wire plug into the charger's plug paying attention to the correct polarity. Plug the USB end into a USB port for charging.
3. Charging takes 2-3 hours. The light on the charger will be red when charging and will turn off when fully charged.


WARNING: Do not leave the battery on the charger once the battery is fully charged. Do not charge unattended. It is recommended to keep the battery in a lipo safe bag (not included) and do not expose the battery to direct sunlight or heat.

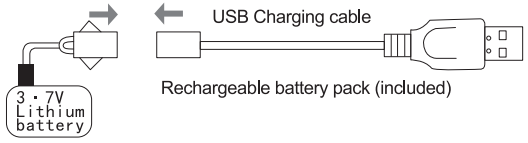

HOW TO INSTALL THE BATTERY

1. Remote control
   a. Open the battery cover of the remote control and install the AA batteries (not included) according to the polarity of the positive and negative poles in the battery compartment of the remote control.
   b. Close the battery cover and replace the screws.
2. Remote control car
   a. Open the battery cover under the car, connect the rechargeable battery to the power socket and put it into the battery compartment under the car.
   b. Close the battery cover and replace the screws.

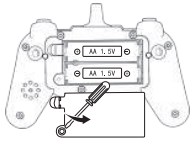


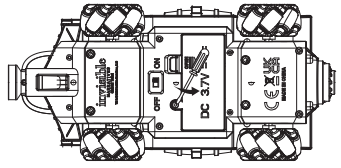

REMOTE CONTROL AND CAR OPERATION


① Press the left horizontal button, the tank moves to the left.



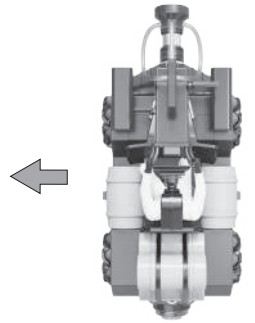


② Press the right horizontal button, the tank moves to the right.



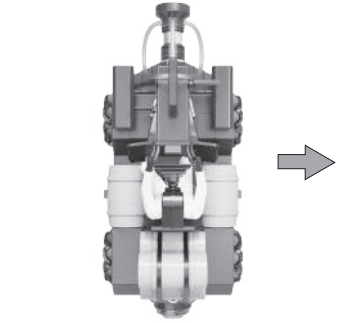

③ Press the turn left button,the tank slowly turns to the left.



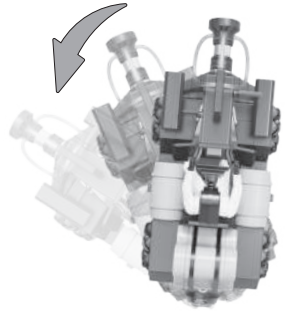

④ Press the turn right button,the tank slowly turns to the right.



