FUJIFILM

DIGITAL CAMERA

X-M5

New Features Guide

Version 1.30

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

https://fujifilm-x.com/support/download/firmware/cameras/

BL00005473-200 EN

Contents

The features listed below have been added, deleted, or updated in X-M5 firmware version 1.30. For the latest manuals, visit the following website.

https://fujifilm-dsc.com/en/manual/

A firmware update resets the **CONNECTION MODE** setting in the network/USB setting menu to the default value if **WIRELESS TETHER SHOOTING FIXED** is selected. Configure the settings again according to the external device to be connected.

No.	Description	X-M5 📖	See 📖	Ver.
1	Pictures can now be printed on connected Fujifilm instax Link printers, Fujifilm instax Evo series, and Fujifilm instax LiPlay series.	259 262 274 294 384	1 2 3 5 6	1.30
2	**instax PRINTER PRINT** and **instax IMAGE QUALITY** MODE have been added under ▣ **PLAY BACK MENU**.	259	1	
3	**instax IMAGE QUALITY MODE** has been added to the network/USB setting menu.	294	5	
4	**instax DIRECT PRINT** has been added to **BUTTON/DIAL SETTING** > ▶ **REC BUTTON SETTING**.	331	5	

No.	Description	X-M5 📖	See 📖	Ver.
5	**WIRELESS COMMUNICATION** has been deleted from **SHOOTING SETTING**, **MOVIE SETTING**, and **PLAY BACK MENU**.	183 208 254	—	1.20
6	**instax PRINTER PRINT** has been deleted from **PLAY BACK MENU**.	259 262 275	—	
7	The pairing procedure between the camera and smartphone has been changed.	266	9	
8	**instax PRINTER CONNECTION SETTING** has been deleted from the network/USB setting menu.	274 294	—	
9	**WIRELESS COMMUNICATION** has been deleted from the features that can be assigned in **BUTTON/DIAL SETTING** > **FUNCTION (Fn) SETTING** and **POWER ZOOM LENS FUNCTION (Fn) SETTING**.	321 350 354 356	—	
10	**WIRELESS COMMUNICATION** has been deleted from **BUTTON/DIAL SETTING** > **REC BUTTON SETTING**.	331	—	
11	The "instax SHARE Printers SP-1/SP-2/SP-3" accessories from Fujifilm are no longer supported.	386	—	
12	**SUPPORT WEBSITE** has been added under **USER SETTING** in the setup menu.	307	11	1.10

MEMO

Changes and Additions

Changes and additions are as follows.

X-M5 Owner's Manual: 📖 259 **Ver. 1.30**
instax PRINTER PRINT

Print pictures on optional Fujifilm instax Link printers, Fujifilm instax Evo series, and Fujifilm instax LiPlay series. First register the printer you will use (📖 3).

X-M5 Owner's Manual: 📖 259 **Ver. 1.30**
instax IMAGE QUALITY MODE

Set the image quality when printing pictures on optional Fujifilm instax Link printers, Fujifilm instax Evo series, and Fujifilm instax LiPlay series.

Option	Description
instax-Rich Mode	Print with rich color expression.
instax-Natural Mode	Print with conventional image quality.

These options are only available when using a compatible printer.

X-M5 Owner's Manual: 📖 262 Ver. 1.30
Supported Features

This camera supports the following features:

Feature	Description	📖
Connecting to the smartphone app	Connect to smartphones via Bluetooth® or a USB cable to upload pictures or control the camera remotely while the smartphone displays the view through the lens.	
USB card readers	Connect a card reader to a computer or smartphone via USB and copy pictures from memory cards.	
Web camera	Connect the camera to a computer via USB for use as a webcam.	
instax printers	Print pictures on connected instax printers or instax hybrid cameras.	3
Tethered photography	Take pictures from a computer to which the camera is connected ("tethered") via wireless LAN or USB.	
Upload to Frame.io	Upload files to Frame.io.	
RAW processing	Harness the power of the camera's image processing engine when processing RAW pictures on a computer.	
Saving and Loading Settings	Save camera settings to, or load existing from, a computer.	

X-M5 Owner's Manual: 📖 274 Ver. 1.30
instax Printers

Print pictures on optional Fujifilm instax Link printers, Fujifilm instax Evo series, and Fujifilm instax LiPlay series.

Visit the following website about compatible printers.
https://www.fujifilm-x.com/support/compatibility/cameras/

Establishing a Connection

Select **Bluetooth/SMARTPHONE SETTING** in the network/USB setting menu to pair the camera with the printer in **PAIRING REGISTRATION**. Once paired, the camera and printers will be automatically connected via Bluetooth.

- Once paired, the printer will automatically connect to the camera every time it is started up.
- Disabling Bluetooth when the camera is not connected to the printer reduces the camera's power consumption.
- If the connection to the printer is unstable, delete the pairing with the printer for **Bluetooth/SMARTPHONE SETTING** > **Bluetooth DEVICE LIST** and pair with the printer again.

Printing Pictures

1 Turn the printer on.

2 Select **instax PRINTER PRINT** in the playback menu.

3 Use the focus stick (focus lever) to display the picture you want to print, then press **MENU/OK**.



- Pictures taken with other cameras cannot be printed.
- The area printed is smaller than the area visible in the LCD monitor.
- The displays may vary depending on the printer connected.

4 The cropping screen is displayed.

Adjust the cropping position and press **MENU/OK**.



Cropping is not available if the aspect ratio of the film to be printed and the image are the same.

5 The picture will be sent to the printer and printing will start.

instax Image Quality Mode

In addition to the existing "instax-Natural Mode", the **instax IMAGE QUALITY MODE** offers an "instax-Rich Mode" featuring vibrant colors.

These options are only available when using a compatible printer.

X-M5 Owner's Manual: 📖 294 Ver. 1.30
instax IMAGE QUALITY MODE

Set the image quality when printing pictures on optional Fujifilm instax Link printers, Fujifilm instax Evo series, and Fujifilm instax LiPlay series (📖 1).

X-M5 Owner's Manual: 📖 331 Ver. 1.30
▶ REC BUTTON SETTING

Choose the role played by the ⦿ (movie recording) button during playback.

Option	Description
SMARTPHONE TRANSFER ORDER	Pressing the button marks the current picture for transfer. If the camera is not currently paired with a smartphone, **Bluetooth/SMARTPHONE SETTING** options will be displayed.
SELECT & SMARTPHONE TRANSFER ORDER	Pressing the button displays a dialog where pictures can be selected for upload to a smartphone with which the camera is paired. If the camera is not currently paired with a smartphone, **Bluetooth/SMARTPHONE SETTING** options will be displayed instead.
Frame.io TRANSFER ORDER	Pressing the button marks the current picture for upload to Frame.io.
PROTECT	Protect the image.
instax DIRECT PRINT	Switch the display of the current image to the print screen for instax printers or instax hybrid cameras.

instax DIRECT PRINT only takes effect when connecting a compatible printer or hybrid camera.

X-M5 Owner's Manual: 📖 384 Ver. 1.30
Accessories from Fujifilm

The following accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit *https://fujifilm-x.com/support/compatibility/cameras/*.

Rechargeable Li-ion batteries

NP-W126S: Additional high-capacity NP-W126S rechargeable batteries can be purchased as required.

Battery chargers

BC-W126S: Replacement battery chargers can be purchased as required. At +20 °C/+68 °F, the BC-W126S charges an NP-W126S in about 150 minutes.

Remote releases

RR-100: Use to reduce camera shake or keep the shutter open during a time exposure. The RR-100 has a connector with a diameter of 2.5 mm; a third-party ⌀2.5 mm to 3.5 mm adapter is required for connection to the camera.

Stereo microphones

MIC-ST1: An external microphone for movie recording.

FUJINON lenses

XF-/XC-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount.

FUJINON MKX-series lenses: Cinema lenses for the FUJIFILM X-mount.

Macro extension tubes

MCEX-11/16: Attach between the camera and the lens to shoot at high reproduction ratios.

Teleconverters

XF1.4X TC WR: Increases the focal length of the compatible lenses by about 1.4×.

XF2X TC WR: Increases the focal length of the compatible lenses by about 2.0×.

Mount adapters

FUJIFILM M MOUNT ADAPTER: Allows the camera to be used with a wide selection of M-mount lenses.

Shoe-mounted flash units

EF-X500: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a commander or remote flash unit for remote wireless flash photography.

EF-BP1: A battery pack for EF-X500 flash units. Takes up to 8 AA batteries.

EF-60: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 60/197 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. It can also be used as remote flash under the control of an optional EF-W1 wireless commander.

EF-W1: With support for the NAS* wireless communication standard developed by Nissin Japan, this wireless flash commander can be used with optional EF-60 clip-on flash units and other NAS-compliant units.

* NAS is a registered trademark of Nissin Japan Ltd.

EF-X8: This compact, clip-on flash unit draws power from the camera has a Guide Number of approximately 8/26 (ISO 100, m/ft.) and can cover the angle of view of a 16 mm lens (equivalent to 24 mm in 35 mm format).

EF-42: This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

Cooling fans

FAN-001: See "Cooling Fans".

Tripod grips

TG-BT1: Record movies, take photographs, or adjust zoom on compatible power zoom lenses while holding this Bluetooth tripod grip.

Grip belts

GB-001: Improves grip. Combine with a hand grip for more secure handling.

Body caps

BCP-001: Cover the camera lens mount when no lens is attached.

Smartphone printers

instax Link series printers: When connected to a paired device via Bluetooth, this printer can be used to quickly and easily print pictures on instax instant film.

instax Evo series: This hybrid camera allows you to shoot while viewing the monitor, select your favorite pictures, and print them on instax instant film.

instax LiPlay series: This hybrid camera can convert audio recorded with the camera into a QR code and print it together with the picture on instax instant film.

Connecting to a Smartphone via Bluetooth®

Pair the camera with the smartphone and connect via Bluetooth®.

1 Press the (Bluetooth) button when the camera is in shooting mode.

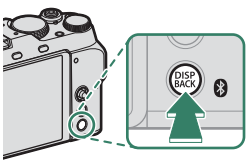

You can also proceed directly to Step 3 by holding the button during playback.

2 Highlight **Bluetooth** and press **MENU/OK**.

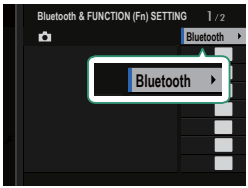

3 Highlight **PAIRING** and press **MENU/OK**.

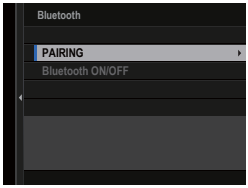

4 Launch the app on the smartphone and pair it with the camera to display a code on the smartphone and the camera. Confirm that both codes match to pair.

A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.

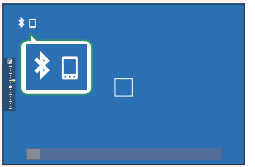

- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
- Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.

X-M5 Owner's Manual: 📖 307 **Ver. 1.10**

SUPPORT WEBSITE

Display the QR code for the support website of the camera. Use your smartphone or another device to scan the code to access the website.

FUJIFILM

FUJIFILM Corporation
7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN
https://fujifilm-x.com