
Jeep® Cherokee

QUICK START GUIDE

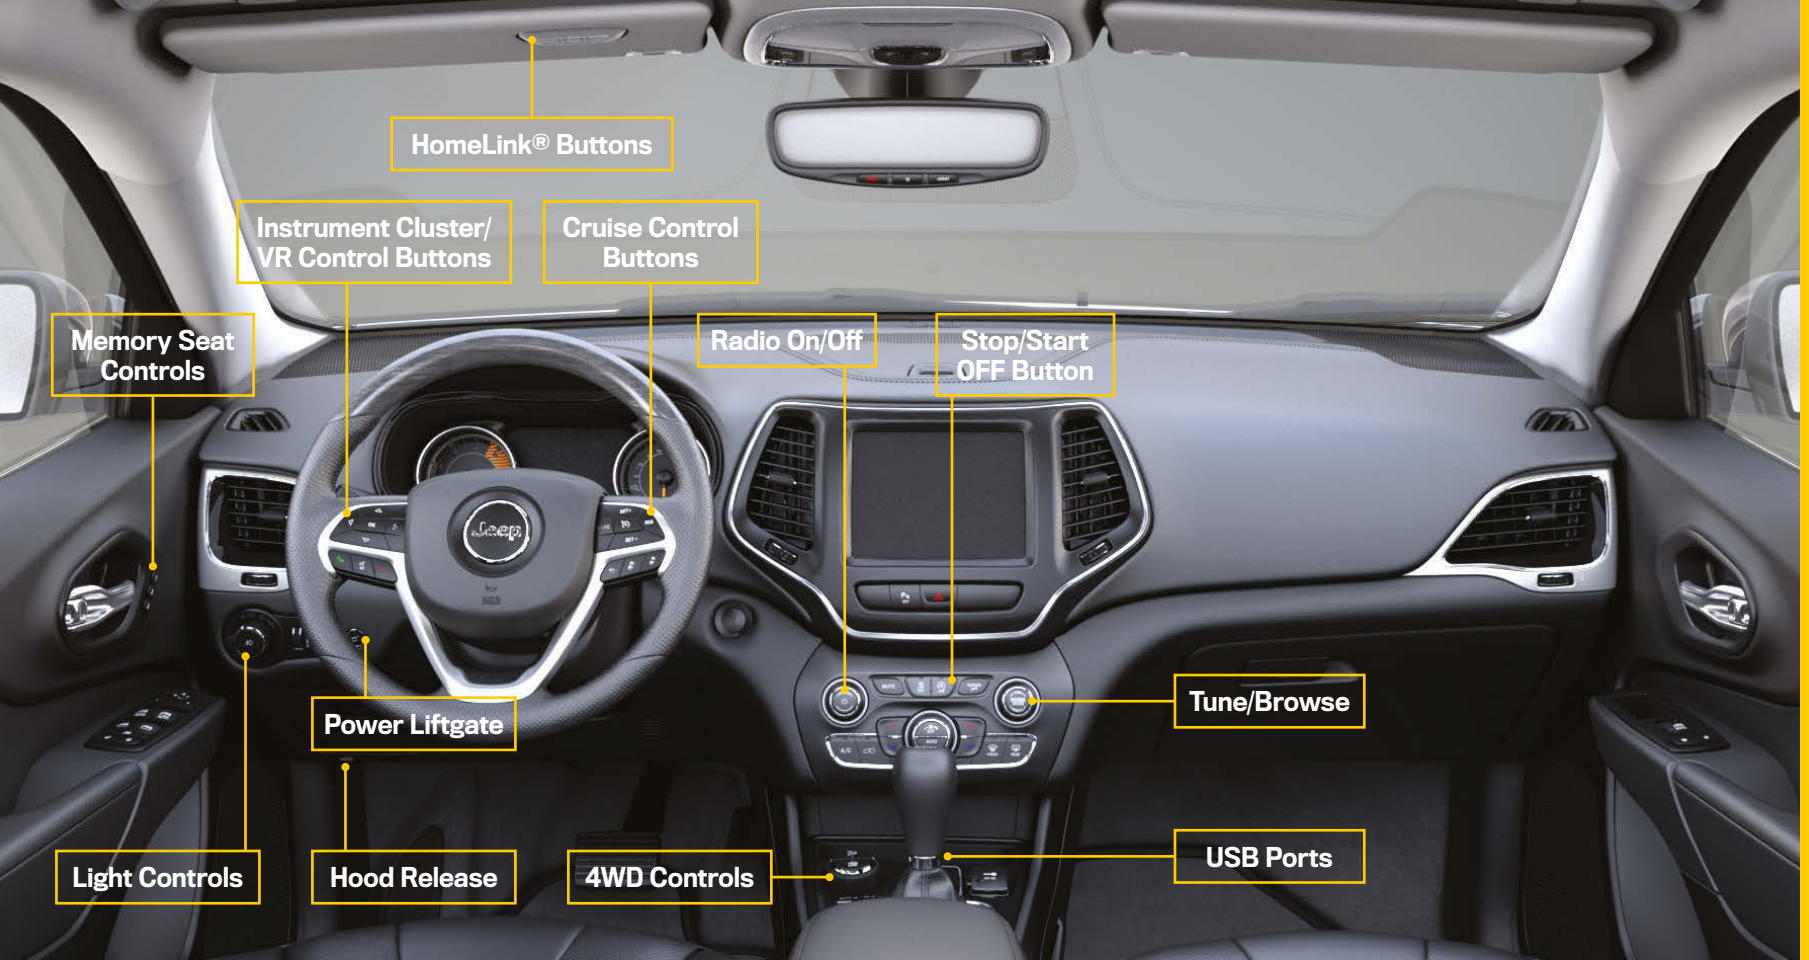


HomeLink® Buttons
Instrument Cluster/ VR Control Buttons
Cruise Control Buttons
Memory Seat Controls
Radio On/Off
Stop/Start OFF Button
Tune/Browse
Power Liftgate
Light Controls
Hood Release
4WD Controls
USB Ports

HomeLink®
GARAGE DOOR OPENER



1. While the car is ON, hold the hand-held garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.

2. Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:
Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.

ROLLING OR NON-ROLLING?
Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

3. **For Non-Rolling Code** garage door openers, watch for the indicator light to go constant.

   For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.

4. **For Rolling Code** garage door openers only, firmly push and release the "LEARN" or "TRAIN" button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle for two long presses.

5. If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

For more detailed instructions, see "Universal Garage Door Opener (HomeLink®)" in your Owner's Manual. Please call 1-800-355-3515 if you require assistance.

Scan me

Hands-Free Liftgate

LIFTGATE NOT OPENING?

Make sure your kicking motion is straight in and out, and within the activation zone.

Please note, this feature is available only on vehicles equipped with Passive Entry.



Use a Straight
In-and-Out Kicking Motion



Activation Zone

Do not move your foot sideways or in a sweeping motion; the sensors may not detect the motion.

Scan me

Driver Memory Settings

CREATE A MEMORY PROFILE

Scan me

1. Place the vehicle's ignition in the ON/RUN position.

2. Adjust all memory profile settings to your desired preferences, including:
   - Driver seat
   - Easy Entry seat (if equipped)
   - Side mirrors
   - Radio station presets

3. Push and release the Set (S) button on the driver's door trim panel, and then push the Memory button (1) or Memory button (2) within five seconds. Each of your two key fobs can be linked to a memory position.

MEMORY POSITION RECALL

To recall the memory settings, push the Memory button that was set or the Unlock button on the key fob linked to that memory position.

KEEP IN MIND:

Memory profiles can be set without the vehicle in PARK, but the vehicle must be in PARK to recall a memory profile.

Connected Services

WITH CONNECTED SERVICES YOU CAN...

- **Lock Your Vehicle**
- **Unlock Your Vehicle**
- **Remote Start Your Vehicle**
- **Cancel Remote Start**
- **Activate Your Horn**

ACTIVATE YOUR REMOTE SERVICES

1. Press "Apps" on the touchscreen.
2. Press "Activate Services".
3. Press "Activate Now".
4. There are two ways to activate: via email or via an agent. On the next screen, you can either enter your name and email, or press "Call An Agent" to directly speak with someone.

TIP:

You can use your remote commands from the Uconnect App, your Owner's Site account, or by calling an agent.

However, not all remote commands will work when calling the agent.

Mopar® YOUR Way

REAP THE BENEFITS OF YOUR OWNER'S PROFILE

Get an online experience all your own–tailored to you and your vehicle–accessible anytime, anywhere.

Scan me
(U.S. Residents Only)*

24/7 Access to Everything You Need

- Custom dashboard for every vehicle in your garage
- Access to your vehicle's Owner's Manual, warranty & more
- Ability to set preferred dealer & schedule service with ease
- Maintenance records and up-to-date vehicle health reports**
- Special offers on exceptional Mopar® service at your dealership
- Remote vehicle commands right from your mobile device**

** Requires an active SiriusXM Guardian™ subscription

*Canadian residents are not required to create a profile, as one is created when a SiriusXM Guardian™ account is activated.

Pair a Phone

Scan me

1. Make sure Bluetooth® is enabled on your mobile device.
2. With the vehicle in the ACC or ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar.
3. Press "Pairing" and then press "Paired Phones and Audio Devices".
4. Select "Add Device" then follow the prompts on your phone and on the touchscreen.

KEEP IN MIND:

Some mobile phones will require you to enter a PIN as part of the connection process.

For more detailed connecting instructions, refer to "Phone Operation" in your Uconnect Owner's Manual Supplement.

Ready to remove a phone or audio device?



1. Press the "Pairing" button on the touchscreen.
2. Press "Paired Phones and Audio Devices".
3. Press "Settings" next to the phone or device you want to remove.
4. Press "Delete Device".
5. Press "X" to exit the settings screen. The device should be removed.

YOU MAY ALSO BE ABLE TO CONNECT YOUR APPS

If your vehicle is equipped with Android Auto™ & Apple CarPlay®, connect your unlocked smartphone to one of the media USB ports in your vehicle.

Once connected and recognized, the Android Auto™ or CarPlay® icon will replace the phone icon on your personalized menu bar.

KEEP IN MIND:

For Android™ Users, if the Android Auto™ App was not previously downloaded, it will download the first time you plug in your device.

For Apple® Users, Apple CarPlay® is only compatible with iPhone5® or later and requires Siri being enabled in Settings.

Lights & Wipers Operation



PUSH
TO ACTIVATE HIGH BEAMS

PULL
FOR FLASH-TO-PASS



Headlights, Parking Lights & Instrument Panel Lights

Instrument Panel Dimmer Control

Parking Lights & Instrument Panel Lights

Fog Lights

Ambient Light Dimmer Control

PUSH UP
TO MIST THE WINDSHIELD

PUSH FORWARD
TO ACTIVATE THE REAR WINDSHIELD WASHER

PULL
TO ACTIVATE THE FRONT WINDSHIELD WASHER



Rear Wipers ON

Front Wipers

OFF

INT

LOW

HIGH

Rear Wipers OFF

Active Driving Assist Systems



The **Cruise Control system** will hold your vehicle's speed when you take your foot off of the accelerator.

The **Adaptive Cruise Control system** will adjust the speed you have set in order to maintain a set distance from the vehicle in front of yours.

Scan me

Scan me

The **Forward Collision Warning system** provides the driver with audible and visual warnings, and may apply a brake jerk to warn the driver when it detects a potential frontal collision.

The **LaneSense system** warns you if your vehicle drifts out of the lane without a turn signal applied. Your vehicle may provide a visual warning, apply pressure to your steering wheel, or both. LaneSense can be enabled or disabled using the button on the switch panel below the Uconnect display.

The **ParkSense system** alerts you when an obstacle is detected when backing up or moving forward. It can also detect obstacles on the sides of your vehicle within a specified range. The brakes may be automatically applied and released during a reverse parking maneuver if the system detects a possible collision with an obstacle.

The **ParkSense Active Park Assist system** aids you in parallel and perpendicular parking maneuvers by identifying a parking space, providing audible and visual instructions, and controlling your vehicle's steering wheel. You maintain control of the gear selector, accelerator, and brake pedals during these maneuvers, which also includes exiting a parallel parking space.

Scan me

The **Blind Spot Monitoring system** uses sensors to detect vehicles that enter the blind spot zones from the rear, front, or side of the vehicle.



KEEP IN MIND:

You can use your radio to adjust the Blind Spot Monitoring alerts to include lights on the outside mirrors only, lights and an audible chime, or turn the alerts off entirely.

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering Fault (EPS)
	Electronic Throttle Control (ETC)		Engine Temperature		Hood Open		Liftgate Open		Oil Pressure
	Oil Temperature		Seat Belt Reminder		Transmission Temperature		Vehicle Security		4WD Lock
	4WD Low		Anti-Lock Brake System (ABS)		Cruise Control Fault		Diesel Particulate Filter (DPF) Cleaning In Progress		Electronic Park Brake
	Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/ Malfunction		Forward Collision		Forward Collision Warning (FCW) OFF
	Fuel Cutoff		Immobilizer Fail / VPS Electrical Alarm		LaneSense		Low Coolant Level		Low Fuel
	Low Washer Fluid		Rear Axle Lock		Rear Fog		Service 4WD		Service Adaptive Cruise Control (ACC)
	Service Forward Collision Warning (FCW)		Service LaneSense		Service Stop/Start System		Tire Pressure Monitoring System (TPMS)		Towing Hook Breakdown
	Wait To Start		Water In Fuel		Adaptive Cruise Control (ACC) Set No Target		Adaptive Cruise Control (ACC) Set With Target		Automatic High Beam
	Cruise Control SET		Front Fog		LaneSense		Parking/Headlights On		Stop/Start Active
	Turn Signal		Cruise Control Ready		Hill Descent Control (HDC)		LaneSense		Speed Warning
	High Beam								

For additional information on any of the topics in this publication, please refer to your Owner's Manual.

©2021 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC.
App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Third Edition
KL_QSG_EN_USC_AA