
Jeep® Compass

QUICK START GUIDE

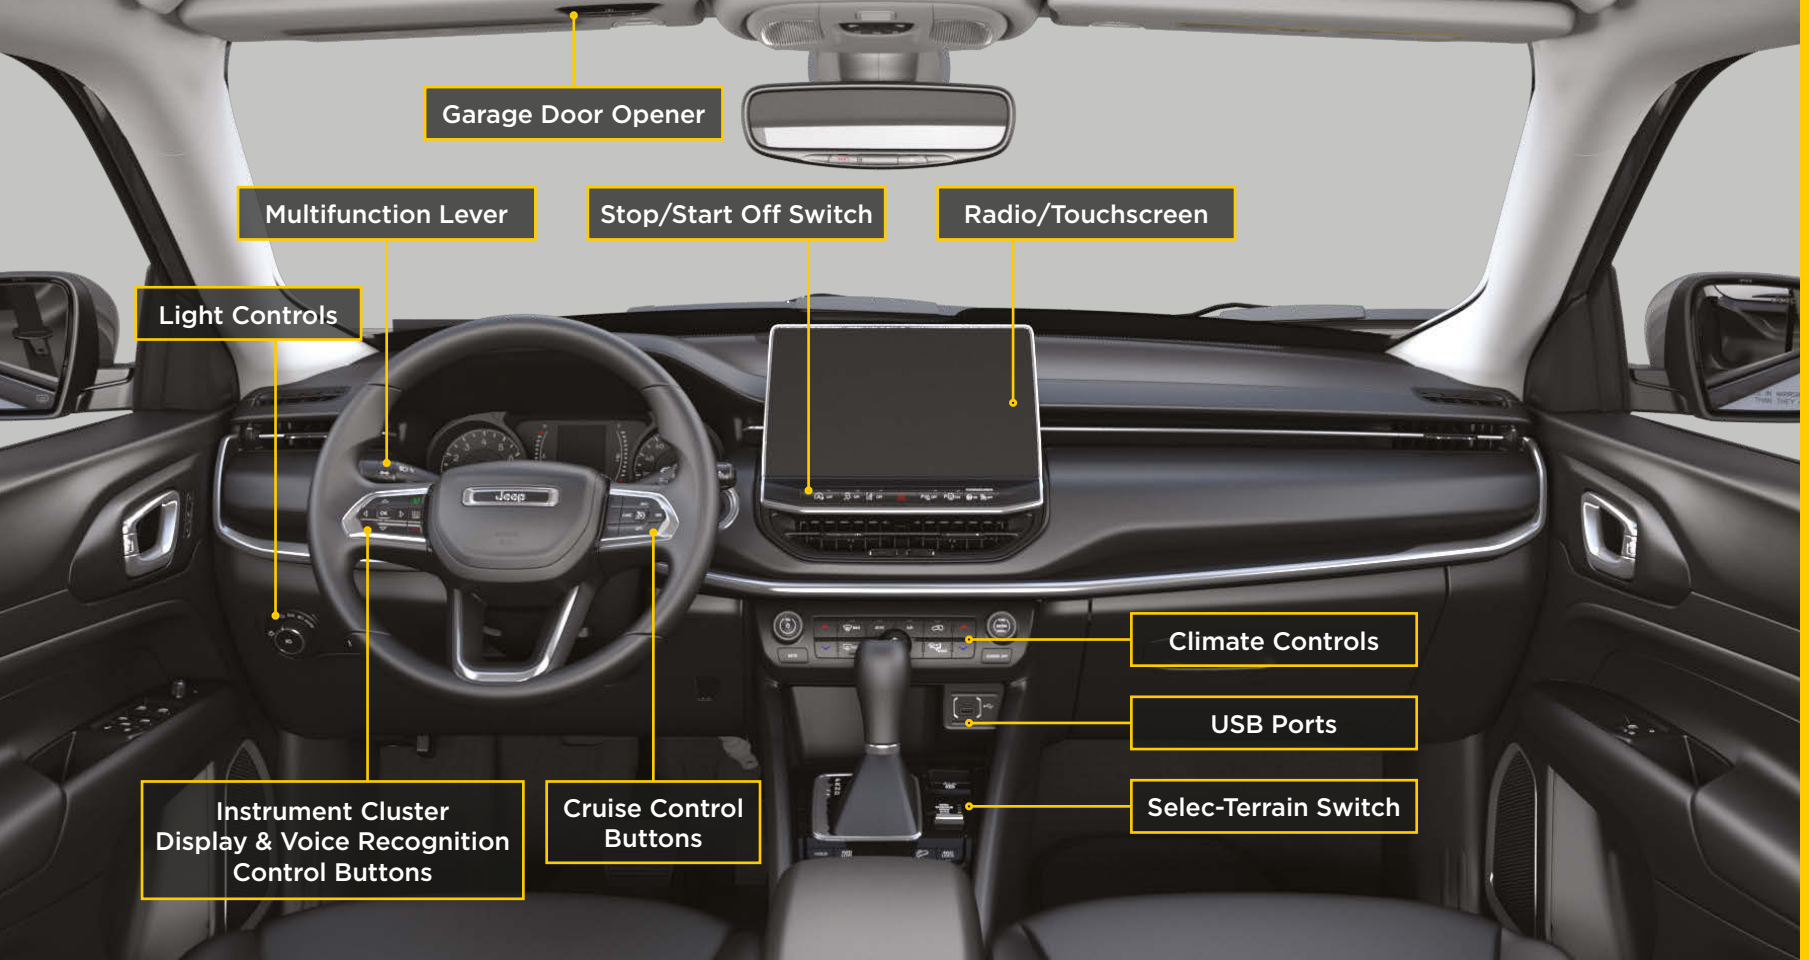


Garage Door Opener
Multifunction Lever
Stop/Start Off Switch
Radio/Touchscreen
Light Controls
Climate Controls
USB Ports
Selec-Terrain Switch
Instrument Cluster Display & Voice Recognition Control Buttons
Cruise Control Buttons

Stop/Start

REDUCE FUEL CONSUMPTION

Stop/Start automatically stops the engine during a vehicle stop if the required conditions are met.

The system is automatically enabled each time the engine is started.

To manually turn off Stop/Start, push the Stop/Start OFF switch located on the switch bank.

Stop/Start OFF Switch



Autostop Mode

To activate:

- The system must be in STOP/START READY state.
- The vehicle must be completely stopped.
- The gear selector must be in a forward gear with the brake pedal pressed.

Once the system is activated, the engine will shut down, the tachometer will move to zero, and the Stop/Start telltale will illuminate.

KEEP IN MIND:

Prior to engine shut down, the system will check many safety and comfort conditions to determine if they are fulfilled. Certain conditions will prevent the engine from autostopping. See your Owner's Manual for a detailed list of these conditions.

System Malfunction

If there is a malfunction in the Stop/Start system, the system will not shut down, and a message will appear in the instrument cluster display.

Have the system checked by an authorized dealer.

Scan For Stop/Start Video

Pair a Phone



1. Make sure Bluetooth® is enabled on your mobile device
2. With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar
3. Press "Device Manager"
4. Press "Add Device"
5. Follow the prompts on your phone and on the touchscreen

Troubleshooting

1. Perform a reset by holding the power button on the radio for 15 seconds
2. Reboot your phone
3. Remove the paired phone
4. Follow the Pair a Phone steps above to set up phone

CONNECT YOUR APPS

Connect your smartphone to the media USB port or pair your smartphone within Device Manager.

The Android Auto™ or Apple CarPlay® icon will replace the phone icon on the touchscreen.

KEEP IN MIND:

For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.

For Apple® Users, Apple CarPlay® is only compatible with iPhone® 5 or later and requires Siri being enabled in Settings.

Ready to remove a phone or audio device?

1. Press "Device Manager" on the touchscreen.
2. Press the Settings gear icon next to the phone or device you would like to remove.
3. Press "Delete Device". The device should be removed.
4. On your phone's Bluetooth® or Setup menu, remove the saved Uconnect radio.



Connected Services

WITH CONNECTED SERVICES YOU CAN...

- **Lock Your Vehicle**
- **Unlock Your Vehicle**
- **Remote Start Your Vehicle**
- **Cancel Remote Start**
- **Activate Your Horn**

ACTIVATE YOUR REMOTE SERVICES

1. Press “Apps” on the touchscreen.
2. Press “Activate Services”.
3. Press “Activate Now”.
4. There are two ways to activate: via email or via an agent. On the next page, you can either enter your name and email, or press “Call An Agent” to directly speak with a certified agent.

   If you previously were registered for Connected Services at the dealer, you will only need to enter your email and PIN to activate them on your vehicle.
5. Download the Jeep® Mobile App from the Google Play Store or Apple® App Store for access to Remote Commands. Log in with your account information.

Mopar® YOUR Way

CREATE YOUR OWNER'S PROFILE TODAY!

Get 24/7 Access To Everything You Need

- Custom vehicle dashboard
- Access Owner's Information
- Schedule dealer service with ease
- Special offers on Mopar® services
- View maintenance records**
- Mobile vehicle commands**

**Requires an active Uconnect Connected Services subscription

Registration is simple. Scan the QR code below and provide your email address to get started.

Scan me
(U.S. Residents Only)*

*Canadian residents are not required to create a profile, as one is created when a Uconnect Connected Services account is activated.

GET PERSONALIZED BY REGISTERING

Voice Recognition

USE YOUR VOICE TO CONTROL UCONNECT

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle Settings, you can also say the vehicle's "Wake Up" word, "Hey, Uconnect" or "Hey, Jeep®", without pushing any buttons.



Push the Voice Recognition button to begin a Voice session.

Push the Home button to return to the radio Home screen.

Push the End Call button to end an in-progress phone call.

KEEP IN MIND:
There may be an inconsistent volume between different audio sources.

Popular Voice Commands

Once a Voice session is activated with either the Voice Recognition button or the "Wake Up" word, you can speak a command to the Uconnect system.

Try some of these popular Voice Commands:

1. "Tune to <your favorite radio station>."
2. "Navigate to 1000 Chrysler Drive, Auburn Hills."
3. "Call <name in your phone's contact list>." Make sure your smartphone is paired to the Uconnect System.
4. "Set temperature to 68°F" or "Set temperature to 20°C."

Scan For Voice Recognition Video

TIP:
You can use the vehicle "Wake Up" word without pushing any buttons. Simply say "Hey, Uconnect" or "Hey, Jeep®", and say your command.

Customize Radio Settings

CUSTOMIZE VEHICLE SETTINGS FROM THE UCONNECT SYSTEM

How to find and change Vehicle Settings:

Let's say you want to change the display brightness:

1. Press the Vehicle Mode button in the bottom menu bar of the touchscreen.
2. Select the Settings tab.
3. Select the My Profile menu from the Settings menu.
4. On the Display Mode setting, select "Auto" or "Manual".

   When "Auto" is selected, the screen will automatically adjust the brightness.
   When "Manual" is selected, you can manually adjust the screen brightness.

KEEP IN MIND:

Some settings will show a single checkbox. Press the checkbox to turn the setting On (check mark) or Off (no check mark).

Vehicle Settings in the Uconnect System



Scan For Radio Settings Video

Forward Collision Warning (FCW) With Mitigation

FCW with Mitigation can provide both audible and visual warnings, and may also apply a brake jerk to warn you of a potential frontal collision. The warnings and limited braking are intended to provide you with enough time to react, and avoid or mitigate the potential collision.



The system can be turned on or off through your touchscreen. You can also use your touchscreen to adjust the system's sensitivity and active braking status.

Select between the following **sensitivity** settings:

- Near
- Medium
- Far

Select between the following **brake** settings:

- Warning + Active Braking
- Only Warning
- Off

KEEP IN MIND:
The default settings are “Medium” and “Warning + Active Braking”. This allows the FCW system to warn the driver of a possible collision with the vehicle in front using audible/visual warnings while applying autonomous braking. The system will retain the last setting you have selected when you turn on your vehicle.

Scan For FCW Video

Active Lane Management (ALM)

The Active Lane Management system detects lane markings or road edges and measures your vehicle's position within the lane boundaries. It uses Blind Spot Monitoring (BSM) to detect vehicles in adjacent lanes while you are preparing to change lanes.

To turn the system on, push the ALM button on the switch panel below the Uconnect screen. To turn the system off, push the button again (the LED on the button will turn on when the system is off).



When your vehicle approaches or crosses your lane, the ALM system may provide a visual warning in the instrument cluster, steering assist torque, haptic steering wheel vibration, and/or automatic steering assistance. This is dependant on how many lane markings are detected (one or both), whether or not you apply your turn signal, and your Uconnect Settings selections.

You can select from the following warning types in your Uconnect Settings:

- Vibration Only
- Steering Assist Only
- Vibration And Steering Assist

KEEP IN MIND:
You can also adjust intensity of the steering wheel vibration, steering assist warning, and the warning zone sensitivity in Uconnect Settings.

Scan For ALM Video

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering (EPS) Fault
	Electronic Throttle Control (ETC)		Engine Temperature		Hood Open		Liftgate Open		Oil Pressure
	Oil Temperature		Seat Belt Reminder		Transmission Fault		Transmission Temperature		Vehicle Security
	4WD Lock		4WD Low		Active Lane Management Warning		Anti-Lock Brake System (ABS)		Electronic Park Brake
	Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/ Malfunction Indicator		Forward Collision Warning (FCW)		Forward Collision Warning (FCW) OFF
	Fuel Cutoff		Immobilizer Fail/ VPS Electrical Alarm		Low Coolant Level		Low Fuel		Low Washer Fluid
	Service 4WD		Service Adaptive Cruise Control (ACC)		Service Forward Collision Warning (FCW)		Service Active Lane Management		Service Stop/Start System
	Tire Pressure Monitoring System (TPMS)		Towing Hook Breakdown		Active Lane Management ON/Armed		Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target
	Automatic High Beam		Cruise Control SET		Front Fog		Parking/Headlights On		Stop/Start Active
	Turn Signal		Active Lane Management ON/Not Armed		Cruise Control Ready		Cruise Control SET		Hill Descent Control (HDC)
	High Beam		Cruise Control Ready With Base Cluster						

For additional information on any of the topics in this publication, please refer to your Owner's Manual.

©2022 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC.
App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Fourth Edition
MP_QSG_EN_USC_BA