

QUICK START GUIDE

JEEP® COMPASS

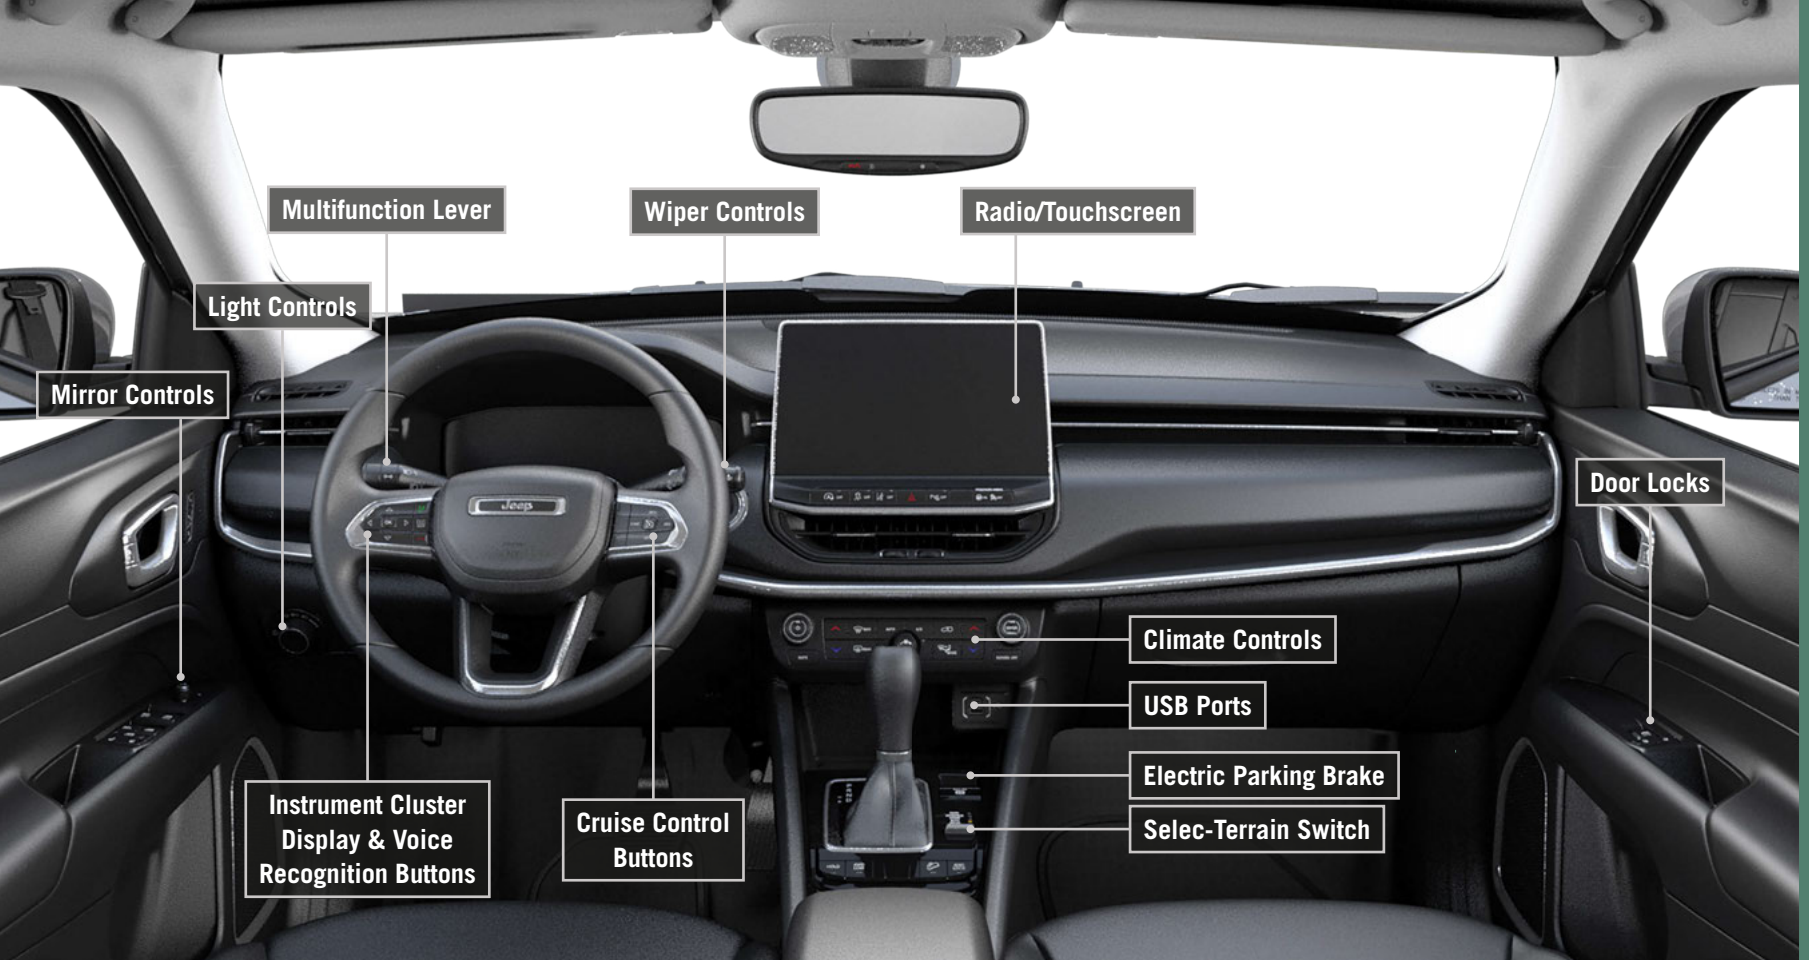
Multifunction Lever
Wiper Controls
Radio/Touchscreen
Light Controls
Mirror Controls
Door Locks
Climate Controls
USB Ports
Electric Parking Brake
Selec-Terrain Switch
Instrument Cluster Display & Voice Recognition Buttons
Cruise Control Buttons

Connected Services

WITH CONNECTED SERVICES YOU CAN...

- Lock Your Vehicle
- Unlock Your Vehicle
- Remote Start Your Vehicle
- Cancel Remote Start
- Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

1. Press “Apps” on the touchscreen.
2. Press “Activate Services”.
3. Press “Activate Now”.
4. You can activate via email or an agent. Press "Call An Agent" to speak with an agent. If you were registered for Connected Services at the dealership, simply enter your email and PIN to activate them.
5. Download the Jeep® Mobile App from the Google Play® Store or Apple® App Store® for access to Remote Commands. Log in with your account information.

MOPAR®

Scan me
(U.S. Residents Only)*

Mopar® YOUR Way

Get 24/7 access to everything you need, including custom vehicle dashboards, maintenance records, mobile vehicle commands and more. Scan the QR code to register.

*Canadian residents are not required to create a profile, as one is created when a Jeep® Connect account is activated.

Pair a Phone

Scan For Phone Pairing Video

1. Make sure Bluetooth® is enabled on your mobile device
2. With the vehicle in the ON/RUN position, press the Phone button on the vehicle’s touchscreen menu bar
3. Press “Device Manager”
4. Press “Add Device”
5. Follow the prompts on your phone and on the touchscreen

Troubleshooting

1. Perform a reset by holding the power button on the radio for 15 seconds
2. Reboot your phone
3. Remove the paired phone
4. Follow the Pair a Phone steps above to set up phone

Scan For Android™ Auto Video

Scan For Apple Carplay® Video

Vehicle Settings in the Uconnect System



Scan For Radio Settings Video

Customize Radio Settings

CUSTOMIZE VEHICLE SETTINGS FROM THE UCONNECT SYSTEM

How to find and change Vehicle Settings:

Let's say you want to change the display brightness:

1. Press the Vehicle Mode button in the bottom menu bar of the touchscreen.
2. Select the Settings tab.
3. Select the My Profile menu from the Settings menu.
4. When “Auto” is selected, the screen will automatically adjust the brightness. When “Manual” is selected, you can manually adjust the screen brightness.

Memory Profiles

You may create two memory profiles which save settings for driver seat position and radio presets. To program, simply push the S button, then push a memory button, 1 or 2, within five seconds. Now push 1 or 2 any time to automatically recall your desired settings.

KEEP IN MIND:

Some settings will show a single checkbox. Press the checkbox to turn the setting On (check mark) or Off (no check mark).

Voice Recognition

USE YOUR VOICE TO CONTROL UCONNECT

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle Settings, you can also say the vehicle's "Wake Up" word, "Hey, Uconnect" or "Hey, Jeep®", without pushing any buttons.



KEEP IN MIND:
There may be an inconsistent volume between different audio sources.

Popular Voice Commands
Once a Voice session is activated with either the Voice Recognition button or the "Wake Up" word, you can speak a command to the Uconnect system.

Try some of these popular Voice Commands:

1. "Tune to <your favorite radio station>."
2. "Navigate to 1000 Chrysler Drive, Auburn Hills."
3. "Call <name in your phone's contact list>."
   Make sure your smartphone is paired to the Uconnect System.
4. "Set temperature to 68°F" or "Set temperature to 20°C."

TIP:
You can use the vehicle "Wake Up" word without pushing any buttons. Simply say "Hey, Uconnect" or "Hey, Jeep®", and say your command.

Scan For Voice Recognition Video

Stop/Start

REDUCE FUEL CONSUMPTION

Autostop Mode

To activate:

- The system must be in STOP/START READY state.
- The vehicle must be completely stopped.
- The gear selector must be in a forward gear with the brake pedal pressed.

Once the system is activated, the engine will shut down, the tachometer will move to zero, and the Stop/Start telltale will illuminate.



Stop/Start OFF Switch

KEEP IN MIND:

Prior to engine shut down, the system will check many safety and comfort conditions to determine if they are fulfilled. Certain conditions will prevent the engine from autostopping. See your Owner's Manual for a detailed list of these conditions.

System Malfunction

If there is a malfunction in the Stop/Start system, the system will not shut down the engine, and a message will appear in the instrument cluster display. Have the system checked by an authorized dealer.

Scan For Stop/Start Video

Digital Cluster

The instrument cluster display can show you how systems are working and give you a warning when they are not.

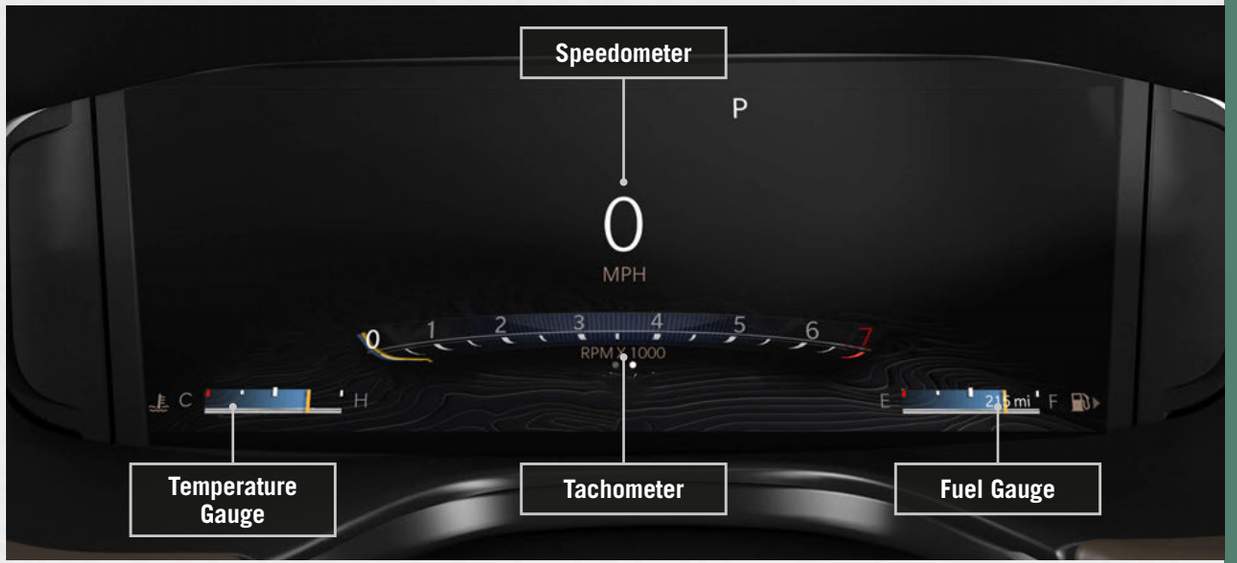

Scan For Digital Cluster Video

Active Lane Management (ALM)

The Active Lane Management system detects lane markings or road edges and measures your vehicle's position within the lane boundaries. It uses Blind Spot Monitoring (BSM) to detect vehicles in adjacent lanes while you are preparing to change lanes.

To turn the system on, push the ALM button on the switch panel below the Uconnect screen. To turn the system off, push the button again (the LED on the button will turn on when the system is off).



When your vehicle approaches or crosses your lane, the ALM system may provide a visual warning in the instrument cluster, steering assist torque, haptic steering wheel vibration, and/or automatic steering assistance. This is dependent on how many lane markings are detected (one or both), whether or not you apply your turn signal, and your Uconnect Settings selections.

You can select from the following warning types in your Uconnect Settings:

- Vibration Only
- Steering Assist Only
- Vibration And Steering Assist

KEEP IN MIND:
You can also adjust intensity of the steering wheel vibration, steering assist warning, and the warning zone sensitivity in Uconnect Settings.

Scan For ALM Video

Handsfree Liftgate

TO OPEN YOUR LIFTGATE:

1. **Make sure your kicking motion is within the activation zone**
2. **Use a Straight In and Out Kicking Motion**

TIP:
Do not move your foot sideways or in a sweeping motion; the sensors may not detect the motion.



Scan For Hands-Free Liftgate Video



ParkSense Visual Warnings

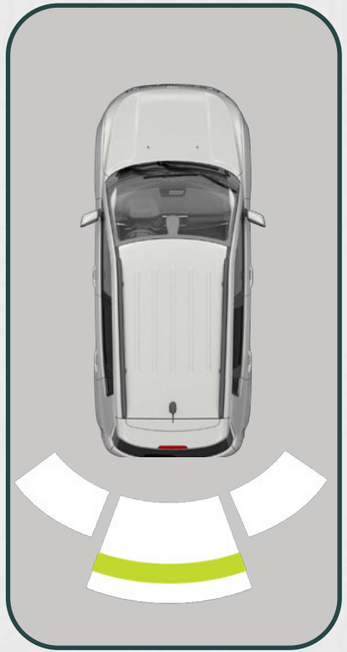

When the sensors detect an obstacle, a chime will sound and the ParkSense Park Assist warning will appear in the instrument cluster display. The system will show arcs in the area of the obstacle based on relative distance and location. As you approach the obstacle, the arcs will move and the chime will change from slow to fast to continuous.

KEEP IN MIND:
The rear sensors from 12 to 79 inches from the bumpers.

Scan For ParkSense Video

Forward Collision Warning (FCW) With Mitigation

FCW with Mitigation can provide both audible and visual warnings, and may also apply a brake jerk to warn you of a potential frontal collision. The warnings and limited braking are intended to provide you with enough time to react, and avoid or mitigate the potential collision.

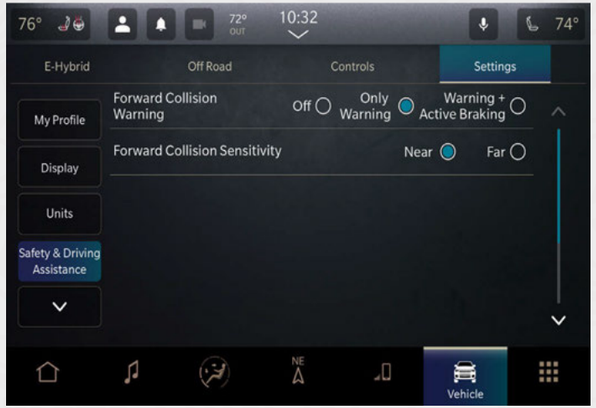

The system can be turned on or off through your touchscreen. You can also use your touchscreen to adjust the system's sensitivity and active braking status.



Select between the following sensitivity settings:
- **Near**
- **Medium**
- **Far**

Select between the following brake settings:
- **Warning + Active Braking**
- **Only Warning**
- **Off**

Scan For FCW Video

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering (EPS) Fault
	Electronic Throttle Control (ETC)		Engine Temperature		Hood Open		Liftgate Open		Oil Pressure
	Oil Temperature		Seat Belt Reminder		Transmission Fault		Transmission Temperature		Vehicle Security
	4WD Lock		4WD Low		Active Lane Management Warning		Anti-Lock Brake System (ABS)		Electronic Park Brake
	Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/ Malfunction Indicator		Forward Collision Warning (FCW)		Forward Collision Warning (FCW) OFF
	Fuel Cutoff		Immobilizer Fail/ VPS Electrical Alarm		Low Coolant Level		Low Fuel		Low Washer Fluid
	Service 4WD		Service Adaptive Cruise Control (ACC)		Service Forward Collision Warning (FCW)		Service Active Lane Management		Service Stop/Start System
	Tire Pressure Monitoring System (TPMS)		Towing Hook Breakdown		Active Lane Management ON/Armed		Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target
	Automatic High Beam		Cruise Control SET		Front Fog		Parking/Headlights On		Stop/Start Active
	Turn Signal		Active Lane Management ON/Not Armed		Cruise Control Ready		Cruise Control SET		Hill Descent Control (HDC)
	High Beam		Cruise Control Ready With Base Cluster						

Jeep® Customer Assistance: (877) 426-5337 (US), (800) 465-2001 (CANADA)

Your vehicle may be equipped with different features than shown in this guide.

For additional information on any of the topics in this publication, please refer to your digital Owner's Manual.

©2025 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC.
App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Second Edition
26_MP_QSG_EN_USC