QUICK START GUIDE



Gladiator

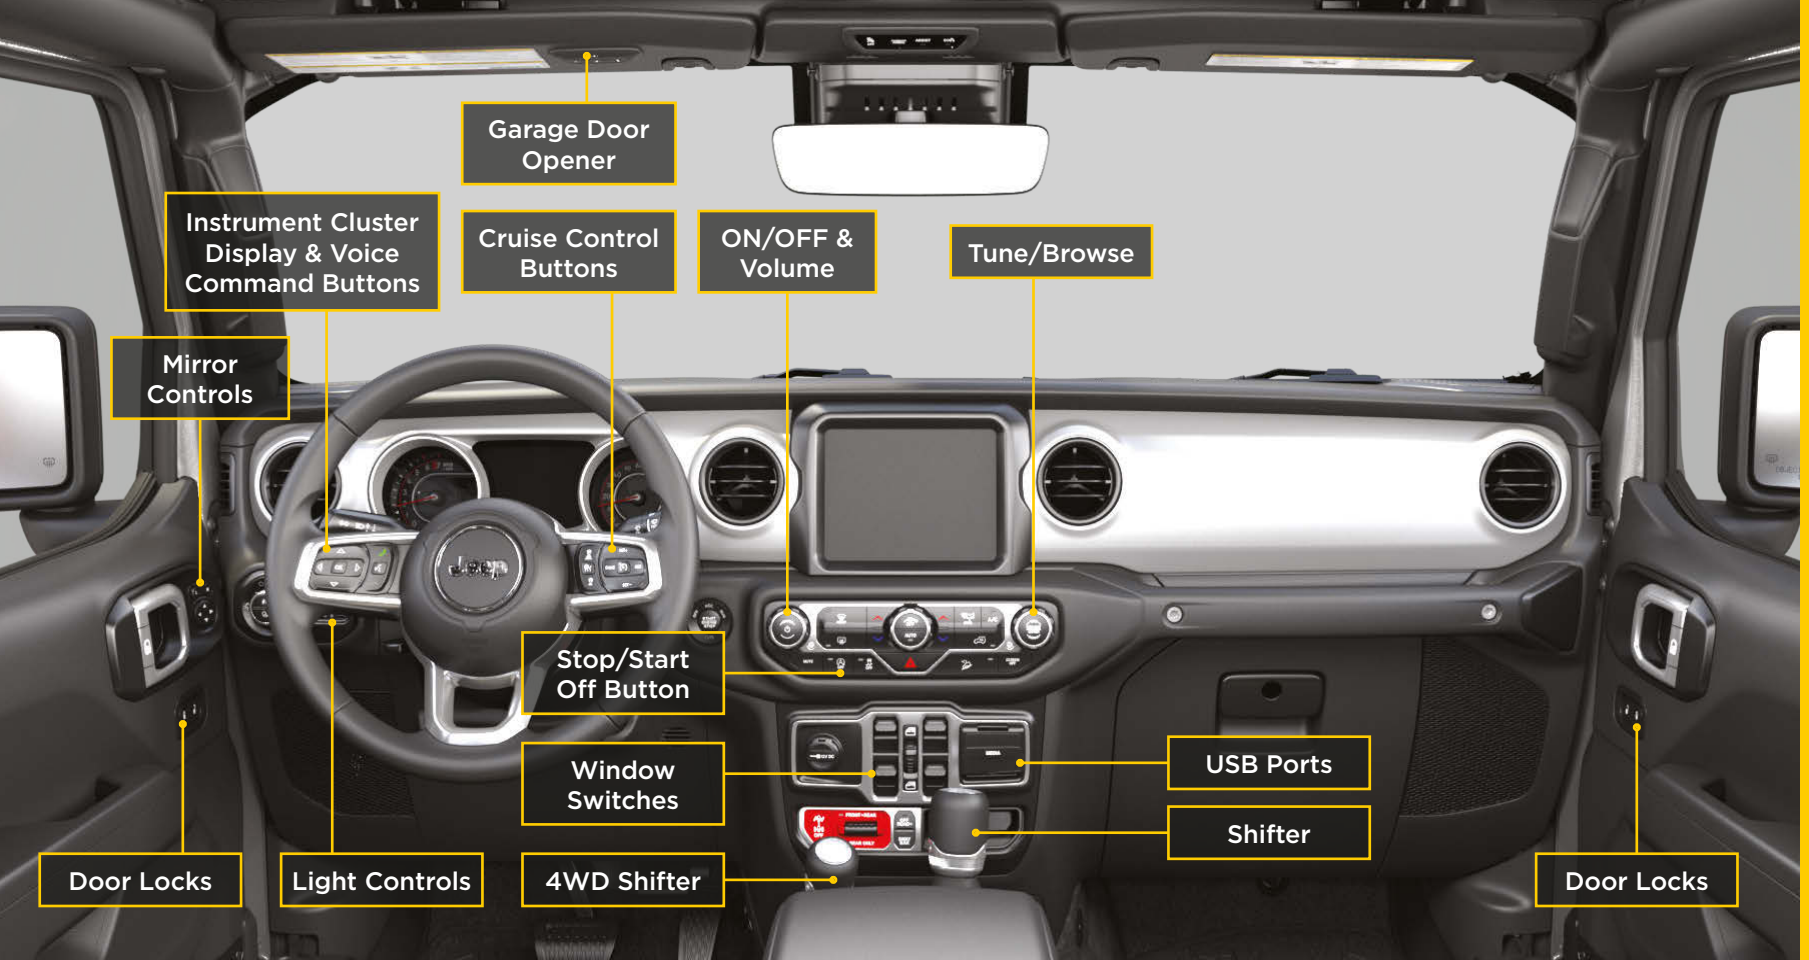
Garage Door Opener
Instrument Cluster Display & Voice Command Buttons
Cruise Control Buttons
ON/OFF & Volume
Tune/Browse
Mirror Controls
Stop/Start Off Button
Window Switches
USB Ports
Shifter
Door Locks
Light Controls
4WD Shifter
Door Locks

Garage Door Opener

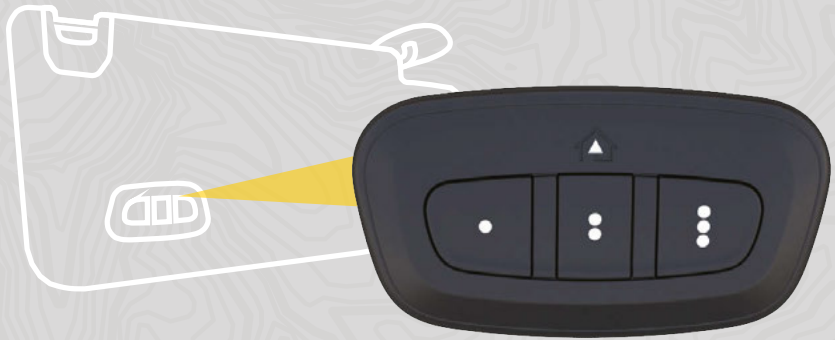

1 While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.

2 Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.

ROLLING OR NON-ROLLING?

Check your garage door opener motor in your garage for a “LEARN” or “TRAIN” button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

3 **For Non-Rolling Code** garage door openers, watch for the indicator light to go constant.

For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.

4 **For Rolling Code** garage door openers only, firmly push and release the “LEARN” or “TRAIN” button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle three times (holding the button for two seconds each time).

5 If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

NEED ASSISTANCE?
1-800-355-3515

Scan For HomeLink® Video

LINK YOUR GARAGE DOOR

Pair a Phone



1. Make sure Bluetooth® is enabled on your mobile device.
2. With the vehicle in the ACC or ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar.
3. Press "Pairing".
4. Press "Paired Phones and Audio Devices".
5. Select "Add Device" then follow the prompts on your phone and on the touchscreen.

CONNECT YOUR APPS

Connect your smartphone to the media USB port.

The Android Auto™ or Apple CarPlay® icon will replace the phone icon on the touchscreen.

KEEP IN MIND:

For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.

For Apple® Users, Apple CarPlay® is only compatible with iPhone® 5 or later and requires Siri being enabled in Settings.

Ready to remove a phone or audio device?

1. Press the Pairing button on the touchscreen.
2. Press "Paired Phones and Audio Devices".
3. Press "Settings" next to the phone or device you want to remove.
4. Press "Delete Device".
5. Press "X" to exit the settings screen. The device should be removed.



Connected Services

WITH CONNECTED SERVICES YOU CAN...

- **Lock Your Vehicle**
- **Unlock Your Vehicle**
- **Remote Start Your Vehicle**
- **Cancel Remote Start**
- **Activate Your Horn**

ACTIVATE YOUR REMOTE SERVICES

1. Press “Apps” on the touchscreen.
2. Press “Activate Services”.
3. Press “Activate Now”.
4. There are two ways to activate: via email or via an agent. On the next screen, you can either enter your name and email, or press “Call An Agent” to directly speak with a certified agent.

Mopar® YOUR Way

CREATE YOUR OWNER'S PROFILE TODAY!

Get 24/7 Access To Everything You Need

- Custom vehicle dashboard
- Access to your vehicle's Owner's Information
- Schedule dealer service with ease
- Obtain special offers on Mopar® service
- View maintenance records**
- Mobile vehicle commands**

**Requires an active SiriusXM Guardian™ subscription

Registration is simple. Provide your email address to get started.

Scan me (U.S. Residents Only)*

*Canadian residents are not required to create a profile, as one is created when a SiriusXM Guardian™ account is activated.

GET PERSONALIZED BY REGISTERING

Stop/Start

REDUCE FUEL CONSUMPTION

To manually turn off Stop/Start, push the Stop/Start OFF switch located on the switch bank below the climate controls.

Stop/Start OFF Switch



AUTOSTOP MODE

To activate:

- The system must be in STOP/START READY state.
- The vehicle must be completely stopped.
- The gear selector must be in a forward gear with the brake pedal pressed (automatic transmission).
- The gear selector must be in NEUTRAL with the clutch pedal fully released (manual transmission).

KEEP IN MIND:

Prior to engine shut down, the system will check many safety and comfort conditions to determine if they are fulfilled. Certain conditions will prevent the engine from autostopping. See your Owner's Manual for a detailed list of these conditions.

Scan For Stop/Start Video

Automatic Climate Controls

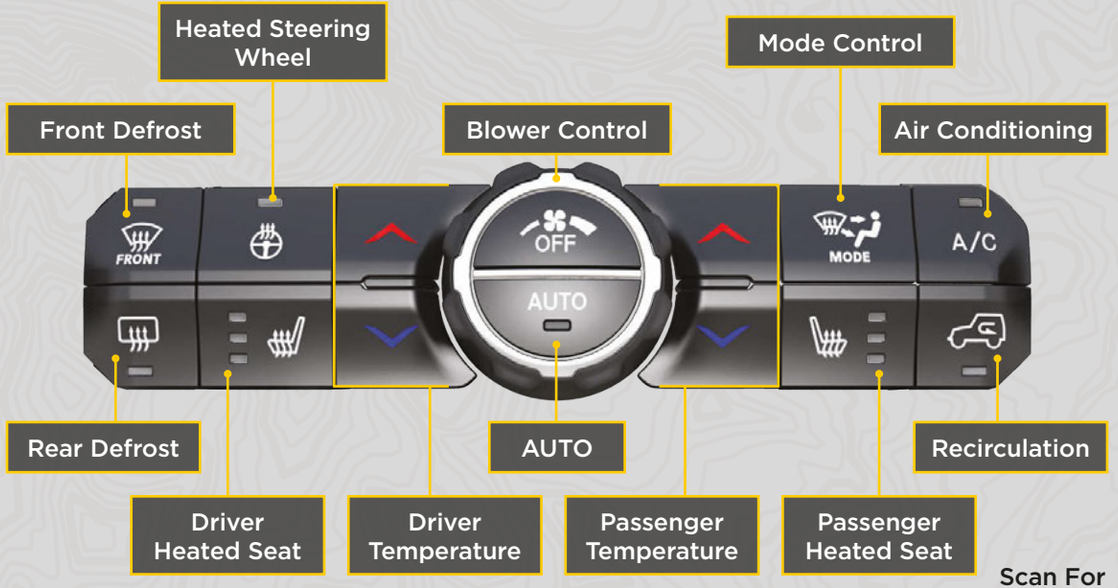

TIP:

Push the **red** arrow button to increase the temperature or push the **blue** arrow button to decrease the temperature for the driver and/or passenger.

Scan For Climate Controls Video

USE YOUR CENTER STACK CONTROLS

4x4 Operation

FIVE-POSITION TRANSFER CASE

2WD High
Used for normal street and highway driving.

4WD High AUTO
Sends power to the front wheels.

4WD High Part-Time
Forces the front and rear wheels to rotate at the same speed.

Neutral
Used for flat towing behind another vehicle.

4WD Low
Provides low speed four-wheel drive. Forces the front and rear wheels to rotate at the same speed.

If your vehicle is equipped with a four-position transfer case, see “Four-Wheel Drive Operation” in “Starting And Operating” in your Owner's Manual.



Scan For 4x4 Video

Axle Lock
To unlock the axles, push the axle lock **OFF** button.

OFF ROAD+
When activated, the vehicle's performance will improve depending on which 4WD mode is activated.

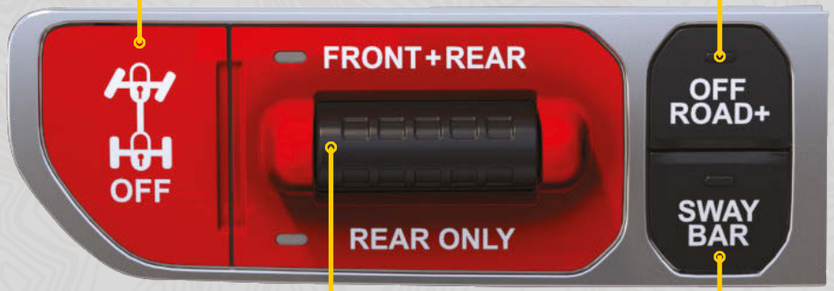

Axle Lock Switch
- Push the switch up to lock the front axle & rear axle.
- Push the switch down to lock the rear axle only.

Sway Bar Disconnect
Shift to either 4WD High or 4WD Low and push the **SWAY BAR** button.

If your vehicle is equipped with Tru-Lok, see “Four-Wheel Drive Operation” in “Starting And Operating” in your Owner's Manual.

KEEP IN MIND:
Sway Bar Disconnect should be off during normal driving conditions.

Scan For Sway Bar Video

Door & Top Removal

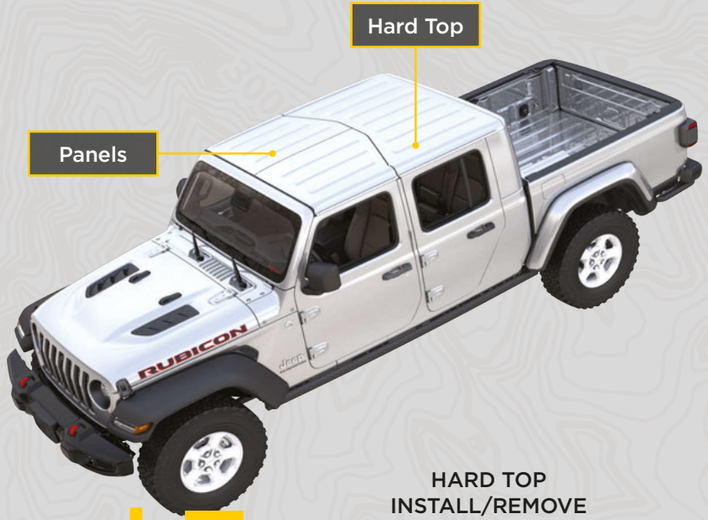

Hard Top

HARD TOP INSTALL/REMOVE

READY TO REMOVE YOUR DOORS?

FRONT DOOR REMOVAL

REAR DOOR REMOVAL

Soft Top

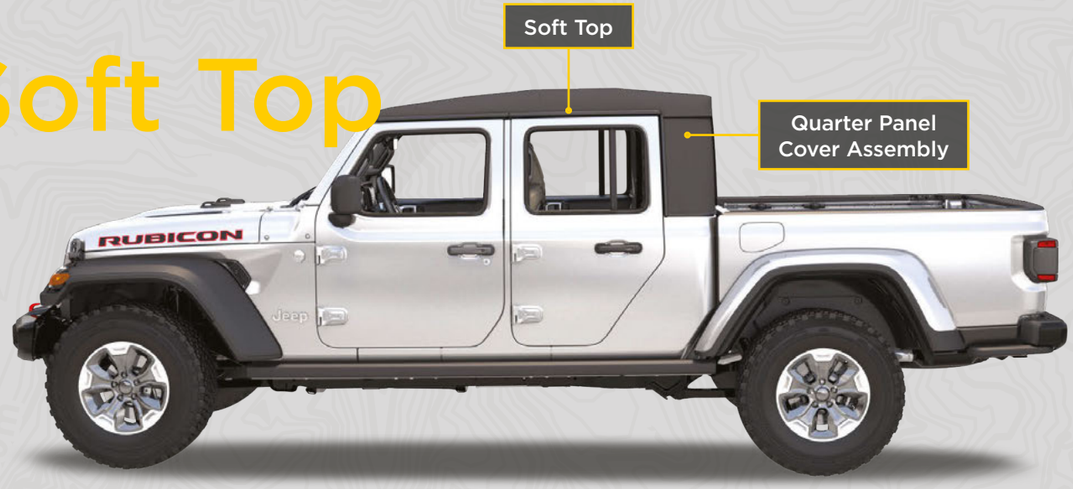

RAISING

LOWERING

INSTALL/ REMOVE

REMOVE YOUR DOORS & TOP

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering Fault
	Electronic Throttle Control (ETC)		Engine Coolant Temperature		Hood Open		Oil Pressure		Oil Temperature
	Rear Seat Belt Reminder		Seat Belt Reminder		Transmission Temperature		Vehicle Security		Adblue® (UREA) Injection System Failure
	4WD		4WD Low		4WD Part-Time		Anti-Lock Brake System (ABS)		Axle Lock Fault
	Cargo Light On		Cruise Control Fault		Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/ Malfunction Indicator
	Forward Collision Warning (FCW) OFF		Front And Rear Axle Lock		Loose Fuel Filler Cap		Low Diesel Exhaust Emissions Additive		Low Fuel
	Low Washer Fluid		Neutral		Off-Road+		Rear Axle Lock		Service 4WD
	Service Adaptive Cruise Control		Service Forward Collision Warning (FCW)		Service Stop/Start System		Sway Bar		Sway Bar Fault
	Tire Pressure Monitoring System (TPMS)		Wait To Start		Water In Fuel		4WD Auto		Adaptive Cruise Control (ACC) Set Without Target
	Adaptive Cruise Control (ACC) Set With Target		Cruise Control Set With Premium Cluster		Front Fog		Parking/Headlights On		Rear Seat Belt Fastened With Premium Cluster
	Stop/Start Active		Turn Signal		2WD High		Adaptive Cruise Control Ready Base Cluster		Adaptive Cruise Control Ready Premium Cluster
	Adaptive Cruise Control Set With Base Cluster		Cruise Control Ready		Cruise Control Set With Base Cluster		Rear Seat Belt Fastened		Rear Seat Belt Reminder
	Rear Seat Unoccupied		Selec-Speed Control (SSC)		High Beam				

For additional information on any of the topics in this publication, please refer to your Owner's Manual.

©2022 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC.
App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Second Edition
JT_QSG_EN_USC_CA