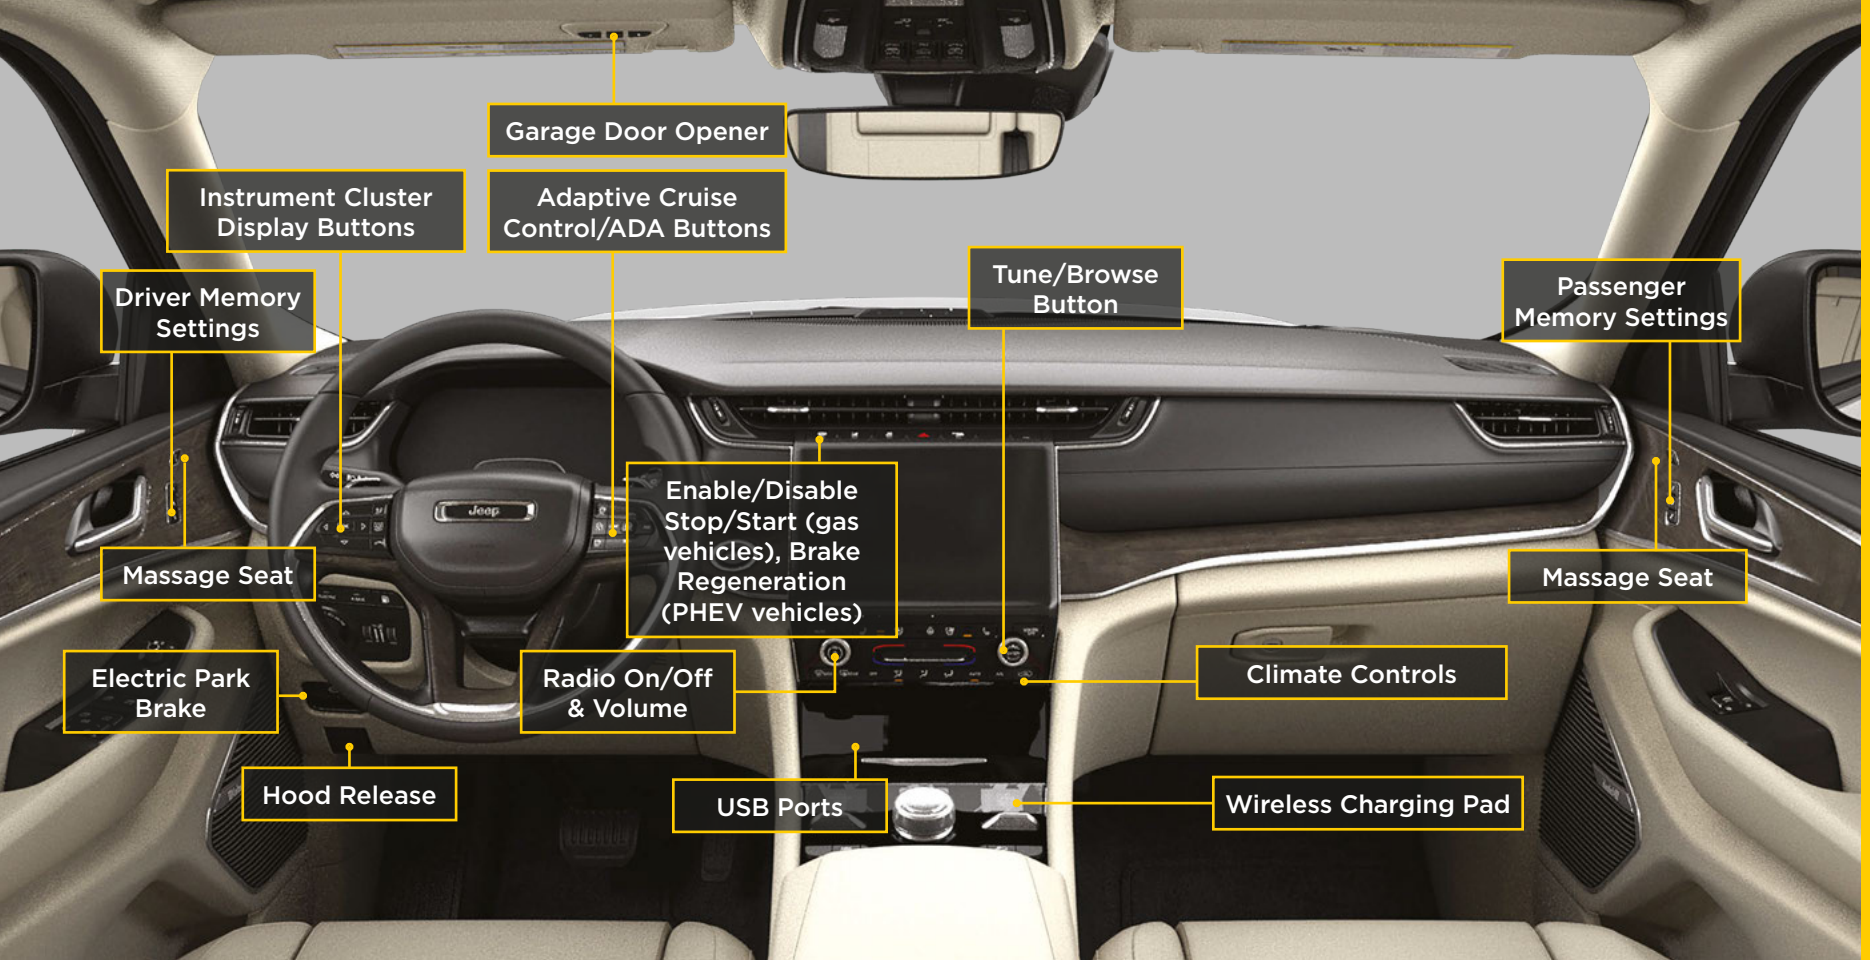


QUICK START GUIDE

Grand Cherokee/Grand Cherokee L


Garage Door Opener
Instrument Cluster Display Buttons
Adaptive Cruise Control/ADA Buttons
Driver Memory Settings
Tune/Browse Button
Passenger Memory Settings
Massage Seat
Enable/Disable Stop/Start (gas vehicles), Brake Regeneration (PHEV vehicles)
Massage Seat
Electric Park Brake
Radio On/Off & Volume
Climate Controls
Hood Release
USB Ports
Wireless Charging Pad

Garage Door Opener

1. With the car ON, hold the garage door transmitter 1-3 inches from the HomeLink button you want to program.
2. Push and hold the HomeLink button and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:
Push and hold the two outside HomeLink buttons until the indicator flashes.

3. **For Non-Rolling Code** garage door openers, watch for the indicator light to go constant.

   For Rolling Code garage door openers, watch for the indicator light to blink rapidly.

4. **For Rolling Code** garage door openers, push the "LEARN" or "TRAIN" button on your garage door opener, then push the HomeLink button in your vehicle three times (holding for two seconds each time).
5. If programming was successful, your garage door will open and close with the HomeLink button.



ROLLING OR NON-ROLLING?

Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

NEED ASSISTANCE?
1-800-355-3515

Scan For HomeLink® Video

Pair a Phone



1. Make sure Bluetooth® is enabled on your mobile device
2. With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar
3. Press "Device Manager"
4. Press "Add Device"
5. Follow the prompts on your phone and on the touchscreen

Troubleshooting

1. Perform a reset by holding the power button on the radio for 15 seconds
2. Reboot your phone
3. Remove the paired phone
4. Follow the Pair a Phone steps above to set up phone

Android Auto™ Apple CarPlay®

To remove a phone or audio device, select the "Device Manager" and follow the directions on the touchscreen.



LINK YOUR GARAGE DOOR /CONNECT YOUR PHONE

Connected Services

WITH CONNECTED SERVICES YOU CAN...

- Lock Your Vehicle
- Unlock Your Vehicle
- Remote Start Your Vehicle
- Cancel Remote Start
- Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

1. Press “Apps” on the touchscreen.
2. Press “Activate Services”.
3. Press “Activate Now”.
4. You can activate via email or an agent. Press "Call An Agent" to speak with an agent. If you were registered for Connected Services at the dealership, simply enter your email and PIN to activate them.
5. Download the Jeep® Mobile App from the Google Play® Store or Apple® App Store® for access to Remote Commands. Log in with your account information.

Mopar® YOUR Way

Get 24/7 Access to Everything You Need" to "Get 24/7 access to everything you need, including custom vehicle dashboards, maintenance records, mobile vehicle commands and more. Scan the QR code to register.

Scan me (U.S. Residents Only)*


*Canadian residents are not required to create a profile, as one is created when a Jeep® Connect account is activated.

Uconnect 5/5 NAV

Available Modes:

- Apps: Select from available apps
- Home: Customize the Home screen with widgets
- Media: Listen to the radio and play media
- Phone: Pair your smartphone and make hands-free calls
- Comfort: Adjust the vehicle's multiple climate systems
- Vehicle: Change vehicle settings
- Navigation: Search for and navigate to any destination

Swipe down to customize Profile options

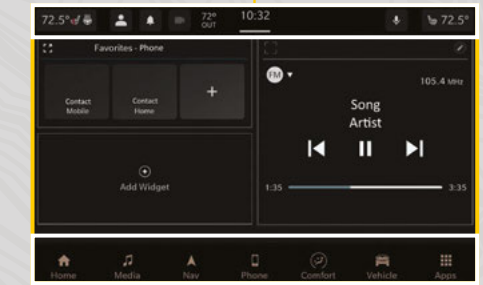

Press and drag an icon to rearrange

Voice Recognition

Use Your Voice To Control Uconnect

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle settings, you can also say the vehicle's “Wake Up” word, “Hey, Uconnect” or “Hey, Jeep®”, without pushing any buttons.

KEEP IN MIND:

There may be an inconsistent volume between different audio sources.

Scan For Voice Recognition Video

Scan For Radio Video

GET PERSONALIZED BY REGISTERING

Digital Cluster

CUSTOMIZE YOUR INSTRUMENT CLUSTER DISPLAY


Select the Settings menu and the Screen Setup submenu. Press “OK” to begin and select the area you would like to customize. The area you have activated will illuminate.



Scan For Instrument Cluster Display Video

HEAD UP DISPLAY — WILL DISPLAY ON YOUR WINDSHIELD

Activate the Head Up Display through your Cluster. Select the Settings menu and the Head Up Display submenu. Press “OK” to begin.

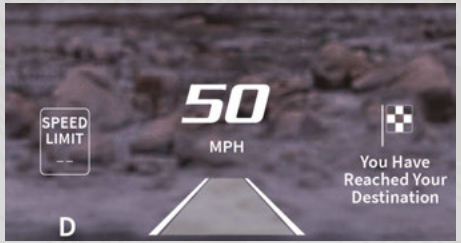

Menu options:

- Display On and Off
- Content/Layout
- Display Height
- Brightness

Scan For Head Up Display Video

To view the Cluster in Tile Mode, push the Tile Mode button. Use the Left/Right Arrows to scroll through menus and the Up/Down Arrows to access submenus. Tile information can be edited with the OK button.

Left & Right Arrows: Scroll Through Submenus

Up & Down Arrows: Scroll Through Menus



Access Tile Mode

To select between mph and km/h, push and release the OK button on the steering wheel.

Climate Control Tips

Your automatic climate controls allow you to control the temperature and blower speed in your vehicle.

Scan For Climate Video

Use the touchscreen or the blower levers to adjust blower speed.

Driver & Passenger Memory Settings

PROGRAMMING A MEMORY PROFILE:

1. Place the ignition in the ON/RUN position (do not start the engine)
2. Adjust all memory profile settings to desired preferences
3. Push and release the Set (S) button on the memory switch
4. Within five seconds, push and release either of the memory buttons (1) or (2)

MEMORY BUTTONS



Save up to two memory profiles for the driver and front passenger seats, including settings for:

- Seat position
- Easy Entry/Exit seat*
- Side mirrors*
- Power tilt/telescoping steering column*
- Radio station presets*

*Driver memory settings only

Scan For Memory Settings Video

Personalize Your Steering

When enabled in the Uconnect Settings, this feature lets you customize the effort needed to steer your Jeep®. Choose between “Normal”, “Comfort”, and “Sport” settings to optimize your driving experience.

Active Driving Assist (ADA) System

COMBINES ACTIVE LANE MANAGEMENT AND ADAPTIVE CRUISE CONTROL



INDICATOR LIGHT & INSTRUMENT CLUSTER DISPLAY GLOW:

OFF	System not turned on/enabled
WHITE	System is turned on/enabled, but is not actively steering the vehicle
GREEN	System detects driver attentiveness and is actively steering the vehicle
YELLOW	System detects driver inattentiveness and warns the driver to place hands on the steering wheel, or if equipped with hands-free ADA, look back toward the road
RED	System still detects driver inattentiveness and still warns the driver to place hands on the steering wheel, or if equipped with hands-free ADA, take control of the vehicle, or the system will cancel


Scan For Active Driving Assist Video

The base ADA system requires the driver to keep both hands on the steering wheel at all times.

Front Passenger Screen

This screen provides the passenger access to Radio, Rear Seat Entertainment with Fire TV built-in, HDMI, and Navigation functions. It is located on the passenger side of the vehicle, above the glove compartment.

Push the power button above the radio's right side.

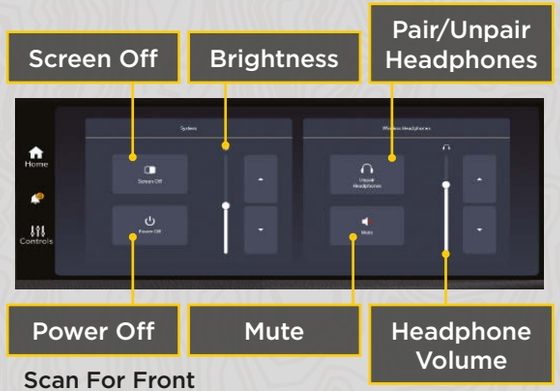

Scan For Front Passenger Screen Video

To access the Passenger Screen Controls, press the Control button.

Rear Seat Entertainment with Amazon Fire TV built-in

Rear Seat Entertainment with Amazon Fire TV built-in can stream movies, music, and much more!

GET STARTED:

You will be prompted to pair the Voice Remote with Alexa, connect to a network, and sign into an Amazon account. You can also enable parental controls.



Scan For Bluetooth Video

Night Vision

USES AN INFRARED CAMERA TO DETECT PEOPLE & LARGE ANIMALS

LEVEL 1 WARNING

- Yellow telltale and yellow highlight around detected pedestrian/animal when it is approaching or is in the vehicle's path

LEVEL 2 WARNING

- Red telltale and red highlight around detected pedestrian/animal when it is directly in the vehicle's path, near the headlights, and a collision is possible
- If enabled, a chime will sound and a video pop-up may display when a detection event occurs

KEEP IN MIND:

Warm objects (e.g. animals) will appear lighter on the display while cold objects (e.g. traffic signs) will appear darker.

NIGHT VISION SCREEN

IN THE INSTRUMENT CLUSTER DISPLAY



Displays **green** when Night Vision alerts are active and **gray** when suppressed

Pedestrian Warning

Animal Warning

Scan For Instrument Cluster Display Video

Night Vision is located in the instrument cluster within the **Main Menu**.

Hands-Free Liftgate



Use a Straight In-and-Out Kicking Motion

LIFTGATE NOT OPENING?

Make sure your kicking motion is straight in and out and within the activation zone.

Do not move your foot sideways or in a sweeping motion, as the sensors may not detect the motion.

The Hands-Free Liftgate can be activated/deactivated in Uconnect Settings.



Activation Zone

ADJUSTABLE POWER LIFTGATE HEIGHT

TO SET AN OPENING HEIGHT:

1. Open the liftgate fully, then manually pull down or push up to the desired height.
2. Push and hold the liftgate close button for three seconds. An audible chime will sound to let you know that the height has been saved successfully.

TIP:

The liftgate close button is located on the left side trim panel inside the cargo area.



Scan For Liftgate Video

Rain Sensing Wipers & Passive Entry

RAIN SENSING

Scan For Wiper Video

When enabled in Uconnect Settings, this feature automatically activates the wipers, and adjusts speed as needed, when rain or snow is detected on the windshield.

The windshield wipers must be in one of the intermittent positions, not the LOW, HIGH, or OFF position for this feature to operate.

FUEL DOOR DELAY:

Press the button to release the fuel door. It will open within 15 seconds. There may be a delay in extreme heat conditions.



PASSIVE ENTRY

LOCK & UNLOCK YOUR VEHICLE USING THE DOOR HANDLES



WHILE YOUR KEY FOB IS WITH YOU:

- Touch the **lock icon** on the door handle, for a minimum of a 1/2 second, making sure not to grab the door handle, to lock the vehicle.
- Grab the door handle to unlock the vehicle.

KEEP IN MIND:

Grabbing the driver's door handle will unlock the driver's door. The front passenger handle (or a rear handle, if equipped with four-door Passive Entry) unlocks all doors and the liftgate.

Scan For Passive Entry Video

Regenerative Braking System and E-Selec Mode (PHEV vehicle)

The Regenerative Braking System (RBS) replenishes the vehicle's high voltage battery during deceleration, and is particularly useful in stop-and-go city traffic.

When the Max Regeneration feature is activated, the RBS will help slow the vehicle when the driver releases the accelerator pedal. The feature can be activated by pressing the Max Regeneration button.



- Hybrid – Prioritizes electric range first, then gas range. Automatically switches between using gas and battery for best efficiency and performance.
- Electric – Prevents the engine from running unless you absolutely need it.
- e-Save – Aims to maintain a high level of electric range for later use. The Battery Save setting maintains the state of charge at the current level.



The E-Selec system allows the driver to select different drive modes by pushing the buttons above the headlight switch.

Hybrid Vehicle Features

Within your Uconnect system is the Hybrid Electric App that allows you to see your vehicles power flow, understand your driving history, and set a charging schedule for your vehicle's high voltage battery. To access the app, press the Apps button on the main menu bar of the touchscreen. From there, select the Hybrid Electric App.

CHARGING SCHEDULE

Use the charging schedule screen to set a charging schedule for your vehicle.



E-SAVE

From this page, you can specify the behavior of the e-Save drive mode.



POWER FLOW

The power flow screen shows the current power readings for the engine, battery, and climate system.



DRIVING HISTORY

The driving history screen shows the miles driven in both Full Electric and Hybrid modes for both the current and previous weeks.



Charging


If equipped, your PHEV can be charged with an industry standard SAE J1772 charge inlet for both **AC Level 1 (120v)** and **AC Level 2 (240v)** charging.

CHARGING TIPS & TRICKS

- Before charging, ensure the vehicle is in park first.
- Your vehicle is ready to charge when the green indicator lights are showing.
- Always insert the AC plug prongs of the Portable Charging Cordset into a grounded wall outlet first.
- The Charge Connector charges the vehicle through the vehicle's charge inlet.



It is good practice to keep the vehicle in the OFF position while conducting Level 1 charging to minimize any additional vehicle loads the EVSE has to support.

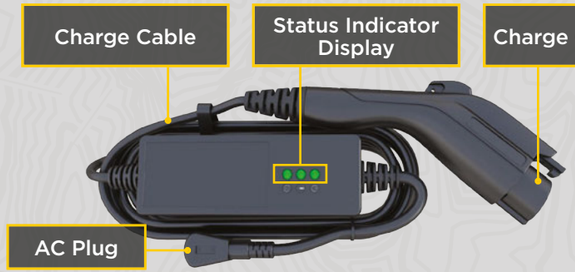


KEEP YOUR CHARGING PACK HEALTHY:

After use, the Portable Charging Cordset should be placed in the storage bag and put back in the cargo storage area.

State of Charge and EV Features

The LED located next to the charging inlet changes color based on charging status.

LED Light Color	Status
Blue	Indicates that the system is waiting for a scheduled recharge.
Flashing Green	Charging process in place
Solid Green	Indicates the vehicle is fully charged.
Blinking Red	Indicates a fault in the charging system

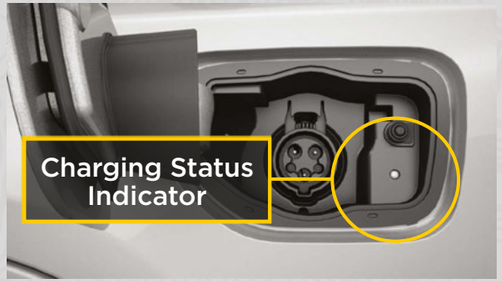



The State of Charge indicator shows the vehicle's charge status during charging.

Number Of Indicator Lights Illuminated	Percent Of Battery Charge
1st light blinks	0 – 20%
1st light on, 2nd light blinks	21 – 40%
1st and 2nd lights on, 3rd light blinks	41 – 60%
1st, 2nd, and 3rd lights on, 4th light blinks	61 – 80%
1st, 2nd, 3rd, and 4th lights on, 5th light blinks	81 – 99%
All 5 lights on	100%
Two outer lights are blinking	Indicates an error in the charging process
Lights turn on one at a time	Indicates system is waiting for scheduled time in charge schedule to begin charging
All lights turn on, then immediately turn off	Indicates a successful plug-in

Warning & Indicator Lights

	Active Driving Assist (ADA) Driver Inattentive		Air Bag		Battery Charge		Brake		Door Open
	Electric Power Steering (EPS) Fault		Electronic Throttle Control (ETC)		Engine Temperature		Hood Open		Hybrid Electric Vehicle System Service Light
	Hybrid Electric Vehicle System Failure		Liftgate Open		Night Vision Animal Detected		Night Vision Pedestrian Detected		Oil Pressure
	Oil Temperature		Rear Seat Belt Reminder		Seat Belt Reminder		Torque Limited		Traction Battery Fault
	Transmission Temperature		Vehicle Security		4WD Low		Active Lane Management		Air Suspension Active
	Air Suspension Aerodynamic Height		Air Suspension Entry/Exit Indicator		Air Suspension Fault		Air Suspension Off-Road 1		Air Suspension Off-Road 2
	Anti-Lock Brake System (ABS)		Auto HOLD! Fault		Electronic Park Brake		Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF
	Engine Check/ Malfunction Indicator		Forward Collision Warning (FCW) OFF		Low Fuel		Low Washer Fluid		NEUTRAL
	Night Vision Animal Detected		Night Vision Pedestrian Detected		Service 4WD		Service Active Lane Management		Service Adaptive Cruise Control
	Service Forward Collision Warning		Service Stop/Start System		SWAY BAR		Sway Bar Fault		Tire Pressure Monitoring System
	Active Lane Management		Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target		Auto Hold		Cruise Control SET
	Front Fog		Night Vision Active		Parking/Headlights On		Plug Status		Ready to Drive
	Rear Seat Belt Fastened		Sport Mode		Stop/Start Active		Turn Signal		Adaptive Cruise Control (ACC) Ready
	Cruise Control Ready		Hill Descent Control (HDC)		Rear Seat Unoccupied		High Beam		Night Vision Suppressed

Your vehicle may be equipped with different features than shown in this guide.

For additional information on any of the topics in this publication, please refer to your Owner's Manual.

©2024 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC.
App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

First Edition
45_WL_QSG_EN_USC