
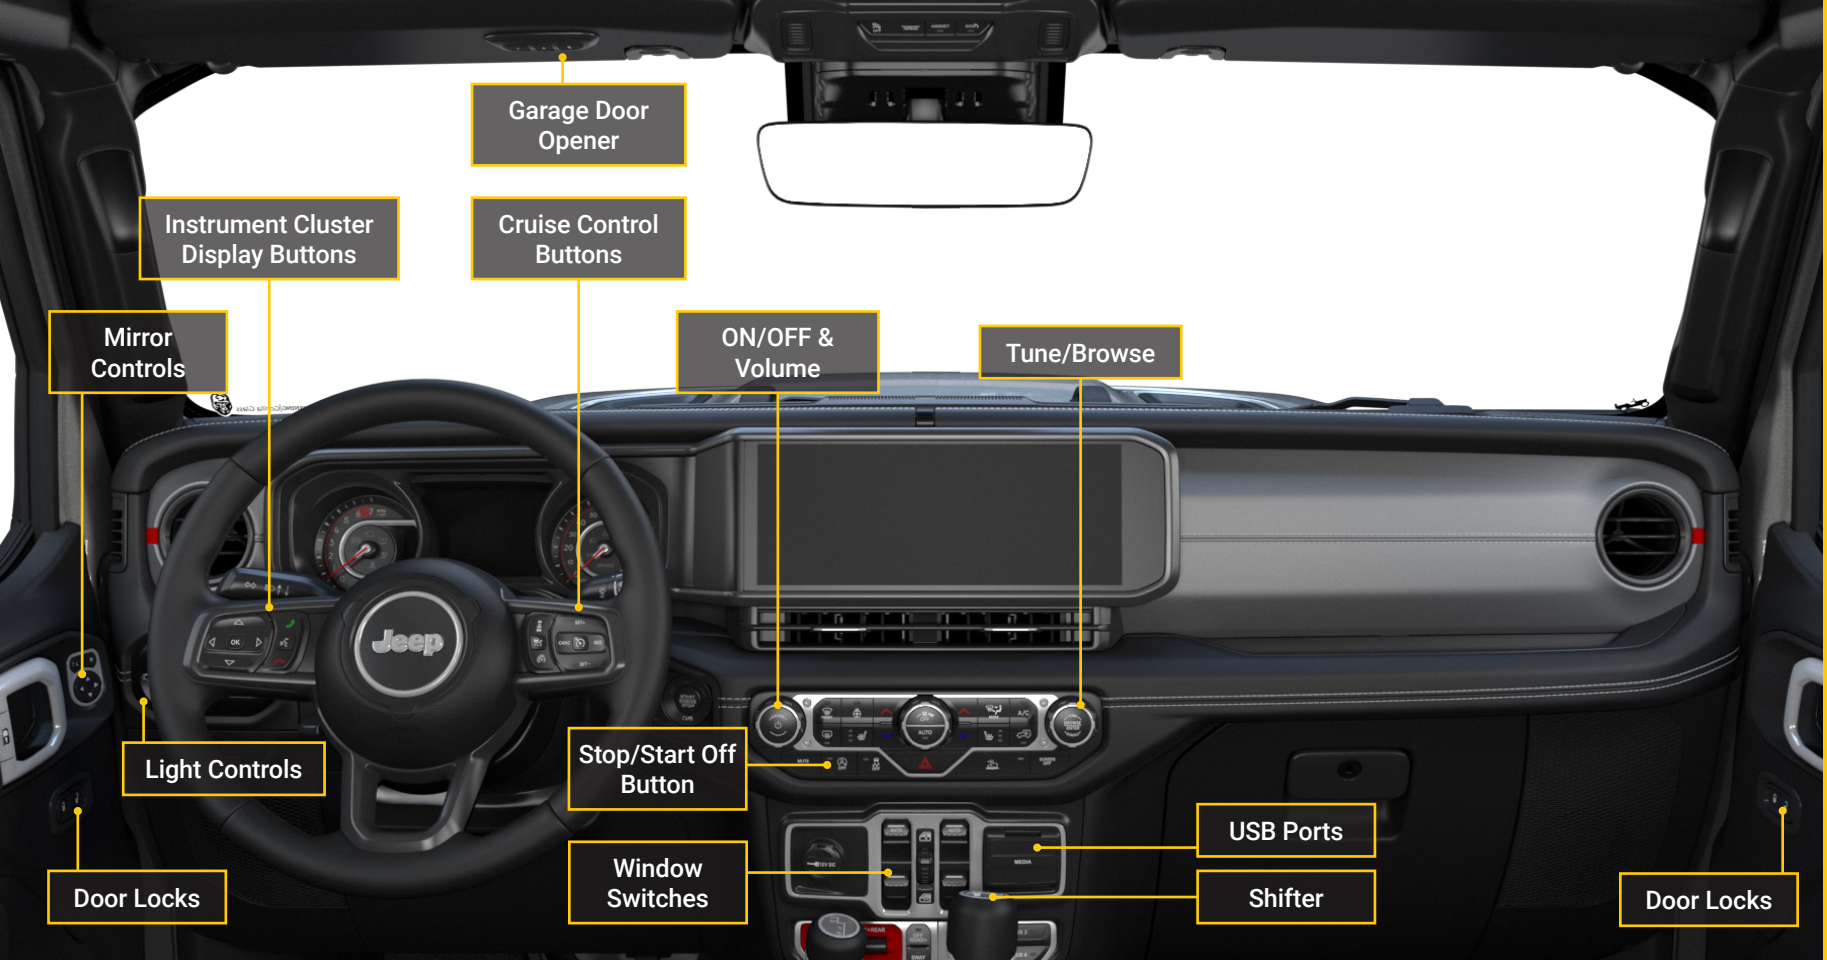


WRANGLER
QUICK START GUIDE


Garage Door Opener
Instrument Cluster Display Buttons
Cruise Control Buttons
Mirror Controls
ON/OFF & Volume
Tune/Browse
Light Controls
Stop/Start Off Button
USB Ports
Window Switches
Shifter
Door Locks
Door Locks

Garage Door Opener

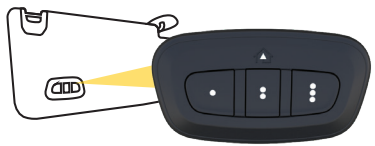

1. With the ignition in the ON/RUN postion and the garage door open, hold the garage door transmitter 1-3 inches from the HomeLink® button you want to program.
2. Push and hold the HomeLink® button and the button on the garage door transmitter.
3. **For Non-Rolling Code** garage door openers, watch for the indicator light to go constant.

   For Rolling Code garage door openers, watch for the indicator light to blink rapidly.
4. **For Rolling Code** garage door openers, push the "LEARN" or "TRAIN" button on your garage door opener, then push the HomeLink® button in your vehicle three times (holding for two seconds each time).
5. If programming was successful, your garage door will open and close with the HomeLink® button.

TO ERASE ALL SET CHANNELS:
Push and hold the two outside HomeLink® buttons until the indicator flashes.

ROLLING OR NON-ROLLING

Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

NEED ASSISTANCE?
1-800-355-3515

Scan For HomeLink® Video

Pair a Phone

Scan For Phone Pairing Video

1. Make sure Bluetooth® is enabled on your mobile device
2. With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar
3. Press "Device Manager"
4. Press "Add Device"
5. Follow the prompts on your phone and on the touchscreen

Troubleshooting

1. Perform a reset by holding the power button on the radio for 15 seconds
2. Reboot your phone
3. Remove the paired phone
4. Follow the Pair a Phone steps above to set up phone

Scan For Android™ Auto Video

Scan For Apple Carplay® Video

GARAGE DOOR OPENER & PAIR YOUR PHONE

Connected Services

WITH CONNECTED SERVICES YOU CAN...

- Lock Your Vehicle
- Unlock Your Vehicle
- Remote Start Your Vehicle
- Cancel Remote Start
- Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

1. Press “Apps” on the touchscreen.
2. Press “Activate Services”.
3. Press “Activate Now”.
4. You can activate via email or an agent. Press "Call An Agent" to speak with an agent. If you were registered for Connected Services at the dealership, simply enter your email and PIN to activate them.
5. Download the Jeep® Mobile App from the Google Play® Store or Apple® App Store® for access to Remote Commands. Log in with your account information.

MOPAR

Scan me
(U.S. Residents Only)*

Mopar® YOUR Way


Get 24/7 access to everything you need, including custom vehicle dashboards, maintenance records, mobile vehicle commands and more. Scan the QR code to register.

*Canadian residents are not required to create a profile, as one is created when a Jeep® Connect account is activated.

Uconnect 5/5 NAV

Available Modes:

- **Home:** Customize the Home screen with widgets
- **Media:** Listen to the radio and play media
- **Navigation:** Search for and navigate to any destination
- **Phone:** Pair your smartphone and make hands-free calls
- **Comfort:** Adjust the vehicle's multiple climate systems
- **Vehicle:** Change vehicle settings
- **Apps:** Select from available apps

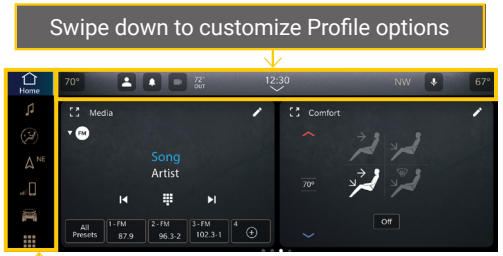

Scan For Radio Video

Scan For Navigation Video

Voice Recognition

Use Your Voice To Control Uconnect

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle settings, you can also say the vehicle's “Wake Up” word, “Hey, Uconnect” or “Hey, Jeep®”, without pushing any buttons.

Scan For Voice Recognition Video

Stop/Start (Gas Only)

Activate AutoStop to reduce fuel consumption. To manually turn off Stop/Start, push the Stop/Start OFF switch located on the switch bank below the climate controls.



Autostop Mode

To activate:


- The system must be in STOP/START READY state
- The vehicle must be completely stopped
- The gear selector must be in a forward gear with the brake pedal pressed (automatic transmission)
- The gear selector must be in NEUTRAL with the clutch pedal fully released (manual transmission)

KEEP IN MIND:

Prior to engine shut down, the system will check many safety and comfort conditions to determine if they are fulfilled. Certain conditions will prevent the engine from autostopping. See your Owner's Manual for a detailed list of these conditions.

Scan For Stop/Start Video

Automatic Climate Controls

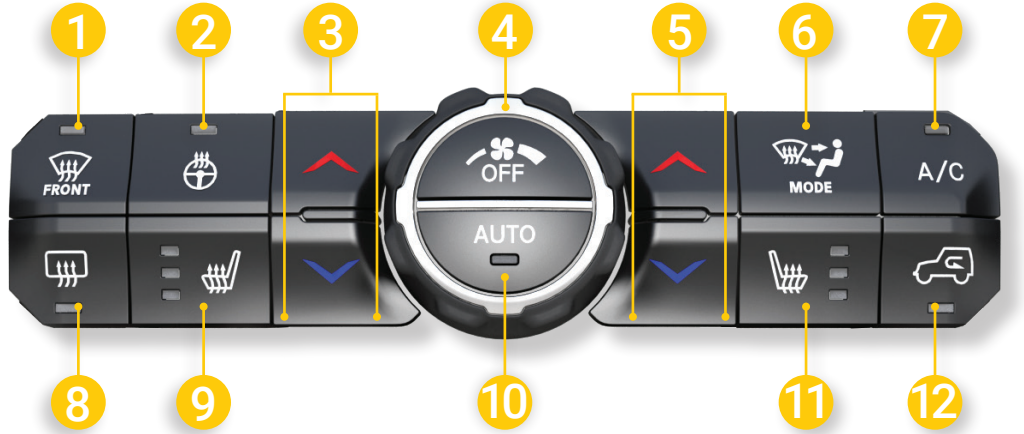

1 Front Defrost	7 Air Conditioner
2 Heated Steering Wheel	8 Rear Defrost
3 Driver Temperature	9 Driver Heated Seat
4 Blower Control	10 Auto
5 Passenger Temperature	11 Passenger Heated Seat
6 Mode Control	12 Recirculation

TIP:


Push the **red** arrow button to increase the temperature or push the **blue** arrow button to decrease the temperature for the driver and/or passenger.

Scan For Climate Controls Video

4x4 Operation

Axle Lock
To unlock the axles, push the axle lock OFF button.

OFF ROAD+
When activated, the vehicle's performance will improve depending on which 4WD mode is activated.

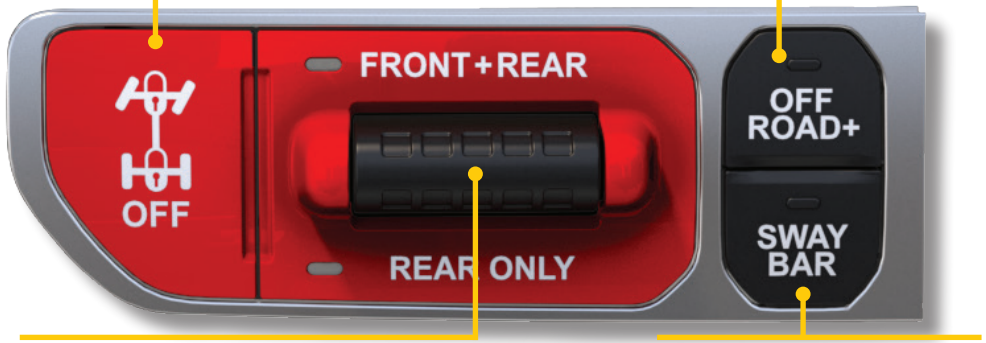

Axle Lock Switch
- Push the switch up to lock the front axle & rear axle.
- Push the switch down to lock the rear axle only.

Sway Bar Disconnect
Shift to either 4WD High or 4WD Low and push the SWAY BAR button.

Scan For Sway Bar Video

KEEP IN MIND:
Sway Bar Disconnect should be off during normal driving conditions.

If your vehicle is equipped with Tru-Lok, see "Four-Wheel Drive Operation" in "Starting And Operating" in your Owner's Manual.

Five-Position Transfer Case

2H (2WD High)
Used for normal street and highway driving.

4H AUTO (4WD High Auto)
Sends power to the front wheels.

4H PART TIME (4WD High Part Time)
Forces the front and rear wheels to rotate at the same speed.

N (Neutral)
Used for flat towing behind another vehicle.

4L (4WD Low)
Provides low-speed four-wheel drive. Forces the front and rear wheels to rotate at the same speed.


If your vehicle is equipped with a four-position transfer case, see "Four-Wheel Drive Operation" in "Starting And Operating" in your Owner's Manual.



Scan For 4x4 Video

State of Charge and EV Features

The SOC indicator visually shows the high voltage battery's charge status, signaling charging progress and detecting issues or waiting for a scheduled charge.

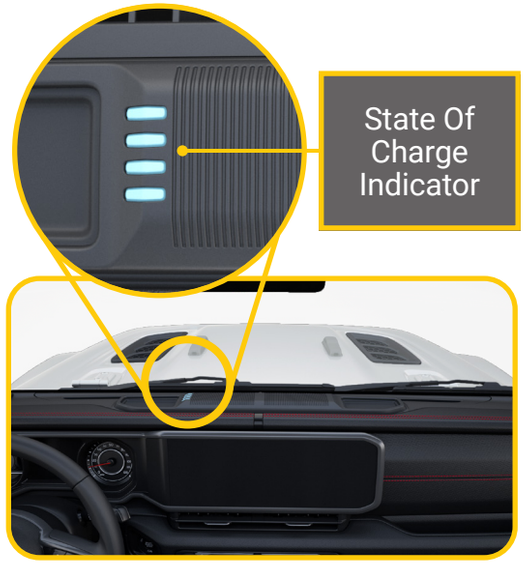

Scan For State of Charge Video

VEHICLE CHARGE INDICATORS

Number Of Indicator Lights Illuminated	Percent Of Battery Charge
1st light blinks	0 – 25%
1st light on, 2nd light blinks	26 – 50%
1st and 2nd lights on, 3rd light blinks	51 – 75%
1st, 2nd, and 3rd lights on, 4th light blinks	76 – 99%
All 4 lights on	100%
Two outer lights are blinking	Indicates an error in the charging process
Lights turn on one at a time	Indicates system is waiting for time in charge schedule to begin charging
All lights turn on, then immediately turn off	Indicates a successful plug-in

Plug-In Hybrid

Your vehicle uses an industry standard SEA J1772 charge inlet for both **AC Level 1 (120v)** and **AC Level 2 (240v)** charging.

Charge Your Vehicle with AC Level 1 Connector

Always insert the AC plug prongs of the Portable Charging Cordset into a 15 A, or 20 A, 120 VAC, 60 Hz, grounded wall outlet first.


Your vehicle is ready to charge when only the green indicator light is showing. Be sure the vehicle is in park. Connect the charge connector to the charge inlet.

Level 1 Charging takes approximately 12-13 hours



It is good practice to keep the ignition in the OFF position while conducting Level 1 charging to minimize charge times.


Keep your charging pack healthy: After use, the Portable Charging Cordset should be placed in the storage bag and put back in the cargo storage area.

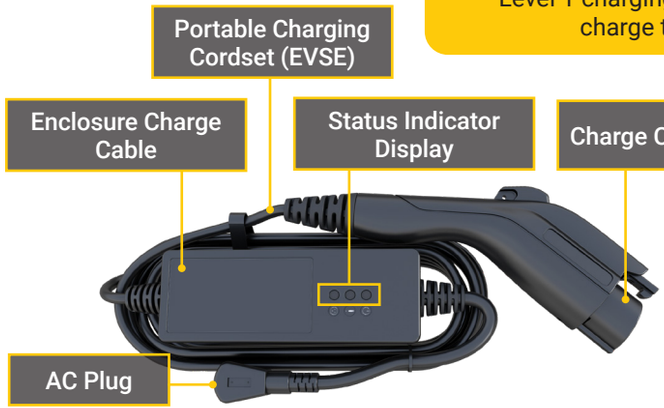

Scan For Charging Video

E-Select Modes (Hybrid Only)

This system allows the driver to select different modes by pushing the following buttons located below the headlight switch.

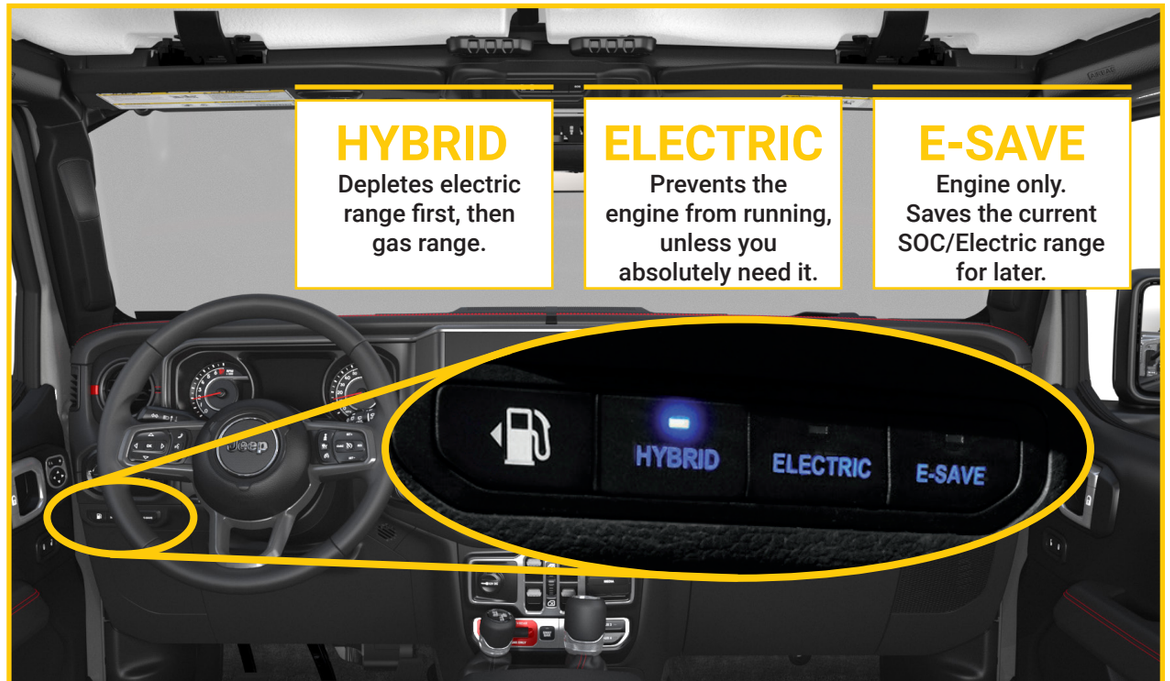

Opening The Fuel Door (Hybrid Only)




OPENING FUEL DOOR

With the vehicle in the PARK position, push the fuel door release button. The vehicle will begin to depressurize the fuel system. A message will display in the cluster **Ready to Refuel** when the vehicle is ready.

The fuel door pops away from the vehicle when it has been released.

Power Seats

Use the power seat switch to adjust seat height, angle, or forward/rearward position. Use the power seat recline switch to adjust the angle of the seatback. To adjust the lumbar support, push the Power Lumbar switch forward to increase the support and push the switch rearward to decrease the support. Pushing upward or downward on the switch will raise and lower the position of the support.

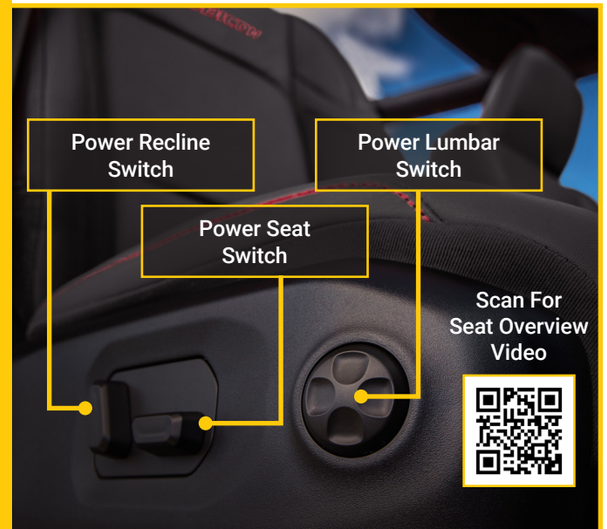

Power Box (Hybrid Only)


Powering On the Power Box

1. Set the Ignition in either ACC or RUN (enginerunning or not running).
2. Connect the Power Box electric plug to the vehicle.
3. Push the Power Box AC On button.

Note:
The USB-C port is used to charge the Power Box internal battery and does not offer external charging. The Power Box cannot be used to charge other vehicles.



Did you know you can use the vehicle to power other accessories and equipment? Your Power Box will let you use your vehicle's battery to power lights, cookware, and a host of other things. All you need to do is plug the Power Box into the vehicle's charge port, and you can get started!

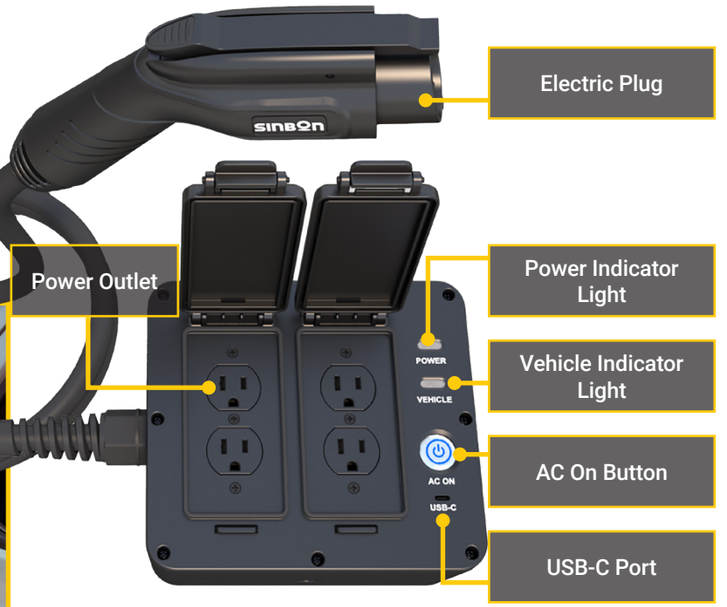

Battery Mode
The High Voltage Battery will provide power to the Power Box until depleted.

Generator Mode
The Engine will provide power to the Power Box and maintain the charge of the High Voltage Battery.

Blended Mode
In Blended Mode, the Engine runs and stops as needed to maintain battery charge. This provides a balance in efficiency and will keep the Power Box powered for the longest amount of time.

Power Box Battery Check:
The Power Box has an internal rechargeable battery that will start the Off-Board communications with your electric vehicle. Should the internal battery be low/discharged, you will need to use an external USB-C power source to charge the Power Box.

Scan for Power Box Video

Ready to Remove Your Doors?


FRONT DOORS

REAR DOORS

INSTALL/ REMOVE HARD TOP

You Will Need To Remove:

1. Hinge pin screws & nuts
2. Wiring connector
3. Door check screw

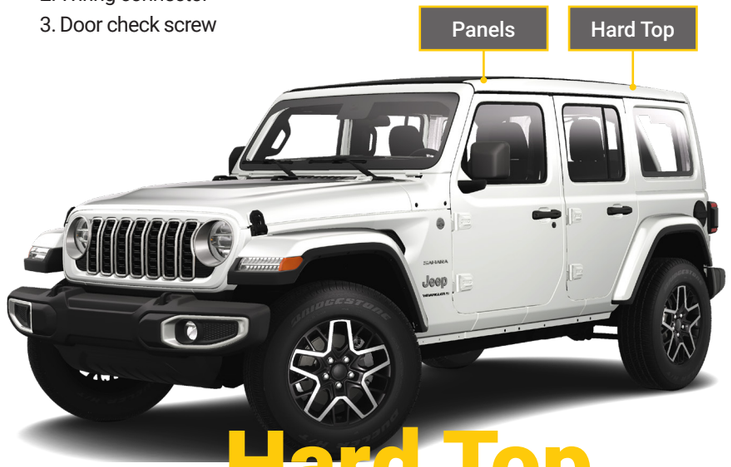

Hard Top

Top & Door Options

RAISING


REAR WINDOW REMOVAL

LOWERING

INSTALL/ REMOVE SOFT TOP

SOFT TOP CONFIGURATIONS

- Sunrider® position with rear & quarter windows installed
- Sunrider® position with rear & quarter panels removed
- Sunrider® position with rear window installed & quarter panels removed
- Fully lowered position with rear & quarter windows removed

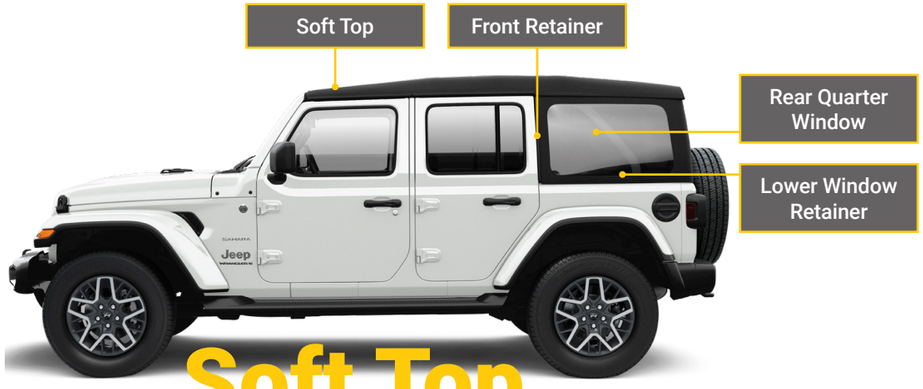

Soft Top

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering (EPS) Fault
	Electronic Throttle Control (ETC)		Engine Coolant Temperature		Hood Open		Oil Pressure		Oil Temperature
	Rear Seat Belt Reminder		Seat Belt Reminder		Swing Gate Open		Transmission Temperature		Vehicle Security
	4WD		4WD Low		4WD Part Time		Anti-Lock Brake System (ABS)		Axle Locker Fault
	Cruise Control Fault		Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/ Malfunction		Forward Collision Warning (FCW) Off
	Front And Rear Axle Lock		Loose Fuel Filler Cap		Low Fuel		Low Washer Fluid		Neutral
	Rear Axle Lock		Service 4WD		Service Adaptive Cruise Control (ACC)		Service Forward Collision Warning (FCW)		Service Stop/Start System
	Sway Bar		Sway Bar Fault		Tire Pressure Monitoring System (TPMS)		4WD Auto		Adaptive Cruise Control (ACC) Set With No Target
	Adaptive Cruise Control (ACC) Set With Target		Cruise Control SET With Premium Cluster		Front Fog		Parking/Headlights On		Rear Seat Belt Fastened
	Stop/Start Active		Turn Signal		2WD High		Adaptive Cruise Control (ACC) Ready		Cruise Control Ready With Premium Cluster
	Cruise Control SET With Base Cluster		Gear Shift Indicator		Hill Descent Control (HDC)		Rear Seat Belt Fastened		Rear Seat Belt Reminder
	Rear Seat Unoccupied		Selec-Speed Control		High Beam				

Your vehicle may be equipped with different features than shown in this guide.

For additional information on any of the topics in this publication, please refer to your Owner's Manual.

©2024 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

First Edition
25_JL_QSG_EN_USC