A GUIDE FOR YOUR RIDE.

IMPORTANT:
Read carefully and retain for future reference.

JETSON

PERI

2-Wheel Light-Up Kick Scooter.

MODEL SKU(S): JPERI-ORG, JPERI-PNK

JETSON'S TOP TWO RIDING RULES:

BE SAFE. HAVE FUN!

MANUFACTURED IN YONGKANG, CHINA
IMPORTED BY TRURIDE TECH LLC.
PO BOX 461, JERSEY CITY, NJ 07302-9998

DATE CODE: 06/2026
DOCUMENT EDITION: V1.0
MADE IN CHINA

© 2026, TRURIDE TECH. ALL RIGHTS RESERVED. MANUFACTURED FOR TRURIDE TECH LLC.
JETSON® IS A REGISTERED TRADEMARK USED UNDER LICENSE FROM JETSTREAM BRANDS LLC.
NO PORTION OF THIS DOCUMENT, INCLUDING SHAPE, GRAPHICS, AND DESIGN, MAY BE
REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS.

Contents

Safety Warnings 3
Warranty Coverage & Product Registration 5
1. About Your Product
1.1 Product Overview 6
1.2 Product Specs 7
1.3 Online Resources 7
2. Getting Started
2.1 Starting Notes 9
2.2 Helmet Safety 9
2.3 Unfolding & Folding the Scooter 10
2.4 Adjusting the Folding Mechanism Tension 12
2.5 Attaching the Handlebar 14
2.6 Adjusting the Height of the Handlebar 17
2.7 Inserting Batteries 19
3. Making Moves
3.1 Riding the Scooter 20
3.2 Using the Brake 20
3.3 Using the Lights 21
Care & Maintenance 23
Connect with Us 24

INSTRUCTIONS ON THE RISK OF FIRE OR INJURY TO PERSONS AND IMPORTANT SAFETY INSTRUCTIONS

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning properly; That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zing) or rechargeable batteries.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/ A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Never use near motor vehicles.
- Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Do not ride at night.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Never operate the product barefooted.
- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck.

SAFETY WARNINGS.

KEEP THESE INSTRUCTIONS.

- Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Operators always shall use appropriate protective clothing, including but not limited to a helmet, with appropriate certification, and any other equipment recommended by the manufacturer: Always wear protective equipment such as helmet, knee pads, and elbow pads.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- The brake may become hot while operating, do not touch the brake with your bare skin.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with a hexagon wrench, screwdriver, or other applicable tool, or please contact the Jetson Care Team.
- Replace worn or broken parts immediately.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- Recommended for indoor use.
- Only use the battery(ies) specified by the manufacturer
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.
- The rider should not exceed 132 lb (59.9 kg).

DISPOSAL OF USED BATTERY



Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from the Jetson Care Team. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION PRECAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check the battery charge before using. Adults must assist children in the initial adjustment procedures to unfold scooter, adjust handlebar and steering to height and finally to fold scooter.

⚠ WARNING:

Failure to comply with the following instructions may result in injury to the child or others.

- Keep small parts away from children during assembly.
- Accessory must be assembled and removed by an adult.
- Frequently inspect the product for damage.

*** ADULT ASSEMBLY IS REQUIRED.**

⚠ WARNING:

To reducte the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.

CALIFORNIA PROPOSITION 65

⚠ WARNING:

THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO: WWW.P65WARNINGS.CA.GOV.

WARRANTY COVERAGE & PRODUCT REGISTRATION.

GENERAL LIMITED WARRANTY

YOUR NEW JETSON PRODUCT IS WARRANTED AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP AS INDICATED ON RIDEJETSON.COM/WARRANTY FOR A PERIOD OF TIME FROM THE DATE OF ORIGINAL RETAIL PURCHASE WHEN USED IN ACCORDANCE WITH JETSON'S USER MANUALS (REFER TO RIDEJETSON.COM/SUPPORT). **UNDER THIS WARRANTY, YOU WILL BE ABLE TO DIRECT YOUR CLAIMS TO JETSON EVEN IN SITUATIONS WHERE YOU PURCHASED THE JETSON PRODUCT FROM ONE OF OUR AUTHORIZED RETAILERS.** TO READ THE FULL TERMS OF OUR WARRANTY, VISIT RIDEJETSON.COM/WARRANTY.

PRODUCT REGISTRATION

REGISTER YOUR NEW JETSON TO FAST-TRACK YOU TOWARDS PERSONALIZED PRODUCT AND WARRANTY SUPPORT. MAKE YOUR MOVE AT RIDEJETSON.COM/PAGES/REGISTRATION.

1. ABOUT YOUR PRODUCT.

1.1 Product Overview

1. HANDLEBAR*
2. STEM CLAMP
3. STEM (LED LIGHT-UP)
4. HEAD TUBE
5. DOWN TUBE
6. FRONT FORK
7. FRONT WHEEL (MOTION-ACTIVATED LED LIGHT-UP)
8. FOLDING LEVER
9. FOLDING MECHANISM ADJUSTMENT BOLT **
10. DECK (LED LIGHT-UP)
11. LIGHTING BUTTON (UNDERSIDE OF DECK)
12. BATTERY COMPARTMENT (UNDERSIDE OF DECK)
13. REAR WHEEL (MOTION-ACTIVATED LED LIGHT-UP)
14. REAR FOOT BRAKE

Tools included for assembly, adjustment & maintenance:




2-bit Phillips-head screwdriver (A) and 5mm Allen key tool (B)



4mm Allen Key

NOTE: IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.

**REQUIRES ASSEMBLY*
***REQUIRES ADJUSTMENT AT SET-UP*

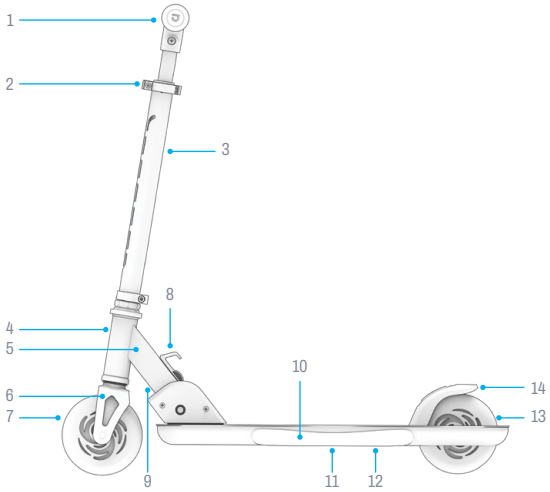

1.2 Product Specs

- WHEEL SIZE: 4.7 IN
- UNFOLDED DIMENSIONS: 26.3 IN (L) × 11.2 IN (W) × 26.3 IN (H)
- FOLDED DIMENSIONS: 26.3 IN (L) × 11.2 IN (W) × 8.4 IN (H)
- DECK SIZE: 20.7 IN (L) × 4.8 IN (W)
- HANDLEBAR HEIGHT: 26.3 IN - 35.0 IN
- WEIGHT LIMIT: 132 LB | 59.9 KG
- PRODUCT WEIGHT: 8.2 LB | 3.7 KG
- RECOMMENDED AGE: 5+
- BATTERIES REQUIRED: 3 AA (NOT INCLUDED)

1.3 Online Resources

Scan for our most updated product onboarding materials and support resources.

Find our collection of user manuals at https://ridejetson.com/pages/product-manuals


JETSON

2. GETTING STARTED.

2.1 Starting Notes

- KICK OFF YOUR ADVENTURE RIGHT:
  PRIOR TO USE OF THIS PRODUCT, CAREFULLY READ THE ENTIRE USER MANUAL, INCLUDING SAFETY WARNINGS. MAKE SURE YOU UNDERSTAND, ACCEPT, AND ADHERE TO ALL:
  - MANUFACTURER'S RECOMMENDATIONS.
  - SAFETY INSTRUCTIONS AND WARNINGS.
  - LOCAL RIDING AND OPERATIONAL LAWS AND ORDINANCES.

- REMOVE ALL PROTECTIVE PACKAGING PIECES PRIOR TO BEGINNING ASSEMBLY INCLUDING THE PROTECTIVE CAP AT THE TOP OF THE STEM.

- THE DIRECTIONS GIVEN IN THIS MANUAL—RIGHT, LEFT, FRONT/FORWARD, AND REAR/BACK—ARE ORIENTED AS THE RIDER WOULD SEE THEM WHEN STANDING ON THE SCOOTER. THE "RIGHT SIDE" OF THE SCOOTER, FOR EXAMPLE, IS THE SIDE WHERE THE RIDER'S RIGHT HAND WILL BE.

2.2 Helmet Safety

A HELMET SHOULD BE WORN BY THE RIDER AT ALL TIMES.



IMPROPER POSITIONING:
THE FOREHEAD IS EXPOSED.
A FALL COULD RESULT IN
SERIOUS INJURY.



PROPER POSITIONING:
THE FOREHEAD IS
COVERED
BY THE HELMET.


**WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.*

2.3 Unfolding & Folding the Scooter


IMPORTANT:

- WHEN UNFOLDING FOR ASSEMBLY AND SET-UP, THE HANDLEBAR WILL NOT YET BE ATTACHED.
- AT SET-UP AND THROUGHOUT THE USE OF THE SCOOTER, THE FOLDING MECHANISM MAY NEED ADJUSTMENT. REFER TO SECTION 2.4 FOR DETAILS.

1. PULL THE FOLDING LEVER UP THE DOWN TUBE.

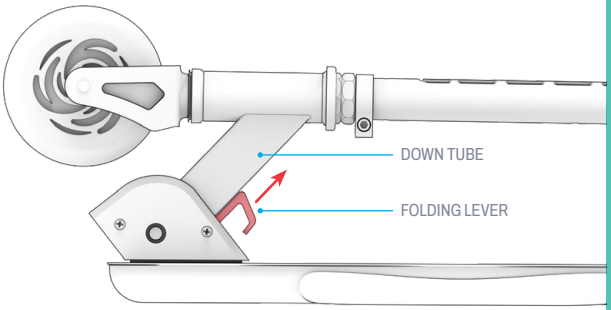


WHEN TO UNFOLD:
FOR ASSEMBLY AND RIDING

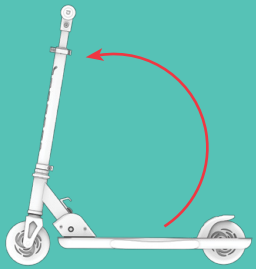


UNFOLDED

WHEN TO FOLD:
FOR STORAGE AND TRANSPORT

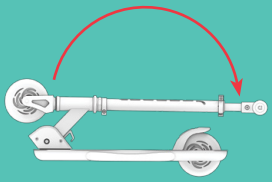

FOLDED

2. **TO UNFOLD:** RIASE THE STEM TO THE UPRIGHT POSITION UNTIL THE STEM CLICKS INTO PLACE.
   TO FOLD: LOWER THE STEM TOWARDS THE DECK UNTIL THE STEM CLOCKS INTO PLACE.
   TROUBLESHOOTING: IF YOU CANNOT FOLD OR UNFOLD THE SCOOTER, OR IF THE FOLDING LEVER FEELS LOOSE, THE FOLDING MECHANISM MAY NEED TO BE ADJUSTED. REFER TO SECTION 2.6 FOR DETAILS.
3. RELEASE THE FOLDING LEVER.
4. CHECK THAT THE STEM IS SECURE.

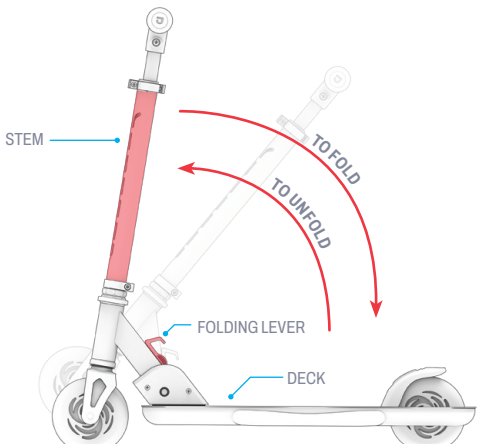

⚠ **WARNING:** TO AVOID A COLLAPSING OF THE STEM THAT COULD LEAD TO INJURY, NEVER RIDE WITHOUT THE STEM CLICKED INTO THE UPRIGHT POSITION.

2.4 Adjusting the Folding Mechanism Tension

BEFORE FIRST USE AND THROUGHOUT YOUR USE OF THE SCOOTER, YOU MAY NEED TO ADJUST THE TIGHTNESS OF THE FOLDING MECHANISM TO REESTABLISH PROPER TENSION IN THE FOLDING MECHANISM.


YOU SHOULD FEEL SOME RESISTANCE WHEN YOU PULL THE FOLDING LEVER. IF THE FOLDING LEVER IS WOBBLY OR MOVES WITHOUT ANY RESISTANCE, THE FOLDING MECHANISM IS TOO LOOSE AND NEEDS TO BE TIGHTENED.

IF YOU CANNOT FOLD OR UNFOLD THE SCOOTER, THE FOLDING MECHANISM IS TOO TIGHT AND NEEDS TO BE LOOSENED.

YOU WILL NEED THE 4MM ALLEN KEY.


IMPORTANT: THE FOLDING MECHANISM MAY NEED TIGHTENED OR LOOSENING THROUGHOUT YOUR SCOOTER ADVENTURES. CHECK AND TIGHTEN AS NECESSARY.

1. LOCATE THE BOLT ON THE FRONT SIDE OF THE DOWN TUBE OPPOSITE THE FOLDING LEVER. **IF NECESSARY, FOLD THE SCOOTER (SECTION 2.3) FOR BETTER ACCESS TO THE BOLT.**

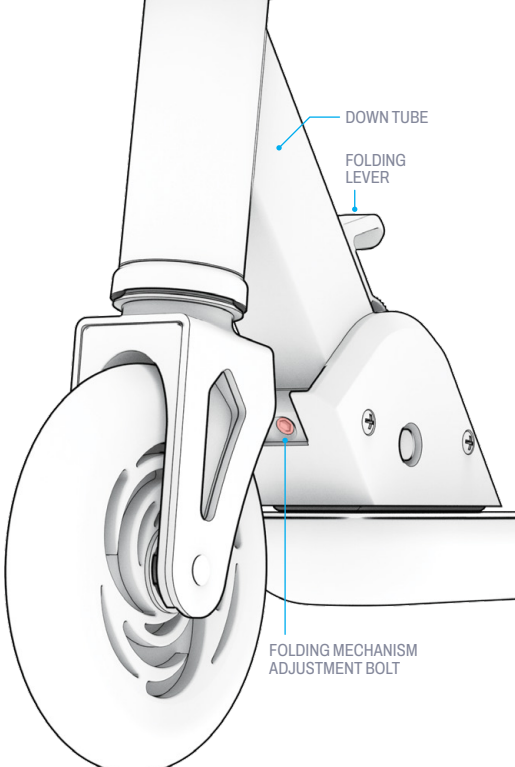

2. **TO TIGHTEN THE FOLDING MECHANISM:** TURN THE BOLT CLOCKWISE WITH THE 4MM ALLEN KEY.
   TO LOOSEN THE FOLDING MECHANISM: TURN THE BOLT COUNTERCLOCKWISE WITH THE 4MM ALLEN KEY.
3. FOLD AND UNFOLD THE SCOOTER FOLLOWING THE INSTRUCTIONS IN SECTION 2.3. YOU MAY NEED TO CONTINUE TIGHTENING OR LOOSENING UNTIL THE CORRECT TENSION IS ACHIEVED.


⚠ **CAUTION:** TO AVOID INJURY THAT COULD RESULT FROM AN UNSTABLE STEM AND HANDLEBAR, NEVER RIDE WITHOUT THE FOLDING MECHANISM PROPERLY TIGHTENED.

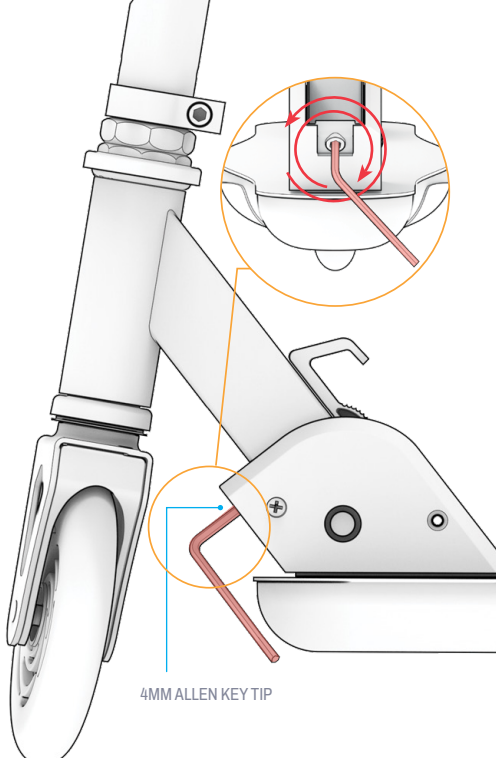


2.5 Attaching the Handlebar


YOU WILL NEED THE PHILLIPS-HEAD SCREWDRIVER TIP OF THE 2-BIT TOOL.


1. UNFOLD THE SCOOTER SO THAT THE STEM IS UPRIGHT. (SECTION 2.3)
2. UNSCREW THE PRE-ATTACHED BOLT FROM THE NUT IN THE STEM BY TURNING IT COUNTERCLOCKWISE WITH THE SCREWDRIVER TIP OF THE 2-BIT TOOL. (YOU MAY HAVE TO HOLD THE NUT STEADY WITH A FINGER IN ORDER TO LOOSEN AND REMOVE THE BOLT.) SET THE HARDWARE ASIDE.

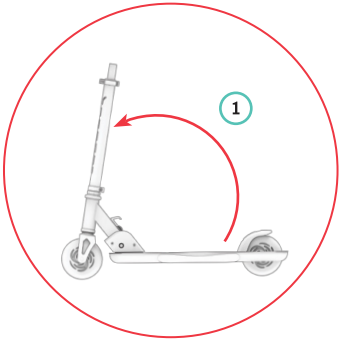

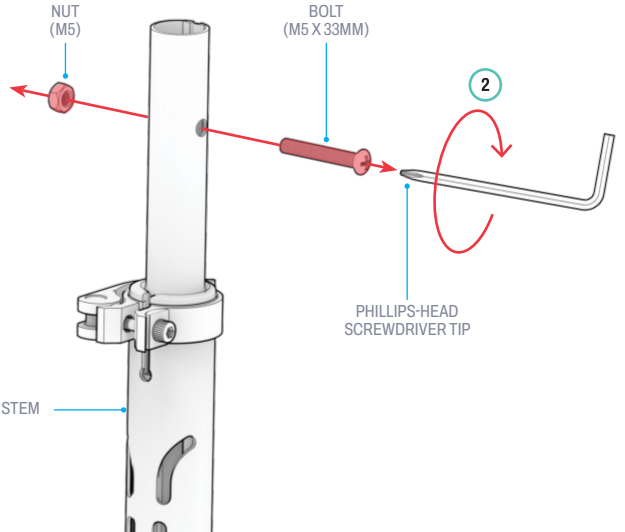

3. POSITION THE HANDLEBAR BASE OVER THE TOP OF THE STEM SUCH THAT THE RAISED LINE ON THE INSIDE OF THE HANDLEBAR BASE IS IN LINE WITH THE INDENTED CHANNEL ON THE TOP OF THE SCOOTER STEM.
4. SLIDE THE HANDLEBAR ONTO THE SCOOTER STEM.
5. PUSH DOWN AND ADJUST UNTIL THE HARDWARE HOLES IN THE SIDES OF THE HANDLEBAR BASE ARE ALIGNED WITH THE HARDWARE HOLES IN THE SIDES OF THE STEM.

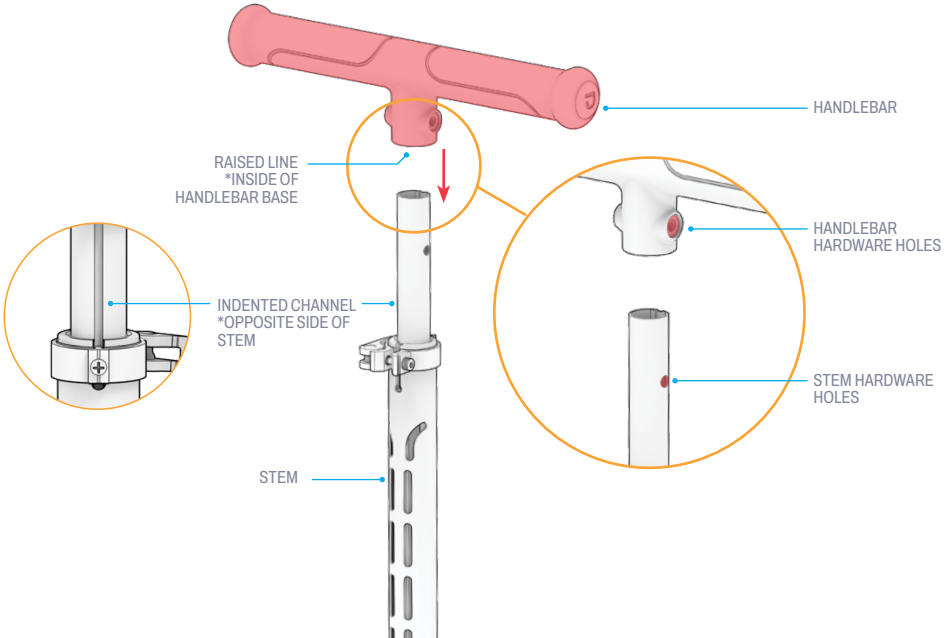

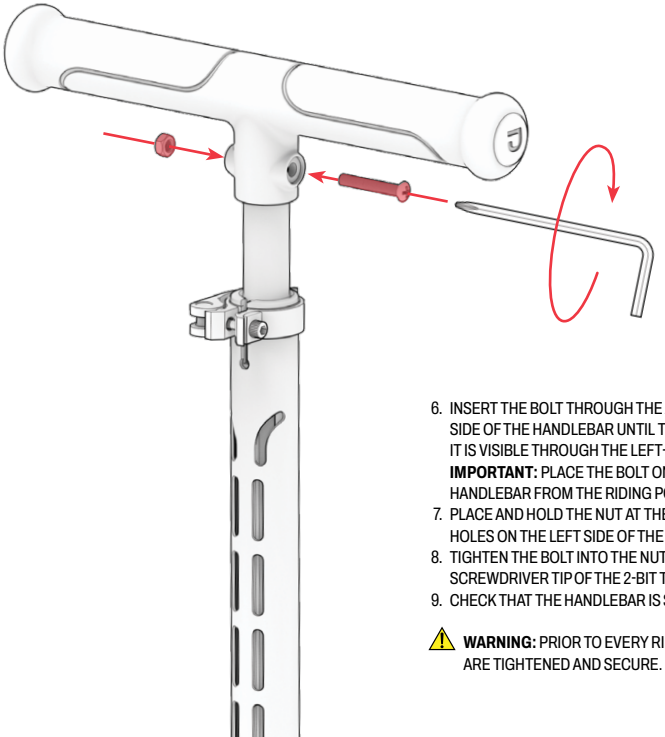


6. INSERT THE BOLT THROUGH THE ALIGNED HOLES ON THE RIGHT-HAND SIDE OF THE HANDLEBAR UNTIL THE END OF IT IS VISIBLE THROUGH THE LEFT-SIDE HOLES.
   IMPORTANT: PLACE THE BOLT ON THE RIGHT SIDE WHEN VIEWING THE HANDLEBAR FROM THE RIDING POSITION.
7. PLACE AND HOLD THE NUT AT THE END OF THE BOLT IN THE ALIGNED HOLES ON THE LEFT SIDE OF THE HANDLEBAR.
8. TIGHTEN THE BOLT INTO THE NUT BY TURNING IT CLOCKWISE WITH THE SCREWDRIVER TIP OF THE 2-BIT TOOL.
9. CHECK THAT THE HANDLEBAR IS SECURE.

⚠ **WARNING:** PRIOR TO EVERY RIDE, CHECK THAT THE BOLT AND NUT ARE TIGHTENED AND SECURE.


2.6 Adjusting the Height of the Handlebar

YOU WILL NEED THE 5MM ALLEN KEY TIP OF THE 2-BIT TOOL.

1. OPEN THE STEM CLAMP LATCH.
2. LOOSEN THE BOLT OPPOSITE THE LATCH TO WIDEN THE CLAMP BY TURNING IT COUNTERCLOCKWISE WITH THE 5MM ALLEN KEY TIP OF THE 2-BIT TOOL.
3. WHILE PRESSING IN THE STEM PIN (A), LIFT OR LOWER THE HANDLEBAR (B) UNTIL THE PIN CLICKS INTO ANOTHER STEM PIN HOLE. (C)

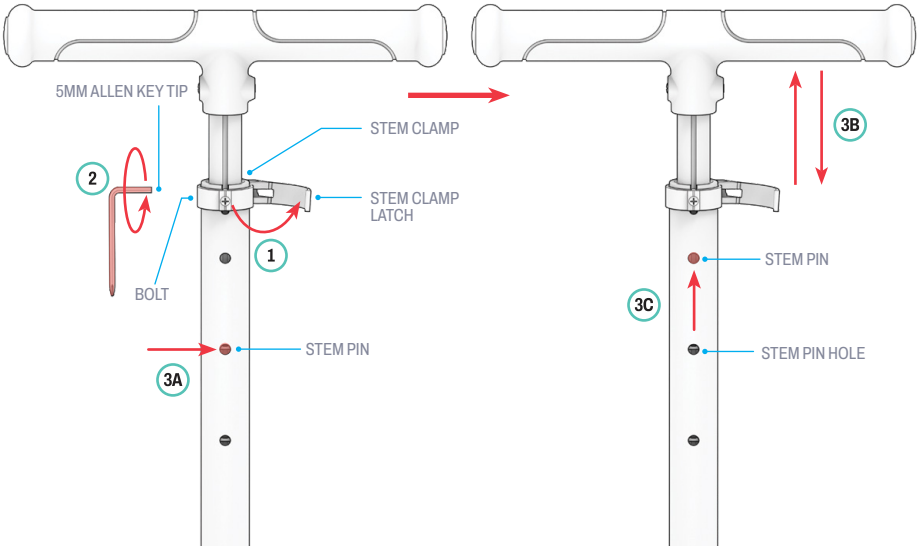

4. CLOSE THE STEM CLAMP LATCH AND TIGHTEN THE BOLT BY TURNING IT CLOCKWISE WITH THE 5MM ALLEN KEY.
5. CHECK THAT THE HANDLEBAR IS SECURE.

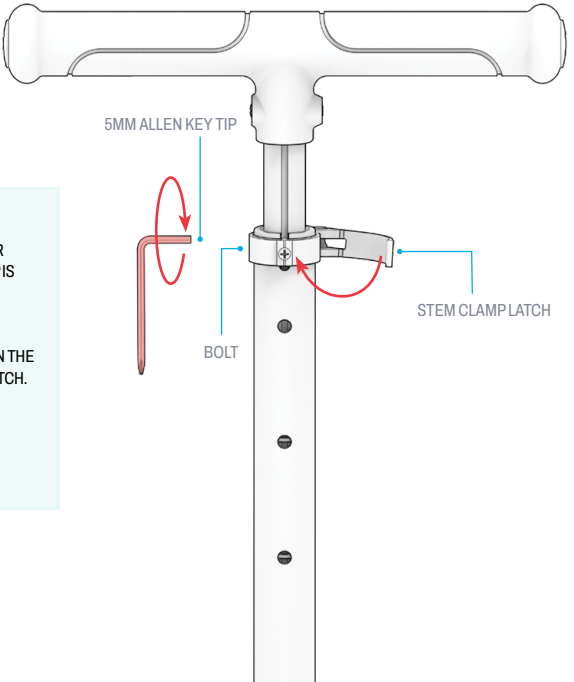

⚠ **CAUTION:** THE STEM PIN ALONE WILL NOT KEEP THE STEM SECURE. TO AVOID A COLLAPSING OF THE HANDLEBAR THAT COULD LEAD TO INJURY, MAKE SURE THE STEM CLAMP IS TIGHTENED AND CLOSED BEFORE RIDING.


TROUBLESHOOTING: IF YOU CANNOT OPEN OR CLOSE THE LATCH, THE BOLT ON THE CLAMP MAY BE TOO TIGHT. LOOSEN THE KNOB ½ ROTATION AT A TIME UNTIL YOU CAN UTILIZE THE LATCH.

DO NOT OVERTIGHTEN THE STEM CLAMP KNOB. OVER-TIGHTENING CAN PREVENT THE STEM CLAMP LATCH FROM OPENING AND CLOSING.

2.7 Inserting Batteries

YOU WILL NEED 3 AA BATTERIES (NOT INCLUDED) TO OPERATE THE LIGHTS ON YOUR SCOOTER. TO ACCESS THE BATTERY COMPARTMENT, YOU WILL NEED THE PHILLIPS-HEAD SCREWDRIVER TIP OF THE 2-BIT TOOL.


1. LOOSEN AND REMOVE THE SCREW SECURING THE BATTERY COMPARTMENT COVER ON THE UNDERSIDE OF THE DECK BY TURNING IT COUNTERCLOCKWISE WITH THE SCREWDRIVER TIP OF THE 2-BIT TOOL.
2. LIFT AND REMOVE THE BATTERY COMPARTMENT COVER.
3. PLACE 3 AA BATTERIES IN PLACE ACCORDING TO THE +/- ORIENTATION INDICATED INSIDE OF THE BATTERY COMPARTMENT.
4. REPLACE THE BATTERY COMPARTMENT COVER.
5. RE-INSERT THE SCREW AND TIGHTEN IT BY TURNING IT CLOCKWISE WITH THE SCREWDRIVER.
6. CHECK THAT THE COMPARTMENT COVER AND SCREW ARE SECURE.

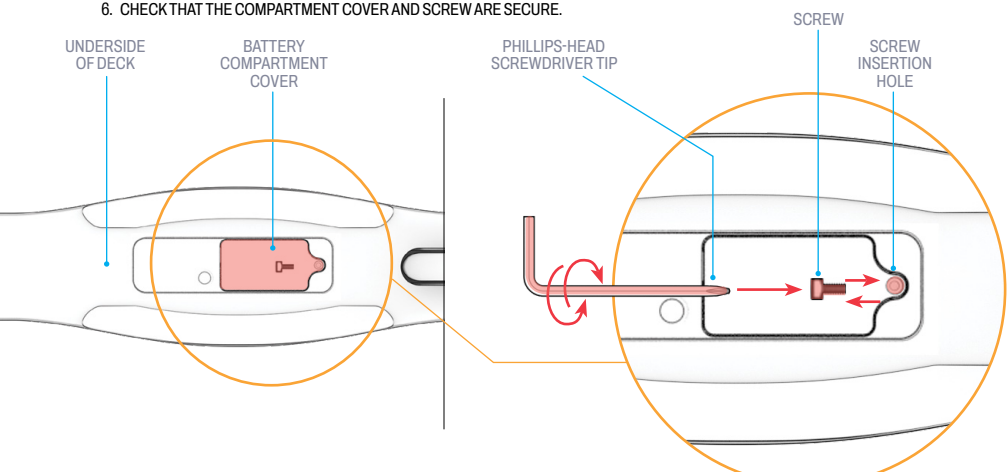


3. MAKING MOVES.

3.1 Riding the Scooter

1. PLACE ONE FOOT ON THE FRONT OF THE DECK FACING FORWARD.
2. USE THE BACK FOOT TO PUSH OF THE GROUND AND PROPEL THE SCOOTER FORWARD.

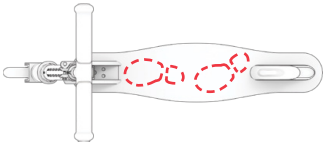


TO COAST:
PLACE THE KICKING FOOT ON THE DECK BEHIND THE FRONT FOOT AT A SLIGHT ANGLE.

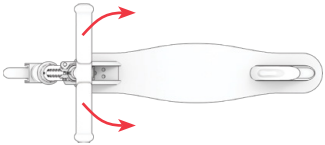

TO MAKE TURNS:
ROTATE THE HANDLEBAR TO THE LEFT OR RIGHT.

3.2 Using the Brake

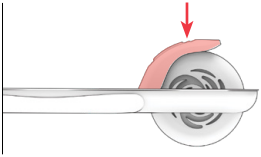

- PRESS DOWN GENTLY WITH THE REAR RIDING FOOT TO SLOW DOWN.
- APPLY MORE PRESSURE TO COME TO A COMPLETE STOP.

3.3 Using the Lights

To turn on the lights in the deck and stem:

- QUICK-PRESS THE LIGHTING CONTROL BUTTON.

NOTE: THE LIGHTS ON THE WHEELS ARE MOTION-ACTIVATED AND WILL ILLUMINATE WHEN THEY ROTATE, EVEN IF THE OTHER LIGHTS ARE NOT POWERED ON.

To change the lights:

- CYCLE THROUGH 11 DIFFERENT LIGHTING PATTERNS BY QUICK-PRESSING THE BUTTON AGAIN.
- STOP PRESSING WHEN YOU'VE LANDED ON THE LIGHTING PATTERN THAT FEELS RIGHT FOR YOUR RIDE.


To turn off the lights:

- THE 12TH QUICK-PRESS WILL TURN OFF THE LIGHTS.
- TO POWER OFF THE LIGHTS WITHOUT GOING THROUGH THE CYCLE OF PATTERNS, PRESS AND HOLD THE LIGHTING CONTROL BUTTON FOR 3 SECONDS

Intelligent auto-off feature:

- AFTER 5 MINUTES OF NON-USE, THE LIGHTS WILL POWER OFF. TO REACTIVATE THE LIGHTS, QUICK-PRESS THE LIGHTING BUTTON.

IMPORTANT: REMEMBER TO TURN OFF THE LIGHTS WHEN YOU'RE DONE RIDING TO PRESERVE BATTERY LIFE.

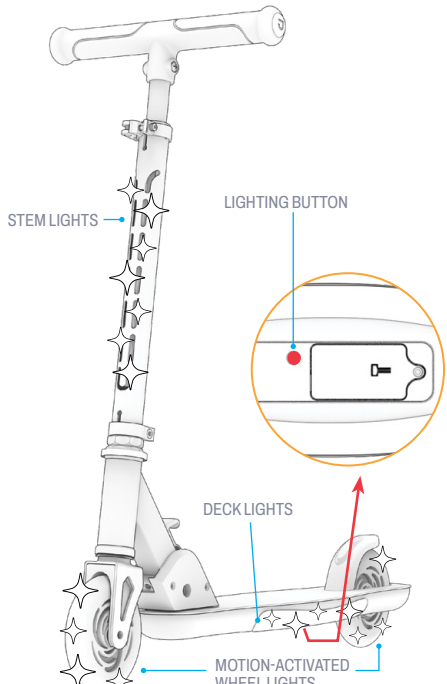


MAKE MOVES.

CARE & MAINTENANCE.

Take good care of your Jetson to keep it riding smoothly and safely. Here's how:

Cleaning your Jetson:

- TO CLEAN THE PRODUCT, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH.
- DO NOT APPLY WATER DIRECTLY TO THE PRODUCT. WATER CAN CAUSE DAMAGE TO THE ELECTRICAL SYSTEM OR CAUSE FRAME DETERIORATION, WHICH COULD LEAD TO A MALFUNCTION THAT PUTS RIDER SAFETY AT RISK.

Storing your Jetson:

- STORE THE PRODUCT INDOORS AND IN A DRY PLACE.
- COVER THE PRODUCT TO PROTECT IT AGAINST DUST.
- REMOVE BATTERIES PRIOR TO STORING THE PRODUCT FOR EXTENDED PERIODS OF TIME.

Precautions:

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE PHYSICAL IMPACT AND/OR SEVERE VIBRATION.
- RIDE THE PRODUCT ON A SMOOTH, FLAT SURFACE.
- PROTECT FROM WATER OR MOISTURE.
- CONTACT THE JETSON CARE TEAM IF THERE ARE ANY ISSUES WITH THE PRODUCT.

CONNECT WITH US.

RIDEJETSON.COM/SUPPORT
RIDEJETSON.COM/CHAT

1-844-585-7462

Be sure to follow @ridejetson on social media to learn about fantastic offers, giveaways, and all the latest Jetson news.

LOVING YOUR RIDE?

Leave a review at
ridejetson.com/reviews.
We can't wait to hear from you!
#MakeMoves


JETSON