
Baby Food Bottle Warmer

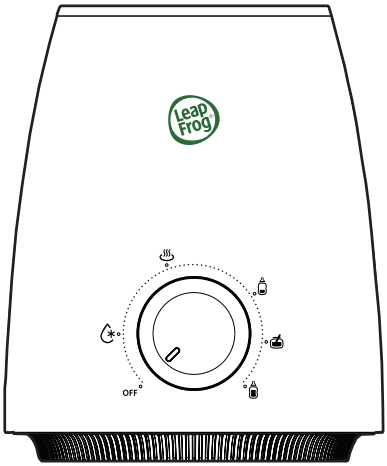

Parent Guide

This guide contains important information.
Please keep it for future reference.

Visit our website leapfrog.com for more information about products, downloads, resources and more.
Read our complete warranty policy online at leapfrog.com/warranty

Scan the QR code for more online support:

Or go to leapfrog.com/support

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or main body of appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to applianc e first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. Before serving be sure food is at safe temperature.
16. Before serving, unplug cord from wall outlet and dish. Do not leave cord within child’s reach.
17. To power off the bottle warmer, turn the knob to the OFF position
18. Please note that this unit does not have preheat function.
19. Household Use Only.
20. DO NOT IMMERSE IN WATER.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
24. The food should not be heated for too long.
25. Check the temperature of the food with the back of your hand before feeding your baby, to ensure the food is at a temperature that’s safe for your baby.
26. Turn the knob to the OFF position to switch off the bottle warmer after use.

SAVE THESE INSTRUCTIONS


Extension cord use:

A) A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

B) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.


C) If a longer detachable power-supply cord or extension cord is used:
1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.


What’s Included

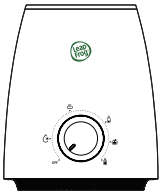



Overview

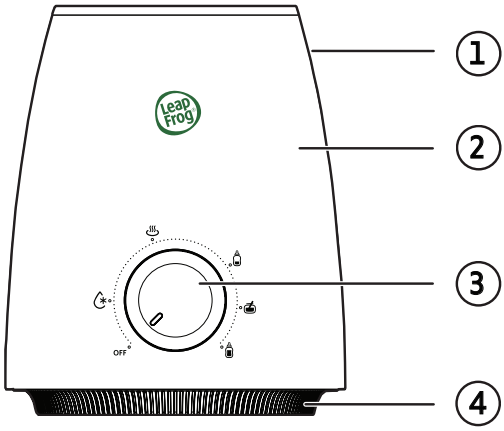

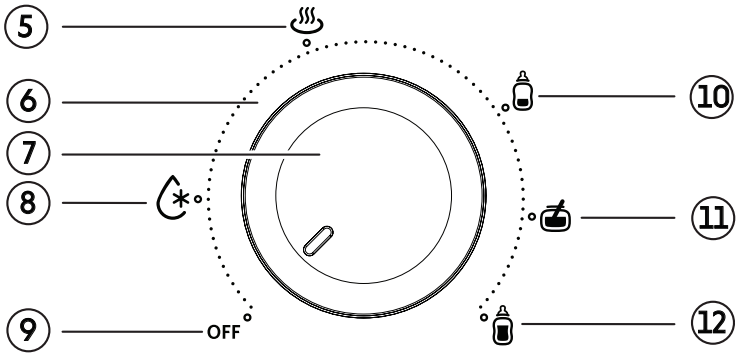

1 Container
2 Housing
3 Knob
4 Base
5 Keep Warm
6 Function indicator light
7 Temperature Knob
8 Defrost
9 OFF Power Off
10 Heat up small bottles
11 Heat up baby food
12 Heat up big bottles


Using the warmer

Notes:

- Make sure the warmer is not connected to an electronically/timer-controlled electric power outlet. The warmer should never leave unsupervised during use.
- Do not move the warmer when containing hot liquid.
- Periodically take the jar out of the bottle warmer and stir the food to distribute the temperature evenly.
- Discard the water from the bottle warmer each time after heating a bottle or jar and use fresh water in the next food preparation.
- Bottles or jars may not be tightly sealed during heating in the baby bottle warmer otherwise excessive pressure may build up (risk of explosion/material damage).
- Check the temperature of the milk or food with the back of your hand before feeding your baby, ensure the food is at a temperature that's safe for your baby.
- If the temperature is too low, put the bottle or jar back into the warm water of the bottle warmer. No need switch the warmer on again. The water will still be warm enough. If the temperature is too high, cool down the milk or food.

Defrost

1. Place the bottle warmer on a stable surface, out of reach of children.
2. Place the jar or bottle with the frozen food into the bottle warmer.
3. Fill up the space between the bottle warmer and the bottle or jar with water at room temperature, until reach the same level as the milk or food in the jar. **When filling, never exceed the maximum mark indicated on the container.**
4. Insert the plug into a wall socket.
5. Turn the temperature control knob to .
6. Defrost the frozen milk/ baby food to liquid state. No warming occurs (The product may heat up if the product is operated at an ambient temperature below 10-15 ºC).

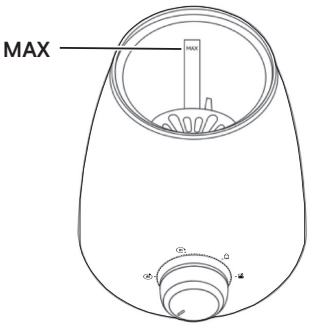

7. For frozen milk, check the warming reference indication of small and larger milk volume for the expected defrost timing. After your milk is defrosted, choose the heat up or keep warm setting to warm your milk. The start temperature of your milk is around fridge temperature after defrost.

Milk (ml)	Defrost Time (hours)
60ml- 90ml	1 - 1.5
120ml - 150ml	1.5 - 2
180ml - 210ml	1.5 -2.5

8. Turn the knob to **OFF** when defrost is completed.

Keep warm (slowly heat up)

1. Place the jar (without lid) or bottle into the bottle warmer.
2. Fill up the space between the bottle warmer and the bottle or jar with water at room temperature, until reach the same level as the milk or food in the jar.
3. Insert the plug into a wall socket
4. Turn the temperature control knob to .
5. Warm your milk at a slow pace and keep it warm at the right temperature. E.g. to warm a bottle of 210ml milk starting from frozen temperature, will take 20-25min. The warming time depends on the milk volume and starting temperature.
6. Turn the knob to **OFF** when keep warm is completed.

Notes:

- For food hygiene reasons, do not warm baby food exceed one hour.
- The final temperature of the milk or food depends on the amount of water in the bottle warmer. If the temperature is too high, use less water in the bottle warmer. In case the temperature is too low, use more water.

Heat up small bottles / big bottles

1. Pour water into the bottle warmer (around 80ml, refer to the measuring mark).
2. Place the bottle into the bottle warmer.
3. Insert the plug into a wall socket.
4. Turn the temperature control knob to or .
5. Warm the milk quickly. Take the milk out and shake it well during heating to make the milk heat more evenly.
6. Take out the milk immediately after warming, preventing overheated.
7. Turn the knob to **OFF** after heating up.

Refer to below table for the warm-up time:

Milk	Small Bottles		Big Bottles
ml			
	22°C	5°C	5°C
60 - < 150ml	2 - 3 min.	5 - 6 min.	-
150 - < 210ml	3 - 4 min.	6 - 7 min.	-
210 - < 270ml	4 - 5 min.	7 - 9 min.	-
270 - < 330ml	5 - 6 min.	-	8 - 10 min.

Note:

- After heating, take the milk out and shake or stir it well before feeding to the child.

Heat up baby food

1. Pour water into the bottle warmer (around 80ml, refer to the measuring mark).
2. Place the jar (without lid) into the bottle warmer.
3. Insert the plug into a wall socket.
4. Turn the temperature control knob to .
5. Warm the food quickly. Take out the food immediately after warming, preventing overheated.
6. Stir the baby food during warming as it does not circulate automatically. Be careful of burning your fingers when holding the container / jar while stirring.
7. Turn the knob to **OFF** after heating up.

Refer to below table for the warm-up time:

Amount	Food at room temperature	Food from the fridge
Jar		
120gr	2:20	3:10
200gr	2:30	4:00

General product care

CATUION: Unplug or disconnect the appliance from the power supply before servicing or cleaning, then wait until the product cools down before servicing or cleaning.

CATUION: Any other servicing should be performed by an authorized service representative.

To keep this product working well and looking good, follow these guidelines:

- Avoid placing near heating appliances and devices that generate electrical noise (for example,motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft damp cloth.
- DO NOT immerse the product in water and do not clean under running water.
- DO NOT use solvents, household cleaning sprays, or liquid cleaners.
- Hard water deposits must be removed. Use white vinegar only. Pour the vinegar into the tank at mid-level, allow to rest until the hard water deposits have been completely eliminated. Rinse well and wipe with a damp cloth.
- Make sure product is dry before reconnecting to the mains supply.

Storage

When you are not going to use the warmer for some time, store it in a cool, dry place.

Disclaimer and Limitation of Liability

LeapFrog and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. LeapFrog and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. LeapFrog and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty: Please visit our website at leapfrog.com for full details of the warranty provided in your country.

For cETL compliance only

Lors de l'utilisation d'appareils électriques, des mesures de sécurité de base doivent toujours être respectées, y compris les suivantes :

1. Lire toutes les instructions.
2. Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons.
3. Afin de réduire les risques de choc électrique, ne pas immerger le cordon, les fiches ou le corps principal de l'appareil dans l'eau ou tout autre liquide.
4. Une surveillance étroite est nécessaire lorsque tout appareil est utilisé par des enfants ou à proximité de ceux-ci.
5. Débrancher l'appareil lorsqu'il n'est pas utilisé et avant le nettoyage. Laisser refroidir avant d'installer ou de retirer des pièces.
6. Ne pas utiliser un appareil dont le cordon ou la fiche est endommagé, ni après un mauvais fonctionnement ou s'il a été endommagé de quelque manière que ce soit. Retourner l'appareil au centre de service autorisé le plus proche pour inspection, réparation ou réglage.
7. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut entraîner des blessures.
8. Ne pas utiliser à l'extérieur.
9. Ne pas laisser le cordon pendre du bord d'une table ou d'un comptoir, ni entrer en contact avec des surfaces chaudes.
10. Ne pas placer sur ou près d'un brûleur à gaz ou électrique chaud, ni dans un four chauffé.
11. Faire preuve d'une extrême prudence lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
12. Toujours brancher d'abord la fiche à l'appareil, puis brancher le cordon dans la prise murale. Pour débrancher, mettre toute commande à « arrêt », puis retirer la fiche de la prise murale.
13. Ne pas utiliser l'appareil à d'autres fins que celles prévues.
14. Cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Afin de réduire les risques de choc électrique, cette fiche est conçue pour être insérée dans une prise polarisée dans un seul sens. Si la fiche ne s'insère pas complètement dans la prise, l'inverser. Si elle ne s'insère toujours pas, faire appel à un électricien qualifié. Ne pas tenter de modifier la fiche de quelque façon que ce soit.
15. Avant de servir, s'assurer que les aliments sont à une température sécuritaire.
16. Avant de servir, débrancher le cordon de la prise murale et du plat. Ne pas laisser le cordon à la portée des enfants.
17. Pour éteindre le chauffe-biberon, tourner le bouton à la position "ARRÊT".
18. Veuillez noter que cet appareil ne comporte pas de fonction de préchauffage.
19. Pour usage domestique seulement.
20. NE PAS IMMERGER DANS L'EAU.
21. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, sauf si elles sont supervisées ou ont reçu des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité.
22. Les enfants doivent être surveillés afin de s'assurer qu'ils ne jouent pas avec l'appareil.
23. Si le CORDON D'ALIMENTATION est endommagé, il doit être remplacé par le fabricant, son agent de service ou toute personne qualifiée afin d'éviter tout danger.
24. Les aliments ne doivent pas être chauffés trop longtemps.
25. Vérifier la température des aliments avec le dos de la main avant de nourrir votre bébé, afin de s'assurer qu'ils sont à une température sécuritaire pour celui-ci.
26. Tournez le bouton sur la position OFF pour éteindre le chauffe-biberon après utilisation.

CONSERVEZ CES INSTRUCTIONS

L'utilisation de rallonge :

A) Un cordon d'alimentation court (ou cordon d'alimentation amovible court) est fourni afin de réduire les risques d'emmêlement ou de trébuchement causés par un cordon plus long.

B) Des cordons d'alimentation amovibles plus longs ou des rallonges sont offerts et peuvent être utilisés avec précaution.

C) Si un cordon d'alimentation amovible plus long ou une rallonge est utilisé :

1) La valeur nominale indiquée du cordon ou de la rallonge doit être au moins équivalente à celle de l'appareil ;

2) Le cordon doit être disposé de manière à ne pas pendre du comptoir ou de la table, où il pourrait être tiré par des enfants ou faire trébucher quelqu'un accidentellement.

Customer Support

Find the answer to your questions. Get assisted at your own pace using our knowledge-rich full Online Manual, or contact Customer Support with your inquiries.



Scan the QR code to access the Online Manual or visit leapfrog.com/support.

Full Manual

Comprehensive help articles on product set up, operations, Wi-Fi and settings.

Video Tutorials

Walk-throughs on features and installation such as mounting the baby unit on the wall.

FAQs & Troubleshooting

Answers to the most commonly asked questions, including troubleshooting solutions.

Customer Support

Visit our Consumer Support website 24 hours a day at:
United States:
leapfrog.com/support
Canada:
leapfrog.ca/support

Call our Customer Service number from Monday to Friday 9am - 6pm Central Time:
United States & Canada:
1 (800) 717-6031

Warranty

Please visit our website at *leapfrog.com* for full details of the warranty provided in your country.

Technical Specifications

Rate Frequency: 60Hz	Operational ambient temperature:
Rated Voltage: 120V	Between +7 °C and +37 °C
Rated Power: 500W	Heating system: Stainless steel heating plate

Specifications are subject to change without notice.
© 2026 LeapFrog Enterprises, Inc.
a subsidiary of VTech Holdings Limited.
All rights reserved. 06/26. LeapView Bottle Warmer_US_QSG_V1