NUMÉRO DE PIÈCE 793
1 PC

OUTLAND LIVING®

FIRE TABLE SOFT COVER

OUTDOOR LIVING PERFECTED®


COMPATIBLE WITH OUTLAND LIVING FIRE TABLE MODELS:			
TICK	**SERIES NAME**	**MODEL NUMBERS**	**SERIES NUMBERS**
☐	OUTLAND FIRE TABLE	FMPPC2E, FMPPC2E-1, FMPPC2E-403	400, 401, 403

SOFT COVER INSTALLATION GUIDE



1. Align Outland Living logo to the front and rear ends of your Firetable. Align the corners of the soft cover to the corners of the Firetable.
2. Pull two end corners over the tabletop frame, ensuring they are square.

NOTE:
To provide extra slack for the following steps, tuck the corners in between the tabletop and the top edge of the end panel, as shown.

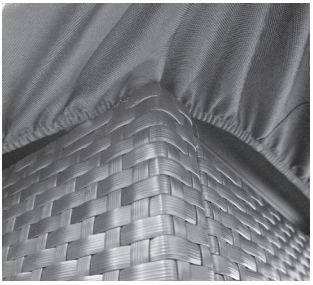

® Registered trademark of FMI Brands Inc.
The OUTLAND flame is a registered trademark of FMI Brands Inc.

FMI BRANDS INC.
107 – 19052 26 Avenue | Surrey, B.C. Canada V3Z 3V7
Toll Free 1-888-514-1663 | Fax 1-888-797-9931

SOFT COVER INSTALLATION GUIDE (CONTINUED)

3. Pull the third corner over the tabletop frame.



4. Pull the last corner over the tabletop frame. Realign the four corners as needed so that they are square on the tabletop.



5. Pull each corner down to the bottom.



6. Tuck each corner underneath the bottom edge of the end panel to lock your Soft Cover in place.



Soft Cover corner shown tucked underneath the bottom edge of the end panel.

The Soft Cover is designed with a tapered fit so should be expected to be fairly tight - BUT, REST ASSURED, IT WILL GO ON. If you have problems putting the Soft Cover on the Fire Table note the rectangular alignment of the cover with the fire table; the correct orientation is necessary to put the cover on the fire table.



FIRE TABLE!
WARNING!
HOT SURFACE!

SOFT COVER REMOVAL GUIDE

1. Un-tuck each corner of your Soft Cover from underneath the bottom edge of the end panel.

2. Pull each corner up.

   NOTE: To make it easier to pull off the first corner, tuck the other corners in between the tabletop and the top edge of the end panel, as before in Step 2 of the installation guide.

3. Carefully remove your Soft Cover one corner at a time.

⚠ WARNING:

This is NOT a toy.

Never use the cover on your Outland Fire Table while the Fire Table is in operation.

After use allow the Fire Table to cool for at least 30 minutes prior to deploying the cover.

MAINTENANCE

Simply use warm soap water to wipe down your cover to keep it clean.

Do not use bleach. Do not use abrasive cleaners.

The Soft Cover material contains UV blocking inhibitors to minimize fading, however, the cover will eventually fade, especially when left continuously in the sun.

The Soft Cover is water resistant, but not completely waterproof. The seams may leak some rain water but this will not harm your OUTLAND Fire Table.

Condensation may form under your Soft Cover and this is completely normal.

PART NUMBER 793
1 PCS

OUTLAND LIVING®

FIRE TABLE SOFT COVER

If you experience ANY problems with your Fire Table Soft Cover,
PLEASE DO NOT RETURN IT TO YOUR POINT OF PURCHASE!

Simply call us at **1-888-514-1663** or send an email to **info@outlandliving.com** and we will answer all questions and/or concerns that you may have.

We take pride in our products at FMI Brands Inc.
and will strive to provide excellent customer service.

www.outlandliving.com

FMI BRANDS INC.
107 – 19052 26 Avenue | Surrey, B.C. Canada V3Z 3V7
Toll Free 1-888-514-1663 | Fax 1-888-797-9931