SONY

* 3 0 9 4 1 1 7 1 1 *

Wireless Digital Audio

VGF-WA1

Setup Guide


* This Setup Guide explains how to connect and set up the Wireless Digital Audio (hereinafter referred to as "this device"). For more detailed instructions, refer to the supplied "Operating Instructions".

3-094-117-**11**(1) © 2007 Sony Corporation Printed in China


VAIO

STEP 1 Check the contents of the carton


☐ Wireless Digital Audio

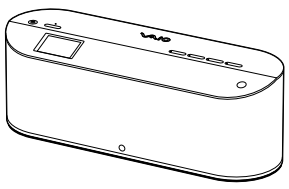


☐ Remote control




☐ Wireless Adapter




☐ AC adapter

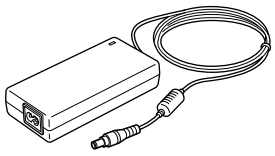


☐ Power cord



☐ USB cable




☐ Wireless Adapter connection support cable



☐ Setup CD-ROM
☐ Operating Instructions
☐ Setup Guide (this leaflet)
☐ Warranty card

STEP 2 Plug into a power outlet

1 Connect the supplied AC adapter to this device, and then plug into a wall outlet.
The POWER lamp lights up in red.

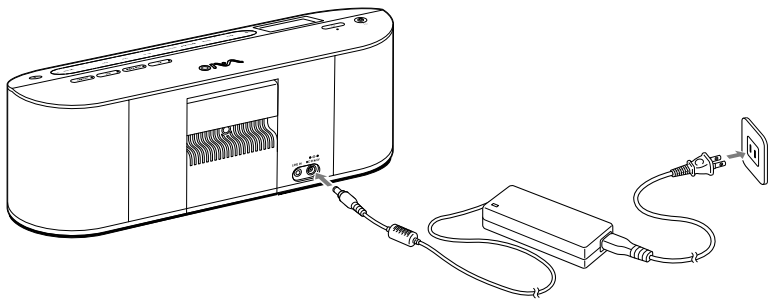

Note

- Do not disconnect the AC adapter during the setup of this device. It may cause a malfunction.

STEP 3 Install and set up the software


Q1: Do you already have a wireless LAN environment that contains an access point?

No → Q2: Do you intend to connect the Wireless Digital Audio to a Sony VAIO computer installed with Windows Vista?

- **Yes** → **Proceed to Ⓐ.**
- **No** → **Proceed to Ⓑ. (Other side)**

Ⓐ Using the supplied Wireless Adapter

1 Turn the AUTO INSTALL switch of the Wireless Adapter to ON.

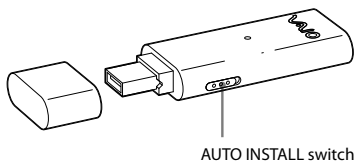

2 Insert the Wireless Adapter into the USB port of the computer.
The Setup automatically starts.

Tip

If you cannot insert the Wireless Adapter directly into the USB port of your computer, connect via the supplied Wireless Adapter connection support cable.

3 Perform the setup following the instructions on the screen of your computer.
Be sure to read the precautions on the screen thoroughly.

If you have set up the VAIO Media Integrated Server in the Setup, the preparation is complete.

To listen to the music files that are stored on your computer (PC Streaming Function), select the desired server from the server selection screen. This device begins to connect to the server. Select the desired music files to start playback. Refer to the supplied "Operating Instructions" for more detailed information on how to use this device.

If your Internet service provider instructs you to use their proxy server, use the access point connection tool to set up the proxy server settings. For more details, refer to "Setting up the proxy server settings for the Wireless Adapter connection" in the "Operating Instructions" (page 54).

To use this device with Windows Media Connect or Windows Media Player, proceed to "Preparing the computer" on the back side of this guide to set up.

Continued on other side

B Using the supplied CD-ROM

You can connect this device to a computer in one of the following two ways:


Connecting via the supplied Wireless Adapter

If you do not have a wireless LAN environment that contains an access point, you can plug the supplied Wireless Adapter into a computer to connect this device to the computer.
Use this method when you intend to connect this device to only one computer.



Connecting via your access point

If you already have a wireless LAN environment, you can connect this device to a computer via your access point.
Use this method when you intend to connect this device to more than one computer.

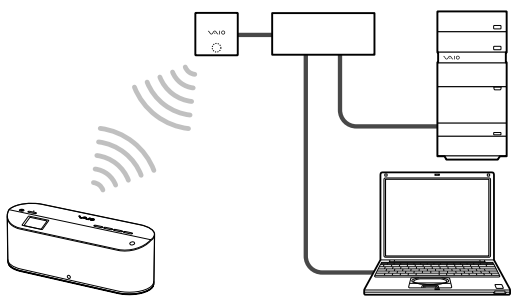

Note

Do not perform the following operations until an instruction to do so appears on the Setup screen, or the software installation may fail.
- Inserting the Wireless Adapter into your computer.
- Connecting this device to your computer via the USB cable.

1 Close all applications that are running on your computer.

Check to see if the following conditions are met before you proceed to step 2. If these conditions are not met, the installation may fail.
- You are logged in as a user who has administrative privileges (Administrator).
- You have also temporarily closed the antivirus software (because it uses large memory).

2 Insert the supplied CD-ROM into the CD drive of your computer.

The Setup automatically starts.

3 Perform setup following the instructions on the screen of your computer.

Be sure to read the precautions on the screen thoroughly.

If you have set up the VAIO Media Integrated Server in the Setup, the preparation is completed.

To listen to the music files that are stored on your computer (PC Streaming Function), select the desired server from the server selection screen. This device begins to connect to the server. Select the desired music files to start playback. Refer to the supplied “Operating Instructions” for more detailed information on how to use this device.

To use this device with Windows Media Connect or Windows Media Player, proceed to “Preparing the computer” below to set up.

When using Windows Media Connect

To play content on this device, start Windows Media Connect and register this device as a content delivery destination.

1 Make sure that this device is started in PC Streaming Function.

On this device, the PC lamp lights and [Select Server] appears in the display window.

Note
- When making the access point connection, if the USB cable connected to your computer is disconnected, this device automatically connects to the wireless LAN and starts in PC Streaming Function. Please wait a while for the wireless LAN connection to be established.

2 On the computer screen, click [All programs] from the [Start] menu, then click [Windows Media Connect].

When starting Windows Media Connect for the first time after installation, the Windows Media Connect Wizard appears.

Tip
- If Windows Media Connect is already installed, the main window appears.

3 Check the MAC address of this device.

On this device, press SETTINGS to enter the settings, and then select [Device Information] and [MAC Address].

4 On the computer screen, select this device.

For a device which is compatible with this device, the MAC address checked in step 3 appears.
When a device is compatible with this device, but does not appear, click [Next], then proceed to step 6.
After completing step 7, open the Windows Media Connect main window, then register the device.

5 Click [Allow].

The status of a device which is compatible with this device changes from [Deny] to [Allow].

6 Select the shared folder settings.

7 Click [Finish].

Preparation is complete.

When you listen to music stored on your computer (PC Streaming Function), select a desired server on the server selecting screen. Connection with the server starts.
When you select a song, playback starts. For details on how to operate this device, refer to the supplied “Operating Instructions”.

When using Windows Media Player 11

Start Windows Media Player 11 and register this device as a content delivery destination.

1 Make sure that this device is started in the PC Streaming Function.

On this device, the PC lamp lights and [Select Server] appears in the display window.

Note
- When making the access point connection, if the USB cable connected to your computer is disconnected, this device automatically connects to the wireless LAN and starts in PC Streaming Function. Please wait a while for the wireless LAN connection to be established.

2 On the computer screen, click [All programs] from the [Start] menu, and then click [Windows Media Player].

When starting Windows Media Player, the Windows Media Player main window appears.

3 Click [Sync], and then click [More Options].

The [Option] window appears.

4 Click the [Library] tab.

5 Click [Configure Sharing].

The [Media Sharing] window appears.

6 Check [✓] the [Share my media] check box.

7 Click [OK].

Tip

When the [User Account Control] message window appears after clicking [OK], click [Continue].

8 Check the MAC address of this device.

On this device, press SETTINGS to enter the settings and then select [Device Information] and [MAC Address].

9 On the computer screen, select this device.

10 Click [Allow].

The status of this device changes from [Deny] to [Allow].

11 Click [OK].

Preparation is complete.

When you listen to music stored on your computer (PC Streaming Function), select a desired server on the server selecting screen. Connection with the server starts.
When you select a song, playback starts. For details on how to operate this device, refer to the supplied “Operating Instructions”.

Trademarks
- VAIO, VAIO, and VAIO Media are registered trademarks of Sony Corporation.
- Microsoft, Windows, and Windows Media are registered trademarks and Windows Vista is a trademark of Microsoft Corporation in the United States and/or other countries.
- Adobe and Adobe Reader are registered trademarks of Adobe Systems Incorporated.
- LIVE365.COM is a trademark of Live365.com.
- Other system names and product names appearing in this document are generally registered trademarks or trademarks of their manufacturers. ™ and ® marks are not shown in this document.
- In this manual, Microsoft® Windows® XP Home Edition, Microsoft® Windows® XP Professional and Microsoft® Windows® XP Media Center Edition are referred to as Windows XP.
- In this manual, Microsoft® Windows Vista™ Home Basic, Microsoft® Windows Vista™ Home Premium, Microsoft® Windows Vista™ Business and Microsoft® Windows Vista™ Ultimate are referred to as Windows Vista.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.