





B181, B182, B183, B184
B191, B192, B193, B194



Grab Bar **x 1**



Washer **x 6**




Screw **x 6**




Cover **x 2**




Anchor **x 6**

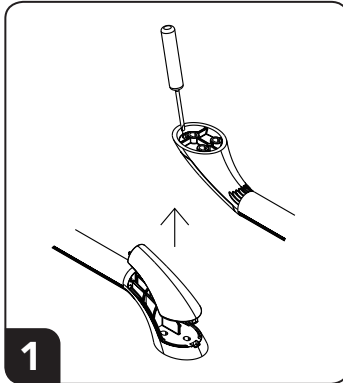


1
Remove covers from end of grab bar.

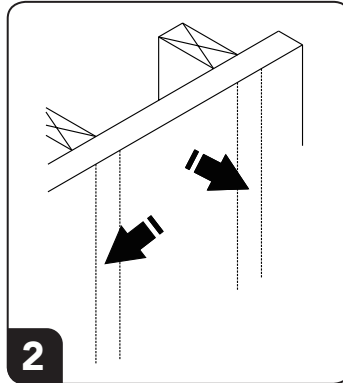


2
Mounting on the part of the wall with studs behind it is recommended.

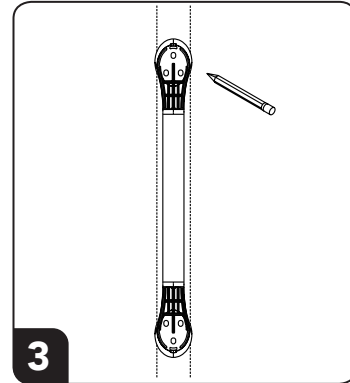


3
After locating the wall studs place grab bar at desired location and mark 6 holes for the screws

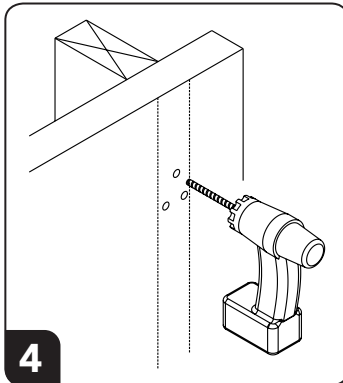

4
For masonry walls (tile, brick, cement, etc.) drill six 5/16" diameter pilot holes into wall. Insert (1) anchor into each hole and lightly tap to ensure the anchor is flush with the wall. **Note:** For timber walls (i.e wood) it is recommended to skip this step and use washers and screws only (See step 5).

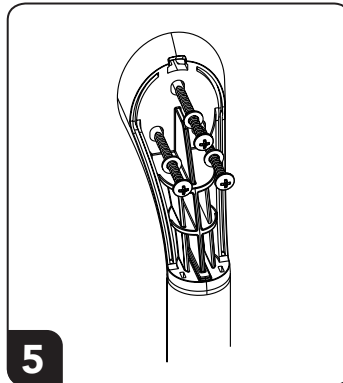

5
Insert screws (6) and washers (6) through the holes of the grab bar and firmly tighten.

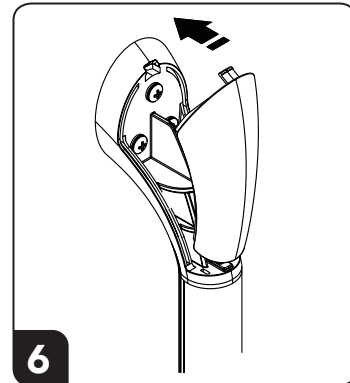

6
Replace covers.