

Cub Cadet.

INSTALLATION MANUAL

72" Mulch Kit — 59A30053150

59A30053150 mulch kit is designed for use with three-blade fabricated cutting decks found on select Cub Cadet models. Refer to your machine's Operator's Manual or consult your Cub Cadet dealer to assure compatibility.

Carton Contents

Before beginning installation, remove all parts from the carton to make sure everything is present. Carton contents are listed below and shown in Figure 1-1. Part numbers are shown in parentheses.

- | | | |
|-------------------------------------|------------------------------------|---------------------------------|
| • Two 1" Carriage Bolts (710-3168) | • Eleven Flange Nuts (712-05007) | • One Center Baffle (703-10795) |
| • Nine ¾" Carriage Bolts (710-3178) | • One Discharge Baffle (703-10794) | • One Left Baffle (703-10797) |

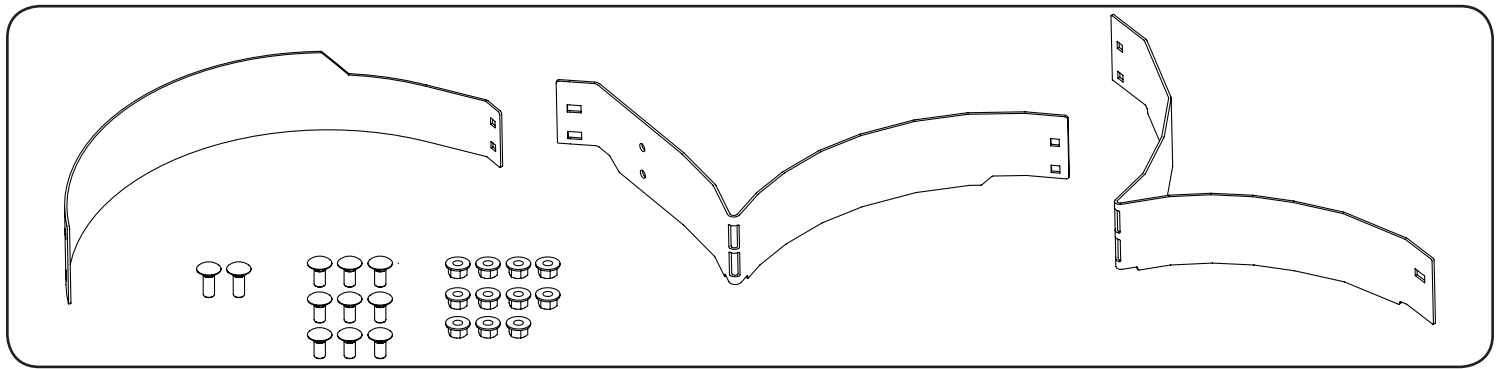


Figure 1-1

Baffle Removal



WARNING: Before beginning installation, place the tractor on a firm and level surface, set the parking brake, place the PTO in the disengaged (OFF) position, stop the tractor's engine and remove the ignition key to prevent unintended starting.



WARNING: Cutting blades are sharp. Always protect hands by wearing heavy leather work gloves to grasp blades.

1. Remove the cutting deck from beneath the tractor as instructed in your tractor's Operator's Manual.
2. Gently flip the deck over to expose its underside.

3. Remove the chute deflector baffle from the underside of the deck by removing the two carriage bolts and flange lock nuts that secure it to the deck. See Figure 1-2.

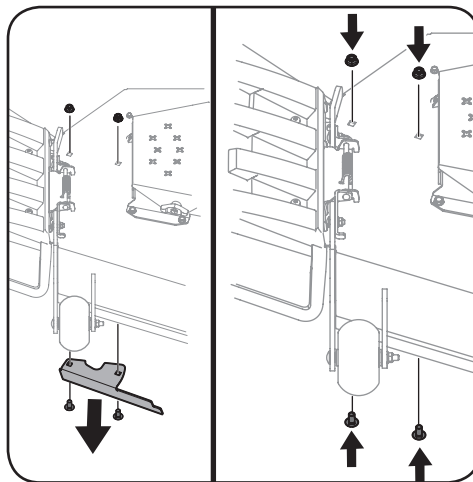


Figure 1-2

4. When the baffle is removed, re-install the two carriage bolts and flange lock nuts into the deck. See Figure 1-2.
5. Remove the existing baffle from the underside of the deck by removing the four bolts and flange lock nuts that secure it to the deck. See Figure 1-3.

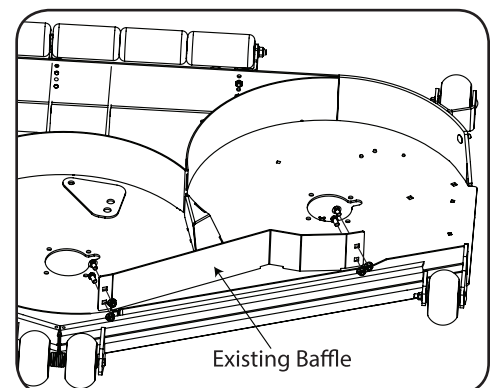


Figure 1-3

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

6. Remove the existing baffle from the underside of the deck by removing the three bolts and flange lock nuts that secure it to the deck. See Figure 1-4.

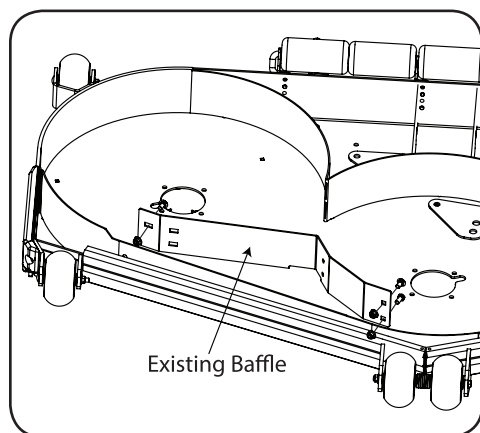


Figure 1-4

Baffle Installation



CAUTION: Do not remove the cutting deck's discharge chute when operating the mower with the mulch kit installed.

1. Install the center baffle using four $\frac{3}{4}$ " carriage bolts (and four flange nuts) to secure it. See Figure 1-5.

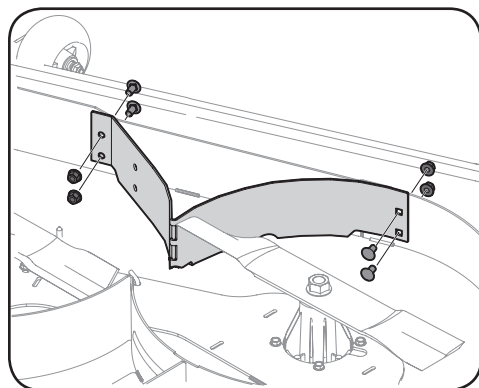


Figure 1-5

2. Install the discharge baffle using the two 1" carriage bolts (and two flange nuts) to secure the back portion, and two $\frac{3}{4}$ " carriage bolts (and two flange nuts) to secure the front portion. See Figure 1-6.

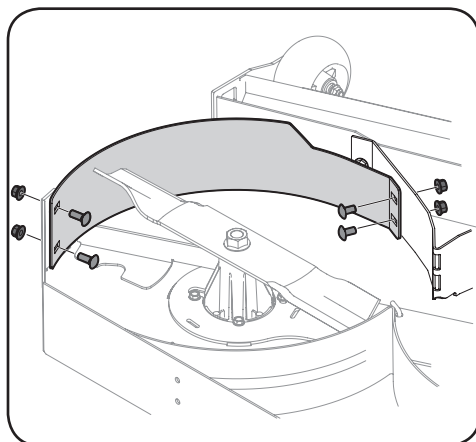


Figure 1-6

3. Install the left baffle using three $\frac{3}{4}$ " carriage bolts (and three flange nuts) to secure it. See Figure 1-7.

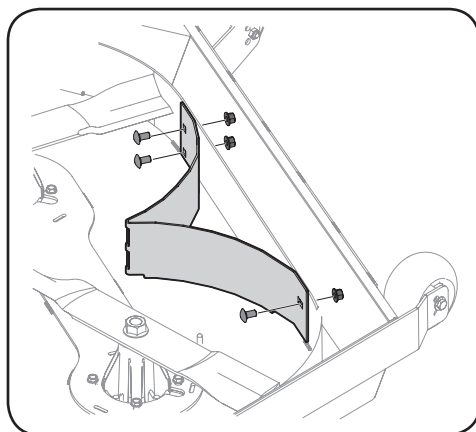


Figure 1-7



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.