



Fitting Instructions

Important information


Please follow all instructions and only use included parts.

It is the owner's responsibility to ensure this product is fitted correctly.

This device was designed for the purpose of securing and sliding portable fridges, and such items as storage boxes and toolboxes, safely and securely into either your vehicle, camper trailer, or RV without the need for tie downs.

The manufacturer makes no claims to the standard or safe limits of this unit, they or their retailers cannot be held responsible for any damage or injury caused from misuse or excessive & unreasonable force being applied to these.

As this product was designed around the footprint of Engel products, models up to the MT45 can be fitted straight onto this product simply by swapping the feet with the supplied replacements. If using any other brand or product, please use the available adapter plate (sold separately) or see diagram below for foot positions.

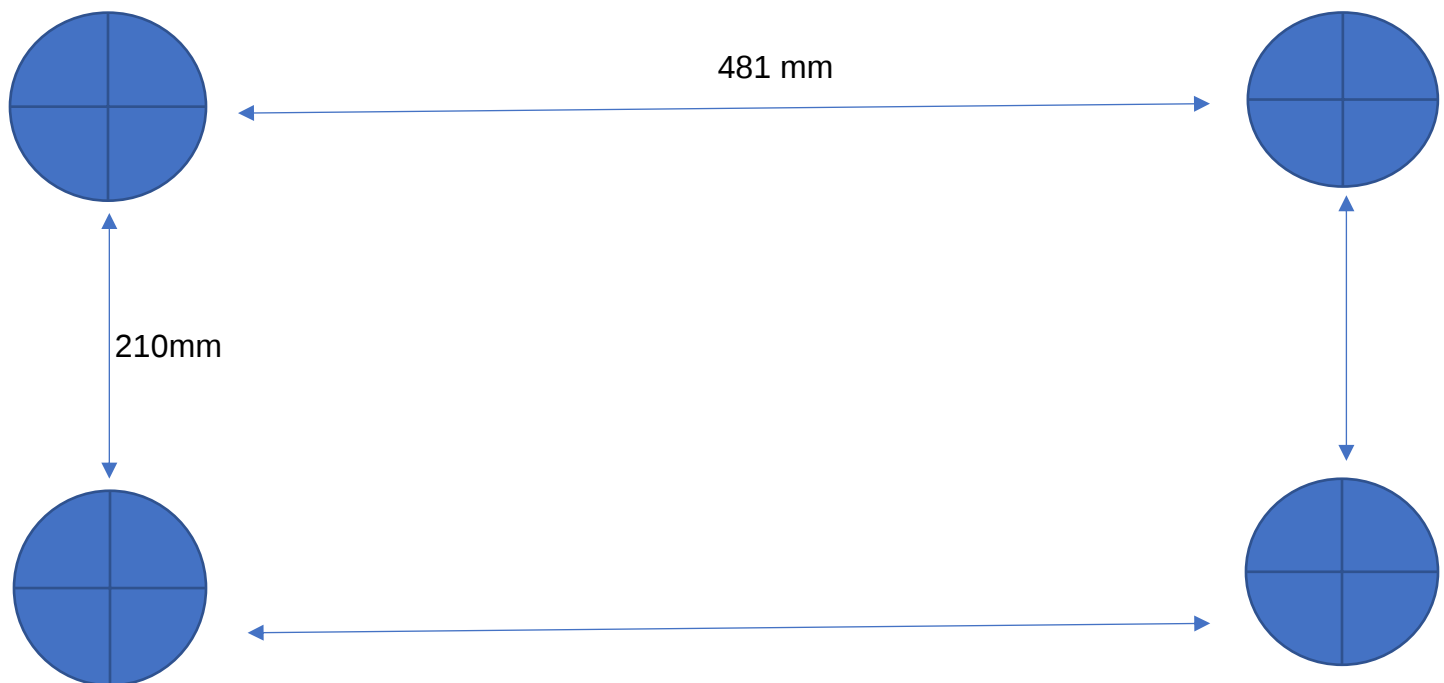



Please read and follow fitting instructions carefully

***** THIS UNIT MUST BE FITTED TO A SMOOTH FLAT SURFACE FOR IT TO WORK CORRECTLY *****
FITTING ONTO UNEVEN OR FLUTED SURFACES WILL PREVENT THE SLIDE FROM OPERATING CORRECTLY

For fitting you will need the following tools:

- 5mm Allen key
- 13mm spanner or socket
- Drill and 8mm bit
- Marking Pen
- Phillips screwdriver

To operate the slide, use the yellow button in the center

Begin by either fitting the 4 replacement feet to the fridge (if using Engel) or fitting the optional adapter plate to your desired fridge or unit

1. Place the slide in the desired position and ensure that it will not interfere with any doors or tailgates.
2. Place fridge on the slide and ensure all doors and tailgates will close with slide in desired position.
3. Remove the fridge from the slide carefully so the slide does not move, or you may need to mark the position prior to removing the fridge.
4. Open the slide to full extension and mark the six (6) fitting hole locations (ensure under side is clear before drilling through vehicle).
5. Remove the slide and begin to drill all 6 holes using the 8mm drill bit.
6. Once all surfaces are cleaned of debris place the slide over the holes and insert the (6) M8 bolts through the holes.
7. With the use of a second person if needed use the (6) washers and (6) M8 nuts to secure the slide in place.
8. Before tightening the bolts ensure that the slide is level and not pulled down unevenly and that it is sliding free of any resistance.
9. If unit is fitted correctly tension up the fixings and check once again that it is not over tightened and causing the slide to distort.
10. If you are happy with the fitting, go ahead and fit your desired unit to the slide.

******* Removal of your fridge *******

Using the 2 Red tabs on either side, apply a small amount of backward pressure to the fridge and turn both keys clockwise till they click into the open position.

You can now slide your fridge out of the slide

To refit your fridge simply turn the locks anticlockwise to the locked position line the feet up with the slide and begin to push the fridge into the slide until the unit is all the way in and you hear the locks engage to the feet (check by pulling on the fridge ensuring it is safely secured)

Australian Patent ID

2019268164