

ELYSIA

OUTDOOR MODULAR KITCHEN BY **FONTANA**
F O R N I



SINK

Instruction Manual



Introduction.....	1
Suggested Tools for Assembly.....	1
Product Dimensions.....	2
Parts List.....	3
Components List.....	4
Instructions.....	5
Adjustment.....	16
Cleaning and Maintenance.....	17

BEFORE YOU START

FONTANA
FORNI


Welcome to your Elysia Outdoor Modular Kitchen

Save these instructions.

- Read these instructions completely and carefully. Do not skip any step. Put all bolts used in a step before tighten them.
- Some parts have sharp edges, care must be taken to avoid injury. Please wear gloves when handling.
- Two or more people should work together to assemble the kitchen modules and FONTANA Appliances.
- During assembly, work on a protected surface to avoid damaging the pieces.




Tap & Hold (mobile)
or Scan to Watch
the Video

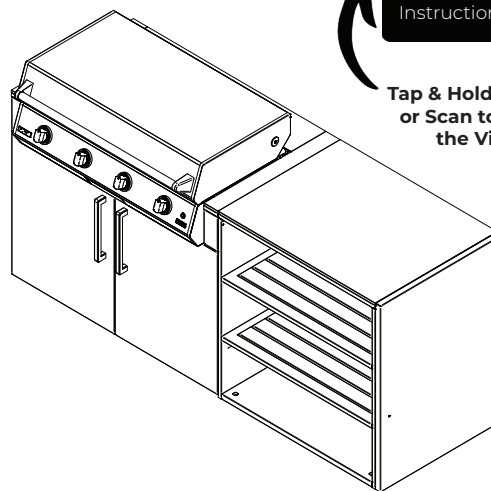


SUGGESTED TOOLS FOR ASSEMBLY


1 - Phillips Head

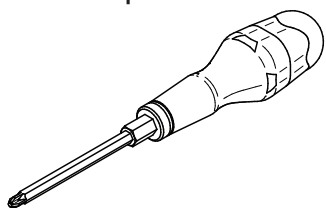

1 - Adjustable wrench
(or 7mm nut driver bit)

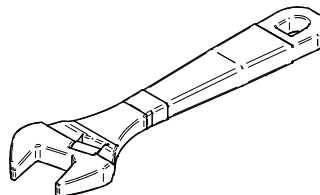

1 - Allen Wrench (CRV-4 Hex Head)

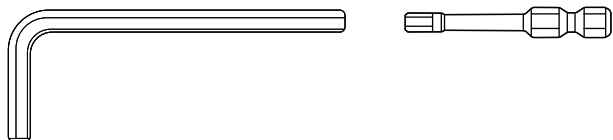


1 - Silicone Adhesive
Suitable for Ceramics



PRODUCT DIMENSIONS


FONTANA
FORNI

Sink

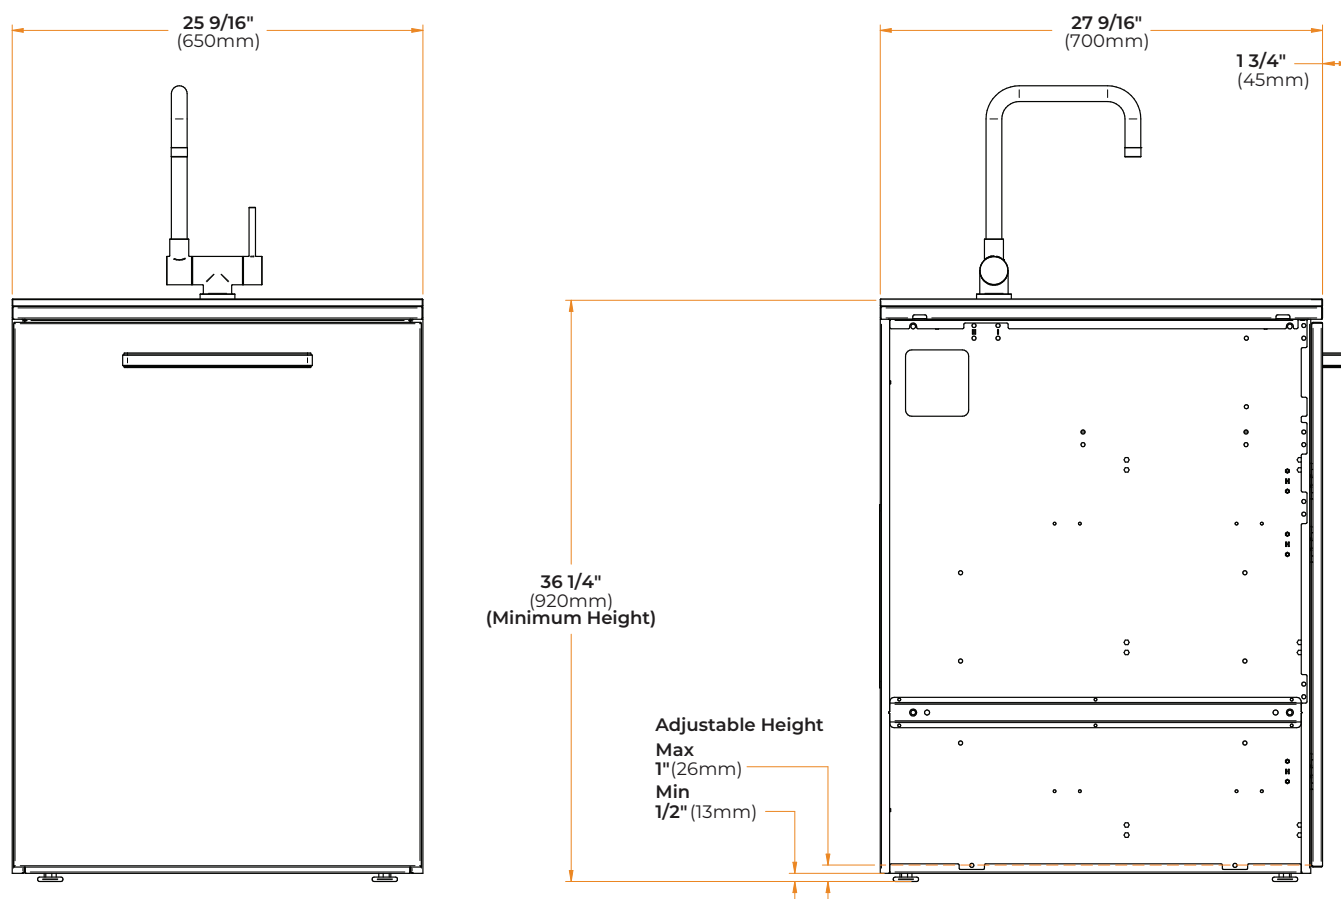

PARTS LIST


#	NAME	QTY
1	BASE	1
2	R-SIDE PANEL	1
3	L-SIDE PANEL	1
4	COUNTERTOP SUPPORT	1
5	REAR	1
6	RIB	1
7	STONE	1
8	DOOR	1
9	REGISTER TOP	2
10	SINK	1

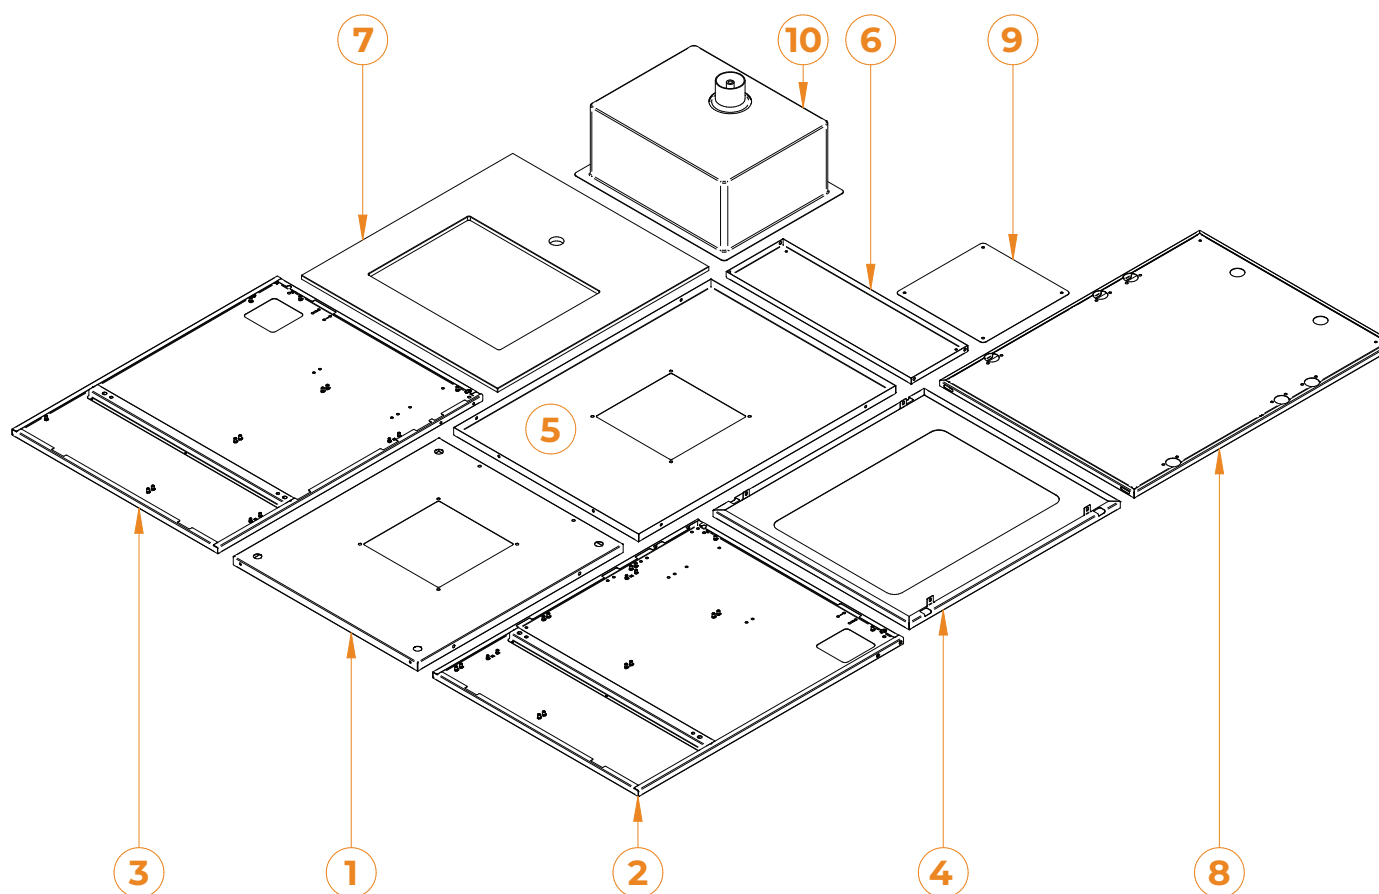

COMPONENTS LIST


#	NAME	QTY
A	FAUCET	1
B	T HOSE CONNECTOR	1
C	FAUCET SCREW ADAPTER	1
D	FAUCET HOSE	2
E	B-WASHER	1
F	R-WASHER	1
G	S-WASHER	1
H	W-WASHER	1
I	FAUCET NUT	1
J	DOOR HINGE	3

#	NAME	QTY
K	DOOR HANDLE	1
L	SCREW M3X12 ROUNDHEAD	2
M	SCREW M4X12	2
N	SCREW M4X16 COUNTERSUNK	12
O	SCREW M5X12	26
P	SCREW M6X16 BUTTON HEAD	8
Q	SPACER CYLINDER M6X30	4
R	ADJUSTABLE LEG	4
S	DOOR STOPPER	2

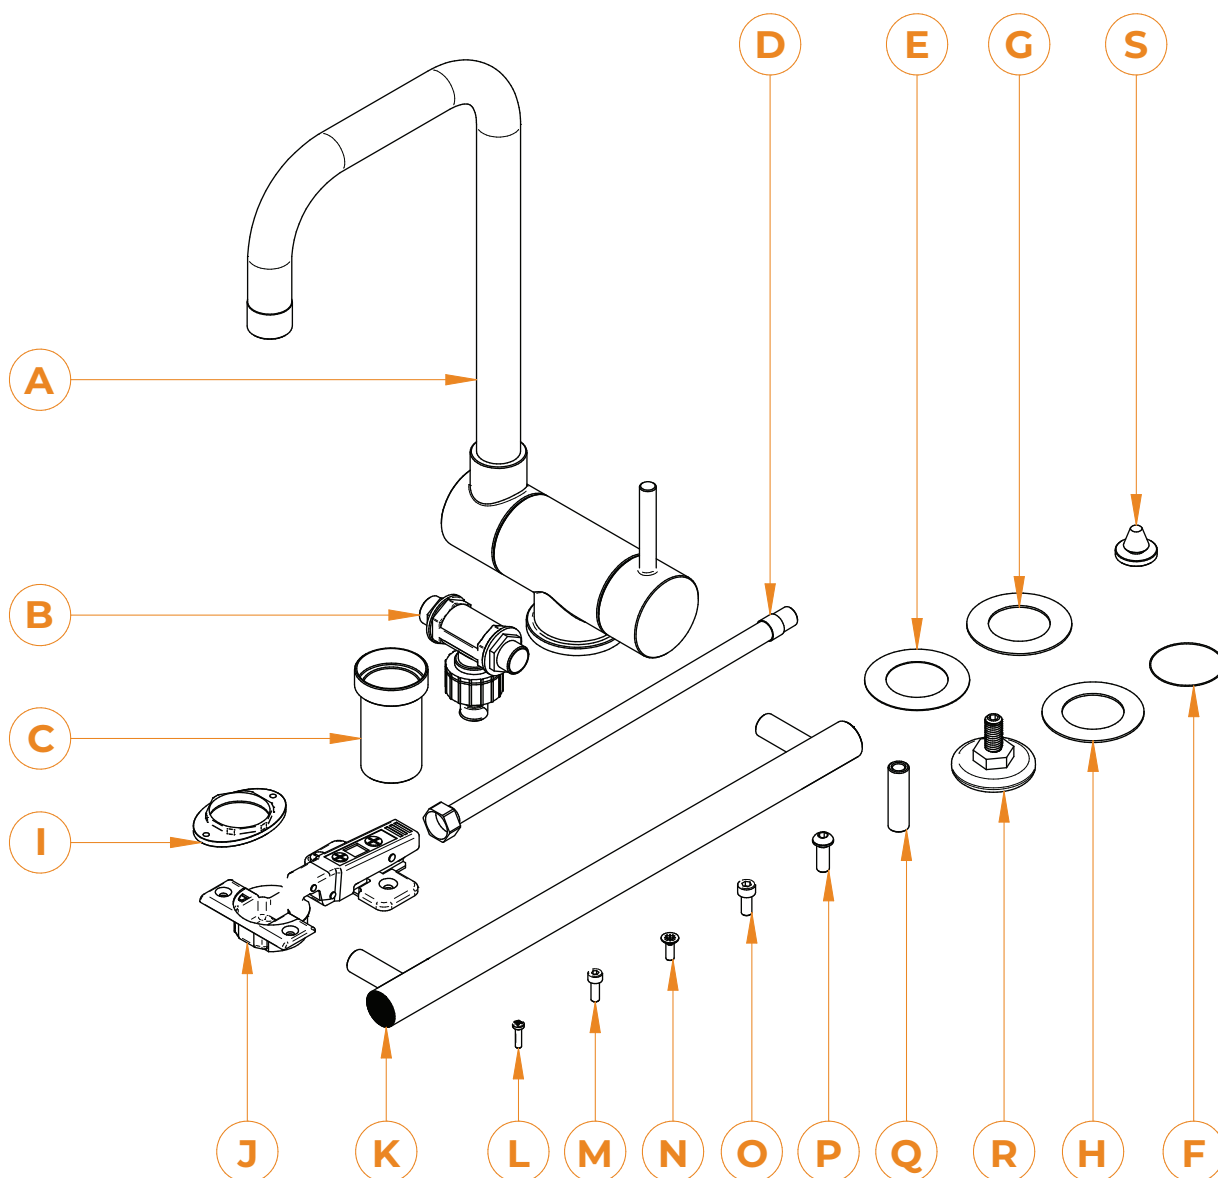


INSTRUCTIONS

Step 1 | Insert **Adjustable Legs (R - 4X)** in four corners of the **Base (1)**.

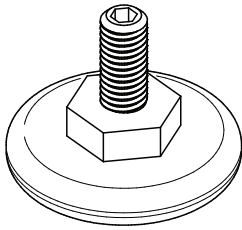


#	COMPONENT	QTY
R	ADJUSTABLE LEG	4


***RECOMMENDATION:** Do not attach the Leg Cap until the module has been leveled.

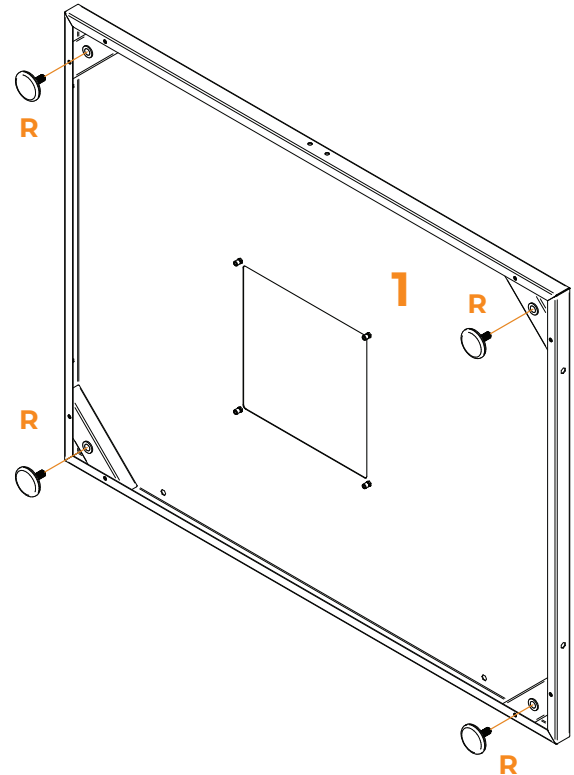

Step 2 | Attach the **Rear (5)** to the Base (1) with **Screw M5x12 (O - 2X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	2

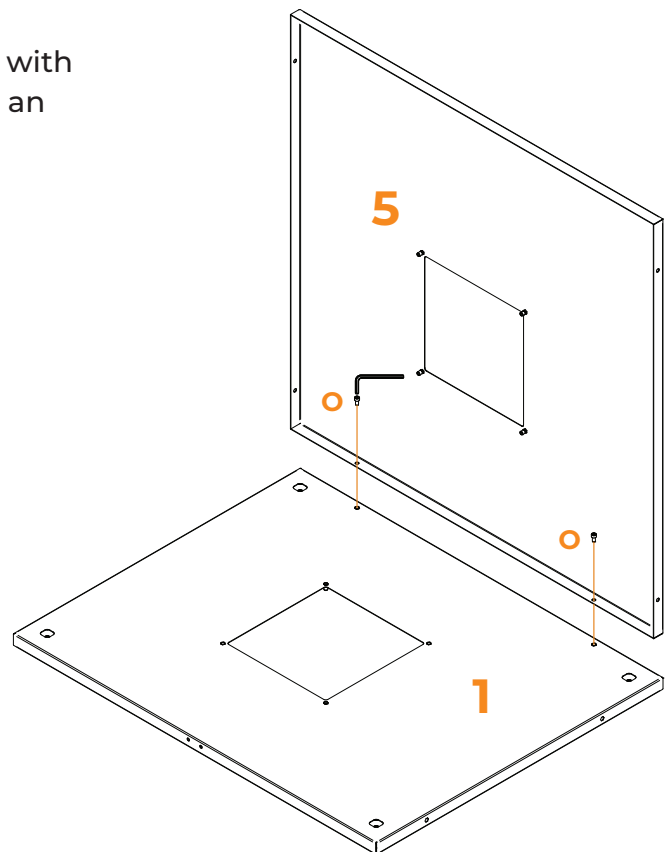


INSTRUCTIONS

FONTANA
FORNI


Step 3 | Attach **L-Side Panel (3)** to **Base (1)** and **Rear (5)** with **Screw M5x12 (K - 4X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	4

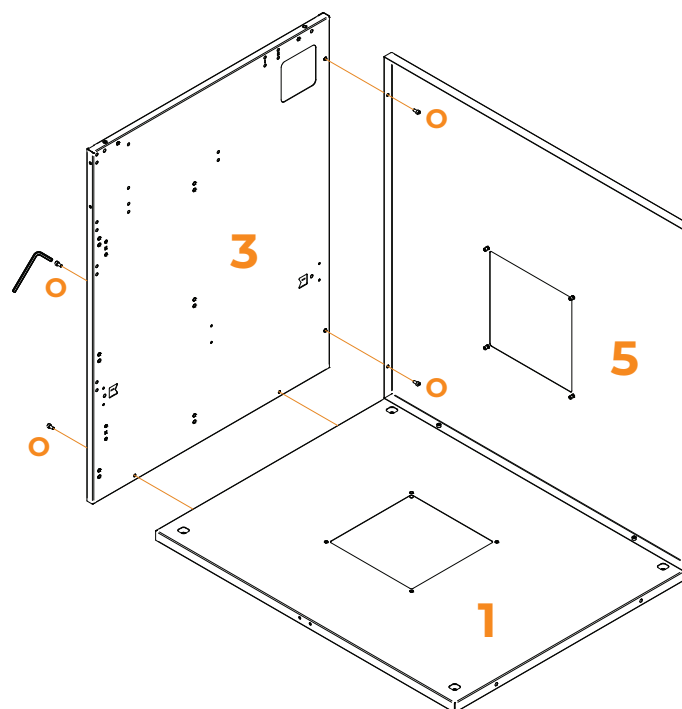

Step 4 | Attach **R-Side Panel (2)** to **Base (1)** and **Rear (5)** with **Screw M5x12 (O - 4X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	4

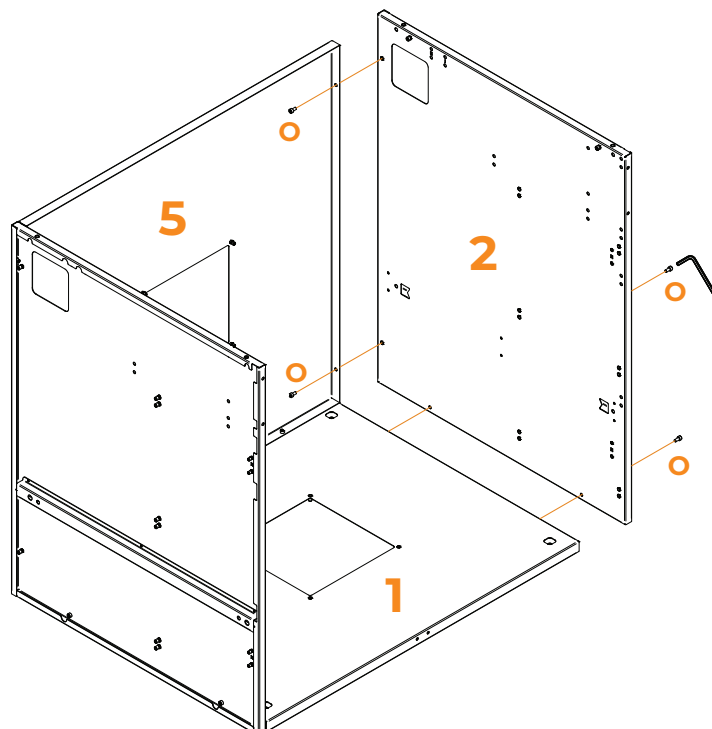


INSTRUCTIONS


Step 5 | Attach **Rib (6)** to **R-Side Panel (2)** and **L-Side Panel (3)** with **Screw M5x12 (K - 4X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	12

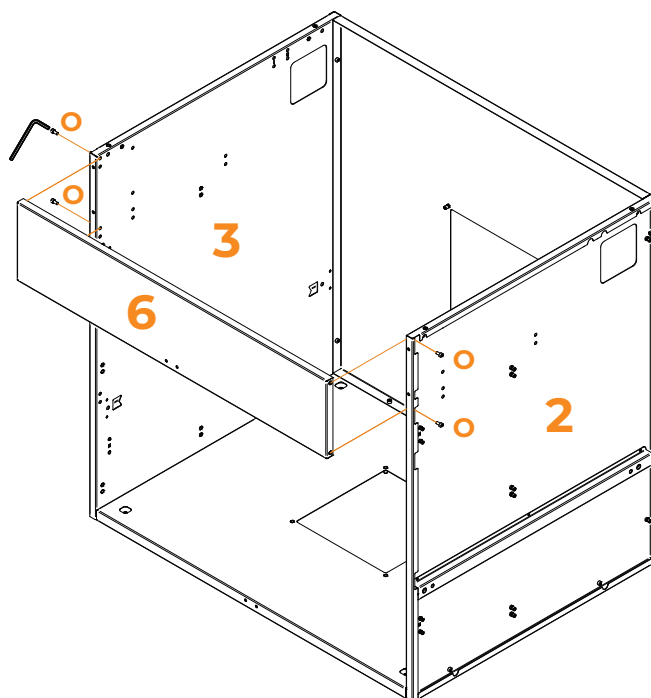

Step 6 | Attach **Countertop Support (4)** to **R-Side Panel (2)** and **L-Side Panel (3)** with **Screw M5x12 (K - 4X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	4

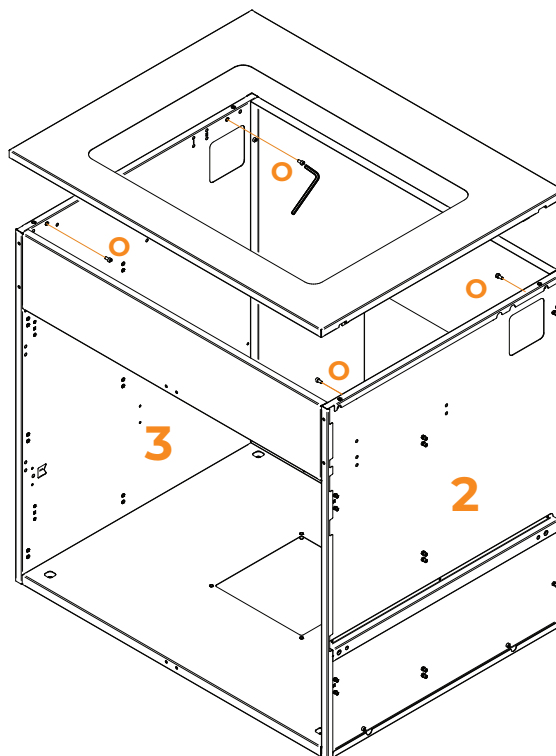


INSTRUCTIONS


Step 7A | Attach **Register Top (9)** to **Rear (5)** with **Screw M5x12 (O - 4X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	4

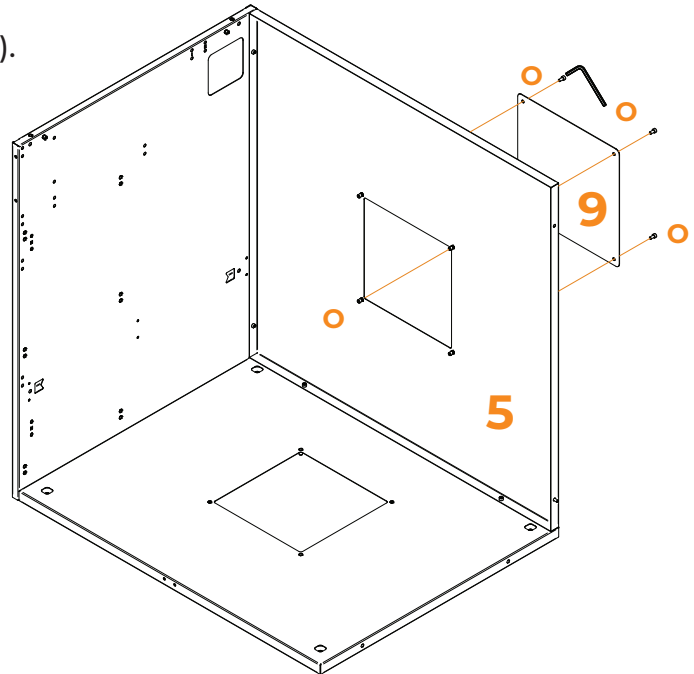

Step 7B | Attach **Register Top (9)** to **Base (1)** with **Screw M5x12 (O - 4X)**, secure with an allen wrench (or hex head).




#	COMPONENT	QTY
O	SCREW M5X12	4

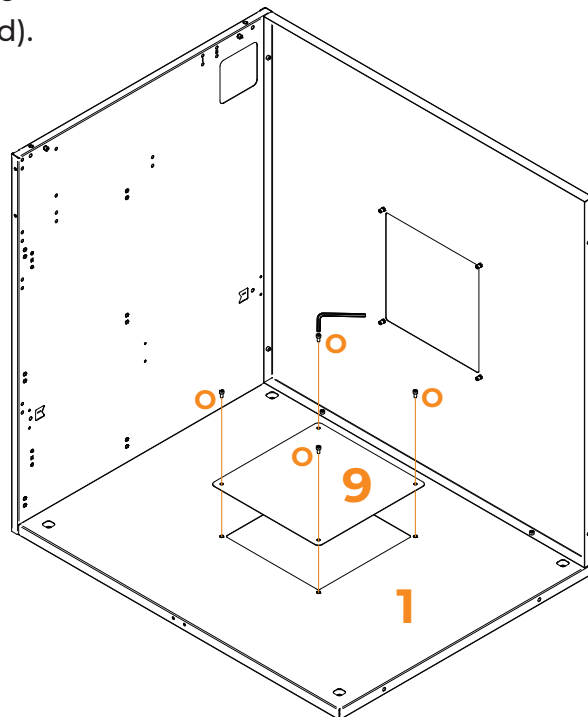

INSTRUCTIONS

FONTANA
FORNI


Step 8 | Attach **Sink (10)** to the underside of the Neolith stone with silicone adhesive suitable for ceramics (not included).

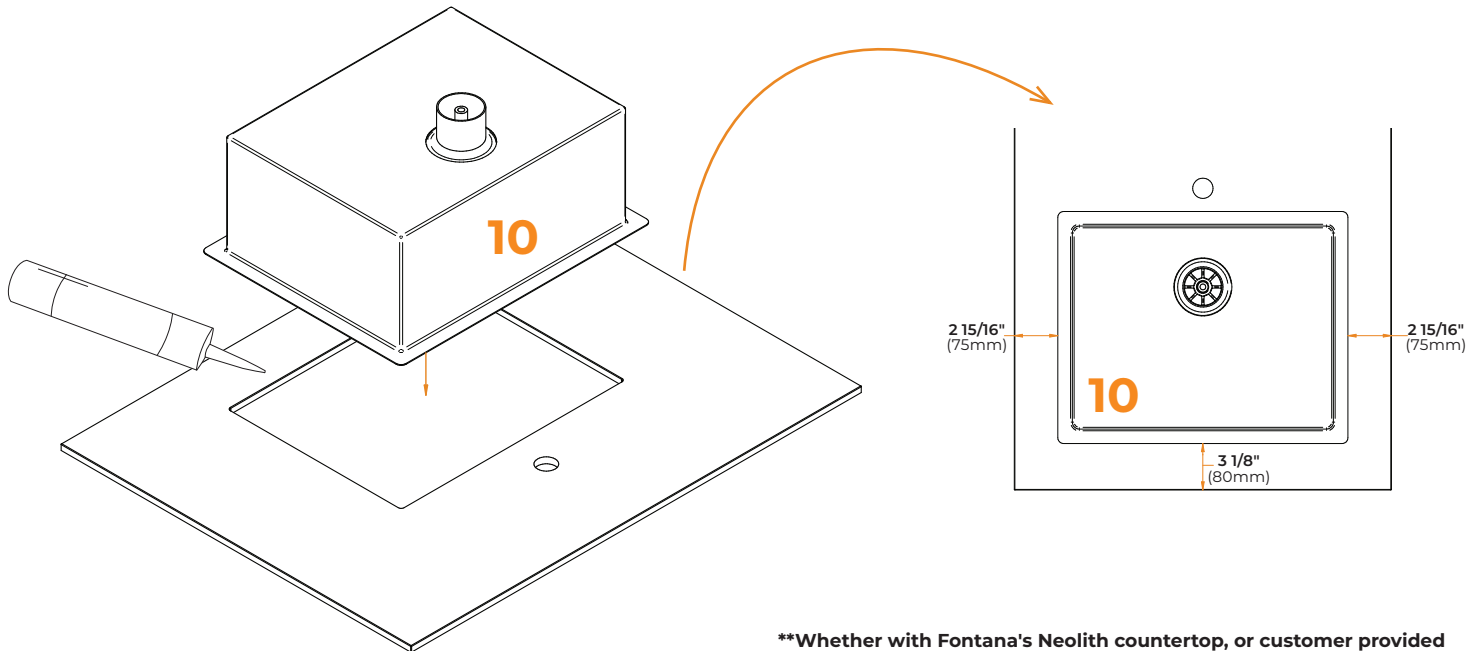


****Whether with Fontana's Neolith countertop, or customer provided countertops, the sink must be adhered to either from underneath.**

Step 9 | Attach **Door Hinges (J 3X)** to desired **Side Panel (2 or 3)** (can be mounted either side to accomodate desired swing direction) with **Screw M4x16 Countersunk (N - 12X)**, secure with a phillips head screwdriver.

Door can be mounted to swing open in either left or right directions. Choose the side that best fits your layout.

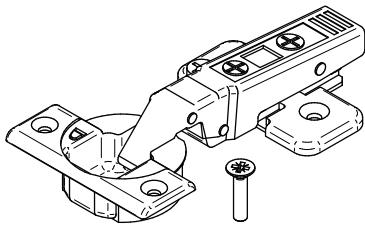


#	COMPONENT	QTY
J	HINGE	3
N	SCREW M4X16 COUNTERSUNK	12

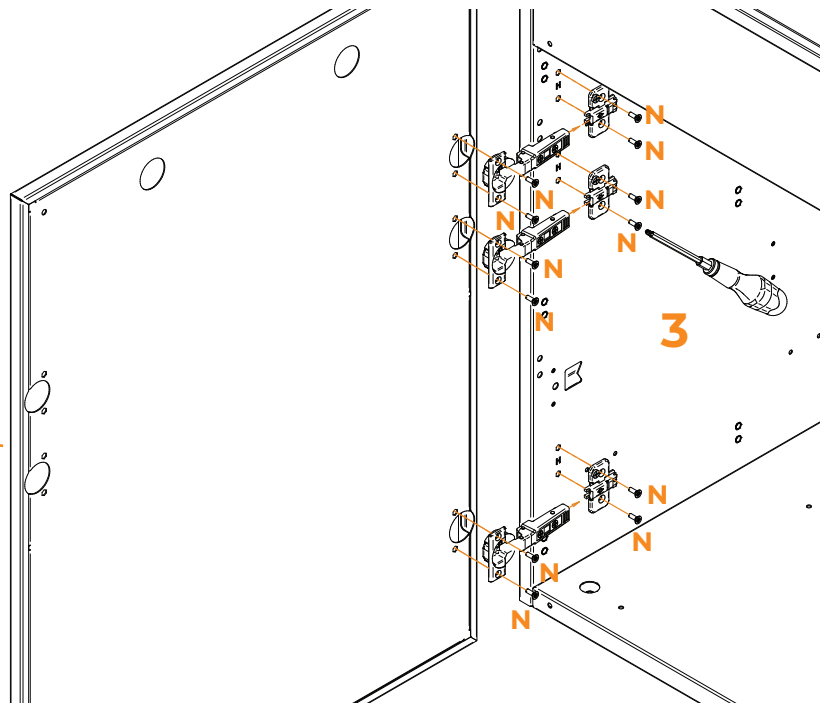

Neolith Stone Installation

1. Stick the stone to the countertop support plate using adequate adhesive to fix the stone in its place.
2. Remove any excess of adhesive using a damp cloth.


RECOMENDATION: When the outdoor kitchen is already mounted and positioned, FONTANA recommends to seal the seams between stones with outdoor suitable adhesive for best performance and results.

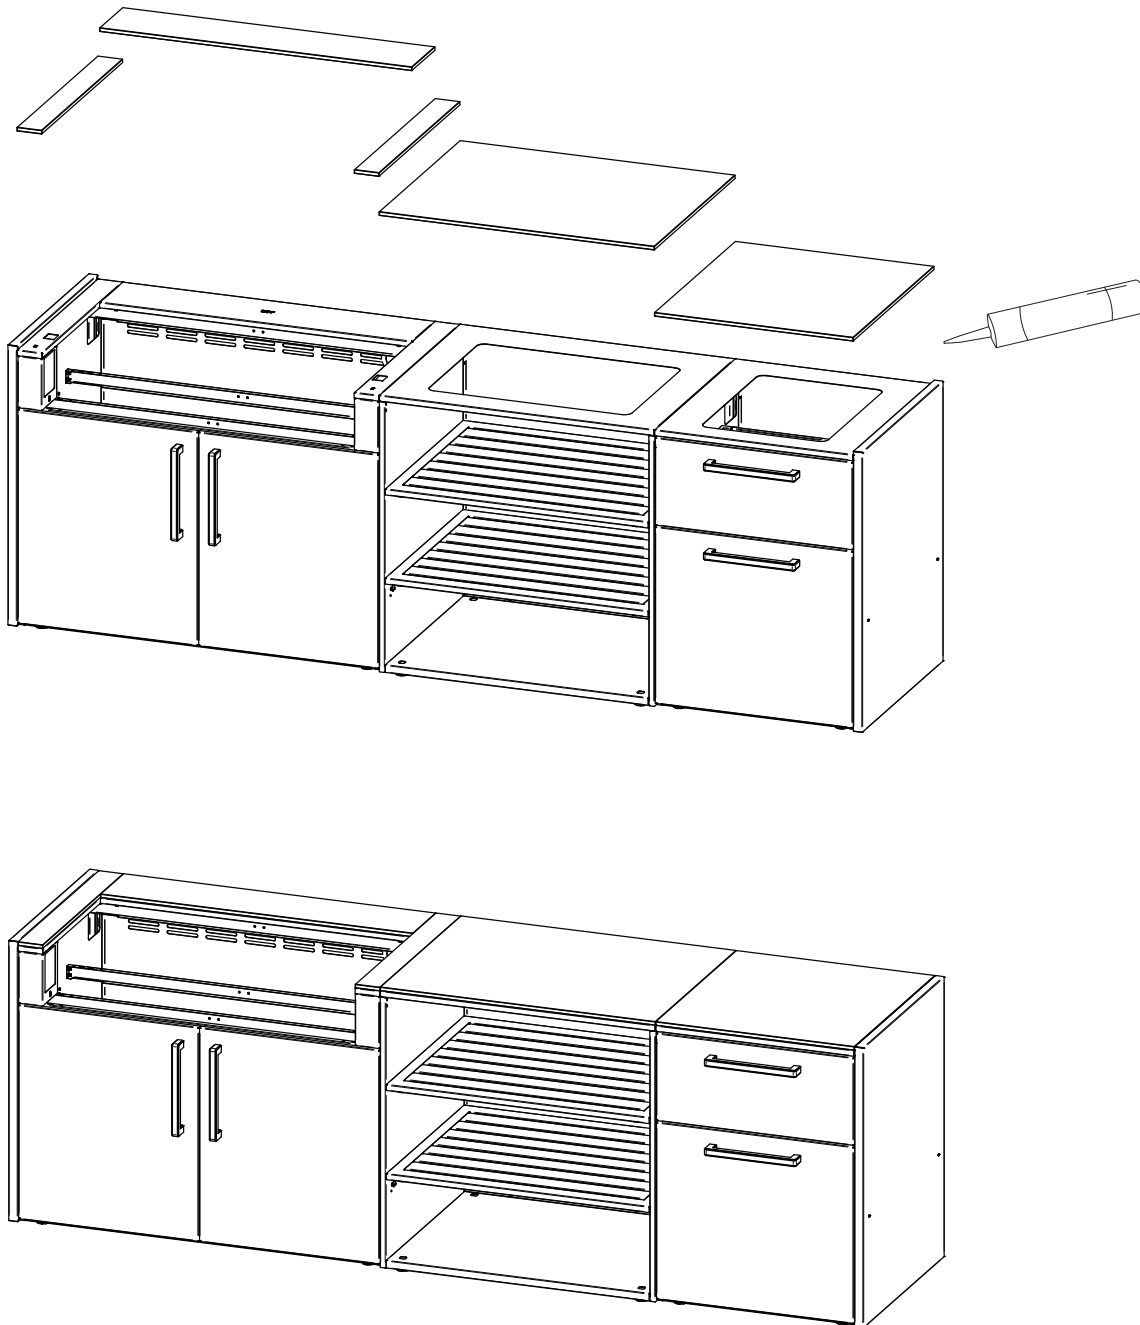

* Example image: MODULE LUMEN 6 / OPEN SHELF / STORAGE 65

Wall Assembly:


Use **M5X12 Screws (O - 4X)** to mount the corresponding Wall to the back of the ELYSIA module with an allen wrench (or hex head). Ensure the extra is positioned correctly.

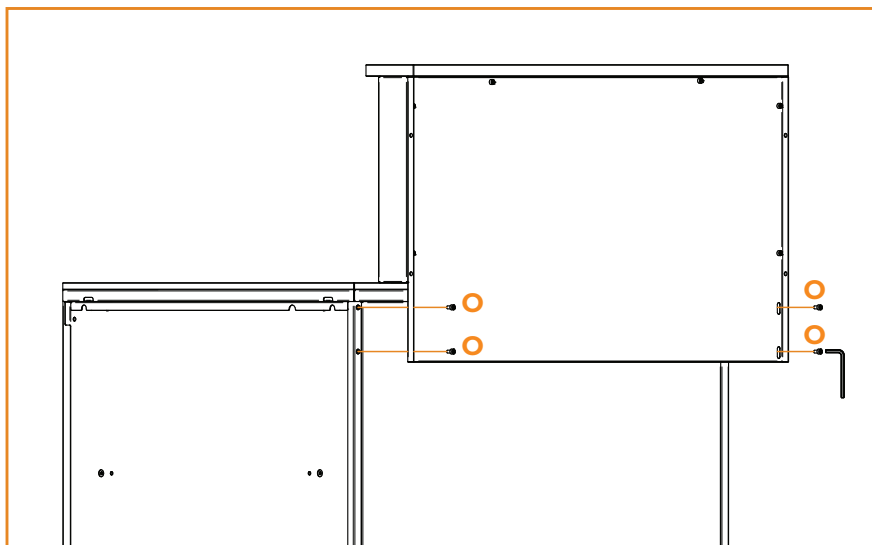

* Example image: WALL 90

Leg Adjustment Screw


There are four visible orifices on top of the bottom plate of every module. Inside you can see the leg regulation screw. Use an Allen wrench to set all the legs until the module is settled and has proper leveling. Must be done with the module positioned in its definitive location.

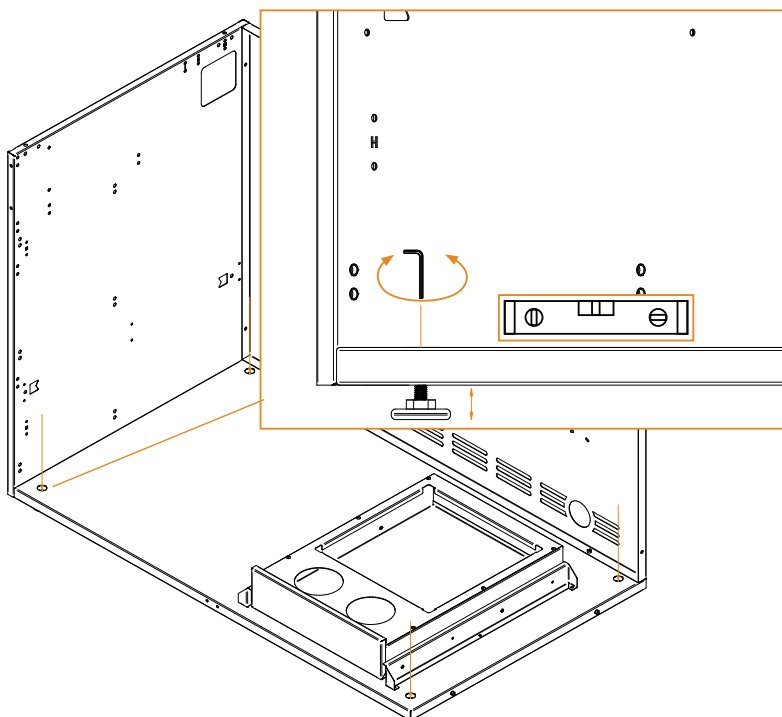

* Example image: MODULE LUMEN 6

Module to Module Assembly Step 01:



Use **M6X16 Button Head Screw (P - 4X)** to install spacer cylinders **M6x35 (Q - 4X)** in the places shown with an allen wrench (or hex head). It is necessary to remove the drawers. ELYSIA Outdoor Modular Kitchen supplies extra M6X16 screws to ensure the user always have enough screws to assembly ELYSIA Outdoor Modular Kitchen.

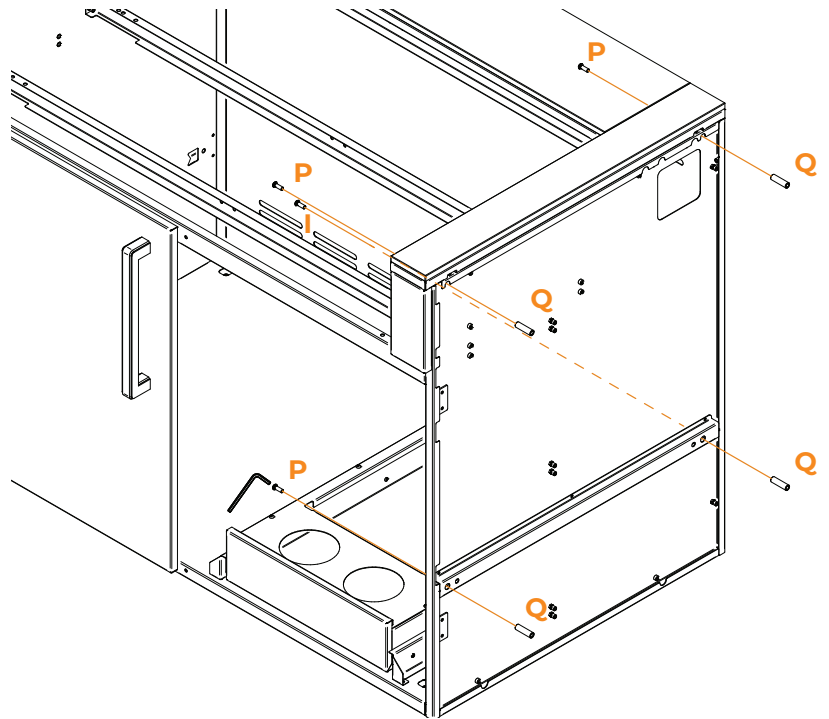

* Example image: MODULE LUMEN 6


Module to Module Assembly Step 02:

Use **M6X16 Button Head Screw (P - 4X)** to assembly one module to another, screwing the bolts to previous installed spacer cylinders (Q) in the first module (shown left in the image) from the inside of the second module (shown right in the image).

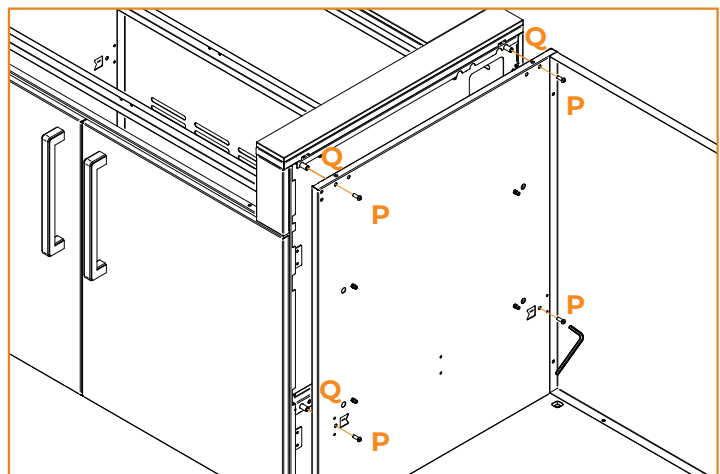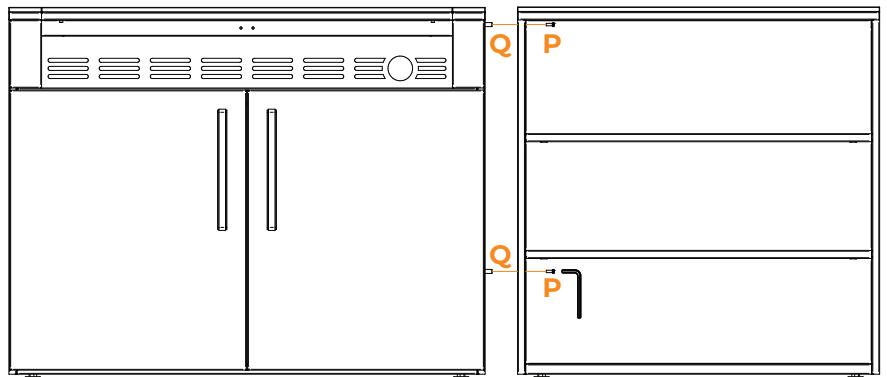


* Example image: MODULE LUMEN 6 / STORAGE 90


Module Countertop Adjustment

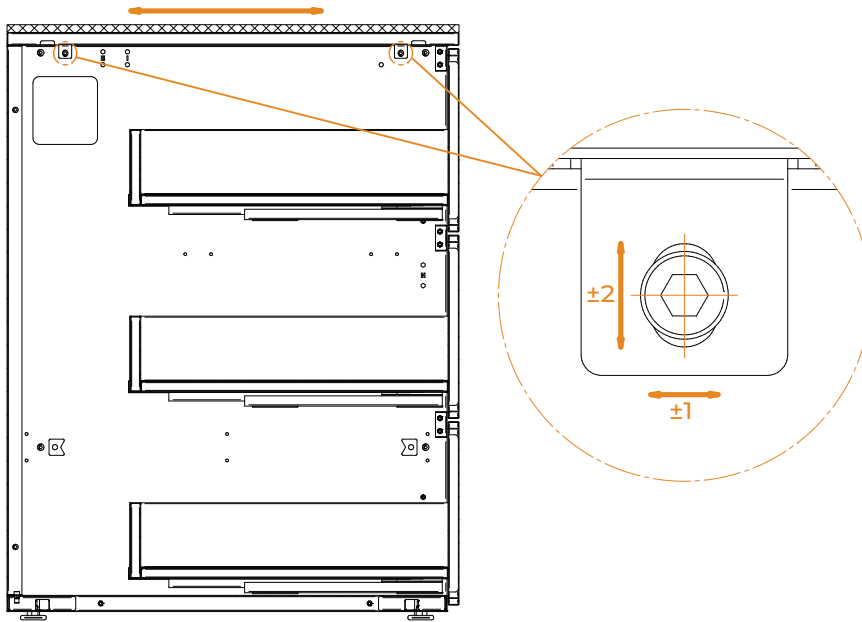

Adjust the countertops until they are level.

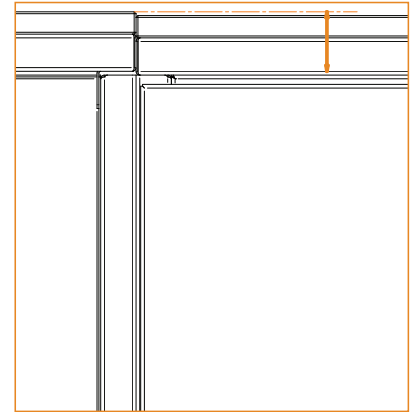


Tolerance Range for Wall Adjustment

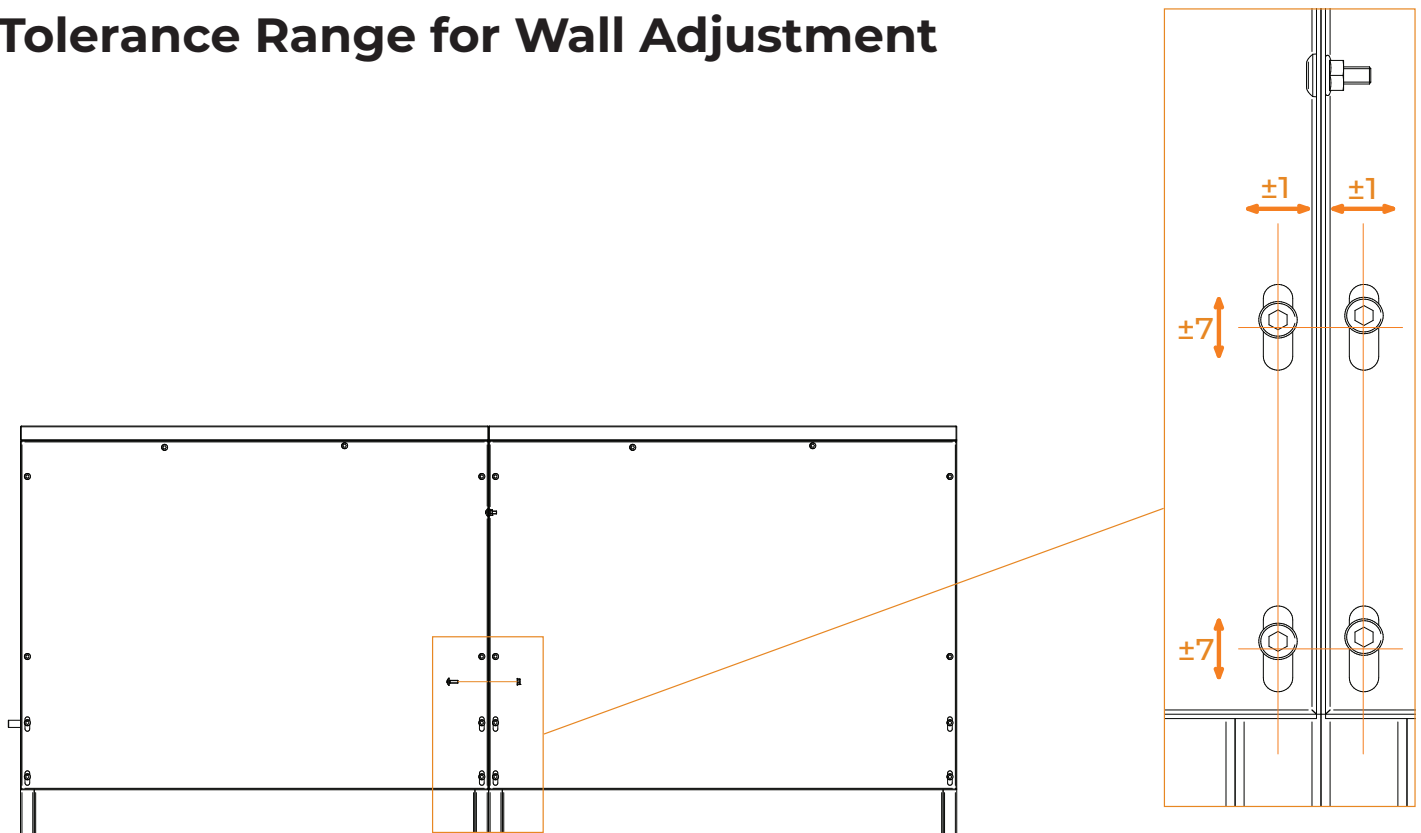

* Example image: WALL 65

End Panels / Kamado End Panels:


Place the **M6X15 hexagonal spacers (i)** along with their **washers** in the indicated locations, and secure them with the **M6 nuts (ii - 4 pcs on End Panels 1, 2 pcs on Kamado End Panels 2).**

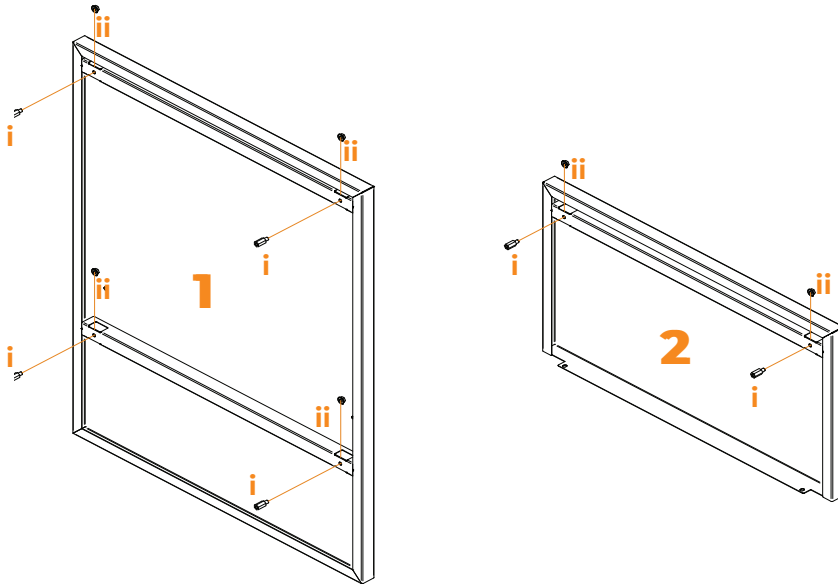

* Example image: END PANEL / KAMADO END PANEL

End Panel Mountage:

Use **M6X10 screws (iii - 4pcs)** to install the **End Panel** to the side of the module with an allen wrench (or hex head). It is necessary to remove drawers to screw inside screws if module has any.

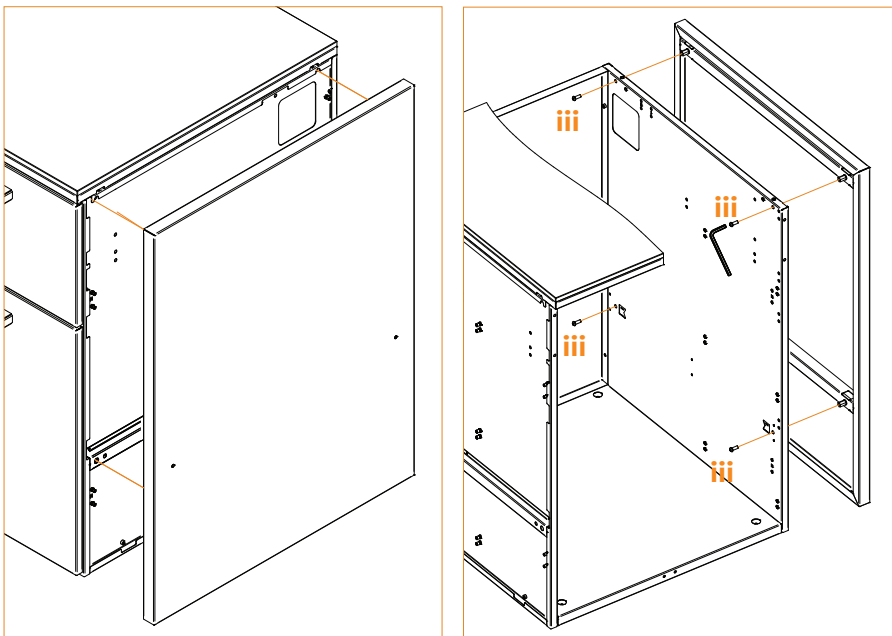

* Example image: STORAGE 65

Handles Assembly:

Use **M4x12 bolt (M - 2X per handle supplied)** to assemble the handles to module doors or drawers front plate.



Handles Available



Black Handle



Stainless Steel Handle

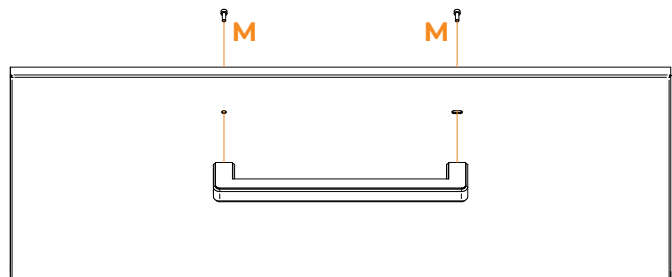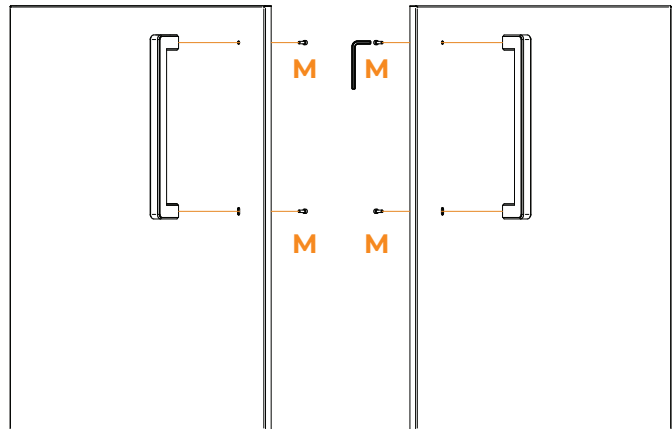


* Example image: MODULE LUME 6 / MODULE KAMADO

Faucet Installation:

Faucet is always received uninstalled and it is necessary to do the installation before mounting the module in its definitive location. In case a module exclusive water pipework is not going to be installed, Sink module includes an "T" attachment to connect it to an existing outdoor hose water outlet. Follow the steps in the image for a proper installation.


NOTE: Washers code: R (Round), B (Black), W (White), S (Steel).

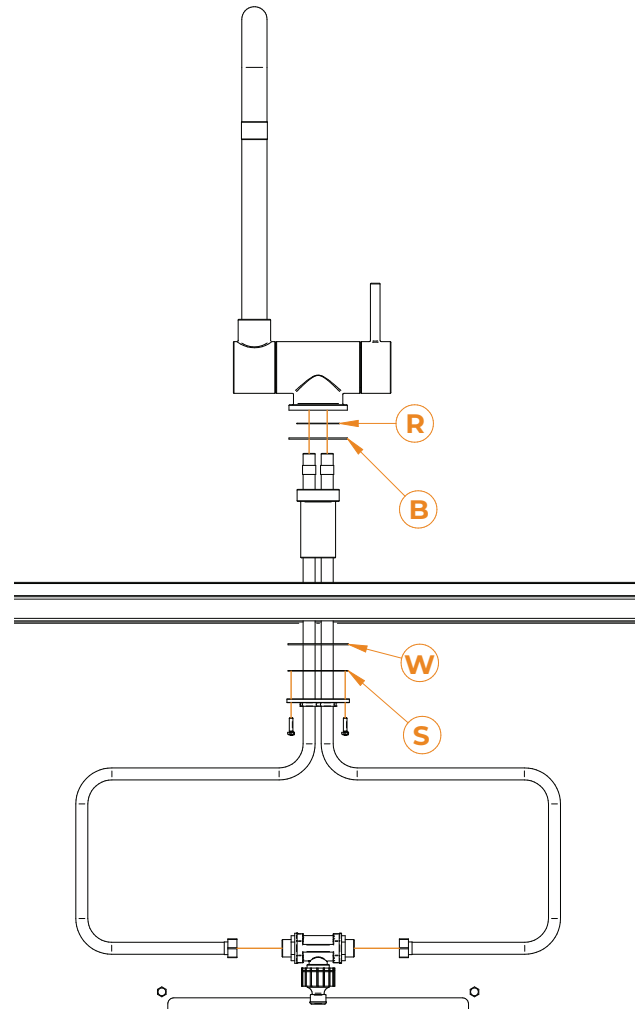

ADJUSTMENT

Door Hinge Adjustment:

The door hinges can be regulated by using a screwdriver. The screw located in the bearing of the hinge can be used to adjust height, the screw located near the cup is used for side adjustment and the one farthest from the cup is used to adjust depth.

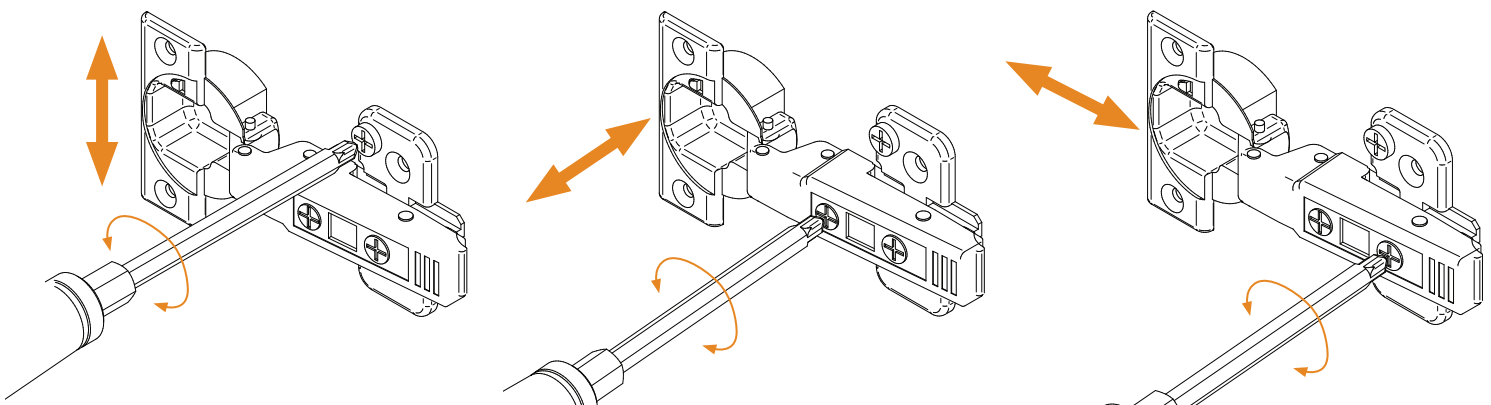

To prolong the life of your ELYSIA Outdoor Modular Kitchen please follow the recommended maintenance instructions:

Powder Coated Surfaces

Scheduled cleaning will benefit and extend the long lasting aesthetics of the finish. This procedure is an integral part of the warranty given for surface finish and color retention and it will minimize the weathering effect of dirt and other airborne pollutants which tend to accumulate on the surface of the coating, dulling its appearance. We suggest the following guidelines:

- Cleaning of the coated surfaces with warm water and mild detergent or non abrasive pH-banaced cleaner solution, and the use of non abrasive brush or sponge.
- The cleaning solution should not be allowed to be in contact with the powder coated surface for more than 30 minutes.
- DO NOT use any chlorides or quaternary salts on the module. DO NOT use any hydrochloric acid (muriatic acid) on modules. Refrain from using harsh chemicals, solvents, or abrasive cleaners, as they can damage the powder coating. Opt for cleaners specifically designed for powder-coated surfaces.
- After cleaning, the surface shall be completely rinsed-off with clean fresh water to remove any cleaning residue. This helps prevent the accumulation of cleaning agents that might affect the powder coating over time.
- A record of all cleaning schedules, frequencies and products should be kept and documented.
- While cleaning is crucial, avoid using high-pressure washers, as the force can damage the powder coating. Stick to gentle cleaning methods to ensure the longevity of the finish.

Hard water deposits can affect the appearance of the powder coating over time. When the outdoor kitchen is not in use, consider using protective covers to shield it from the elements. This helps prevent exposure to harsh sunlight, rain, and other environmental factors that could impact the powder coating. If your area has hard water, consider wiping down the surfaces after rain or watering to prevent water spots.

Neolith Stone Maintenance

Please take extra care when cleaning your top Neolith stone. Although solvents, such as acetone, are often recommended by counter manufacturers and fabricators, these substances your ELYSIA Outdoor Modular Kitchen powder coated finish.

To clean your countertop stone, use soapy water and a damp cloth. If there are stains encrusted/dry, you have to soak the stain with a standard detergent and wait to rub with a damp cloth.

Special consideration with ceramic knives which may scratch Neolith's surface in every finish.

ELYSIA

OUTDOOR MODULAR KITCHEN BY **FONTANA**
F O R N I