



Stealthbox®

INSTALLATION GUIDE
for the

SBA-J-JK-FHB
SKU# 99840
2007-2017 Jeep Wrangler (JK)

Fuse Holder Bracket

SBA-J-JK-FHB INSTR_SKU# 011552

! IMPORTANT

If you choose to perform the installation yourself, it is absolutely vital that the Stealthbox® be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems:

- 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s).
- 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

INSTALLATION
DIFFICULTY:

1 OUT OF **5**

ESTIMATED TIME:
1 HOUR



*Thank you for choosing a JL Audio Stealthbox® for your automotive sound system.
With proper installation, your new vehicle-specific enclosed subwoofer system
will deliver years of listening pleasure.*

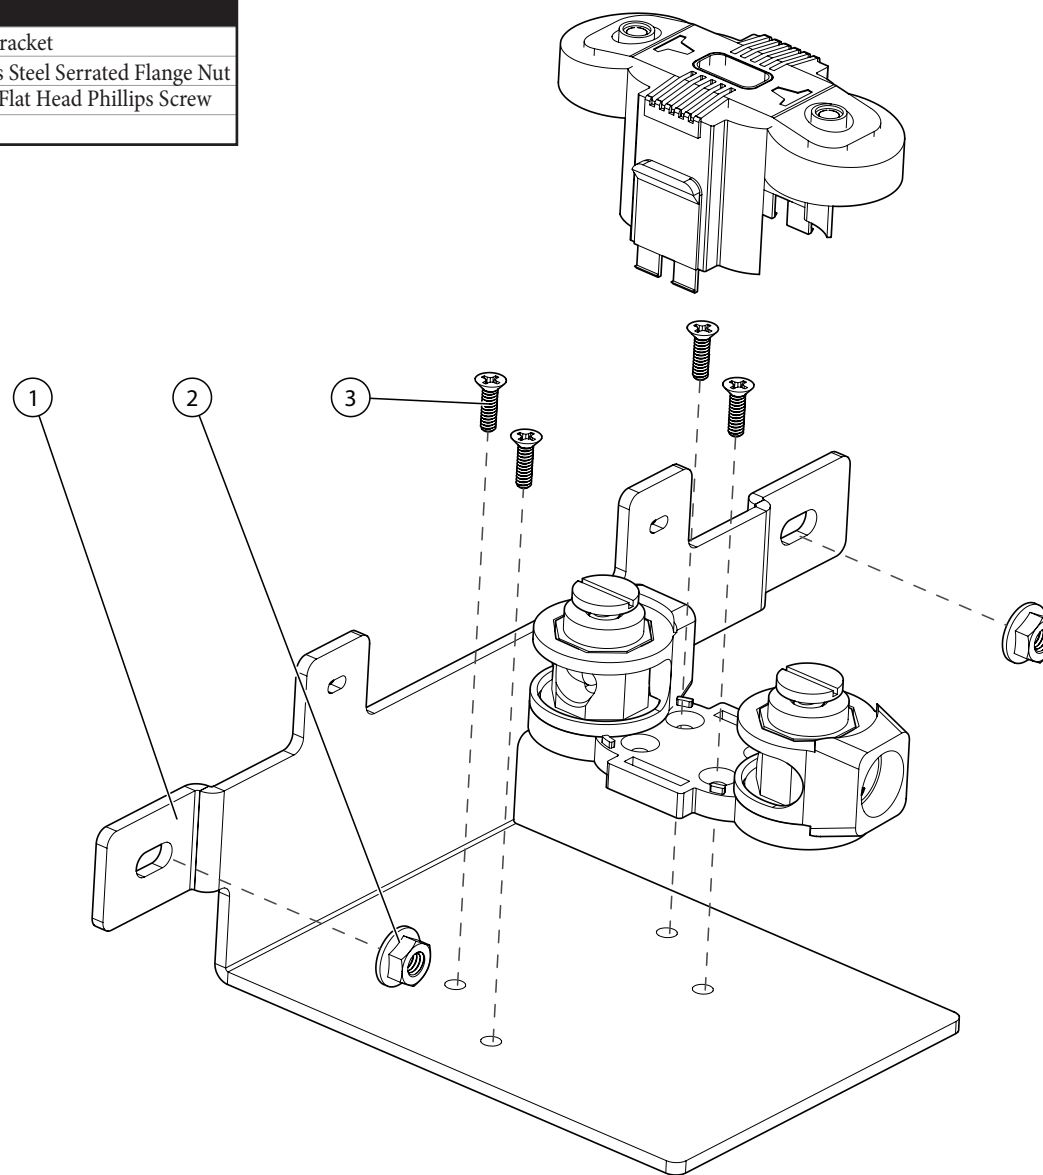
*We strongly recommend that you have your new Stealthbox® installed by your
authorized JL Audio dealer. The installation professionals employed by your
dealer have the necessary tools and experience to disassemble and reassemble
your vehicle properly. If you prefer to perform your own installation, please read
this installation guide completely before beginning the process.*

Continued on Next Page

INCLUDED HARDWARE

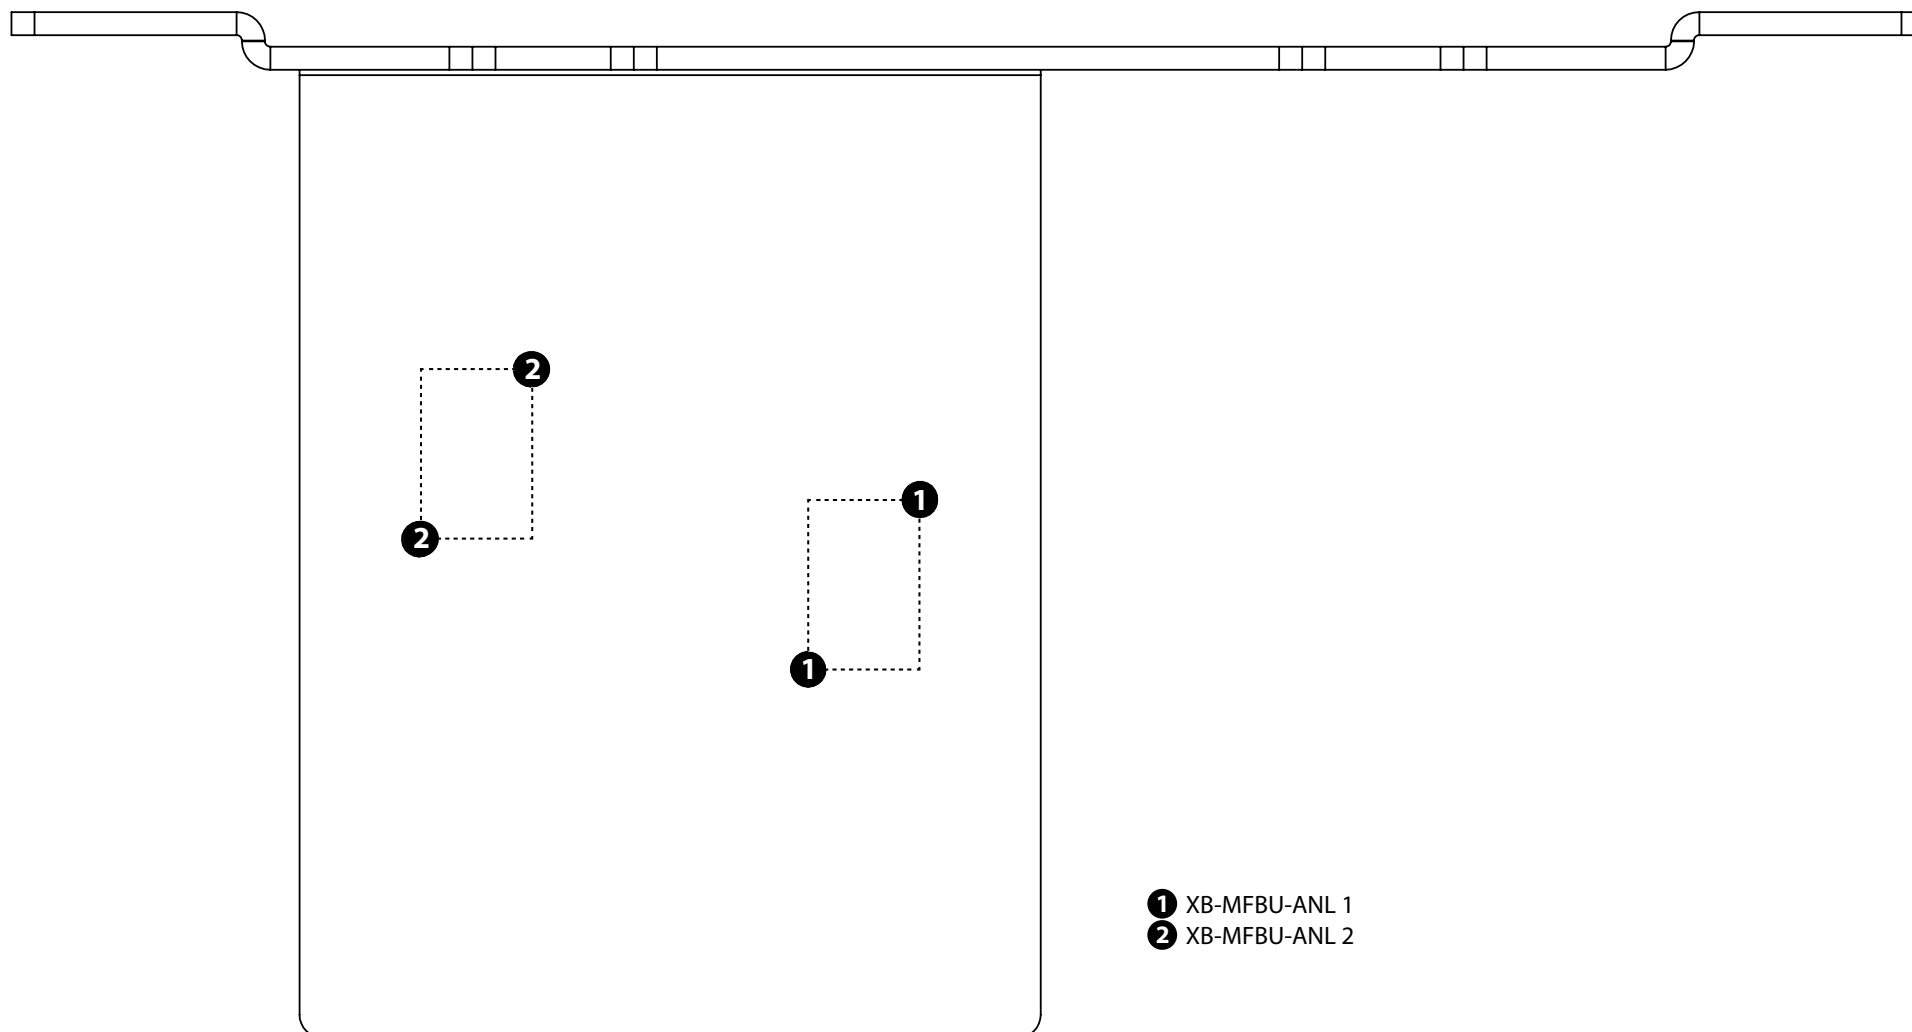
BOM ID	Qty	SKU	Description
1	1	153975	Fuse Holder Bracket
2	2	150074	6mm Stainless Steel Serrated Flange Nut
3	4	154006	#6 - 32 x 1/2" Flat Head Phillips Screw
-	2	154100	8" Cable Tie *

* Not Shown



FUSE BLOCK MOUNTING TEMPLATE

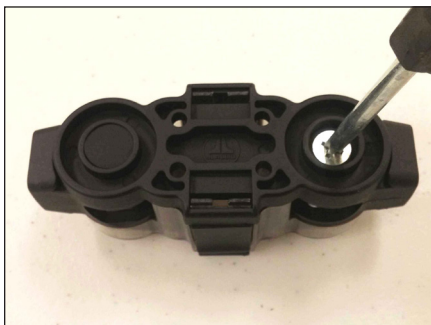
The SBA-J-JK-FHB Fuse Holder Bracket is designed to accommodate two JL Audio XB-MFBU-ANL Master ANL Fuse Blocks (sold separately). Use the illustration and table below to determine the mounting hole use:



**STEP 1**

NOTE: The XB-MFBU-ANL Master ANL Fuse Block has adjustments for different wire-entry angles. The following steps show one orientation example using a single fuse block, but the installation process is the same for alternate orientations and/or two fuse blocks.

Remove one of the screw covers from the underside of the XB-MFBU-ANL Master ANL Fuse Block.

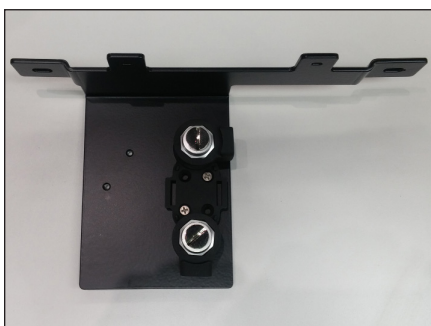
**STEP 2**

Using a Phillips head screwdriver, remove the exposed screw.

**STEP 3**

Flip the Master ANL Fuse Block over, and remove the cover. Lift off the wire receptacle, rotate it 90 degrees, and reinstall, as shown.

Reinstall the screw and screw cover.

**STEP 4**

Align the mounting holes in the Master ANL Fuse Block with the holes in the Fuse Holder Bracket, as shown, and secure it using two #6 - 32 x 1/2" Flat Head Phillips Screws.

Repeat these steps for a second Master ANL Fuse Block, if necessary.

**STEP 5**

Under the hood on the passenger side of the vehicle, remove the indicated factory cable attachments from the studs behind the cable bundle.

**STEP 6**

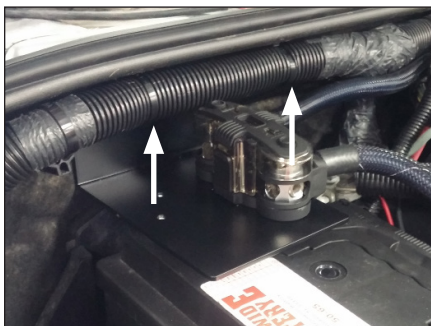
Pull the cable bundle away from the firewall to gain access to the studs.

**STEP 7**

Position the Fuse Holder Bracket below the cable bundle. Slide a supplied 8" Cable Tie under the cable bundle and through the upper slots in the Fuse Holder Bracket, as shown.

**STEP 8**

Align the outer slots in the Fuse Holder Bracket with the factory studs, and secure the bracket using a pair of 6 mm Stainless Steel Serrated Flange Nuts.

**STEP 9**

Secure the cable bundle to the Fuse Holder Bracket by tightening the two 8" Cable Ties.

Connect power cable to the Master ANL Fuse Block, and temporarily reinstall the cover until time to install the fuse.

Route the cable as necessary.

**CONGRATULATIONS!**

You have completed the installation for this model! Enjoy your new Stealthbox® Accessory!

JL AUDIO® | How we play.®    

(954) 443-1100

www.jlaudio.com

All specifications are subject to change without notice. "JL Audio" and "How we play" are registered trademarks of JL Audio, Inc. "Ahead of the Curve" and its respective logo are trademarks of JL Audio, Inc.

Printed in USA • ©2020 JL Audio, Inc. • For more detailed information please visit us online at www.jlaudio.com.

JLA-SKU# 011552 • ver. 02.04.2020 • 10369 NORTH COMMERCE PARKWAY • MIRAMAR, FLORIDA • 33025 • USA



011552