





KWIK HUS-EZ SS316 1/2"




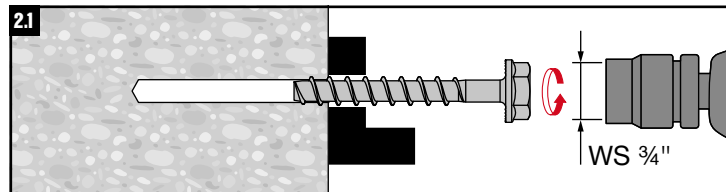


2247551-2026.03.26

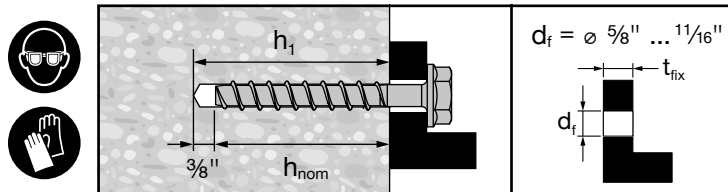

KH-EZ SS316 1/2"	h_1^*	$h_{nom1} = 2\frac{1}{4}"$ $t_{fix1 \max}$	$h_{nom2} = 3"$ $t_{fix2 \max}$	$h_{nom3} = 4\frac{1}{2}"$ $t_{fix3 \max}$
$\frac{1}{2}" \times 3"$	$3\frac{3}{8}" - t_{fix}$	$\frac{3}{4}"$	-	-
$\frac{1}{2}" \times 4"$	$4\frac{3}{8}" - t_{fix}$	$1\frac{3}{4}"$	1"	-
$\frac{1}{2}" \times 5"$	$5\frac{3}{8}" - t_{fix}$	$2\frac{3}{4}"$	2"	$\frac{1}{2}"$

		$h_{nom} \leq 3"$	$h_{nom} > 3"$	
	SID 4-22	✓	✓	✗
	SID 6-22	✓	✓	✗
	SIW 4AT-22	✓	✓	✓
	SIW 6AT-22	✗	✓	✓
	SIW 6AT-22 + SI-AT-22 (AT System)	✓	✓	✗

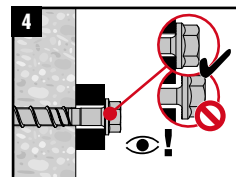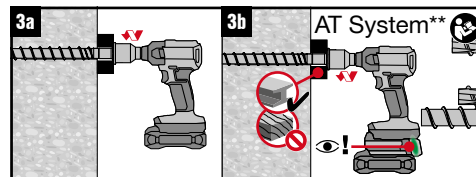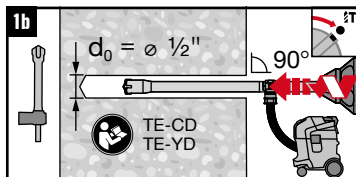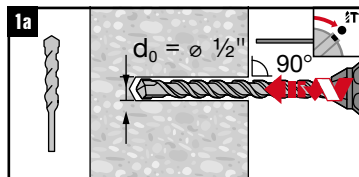

*For non-hole cleaning installation (step 1), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.

**The AT System is not applicable for grout-filled CMU or wood fastening applications. Additional information on hilti.com.