





KWIK HUS-EZ CRC $\frac{3}{8}$ "


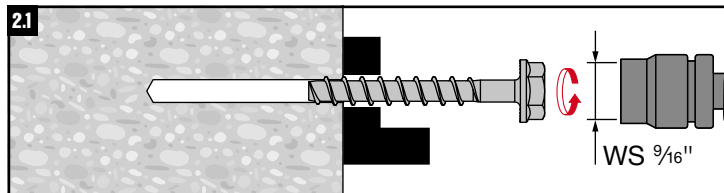


2224017-2026.04.10

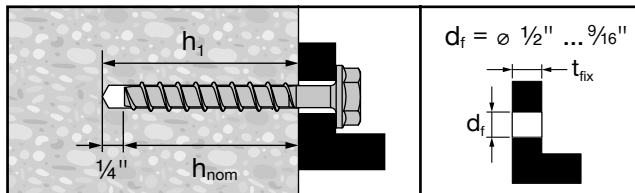

KH-EZ CRC $\frac{3}{8}"$	h_1^*	$h_{nom1} = 1\frac{5}{8}"$ $t_{fix1} \text{ max}$	$h_{nom2} = 2\frac{1}{2}"$ $t_{fix2} \text{ max}$	$h_{nom3} = 3\frac{1}{4}"$ $t_{fix3} \text{ max}$	$h_{nom4} = 4\frac{1}{2}"$ $t_{fix4} \text{ max}$
$\frac{3}{8}" \times 3"$	$3\frac{1}{4}" - t_{fix}$	$1\frac{3}{8}"$	$\frac{1}{2}"$	–	–
$\frac{3}{8}" \times 3\frac{1}{2}"$	$3\frac{3}{4}" - t_{fix}$	$1\frac{7}{8}"$	$1"$	$\frac{1}{4}"$	–
$\frac{3}{8}" \times 4"$	$4\frac{1}{4}" - t_{fix}$	$2\frac{3}{8}"$	$1\frac{1}{2}"$	$\frac{3}{4}"$	–
$\frac{3}{8}" \times 5"$	$5\frac{1}{4}" - t_{fix}$	$3\frac{3}{8}"$	$2\frac{1}{2}"$	$1\frac{3}{4}"$	$\frac{1}{2}"$

2.2			
	SID 6-22		
	SIW 4AT-22		
	SID 4-A22/A18		
	SIW 6AT-A22/A18		
	$T_{inst \text{ max}}$	40 ft-lb	10 ft-lb
	SIW 6AT-22 + SI-AT-22 (AT System)		

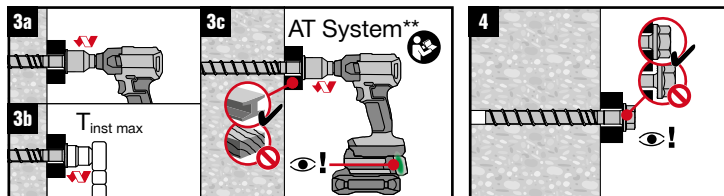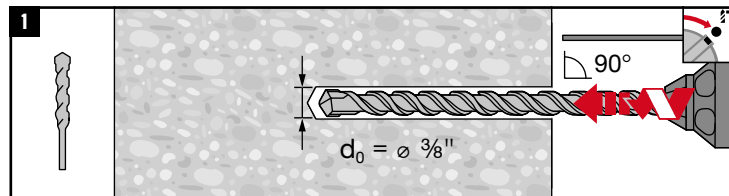

*For non-hole cleaning installation (step 1), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.

**The AT System is not applicable for grout-filled CMU or wood fastening applications. Additional information on [hilti.com](https://www.hilti.com).