


REP

ASSEMBLY INSTRUCTIONS

APOLLO MINI

HR-5050

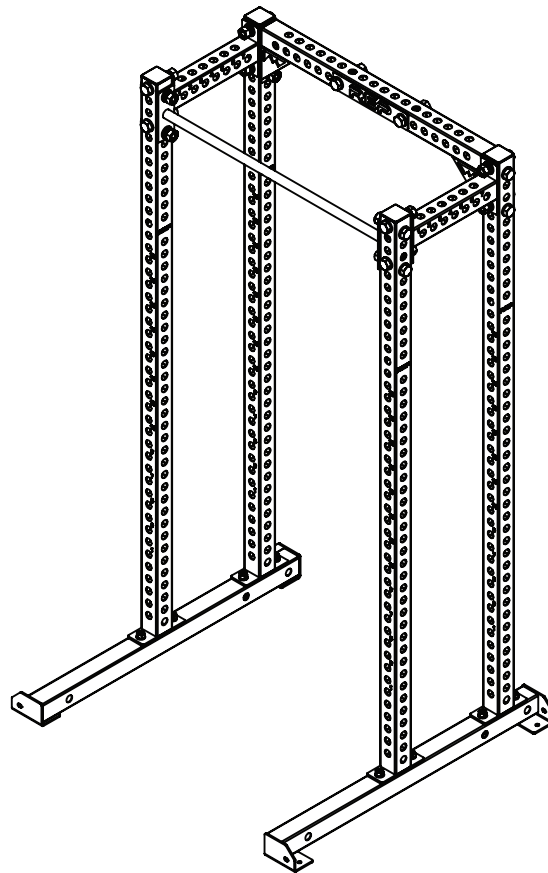


RECOMMENDED:
(NOT INCLUDED)

1/2" DRIVE RATCHET



36MM & 24MM SOCKET



LARGE ADJUSTABLE WRENCH




NOTE: DO NOT FULLY
TIGHTEN HARDWARE
UNTIL STEP 5

REP RECOMMENDS THAT ALL RACKS BE
BOLTED TO THE GROUND
CONCRETE ANCHORS INCLUDED




STILL NEED HELP WITH ASSEMBLY?
VISIT OUR ASSEMBLY LIBRARY HERE:
HELP.REPFITNESS.COM

PARTS LIST



10-0030
STEPS 1,2,3,4 X16



10-0183
STEPS 1 & 2 X8



10-0023
STEPS 1 & 2 X8



10-0026
STEPS 1,2,3,4 X32



10-0310
STEPS 1,2,3,4 X16




10-0143
STEP 5 X4




10-0024
STEPS 1 & 2 X8



10-0315
STEPS 1,2,3,4 X16




15-1046
STEPS 3 X1

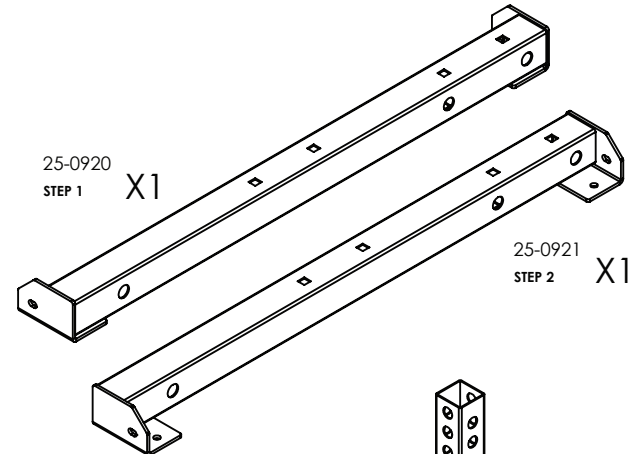


25-0920
STEP 1 X1

25-0921
STEP 2 X1

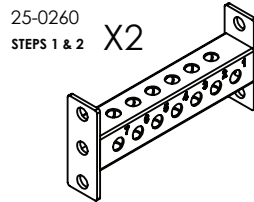


25-0260
STEPS 1 & 2 X2

LOGO PLATE CROSSMEMBER

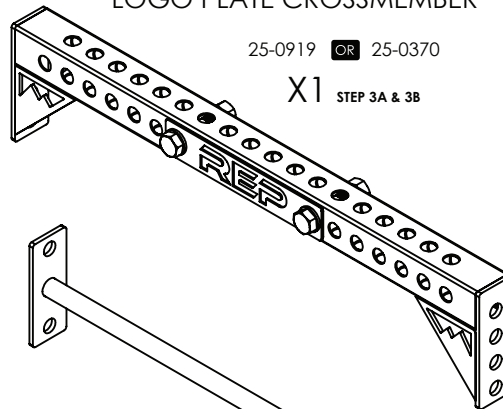

25-0919 OR 25-0370
X1 STEP 3A & 3B

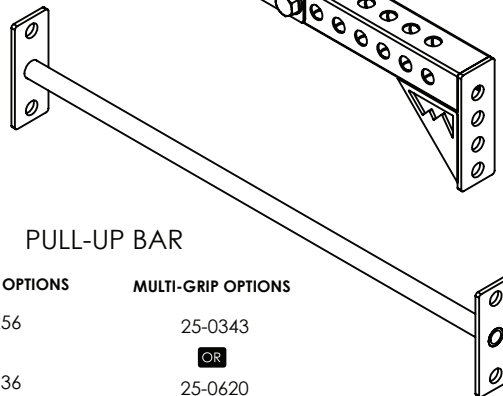

PULL-UP BAR

STANDARD OPTIONS

25-0256

OR

25-0936

OR

25-0936

X1 STEP 4A


MULTI-GRIP OPTIONS

25-0343

OR

25-0620

X1 STEP 4B & 4C



UPRIGHTS

25-0802

OR

25-0334

OR

25-0806

X4 STEPS 1 & 2






If you are missing
any parts, or
otherwise have
any warranty issues,
please file a
warranty claim
on our website:





STEP 1


RIGHT SIDE

 10-0315 X4	 10-0024 X4	 10-0310 X4	 10-0030 X4	 10-0183 X4
 10-0026 X8	 10-0023 X4			

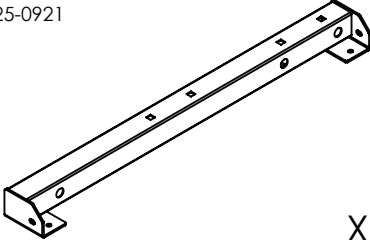
25-0921
X1





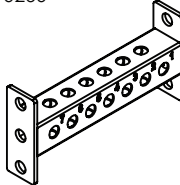

25-0260
X1


25-0802
OR
25-0344
OR
25-0806 X2

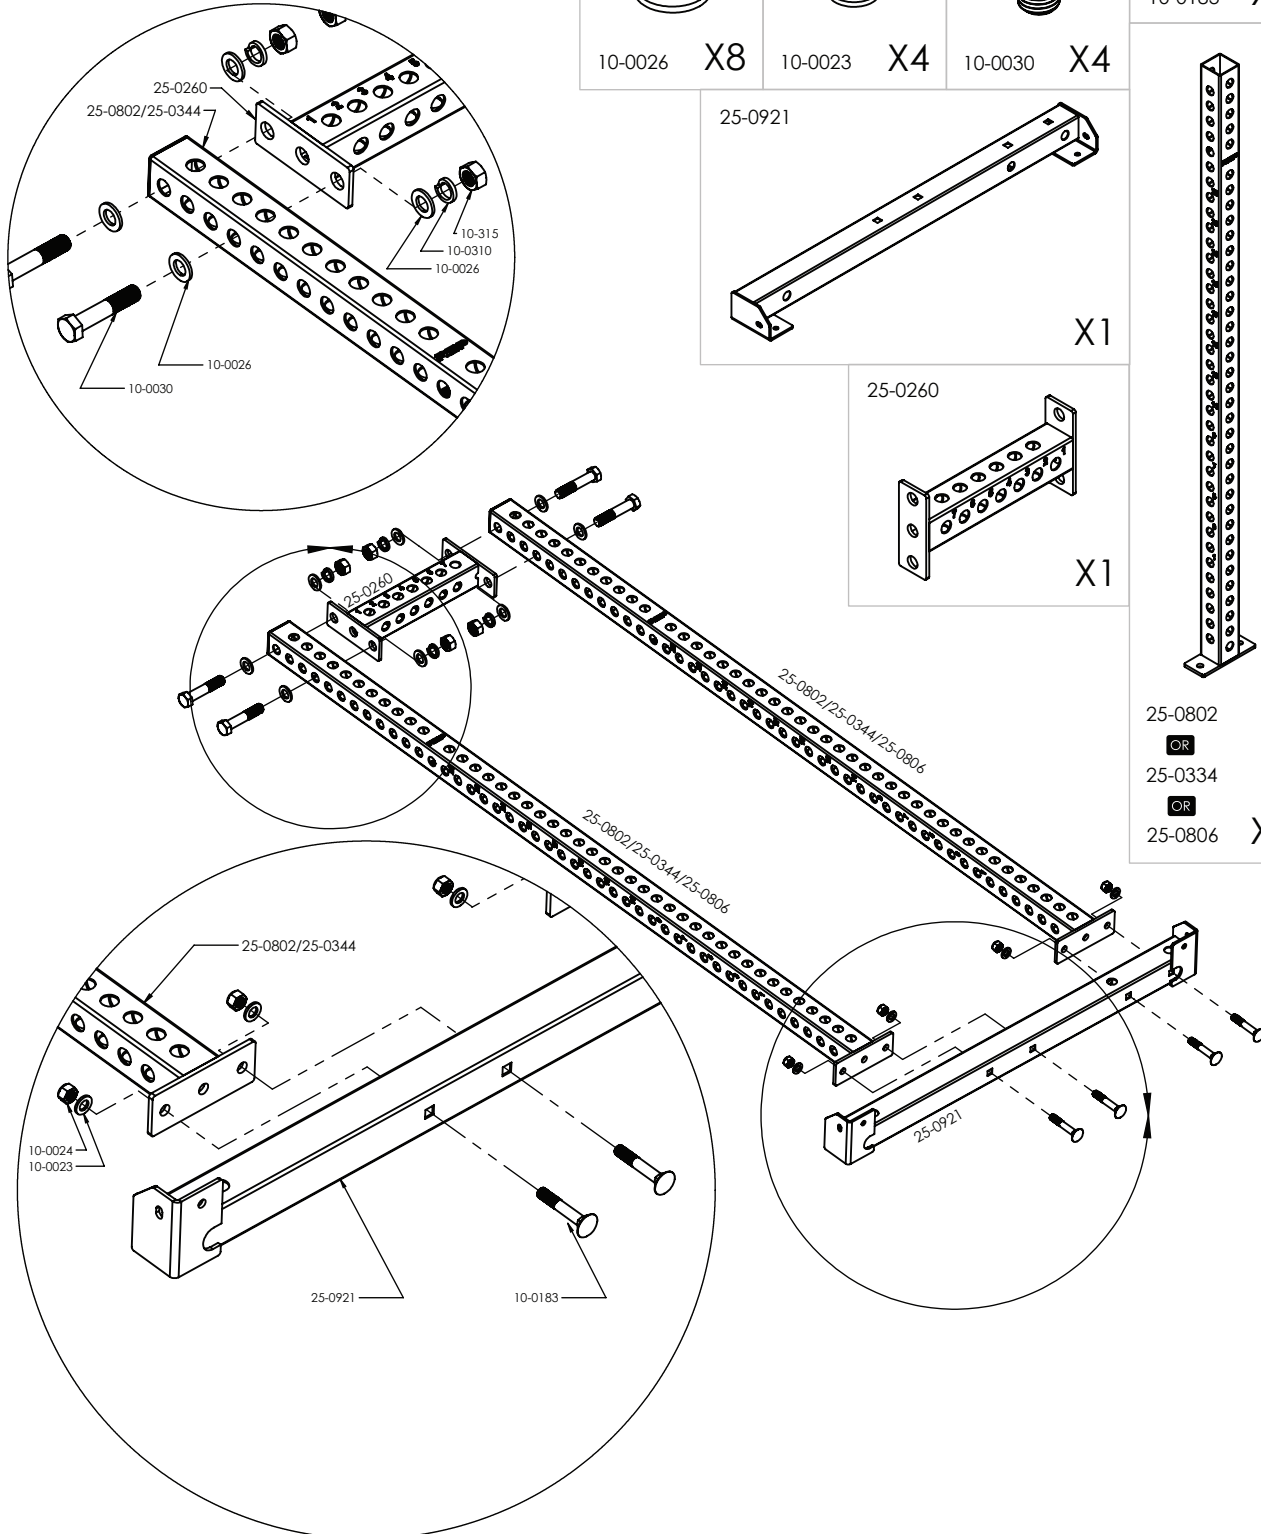


STEP 2

LEFT SIDE

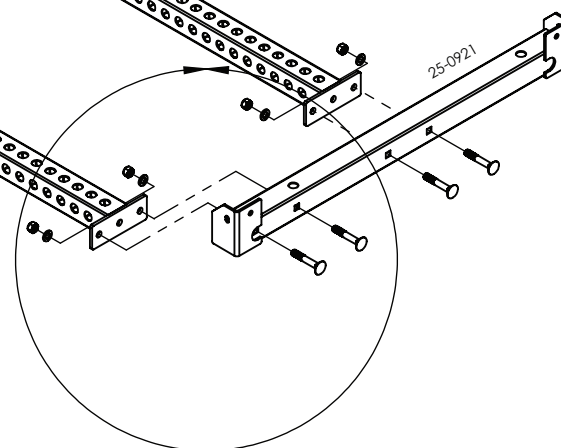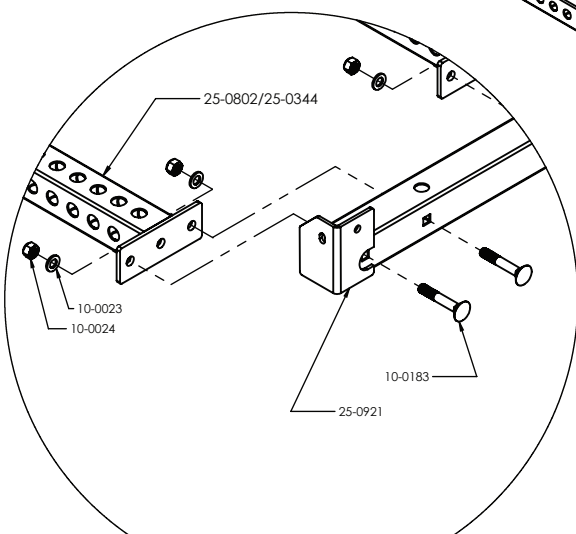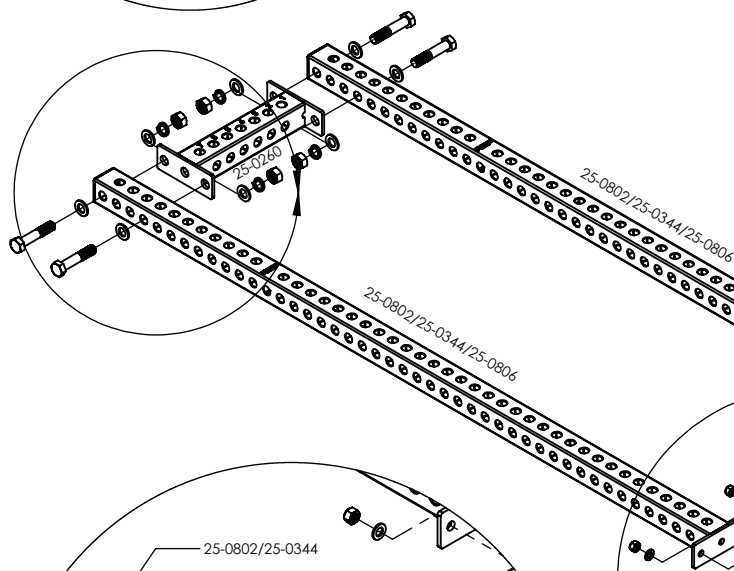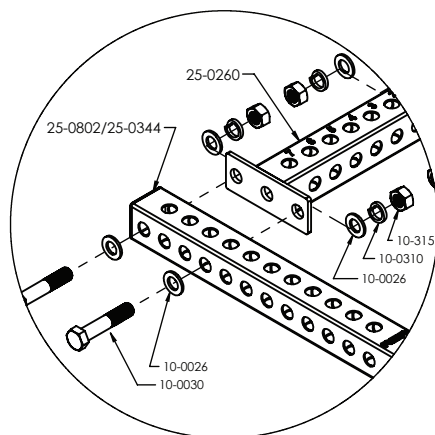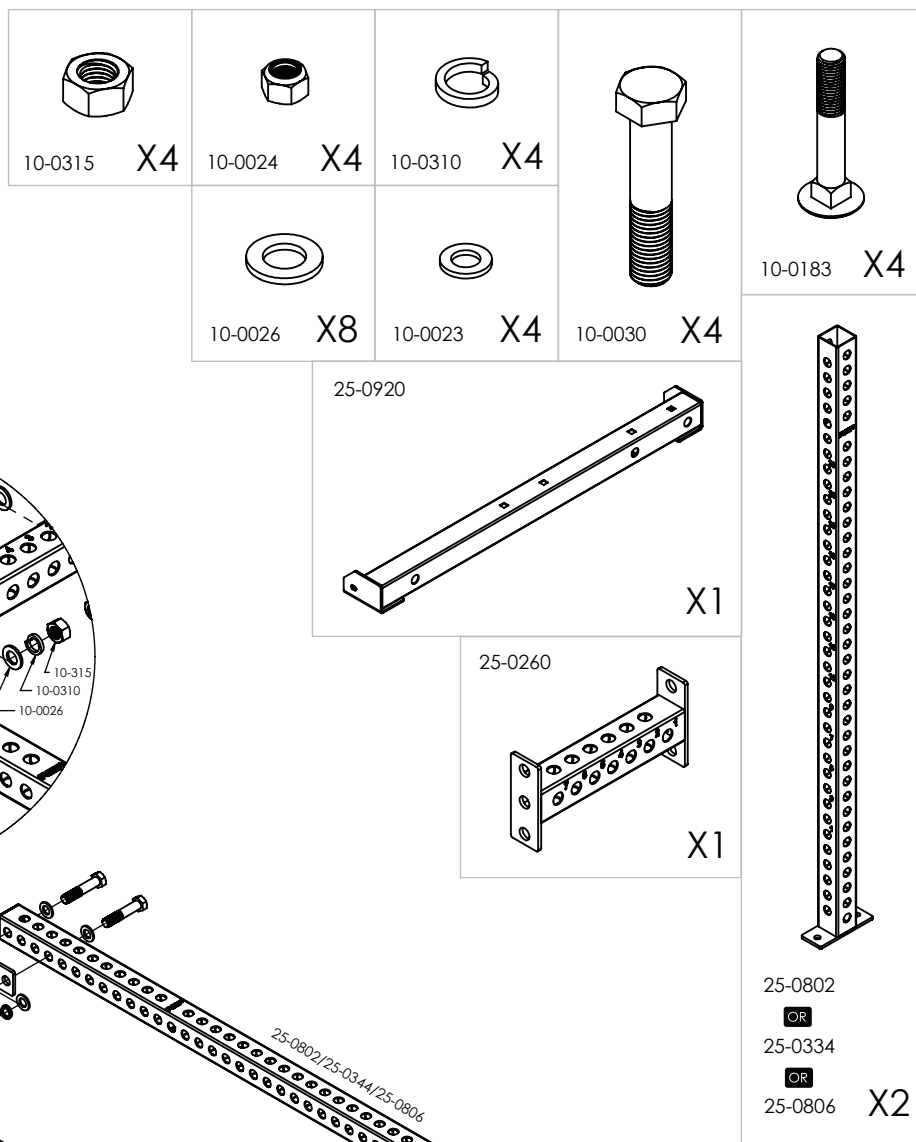


STEP 3A

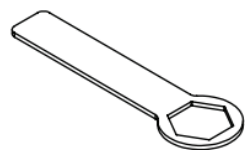


15-1046

X1



10-0030

X4

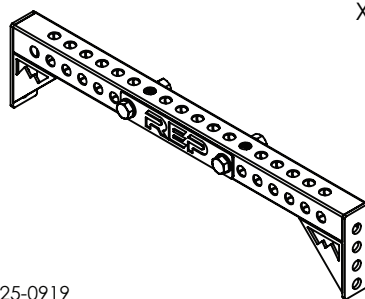

X1



10-0315

X4





10-0026

X8



10-0310

X4

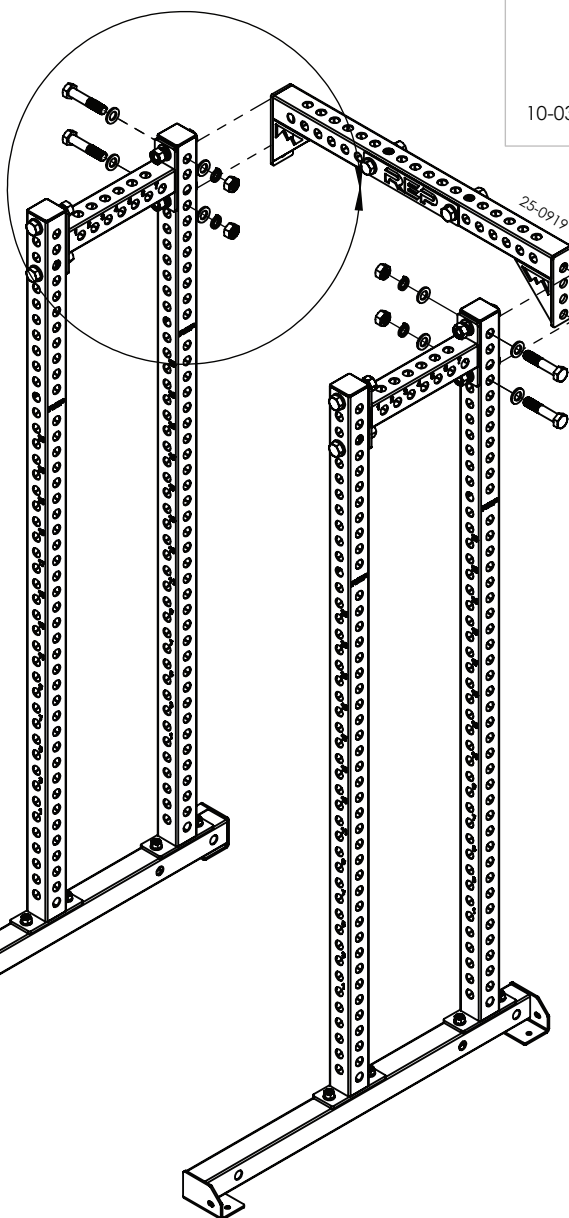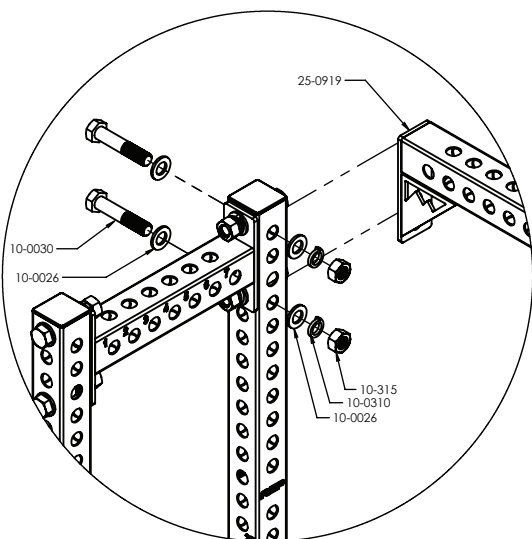

SKIP TO STEP 3B IF INSTALLING
LARGE LOGO-PLATE
CROSSMEMBER (25-0370)

UTILIZE THE INCLUDED 36MM
WRENCH TO ACCESS AND
TIGHTEN TOP BOLTS.

STEP 3B

15-1046

X1

10-0030

X4

25-0370

X1

10-0315


X4

10-0026

X8


10-0310


X4


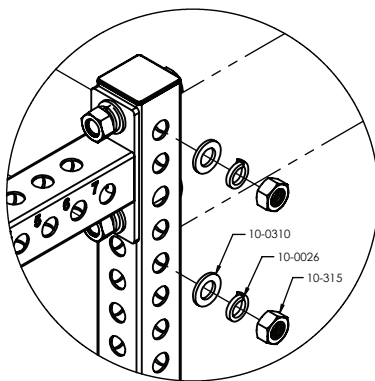


SKIP THIS STEP IF LOGO-PLATE
CROSSMEMBER WAS
INSTALLED IN STEP 3A

UTILIZE THE INCLUDED 36MM
WRENCH TO ACCESS AND
TIGHTEN TOP BOLTS.

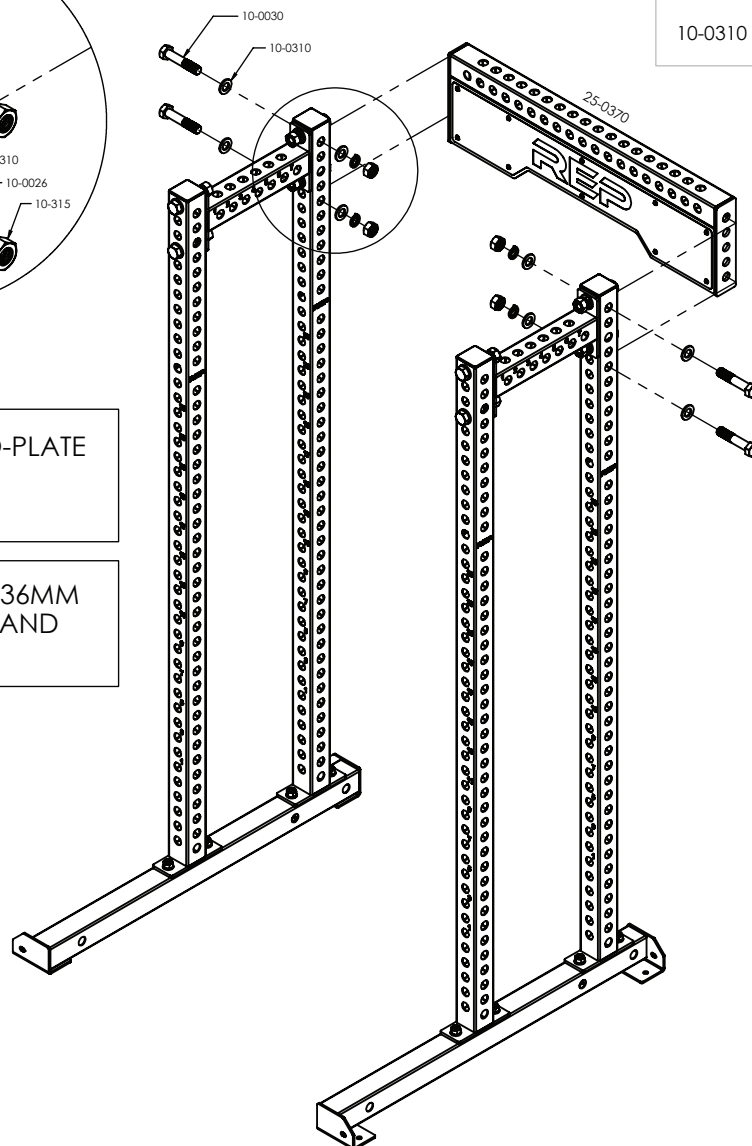


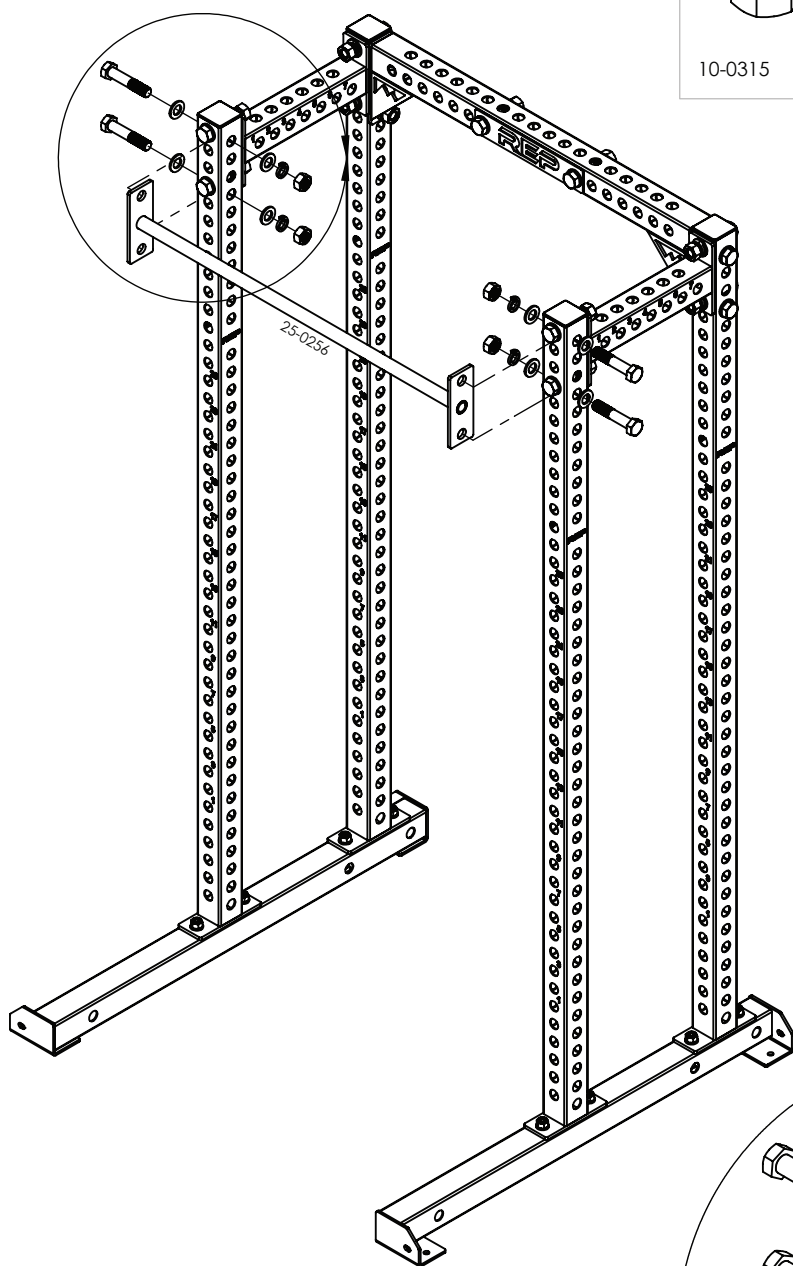

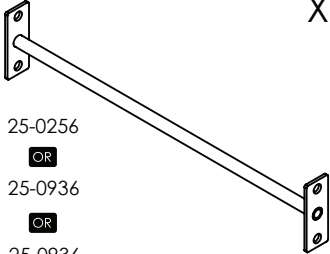	10-0315	X4		10-0026	X8		10-0030	X4
				10-0310	X4			
							X1	
						25-0256 OR 25-0936 OR 25-0936		


SKIP TO STEP 4B IF INSTALLING
A MULTI-GRIP PULL UP BAR OR
STEP 4C IF INSTALLING A
GLOBE GRIP PULL-UP BAR

**STEP
4A**

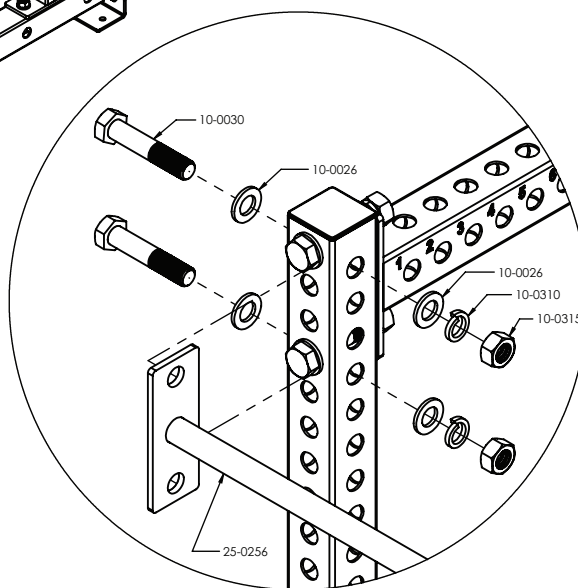


SKIP THIS STEP IF PULL UP BAR
WAS INSTALLED IN STEP 4A

SKIP TO STEP 4C IF INSTALLING
GLOBE-GRIP PULL-UP BAR



10-0030

X4

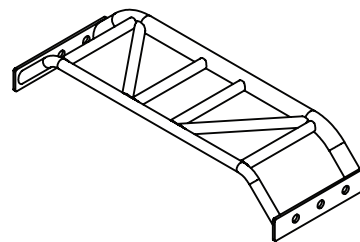

25-0343

X1



10-0315

X4




10-0026

X8




10-0310

X4


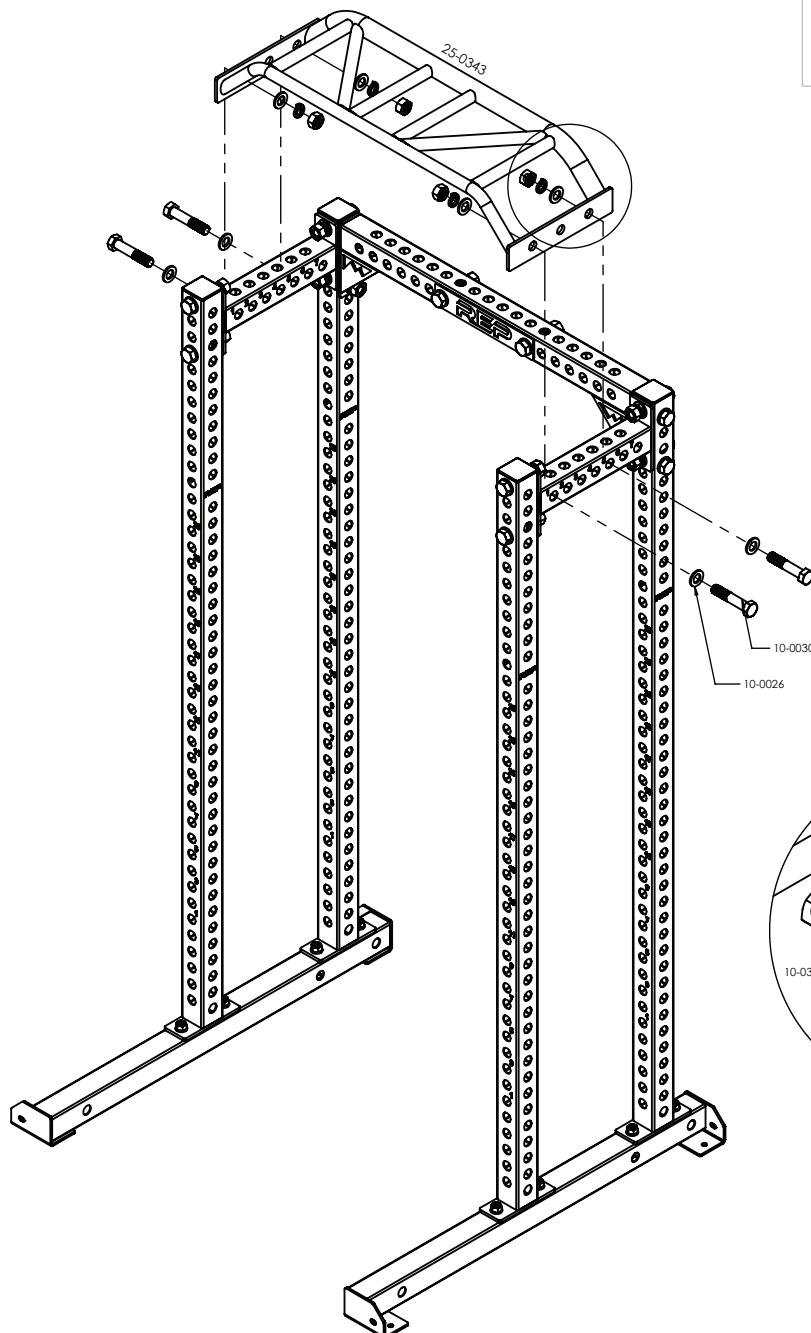


**STEP
4B**

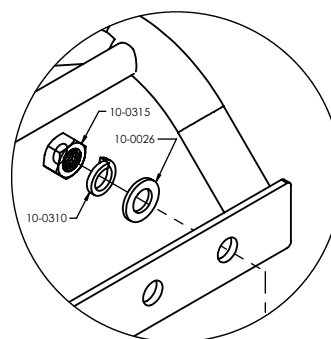


STEP 4C

SKIP THIS STEP IF PULL UP BAR
WAS INSTALLED IN EITHER
STEP 4A OR 4B

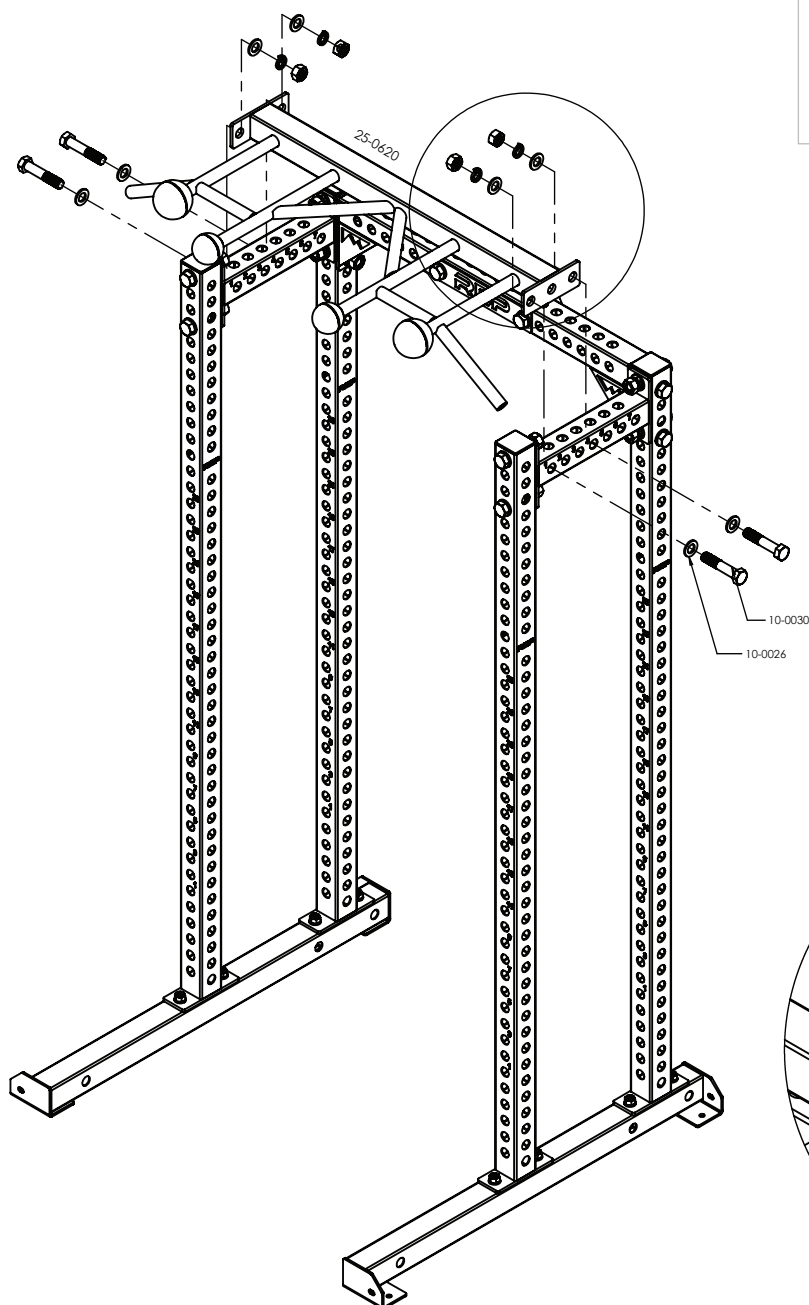

10-0030

X4

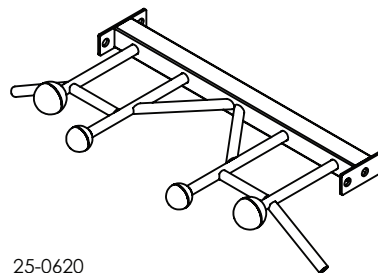

25-0620

X1



10-0315

X4




10-0026

X8




10-0310

X4

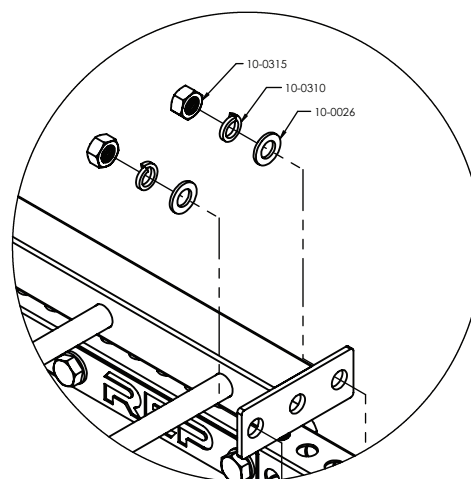




**STEP
5**

ENSURE BASE IS SITTING FLAT
FULLY TIGHTEN ALL HARDWARE FROM BOTTOM TO TOP



10-0143

x4

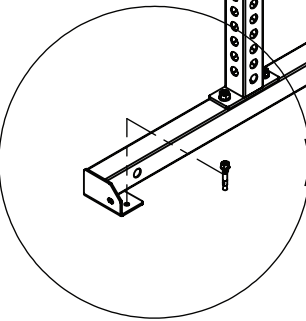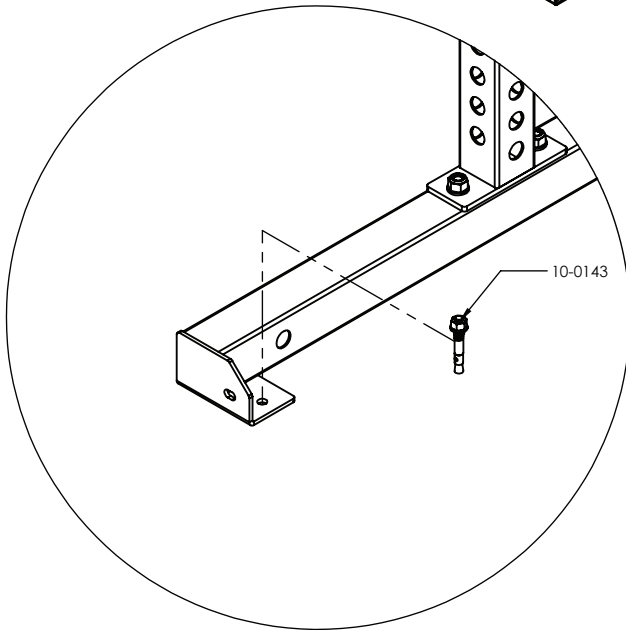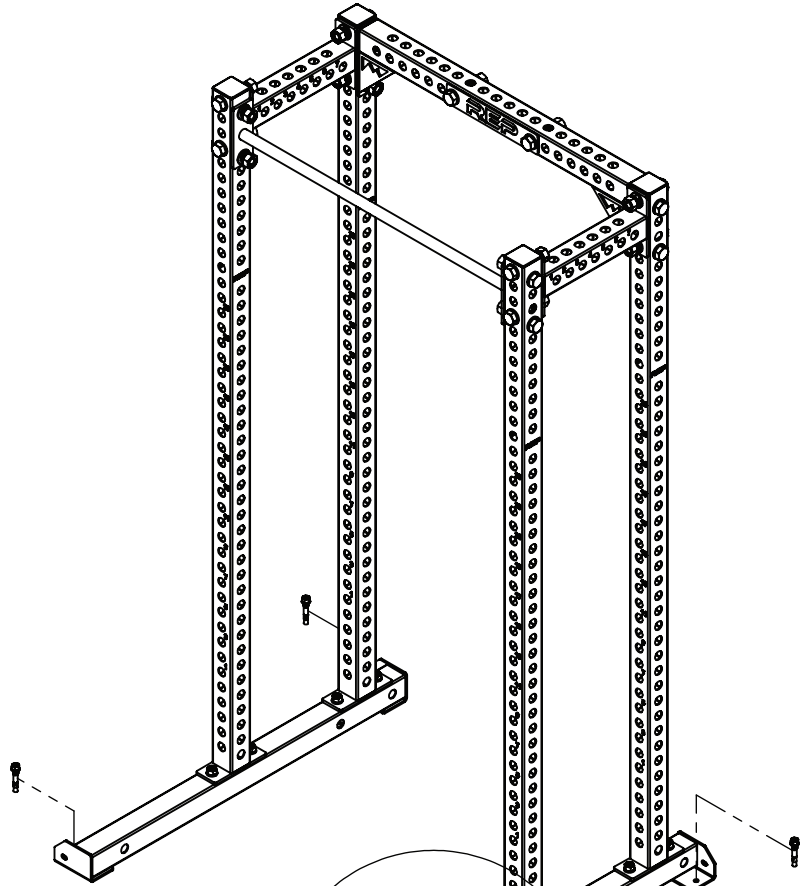

CONCRETE ANCHORS PROVIDED
BOLT DOWN RECOMMENDED

DRILL BIT SIZE = 16 MM