






Serial No.:


PR-1100

Installation Instruction

① M10×70 bolt, nut, washer  × 14	② M10×70 bolt, washer  × 2	③ 50x50 foot cover  × 4
④ M10×70 square neck bolt, nut, washer × 8 	⑤ M10×70 bolt, nut, washer (big)  × 8	

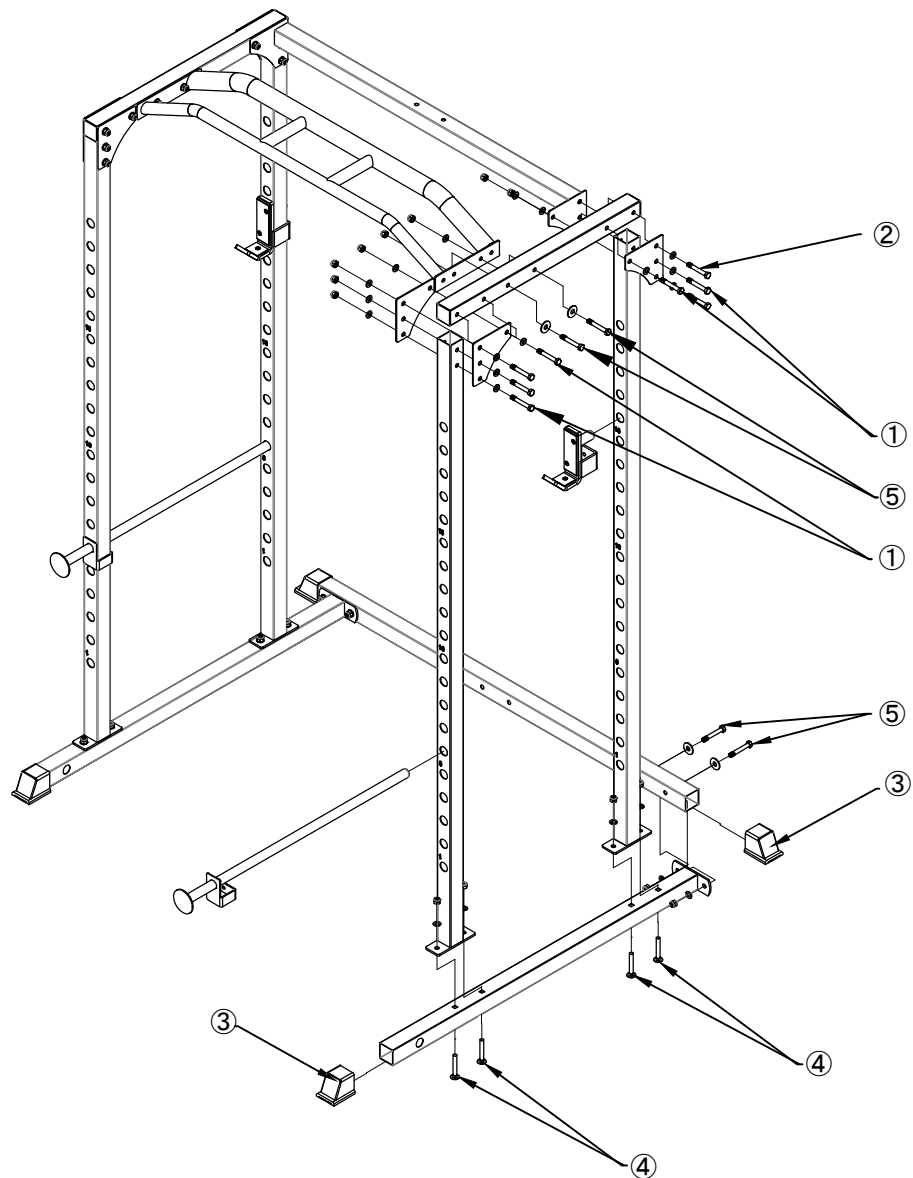

Millimeters

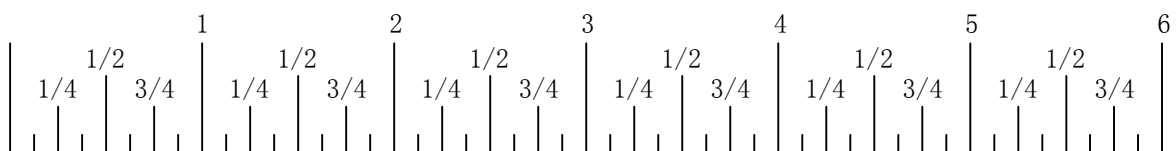

Inches