

## Features



Insulated Cup Holders



Covered Storage Compartment



Removable Hand Clutch



Wet Wipe Compartment



Front Mesh Pockets



Hanging Hooks



Zippered Back Pocket



Reusable Wet Wipe Pouch




Removable & Adjustable Shoulder Strap

**Note:** Do not exceed the weight limit of 6.6 lbs (3 kg)

## Attaching the Hooks



Face the back of the hook towards the back of the console.

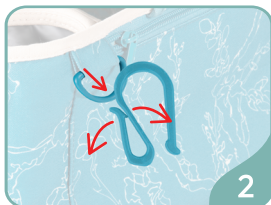

Using your thumbs to spread the hook clip, open wide enough to clip on to the console's buckles.




Attachment complete.

## Attaching the Shoulder Strap



Press the shoulder strap clip onto the hanging hook buckle on the back side of the parent console.

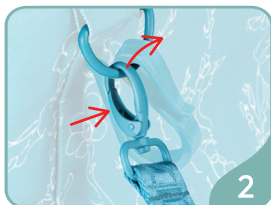

Installation complete. To remove the shoulder strap, press the clip open and slide it off the buckle.



Follow Us!




WonderFold.com


Questions? Email Us: [hello@wonderfold.com](mailto:hello@wonderfold.com)

## Attaching the Parent Console

### Handlebar Straps

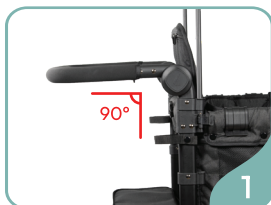

If your stroller wagon has an adjustable handlebar, adjust it to a 90° angle to the wagon frame.

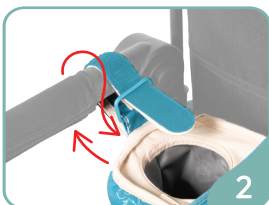

With the velcro side facing out, wrap the strap around the base of the handlebar. Then loop it through the buckle to secure the strap. Repeat on the other side.



Once the parent console is securely attached, you may adjust the handlebar height to your desired level.

### Hanging Hooks



Make sure that there is a clear space on the frame where the hooks will be placed on.



Place hooks onto the frame and firmly press down until hooks are securely in place.



Installation complete.

**Note:** Hooks should not be placed on top of seat or accessory clamps already on the frame.

## Inserting the Reusable Wet Wipe Pouch



Unzip the wet wipe compartment and insert the wet wipe pouch.



Guide the pouch's wipe dispenser through the compartment opening until the dispenser is completely out.



Follow Us!



WonderFold.com

Questions? Email Us: [hello@wonderfold.com](mailto:hello@wonderfold.com)