


Attaching the cargo net to the stroller wagon frame.

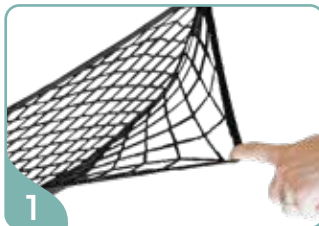

Make sure the opening of the cargo net is on top side



Attach the top left hook to the top front cross bar



Then attach the top Right hook to the top back cross bar



Attach the bottom left hook to the front bottom cross bar



Attach the bottom right hook to the bottom back cross bar