

baby brezza® one step® sterilizer dryer mini

Make Descaling Easier!



baby brezza descaler

- Removes mineral build-up
- Extends life of machine
- Shop now at babybrezza.com

Perfect
for travel or
smaller spaces



Instructions

PLEASE NOTE: It is extremely important to descale & clean the sterilizer every 2 weeks or as necessary. All bottles, pump parts & accessories must be empty, clean and rinsed before use in the sterilizer-dryer more often, especially if your home has hard water..

Please visit
babybrezza.com


© 2024 Baby Brezza Enterprises LLC

IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be followed, including the following:
1. Read all instructions carefully before using your sterilize dryer.
 2. Ensure that the supply voltage marked on the appliance corresponds with your power supply.
 3. If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
 4. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
 5. Do not allow children to touch or use the appliance. The appliance becomes very hot and the steam can cause severe scalding.
 6. Do not move the appliance when it is in use or contains hot liquids.
 7. Do not touch the hot surfaces.
 8. Do not place the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
 9. Unplug the appliance from the power supply before cleaning or storage.
 10. Do not immerse the supply cord, plug or base unit in water or any other liquid.
 11. This appliance does not contain any user serviceable parts inside. Do not dismantle.
 12. This appliance is for indoor household use only. Do not use outdoors.
 13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
 15. Short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
 - a) Extension cords are available and may be used if care is exercised in their use.
 - b) If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
 16. Children should be supervised to ensure that they do not play with the appliance.
 17. Not for space heating purpose.
 18. Always use on a level, heat-resistant surface.
 19. Always keep the electric sterilizer and its plug out of reach of small children.
 20. To disconnect, turn any control "off"; then remove plug from wall outlet.
 21. Ensure water has been added to the base unit before the sterilization cycle is switched on.
 22. Always add 60ml/2 oz of distilled water before use. If you put too little or too much water into the sterilizer, the sterilization efficiency may not be reached.
 23. Always unplug from the electric outlet when not in use. Allow to cool before putting on or taking off any parts.
 24. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
 25. The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
 26. This sterilizer is intended to be used in a household and similar application such as a. staff kitchen areas in shops, offices and other working environments. b. farm houses. c. by clients in hotels, motels and other residential type of environments. d. bed and breakfast.
 27. Do not open while in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid.
 28. Allow at least 30 minutes interval between operations and make sure the unit has been cooled down before pressing the start button for sequential use.
 29. Steam escaping from the unit can cause burns. Always allow 5 minutes to cool down after the cycle finishes before lifting the lid.
 30. KEEP CHILDREN AWAY from this sterilizer at all times.
 31. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
 32. CAUTION: Risk of electric shock, disconnect electric power before servicing.
 33. Use only distilled water, bottled water or fresh running water to sterilize.
 34. Never use any additives.

SAVE THESE INSTRUCTIONS

Sterilizer Dryer Mini Parts

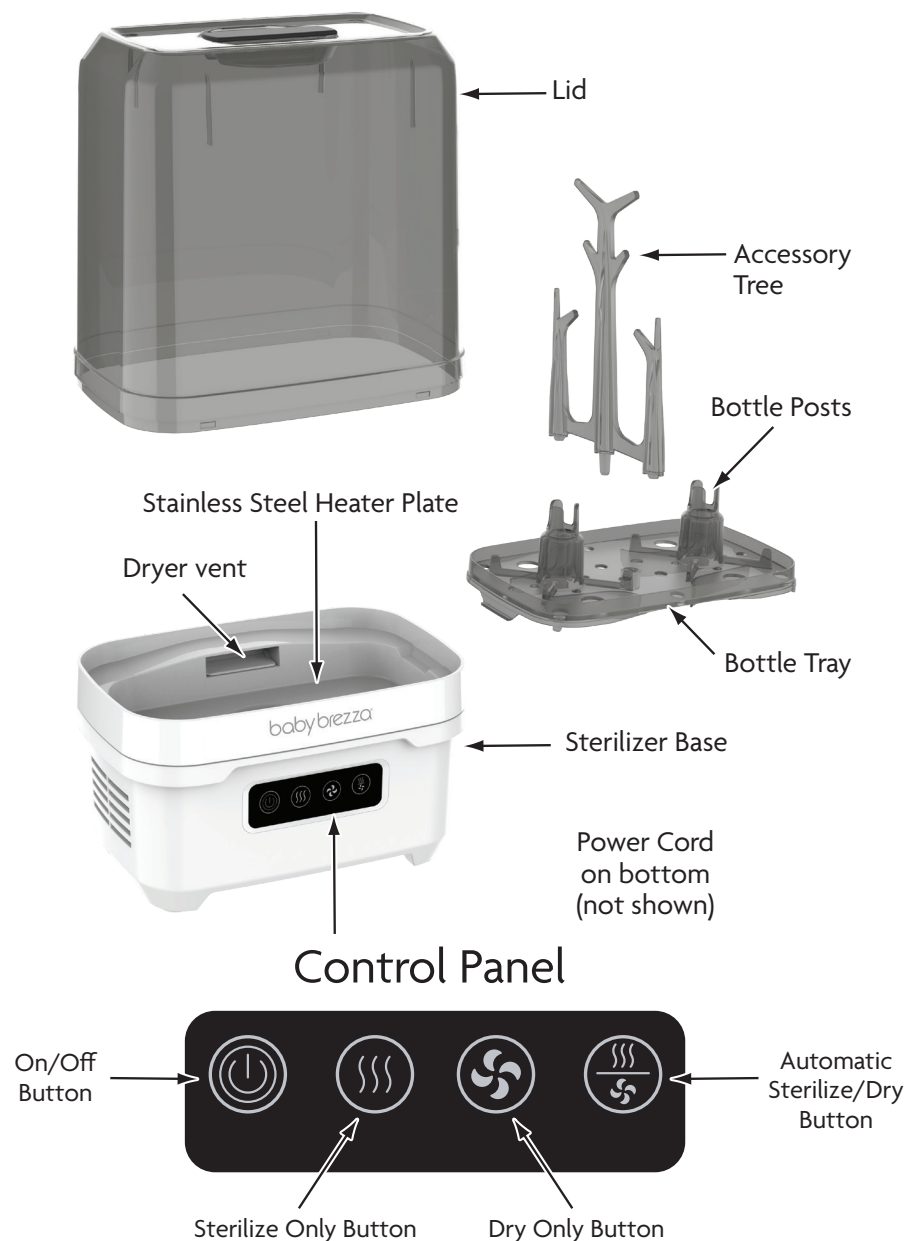

TECHNICAL DATA

Supply voltage: 120V ~ 60Hz

Model: BRZ0148

Power: 400W

Set-up and Use

Before placing items in the appliance for sterilization it is important that bottles, pump parts and accessories must be EMPTY, CLEAN & FULLY RINSED BEFORE USE.

1. Place the appliance on a flat surface where it is out of reach of children and it will not be knocked or moved during operation.
2. Remove the Lid, Bottle Tray and Accessory Tree from the sterilizer base.
3. Pour water on the base/heater surface to MAX line (60 ml / 2oz).
Never fill past MAX line. We recommend using distilled water to avoid mineral scale build-up on the heating plate. However, you can use bottled water or tap water but you may need to descale more frequently.
4. Place the Bottle Tray and Accessory Tree on the base.
5. Place clean bottles with their opening facing downward on the bottle posts.
6. Place bottle vents or other accessories on the Bottle Tray.
7. Place nipples, collars & other bottle accessories on the Accessory Tree.
8. Place Lid on Sterilizer base securely so there are no gaps.
9. Press the On/Off  button once and the function icons will light up.
Choose your desired function following the instructions below.
If there is no selection of function after pressing the on/off button, the appliance will automatically switch off.

Automatic Sterilize/Dry Function:

1. Press the Sterilize/Dry button  once. The sterilize/dry cycle will start 3 seconds after pressing the button.
2. The sterilization cycle will boil water and run until all water is evaporated from the heating plate.
3. When the sterilization cycle is complete, the appliance will automatically begin the drying cycle. The drying time is 50 minutes.
4. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically.

Sterilize Only function:

1. Press the Sterilize button  once. The sterilize cycle will start 3 seconds after pressing the button.
2. The sterilization cycle will boil water and run until all water is evaporated from the heating plate.
3. When the sterilization cycle is complete, the appliance will beep 5 times and switch off automatically.

Dry Only function:

1. Press the Dry button  once. The dry cycle will start 3 seconds after pressing the button. The Drying cycle will run for 50 minutes.
2. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically.

Descaling:

Please descale the heating plate of the Sterilizer Dryer every 2 weeks to remove mineral scale, prevent overheating, malfunction or product failure.


- Mineral residue, particularly in hard water areas, may deposit on the heating plate after the sterilization cycle. To avoid scale build up, wipe the surfaces with a soft moist cloth after each operation.
- Mineral Deposits can be removed with Baby Brezza Descaler or by leaving 60ml/2oz white vinegar on the heating plate for approximately 30 minutes. The plate should then be rinsed and wiped with a clean, dry cloth. Some harmless discoloration spots may remain after cleaning but they have no effect on performance.
- If you have hard water or use the Sterilizer Dryer multiple times a day, you should descale more frequently.

Cleaning

- Always unplug your product before cleaning.
- Do not immerse the base, the supply cord or the plug in water or other liquids.
- Do not clean base under water faucet.
- Use a soft damp cloth to clean the base and control console.
- Never use abrasive pads to clean the plastic parts of the machine.
- The Lid, Accessory Tree and Bottle Tray can be cleaned in hot soapy water.
- Do not use abrasives or solvents for cleaning; they may damage the appliance and the surface of the heating plate.

Cleaning the air filter

- Turn the base upside down to find the filter cover.
- Slide the filter cover to remove.
- Rinse with water to remove any dust.
- Allow to dry thoroughly and replace by sliding back into place.

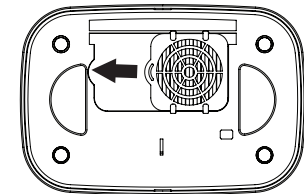


Caution: If it is necessary to remove water from the base, always POUR AWAY FROM FAN OPENING. Note water pour direction icon on base, and pour in direction of arrow.




Pack the Sterilizer Dryer Mini for travel


1. Make sure the base is clean and dry. If used recently, make sure it is cool before packing.
2. Disassemble all parts and wrap the cord around the holders on the base.

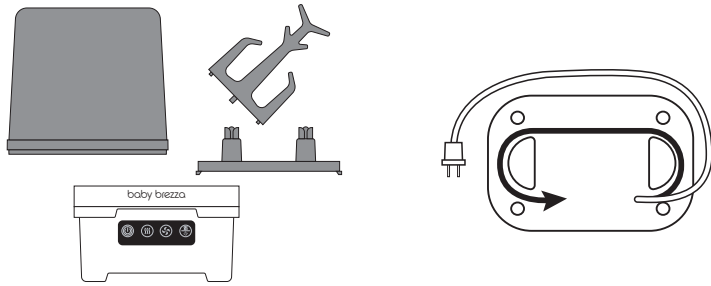


3. Turn the lid upside down and put the Bottle Tray inside the lid.

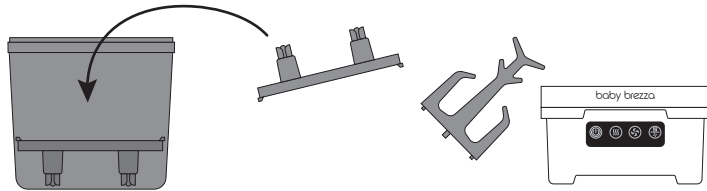

4. Put the Accessory Tree flat on top of the Bottle Tray inside the lid.

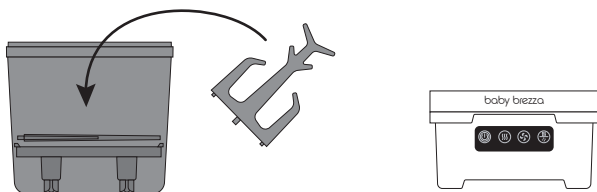

5. Put the Base inside the lid on top of the Bottle Tray and Accessory Tree and push down to close.

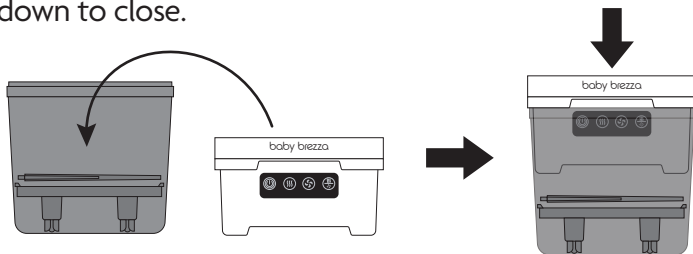

Troubleshooting

Condition	Possible Cause	Remedy
Appliance will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Press On/Off switch before choosing function.
	Insufficient water is in heater plate area.	Add 60ml (2oz) water to heater plate area.
Timer stops during sterilize cycle.	Not enough water added to heater plate area.	Make sure to fill to max line, at least 60ml (2oz) water to heater plate area.
Scaling on water tank heater plate.	Mineral rich or hard water used persistently.	Clean heater plate after each use and use distilled water.
Items not dry after drying cycle.	Water is collecting on recessed or indented areas of items placed in sterilizer.	Make sure parts are placed so they do not collect water.
	Sterilizer Dryer is loaded with too many bottles and parts	Run additional dry cycle or reduce number of parts.

If you can not remedy problems with the machine by using the troubleshooting chart above, please contact Baby Brezza Customer Care at 1-888-396-6552 or visit [babybrezza.com/contact](https://www.babybrezza.com/contact). Any other servicing should be performed by an authorized service representative.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza appliance that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza appliance will be free of defects in material or workmanship under normal home use for one year from the date of original purchase.

Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza appliance should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Care at 1-888-396-6552 or write to:

Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.