

BY BEMIS

USER MANUAL





Registration and
Installation Resources

Questions?
We're here to help.

847.458.2334
support@biobidet.com
www.biobidet.com

Technical support and alternate
fittings are available.

TABLE OF CONTENTS

04

PRODUCT INFORMATION

Important Safeguards
Overview & Parts List
Side Panel

09

GETTING STARTED

Functions & Features

12

INSTALLATION

Installation Guide

16

MAINTENANCE

Pairing The Remote ID
Replacing Remote Batteries
Draining The Warm Water Tank
Cleaning The HD-7000
Cleaning The Strainer
Troubleshooting Guide
Specifications

21

WARRANTY

Warranty
Notes


IMPORTANT SAFEGUARDS

PLEASE OBSERVE THE FOLLOWING PRECAUTIONS AND INSTRUCTIONS BEFORE INSTALLATION AND USE.


- This product must be connected to a grounded 120V GFCI (Ground Fault Circuit Interrupt) outlet. Do not connect the power cord if it is damaged or broken. Do not plug the product into a loose electric outlet.
 - It is recommended to operate this product on a separate circuit. Sharing a circuit could cause the breaker to trip or lights to flicker.
 - If it is necessary to use an extension cord, use only a three-prong extension cord plugged into a proper GFCI outlet. The marked rating of the extension cord should be equal to or greater than the electrical rating of the unit (10 amp). Consult a qualified electrician or service person if you are not sure whether the unit is properly grounded.
- Do not open this product for repair without authorization from the manufacturer. Only qualified service personnel should service this product. Do not use accessories not recommended by the manufacturer.
- Connect this product to a cold water supply line.
- Close supervision is necessary when this product is used by children, elderly, or adults with sensitive skin. A low temperature burn may occur when the skin has been in contact with an object at relatively low temperature for an extended period of time.
- If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto the bidet. Do not use benzene or any acid chemical detergent, as they can cause discoloration. Only neutral detergents are permitted.
- Do not plug in the power cord before connecting the water supply hose.
- Install in an area with adequate ventilation to avoid high levels of humidity which can damage the electronic components.
- Do not touch the power cord with wet hands or reach for a product that has fallen into water. Unplug immediately.
- Unplug the bidet seat when cleaning or detaching from the toilet bowl. Do not plug in until plumbing work has been completed.
- Keep the power cord away from heated surfaces to prevent a fire hazard. Keep any flammable materials away from this product at all times.

WATER DOES IT BETTER.®

OVERVIEW

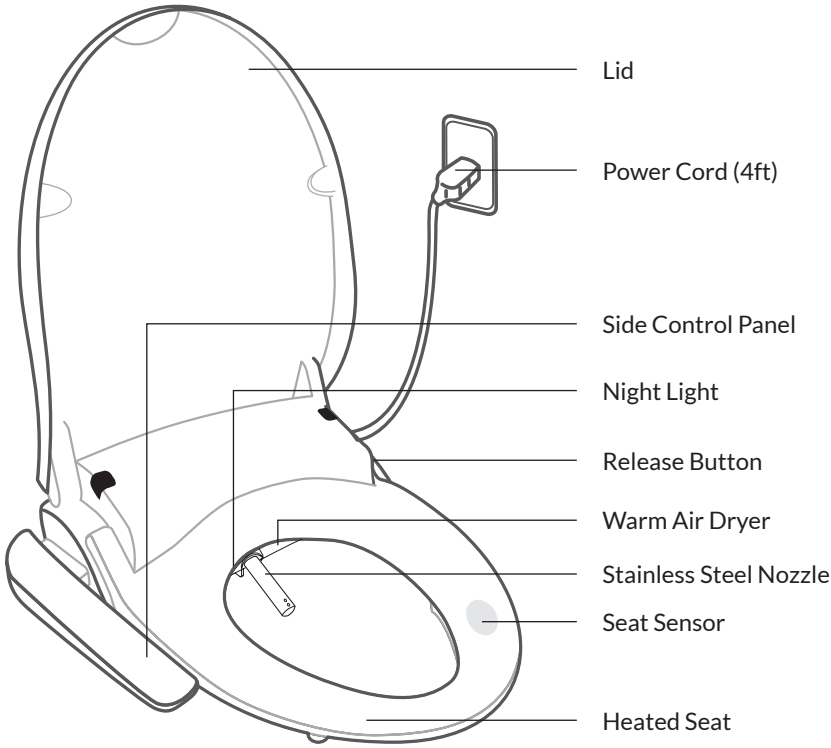


Stainless Steel Nozzle

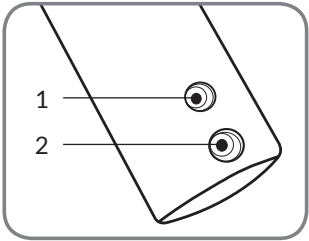

- 1. Rear & Turbo Wash
- 2. Front Wash


PARTS LIST

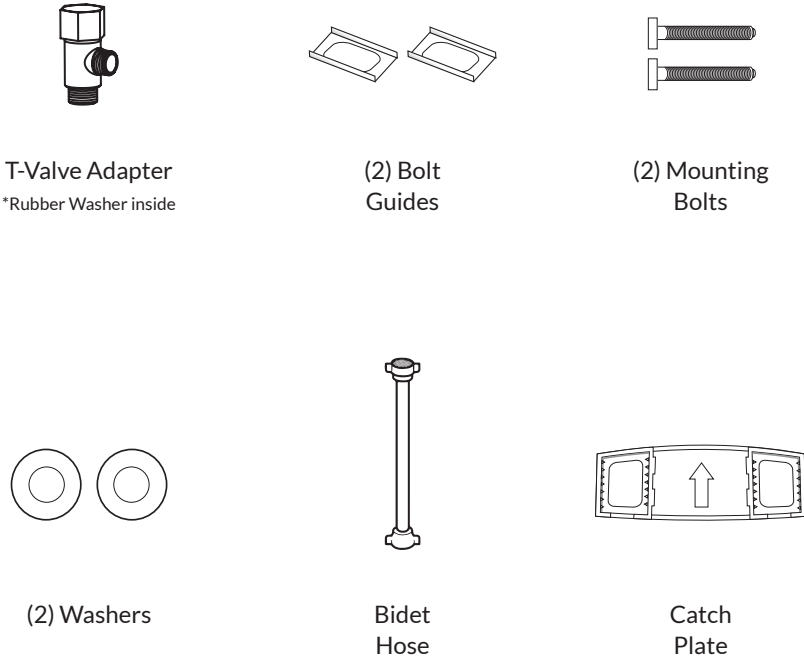

Recommended Installation Tools



SIDE PANEL

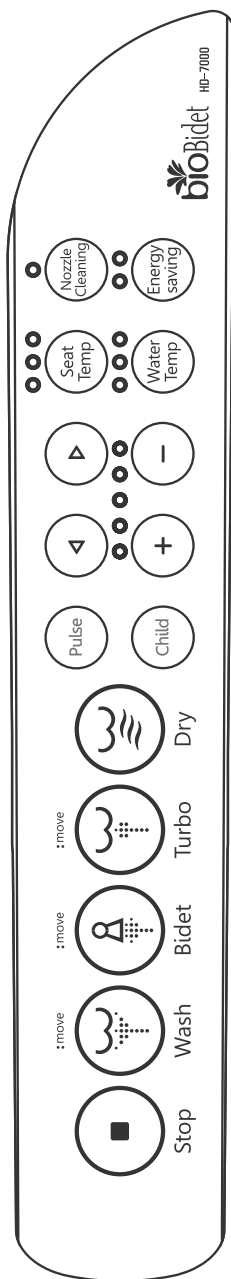

-  Stop Button
-  Rear Wash
-  Front Wash
-  Turbo Wash
-  Warm Air Dryer
-  Pulse
-  Child
-  Adjustable Water Pressure
-  Adjustable Nozzle Position
-  Adjustable Heated Seat
-  Adjustable Water Temperature
-  Nozzle Cleaning
-  Energy Saving

FUNCTIONS & FEATURES

The HD-7000 is a bidet toilet seat designed for superior hygiene, comfort, and sustainability. Each use will leave you feeling clean and confident, while reducing your overall footprint.

Sit Down On The Seat

This product includes a built-in seat sensor that must be activated with skin contact in order to operate bidet functions.

Stop Button

Press to stop a wash or dry function.
Hold the button for 3 seconds to power off.

Rear Wash

Press to activate the rear wash cycle, carefully crafted with the optimum cleansing angle and spray pattern. Press again to oscillate. This wash cycle will automatically turn off after 2 minutes.

Front Wash

Press to activate the front wash cycle, which offers an alternate accommodating spray pattern. Press again to oscillate. This wash cycle will automatically turn off after 2 minutes.

Turbo Wash

Press to activate a focused wash with higher water pressure. Press again to oscillate. This wash cycle will automatically turn off after 2 minutes.



Warm Air Dryer

Press to activate the warm air dryer. Adjust the dryer temperature by pressing “+” and “-”. (Temperature can be adjusted up to 5 levels.)



Adjustable Water Pressure

Press “+” or “-” during a wash cycle to adjust the water pressure to your desired level.



Adjustable Water Temperature

Adjust the water temperature by pressing the corresponding button to cycle through 5 temperature levels.



Adjustable Heated Seat

Adjust the heated seat by pressing the corresponding button to cycle through 5 temperature levels.

Auto Oscillation

Press “Stop” and “^” during a wash cycle to turn automatic oscillation on/off.



Adjustable Nozzle Position

Push the “^” or “v” during a wash cycle to adjust the nozzle position.



Nozzle Cleaning

- This product has an automatic nozzle cleaning function that rinses the nozzle before each use.
- Press “Nozzle Cleaning” to activate a nozzle cleaning cycle that rinses the nozzle 10 times.
- Press and hold the “Rear Wash” button on the side control panel for 5 seconds while not seated to extend the nozzle without spraying for 2 minutes. Gently clean the nozzle with a soft cloth or toothbrush. Press the “Stop” button to retract the nozzle.



Eco Mode

Press to turn energy saving functions on/off. When enabled, eco mode will decrease temperature settings when not seated.

Night Light

Press the “Stop” and “Turbo Wash” buttons for 3 seconds to turn the night light on/off.

Smart Seat Sensor

Press the “Stop” and “Nozzle Cleaning” buttons to turn the seat sensor on/off.

Sounds On/Off

Beeping can be enabled or disabled by pressing and holding the “Stop” and “+” buttons while not seated.

INSTALLATION GUIDE


BEFORE INSTALLATION

Do not plug the power cord in until installation is complete.

Please contact our service center at 847.458.2334 for alternate fittings or assistance with this process.

1. Turn Off Water

Turn off the water shut-off valve. Drain the toilet tank completely by flushing the toilet. Unscrew the hose connected to the toilet tank.

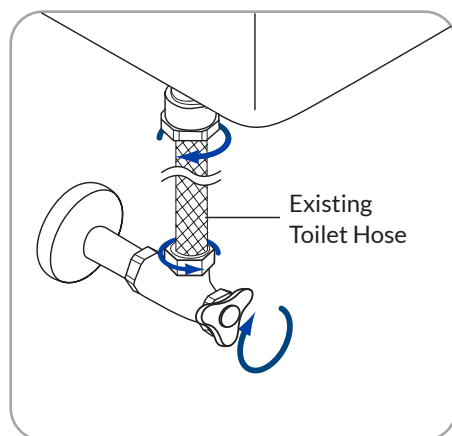


2. Remove Toilet Seat

Unscrew the nuts on both sides of the toilet to release the existing toilet seat from the toilet.



3. Install Catch Plate

Insert the top mount anchors into the toilet bolt holes. Insert the mounting bolts through the guides, catch plate, and mounting holes and into the top mount rubber anchors. Fasten with a phillips screwdriver to secure the catch plate on the toilet.

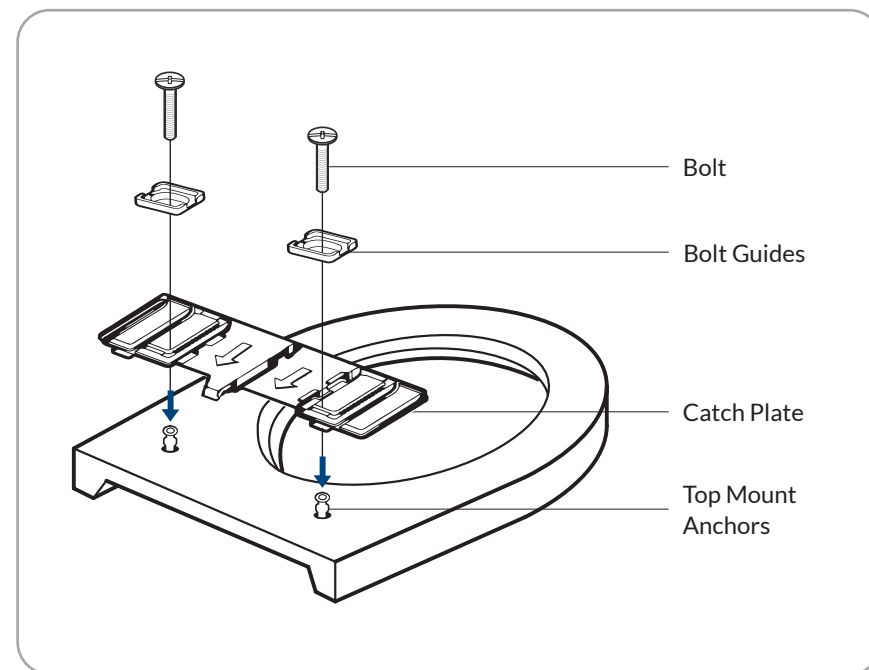

4. Install Your HD-7500

Align the bidet seat with the catch plate and slide it all the way back until you hear a click.



5. Connect the Water Hoses


1. Install the t-valve onto the toilet tank. Ensure the rubber gasket is properly seated inside the t-valve.
2. Connect your existing toilet hose to the water shut-off valve and t-valve.
3. Connect the provided bidet hose to the bidet seat and t-valve.
4. Open the water shut-off valve. Check for any leaking or dripping. Use a wrench to tighten any loose connections.

***Shut-off valves may vary. If supplied parts do not fit, please call 847.458.2334. Alternate fittings are available upon request.**


6. Plug It In!

Plug the power cord into a 120V power outlet. The HD-7500 will beep. Press "Rear Wash" while unseated. The water will start filling the tank and the bidet will beep 3 times. Once the tank is full, the beeping will stop.

7. Mounting the Remote

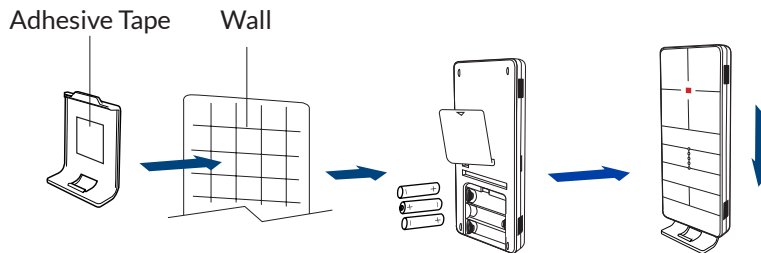

1. Remove the adhesive cover from the back of bracket and place the bracket where desired.
2. Insert the supplied batteries (AAA) and close the battery cover. Ensure the batteries are inserted properly according to polarity.

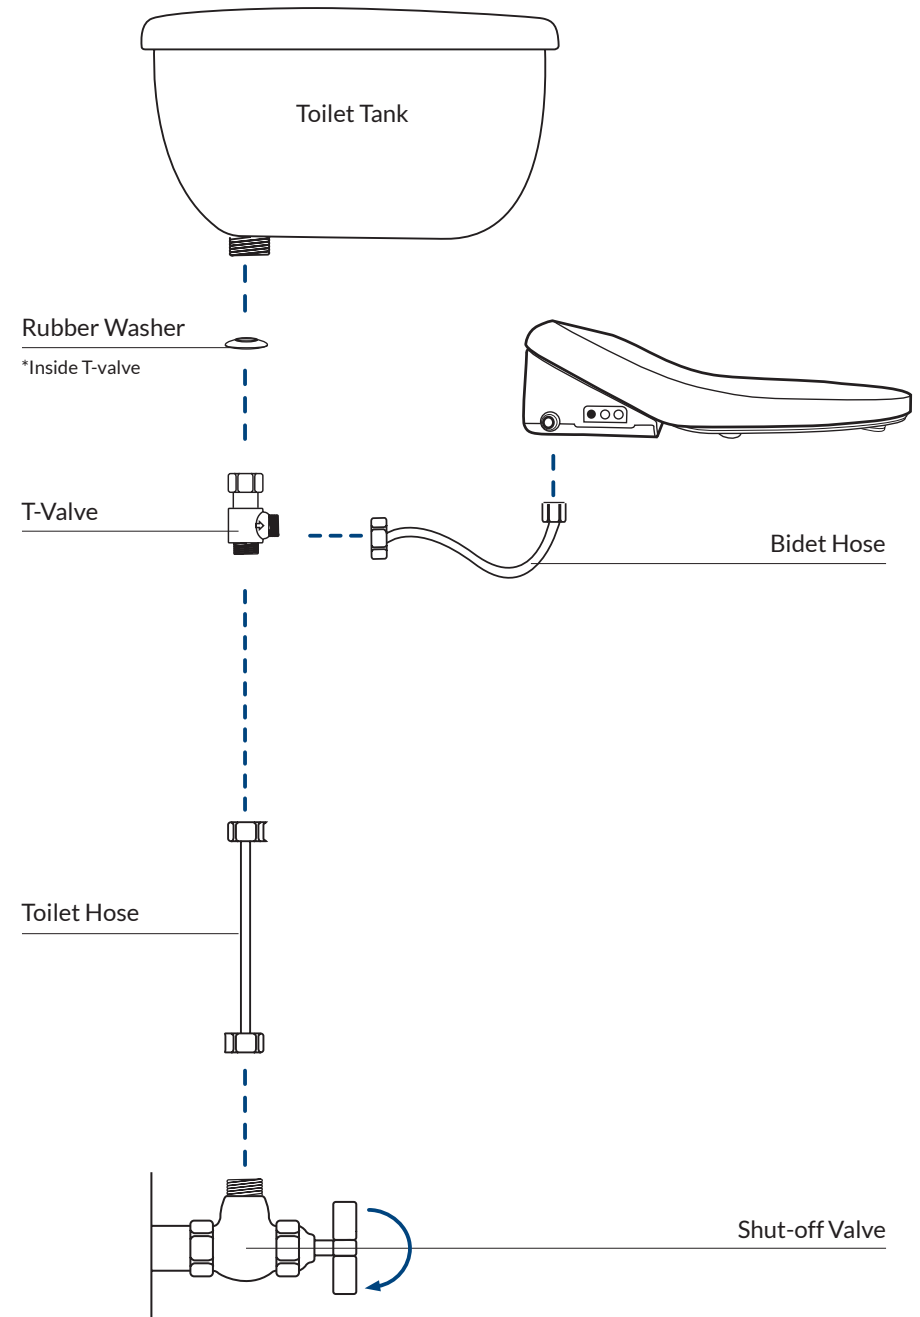

MAINTENANCE

Pairing The Remote ID


1. Press "Stop" and "Seat Temp" for 3 seconds. Channels will show up on the LEDs. Set desired channel with "+" and "-". Press "Stop" to save settings.
 - Channel 1-5 - LEDs flashing
Channel 6-10 - LEDs on
2. Press "Stop" and "Rear Wash" on the side control panel for 3 seconds. The LED will start flashing. Press "Stop" on the remote to finish the channel setting.
3. To reset all remote settings, press "Stop" and "Front Wash" for 3 seconds.

Replacing Remote Batteries

- If the remote is low, the first LED on the "Adjustable Water Pressure" and "Dry Temp." will flash. Please replace the batteries.
- The LED will automatically turn off after 5 seconds to preserve energy. Settings are changed to default when replacing the batteries.

Draining the Warm Water Tank

If you do not intend to use this product for an extended period of time, drain the water from this product's warm water tank.

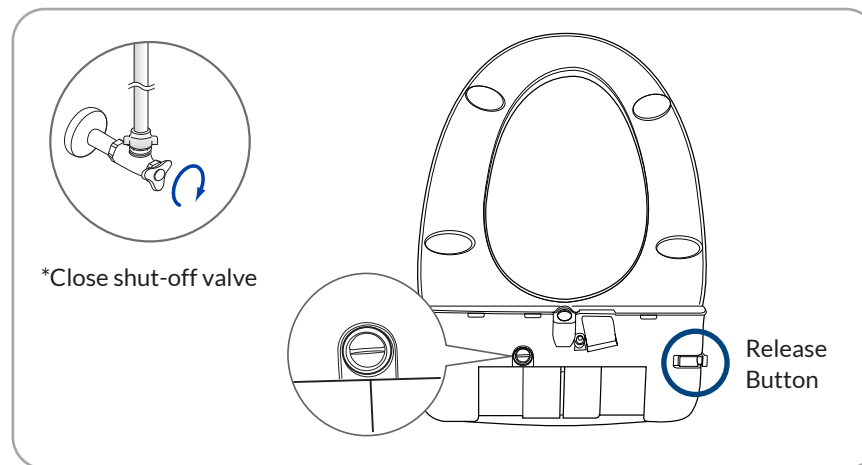


Before draining, unplug the power cord and wait 30 minutes until the unit has cooled down. Do not insert your finger into the drain hole.

1. Disconnect the power plug.
2. Close the water shut-off valve.
3. Press the release button on the right side of the bidet and pull it forward.
4. Open the drain cap located on the back and bottom of the product and drain out all the water in the tank. Beware of losing the drain bolt. Avoid placing the product in a fully upright position.

Cleaning the HD-7500

- When you clean this product, do not use thinner, benzene or toilet bowl cleaner, as it may cause discoloration or damage.
- Disconnect the power cord and use a wet cloth when you clean this product.

Cleaning the Strainer

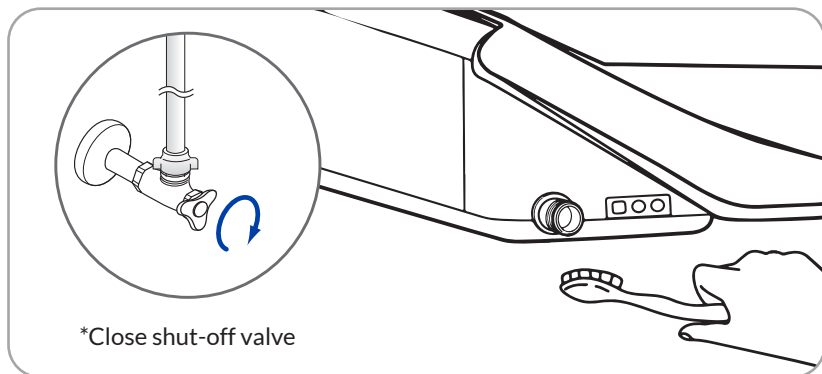

This product will not operate properly if the strainer is clogged. Please clean the strainer regularly.

1. Unplug the power cord. Close the water shut-off valve.
2. Unscrew the bidet hose from the bidet seat.
3. Clean the strainer with a small brush.
4. Re-connect the bidet hose. Open the water shut-off valve. Plug in the power cord.

TROUBLESHOOTING GUIDE

Problem	Check The Following
Water does not spray	• Check if water supply is cut off. • Check if the strainer is clogged. • Ensure the seat sensor is activated.
The unit is not operating	• Check if power cord is plugged in. • Check the LED light on side control panel. • Ensure the seat sensor is activated.
Water is leaking	• Verify all connections are secure. • Contact customer support.
The water pressure is weak	• Check the pressure if set to low. • Check for any kinked hoses. • Check if the strainer is clogged.
The heated seat is not warm enough	• Check if the seat temperature is set to level 1.
The water is not warm enough	• Check if the water temperature is set to level 1.
The nozzle is stuck	• Ensure the seat sensor is activated.
The product is unstable	• Tighten the mounting bolts firmly.
The dryer is not working	• Ensure the seat sensor is activated.
The dryer has a smell	• The dryer may release a slight odor for the first few uses.

SPECIFICATIONS

Specifications		HD-7500
Power Rating		120Vac, 60Hz, 1400W
Water Supply	Water Supply Method	Direct connection to waterworks
	Water Pressure Range	0.07 ~ 0.74 MPa(0.7 ~ 7.5 kgf/cm ²)
Power Cord		4 feet
Wash Device	Posterior Wash	Max. 650 cc ± 100 cc
	Feminine Wash	Max. 650 cc ± 100 cc
	Adjustable Water Pressure	5 Levels
	Warm Water Temp	Room Temp - Low, Normal, High
Heated Seat	Temperature	Room Temp - Low, Normal, High
	Heater	1200 W
	Safety Devices	Overheating preventing fuse, Seat heat temperature sensor
Dryer	Temperature	Room Temperature, ~131°F level 1-5
	Heater	250 W
	Safety Devices	Temperature fuse
Dryer		●
Eco Mode		●
Night Light		●
Inlet Water Temperature		41°F ~ 95°F (3°C~ 35°C) (Recommended temp. - 50°F ~ 95°F)
Ambient Temperature		41°F ~ 104°F (3°C~ 40°C) (Recommended temp. - 50°F ~ 95°F)
Dimensions	Elongated	W: 18.11 in / L: 20.47 in / H: 5.31 in
	Round	W:15.43 in / L: 18.9 in / H: 5.71 in
Weight		7.9 lbs (Packaged: 11.4 lbs)

WARRANTY

1 YEAR FULL COVERAGE WARRANTY

Bio Bidet Innovation LLC warrants its product to be free from manufacturing defects under normal use and service for a period of one (1) year from original date of purchase.

This warranty is extended only to the ORIGINAL PURCHASER.

- Bio Bidet Innovation LLC's obligations under this warranty are limited to repair or replacement, at Bio Bidet Innovation LLC's option, of products or parts found to be defective, provided that such products were properly installed and used in accordance with instructions.
- Bio Bidet Innovation LLC reserves the right to make such inspections as may be necessary in order to determine the cause of the defect.
- Bio Bidet Innovation LLC will not charge for labor or parts in connection with warranty repairs done at Bio Bidet Innovation LLC.
- Bio Bidet Innovation LLC is not responsible for the cost of removal, return, initial install, and/or re-installation of products.

This warranty does not apply to the following items:

- Damage or loss sustained in a natural calamity such as fire, earthquake, flood, thunder electrical storm, etc.
- Damage or loss resulting from any unreasonable use, misuse, abuse, negligence, or improper maintenance of the product.
- Damage or loss resulting from removal, improper repair, or modification of the product.
- Damage or loss resulting from sediments or foreign matter contained in a water system.
- Damage or loss resulting from improper installation or from installation of a unit in a harsh and/or hazardous environment.

This warranty gives you specific legal rights. You may have other rights which vary from state to state. To obtain warranty repair service under this warranty, you must take the product or deliver it prepaid to a Bio Bidet Innovation LLC service facility together with a letter stating the problem, or contact a Bio Bidet Innovation LLC distributor or products service contractor, or write directly to Bio Bidet Innovation LLC, 300 Mill St, Sheboygan Falls, WI 53085 or give us a call at 847.458.2334.

This written warranty is the only warranty made by Bio Bidet Innovation LLC. Repair or replacement as provided under this warranty shall be the exclusive remedy available to the purchaser. Bio Bidet Innovation LLC shall not be responsible for loss of the product or for other incidental, special or consequential damages or expenses incurred by the purchaser, or for labor or other costs due to installation or removal, or costs of repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by applicable law, any implied warranties, including that of merchantability or fitness for use, are expressly limited to the duration this warranty. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

Warning - Bio Bidet Innovation LLC shall not be responsible or liable for any failure of, or damage to, this plumbing product or product component caused by either chloramines in the treatment of public water supply or in-tank bowl cleaners containing chlorine (calcium hypochlorite).

Note - The use of high concentration of chlorine or chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

BIO BIDET INNOVATION LLC

7900 S IL Route 31 Crystal Lake IL 60014
T: 847.458.2334
F: 847.854.1296

support@biobidet.com
www.biobidet.com

Notes

[illegible]

THANK YOU!

BIOBIDET[®]
BY BEMIS

Customer Support

T: 847.458.2334

TOLL-FREE: 877.339.5214

7900 S IL Route 31 Crystal Lake, IL 60014

support@biobidet.com

www.biobidet.com

6.12.24