

LicNO

aero Kayak



APEX·PD COMPATIBLE
PEDAL DRIVE


OWNER'S MANUAL

LONO OVERVIEW

The Hawaiian god of tenacity and vigor. BOTE's aptly named entry into the kayak category shouldn't come as a surprise. Utilizing its industry shaping design and engineering, this first-of-its-kind kayak is constructed with BOTE's inflatable AeroBOTE Technology and goes from travel bag to a 12'6" kayak in a matter of minutes. The LONO shares many of our paddle board feature options which allow it to be accessorized and configured to make it your own. Lightweight, easy to store, easy to transport and a blast to paddle!

Now compatible with the APEX•PD (pedal drive).

LONO/FEATURES

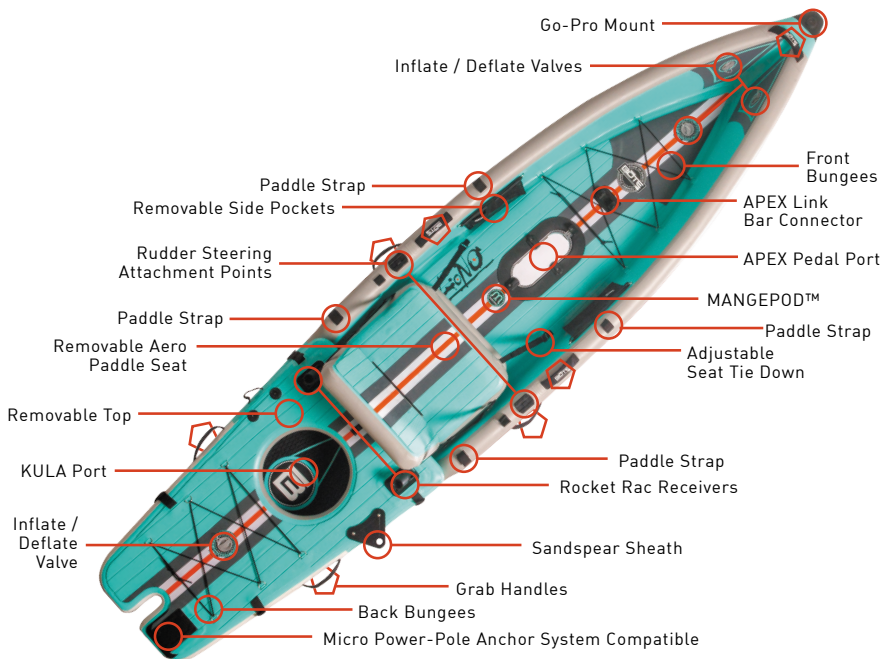

INCLUDED ITEMS

Shown below are the basic components that are included with your LONO Aero kayak.



TRAVEL BAG

This suitcase style travel bag has a padded handle and wheels for ease of transport. The bag also features a front zipper pocket and side straps for convenient accessory storage.



HAND PUMP

This compact, portable high-pressure pump will fill up your inflatables in no time. When you're done, simply connect to the deflate port to remove the air from your inflatable kayak for easy storage.



REPAIR KIT

The repair kit includes a valve wrench and PVC. You can repair small punctures in the AeroBOTE PVC with *adhesive and the included PVC. Use the valve wrench to tighten any loose inflation valves.



RAC RECEIVERS

Simply slide the Rac Receivers into your Rac compatible inflatable kayak, and it's ready for the *sold separately* Rocket Rac.



SANDSPEAR SHEATH

The Sandspear Sheath allows you to utilize BOTE's *sold separately* Sandspear to anchor your kayak so you can stay in place.



APEX PEDAL PORT & COVER

This removable port should be installed using the four g-clips prior to inflation. Cover can be easily removed for addition of *sold separately* APEX Pedal Drive System.



6" CENTER FIN

This hard plastic slide-in fin can be easily added and removed for convenient storage of your inflatable kayak.

**HH-66 or similar adhesive recommended.*


LONO HOW TO

Congratulations on your new LONO Aero Kayak! To get started, first remove the folded LONO, top and seat from the travel bag, unroll, and remove plastic packaging.


Before you begin inflating, install the APEX Pedal Port and Port Cover.

HOW TO SETUP

- 1** Place the black APEX Pedal Port in the port hole located in the front deck of the LONO.
- 2** Be sure the side labeled "front" is facing forward.
- 3** Attach the (4) G-Clips to the attachment points in the port hole. Ensure the G-Clips are fully inserted.
- 4** Attach the clear cover by inserting the front and tightening the twist locks.

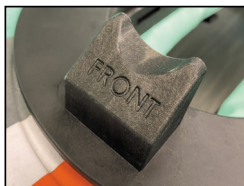

LONO/VALVES

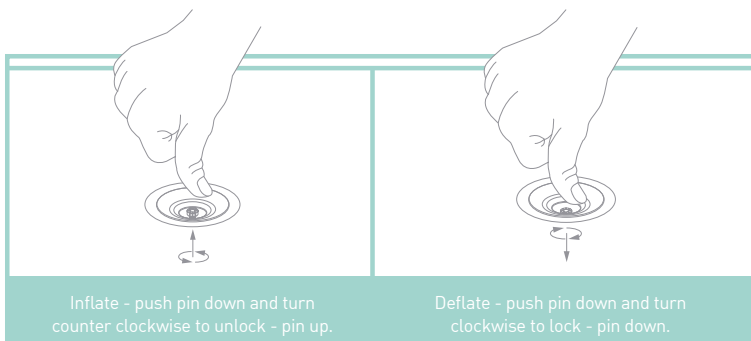

INFLATE/CHAMBERS

Next, locate all inflation valves, attach the pump hose to the valves and fill 'em up.

Each chamber of the LONO Aero is to be filled until the pressure reaches its desired PSI. Please reference images below to locate each chamber.



Chamber 1 - Bottom: 10-15 PSI Max

Chamber 2 - Left Rail: 10-15 PSI Max

Chamber 3 - Right Rail: 10-15 PSI Max

Chamber 4 - Removable Top: 10-15 PSI Max

Chamber 5 - Aero Paddle Seat Bottom: 7-10 PSI Max

Chamber 6 - Aero Paddle Seat Back: 7-10 PSI Max

AERO PADDLE/SEAT

This high pressure, drop stitch, recumbent style seat is fully removable and adjustable to different reclining angles.


HOW TO SETUP

- 1** Inflate seat bottom and seat back to 7-10 PSI
- 2** Slide the seat back into the track on the seat bottom
- 3** Attach the [4] G-Clips to the attachment points on the deck of the LONO Aero Kayak.
- 4** Attach and adjust the back of the seat using the provided [2] G-Clips for comfort. G-clips must be installed from the top down.



REMOVABLE/TOP

The LONO is unlike any other kayak in that it goes from sit down kayak to stand-up paddle board in seconds. Simply unhook the 4 G-Clips that attach the removable top to the LONO's hull. When you're ready to put the top back on, attach your G-Clips to the loops on the side of the LONO's hull, make sure your chair back is attached, and you're ready to paddle.

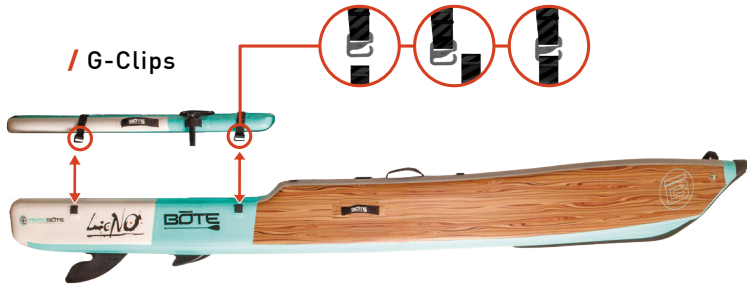

RAC/RECEIVERS

Rac Receivers make it possible for your LONO Aero to be compatible with our exclusive Rocket Rac. Simply slide in the Rac Receivers into the Rac mounting points on your kayak, and it's ready for the Rocket Rac. One pair of Receivers is included with LONO purchase.



LONO/CARE

Always store your LONO in a cool, dry place or shady area out of reach of direct sunlight to avoid bursting or fading of colors. The sun both weakens the material and seams and increases the pressure beyond its design limits. If you must leave your LONO out of the water and in direct sunlight, reduce pressure until the Kayak is compressible by hand.

After use, always rinse your LONO with fresh water and ensure it's fully dry before storing it in the bag.

REPAIR/KIT

You can repair small punctures* with the patches included in the repair kit and HH-66 or similar vinyl cement (not included) **[A]**. Please note that in order for the repair to be successful, the humidity level should be less than 60%, temperature between 65°F/77°F or 18°C/25°C. Avoid carrying out repairs in the rain or in direct sunlight.

1. Draw the shape of the patch exactly where it will be applied, use a round patch from the supplied patch kit at least 2" / 5 cm larger than the cut/damaged area.
2. Clean the damaged area and the corresponding side of the patch with a grease remover of the alcohol type and allow for it to dry for 5 minutes.
3. Apply 3 thin layers of glue on both the patch and the damaged area, allow for it to dry for 5 minutes between layers until the glue feels tacky.
4. When the third layer of glue is dry, apply the patch without pressing and adjust the positioning if required. Press out the air bubbles which may have formed under the patch by smoothing the patch with a round object such as a spoon. Do this procedure by pushing air towards the outside, starting in the center of the patch. Clean the excess glue with a solvent. Drying: 12-24 hours.



HOW TO:
REPAIR INFLATABLE



CAUTION

Perform all of your repairs in a well-ventilated area. Avoid inhaling glue vapors or swallowing.

Avoid contact with skin and eyes. Keep all repair materials (glue, solvents, etc.) away from children's reach.

*Repairs on the seams must not be glued.

LONG/STORAGE



1. When you are finished with the kayak, make sure to clean off any dirt, sand or salt water with fresh water. Then allow the kayak to dry or dry with a towel. Also remove accessories such as the Rac Receivers and Sandspear Sheath. Then remove the top deck and Aero seat.



2. When ready, remove safety cap and push down on the central valve head to release initial air. After approximately 5 seconds, push the valve pin down and twist clockwise to lock air valve open for the remaining air to escape. Remove excess air with the hand pump in deflate mode. Continue to pump until the pump handle cannot be moved.



3. Next, remove the clear Pedal Port Cover. Then, unhook the four g-clips holding the black Pedal Port in place.



4. Begin folding your kayak by folding each side of the kayak inward toward the center of the deck.



5. Next, fold the nose of the kayak inward like a flag. The crease should be around the "B" logo.



6. Fold the tail of the kayak inward right after the sidebite fins.

LONG/STORAGE



7. Next, fold the tail in again right before the center fin box.



8. Fold the tail end over again so it sits on top of the nose of the kayak.



9. Next, place the folded base of the kayak into the travel bag. Move it as close to the base of the bag as possible to allow extra space at top for top.



10. Fold the top of the kayak and place in the empty space at the top of the travel bag. Place the deflated seat on top of the folded base. Add any accessories to the pocket on the outside of the bag.

Now you're ready to roll!

LONO *CONFIGURATIONS*

PEDAL/DRIVE

With the sold separately APEX Pedal Drive System installed, the LONO easily becomes a fast, efficient watercraft. Pedal and navigate from your seat – no paddling required.



SEATED/PADDLE

The LONO was designed to be a sit down kayak. As such, center yourself on the seat, adjust chair back as needed and paddle it as you would any other kayak.



STAND UP/PADDLE

When the top and chair back are removed, the LONO becomes a fully functioning stand-up paddle kayak.



LONO ACCESSORIES

Shown below are the recommended accessories to deck out your LONO Aero kayak.



AERO PUMP

Want your kayak inflated faster? The Aero Pump is a high pressure 12 volt electric stand up paddle board pump. The AeroPump comes with a car plug as well as battery clamps so you can inflate/deflate your board on the go.



APEX PEDAL DRIVE SYSTEM

The APEX Pedal Drive is a hands-free instant forward and reverse pedal power system. It has a 10:1 gear ratio and low maintenance, sealed bearing and gear design. Included in the kit is a wide pedal platform, foot straps, a clear viewing window to see propeller function, and a steering rudder system.



ROCKET RAC

Designed for the LONO, simply insert it into the Rac Receivers behind the LONO's adjustable seat and you'll have storage for up to four rods. Use the upright holders for getting around and the angled holders for trolling.



KAYAK PADDLE

The perfect compliment to your kayak is our 5-piece adjustable kayak paddle. Adjustable from 235cm to 260cm and the 5-piece construction allows this paddle to be just as portable as the kayaks.



KULA 5 COOLER

The KULA cooler combines the best parts of a cooler with a five-gallon bucket. The KULA cooler is a tool for your life. Use it as a cooler, bait well, cast net holder, equipment storage, or just about anything that you can do with a five-gallon bucket.



INFLATABLE VEST PFD

Lightweight, low-profile design with a soft neckline for all-day comfort. This life jacket can be set to manually pull or automatically inflate when you hit the water. Providing you safety and peace of mind while on the water kayaking.

LONO WARRANTY

BOTE® makes every effort to produce our kayaks to the highest quality and standards in the industry. We do quality checks in our factories and warehouses in an effort to guarantee each kayak's quality before shipping to Authorized BOTE Dealers or directly to the customer. Because of the nature of kayaking, we cannot warranty the performance of any kayak for individual riders and varying levels of skills and abilities. Furthermore, we cannot guarantee against damage or breakage and cannot protect or warranty against circumstances outside of our control.

WARRANTY REGISTRATION REQUIRED

The warranty registration form should be completed online within 30 days of original purchase to be activated. You should keep your sales receipt should it be required in the future for proof of purchase. The online Warranty Registration Form can be found at www.boteboard.com/support/warranty or by scanning the code.

2 YEAR LIMITED WARRANTY

For the original retail purchaser ("Consumer"), BOTE® provides a limited 2-year warranty from date of purchase against material or manufacturing defects in the hull and deck for a registered product.



WARRANTY REGISTRATION

Scan the code for more information.

LIMITATIONS AND EXCLUSIONS

This limited warranty does not apply to the following. Please visit www.boteboard.com/support/warranty for the complete list of limitations and exclusions.

- Normal wear and tear and aging of product.
- LONO Aero damaged while in possession of a freight carrier, a dealer, Consumer, or any party other than BOTE®.
- LONO Aero sold as "demos" or in "as is" condition.
- Cosmetic flaws or colors may vary from those shown. Cosmetic flaws or variations in color are not covered by warranty.
- Does not cover any puncture, cut or abrasion sustained in normal use or damage from unreasonable uses or improper storage.

OBTAINING WARRANTY SERVICE

If you have a problem with your LONO Aero Kayak and you suspect that it may be due to defective materials or workmanship, contact the dealer you purchased your BOTE from and arrange to have the problem inspected. Consumer is responsible for delivery to, and pickup from, the closest authorized dealer.

If you purchased the product directly from BOTE® or a BOTE® Retail Store, complete the online warranty claim form and await further instruction. Please visit www.boteboard.com/support/warranty to read the complete BOTE Warranty before using your new LONO Aero Kayak.



WE'RE HERE TO HELP



If you have any questions, please email us at
support@boteboard.com

WARNING

Use of this product and participation in this activity involves inherent risks of injury or death

- Always wear a USCG approved TYPE III (PFD) Vest
- Never use in conditions that exceed the skill of the participant
- This watercraft IS NOT a personal flotation device
- This watercraft should never be used by children without adult supervision
- Avoid sharp objects that could puncture the watercraft
- Watercraft is inflatable; if there is a significant puncture or blowout, it will lose buoyancy and all ability to keep rider afloat.
- Never use or operate watercraft under the influence of alcohol or drugs
- Never use the watercraft if it is determined to have a leak
- Avoid impacts with floating objects or fixed structures



BOTEBOARD.COM

888.855.4450 | support@boteboard.com

12598 US Highway 98 W, Suite 200 | Miramar Beach, FL 32550 USA

PATENT PENDING