



Parts Manual


Mfg. No: 100602-0118-B8

Model Components	Page
Air Cleaner, Fuel Supply, Lubrication.	4
Alternator, Brake, Controls, Governor Spring, Ignition.	6
Blower Housing, Exhaust System, Flywheel, Rewind Starter.	8
Cam Gear, Crankcase Cover/Sump, Crankshaft, Cylinder, Cylinder Head, Piston/Rings/Connecting Rod.	10
Carburetor, Carburetor Overhaul Kit.	14
Electric Starter/Gasket Sets.	18
Replacement Engine - US & Canada.	20

Not For
Reproduction


Air Cleaner, Fuel Supply, Lubrication

REF NO	PART NO	QTY	DESCRIPTION
11	793447		TUBE, Breather
51	692555		GASKET, Intake -(2 Required)
163	691894		GASKET, Air Cleaner -(Air Cleaner)
187	791766		LINE, Fuel -(Cut To Required Length)
425	793460		SCREW -(Air Cleaner Cover)
445	792038		FILTER, A/C Cartridge
523	793475		DIPSTICK
524	793476		SEAL, O-Ring -(Dipstick Tube)
525	793477		TUBE, Dipstick
535	793676		FILTER, Air Cleaner Foam
601	791850		CLAMP, Hose
670	793485		SPACER, Fuel Tank
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	793474		DIPSTICK/TUBE ASSEMBLY
875	793462		BASE, Air Cleaner
875A	-----		Base-Air Cleaner -(No Longer Available)(For Replacement, Order Reference 875)
957	692046		CAP, Fuel Tank -(Standard Cap)
957A	796577		CAP-FUEL TANK -(Tethered Cap)
958	698183		VALVE, Fuel Shut Off
968	793428		COVER, Air Cleaner
968A	793432		COVER, Air Cleaner
968B	793532		COVER, Air Cleaner
971	591307		SCREW -(Air Cleaner Base to Carburetor/Throttle Body)
972	793472		TANK, Fuel -(Standard Cap)
972A	799291		TANK, Fuel -(Tethered Cap)
1059	793471		KIT, Screw/Washer -(Fuel Tank)

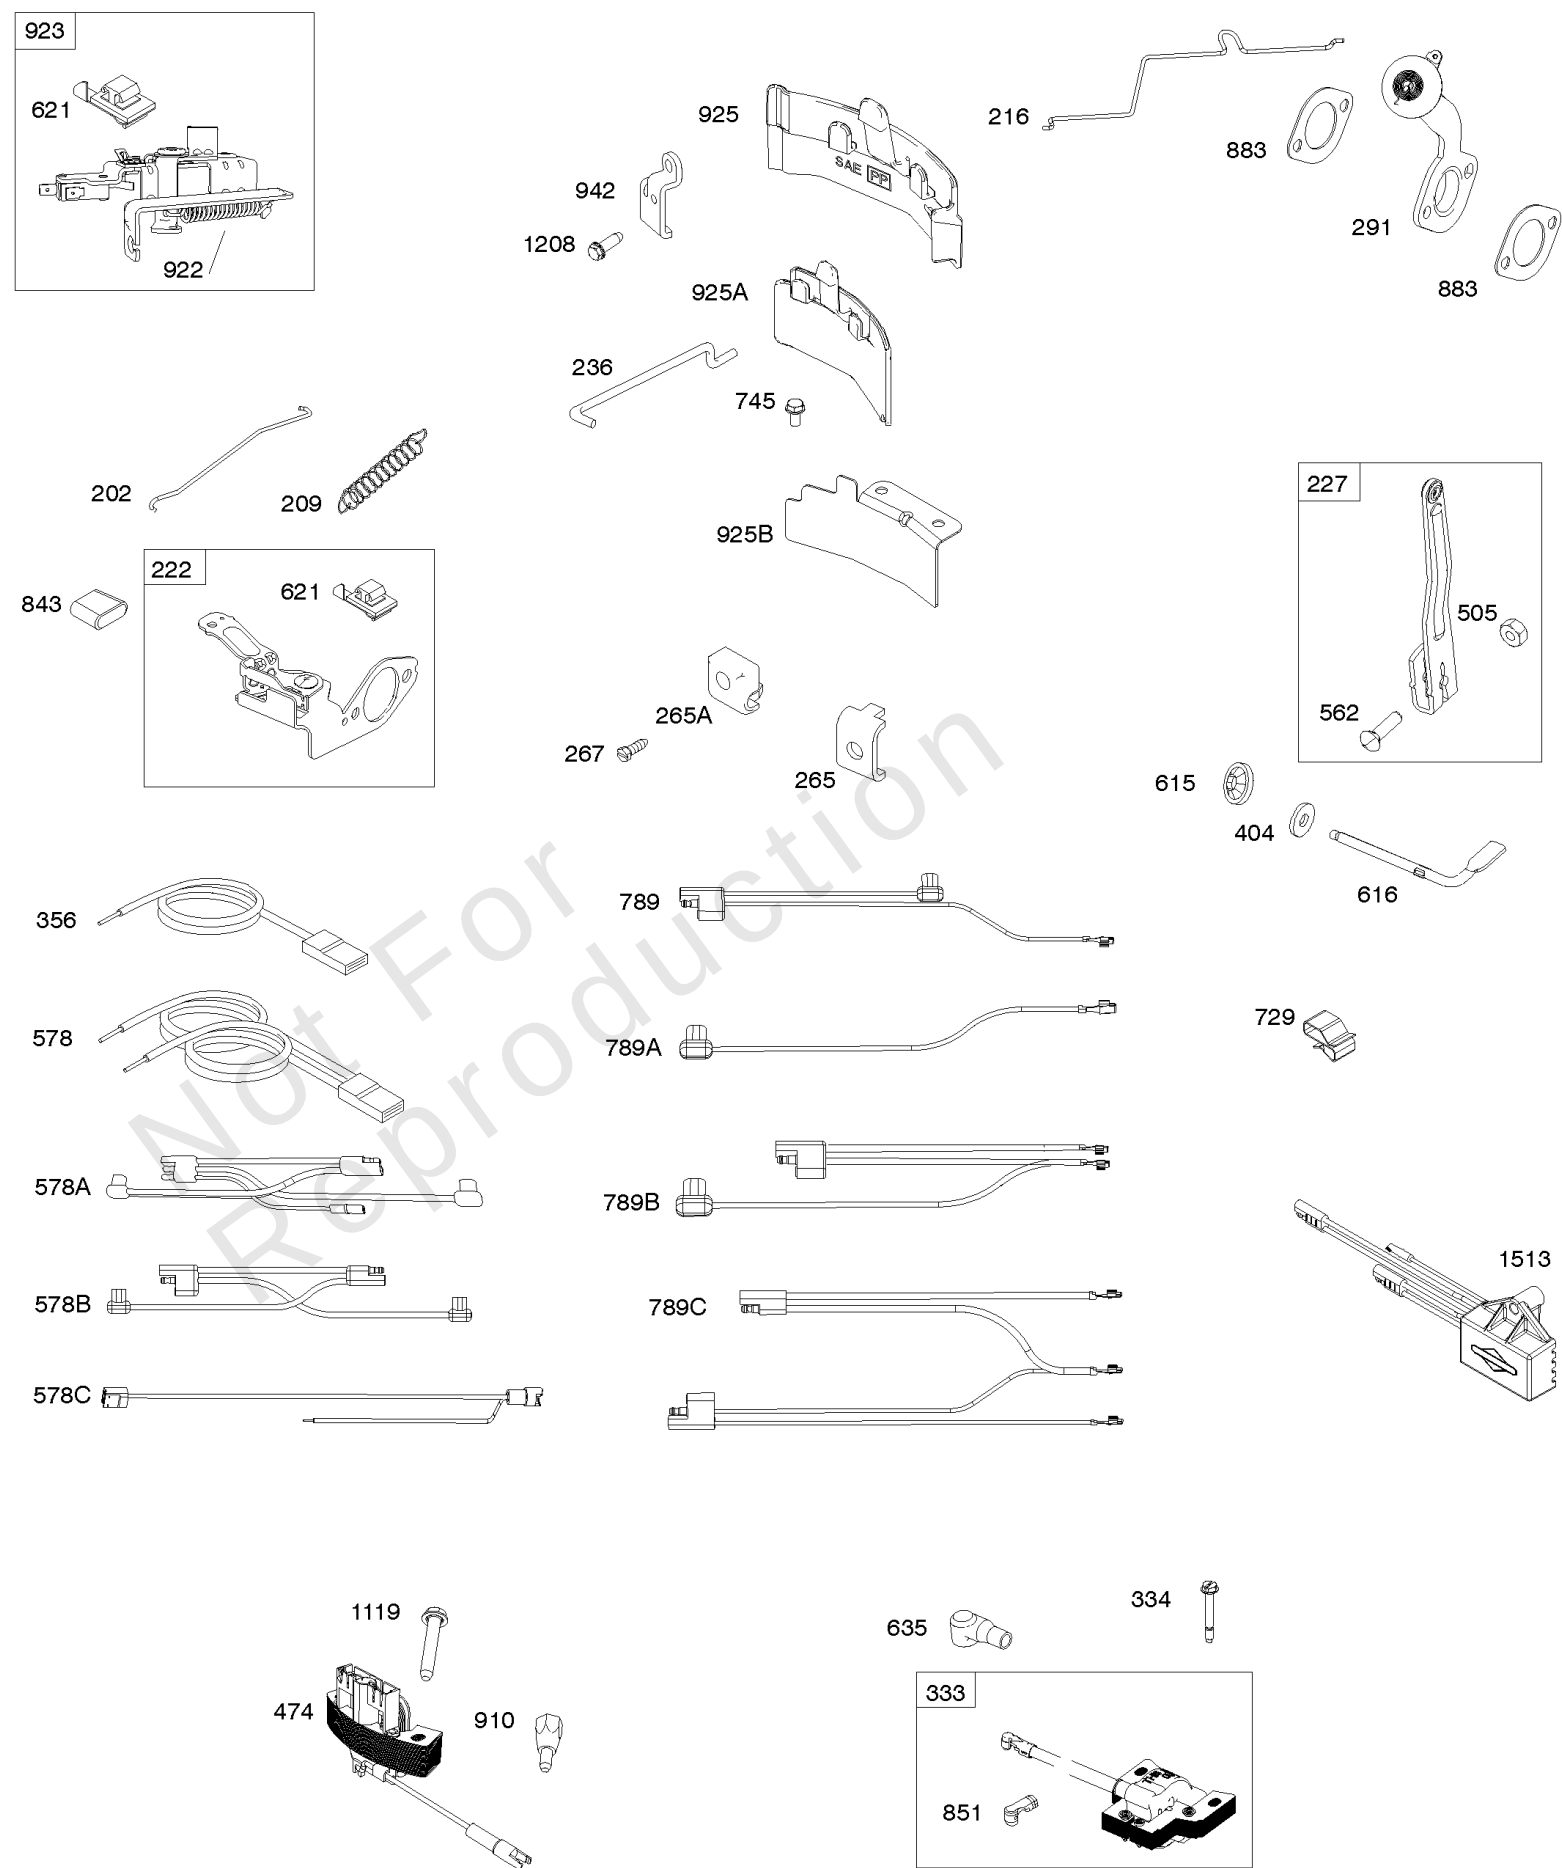


Alternator, Brake, Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
202	793433		LINK, Mechanical Governor
209	793430		SPRING, Governor
216	793494		LINK, Choke
222	793487		BRACKET, Control
227	793516		LEVER, Governor Control
265	691024		CLAMP, Casing
265A	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
291	793498		THERMOSTAT
333	592445		ARMATURE, Magneto
334	793454		SCREW -(Magneto Armature)
356	692390		WIRE, Stop
404	690272		WASHER -(Governor Crank)
474	794103		ALTERNATOR
505	793515		NUT -(Governor Control Lever)
562	793514		BOLT -(Governor Lever)
578	398153		WIRE ASSEMBLY
578A	794104		WIRE ASSEMBLY
578C	594198		WIRE, Stop
578B	796980		WIRE ASSEMBLY
615	690340		RETAINER, Governor Shaft
616	793448		CRANK, Governor
621	692310		SWITCH, Stop
635	66538S		BOOT, Spark PLug
729	799133		CLIP, Wire
745	793491		SCREW -(Brake)
789	593995		HARNESS, Wiring
789A	593996		HARNESS, Wiring
789B	593997		HARNESS, Wiring
789C	595412		HARNESS, Wiring
843	691884		SLEEVE, Lever
851	493880S		TERMINAL, Spark Plug
883	793497		GASKET, Exhaust
910	794101		STUD -(Alternator)
922	692135		SPRING, Brake
923	796635		BRAKE
925	793678		COVER, Linkage
925A	796979		COVER, Linkage
925B	595409		COVER, Linkage
942	793673		BRACKET, Brake
1119	794100		SCREW -(Alternator)
1208	699776		SCREW -(Brake Bracket)
1513	593994		MODULE, Starter -(Instart)

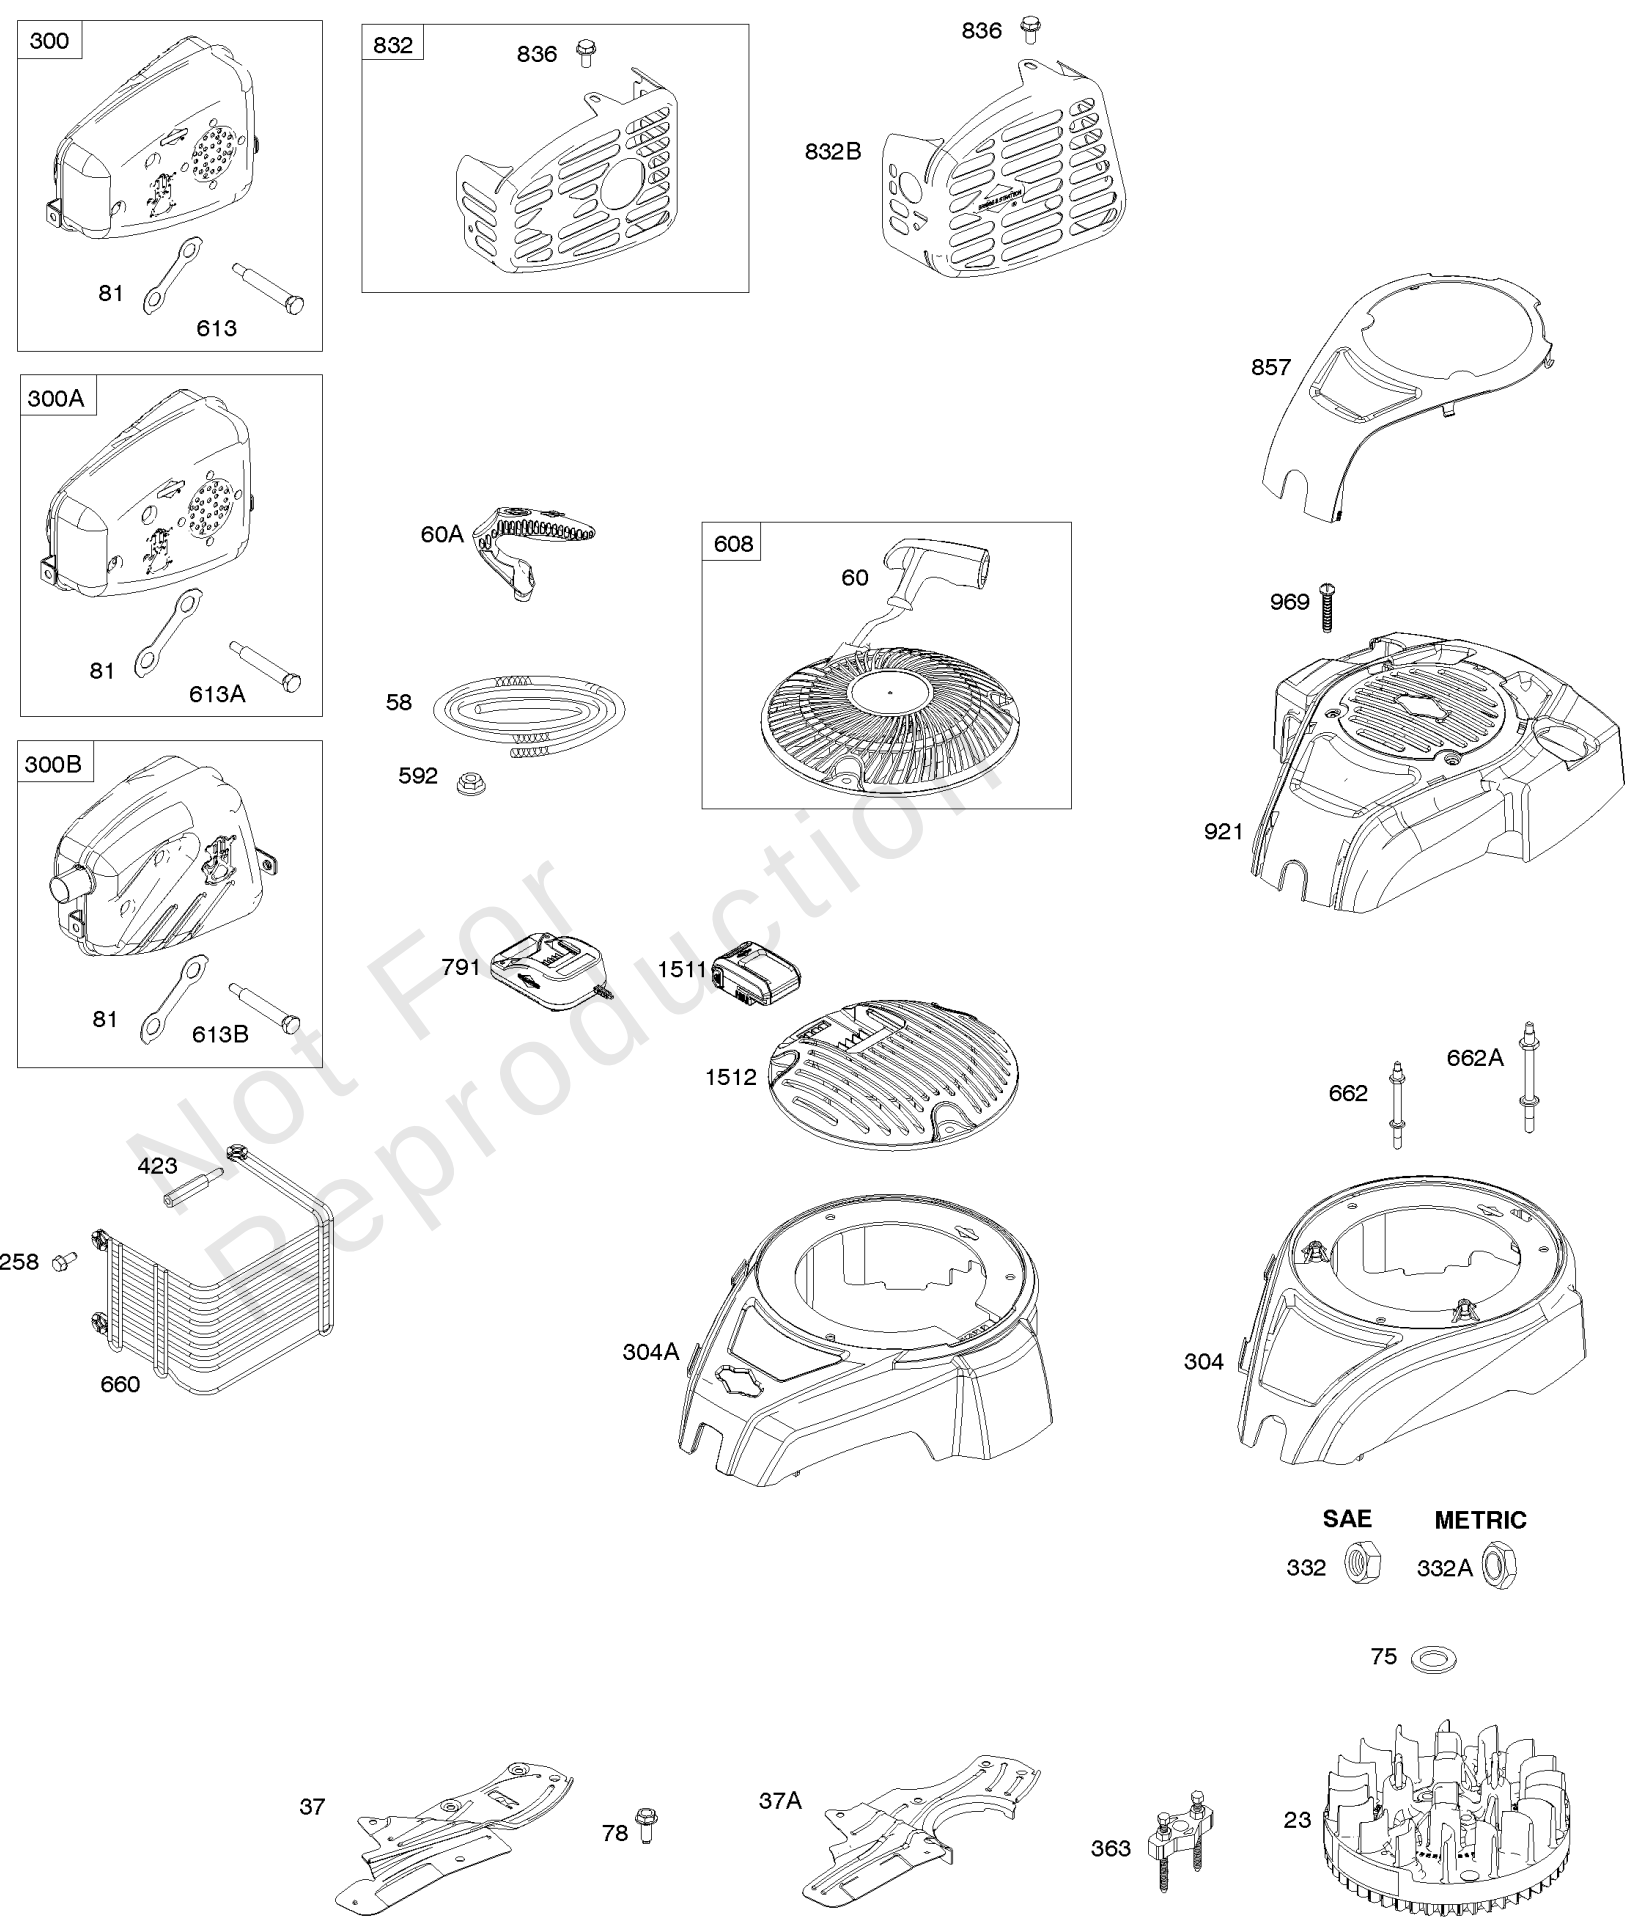

Blower Housing, Exhaust System, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	793682		FLYWHEEL
37	793473		GUARD, Flywheel
37A	794106		GUARD, Flywheel
58	697316		ROPE, Starter -(88 5/8)
60	281434S		GRIP, Starter Rope -(Standard Grip)
60A	799716		GRIP, Starter Rope -(Ergonomic Grip)
75	691736		WASHER -(Flywheel)
78	793480		SCREW -(Flywheel Guard)
81	691740		LOCK, Muffler Screw
258	699481		SCREW -(Control Guard)
300B	793679		MUFFLER
304	793486		HOUSING, Blower -(Rewind Start)
304	794105		HOUSING, Blower -(Electric Start)
332	690662		NUT -(Flywheel) (SAE)
332A	591988		NUT -(Flywheel) (Metric)
363	19069		PULLER, Flywheel
423	592511		STUD -(Control Guard)
592	793481		NUT -(Rewind Starter)
608	593958		STARTER, Rewind -(Do Not Use With Instart Engines)
613	793469		SCREW -(Muffler)
613A	793495		SCREW -(Muffler)
613B	793680		SCREW -(Muffler)
660	592446		GUARD, Control
662	793478		STUD -(Rewind Starter)
662A	793479		STUD -(Rewind Starter)
791	593576		CHARGER, Battery -(Instart)(United Kingdom)
791	593562		CHARGER, Battery -(Instart)(Europe)
832	793499		GUARD, Muffler
832B	793681		GUARD, Muffler
836	793500		SCREW -(Muffler Guard)
857	793533		TRIM, Blower Housing Cover
921	793531		HOUSING, Blower
969	690700		SCREW -(Blower Housing)
1511	593560		BATTERY -(InStart)(Europe/Australia/Japan)
1512	593993		SCREEN -(Instart)

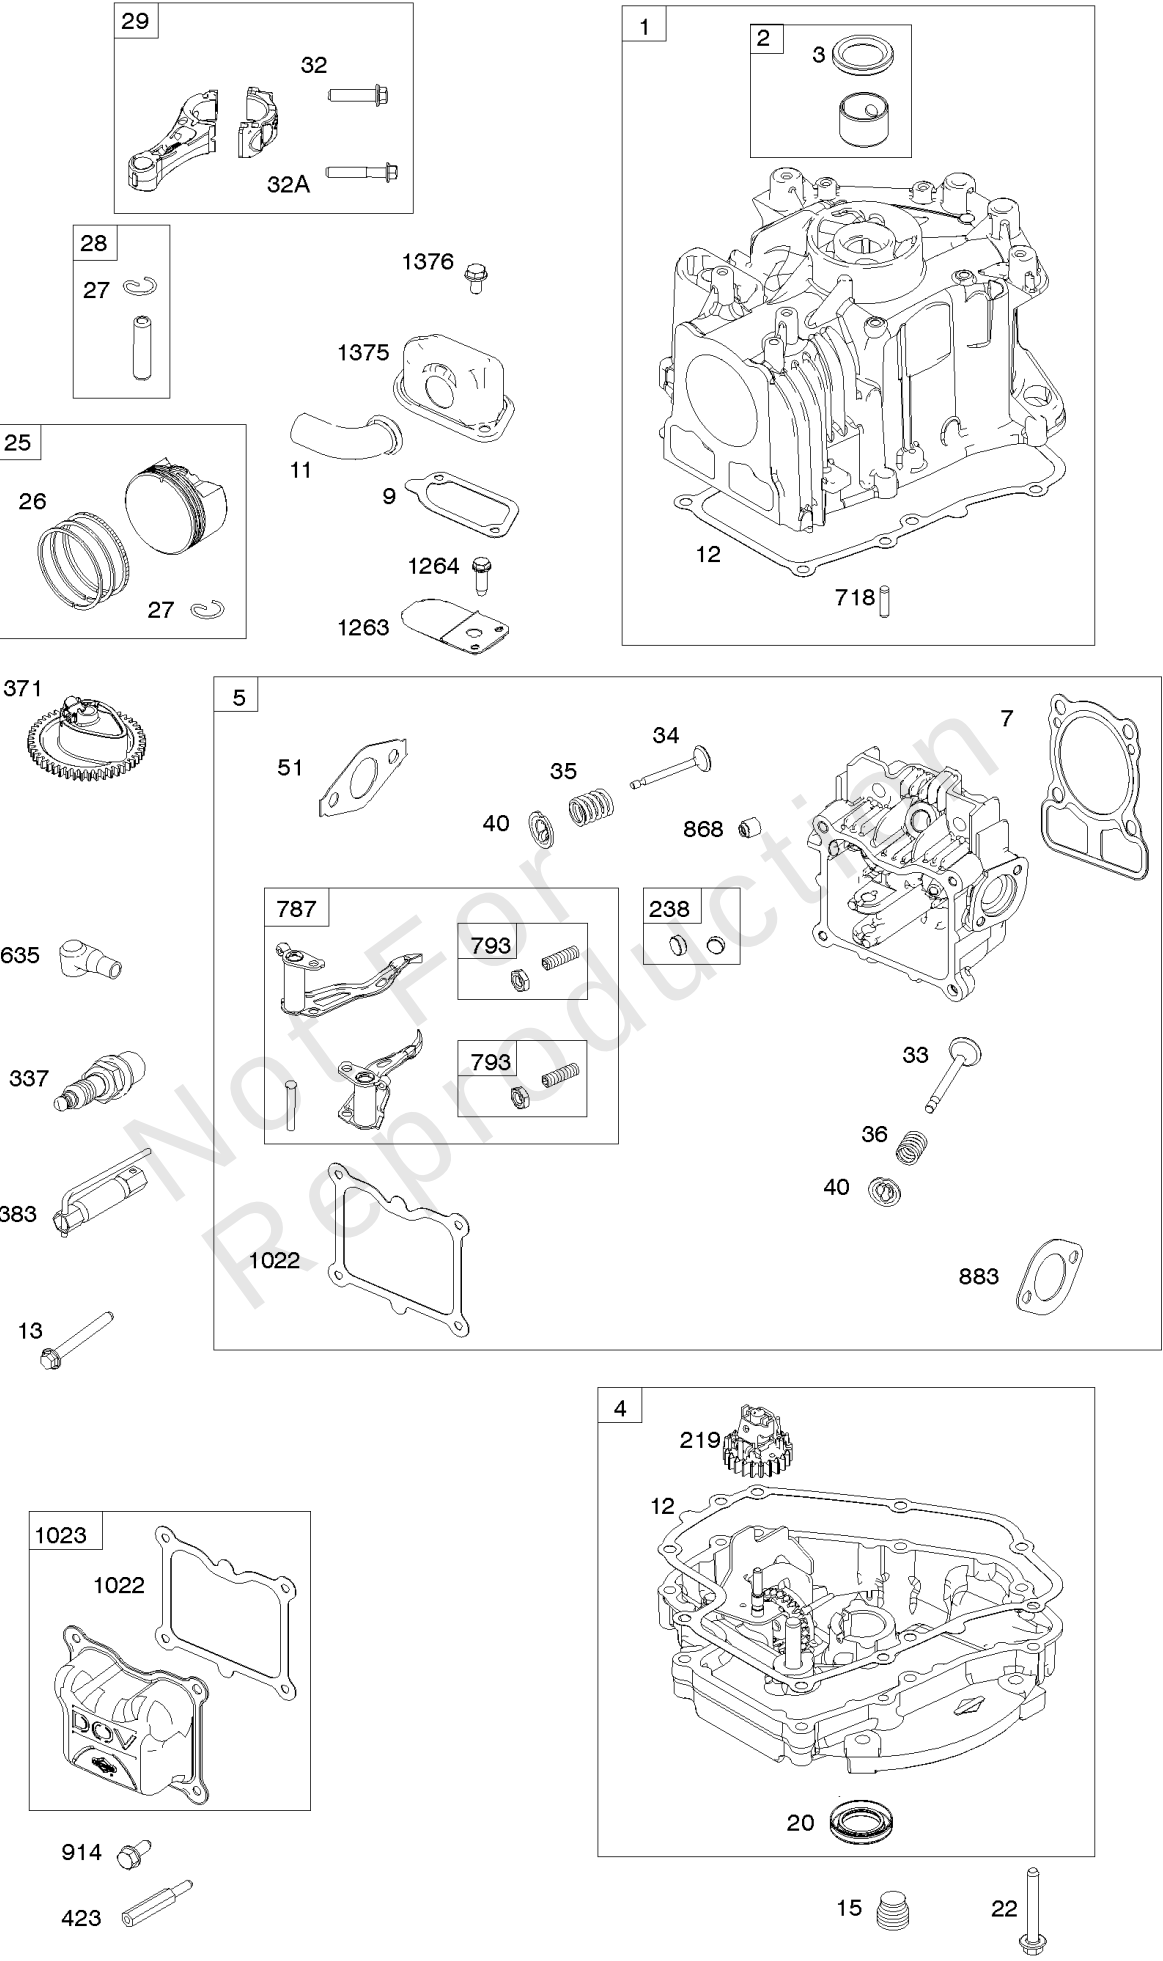

1319 WARNING LABEL

WARNING

Read and follow Operating Instructions before running engine.

Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide, DO NOT run in enclosed area.

Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL


REQUIRED when replacing parts with warning labels affixed.

1330 REPAIR MANUAL

1036 EMISSIONS LABEL

Cam Gear, Crankcase Cover/Sump, Crankshaft, Cylinder, Cylinder Head, Piston/Rings/

REF NO	PART NO	QTY	DESCRIPTION
1	84004558		CYLINDER ASSEMBLY -Used Before Code Date 19021500
1	84004557		CYLINDER ASSEMBLY -Used After Code Date 19021400
2	796961		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	793509		SUMP, Engine
5	592536		HEAD, Cylinder
7	793455		GASKET, Cylinder Head
9	793439		GASKET, Breather
11	793447		TUBE, Breather
12	793445		GASKET, Crankcase -(.015)(Standard)
13	793451		SCREW -(Cylinder Head)
15	691680		PLUG, Oil Drain
16	793615		CRANKSHAFT
20	399781S		SEAL, Oil -(PTO Side)
22	793450		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	793519		PISTON ASSEMBLY -(Standard)
25	793518		PISTON ASSEMBLY -(.020 Oversize)
26	793517		SET, Ring -(.020 Oversize)
26	793435		SET, Ring -(Standard)
27	691588		LOCK, Piston Pin
28	298909		PIN, Piston -(Standard)
29	793510		ROD, Connecting
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod)
33	793505		VALVE, Exhaust
34	793504		VALVE, Intake
35	793506		SPRING, Valve -(Intake)
36	793506		SPRING, Valve -(Exhaust)
40	793503		RETAINER, Valve
51	692555		GASKET, Intake -(2 Required)
75	691736		WASHER -(Flywheel)
219	793512		GEAR, Governor
238	793535		CAP, Valve
332	690662		NUT -(Flywheel) (SAE)
337	692720		PLUG, Spark -(EMS)

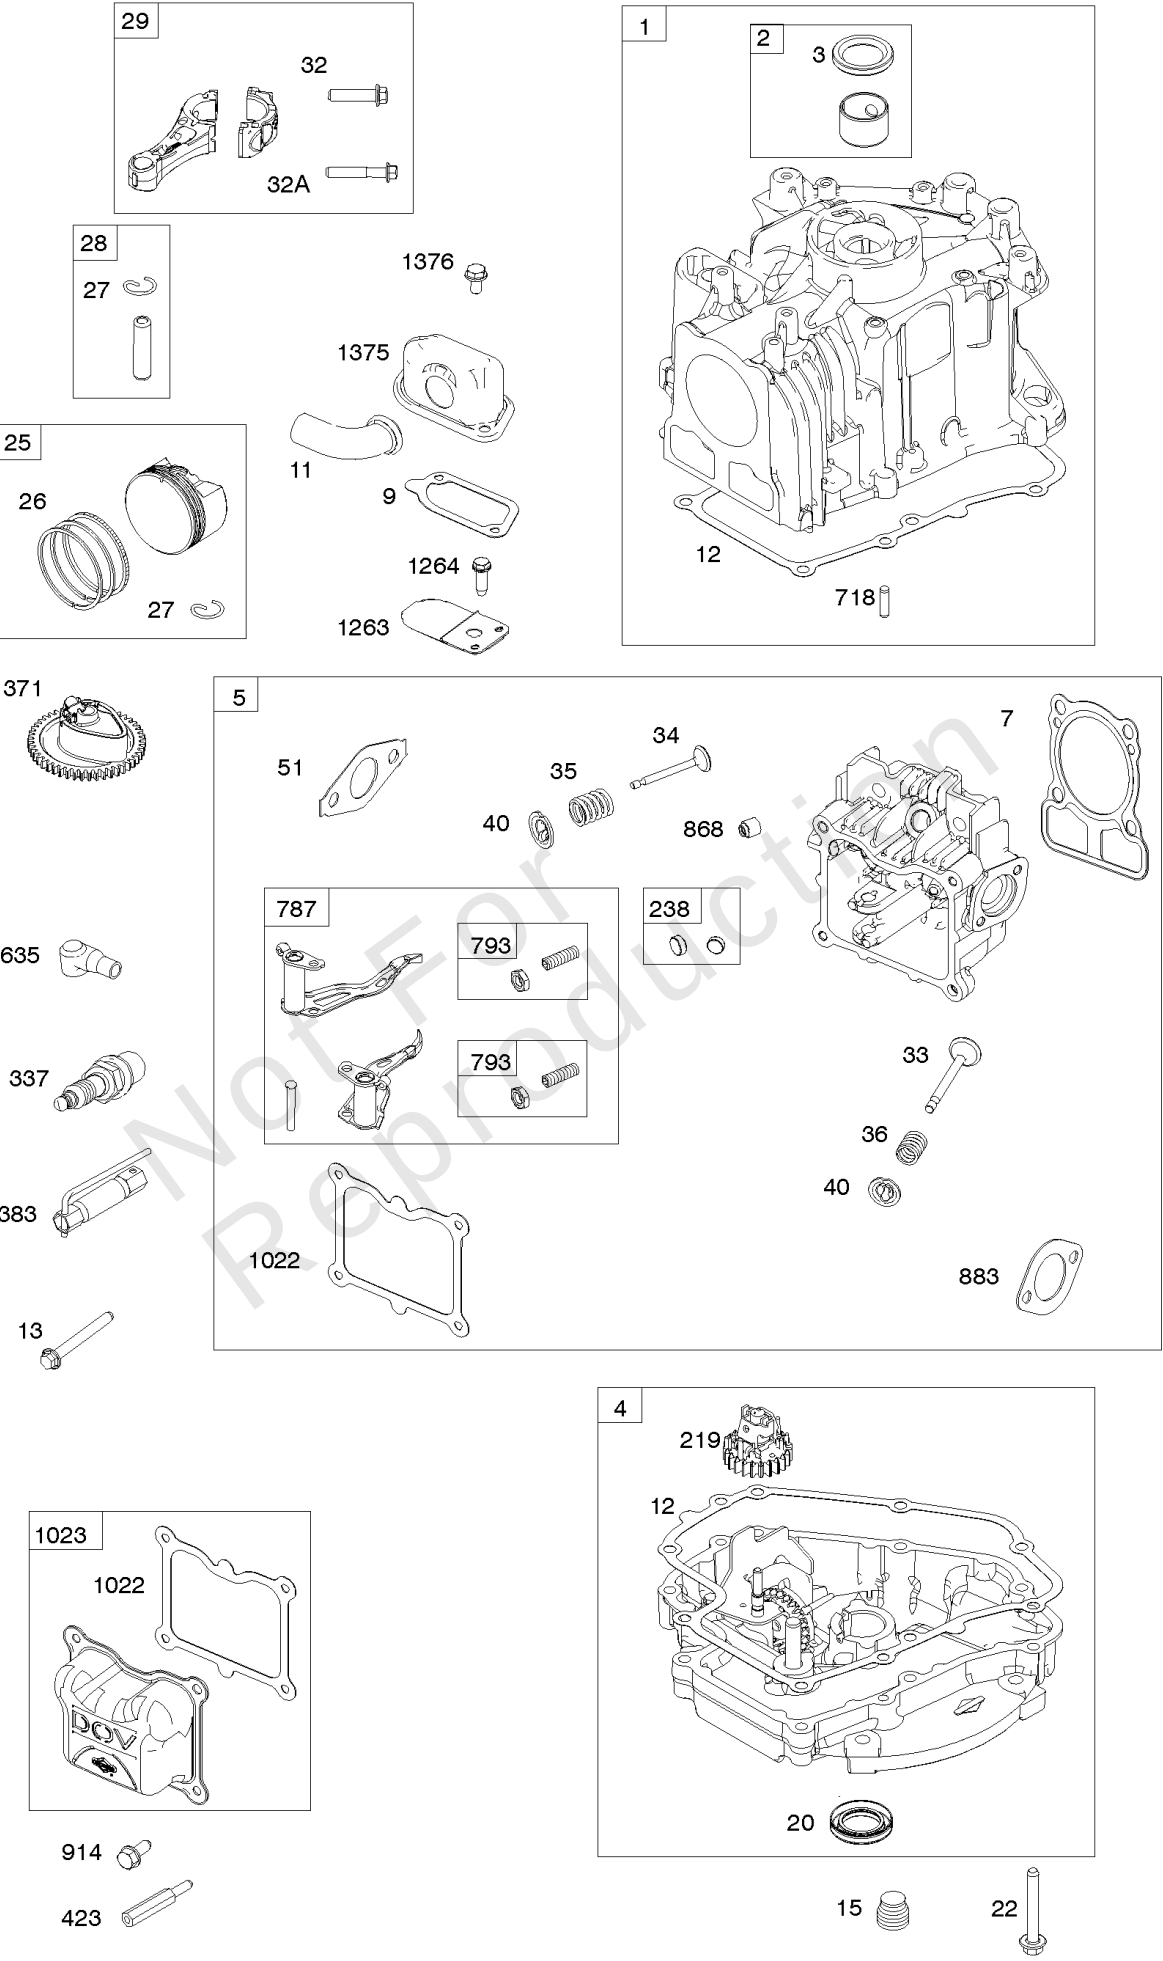

1319 WARNING LABEL

WARNING

Read and follow Operating Instructions before running engine.

Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide, DO NOT run in enclosed area.

Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL

WARNING

REQUIRED when replacing parts with warning labels affixed.

1330 REPAIR MANUAL

1036 EMISSIONS LABEL

16

SAE

332

75






24

741

598






Cam Gear, Crankcase Cover/Sump, Crankshaft, Cylinder, Cylinder Head, Piston/Rings/

REF NO	PART NO	QTY	DESCRIPTION
371	794574		GEAR, Cam
383	19576S		WRENCH, Spark Plug
423	592511		STUD -(Control Guard)
598	592587		SHIM, End Play -(Crankshaft or Camshaft Bearing)
635	66538S		BOOT, Spark PLug
718	690959		PIN, Locating -(Cylinder)
741	793446		GEAR, Timing
787	793513		ARM, Lever
793	793511		SET, Screw/Nut
868	793507		SEAL, Valve
883	793497		GASKET, Exhaust
914	794451		SCREW -(Rocker Cover)
1022	793437		GASKET, Rocker Cover
1023	793436		COVER, Rocker
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1263	697124		REED, Breather
1264	793453		SCREW -(Breather Reed)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1330	277527		MANUAL, Repair
1375	793442		COVER, Breather Reed
1376	699851		SCREW -(Breather Reed Cover)

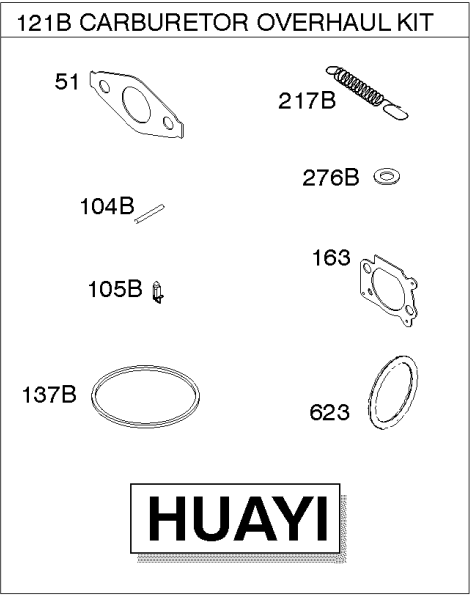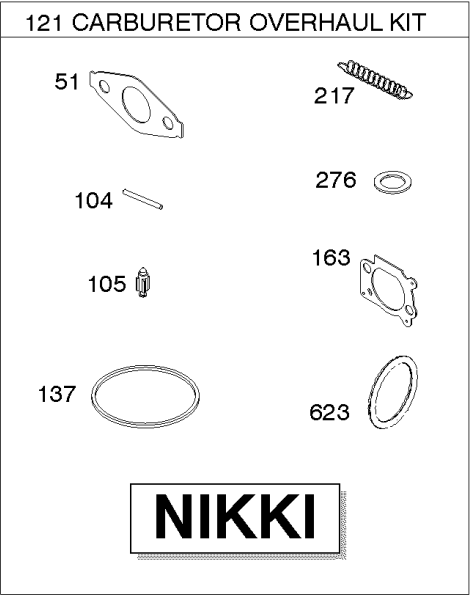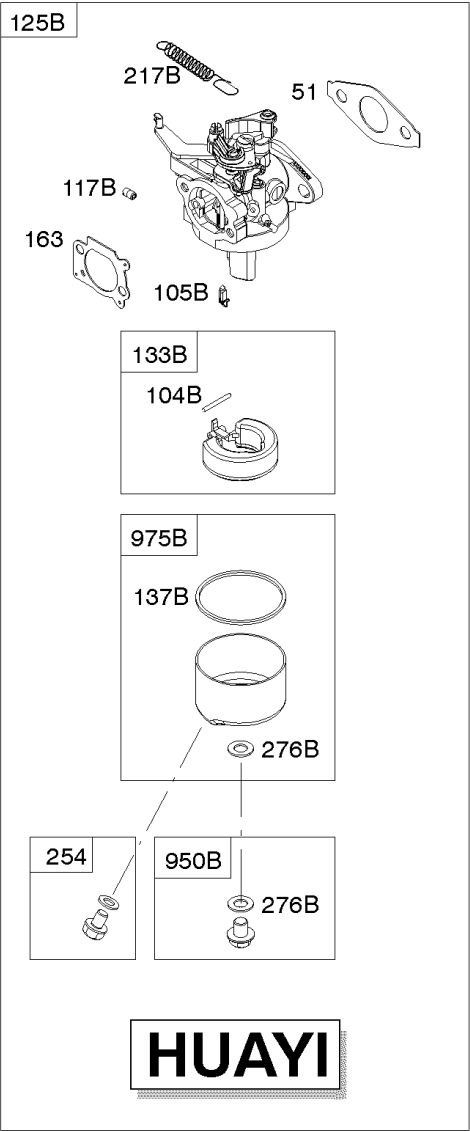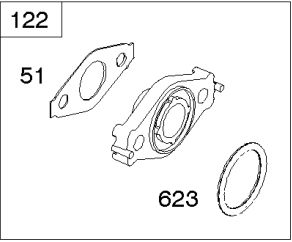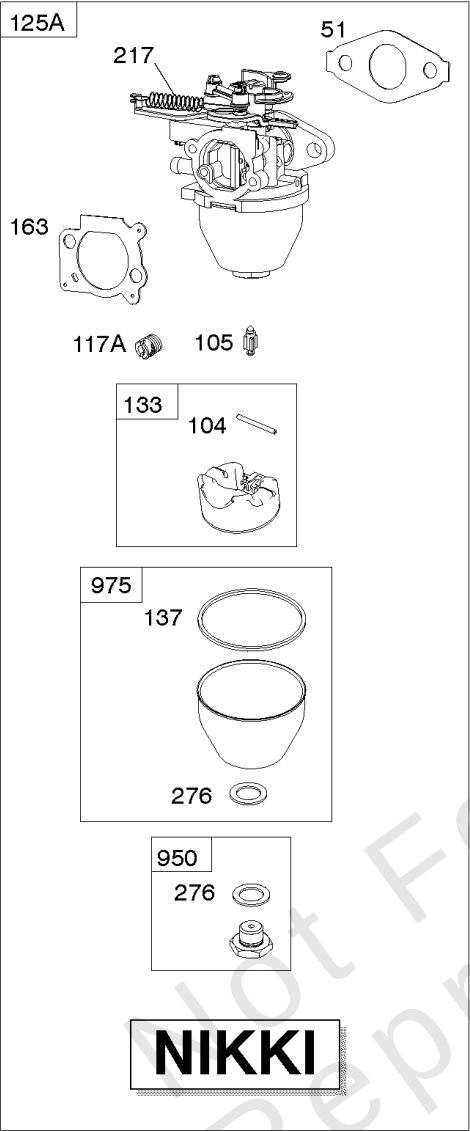

Carburetor, Carburetor Overhaul Kit





REF NO	PART NO	QTY	DESCRIPTION
51	692555		GASKET, Intake -(2 Required)
104	698536		PIN, Float Hinge -Used Before Code Date 12111900
104B	592486		PIN, Float Hinge -Used After Code Date 12111800
105	698537		VALVE, Float Needle -Used Before Code Date 12111900
105B	592491		VALVE, Float Needle -Used After Code Date 12111800
117A	793694		JET, Main -(Standard) -Used Before Code Date 12111900
117B	592490		JET, Main -(Standard) -Used After Code Date 12111800
118A	793695		JET, Main -(High Altitude) -Used Before Code Date 12111900
118B	592142		JET, Main -(High Altitude) -Used After Code Date 12111800
121	793622		KIT, Carburetor Overhaul
121B	592483		KIT, Carburetor Overhaul
122	793456		SPACER, Carburetor
125A	793493		CARBURETOR -Used Before Code Date 12111900
125B	595509		CARBURETOR -Used After Code Date 12111800
133	698539		FLOAT, Carburetor -Used Before Code Date 12111900
133B	592487		FLOAT, Carburetor -Used After Code Date 12111800
137	698538		GASKET, Float Bowl -Used Before Code Date 12111900
137B	592485		GASKET, Float Bowl -Used After Code Date 12111800
163	691894		GASKET, Air Cleaner -(Air Cleaner)
217	797864		SPRING, Choke Return -Used Before Code Date 12111900
217B	592484		SPRING, Choke Return -Used After Code Date 12111800
254	592493		DRAIN, Carburetor Bowl -Used After Code Date 12111800
276	793627		WASHER, Sealing -Used Before Code Date 12111900
276B	592489		WASHER, Sealing -Used After Code Date 12111800
365	793458		SCREW -(Carburetor)
623	793628		SEAL, O-Ring -(Carburetor Spacer)
950	793465		SCREW -(Float Bowl) -Used Before Code Date 12111900
950B	592488		SCREW -(Float Bowl) -Used After Code Date 12111800
975	793464		BOWL, Float -Used Before Code Date 12111900

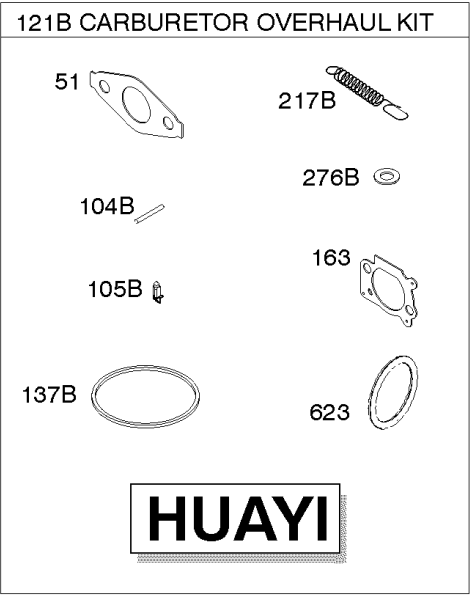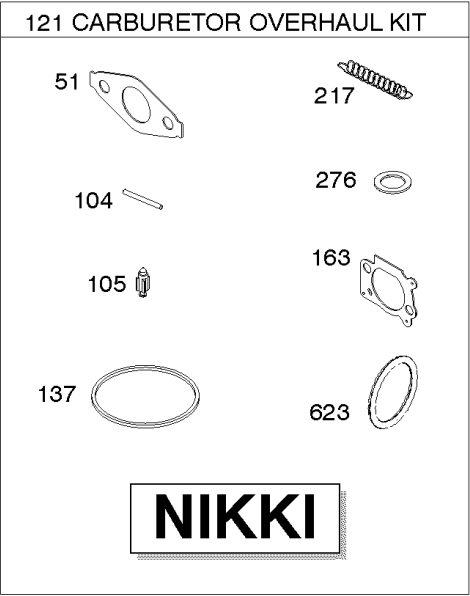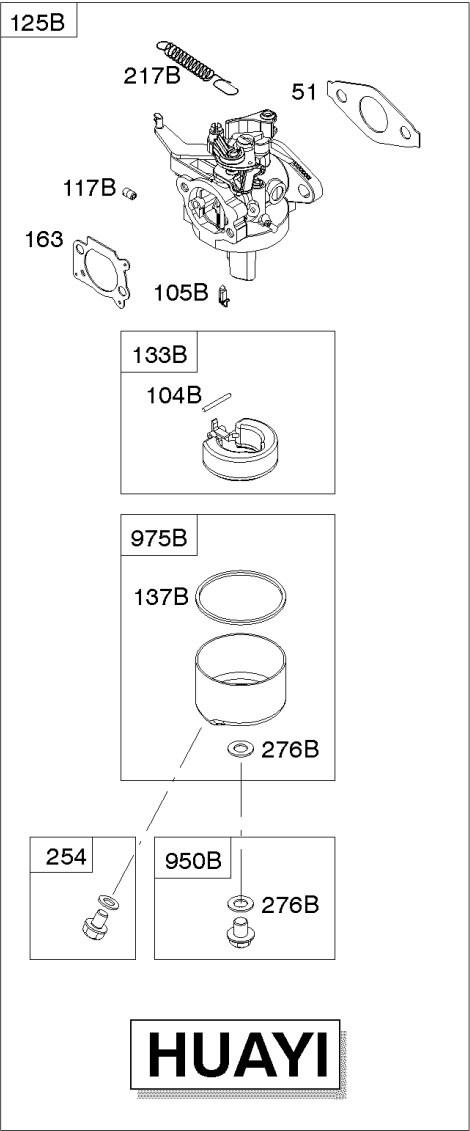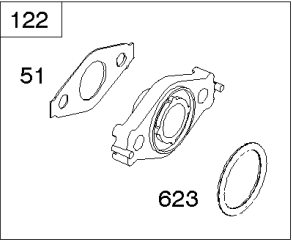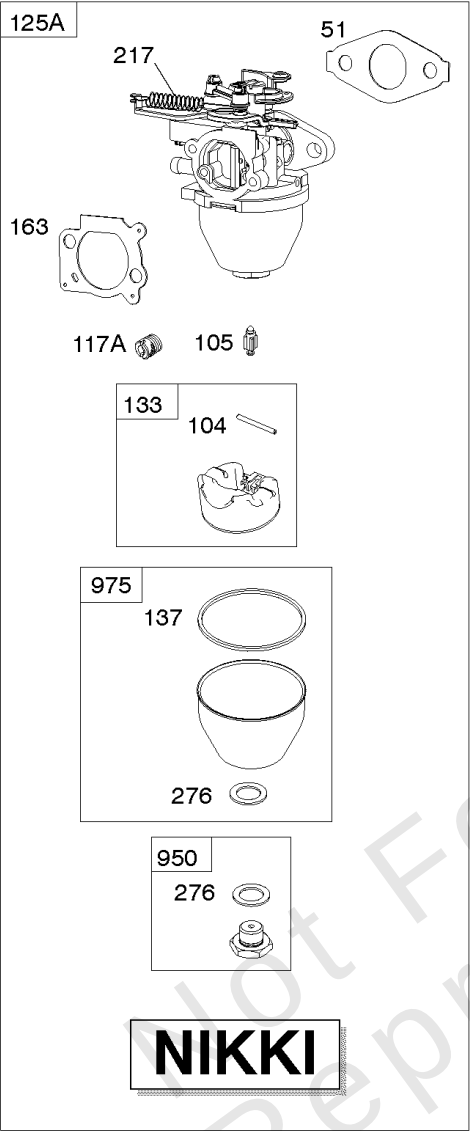

Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
975B	592492		BOWL, Float -Used After Code Date 12111800

Not For Reproduction

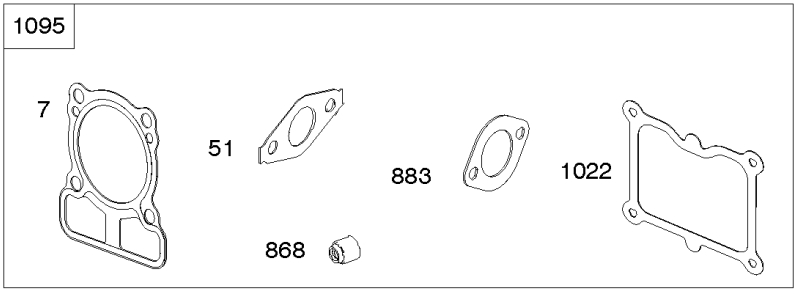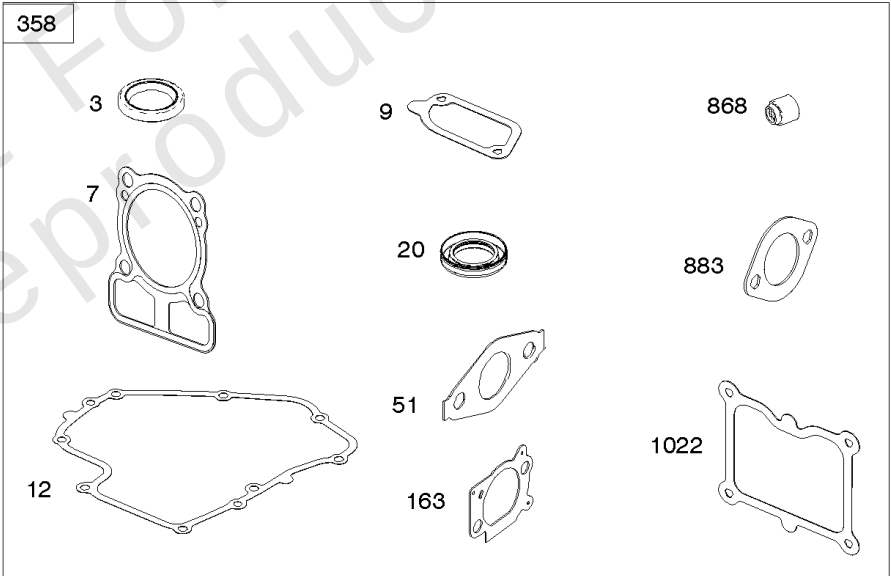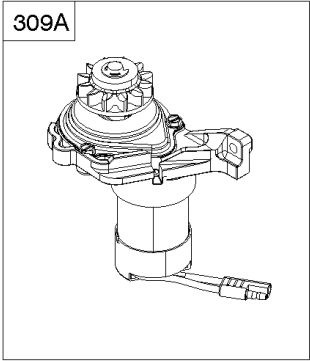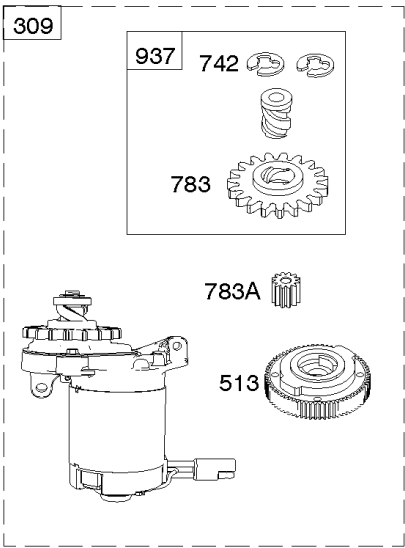

Electric Starter/Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
7	793455		GASKET, Cylinder Head
9	793439		GASKET, Breather
12	793445		GASKET, Crankcase -(.015)(Standard)
20	399781S		SEAL, Oil -(PTO Side)
51	692555		GASKET, Intake -(2 Required)
163	691894		GASKET, Air Cleaner -(Air Cleaner)
309A	84004559		MOTOR, Starter -Used Before Code Date 19021500
309A	84004560		MOTOR, Starter -Used After Code Date 19021400
358	793623		GASKET SET, Engine
513	795100		CLUTCH-DRIVE -Used Before Code Date 13092500
742	795094		RETAINER-E RING -Used After Code Date 08123100 -Used Before Code Date 13092500
742	93941		RETAINER, E Ring -Used Before Code Date 09010100
783	795099		GEAR-PINION -Used Before Code Date 13092500
783A	795096		GEAR-PINION -Used Before Code Date 13092500
868	793507		SEAL, Valve
883	793497		GASKET, Exhaust
937	798330		SPLINE, Starter -Used Before Code Date 13092500
1009	794099		SCREW -(Starter Motor)
1022	793437		GASKET, Rocker Cover
1095	793624		GASKET SET, Valve

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	1006022015B8	1	Replacement Engine
	795156	1	Replacement Short Block
	-----		Top No-Load Speed: 2800 -Trim: ALL
	-----		Service Note: Replacement engine listed is not available in the State of California. Repair with Short Block and individual parts.
	-----		Service Note: Transfer Flywheel Assembly to the replacement engine.
	-----		Service Note: Transfer the Brake Assembly from the original engine to the replacement engine
	-----		Service Note: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
	-----		Service Note: Transfer Governor Spring to replacement engine.

