




Parts Manual

Mfg. No: 120602-0200-E1







Model Components	Page
Air Cleaner, Exhaust System.	4
Blower Housing/Shroud, Electric Starter, Flywheel Group, Rewind Starter.	6
Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group.	10
Carburetor, Fuel Supply.	14
Controls, Flywheel Brake, Governor Spring, Ignition.	18
Cylinder Head.	22
Kits/Gasket Sets.	24
Replacement Engine - US & Canada.	26

Not For
Reproduction





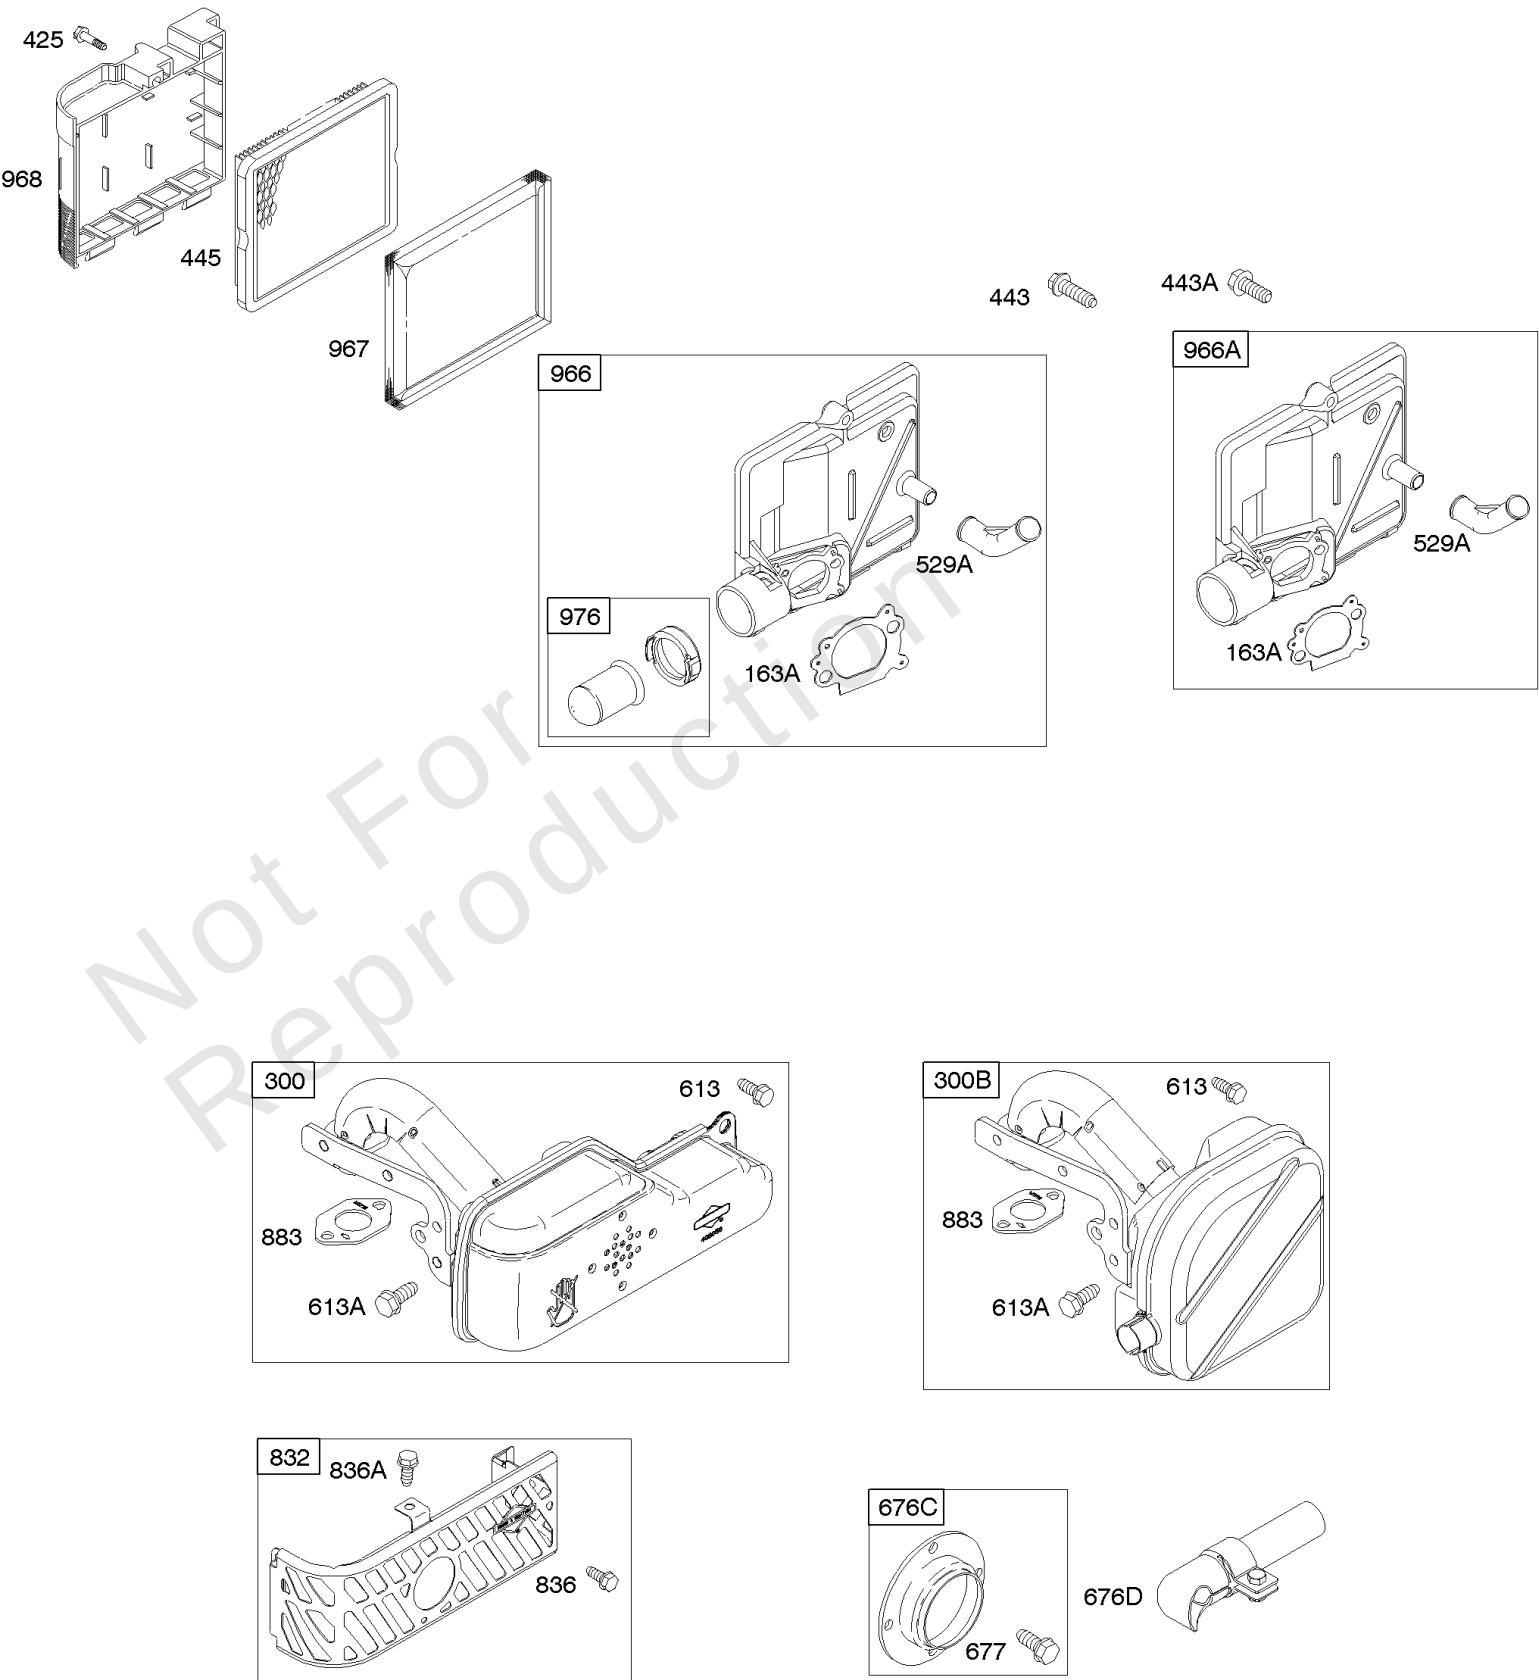


Air Cleaner, Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
163A	692667		GASKET, Air Cleaner -(Air Cleaner)
300	692275		MUFFLER -Used Before Code Date 99030800
300	694248		MUFFLER -Used After Code Date 99030700
300B	699769		MUFFLER
425	690670		SCREW -(Air Cleaner Cover)
443	691637		SCREW -(Air Cleaner Primer Base)
443A	692523		SCREW -(Air Cleaner Primer Base)
445	491588S		FILTER, A/C Cartridge
529A	691923		TUBE, Breather
613	691108		SCREW -(Muffler)
613A	691140		SCREW -(Muffler)
676C	497682		DEFLECTOR, Muffler
676D	692957		ARRESTOR-SPARK
677	690661		SCREW -(Muffler Deflector)
832	695593		GUARD, Muffler
836	692557		SCREW -(Muffler Guard)
836A	691147		SCREW -(Muffler Guard)
883	691893		GASKET-EXHAUST
966	692673		BASE, Air Cleaner -(Primer)
967	493537S		FILTER, Air Cleaner Foam
968	692298		COVER, Air Cleaner
976	694395		PRIMER, Carburetor

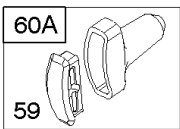
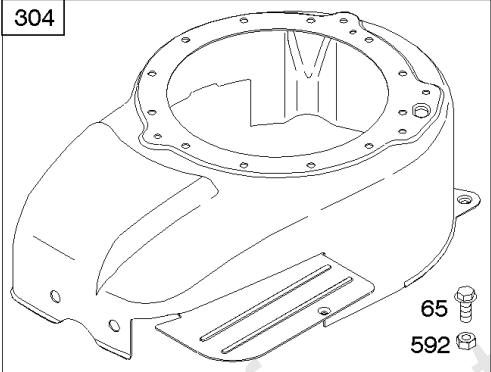
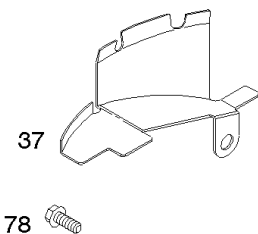
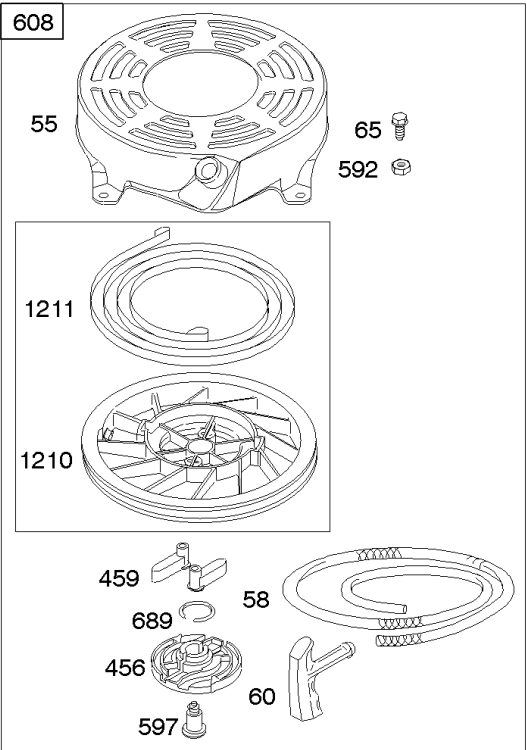
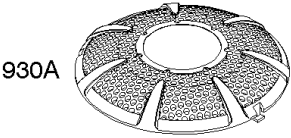
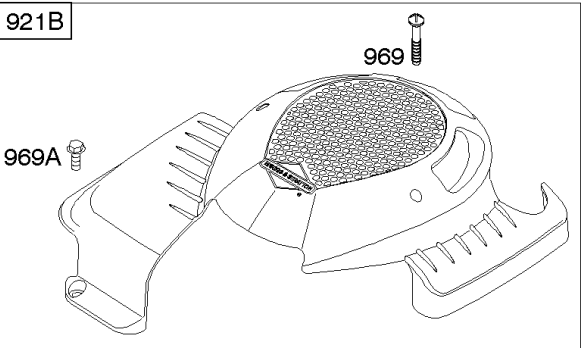


1036 EMISSIONS LABEL

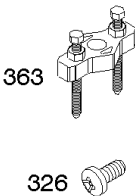
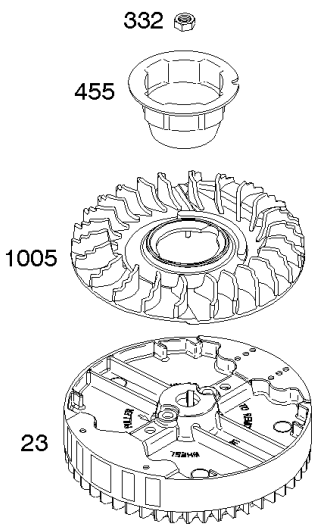
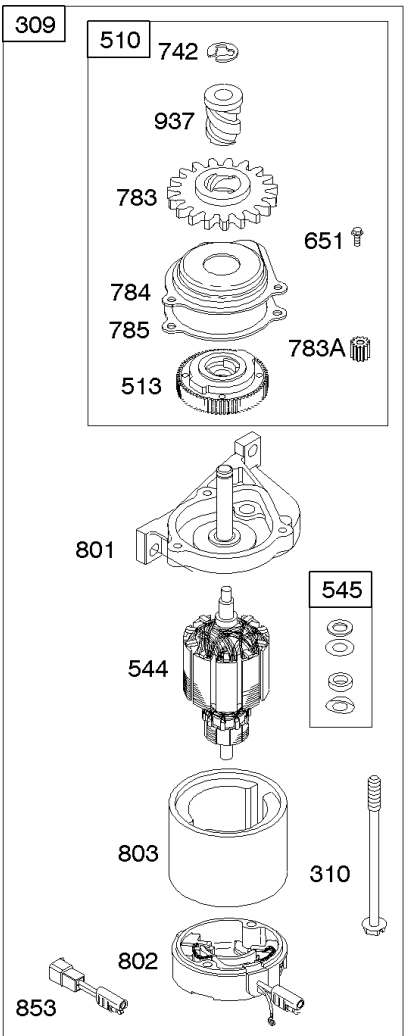
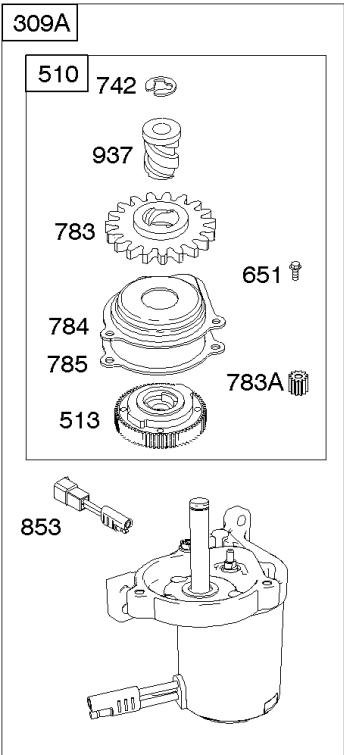
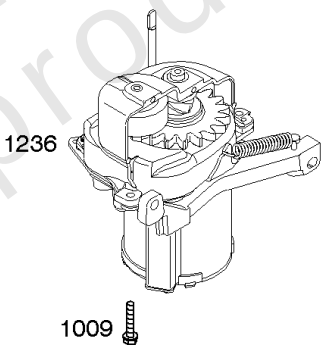


Blower Housing/Shroud, Electric Starter, Flywheel Group, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	697610		FLYWHEEL
37	694086		GUARD, Flywheel
55	691421		HOUSING, Rewind Starter
58	697316		ROPE, Starter -(Cut To Required Length)
59	396892		INSERT-GRIP
60	281434S		GRIP, Starter Rope
60A	393152		GRIP-STARTER ROPE
65	690837		SCREW -(Rewind Starter)
78	691108		SCREW -(Flywheel Guard)
304	499677		HOUSING, Blower
305	691108		SCREW -(Blower Housing)
309	695550		MOTOR, Starter -Used Before Code Date 07052900
309A	795092		MOTOR, Starter -Used After Code Date 07052800
310	692327		SCREW -(Starter Motor)
326	691108		SCREW -(Rewind Guard)
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	791960		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
510	795093		DRIVE, Starter
513	692358		CLUTCH, Drive
544	690786		ARMATURE, Starter
545	492919		WASHER -(Starter Motor)
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	497680		STARTER, Rewind
651	691660		SCREW -(Starter Gear Cover)
689	691855		SPRING-FRICTION
697	691127		SCREW -(Drive Cap)
742	93941		RETAINER, E Ring
783	691918		GEAR, Pinion
783A	691269		GEAR, Pinion
784	795095		COVER, Starter Gear
785	692352		GASKET-STARTER COVER
801	690782		CAP, Drive
802	695267		CAP, End -Used After Code Date 00040600
802	695975		HOUSING, Starter -Used Before Code Date 00040700
803	695266		HOUSING, Starter -Used After Code Date 00040600

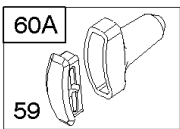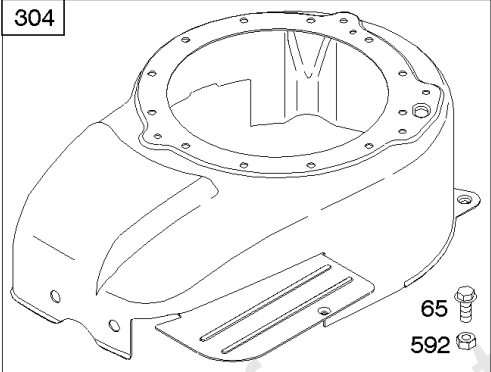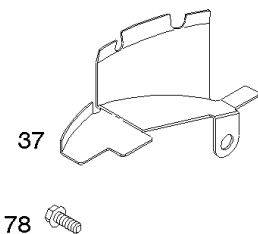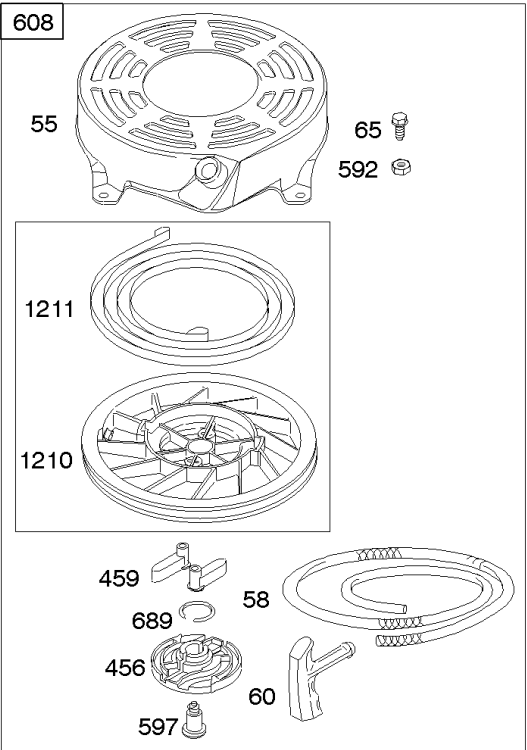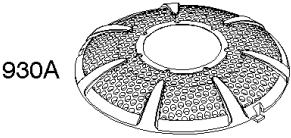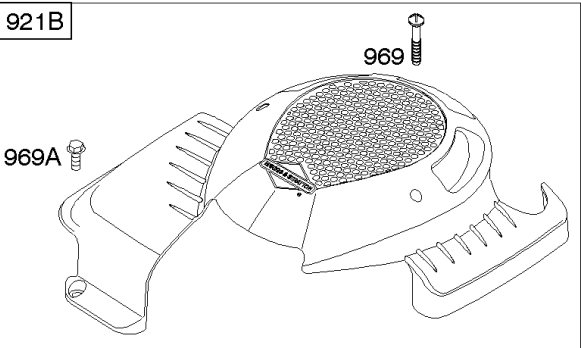


1036 EMISSIONS LABEL

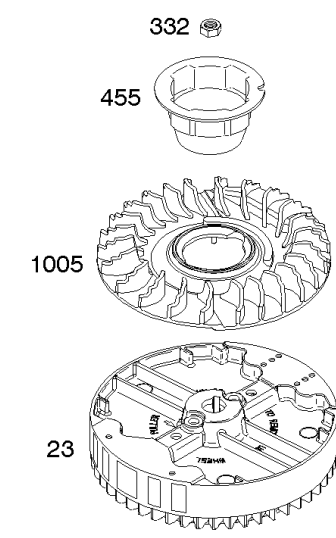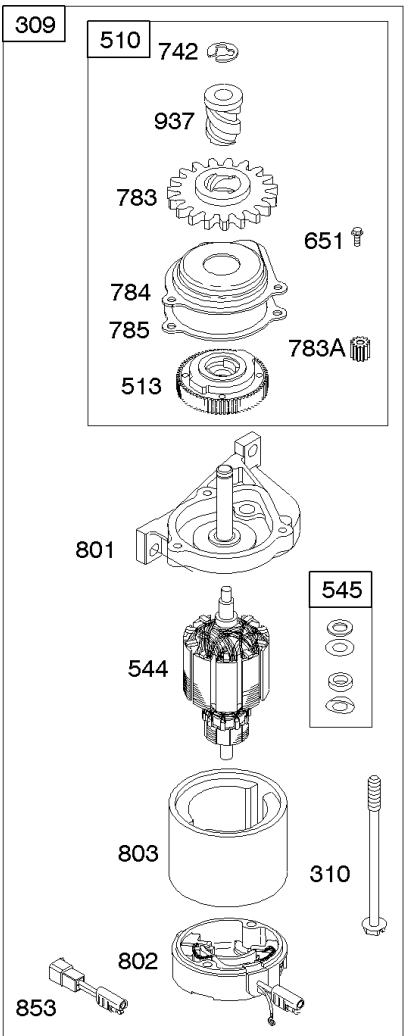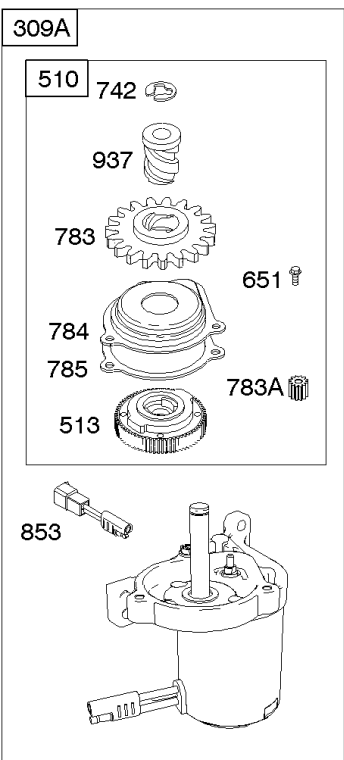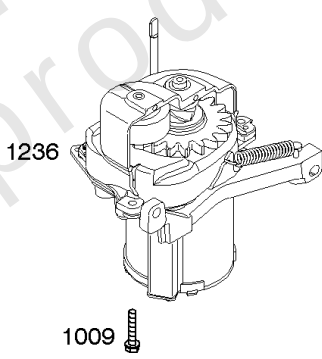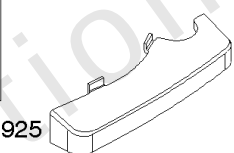


Blower Housing/Shroud, Electric Starter, Flywheel Group, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
803	695975		HOUSING, Starter -Used Before Code Date 00040700
853	695268		ADAPTER, Wire
921B	697921		HOUSING, Blower
925	690595		COVER, Linkage -Used Before Code Date 07072300
925	795403		COVER-LINKAGE -Used After Code Date 07072200
930A	692675		GUARD, Rewind
937	691325		SPLINE, Starter
969	691138		SCREW -(Blower Housing)
969A	697922		SCREW -(Blower Housing)
1005	691346		FAN, Flywheel
1009	696255		SCREW -(Starter Motor)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1210	498144		PULLEY/SPRING ASSY -(Pulley)
1211	498144		PULLEY/SPRING ASSY -(Spring)
1236	695959		STARTER, Mechanical

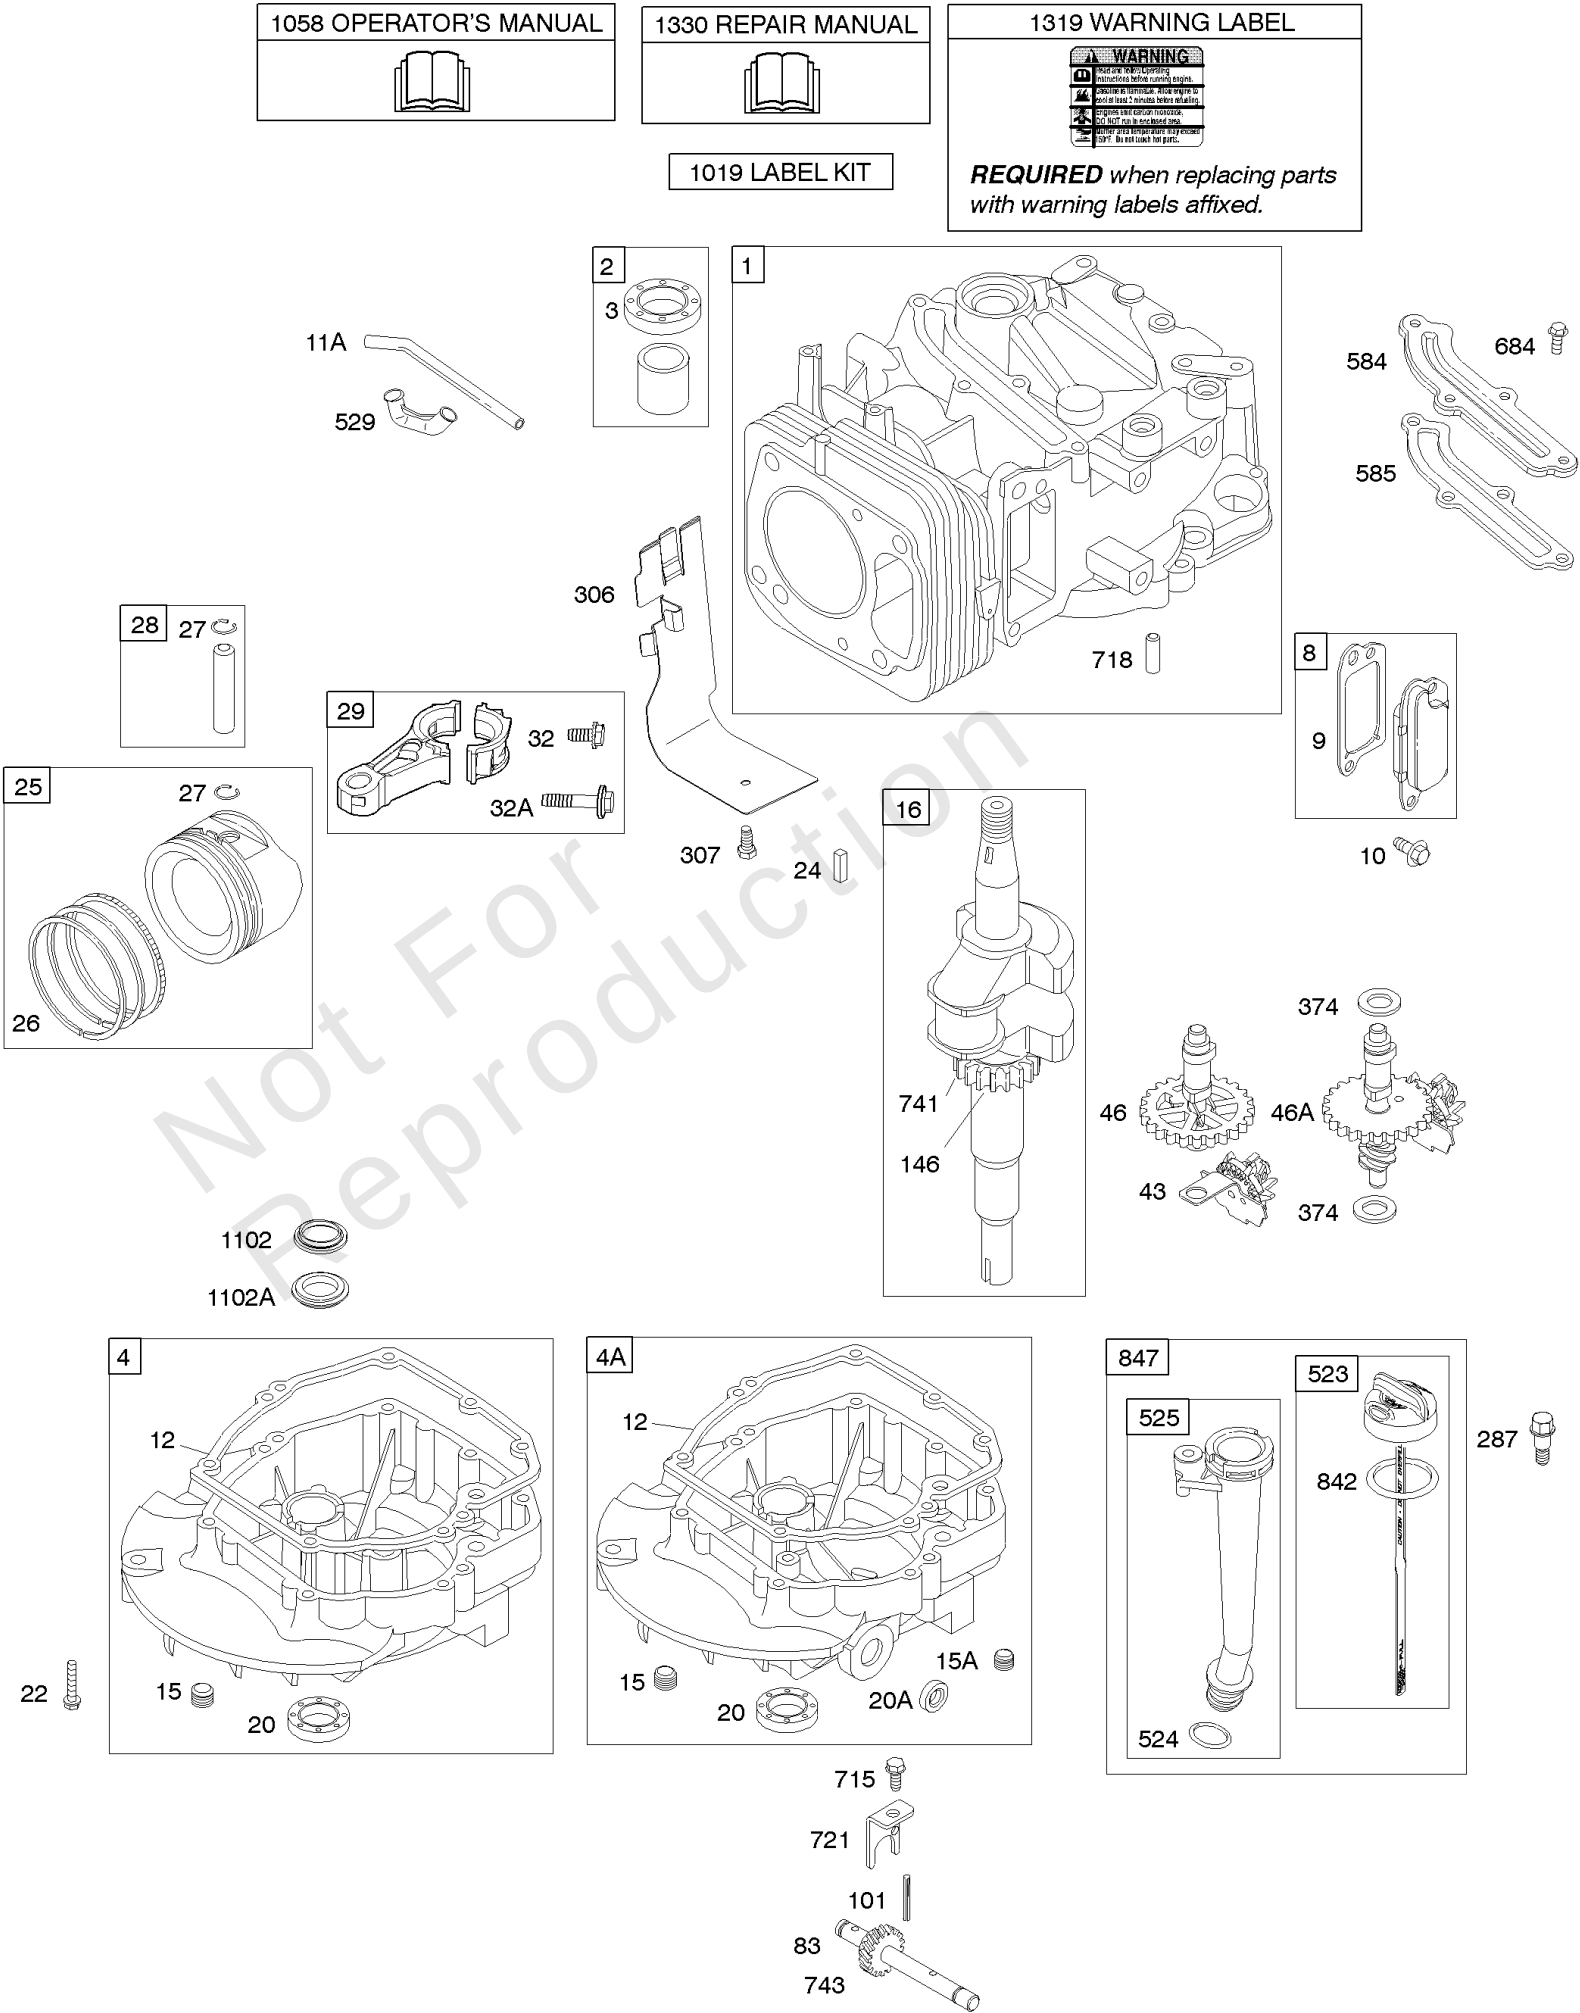


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
1	692670		CYLINDER ASSEMBLY
2	399269		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		SUMP, Engine
4A	493365		SUMP, Engine -(Auxiliary PTO)
8	495786		BREATHER ASSEMBLY
9	699833		GASKET-BREATHER
10	691125		SCREW -(Breather Assembly)
11A	499675		TUBE, Breather
12	692232		GASKET, Crankcase
15	691680		PLUG, Oil Drain -(Square Socket)
15A	691093		PLUG, Oil Drain -(Hex Socket)
16	691457		CRANKSHAFT
20	399781S		SEAL, Oil -(PTO Side)
20A	691952		SEAL, Oil -(PTO Side) (Auxiliary PTO)
22	691092		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	791968		PISTON ASSEMBLY -(Standard) -Used Before Code Date 07090400
25	795429		PISTON ASSEMBLY -(Standard) -Used After Code Date 07090300
25	795430		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 07090300
25	791326		PISTON ASSEMBLY -(.020 Oversize) -Used Before Code Date 07090400
26	795432		SET, Ring -(.020 Oversize) -Used After Code Date 07090300
26	795431		RING SET -(Standard) -Used After Code Date 07090300
26	692786		SET, Ring -(.020 Oversize) -Used Before Code Date 04102200
26	499631		SET, Ring -(Standard) -Used Before Code Date 04040500
26	791324		SET, Ring -(.020 Oversize) -Used After Code Date 04102100 -Used Before Code Date 07090400
26	791969		SET, Ring -(Standard) -Used After Code Date 04040400 -Used Before Code Date 07090400
27	691866		LOCK-PISTON PIN
28	499423		PIN-PISTON/STD -(Standard)

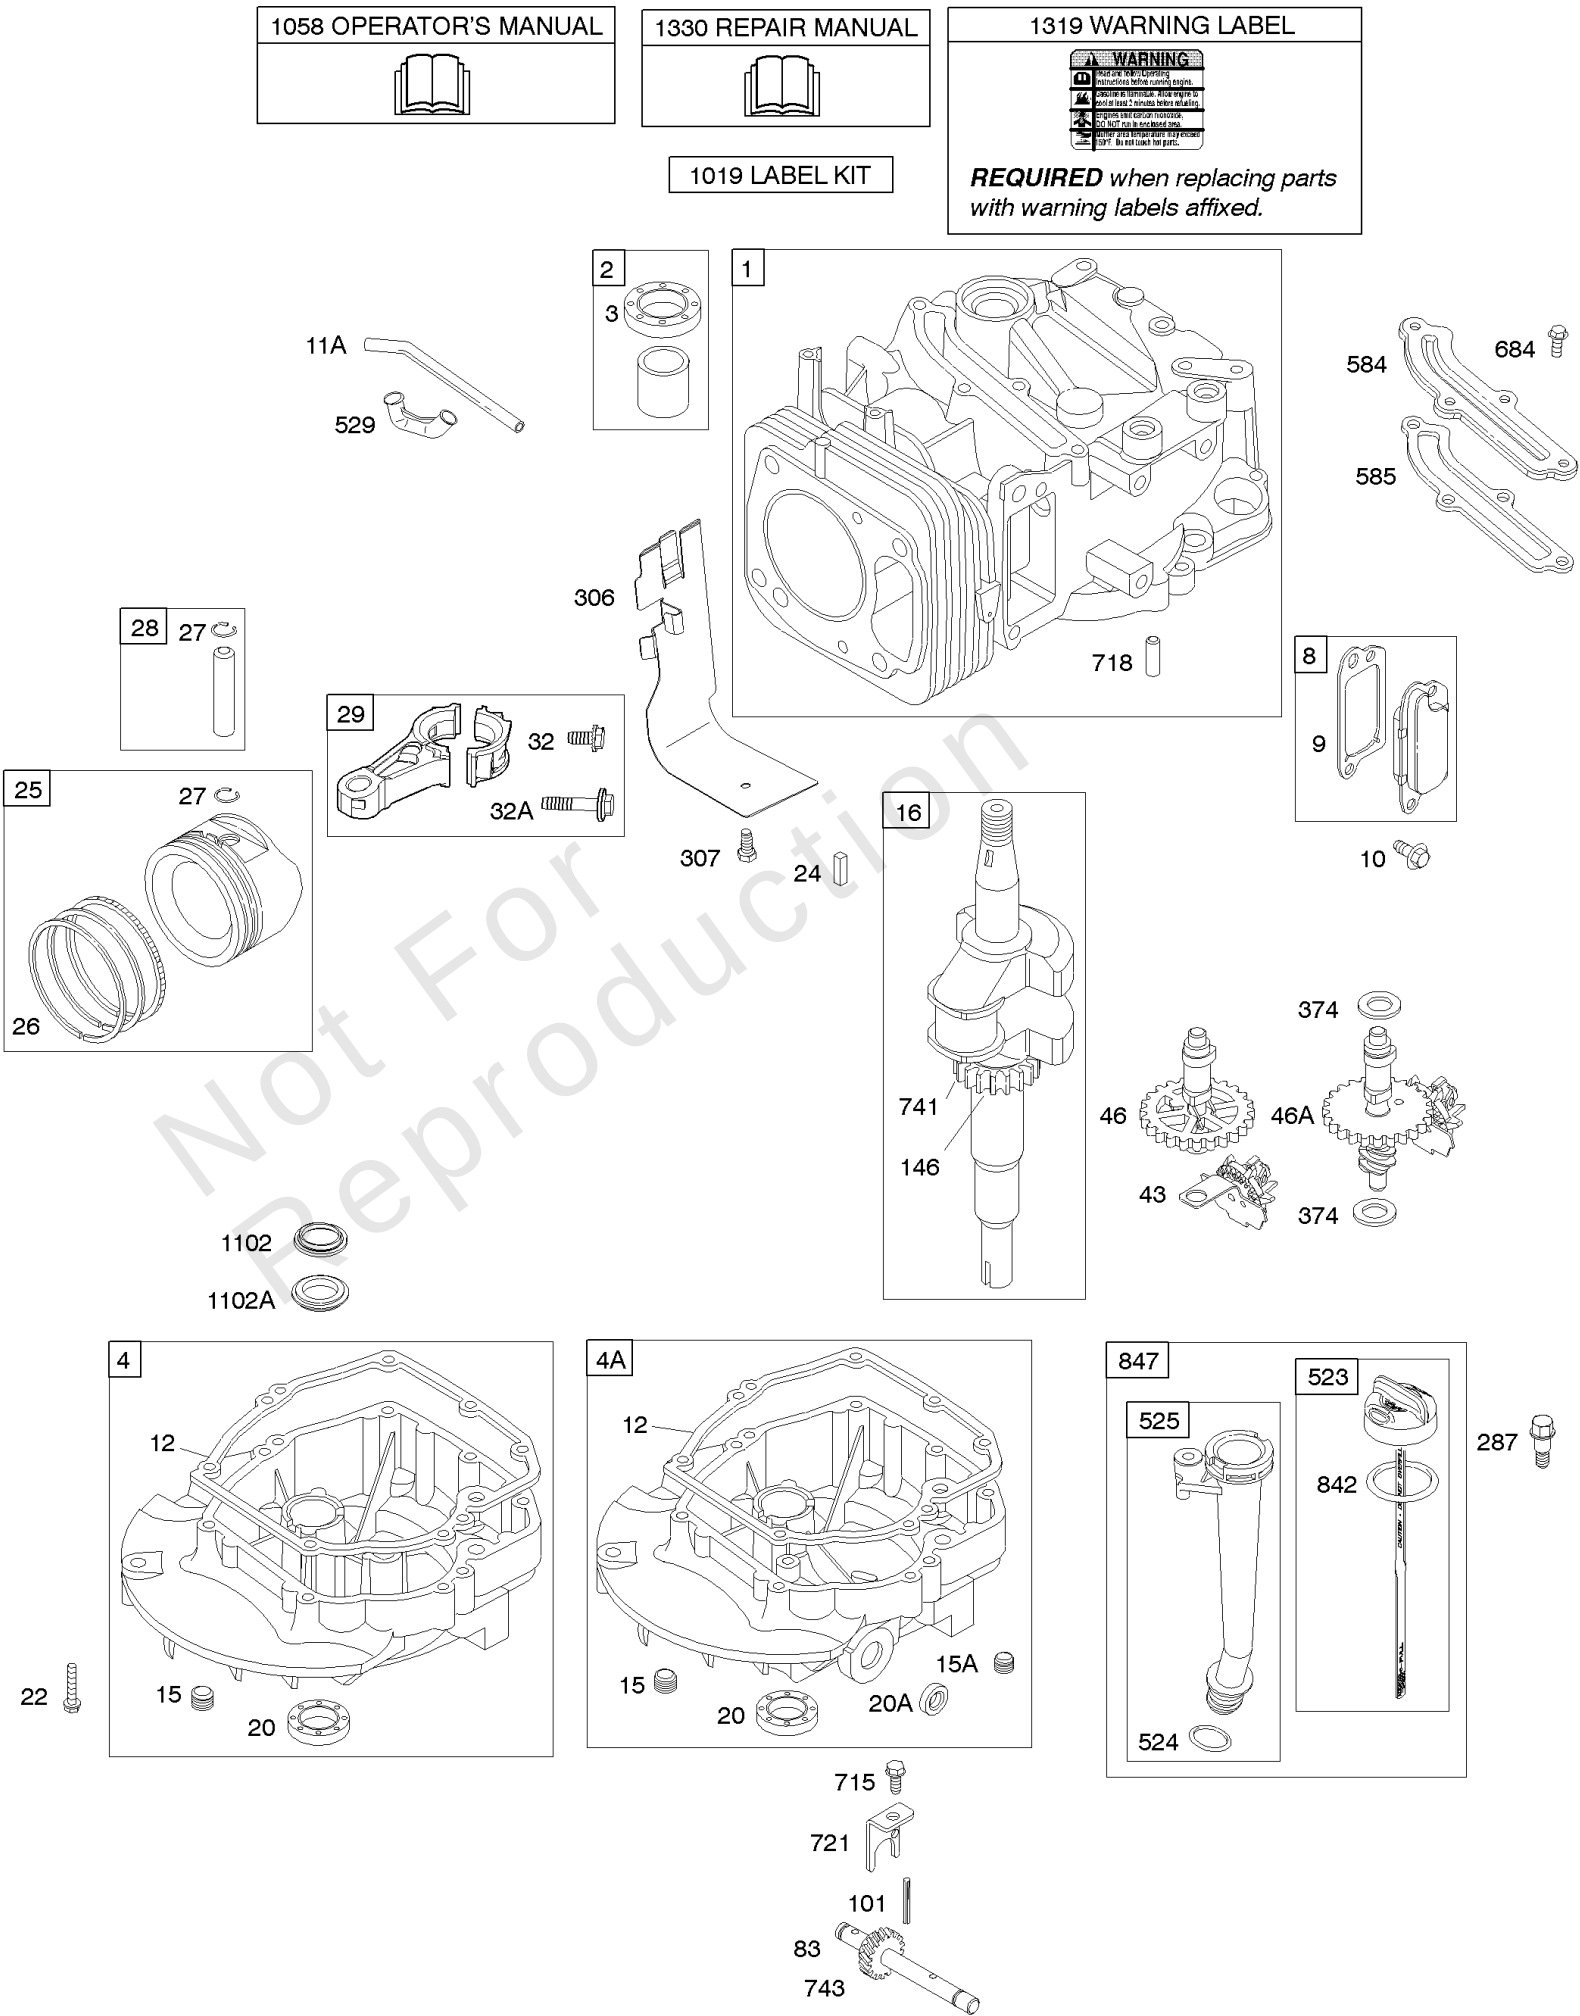


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
29	499424		ROD, Connecting -(Standard)
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod) -Used After Code Date 00042200
43	691997		SLINGER, Governor/Oil
46	694035		CAMSHAFT -Used Before Code Date 99030800
46	694039		CAMSHAFT -Used After Code Date 99030700
46A	694033		CAMSHAFT
83	690527		SHAFT, Auxiliary Drive
101	691623		PIN, Shaft
146	690979		KEY, Woodruff
287	690940		SCREW -(Dipstick Tube)
306	691232		SHIELD-CYLINDER
307	690345		SCREW -(Cylinder Shield)
374	691074		WASHER -(Camshaft)
523	499621		DIPSTICK
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
525	495265		TUBE, Dipstick
529	692937		TUBE, Breather
584	697734		COVER-BREA PASSAGE
585	691879		GASKET-BREA PASSAGE
684	690345		SCREW -(Breather Passage Cover)
715	691147		SCREW -(Stop Shaft)
718	690959		PIN, Locating
721	690449		STOP, Shaft
741	691830		GEAR-TIMING -(Uses Woodruff Key)
741	790345		GEAR, Timing -(Use Without Woodruff Key) -Used Before Code Date 07100100
741	794388		GEAR, Timing -(Use Without Woodruff Key) -Used After Code Date 07093000
743	691772		GEAR, Drive -(Counterclockwise)
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	692047		DIPSTICK/TUBE ASSY
1019	693868		KIT, Label
1019	790231		KIT, Label -(Touch N Mow)
1058	277102		MANUAL, Operator's
1058	276347		MANUAL, Operator's -(Touch N Mow)
1319	794467		LABEL, Warning
1330	272147		MANUAL, Repair

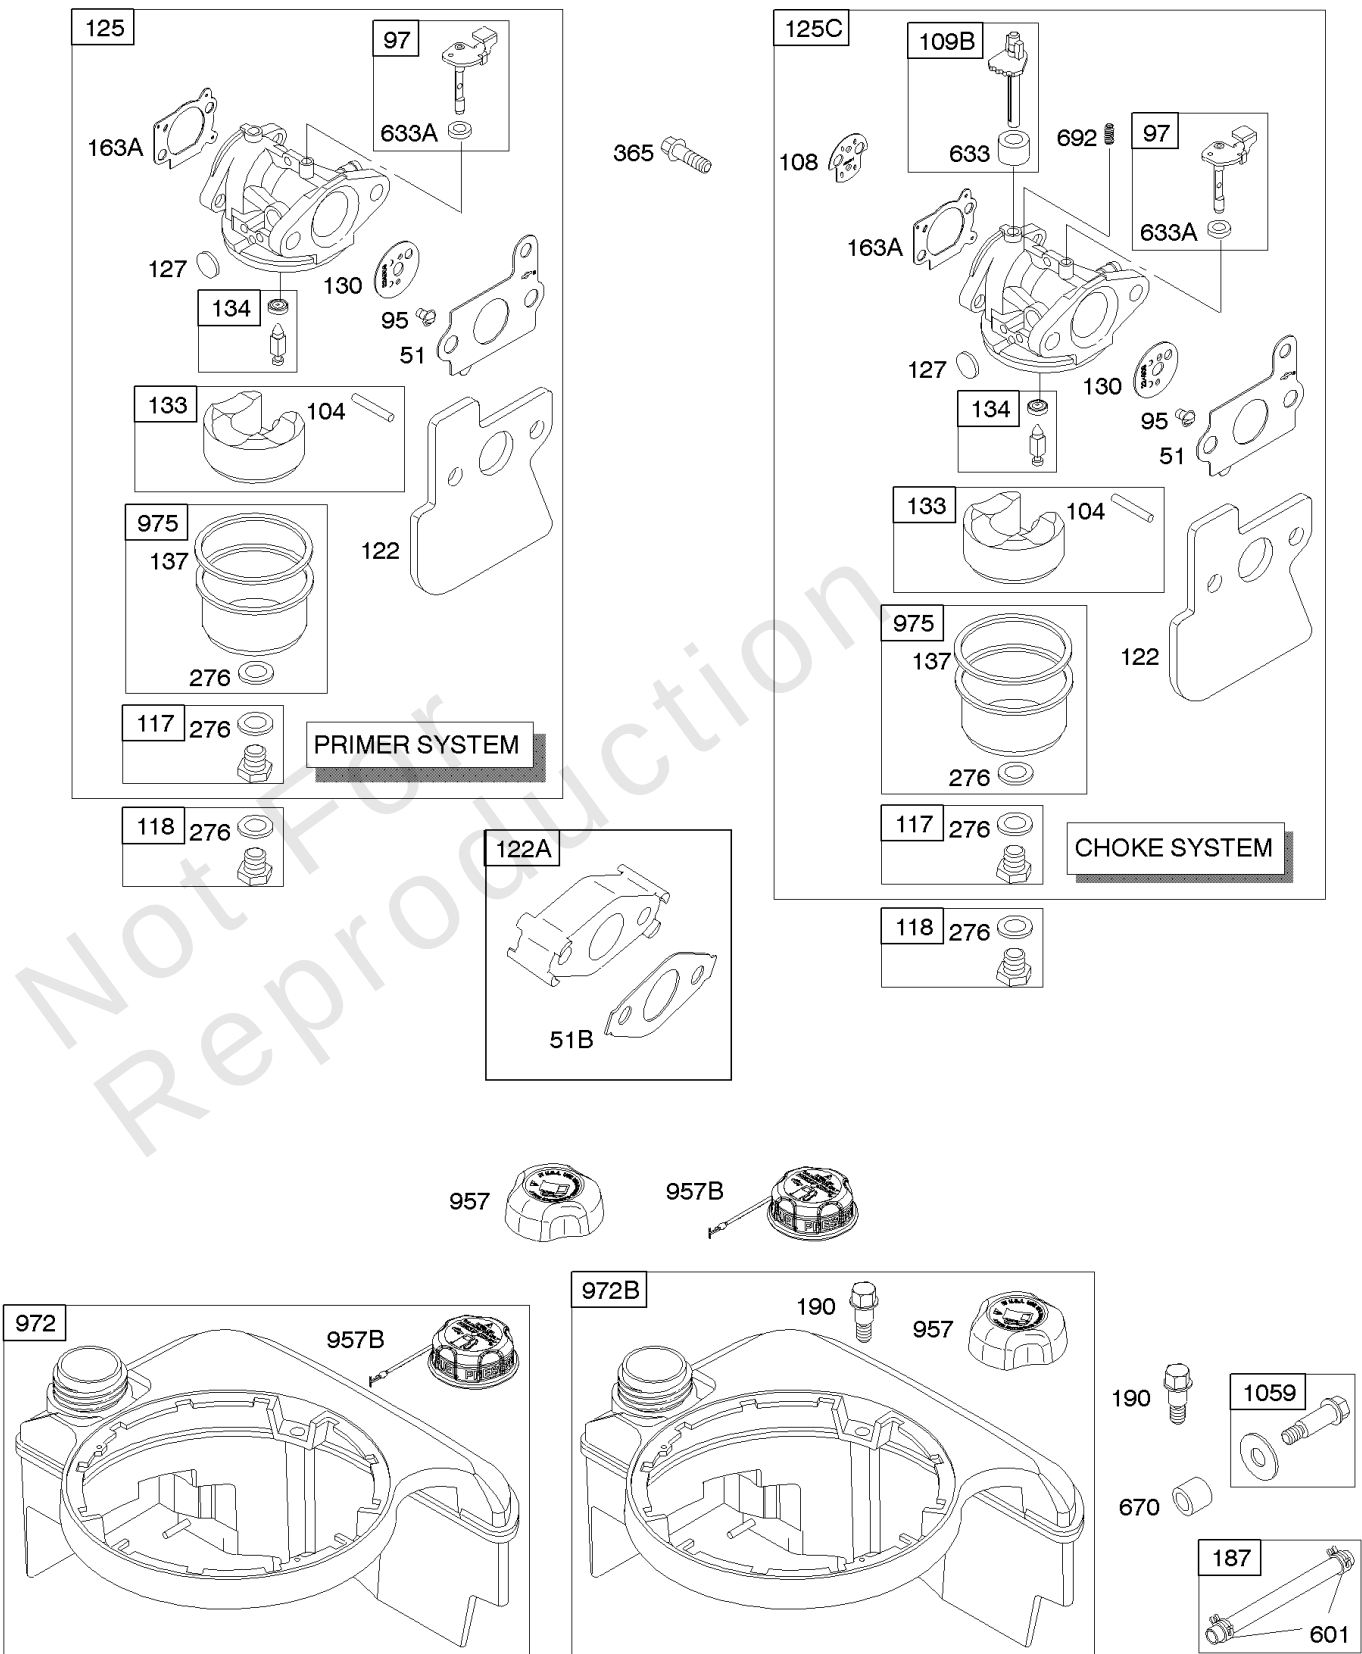

Carburetor, Fuel Supply


REF NO	PART NO	QTY	DESCRIPTION
51	692668		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
95	691636		SCREW -(Throttle Valve)
97	499682		SHAFT, Throttle -(Metal)
97	790121		SHAFT, Throttle -(Plastic)
104	691242		PIN, Float Hinge
108	691182		VALVE-CHOKE
109B	693866		SHAFT, Choke
117	498978		JET, Main -(Standard) -Used After Code Date 99030700 -Used Before Code Date 03110700
117	498981		JET, Main -(Standard) -Used After Code Date 03110600
118	497466		JET, Main -(High Altitude) -Used After Code Date 03110600
118	498975		JET, Main -(High Altitude) -Used After Code Date 99030700 -Used Before Code Date 03110700
122	692799		SPACER, Carburetor
122A	792382		SPACER, Carburetor
125	790120		CARBURETOR
127	694468		PLUG, Welch -(Bowl Vent)
130	691203		VALVE, Throttle
130	696564		VALVE, Throttle -(Used With Plastic Throttle Shaft)
133	398187		FLOAT-CARBURETOR
134	398188		KIT-NEEDLE/SEAT
137	693981		GASKET-FLOAT BOWL
163A	692667		GASKET, Air Cleaner -(Air Cleaner)
187	791766		LINE, Fuel -(Cut To Required Length)
190	690940		SCREW -(Fuel Tank)
276	271716		WASHER-SEALING
365	691129		SCREW -(Carburetor) -Used After Code Date 05110100
365	691136		SCREW -(Carburetor) -Used Before Code Date 05110200
601	791850		CLAMP, Hose
633	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)
633A	693867		SEAL, Choke/Throttle Shaft
670	692294		SPACER, Fuel Tank
692	690572		SPRING, Detent
957	692046		CAP, Fuel Tank -(Plastic)

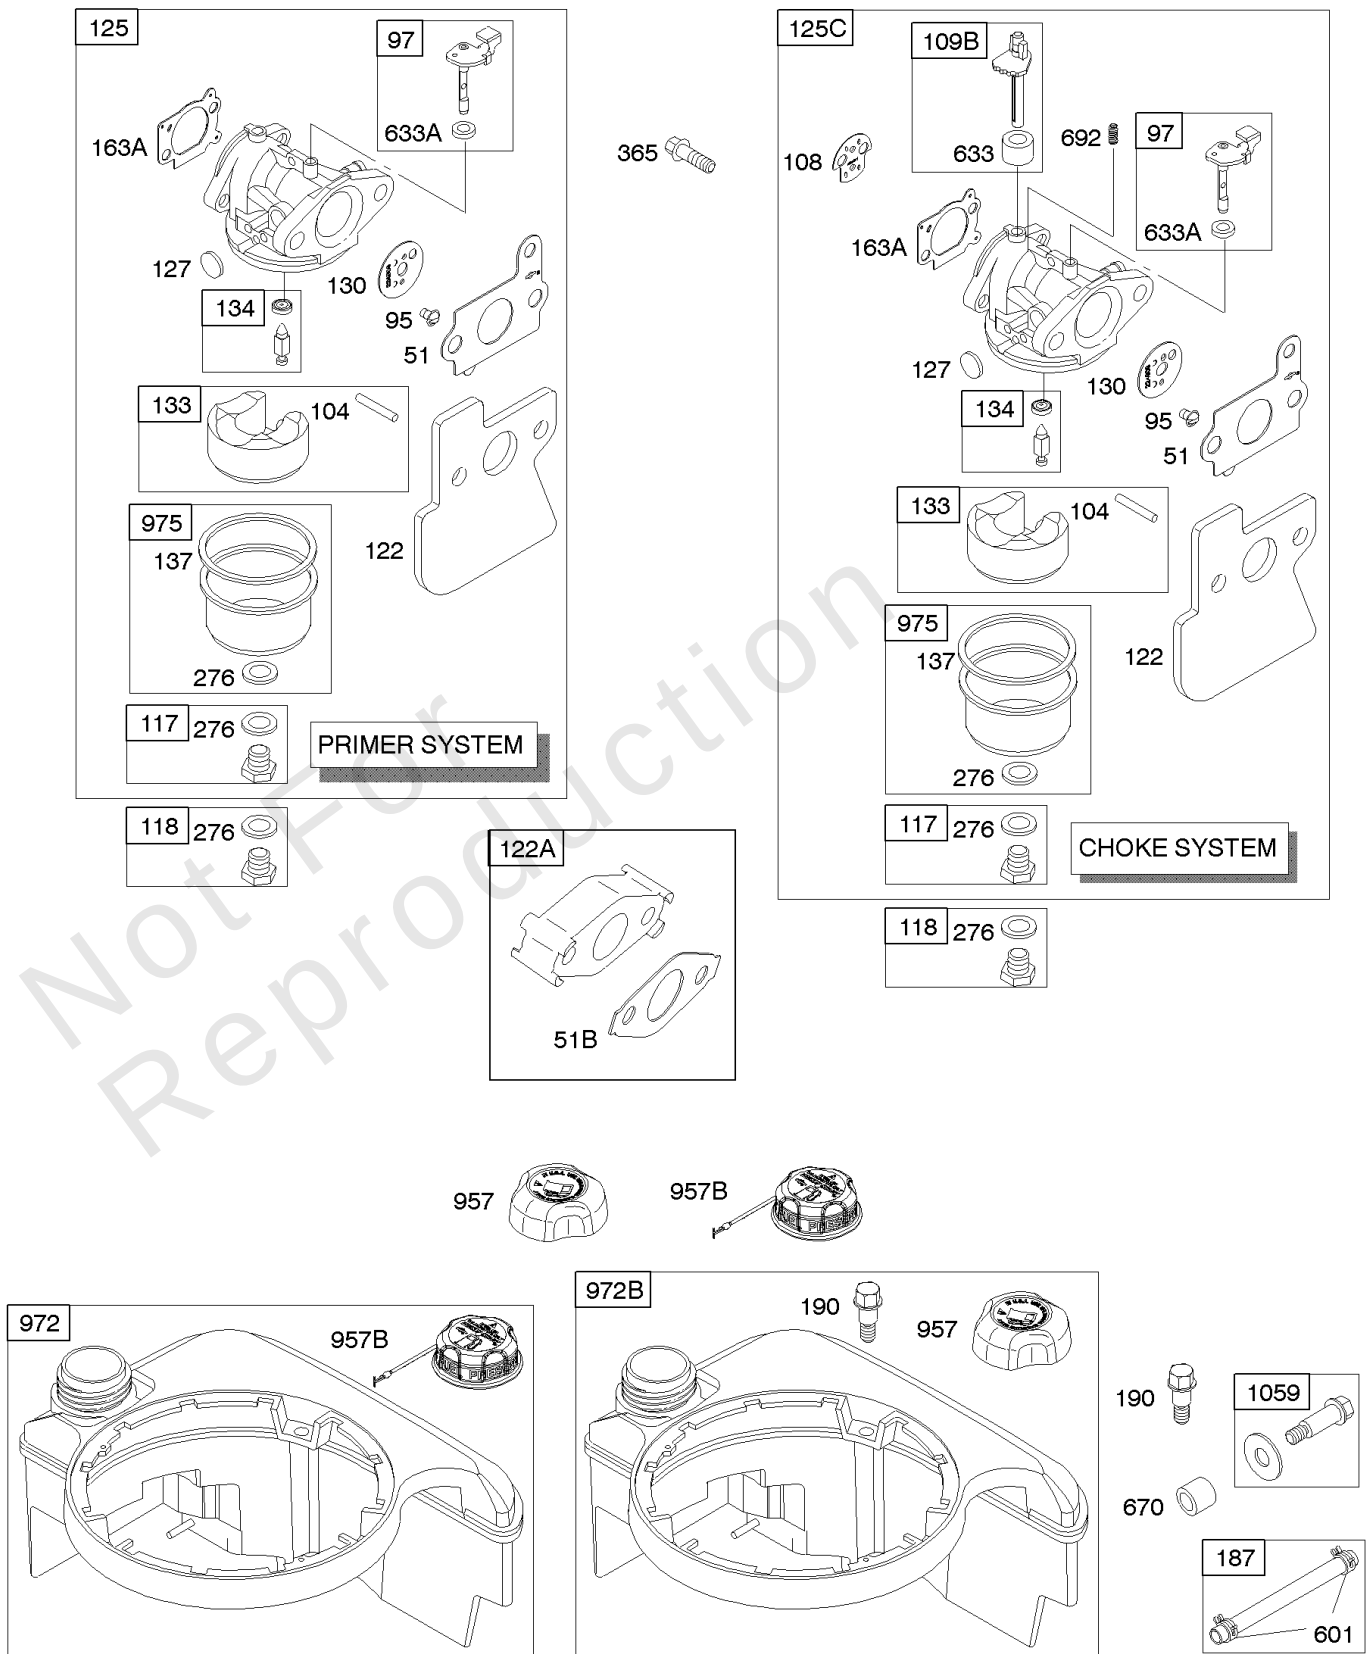

Carburetor, Fuel Supply


REF NO	PART NO	QTY	DESCRIPTION
957B	699985		CAP, Fuel Tank -(Plastic)
972	699374		TANK, Fuel -(Plastic)
975	493640		BOWL, Float
1059	692311		KIT, Screw/Washer

Not For Reproduction

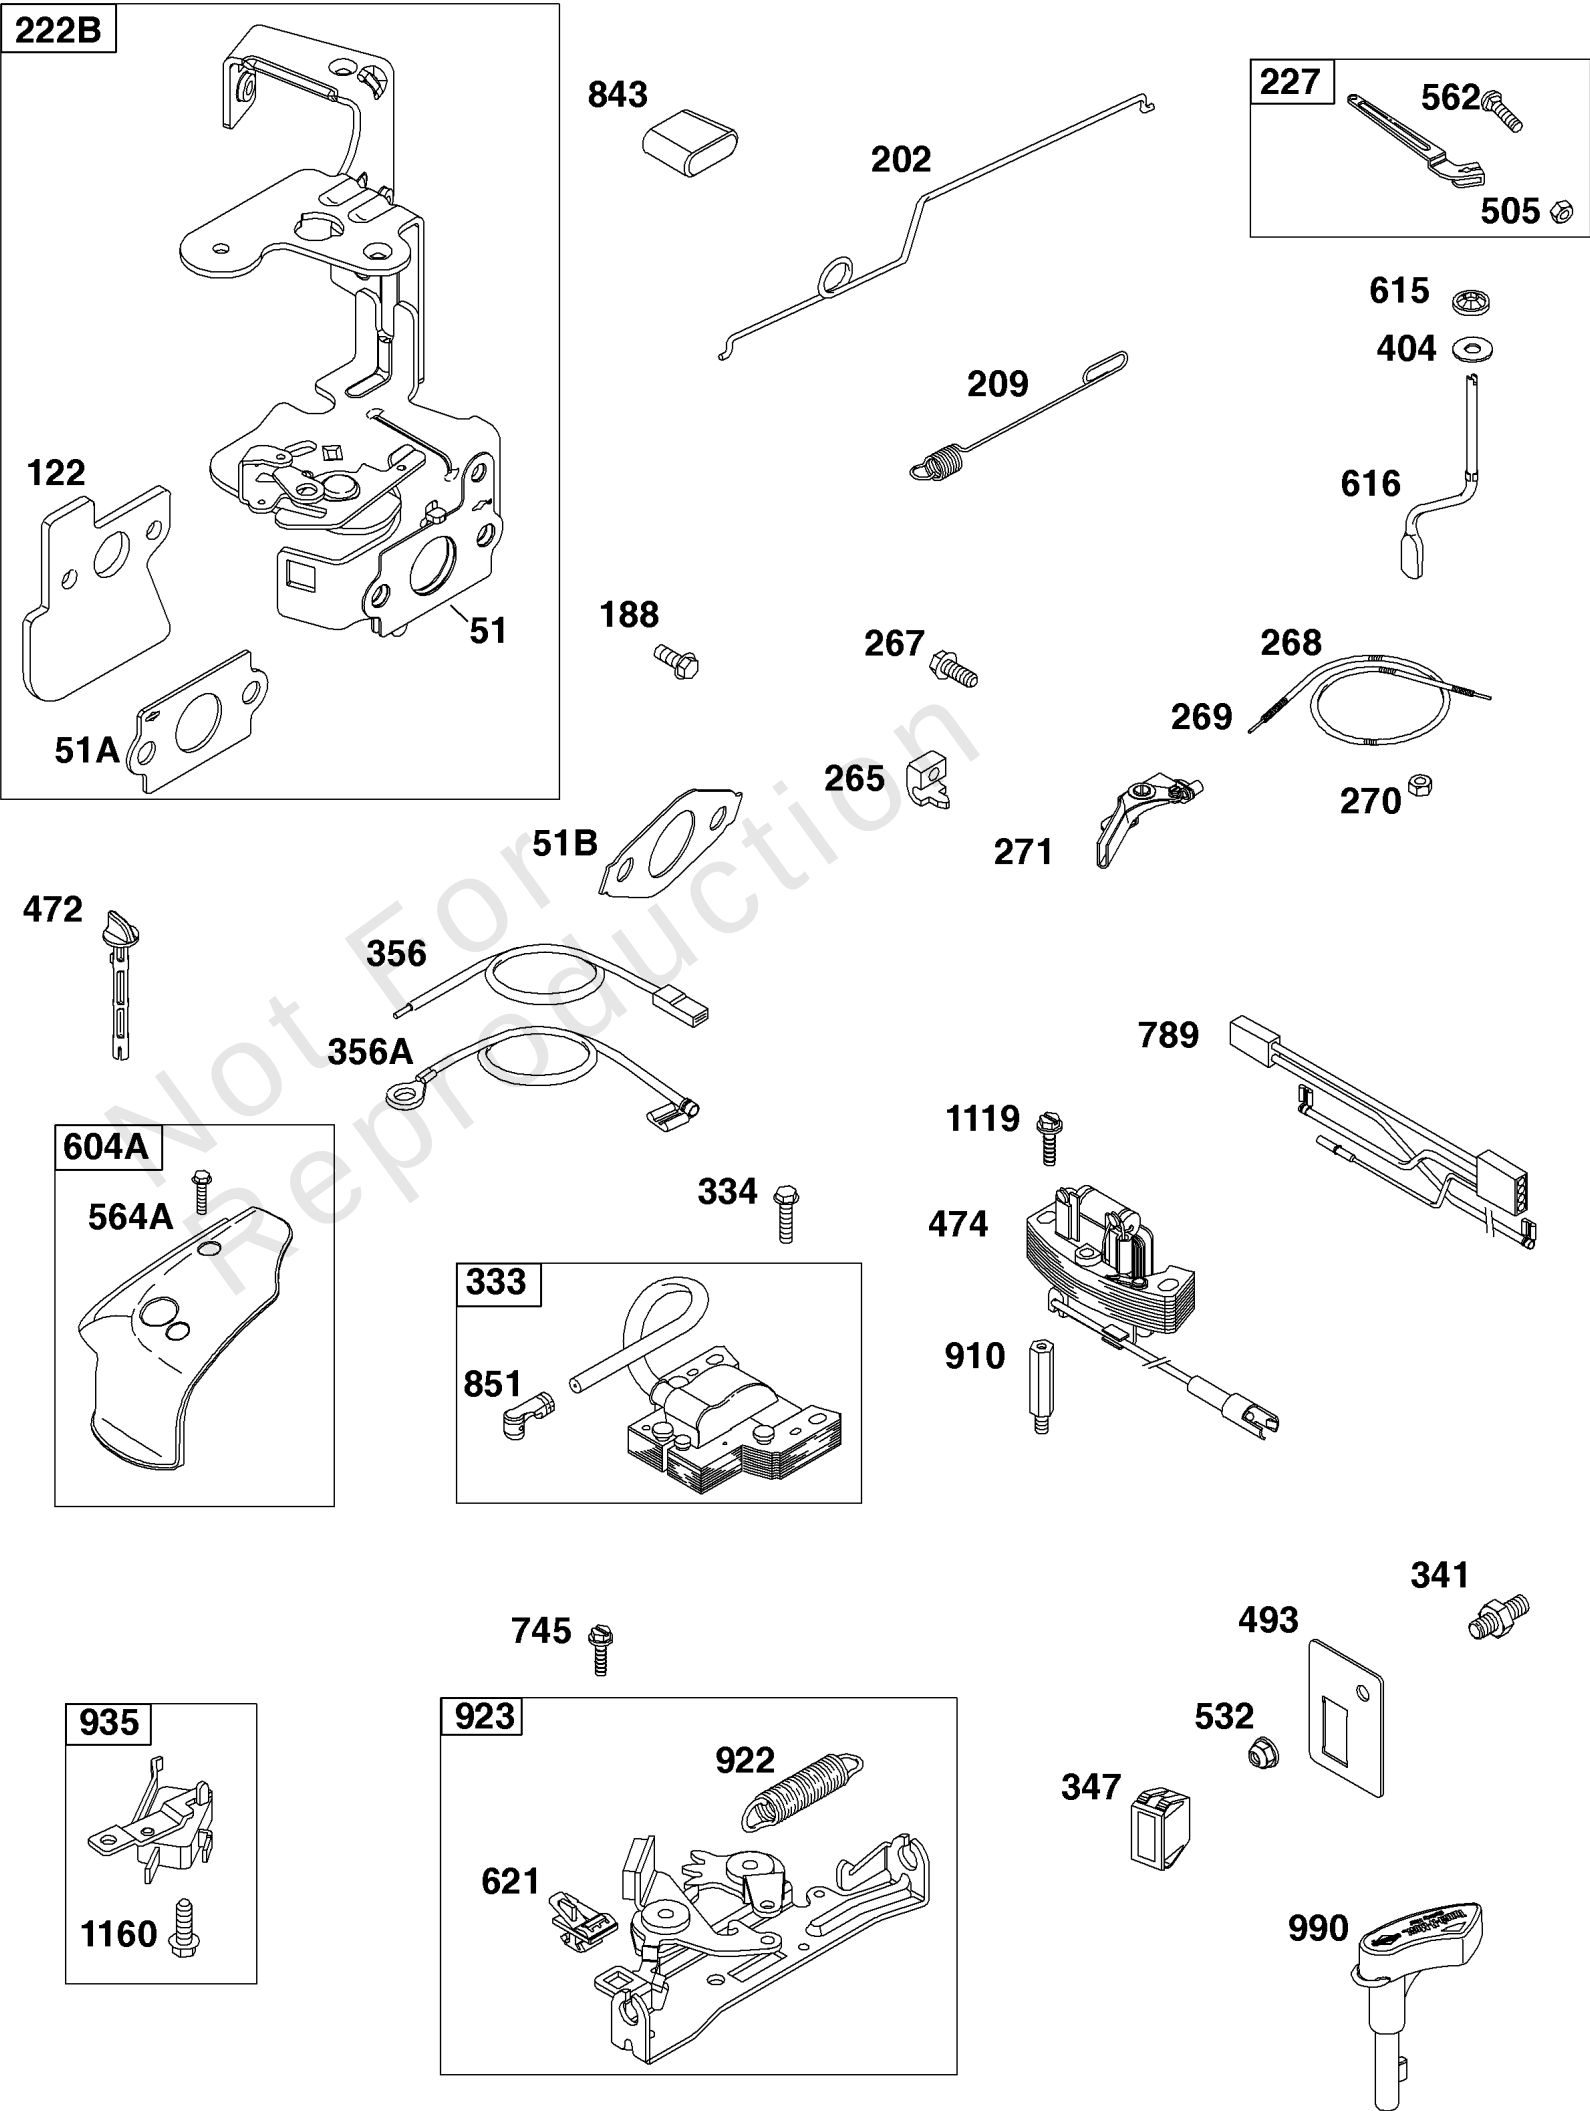


Controls, Flywheel Brake, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
51	692668		GASKET, Intake
51A	697735		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
122	692799		SPACER, Carburetor
188	691147		SCREW -(Control Bracket)
202	691303		LINK, Mechanical Governor
209	691290		SPRING, Governor
222B	792396		BRACKET, Control -Used After Code Date 05110100
222B	693897		BRACKET, Control -Used Before Code Date 05110200
227	691467		LEVER, Governor Control
265	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
333	802574		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
341	690368		STUD -(Mounting Bracket)
347	691396		SWITCH, Rocker
356	692390		WIRE, Stop
356A	693010		WIRE, Stop
404	690272		WASHER -(Governor Crank)
472	693809		KNOB, Choke Shaft
474	691991		ALTERNATOR
493	692877		BRACKET, Mounting
505	691251		NUT -(Governor Control Lever)
532	692851		NUT -(Mounting Bracket)
562	691119		BOLT -(Governor Control Lever)
564A	693808		SCREW -(Control Cover)
604A	692669		COVER, Control
615	690340		RETAINER, Governor Shaft
616	698801		CRANK, Governor
621	692310		SWITCH, Stop
745	691648		SCREW -(Brake)
789	691372		HARNESS, Wiring -Used Before Code Date 00040700
789	696547		HARNESS, Wiring -Used After Code Date 00040600
843	691884		SLEEVE, Lever

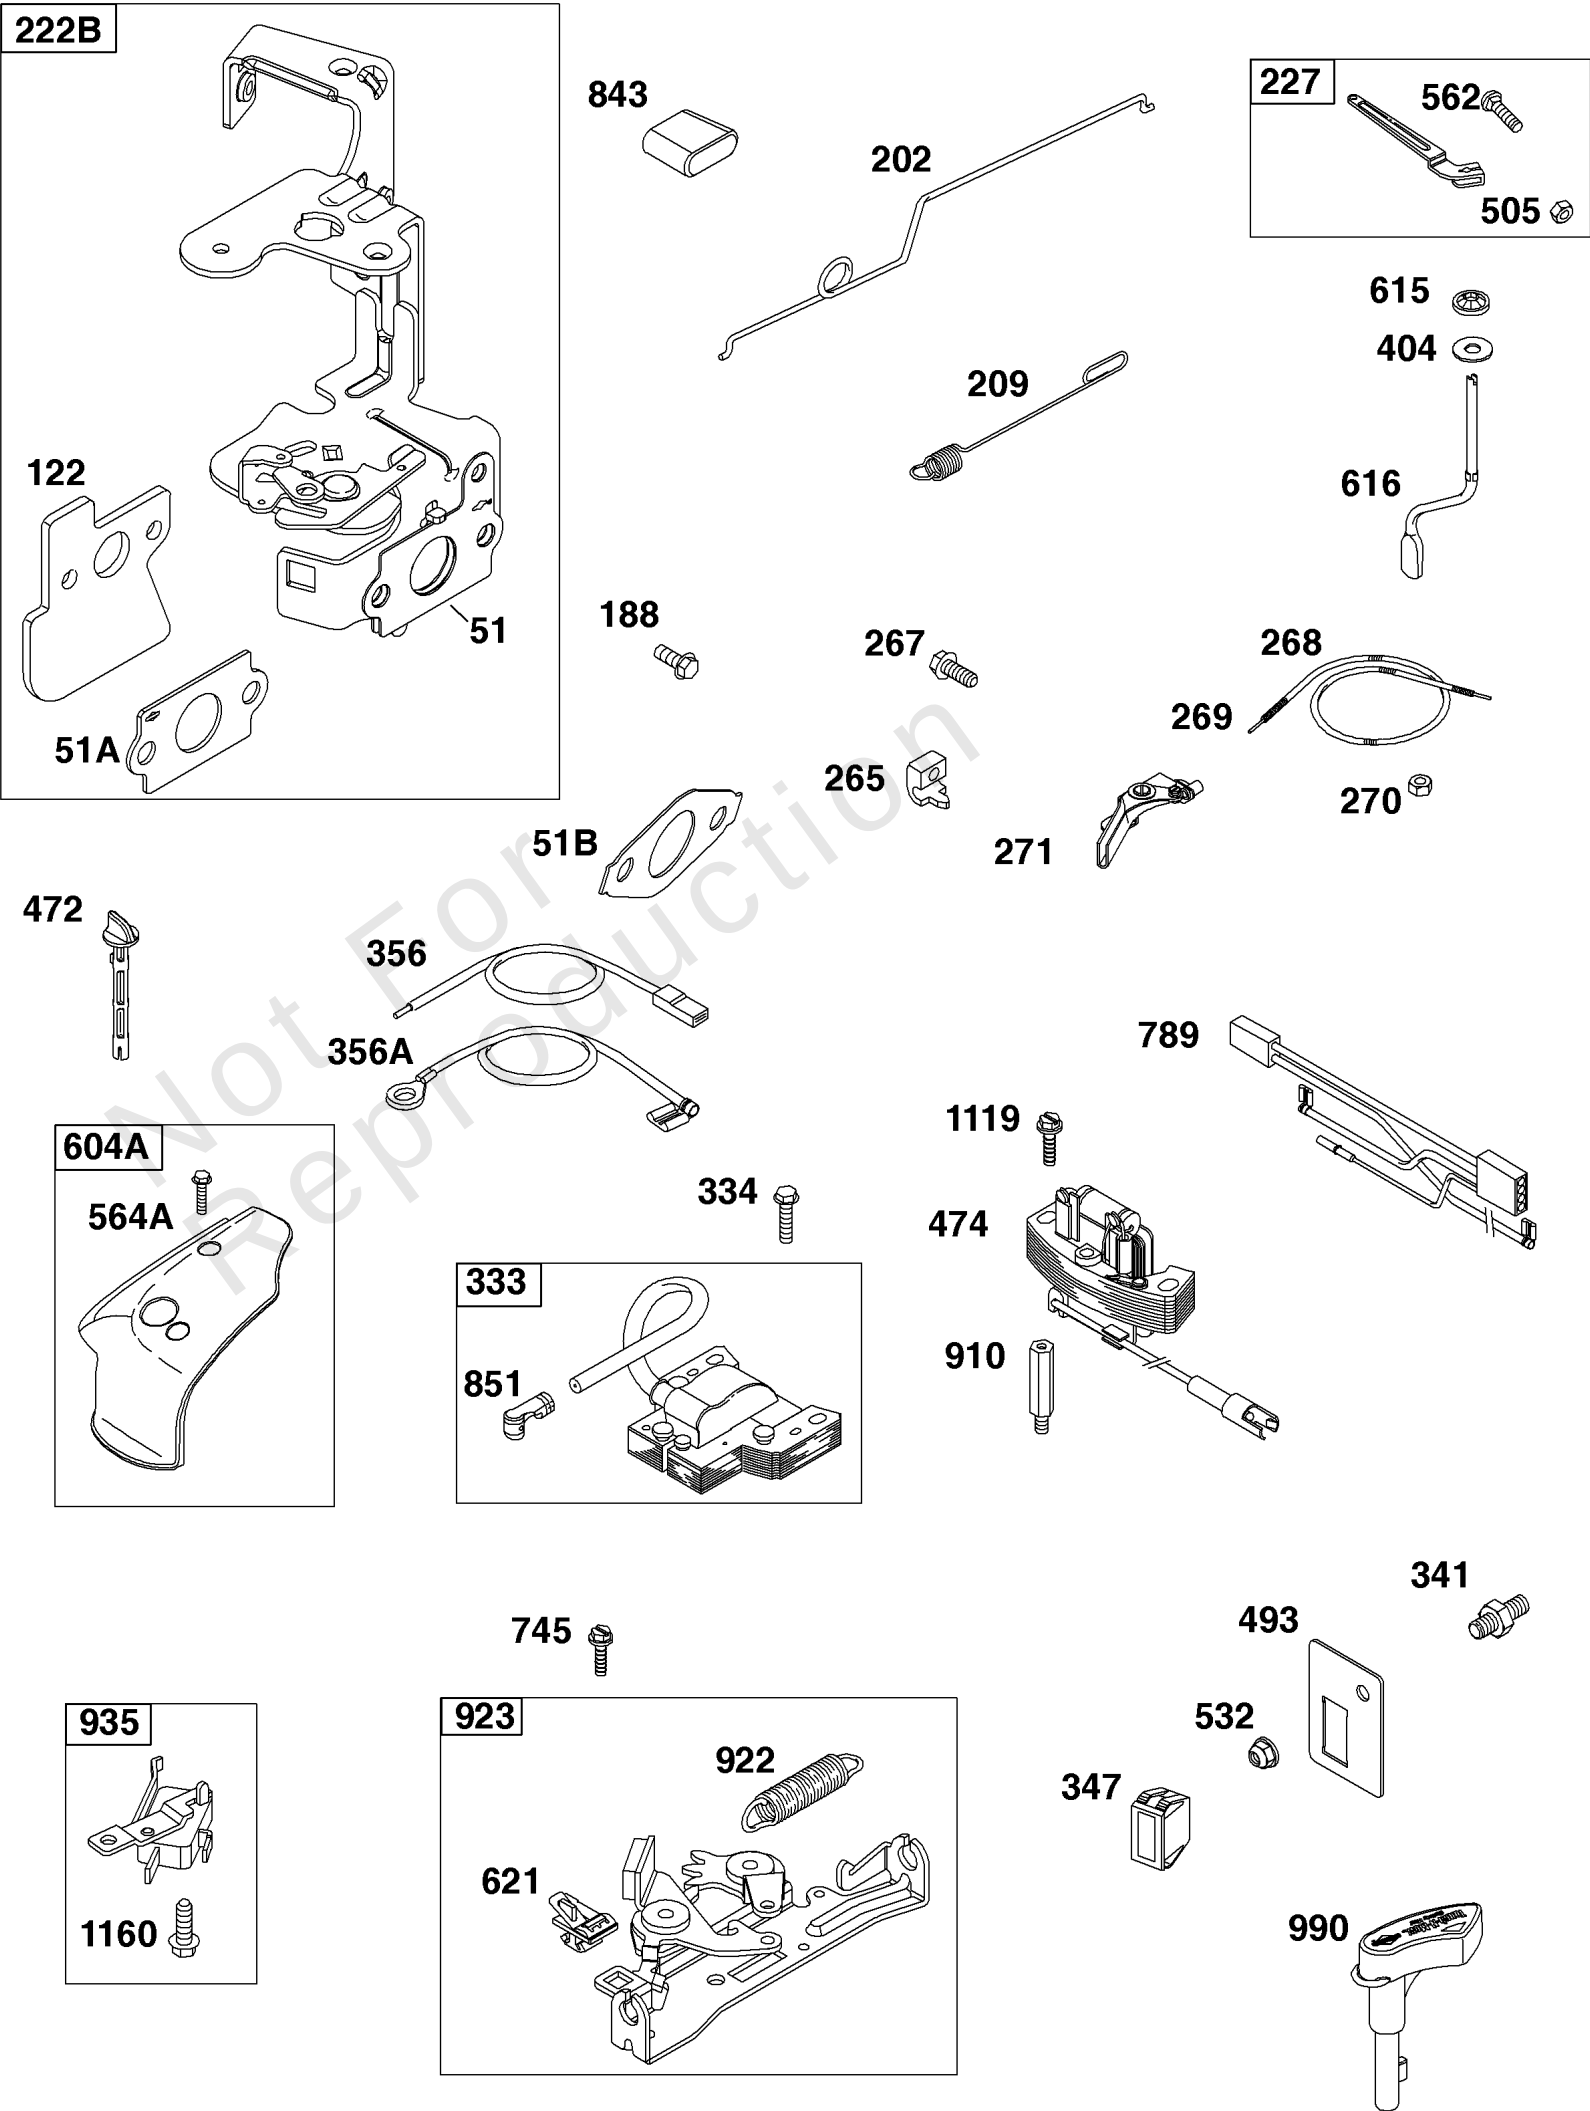





Controls, Flywheel Brake, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
851	493880S		TERMINAL, Spark Plug
910	691094		STUD -(Alternator)
922	691831		SPRING-BRAKE
923	796387		BRAKE -Used After Code Date 08043000
935	499421		SWITCH, Interlock -Used Before Code Date 08050100
990	695951		SET, Key
1119	692979		SCREW -(Alternator)
1160	690345		SCREW -(Interlock Switch)

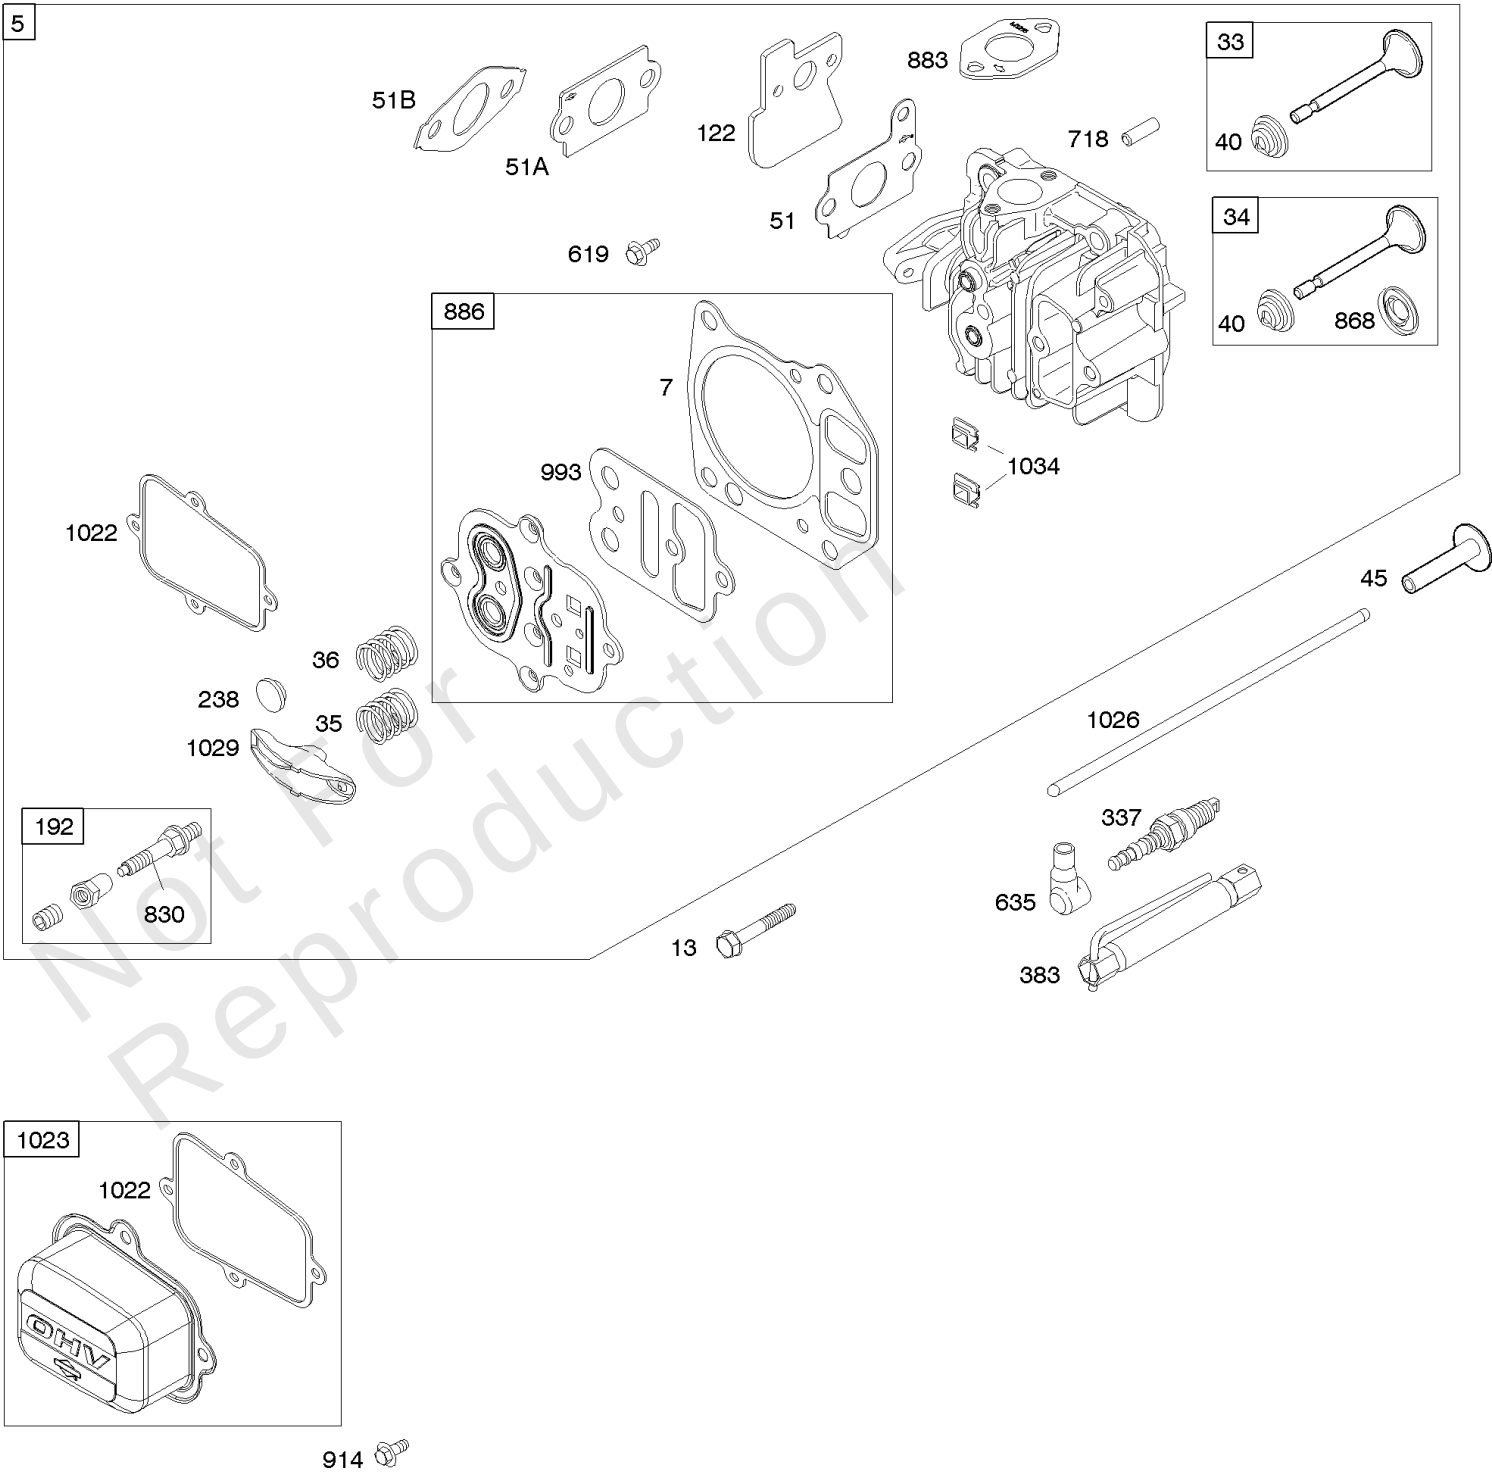

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
5	695276		HEAD, Cylinder -Used Before Code Date 05110200
5	792381		HEAD, Cylinder -Used After Code Date 05110100
7	697230		GASKET-CYLINDER HEAD
13	691137		SCREW -(Cylinder Head)
33	499642		VALVE, Exhaust
34	499641		VALVE, Intake
35	691304		SPRING, Valve -(Intake)
36	691304		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
45	690977		TAPPET, Valve
51	692668		GASKET, Intake
51A	697735		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
122	692799		SPACER, Carburetor
192	694543		ADJUSTER-ROCKER ARM
238	691300		CAP, Valve
337	692051		PLUG, Spark
383	19374S		WRENCH, Spark Plug
619	691108		SCREW -(Cylinder Head Plate)
635	66538S		BOOT, Spark PLug
718	690959		PIN, Locating
830	694544		STUD-ROCKER ARM -(Rocker Arm)
868	692044		SEAL, Valve
883	691893		GASKET-EXHAUST
886	696268		KIT, Cylinder Head/Plate Gasket
914	691108		SCREW -(Rocker Cover)
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1023	499624		COVER, Rocker
1026	692045		ROD, Push
1029	691230		ARM, Rocker
1034	691343		GUIDE, Push Rod

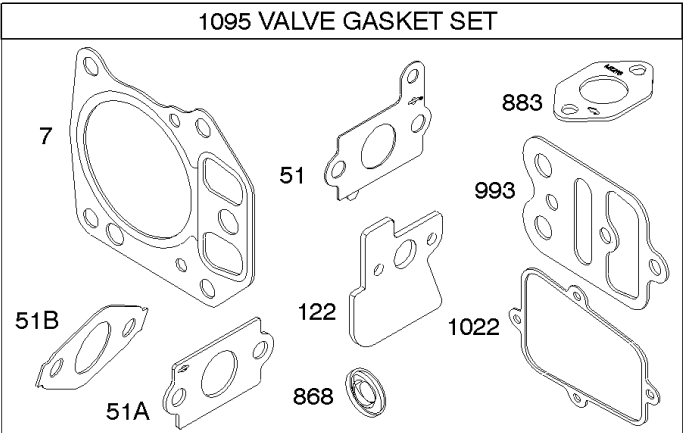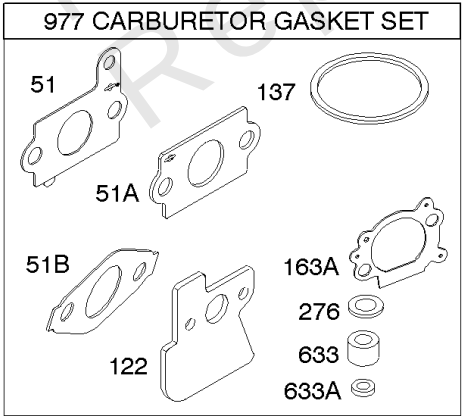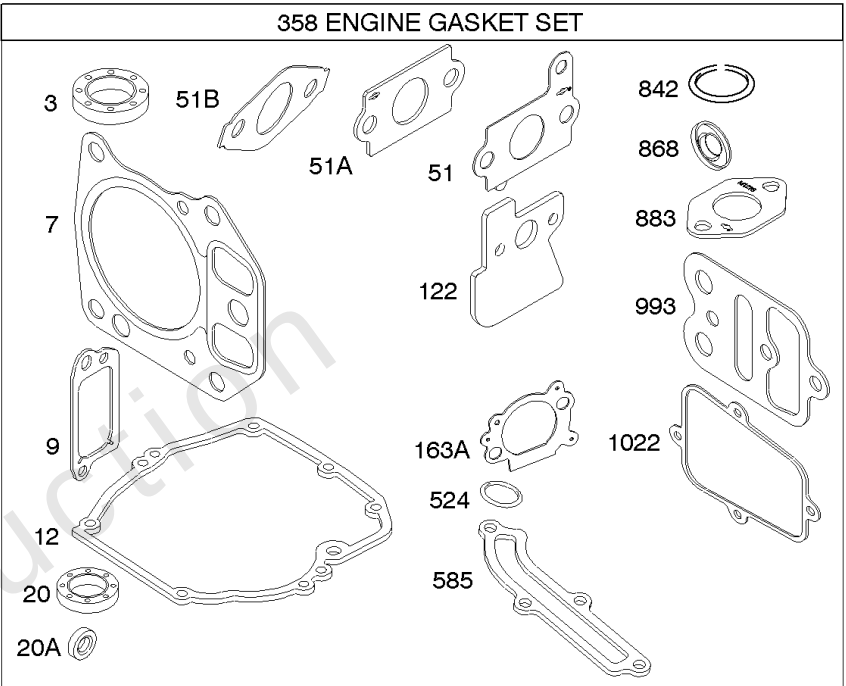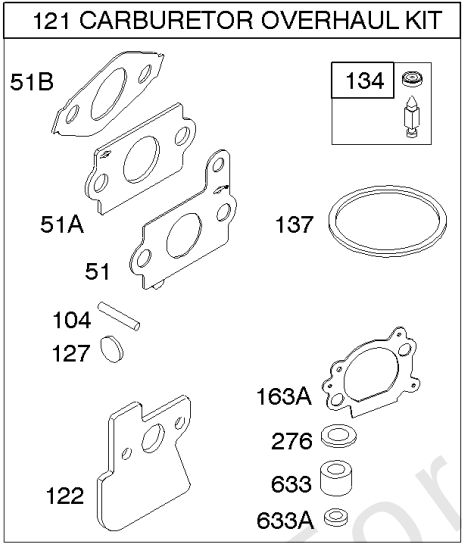

Kits/Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
7	697230		GASKET-CYLINDER HEAD
9	699833		GASKET-BREATHER
12	692232		GASKET, Crankcase
20	399781S		SEAL, Oil -(PTO Side)
20A	691952		SEAL, Oil -(PTO Side) (Auxiliary PTO)
51	692668		GASKET, Intake
51A	697735		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
104	691242		PIN, Float Hinge
121	792383		KIT, Carburetor Overhaul
122	692799		SPACER, Carburetor
127	694468		PLUG, Welch -(Bowl Vent)
134	398188		KIT-NEEDLE/SEAT
137	693981		GASKET-FLOAT BOWL
163A	692667		GASKET, Air Cleaner -(Air Cleaner)
276	271716		WASHER-SEALING
358	792384		GASKET SET, Engine
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
585	691879		GASKET-BREA PASSAGE
633	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)
633A	693867		SEAL, Choke/Throttle Shaft
842	691031		SEAL, O-Ring -(Dipstick Tube)
868	692044		SEAL, Valve
883	691893		GASKET-EXHAUST
977	792385		SET, Carburetor Gasket
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1095	792386		GASKET SET, Valve

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	121S022015	1	Replacement Engine
	692745	1	Replacement Short Block
	-----		Top No-Load Speed: 2800 -Trim: ALL
	-----		Service Note: If the replacement engine supersedes to or is a Model 120000 series engine, refer to the illustrations located after the conversion data for this model series. the overall dimensions that differ, are shown in the illustrations.
	-----		Service Note: If after making a visual inspection and it is determined the Model 120000 series engine cannot be used because of equipment interference, the original engine should be repaired with individual parts.

