








Parts Manual

Mfg. No: 121132-4121-B8






Model Components	Page
Air Cleaner, Exhaust System.	4
Blower Housing, Flywheel, Rewind Starter.	8
Camshaft, Crankshaft, Cylinder, Piston Group.	12
Carburetor, Fuel Supply.	16
Controls, Governor Spring, Ignition.	20
Crankcase Cover, Gear Reduction, Lubrication.	22
Cylinder Head.	24
Replacement Engine - US & Canada.	28

Not For
Reproduction

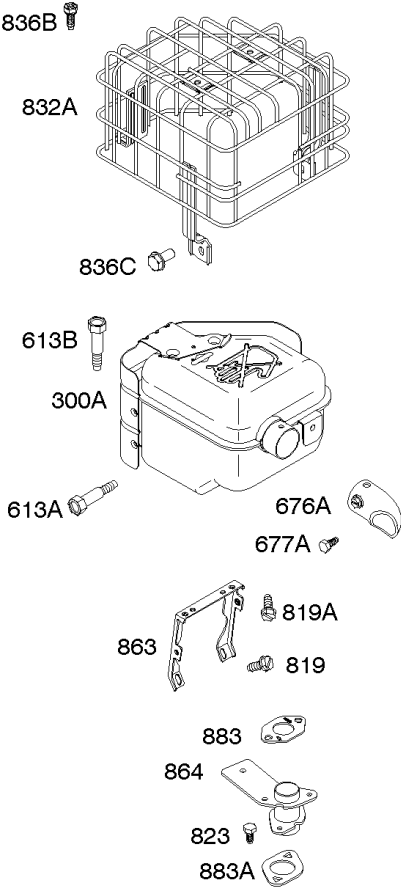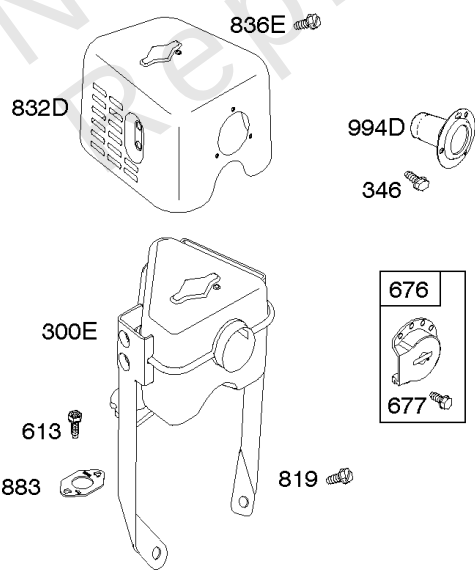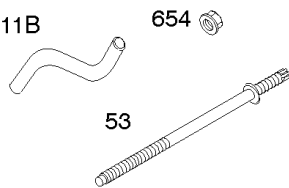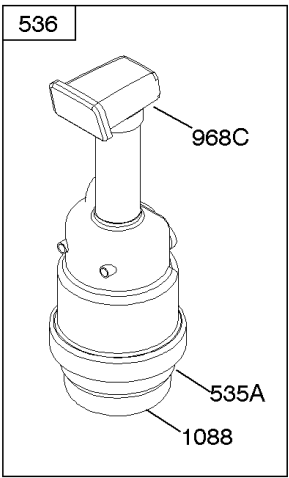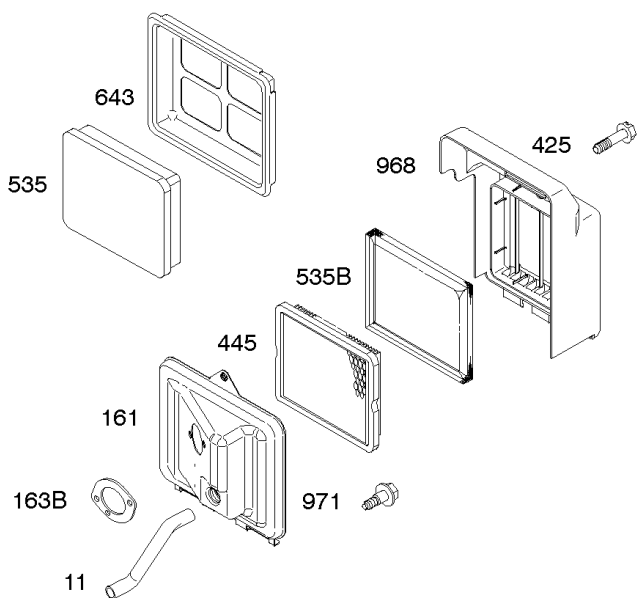





Air Cleaner, Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
11	812208		TUBE, Breather -(Flat Panel Air Cleaner)
11B	797175		TUBE, Breather -(Oil Bath Air Cleaner)
53	797172		STUD -(Carburetor)
161	699207		BASE-AIR CLEANER -(Flat Panel Air Cleaner)
163B	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
300A	797433		MUFFLER
300E	791595		MUFFLER
346	690661		SCREW -(Spark Arrestor) (SAE)
346	699203		SCREW -(Spark Arrestor) (Metric)
425	699208		SCREW -(Air Cleaner Cover)
445	491588S		FILTER, A/C Cartridge -(Flat Panel)
535	696263		FILTER, Air Cleaner Foam
535B	493537S		FILTER, Air Cleaner Foam -(Flat Panel)
536	797169		BASE, Air Cleaner -(Oil Bath Air Cleaner)
613	791972		SCREW -(Muffler)
613A	699481		SCREW -(Muffler)
613B	697812		SCREW -(Muffler) (SAE)
613B	799081		SCREW -(Muffler) (Metric)
643	696264		RETAINER, Air Filter
654	690939		NUT -(Carburetor)
676	393760		DEFLECTOR, Muffler
676A	697816		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector) (SAE)
677	699203		SCREW -(Muffler Deflector) (Metric)
677A	699776		SCREW -(Muffler Deflector)
819	699233		SCREW -(Muffler Bracket)
819A	699230		SCREW -(Muffler Bracket)
823	791972		SCREW -(Muffler Adapter)
832A	697818		GUARD, Muffler
832D	796240		GUARD, Muffler
836B	791972		SCREW -(Muffler Guard)
836C	699234		SCREW -(Muffler Guard)
836E	699755		SCREW -(Muffler Guard)

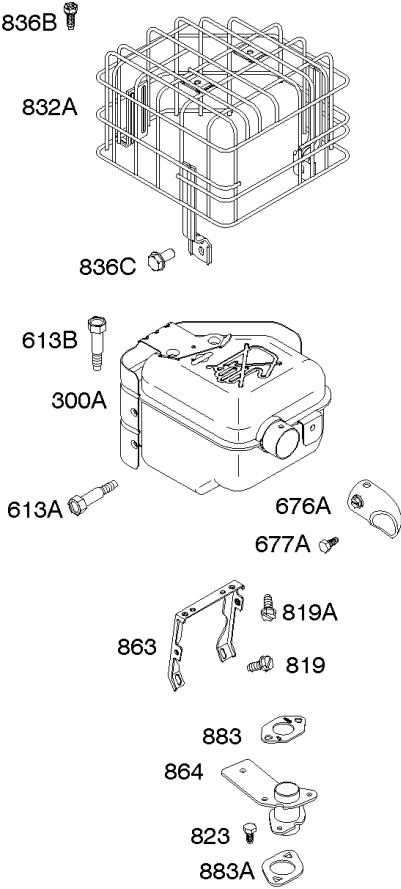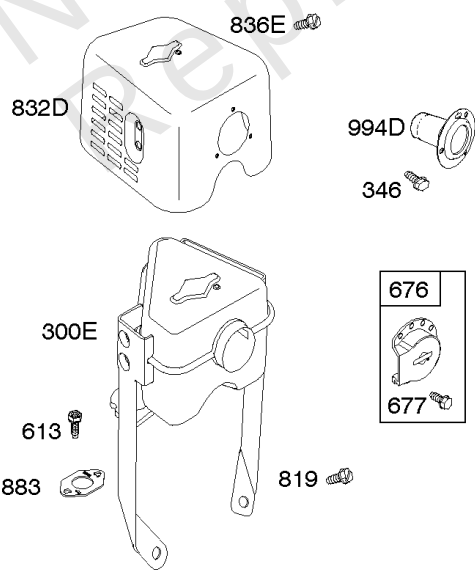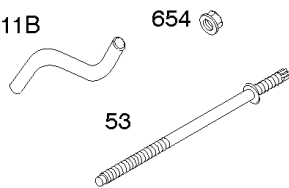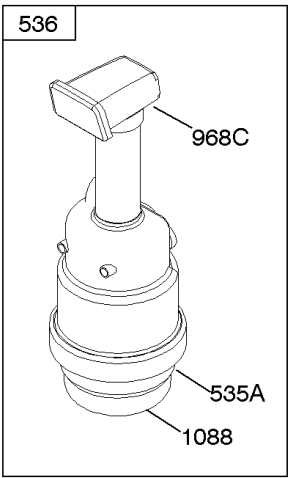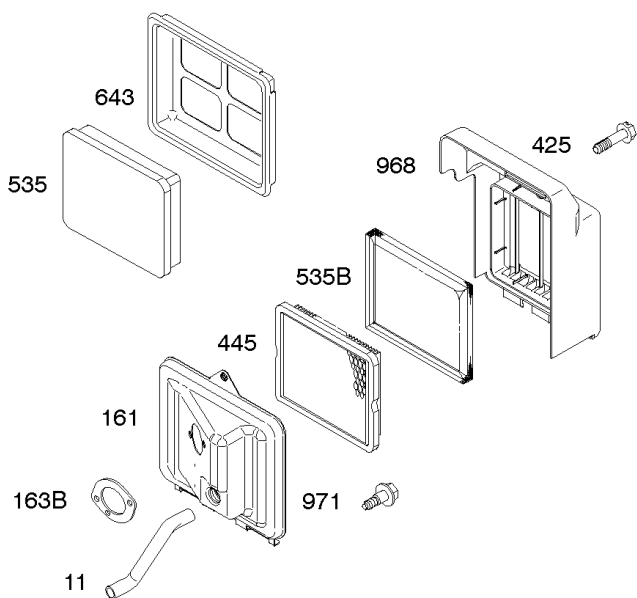

Air Cleaner, Exhaust System





REF NO	PART NO	QTY	DESCRIPTION
863	699229		BRACKET, Muffler
864	699232		ADAPTER, Muffler
883	691893		GASKET-EXHAUST
883A	692237		GASKET-EXHAUST
968	692584		COVER, Air Cleaner -(Flat Panel)
968C	797581		COVER, Air Cleaner -(Oil Bath Air Cleaner)
971	690370		SCREW -(Air Cleaner Base to Carburetor/Throttle Body) (SAE)
971	798649		SCREW -(Air Cleaner Base to Carburetor/Throttle Body) (Metric)
994D	793985		ARRESTOR, Spark
1088	797582		PAN, Oil

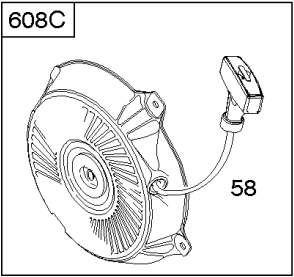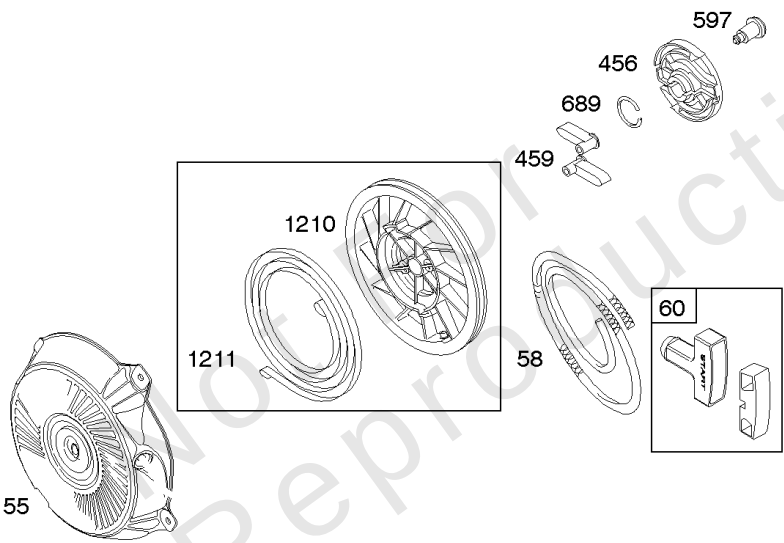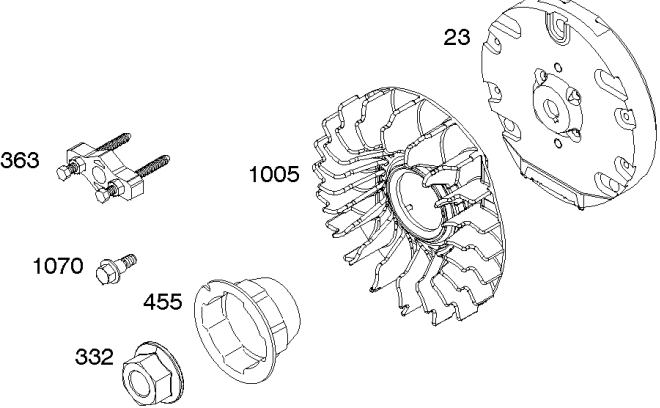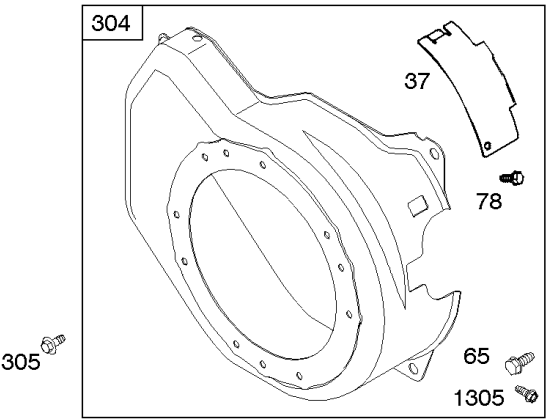

65

Blower Housing, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	699488		FLYWHEEL
37	699661		GUARD, Flywheel
55	-----		Housing-Rewind Starter -(Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
55	791848		HOUSING, Rewind Starter -Used Before Code Date 12010100
58	693389		ROPE, Starter -(Cut To Required Length) -Used After Code Date 11123100
58	66574		ROPE, Starter -(Cut To Required Length) -Used Before Code Date 12010100
60	490652		GRIP-STARTER ROPE -(2 Piece)
65	699228		SCREW -(Rewind Starter) (Metric)
78	699205		SCREW -(Flywheel Guard)
304	699598		HOUSING, Blower
305	699481		SCREW -(Blower Housing)
332	591988		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	591302		CUP, Flywheel
456	-----		Plate-Pawl Friction -(Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
456	692299		PLATE-PAWL FRICTION -Used Before Code Date 12010100
459	-----		Pawl-Ratchet -(Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
459	281505S		PAWL-RATCHET -Used Before Code Date 12010100
597	-----		Screw -(Pawl Friction Plate) (Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
597	691696		SCREW -(Pawl Friction Plate) -Used Before Code Date 12010100
608C	591301		STARTER, Rewind
689	691855		SPRING-FRICTION -Used Before Code Date 12010100
689	-----		Spring-Friction -(Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
1005	794273		FAN, Flywheel
1070	699201		SCREW -(Flywheel Fan)
1210	791849		PULLEY/SPRING ASSEMBLY -(Pulley) -Used Before Code Date 12010100
1210	-----		Pulley/Spring Assembly -(Pulley) (Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
1211	791849		PULLEY/SPRING ASSEMBLY -(Spring) -Used Before Code Date 12010100

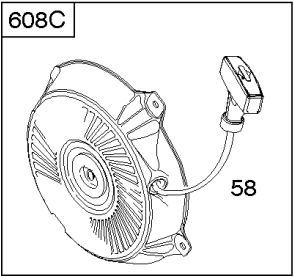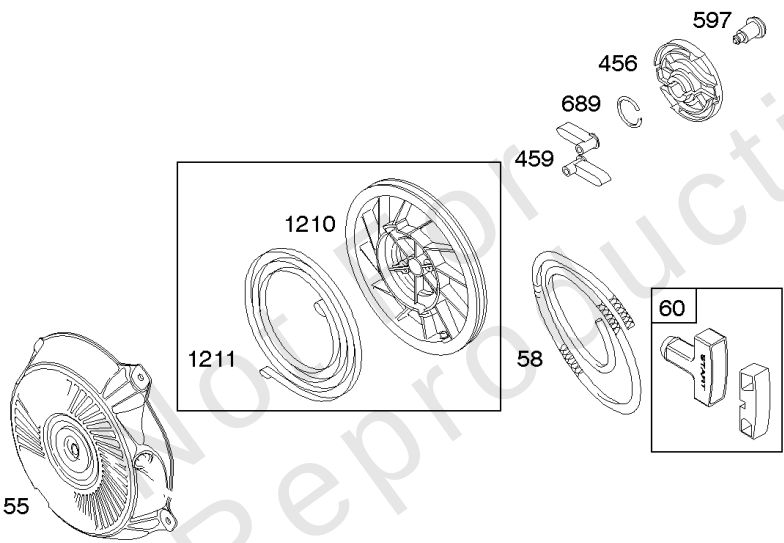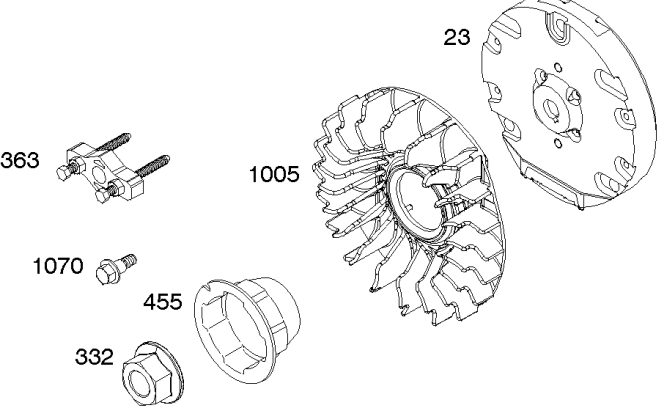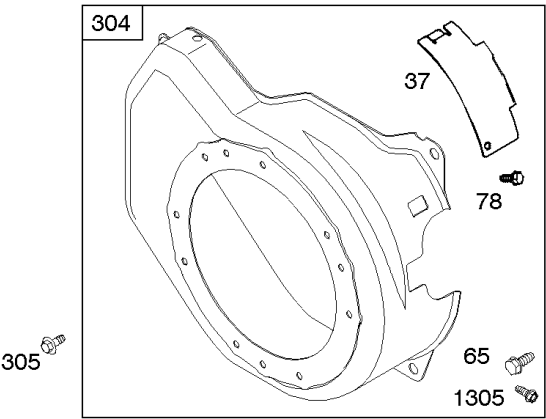


65

Blower Housing, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
1211	-----		Pulley/Spring Assembly -(Spring) (Not Serviced Separate. Service With Rewind Assembly.) -Used After Code Date 11123100
1305	699691		SCREW -(Oil Sensor Module)

Not For Reproduction


1036 EMISSIONS LABEL
1058 OPERATOR'S MANUAL
1319 WARNING LABEL
1319A WARNING LABEL
1330 REPAIR MANUAL

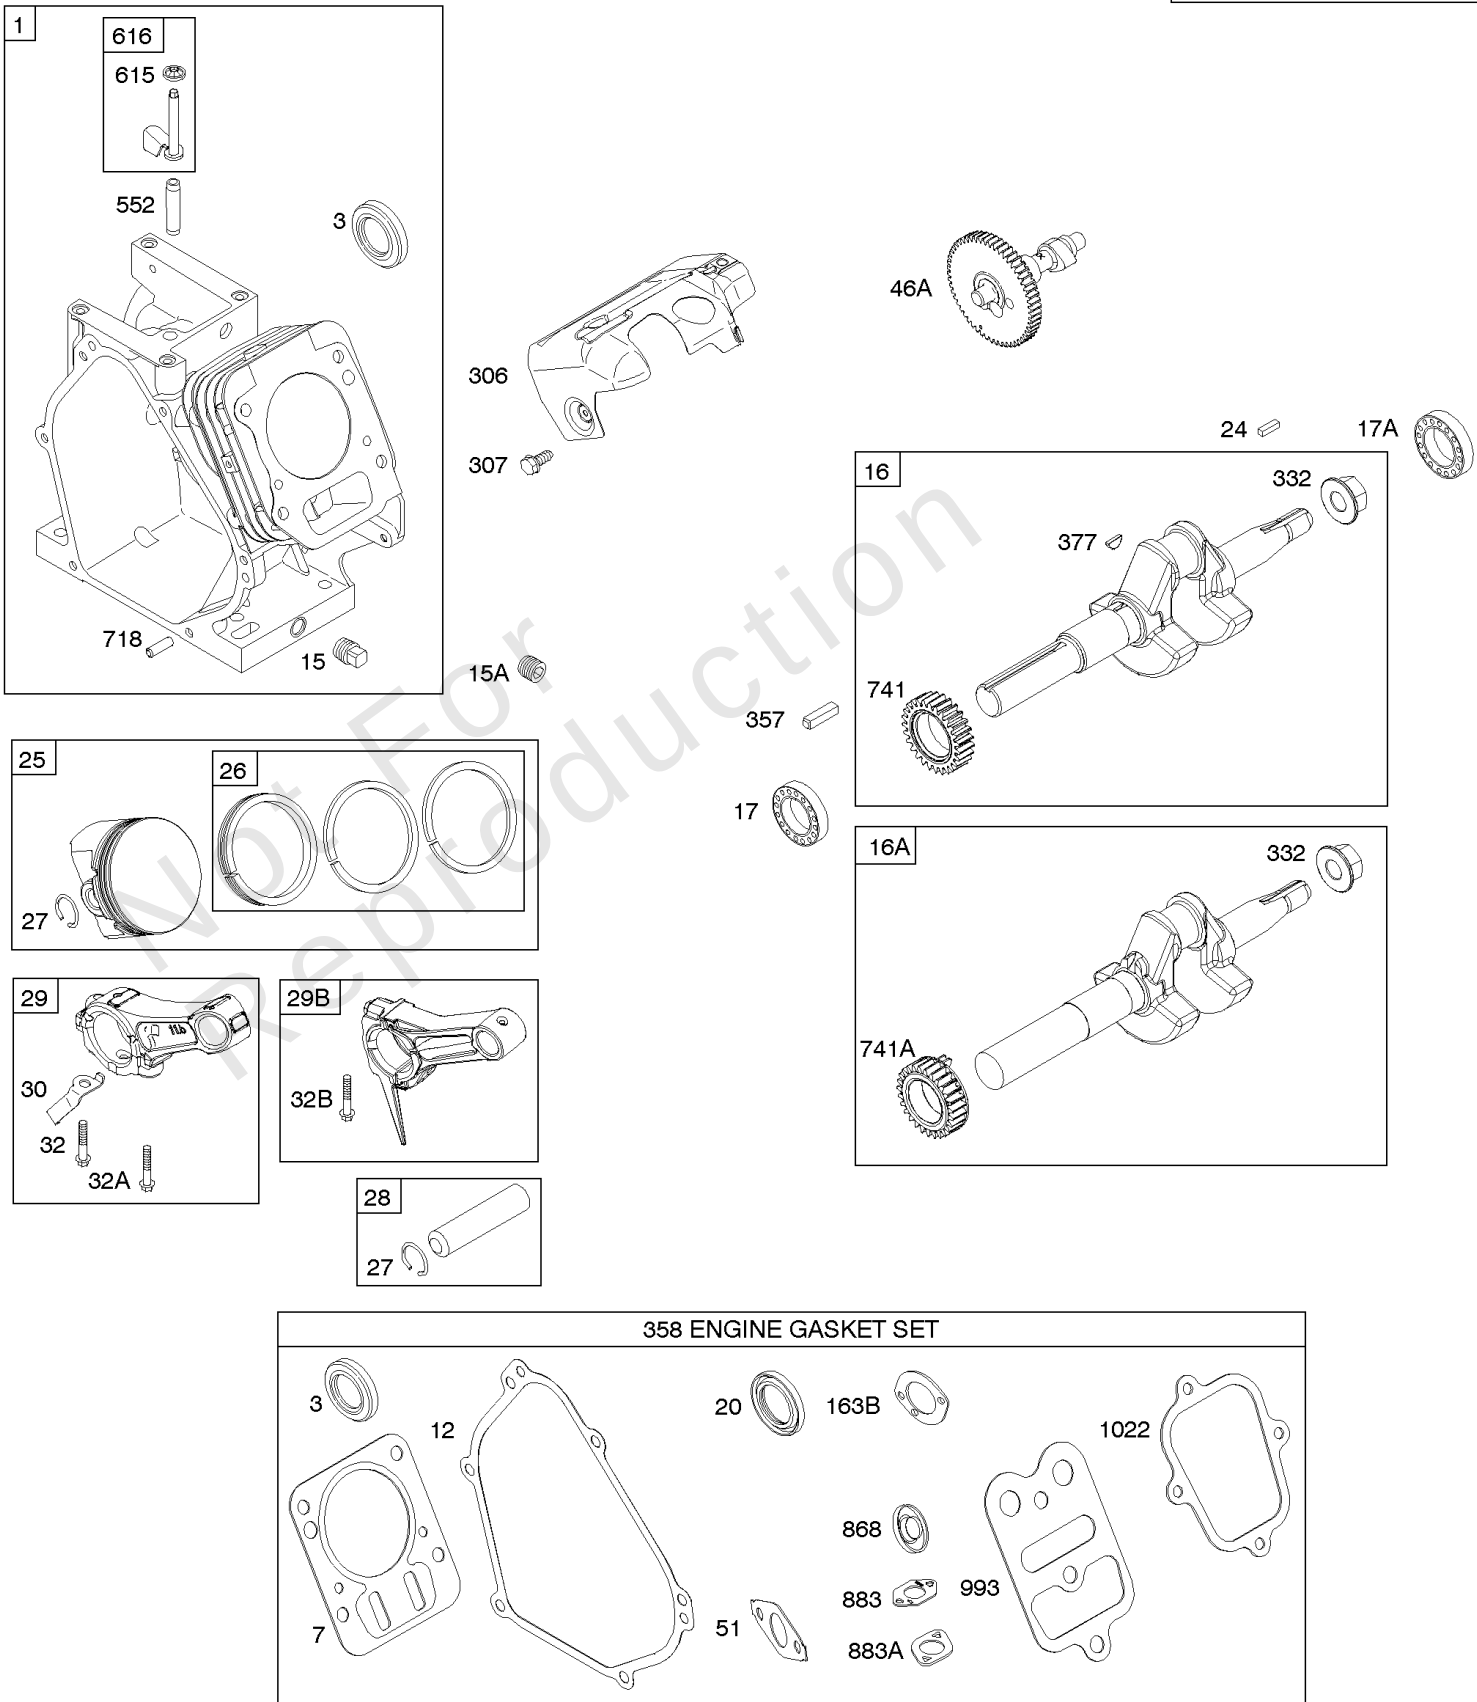

Camshaft, Crankshaft, Cylinder, Piston Group



REF NO	PART NO	QTY	DESCRIPTION
1	699490		CYLINDER ASSEMBLY
3	299819S		SEAL, Oil -(Magneto Side)
7	698210		GASKET, Cylinder Head
12	699485		GASKET, Crankcase
15	691686		PLUG-OIL DRAIN -(Square Head)
15A	691682		PLUG-OIL DRAIN -(Flush)
16	799917		CRANKSHAFT
17	798538		BEARING, Ball -(PTO Side)
17A	690824		BEARING-BALL
20	692550		SEAL-OIL -(PTO Side)
24	796335		KEY, Flywheel
25	799064		PISTON ASSEMBLY -(.020 Oversize)
25	799063		PISTON ASSEMBLY -(Standard)
26	791324		SET, Ring -(.020 Oversize)
26	791969		SET, Ring -(Standard)
27	691866		LOCK-PISTON PIN
28	499423		PIN-PISTON/STD -(Standard)
29	792247		ROD, Connecting -(.020 Undersize)
29B	798813		ROD, Connecting -(Metric)
30	791584		DIPPER-CONN ROD
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod)
32B	797437		SCREW -(Connecting Rod) (Metric) -Used After Code Date 09053100
32B	791784		SCREW -(Connecting Rod) (SAE) -Used Before Code Date 09060100
46A	696813		CAMSHAFT
51	692555		GASKET, Intake -(2 Required)
163B	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
306	795334		SHIELD-CYLINDER
307	699483		SCREW -(Cylinder Shield)
332	591988		NUT -(Flywheel)
357	798869		KEY, Drive Pulley -(Metric)
357	692191		KEY, Drive Pulley -(SAE)
358	791797		GASKET SET, Engine
377	690979		KEY, Woodruff

- 1036 EMISSIONS LABEL
- 1058 OPERATOR'S MANUAL
- 1319 WARNING LABEL
- 1319A WARNING LABEL
- 1330 REPAIR MANUAL

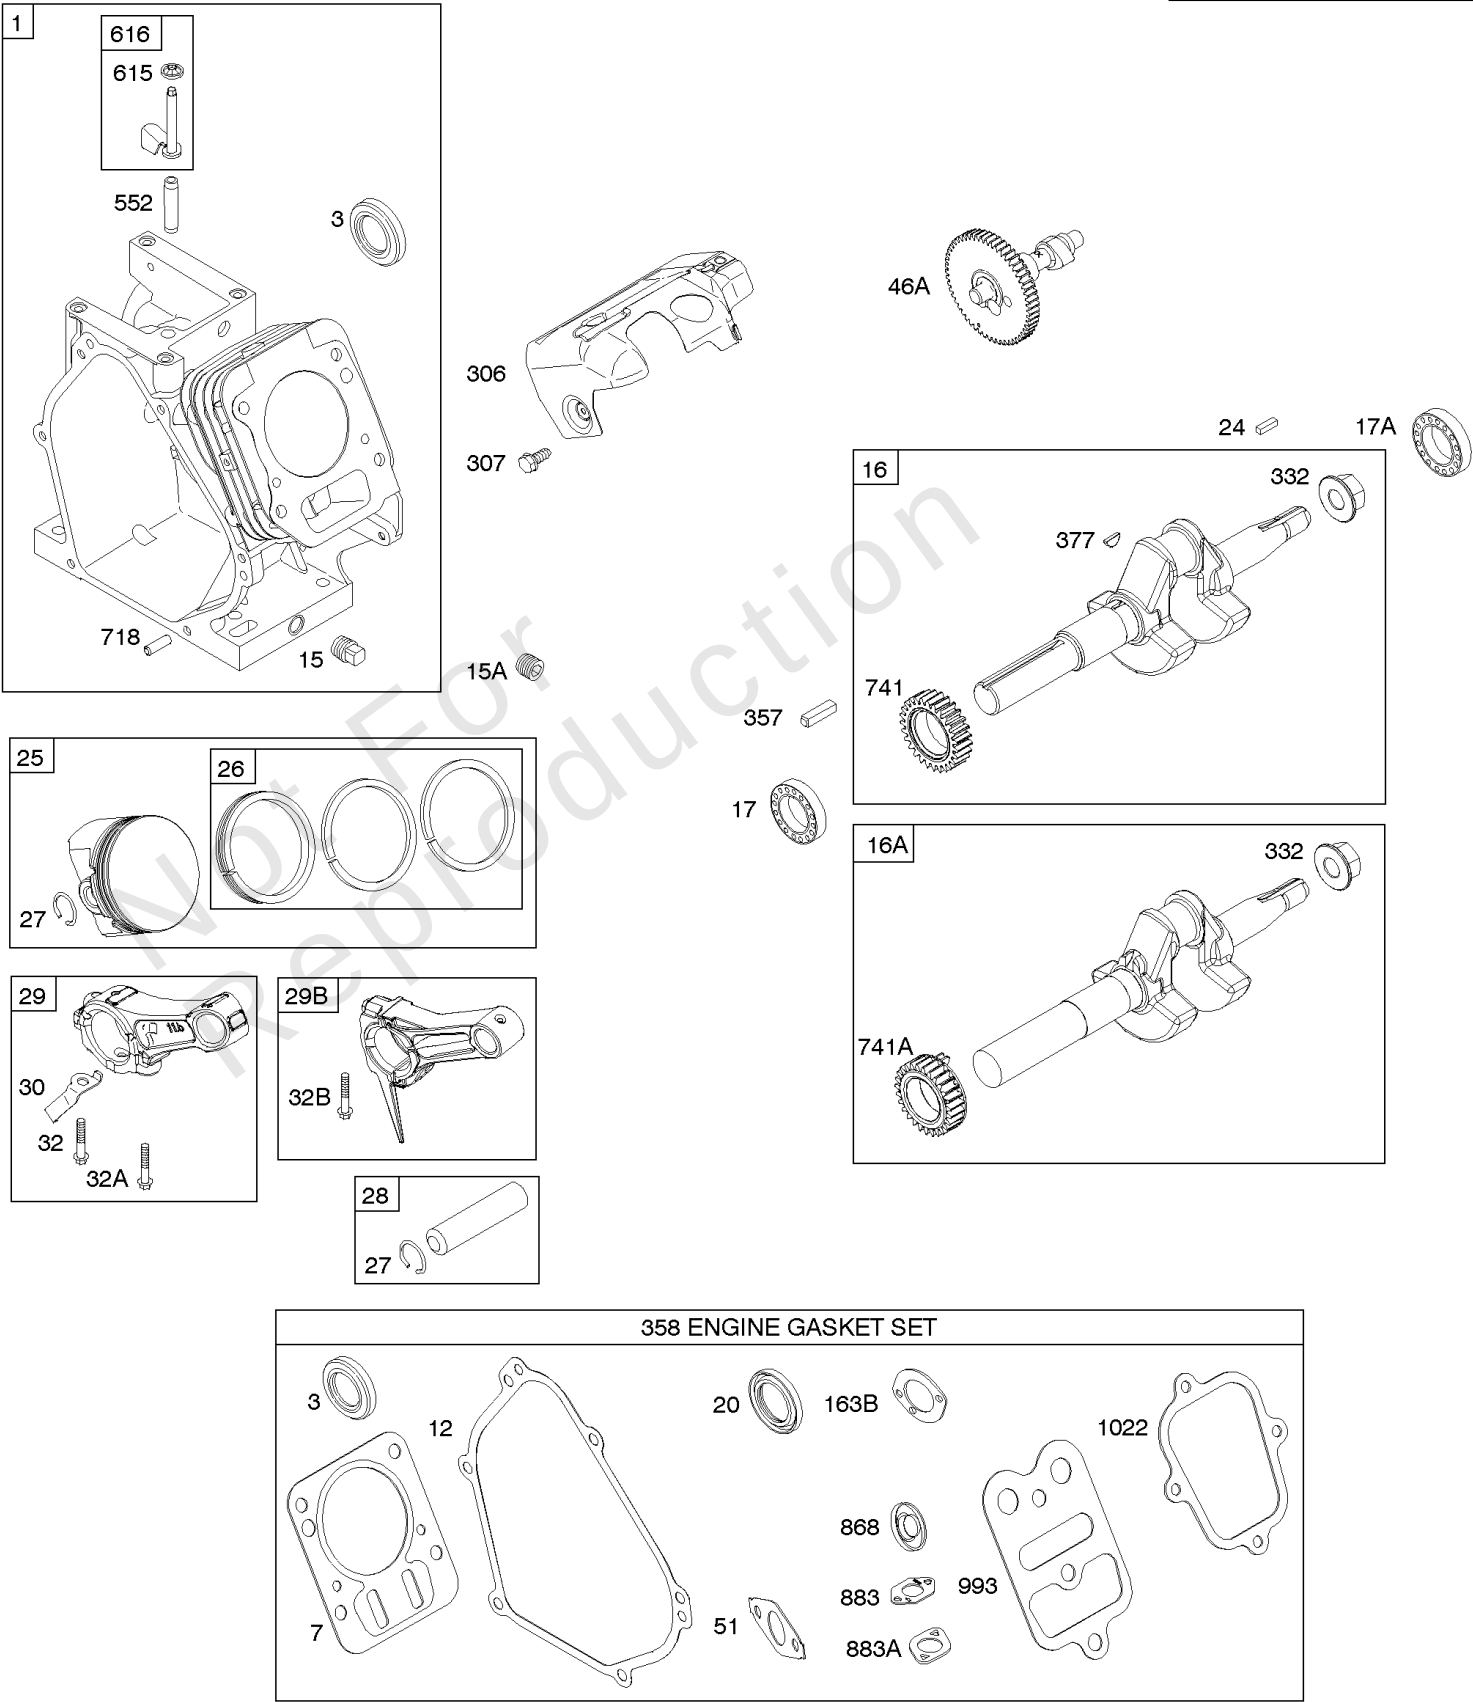


Camshaft, Crankshaft, Cylinder, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
552	692346		BUSHING, Governor Crank
615	692576		RETAINER, Governor Shaft
616	692547		CRANK, Governor
718	690959		PIN, Locating
741	695087		GEAR, Timing
741A	593499		GEAR, Timing
868	795440		SEAL-VALVE
883	691893		GASKET-EXHAUST
883A	692237		GASKET-EXHAUST
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1058	277040		MANUAL, Operator's
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1330	272147		MANUAL, Repair

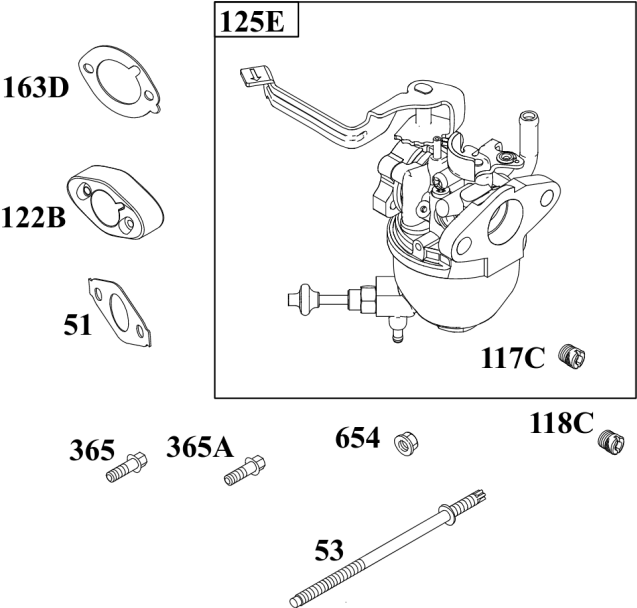
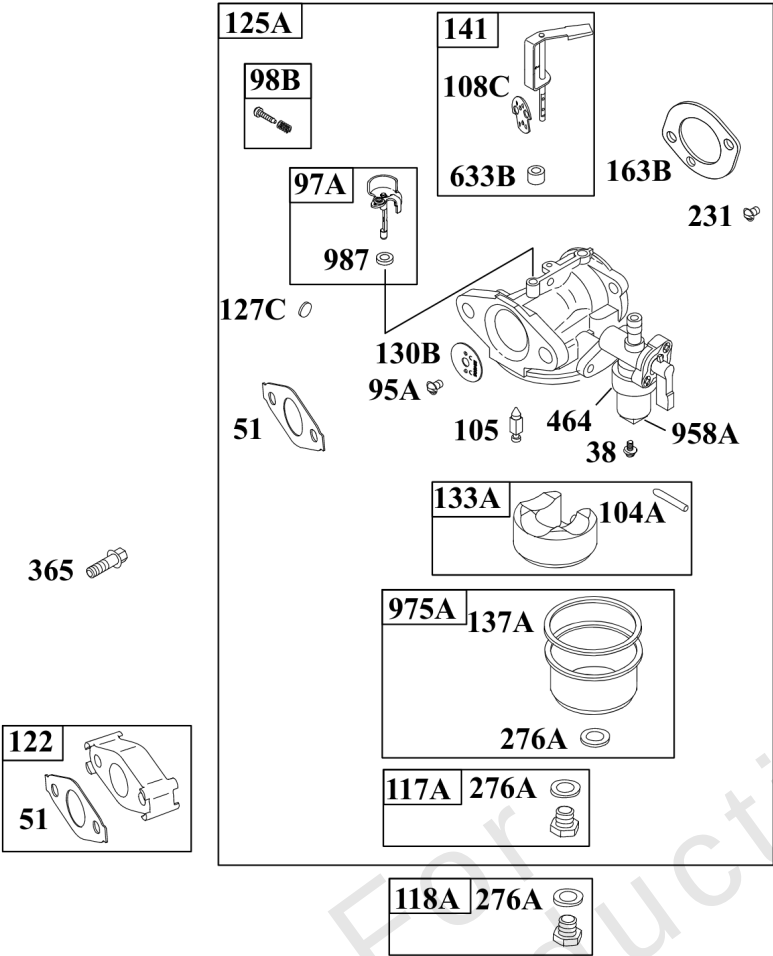


121D CARBURETOR OVERHAUL KIT					
51	104A	137A	163B	464	633B
127C					

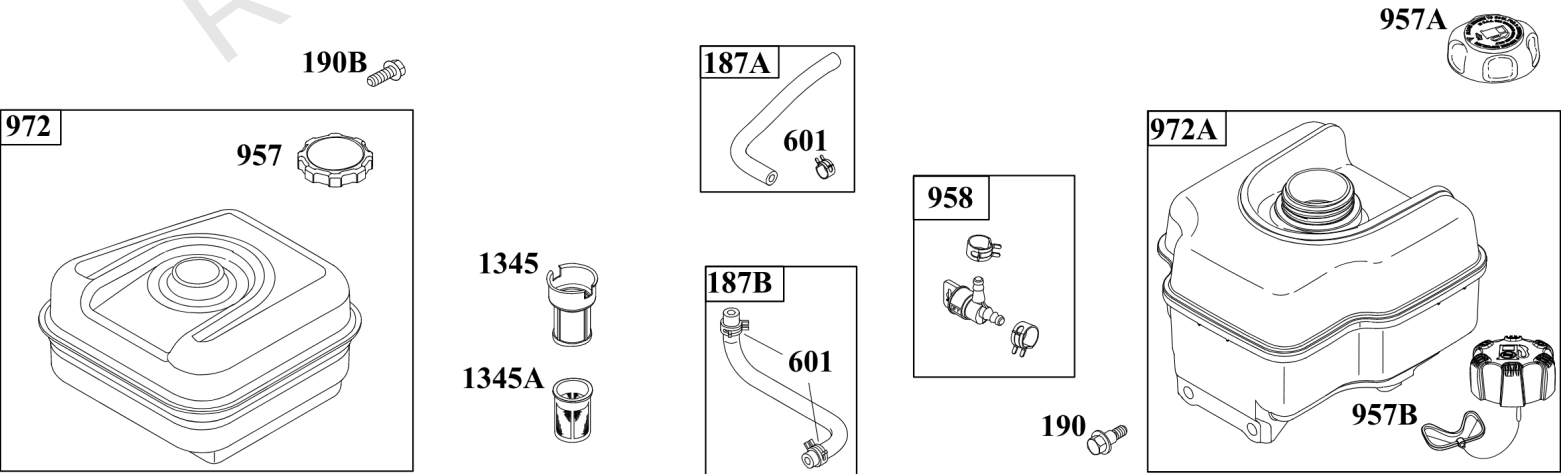


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
38	698557		SCREW -(Fuel Shut Off Valve)
51	692555		GASKET, Intake -(2 Required)
53	797172		STUD -(Carburetor)
95A	698544		SCREW -(Throttle Valve)
97A	698542		SHAFT, Throttle
98B	698551		KIT, Idle Speed
104A	698536		PIN, Float Hinge
105	698537		VALVE, Float Needle
108C	698546		VALVE, Choke
117A	698670		JET, Main -(Standard)
118A	698552		JET, Main -(High Altitude)
121D	797634		KIT, Carburetor Overhaul
122	795208		SPACER, Carburetor
125A	698535		CARBURETOR
127C	690727		PLUG, Welch
130B	698543		VALVE, Throttle
133A	698539		FLOAT, Carburetor
137A	698538		GASKET, Float Bowl
141	698545		KIT, Choke Shaft
163B	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
187A	791867		LINE, Fuel -(Molded)
187B	791874		LINE, Fuel -(Molded)
190	699220		SCREW -(Fuel Tank)
190B	795047		SCREW -(Fuel Tank)
231	690718		SCREW -(Choke Valve)
276A	698540		WASHER, Sealing
365	699484		SCREW -(Carburetor)
464	698550		SEAL, O-Ring -(Fuel Shut-off Valve)
601	791850		CLAMP, Hose
633B	690998		SEAL, Choke/Throttle Shaft
654	690939		NUT -(Carburetor)
957	794641		CAP, Fuel Tank
957A	795027		CAP, Fuel Tank -(Text Free)
957B	799719		CAP, Fuel Tank -(Carbon In Cap)
958	698180		VALVE, Fuel Shutoff
958A	698549		VALVE, Fuel Shut Off
972	795832		TANK, Fuel
972A	799863		TANK, Fuel
975A	698541		BOWL, Float

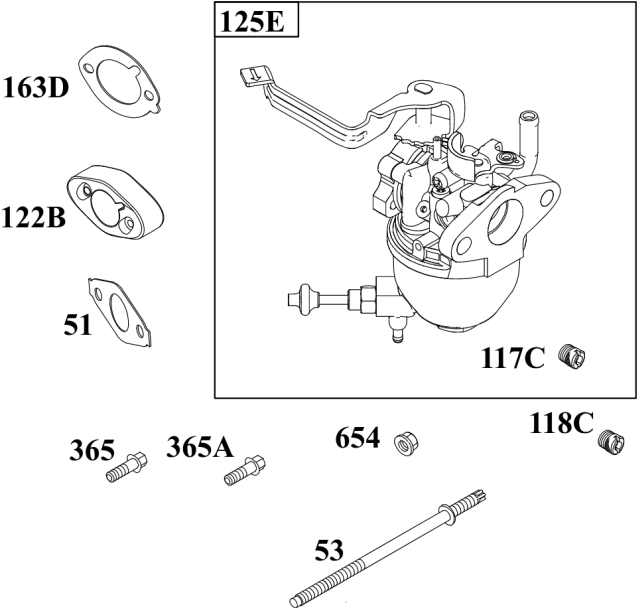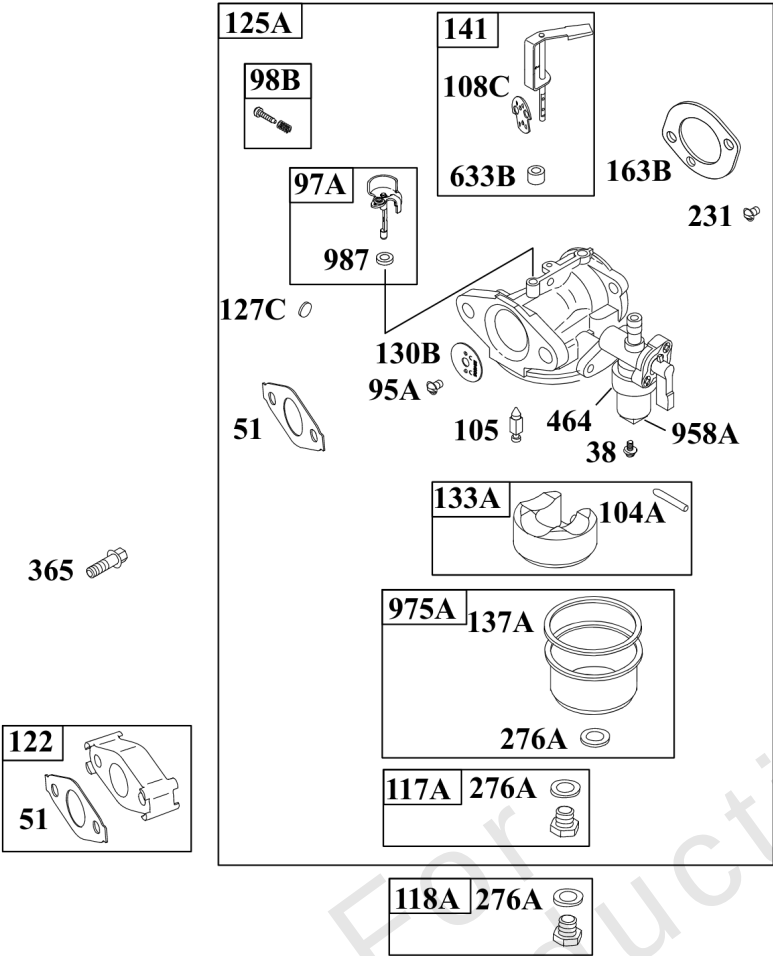









121D CARBURETOR OVERHAUL KIT					
51	104A	137A	163B	464	633B
127C					

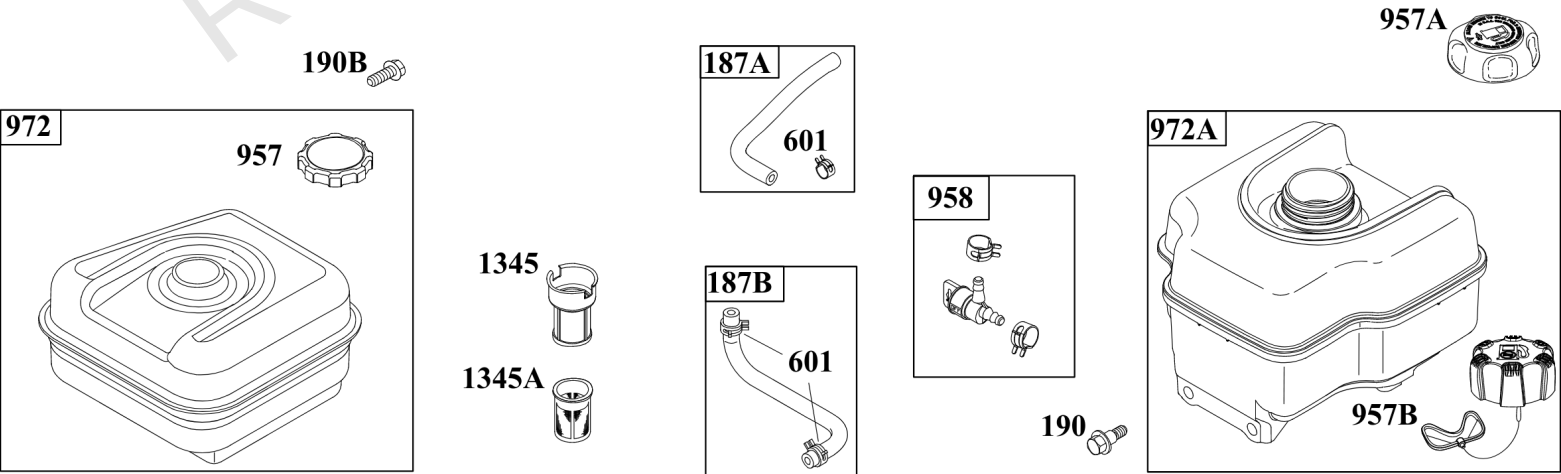

Carburetor, Fuel Supply


REF NO	PART NO	QTY	DESCRIPTION
987	698556		SEAL, Choke/Throttle Shaft
1345	699887		FILTER, Filler Neck
1345A	792917		FILTER, Filler Neck

Not For Reproduction

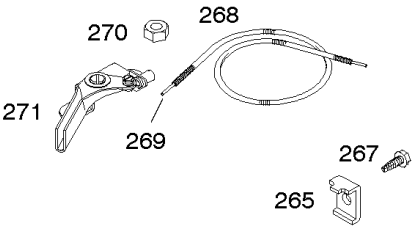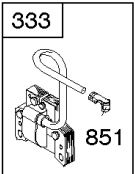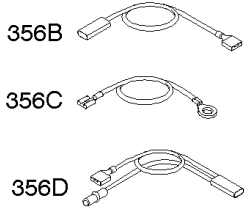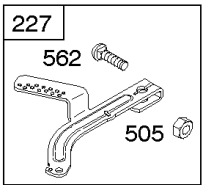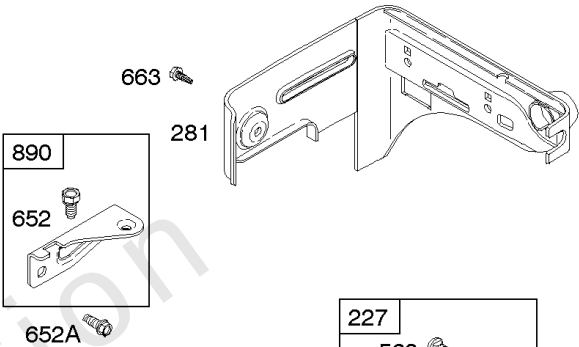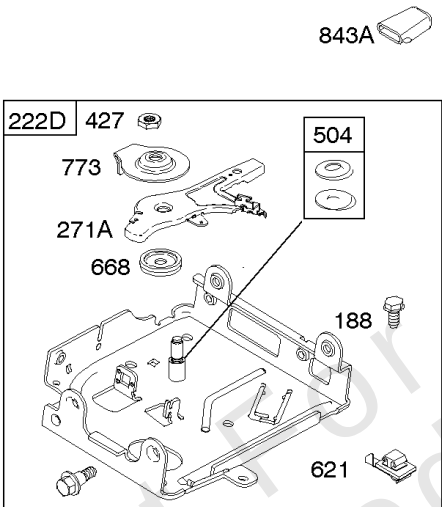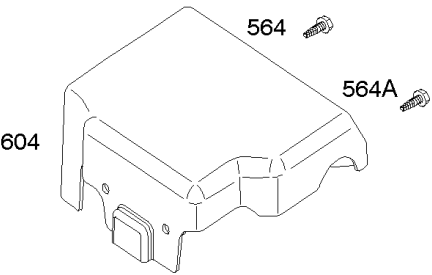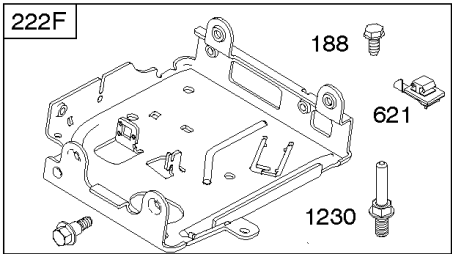




Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
188	699479		SCREW -(Control Bracket)
209	692571		SPRING, Governor
222D	795669		BRACKET, Control -(Used With Metal Fuel Tanks)
227	794367		LEVER, Governor Control
265	691024		CLAMP, Casing
267	699492		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(72" Long)(Cut To Required Length)
269	691026		WIRE, Control -(78" Long)(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271A	694256		LEVER, Control
281	793133		PANEL, Control
333	796964		ARMATURE, Magneto
334	699477		SCREW -(Magneto Armature)
347	795333		SWITCH, Rocker
356B	692602		WIRE-STOP
356C	695630		WIRE, Stop
356D	693651		WIRE, Stop
427	694255		NUT -(Control Bracket) (SAE)
427	798458		NUT -(Control Bracket) (Metric)
504	695383		SET, Friction Washer
505	691251		NUT -(Governor Control Lever)
562	691119		BOLT -(Governor Control Lever)
564	699491		SCREW -(Control Cover)
564A	699206		SCREW -(Control Cover)
604	697326		COVER-CONTROL
621	692310		SWITCH, Stop
632	693408		SPRING/LINK, Mechanical Governor
652	699755		SCREW -(Support Bracket)
652A	699230		SCREW -(Support Bracket)
663	699206		SCREW -(Control Panel)
668	694257		SPACER
773	694258		RETAINER -(Control Bracket)
843A	695588		SLEEVE, Lever
851	493880S		TERMINAL, Spark Plug
890	790203		BRACKET, Support
1230	699847		STUD -(Control Bracket)

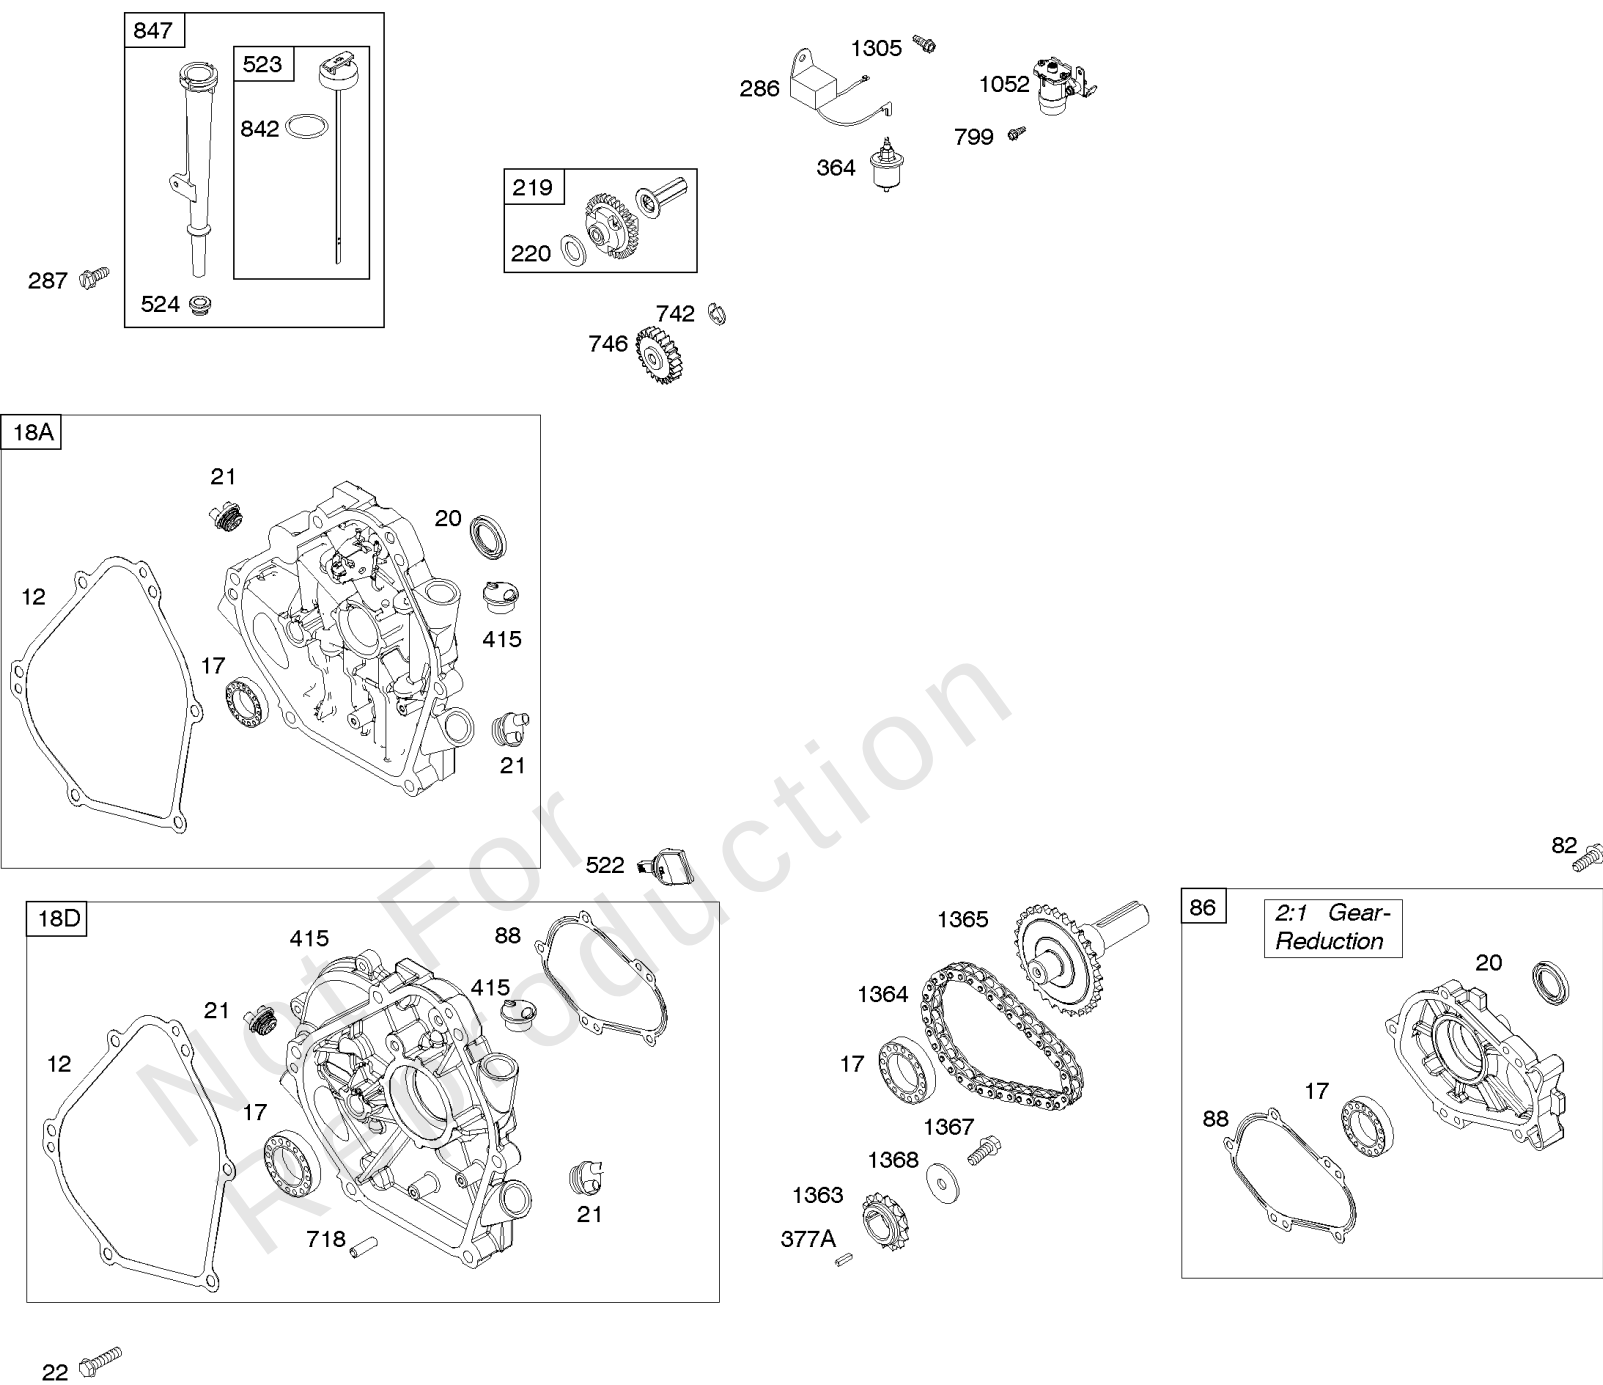




Crankcase Cover, Gear Reduction, Lubrication

REF NO	PART NO	QTY	DESCRIPTION
12	699485		GASKET, Crankcase
17	798538		BEARING, Ball -(PTO Side)
18A	790337		COVER, Crankcase
20	692550		SEAL-OIL -(PTO Side)
21	281658S		CAP, Oil Fill
22	799318		SCREW -(Crankcase Cover/Sump)
82	807421		SCREW -(Gear Reduction Case)
86	790332		COVER, Gear
88	790333		GASKET, Gear Cover/Housing
219	693578		GEAR, Governor
220	691724		WASHER -(Governor Gear)
286	794185		MODULE, Oil Sensor
287	699234		SCREW -(Dipstick Tube)
364	695693		TERMINAL, Oil Plug
377A	790943		KEY, Woodruff
415	693463		PLUG
522	697689		PLUG, Dipstick/Fill
523	693618		DIPSTICK
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
718	690959		PIN, Locating
742	692564		RETAINER, E Ring
746	790278		GEAR-IDLER
799	699202		SCREW -(Oil Sensor)
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	693617		DIPSTICK/TUBE ASSEMBLY
1052	790141		SENSOR, Oil
1305	699691		SCREW -(Oil Sensor Module)
1363	790334		SPROCKET, Gear Reduction
1364	790335		CHAIN, Gear Reduction
1365	790336		SHAFT, Output Gear Reduction
1367	690936		SCREW -(Gear Reduction Sprocket)
1368	690301		WASHER -(Gear Reduction Sprocket)

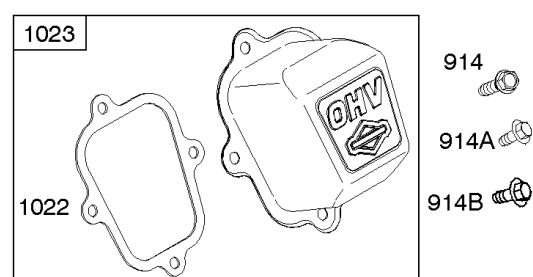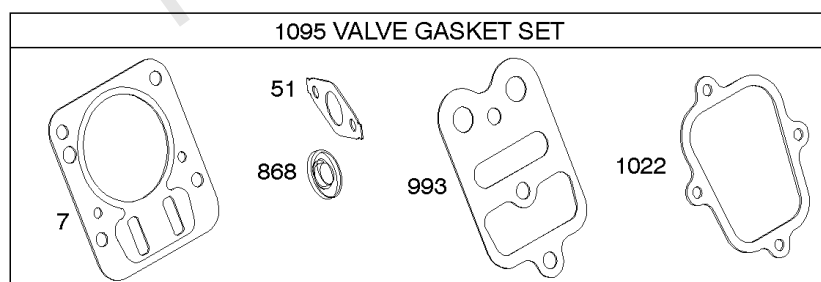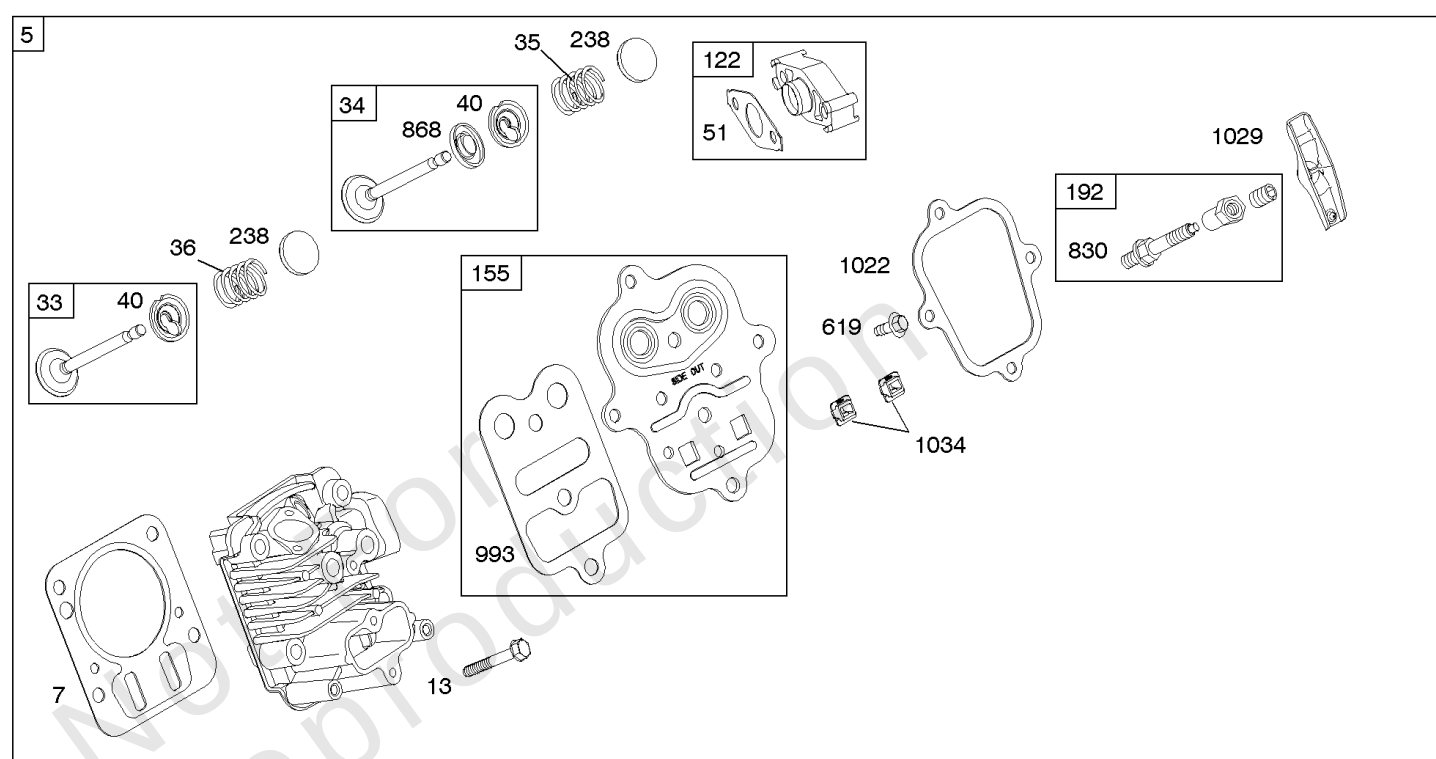

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
5	797439		HEAD, Cylinder -(Metric)
7	698210		GASKET, Cylinder Head
13	699482		SCREW -(Cylinder Head)
33	499642		VALVE, Exhaust
34	795443		VALVE, Intake
35	691304		SPRING, Valve -(Intake)
36	691304		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
45	690977		TAPPET, Valve
51	692555		GASKET, Intake -(2 Required)
122	795208		SPACER, Carburetor
155	698214		PLATE, Cylinder Head -(SAE) -Used Before Code Date 09061800
155	797442		PLATE, Cylinder Head -(Metric) -Used After Code Date 09061700
192	694543		ADJUSTER-ROCKER ARM -(SAE) -Used Before Code Date 09061800
192	797440		ADJUSTER, Rocker Arm -(Metric) -Used After Code Date 09061700
238	691300		CAP, Valve
337	491055S		PLUG, Spark -(Resistor)
337	691043		PLUG, Spark -(EMS)
337	84007216		PLUG, SPARK -(China Only)
383	19576S		WRENCH, Spark Plug
383A	590721		WRENCH, Spark Plug
619	699481		SCREW -(Cylinder Head Plate)
635	692076		BOOT, Spark Plug
635A	798619		BOOT-SPARK PLUG
830	797441		STUD, Rocker Arm -(Rocker Arm) (Metric) -Used After Code Date 09061700
830	694544		STUD-ROCKER ARM -(Rocker Arm) (SAE) -Used Before Code Date 09061800
868	795440		SEAL-VALVE
914	699481		SCREW -(Rocker Cover) (Bottom)
914A	692557		SCREW -(Rocker Cover) (SAE) -Used Before Code Date 09061800
914A	797444		SCREW -(Rocker Cover) (Quantity 1 Top Or Center) -Used After Code Date 09061700
914B	697551		SCREW -(Rocker Cover) (SAE) -Used Before Code Date 09061800

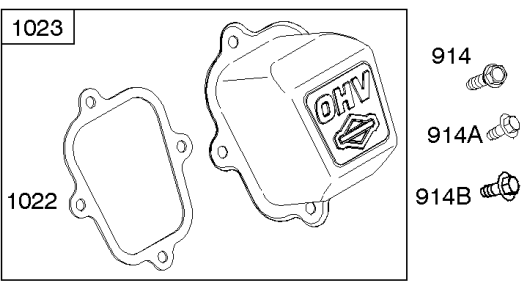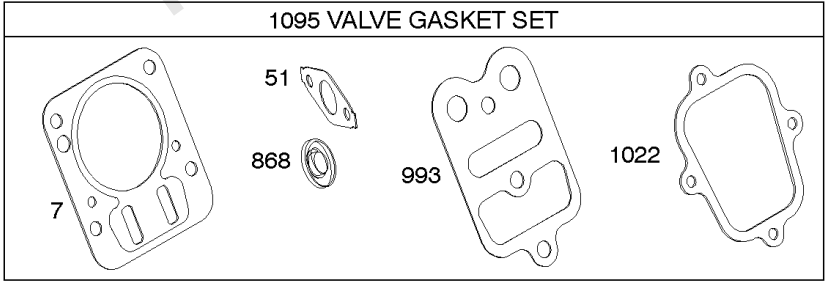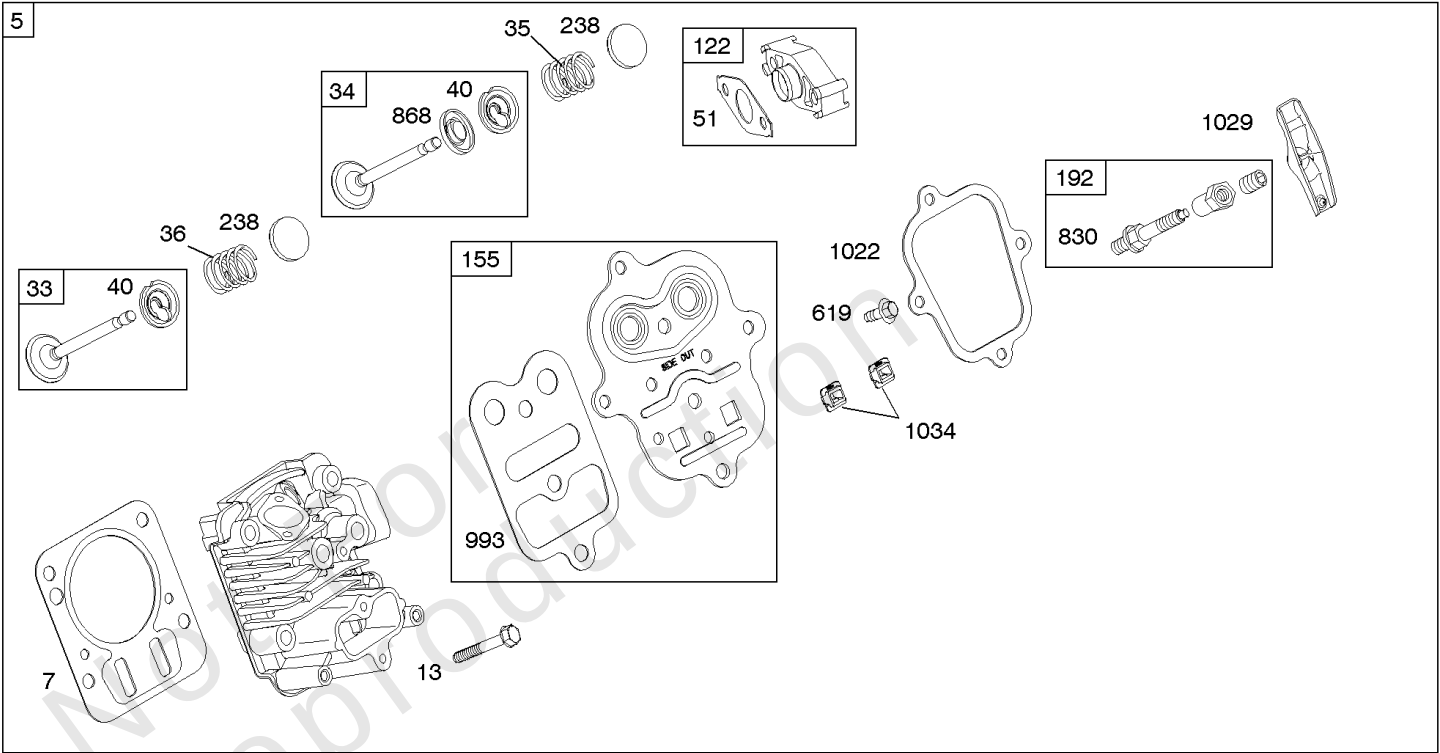

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1023	791585		COVER, Rocker
1026	790287		ROD, Push
1029	797443		ARM, Rocker -(Metric) -Used After Code Date 09061700
1029	691230		ARM, Rocker -(SAE) -Used Before Code Date 09061800
1034	691343		GUIDE, Push Rod
1095	791798		GASKET SET, Valve

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
--------	---------	-----	-------------

Not For Reproduction

