





Parts Manual

Mfg. No: 147452-0146-99

Model Components	Page
BlowerHsg,Rewind,Elec. Start.	4
Carburetor,Fuel,A/C,Sno-Gard.	10
Cylinder, Crankcase,Piston.	16
Electric Starter and Chart.	24
Replacement Engine - US & Canada.	28

Not For
Reproduction

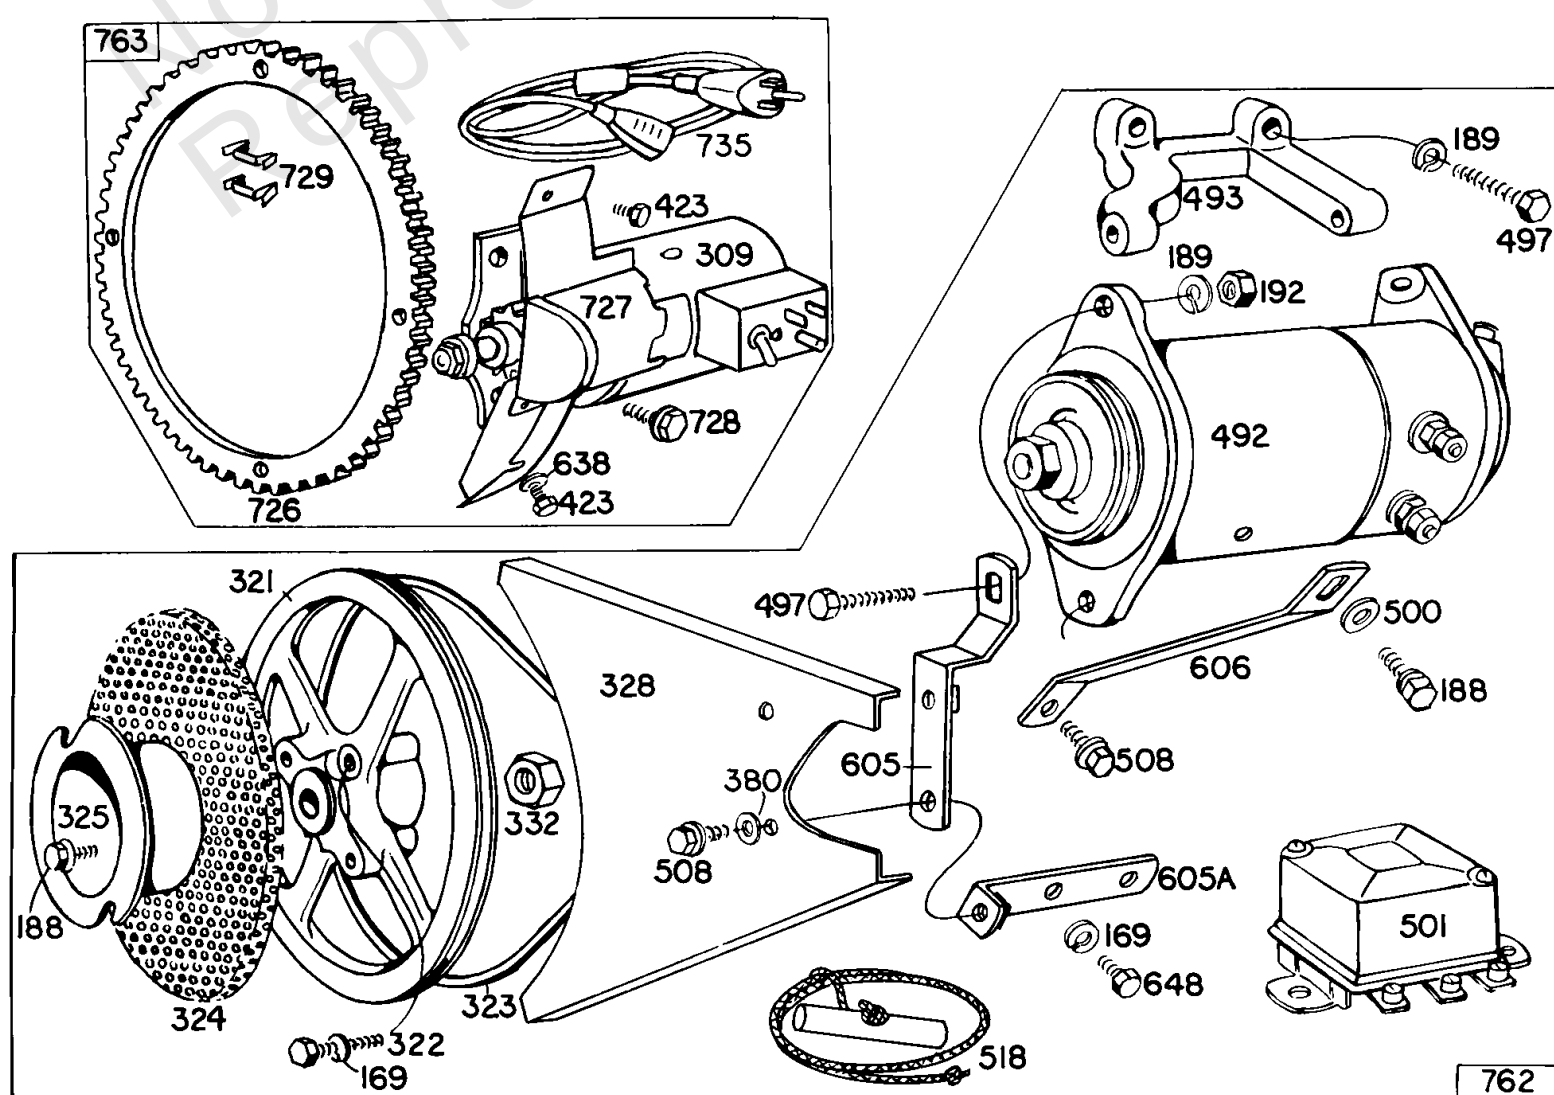
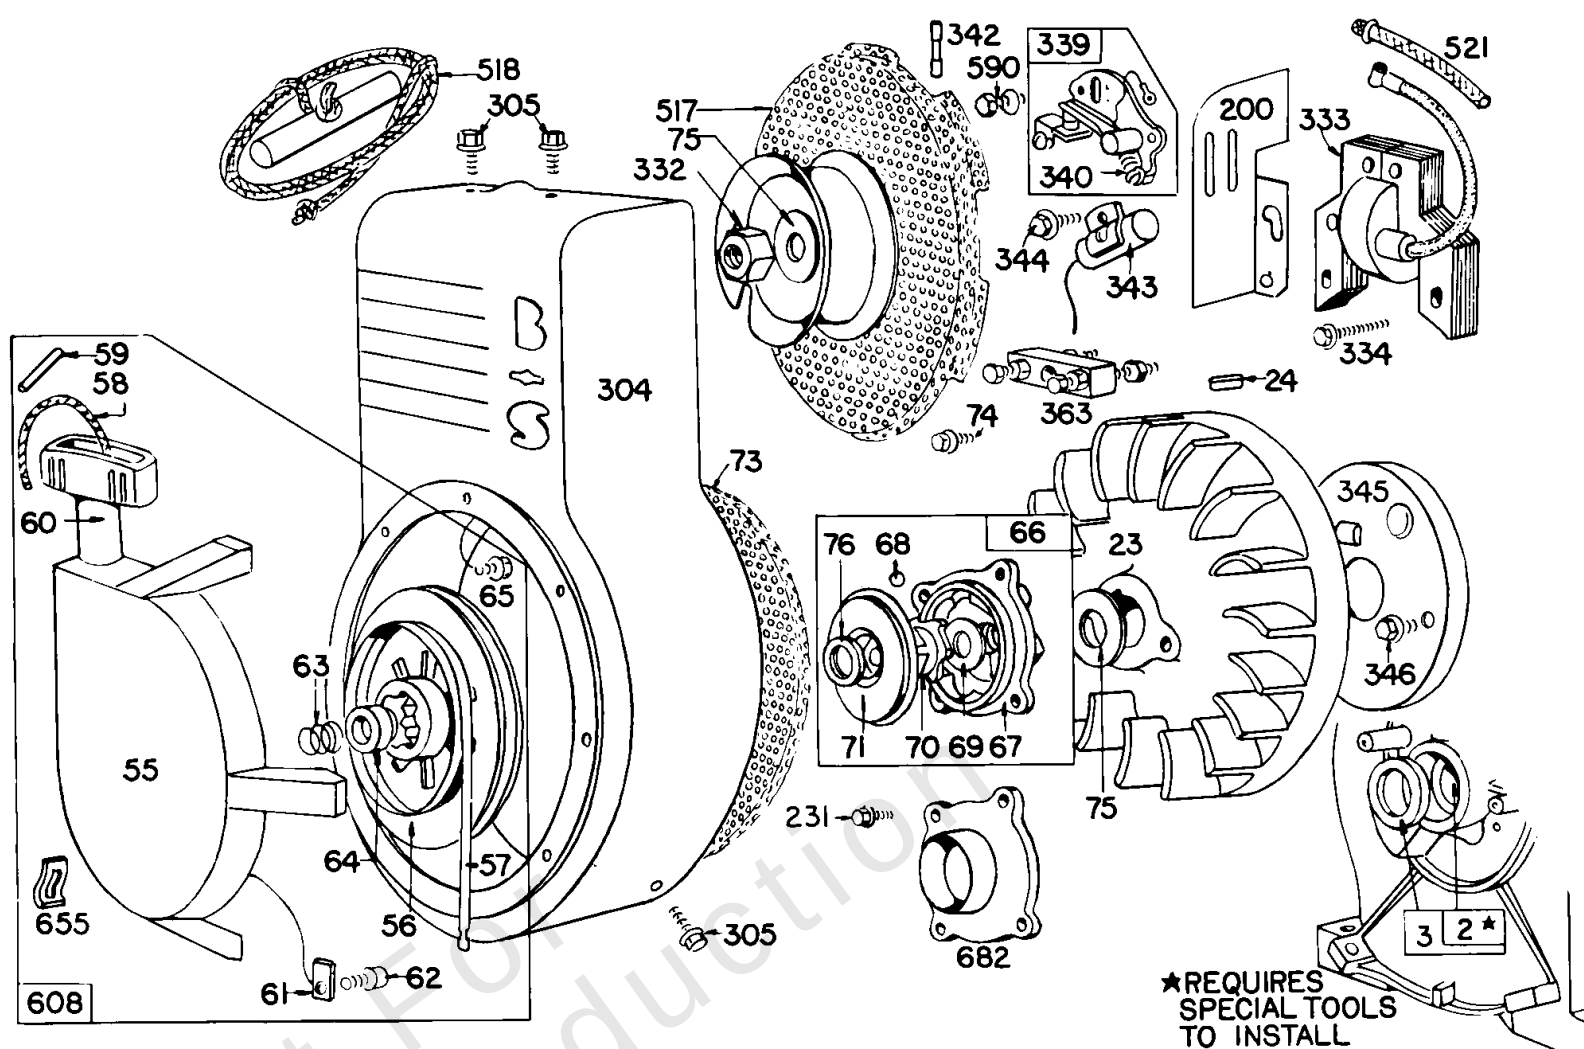


BlowerHsg,Rewind,Elec. Start

REF NO	PART NO	QTY	DESCRIPTION
2	295962		KIT, Bushing/Seal
3	294606		SEAL, Oil
23	298260		FLYWHEEL
24	61760		KEY, Flywheel -(Breaker Ignition)
55	295272		HOUSING, Rewind Starter -(Casting) (Metal Pulley)
55	297663		HOUSING, Rewind Starter -Uses: 230581 Nut, Mounting (4)
56	295871		PULLEY, Starter -(63 Rope) If longer rope is required, order No. 66894 and cut to length.
57	294303		SPRING, Rewind Starter
58	66564		ROPE, Starter -(63 Rope) If longer rope is required, order No. 66894 and cut to length.
58	66564		ROPE, Starter -(63 Rope) if longer rope is required, order No. 66574 and cut to length.
59	230228		PIN, Starter Grip
60	66728		GRIP, Starter Rope
61	68848		BUMPER, Starter Pulley
62	93254		SCREW -(Pulley)
63	260414		SPRING, Ratchet
64	230543		ADAPTER, Ratchet Spring
65	93163		SCREW -Used Before Code Date 6905011
65	93572		SCREW -(10-32 X 3/8) -Used After Code Date 6904301
66	295684		CLUTCH, Starter -(Rewind Starter) -Used Before Code Date 6601181
66	298798		CLUTCH, Starter -(Rewind Starter) -Used After Code Date 6601171
67	210400		HOUSING, Clutch -Used Before Code Date 6601181
67	211383		HOUSING, Clutch -Used After Code Date 6601171
68	63770		BALL, Clutch
69	66718		WASHER -(1-1/16 O.D. X 17/32 I.D.) (1 1/16 O.D. X 17/32 I.D.)
70	296916		RATCHET, Clutch -Used Before Code Date 6601181
70	298799		RATCHET, Clutch -Used After Code Date 6601171
71	221301		WASHER -Used Before Code Date 6601181
71	221653		WASHER -Used After Code Date 6601171
73	220823		SCREEN, Rotating -Used Before Code Date 6601181
73	221796		SCREEN, Rotating -Used After Code Date 6601171
74	93042		SCREW

Footnotes:

Uses: 26032 Ring-Clutch Retainer
(For engine W/Ring Gear on FW equipped for Elec Start)

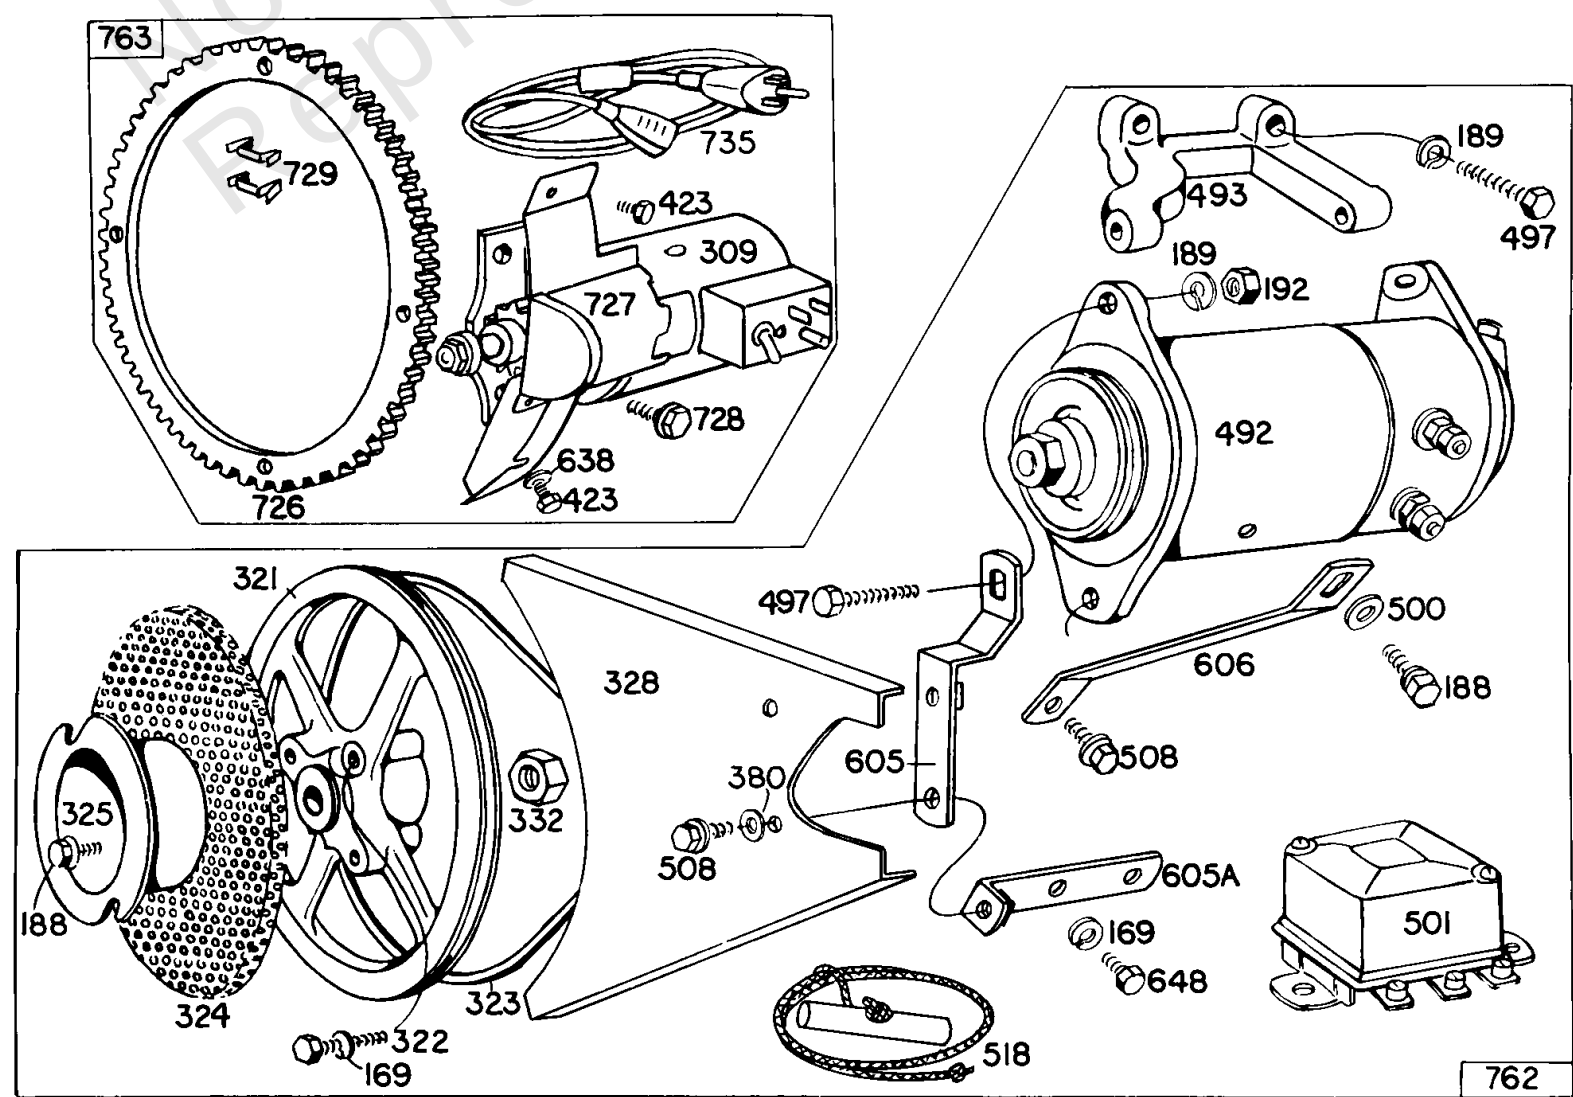
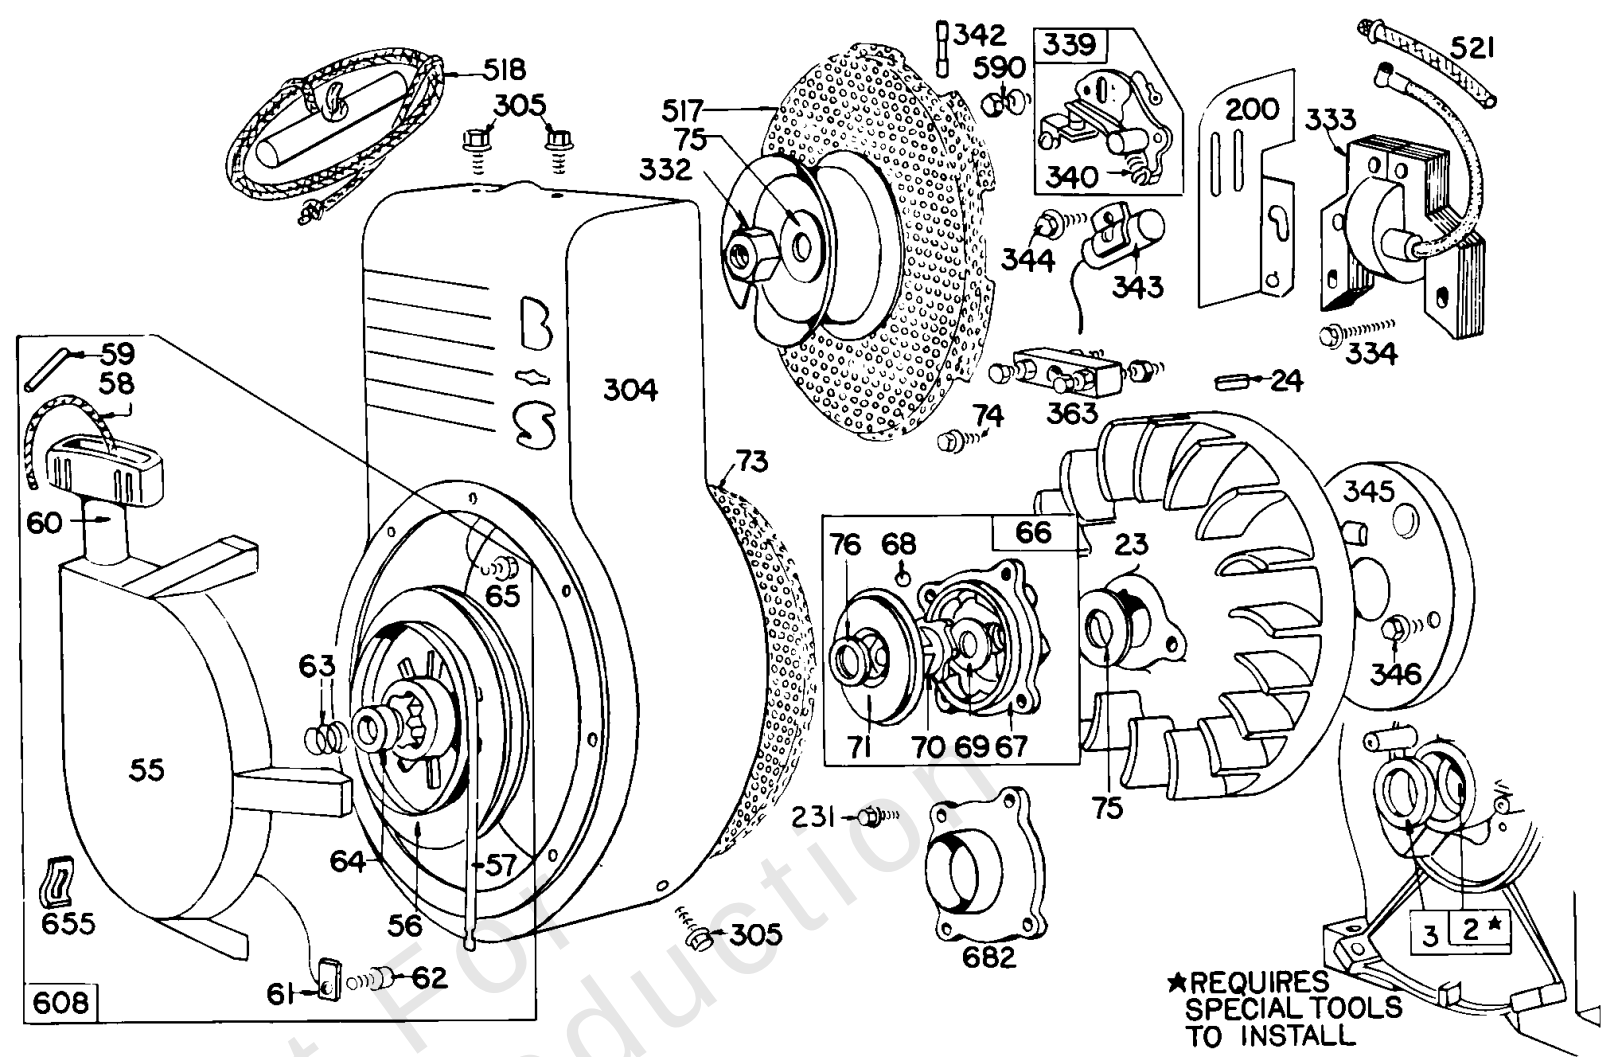


BlowerHsg,Rewind,Elec. Start

REF NO	PART NO	QTY	DESCRIPTION
75	220865		WASHER -(Heavy Flywheel)
76	68238		SEAL, Ratchet
169	90832		SCREW -(Blower Housing)
188	91449		SCREW
188	93535		SCREW -(5/16-18 X 3/4)
189	90366		WASHER
192	91397		NUT -(5/16-18)
200	221760		GUIDE, Air
231	93064		SCREW
304	299853		HOUSING, Blower
305	93158		SCREW -(1/4-20 X 5/8)
309	299329		MOTOR, Starter -(Mitsubishi and American Bosch 110V)
309	299330		MOTOR, Starter -(Mitsubishi and American Bosch 12V)
309	299556		MOTOR, Starter -(American Bosch 110V)
309	299764		MOTOR, Starter -(American Bosch 110V)
309	390307		MOTOR, Starter -(Bosch or Mitsubishi)
309	390838		MOTOR, Starter -(3 1/16 Housing)
321	210899		PULLEY, Starter
322	90931		SCREW
323	67708		BELT, Vee
324	221067		SCREEN, Rotating
325	299307		PULLEY, Rope Starter -(With Screen)
328	221447		GUARD, Belt
332	92284		NUT -(Flywheel)
333	298968		ARMATURE, Magneto -(Breaker Ignition)
334	93381		SCREW
339	29667		BREAKER, Ignition
340	26018		SPRING, Breaker Arm
342	65704		PLUNGER, Breaker
343	29861		CONDENSER
344	93370		SCREW -(Condenser)
345	221046		COVER, Breaker
346	93014		SCREW
363	19165		PULLER, Flywheel
380	91324		WASHER
423	93410		SCREW
492	296028		MOTOR, Starter -(12v Delco-Remy #1101695 & Pulley #1949358)

Footnotes:

Uses: 26032 Ring-Clutch Retainer
(For engine W/Ring Gear on FW equipped for Elec Start)

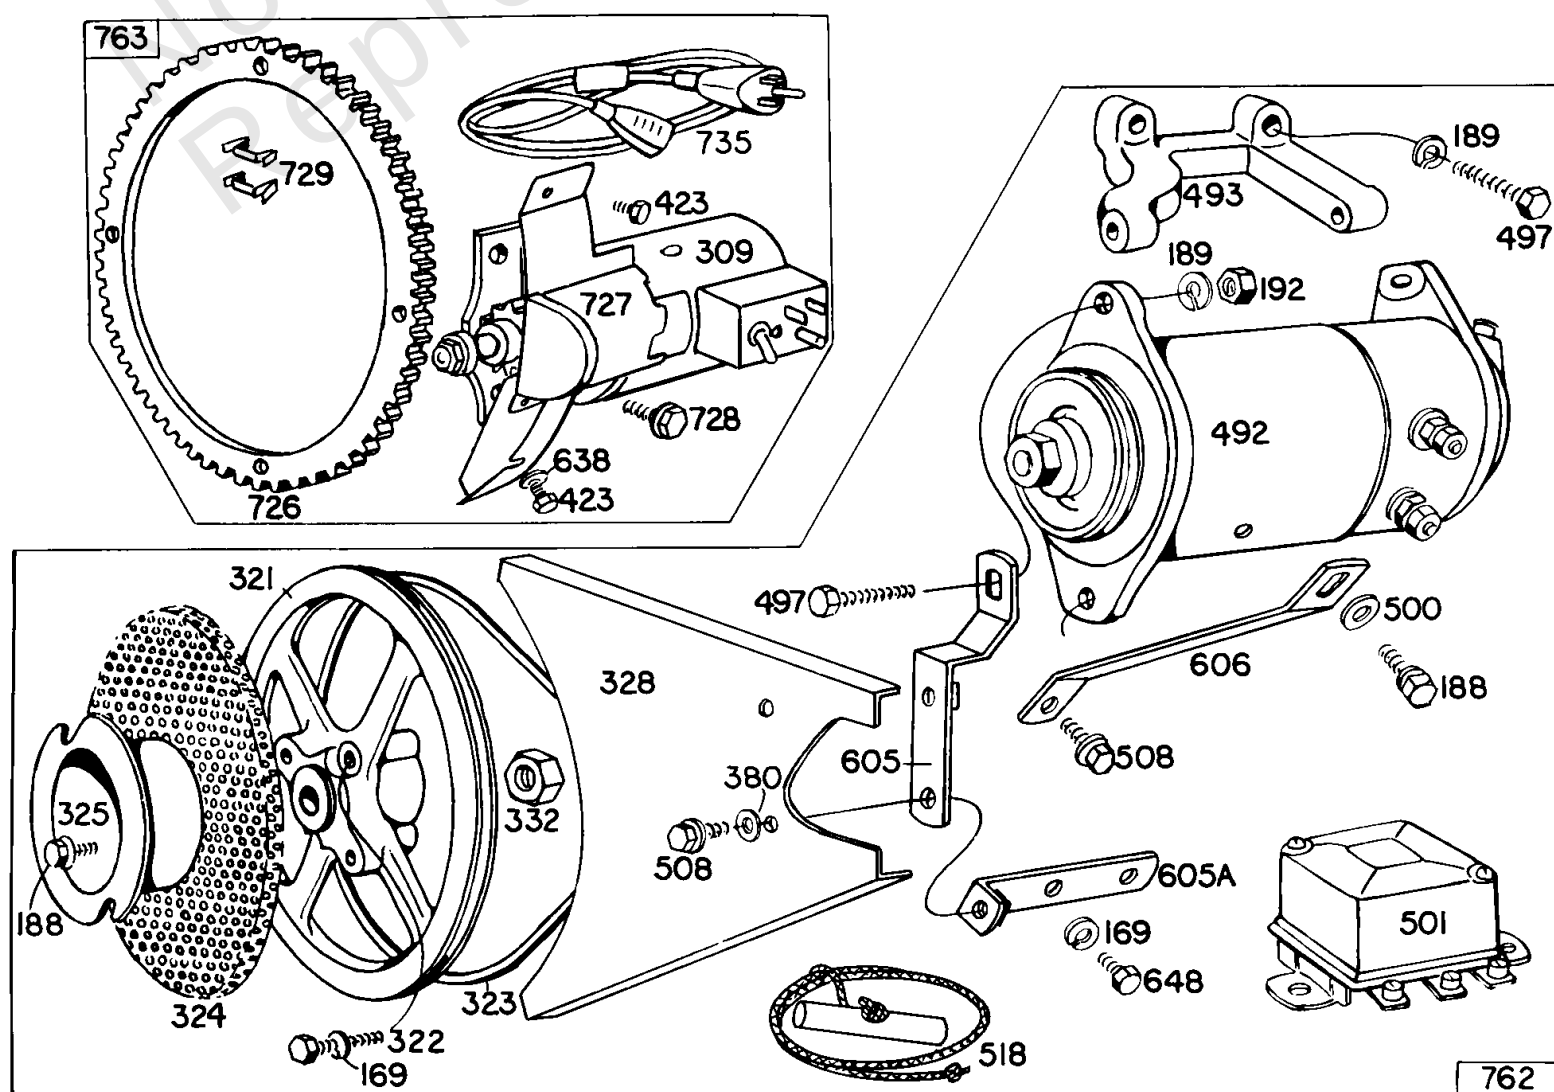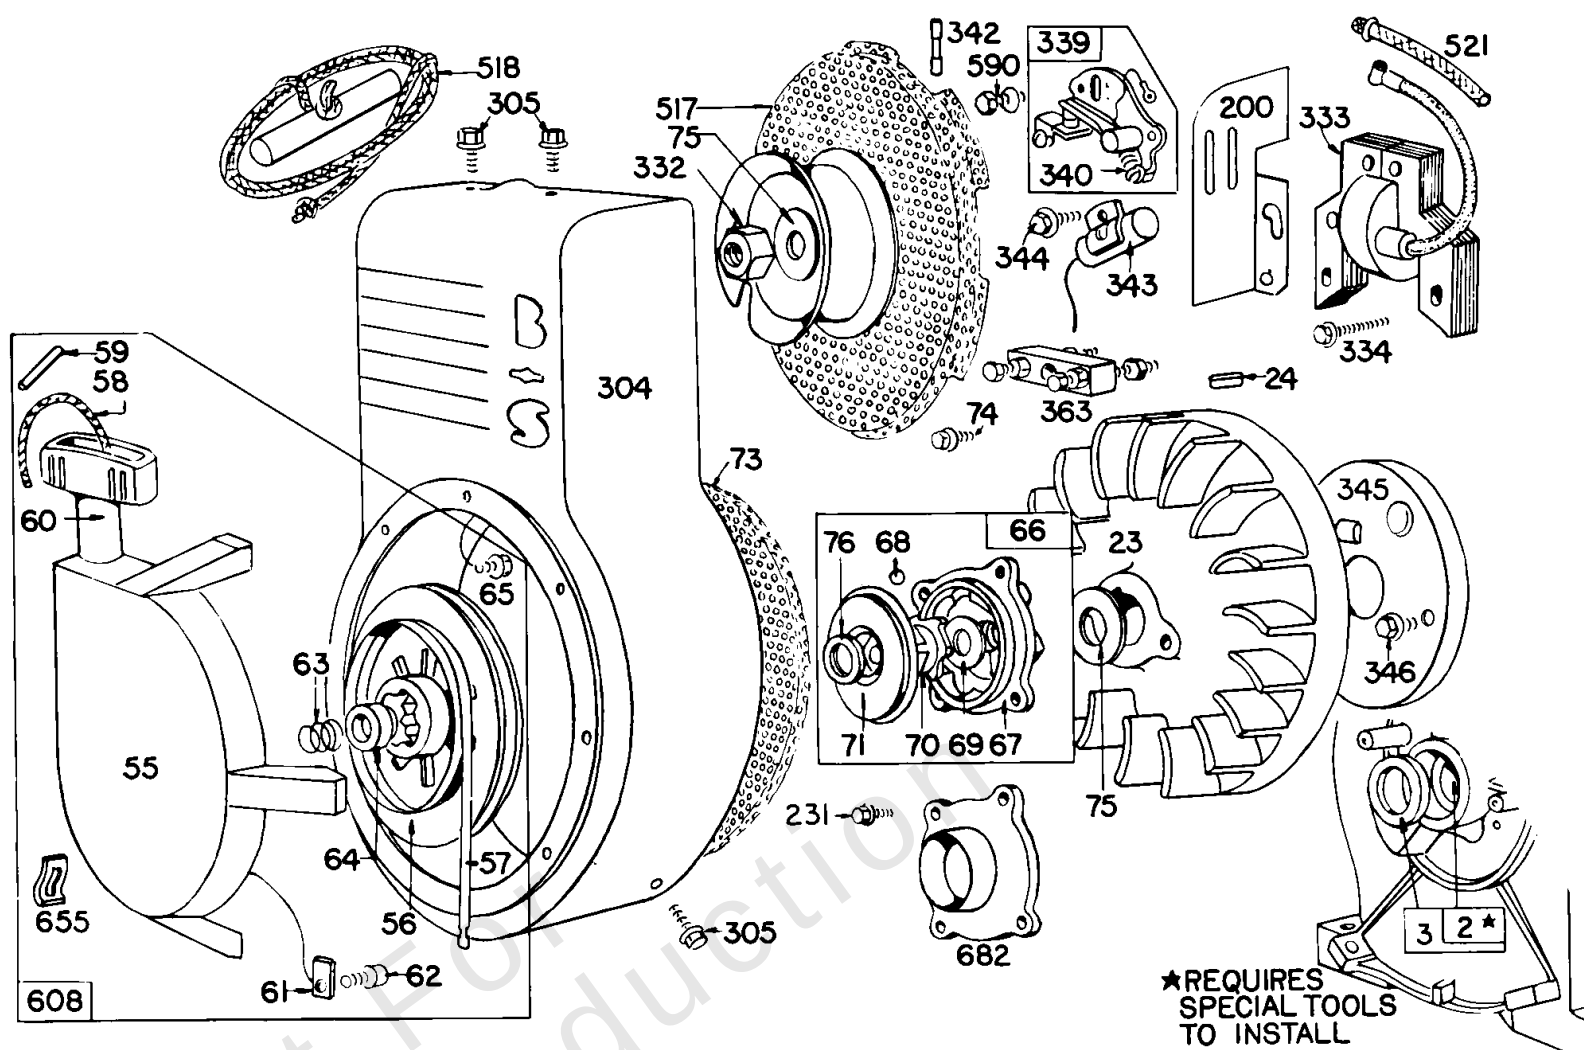


BlowerHsg,Rewind,Elec. Start

REF NO	PART NO	QTY	DESCRIPTION
493	211112		BRACKET, Starter Motor
497	91203		SCREW -(5/16-18 X 1-3/4)
500	91325		WASHER
501	295924		REGULATOR -(Flat Mount, Delco-remy)
508	93294		SCREW -(5/8) For 1/2 long Screw order Part No. 93158
517	295423		PULLEY, Rope Starter
518	69932		GRIP, Starter Rope
521	298529		SHIELD, Protective
590	93226		SCREW
605A	297171		BRACKET, Support -(Lower)
605	297187		BRACKET, Mounting -(Upper)
606	221443		STRAP, Adjusting
608	295001		STARTER, Rewind -For Starter Assembly with longer than standard rope order No. 298107
638	26404		WASHER
648	91439		SCREW
655	221014		ANCHOR, Rewind Spring
682	211516		SHIELD, Starter
726	299543		GEAR, Ring -(Steel) (Includes Mounting Hardware)
727	390233		COVER, Starter Drive
728	93535		SCREW -(5/16-18 X 3/4)
729	221907		CLIP, Wire
735	390748		CORD, Starter -(Canadian Use Only)
735	390966		CORD, Starter -(Includes Adaptor Plug)
762	297335		KIT, Electric Starter -(12 Volt) (Low Position)
763	299914		KIT, Electric Starter -(110 Volt Gear Drive)


Footnotes:

Uses: 26032 Ring-Clutch Retainer
(For engine W/Ring Gear on FW equipped for Elec Start)

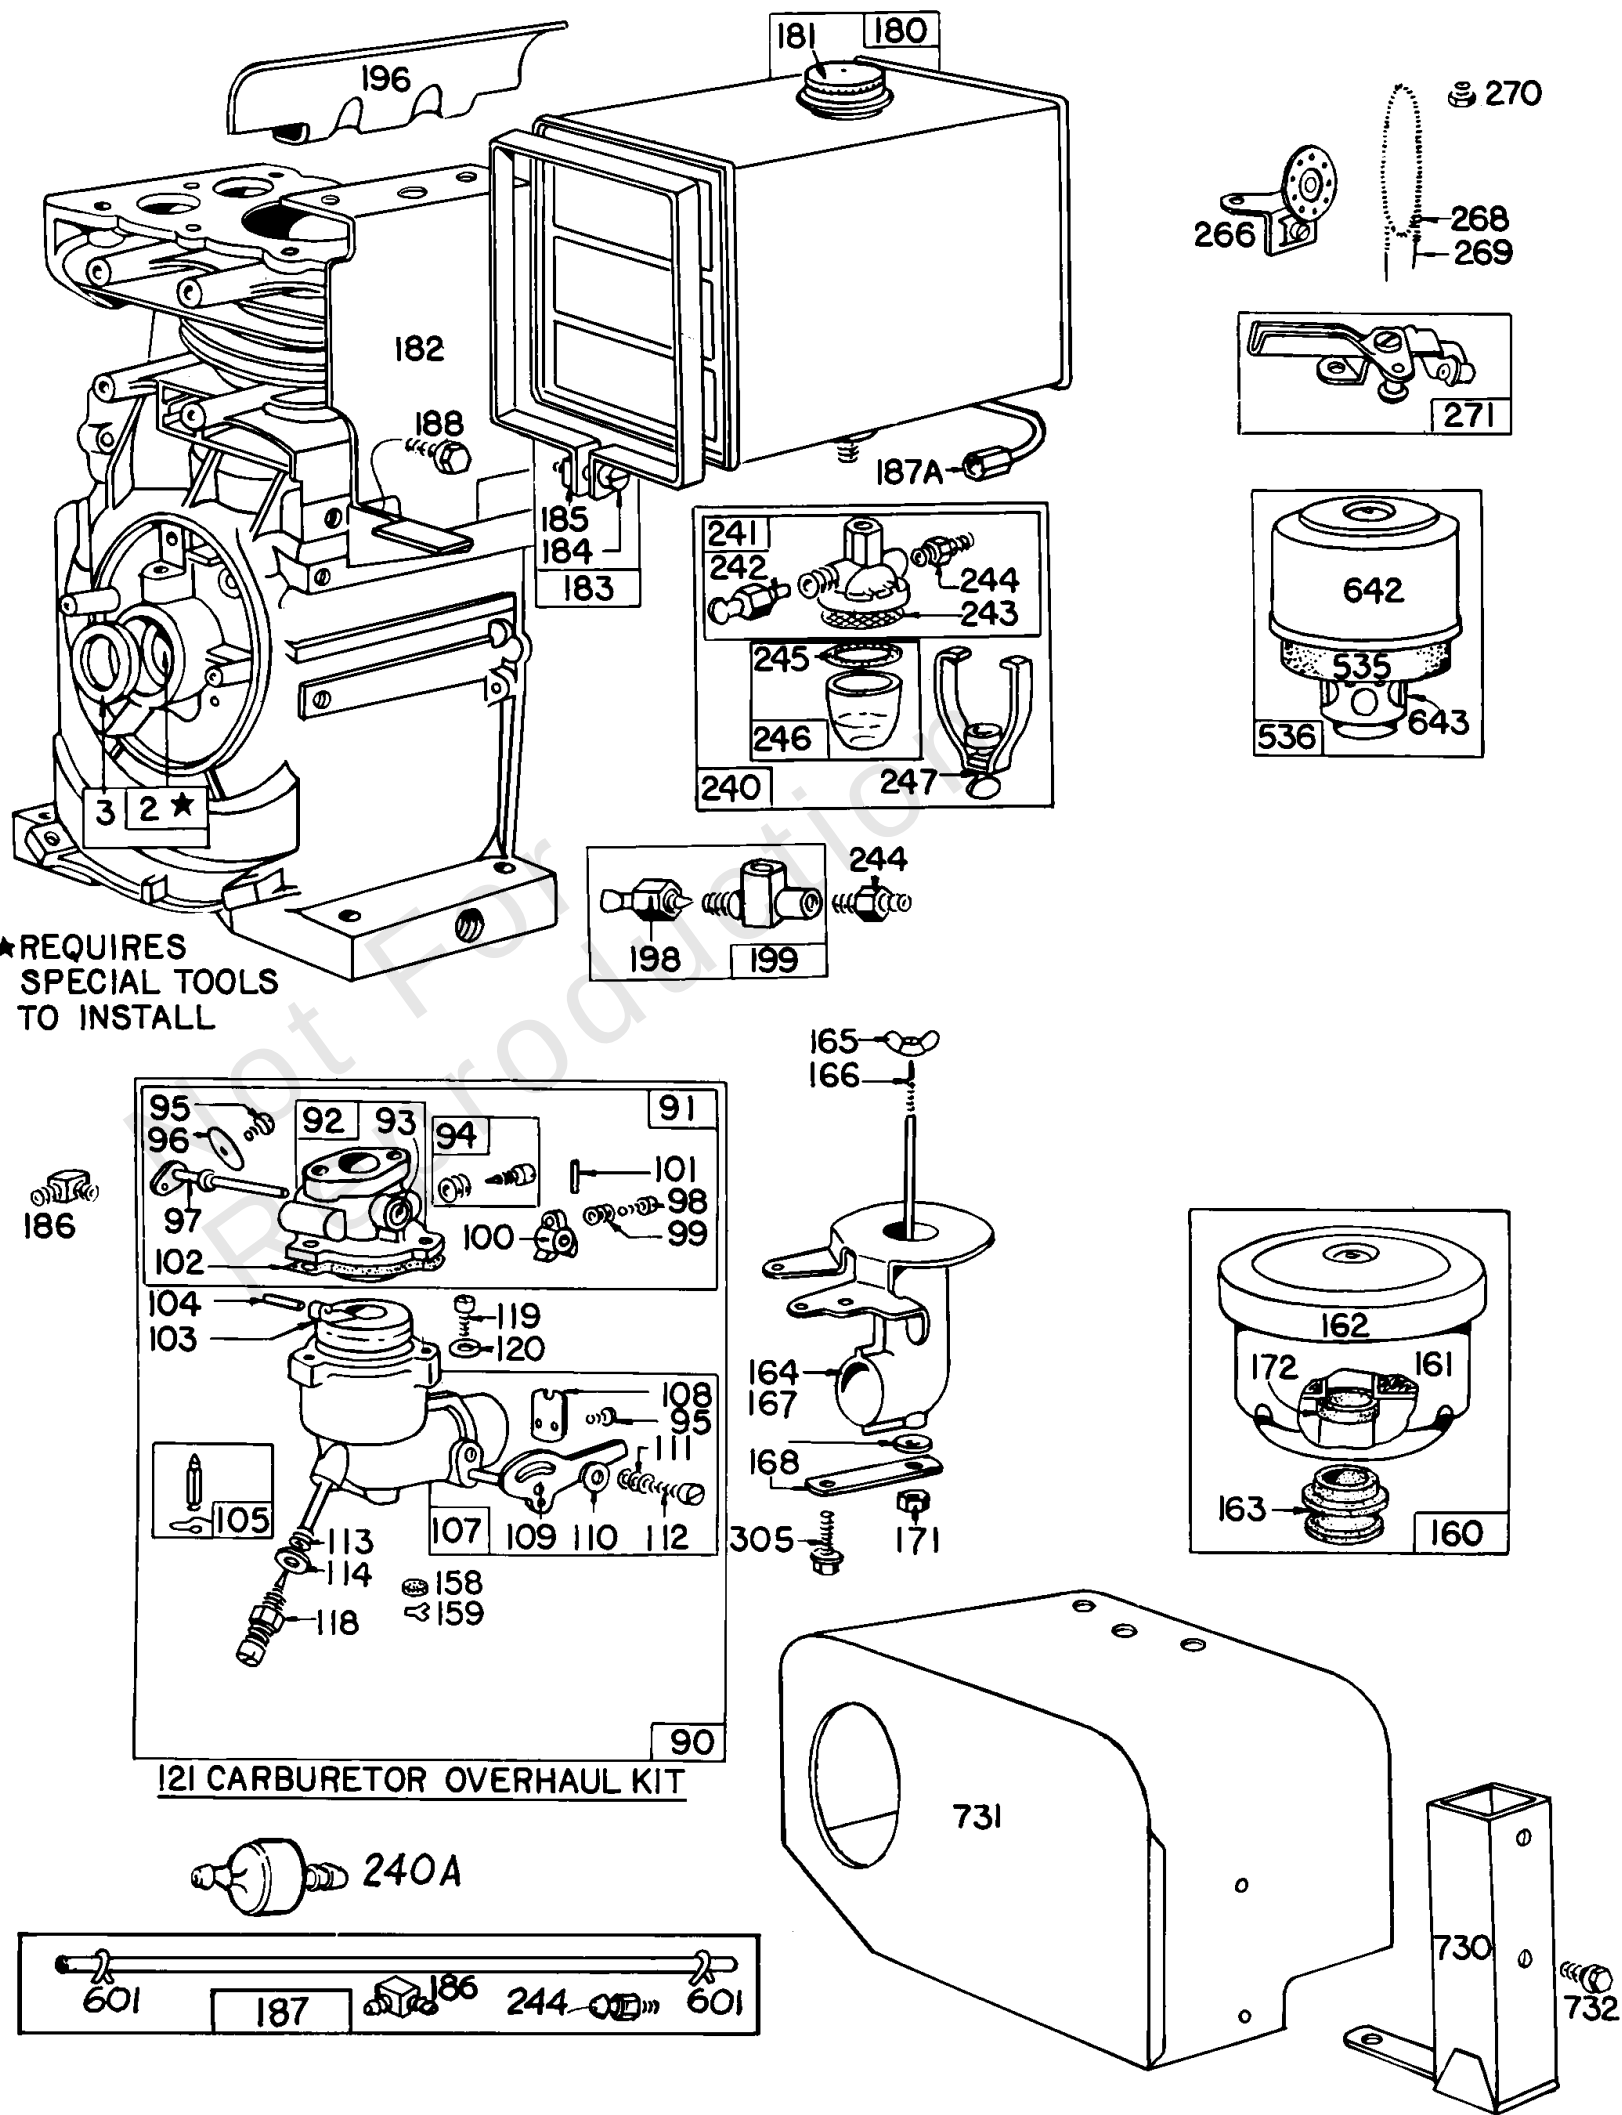


Carburetor, Fuel, A/C, Sno-Gard

REF NO	PART NO	QTY	DESCRIPTION
2	295962		KIT, Bushing/Seal
3	294606		SEAL, Oil
90	299177		CARBURETOR -(Kerosene)
91	299171		BODY, Upper Carburetor
92	295858		BODY, Upper Carburetor
93	23108		BUSHING, Throttle Shaft
94	292681		VALVE, Idle Mixture -Included in Carburetor Overhaul Kit-Part No. 295938
95	93038		SCREW -(Throttle Valve)
96	62940		VALVE, Throttle
97	298826		SHAFT, Throttle
98	91920		SCREW -(8-32 X 5/8)
99	26157		SPRING, Compression
100	61967		STOP, Throttle
101	93043		PIN, Shaft
102	27918		GASKET, Carburetor Body -Included in Carburetor Overhaul Kit-Part No. 295938
103	99333		FLOAT, Carburetor
104	230896		PIN, Float Hinge -Included in Carburetor Overhaul Kit-Part No. 295938
105	299096		KIT, Needle/Seat
107	299170		BODY, Lower Carburetor
108	221835		VALVE, Choke
109	298875		SHAFT, Choke -(Manual)
110	62899		WASHER -(Thermostat)
111	26155		SPRING, Friction
112	23123		SCREW
113	390395		NOZZLE, Carburetor -Included in Carburetor Overhaul Kit-Part No. 295938
114	68667		WASHER -(Viton Seat) Included in Carburetor Overhaul Kit-Part No. 295938
118	292226		RETAINER, Needle Valve
119	90746		SCREW -(10-32 X 5/8)
120	92290		WASHER
121	295938		KIT, Carburetor Overhaul
158	27590		PLUG, Carburetor Filter/Drain
159	220521		RETAINER, Carburetor Drain
160	296434		CLEANER, Air
161	296704		CLEANER, Air
162	296270		CLEANER, Air
163	27907		GASKET, Air Cleaner -Included in Gasket Set-Part No. 295970
164	298410		ELBOW, Intake
165	93453		NUT
166	230539		STUD -(To Elbow) (6 19/32)
166	230633		STUD -(Air Cleaner) (8 13/32)
166	230697		STUD -(Carburetor) (6 3/16) Uses: 91168 Nut-Hex.-1/4-20

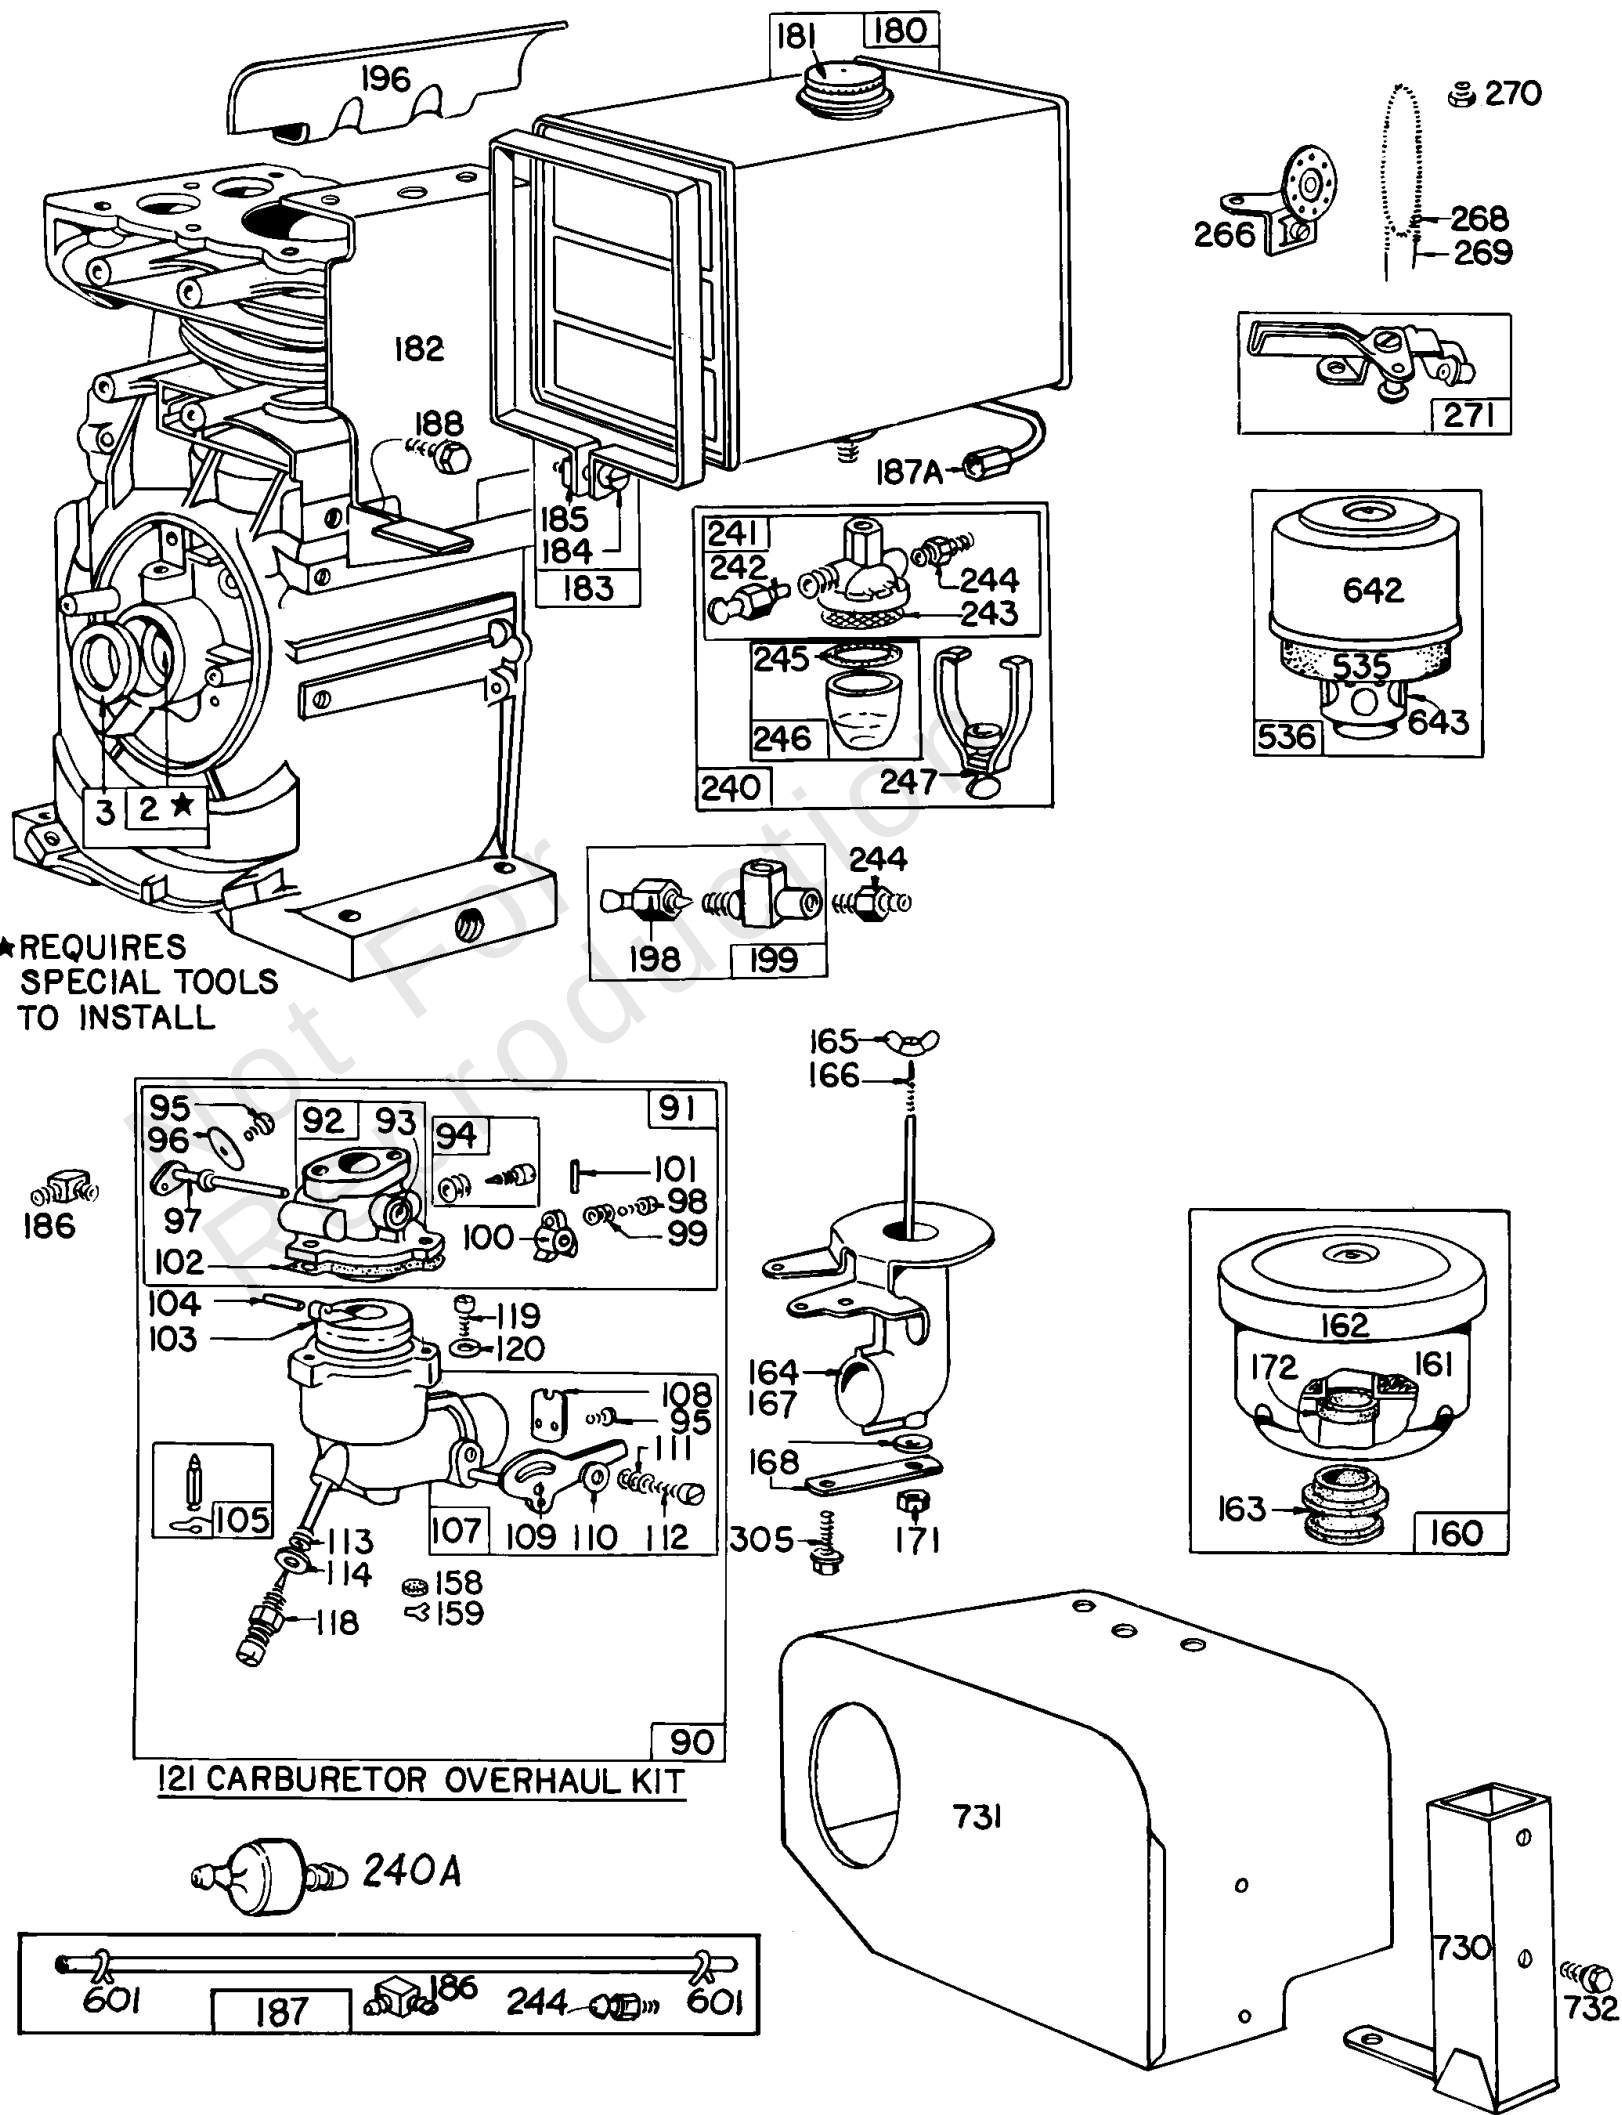


Carburetor, Fuel, A/C, Sno-Gard

REF NO	PART NO	QTY	DESCRIPTION
167	65978		SEAL, O-Ring -(Needle Valve)
168	22832		STRAP/STUD, Air Cleaner Mounting
171	92129		NUT -(1/4-28)
172	27906		GASKET, Air Cleaner -(Air Cleaner)
180	291513		TANK, Fuel -(6 Quart) Uses: 220863 Washer-Spacer (Used between one boss on cylinder head and tank bracket)
181	69221		CAP, Fuel Tank -(1 3/4 O.D. Top)
182	220858		BRACKET, Fuel Tank
182	221906		BRACKET, Fuel Tank
183	291490		STRAP, Fuel Tank -(6 Quart)
184	91257		SCREW -(1/4-20 X 1-1/2)
185	90970		NUT -(1/4-20)
186	67218		CONNECTOR, Hose -For Connector for Metal Fuel Pipe order No. 63377
187A	92655		TEE -(Pipe Fitting)
187	391498		LINE, Fuel
188	91449		SCREW
188	93535		SCREW -(5/16-18 X 3/4)
196	22907		BRACKET, Fuel Tank -(8 Quart) (Remote Mount Only)
198	293934		VALVE, Fuel Shut Off
199	297563		OUTLET, Tank
240A	298090		FILTER, Fuel
240	295984		CARBURETOR -(Flexible Line)
240	99910		FILTER, Fuel
241	296005		COVER, Fuel Filter
241	99909		COVER, Fuel Filter -(Metal Fuel Pipe)
242	295913		VALVE, Fuel Shut Off
243	22547		STRAINER, Fuel
244	230318		CONNECTOR, Hose -For Connector for Metal Fuel Pipe, order No. 53029
245	68477		GASKET, Fuel Bowl -Included in Gasket Set-Part No. 295970
246	298683		BOWL, Fuel Filter
247	99665		YOKE, Bowl
266	291460		CONTROL, Throttle -(Disc Type)
268	65616		CASING, Control Wire -(Cut To Required Length)
269	26633		WIRE, Control -(Cut To Required Length) If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.
270	63426		NUT -(Control Wire Casing)
271	290568		LEVER, Control
305	93158		SCREW -(1/4-20 X 5/8)

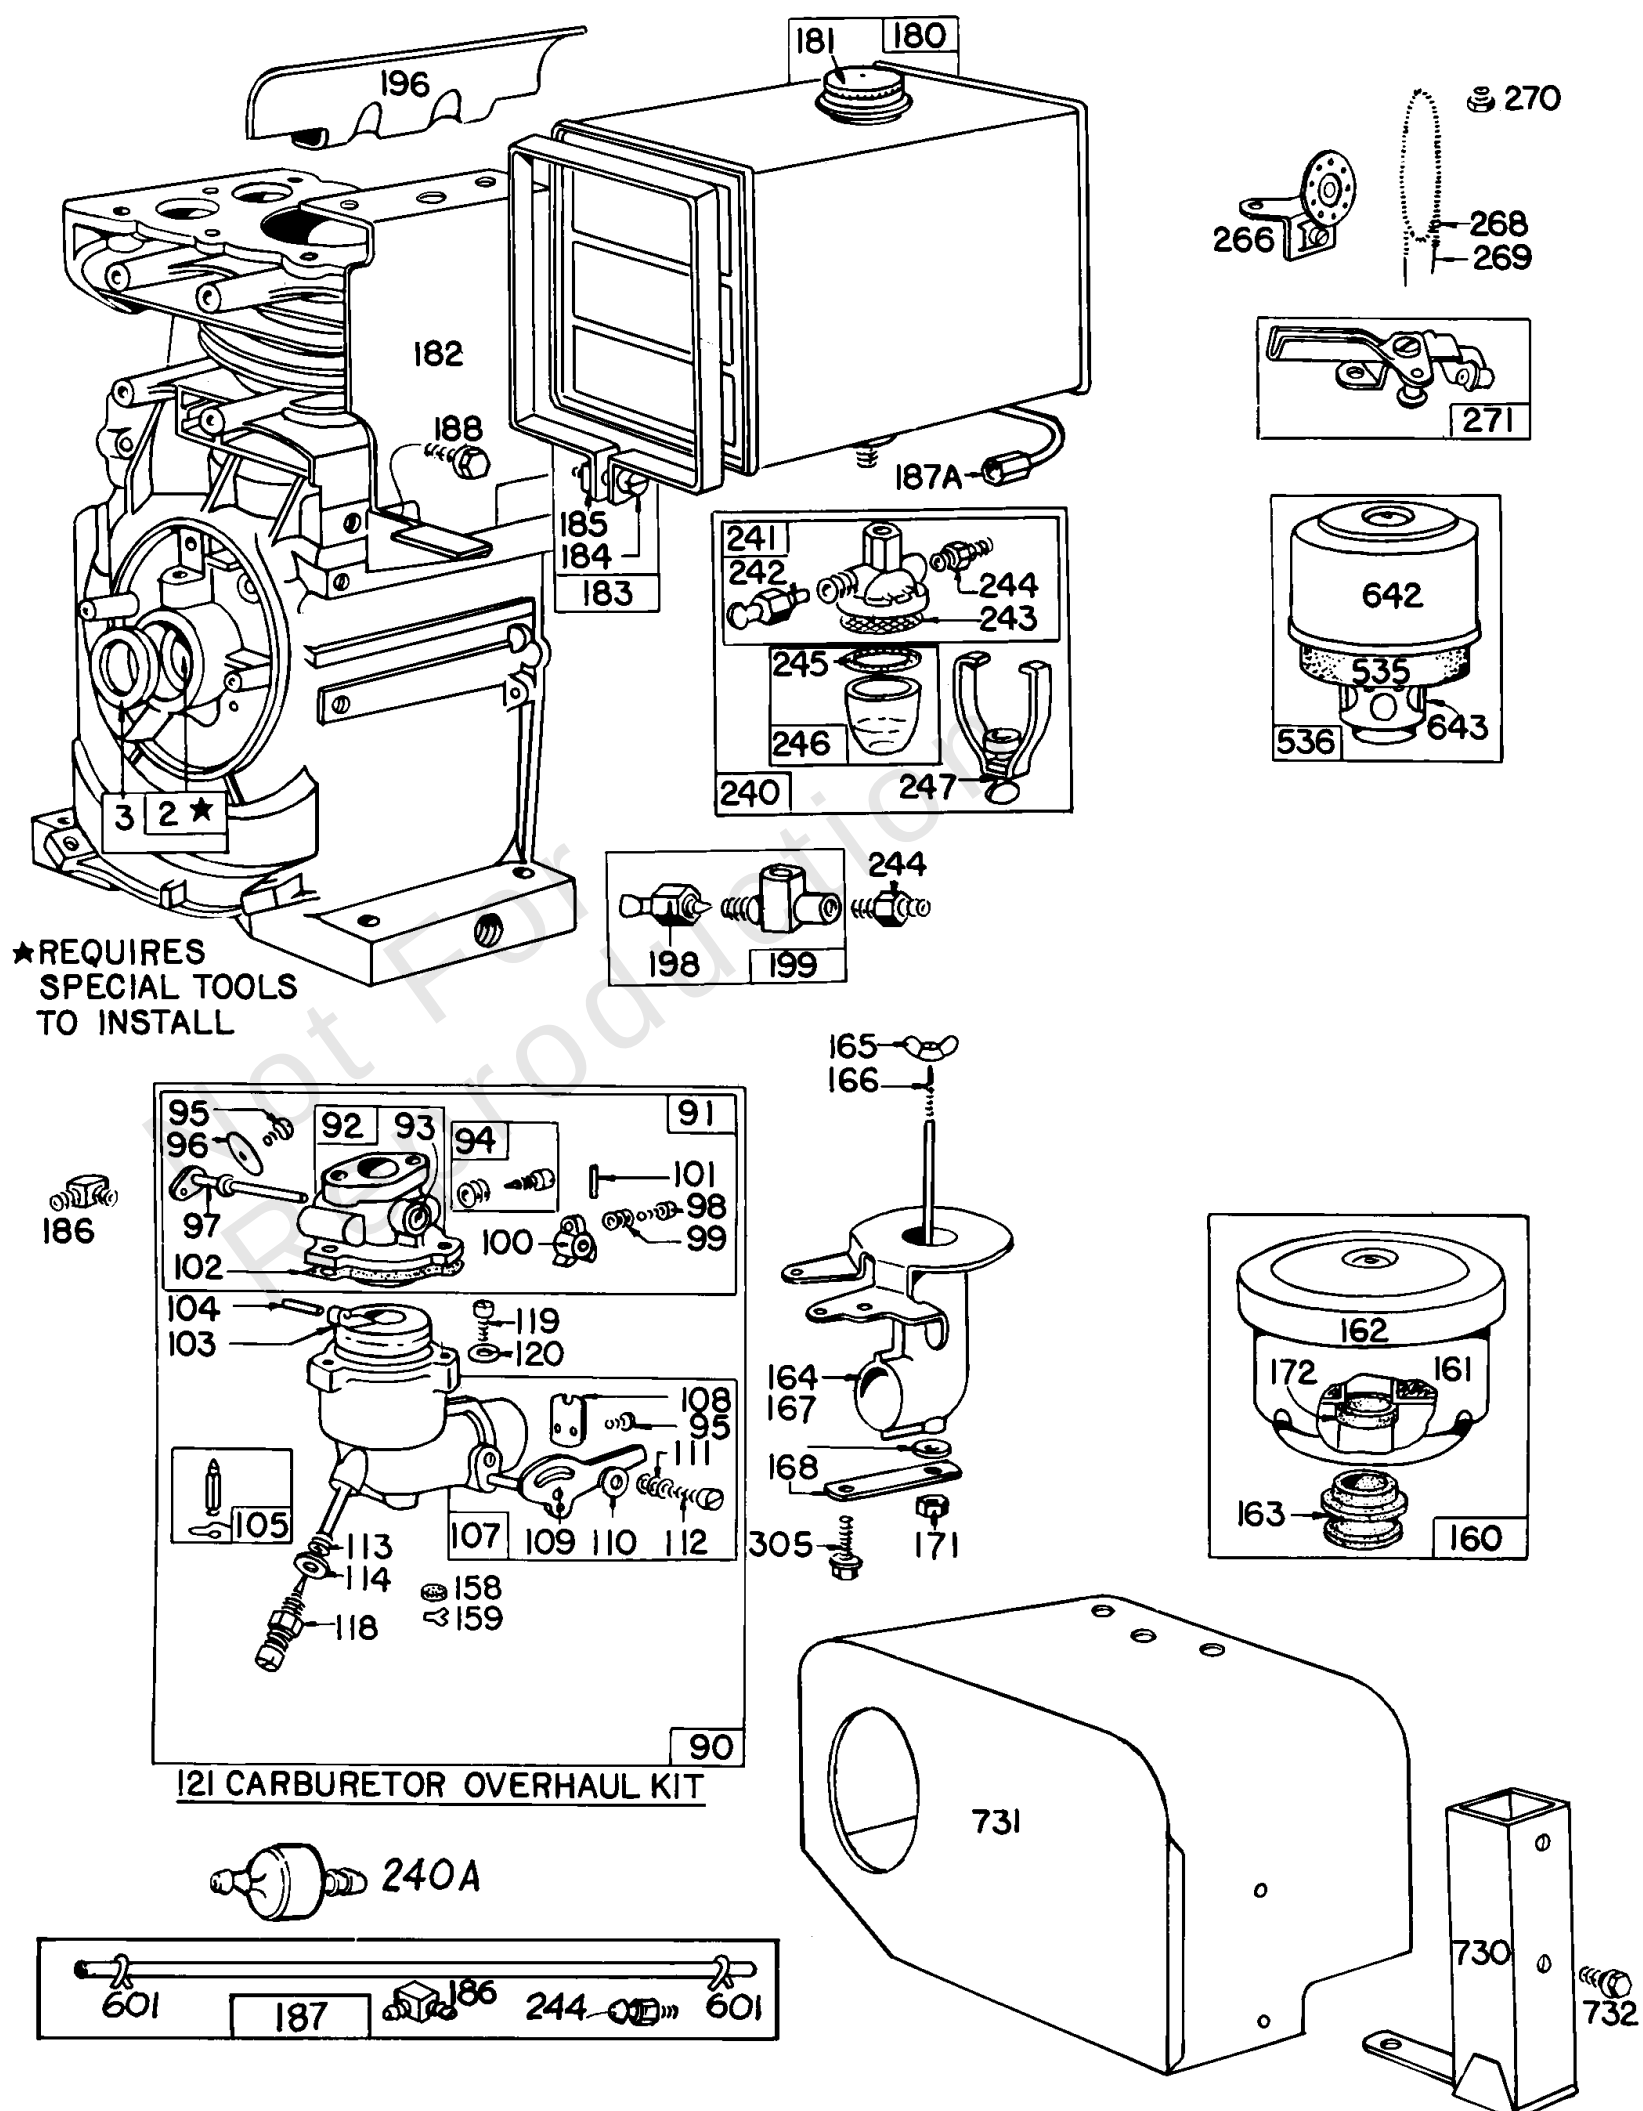

Carburetor, Fuel, A/C, Sno-Gard

REF NO	PART NO	QTY	DESCRIPTION
535	270209		FILTER, Air Cleaner Foam
536	298681		CLEANER, Air
601	93053		CLAMP, Hose -(Green)
642	221634		COVER, Air Cleaner
643	280002		CUP, Air Cleaner
730	299384		MANIFOLD, Intake
731	299391		HOOD, Snow
732	93490		SCREW -(Rotating Screen)

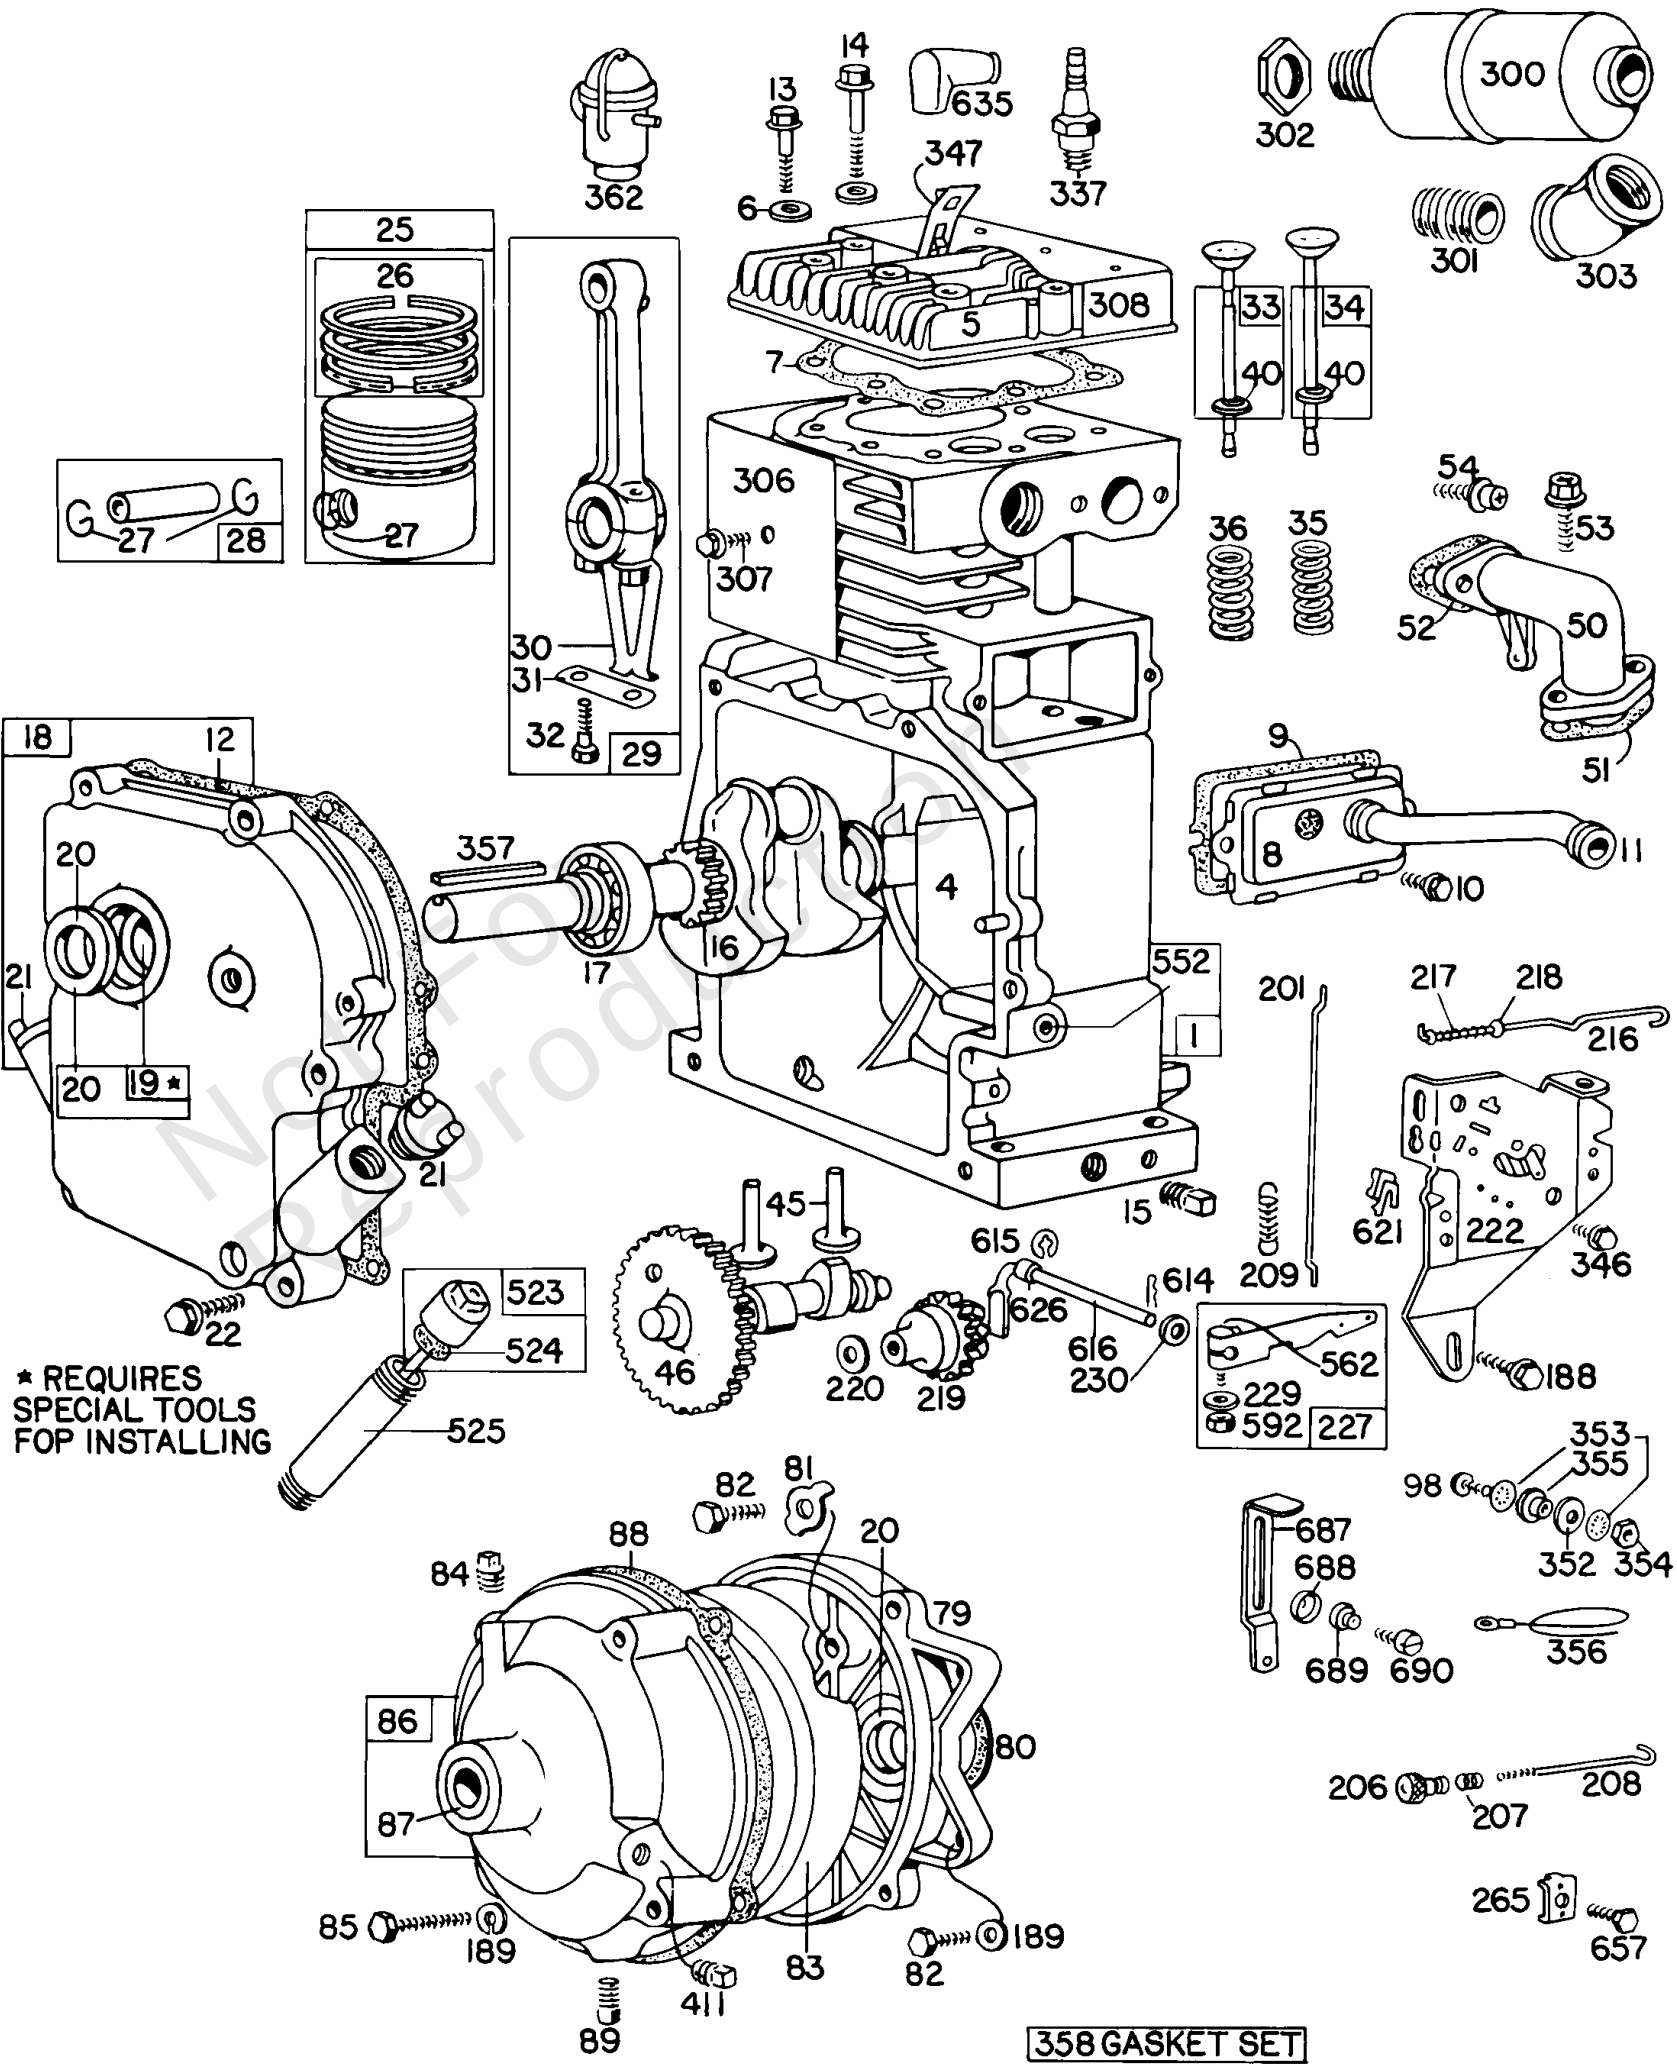

Cylinder, Crankcase, Piston


REF NO	PART NO	QTY	DESCRIPTION
1	299208		CYLINDER ASSEMBLY -(Sleeve Bore)
1	299465		CYLINDER ASSEMBLY
4	221822		PLATE, Baffle
5	211753		HEAD, Cylinder -(Requires Only (1) No. 270340 Gasket)
6	22963		WASHER
7	270340		GASKET, Cylinder Head -Included in Gasket Set-Part No. 295970
10	93536		SCREW
11	67068		TUBE, Breather -(Used with Metal Air Cleaner Pipe)
12	27750		GASKET, Crankcase -(1/64) Included in Gasket Set-Part No. 295970
12	27876		GASKET, Crankcase -(.005) Included in Gasket Set-Part No. 295970
12	27877		GASKET, Crankcase -(.009) Included in Gasket Set-Part No. 295970
13	93210		SCREW -(2-9/32)
14	93211		SCREW -(5/16-18 X 2-21/32)
15	91084		PLUG, Oil Drain -(3/8)
16	260389		CRANKSHAFT
17	29530		BEARING, Ball
19	295964		KIT, Bushing/Seal -(PTO Side)
20	298423		SEAL, Oil
21	66768		PLUG, Oil
22	93205		SCREW
25	295842		PISTON ASSEMBLY -(Standard)
25	295846		PISTON ASSEMBLY -(.010 Oversize)
25	295848		PISTON ASSEMBLY -(.020 Oversize)
25	295850		PISTON ASSEMBLY -(.030 Oversize)
26	295852		SET, Ring -(Standard) (Sleeve Bore)
26	295853		SET, Ring -(.010 Oversize) (Sleeve Bore)
26	295854		SET, Ring -(.020 Oversize) (Sleeve Bore)
26	295855		SET, Ring -(.030 Oversize) (Sleeve Bore)
26	298451		SET, Ring -(Standard)
27	68546		LOCK, Piston Pin
28	295840		PIN, Piston -(Standard)
28	295841		PIN, Piston -(.005 Oversize)

Footnotes:

with Valves with hole in stem except those with Rotocoil.

For Pins and Retainers for Valve Nos. 230385 and 230386, see Note under Ref. 40

For Pins and Retainers for this Valve, see Note under Ref. 40

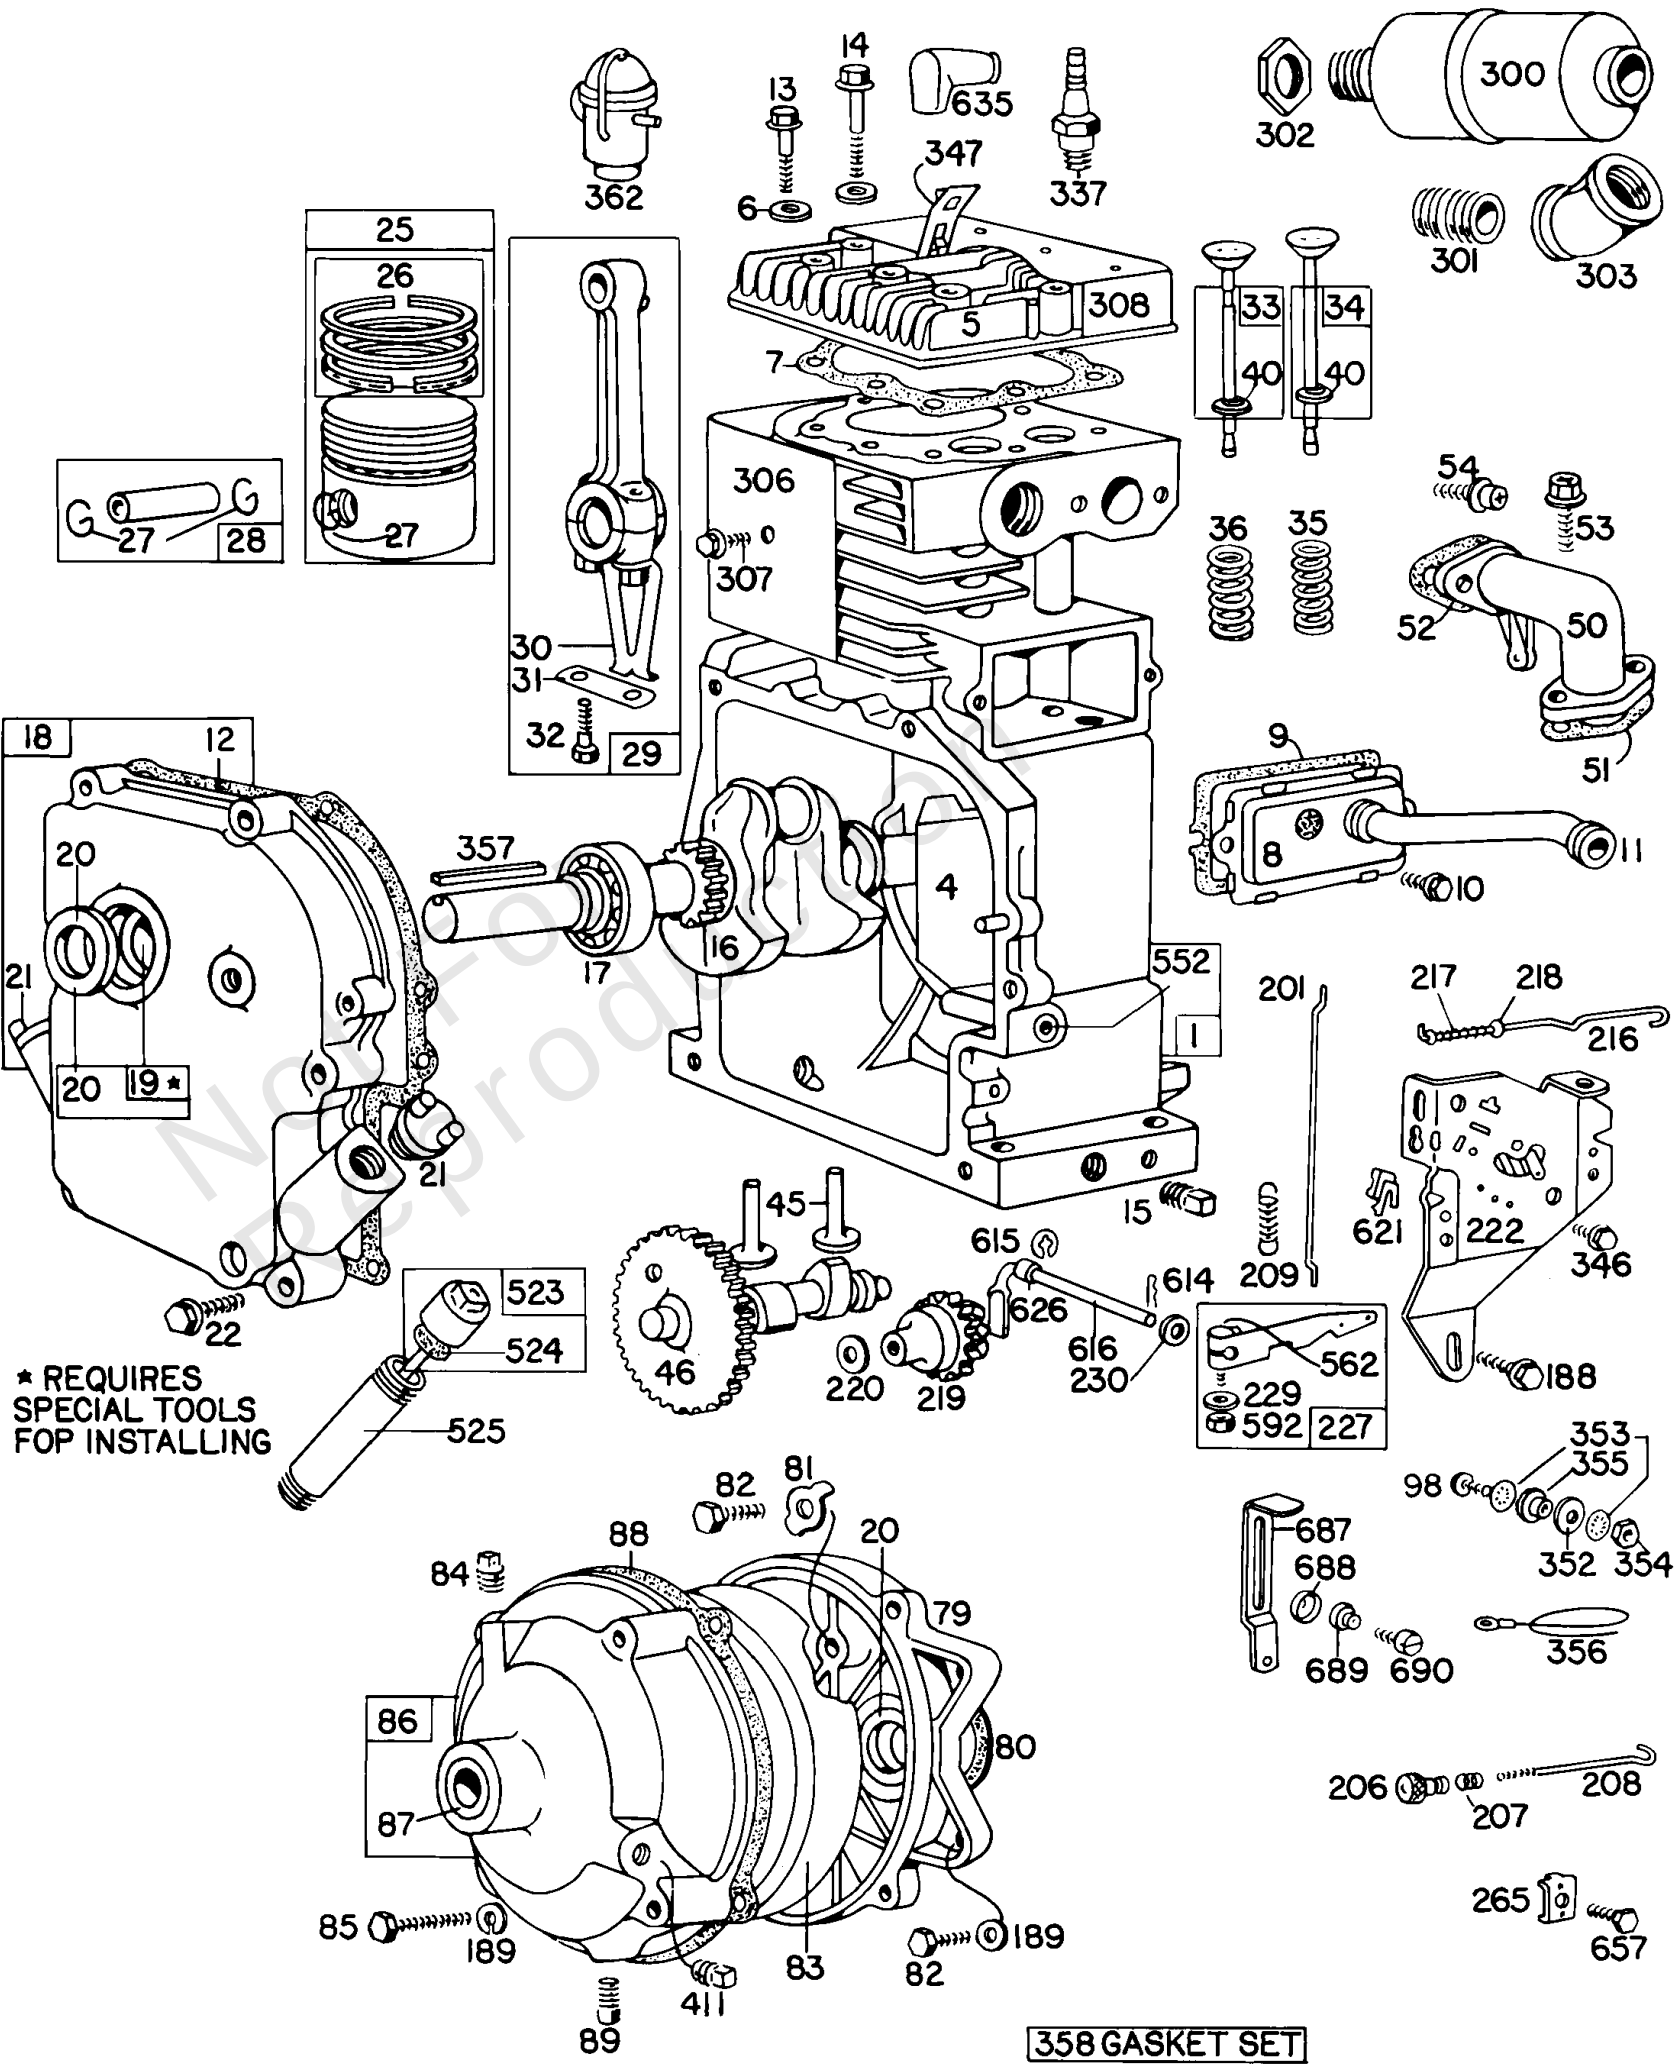

Cylinder, Crankcase, Piston


REF NO	PART NO	QTY	DESCRIPTION
29	295838		ROD, Connecting -For Connecting Rod with .020 Undersize Crankpin Bore-order No. 298788
30	220837		DIPPER, Connecting Rod
31	220811		LOCK, Rod Screw
32	92659		SCREW -(Connecting Rod)
33	230385		VALVE, Exhaust -(With Hole In Stem) -Used Before Code Date 6711060
33	299885		VALVE, Exhaust -(Grooved Stem-Includes Retainer) -Used After Code Date 6711030
34	230386		VALVE, Intake -(With Hole In Stem) -Used Before Code Date 6711060
34	299884		VALVE, Intake -(Grooved Stem-Includes Retainer) -Used After Code Date 6711030
35	65906		SPRING, Valve -(Intake)
36	65906		SPRING, Valve -(Intake)
40	221596		RETAINER, Valve -(Valves With Groove In Stem) -Used After Code Date 6711030
40	230476		PIN, Retainer -Used Before Code Date 6711060
40	230477		RETAINER, Valve
40	230570		PIN, Retainer
40	292260		RETAINER, Valve -(Exhaust Valve) (Exhaust)
45	260933		TAPPET, Valve
46	210728		CAMSHAFT
50	210705		MANIFOLD, Intake
51	65647		GASKET, Intake -Included in Carburetor Overhaul Kit-Part No. 295938. Included in Gasket Set-Part No. 295970
52	27828		GASKET, Intake -Included in Gasket Set-Part No. 295970
53	93128		SCREW
54	93208		SCREW -(Intake Manifold)
79	296179		CASE, Gear Reduction
80	27884		GASKET, Gear Cover/Housing
81	220234		LOCK, Muffler Screw
82	92502		SCREW
83	296052		SHAFT, Auxiliary Drive
84	92617		SCREW -(Gear Case)
85	91386		SCREW -(2)
86	296053		COVER, Gear
87	298423		SEAL, Oil

Footnotes:

with Valves with hole in stem except those with Rotocoil.

For Pins and Retainers for Valve Nos. 230385 and 230386, see Note under Ref. 40

For Pins and Retainers for this Valve, see Note under Ref. 40

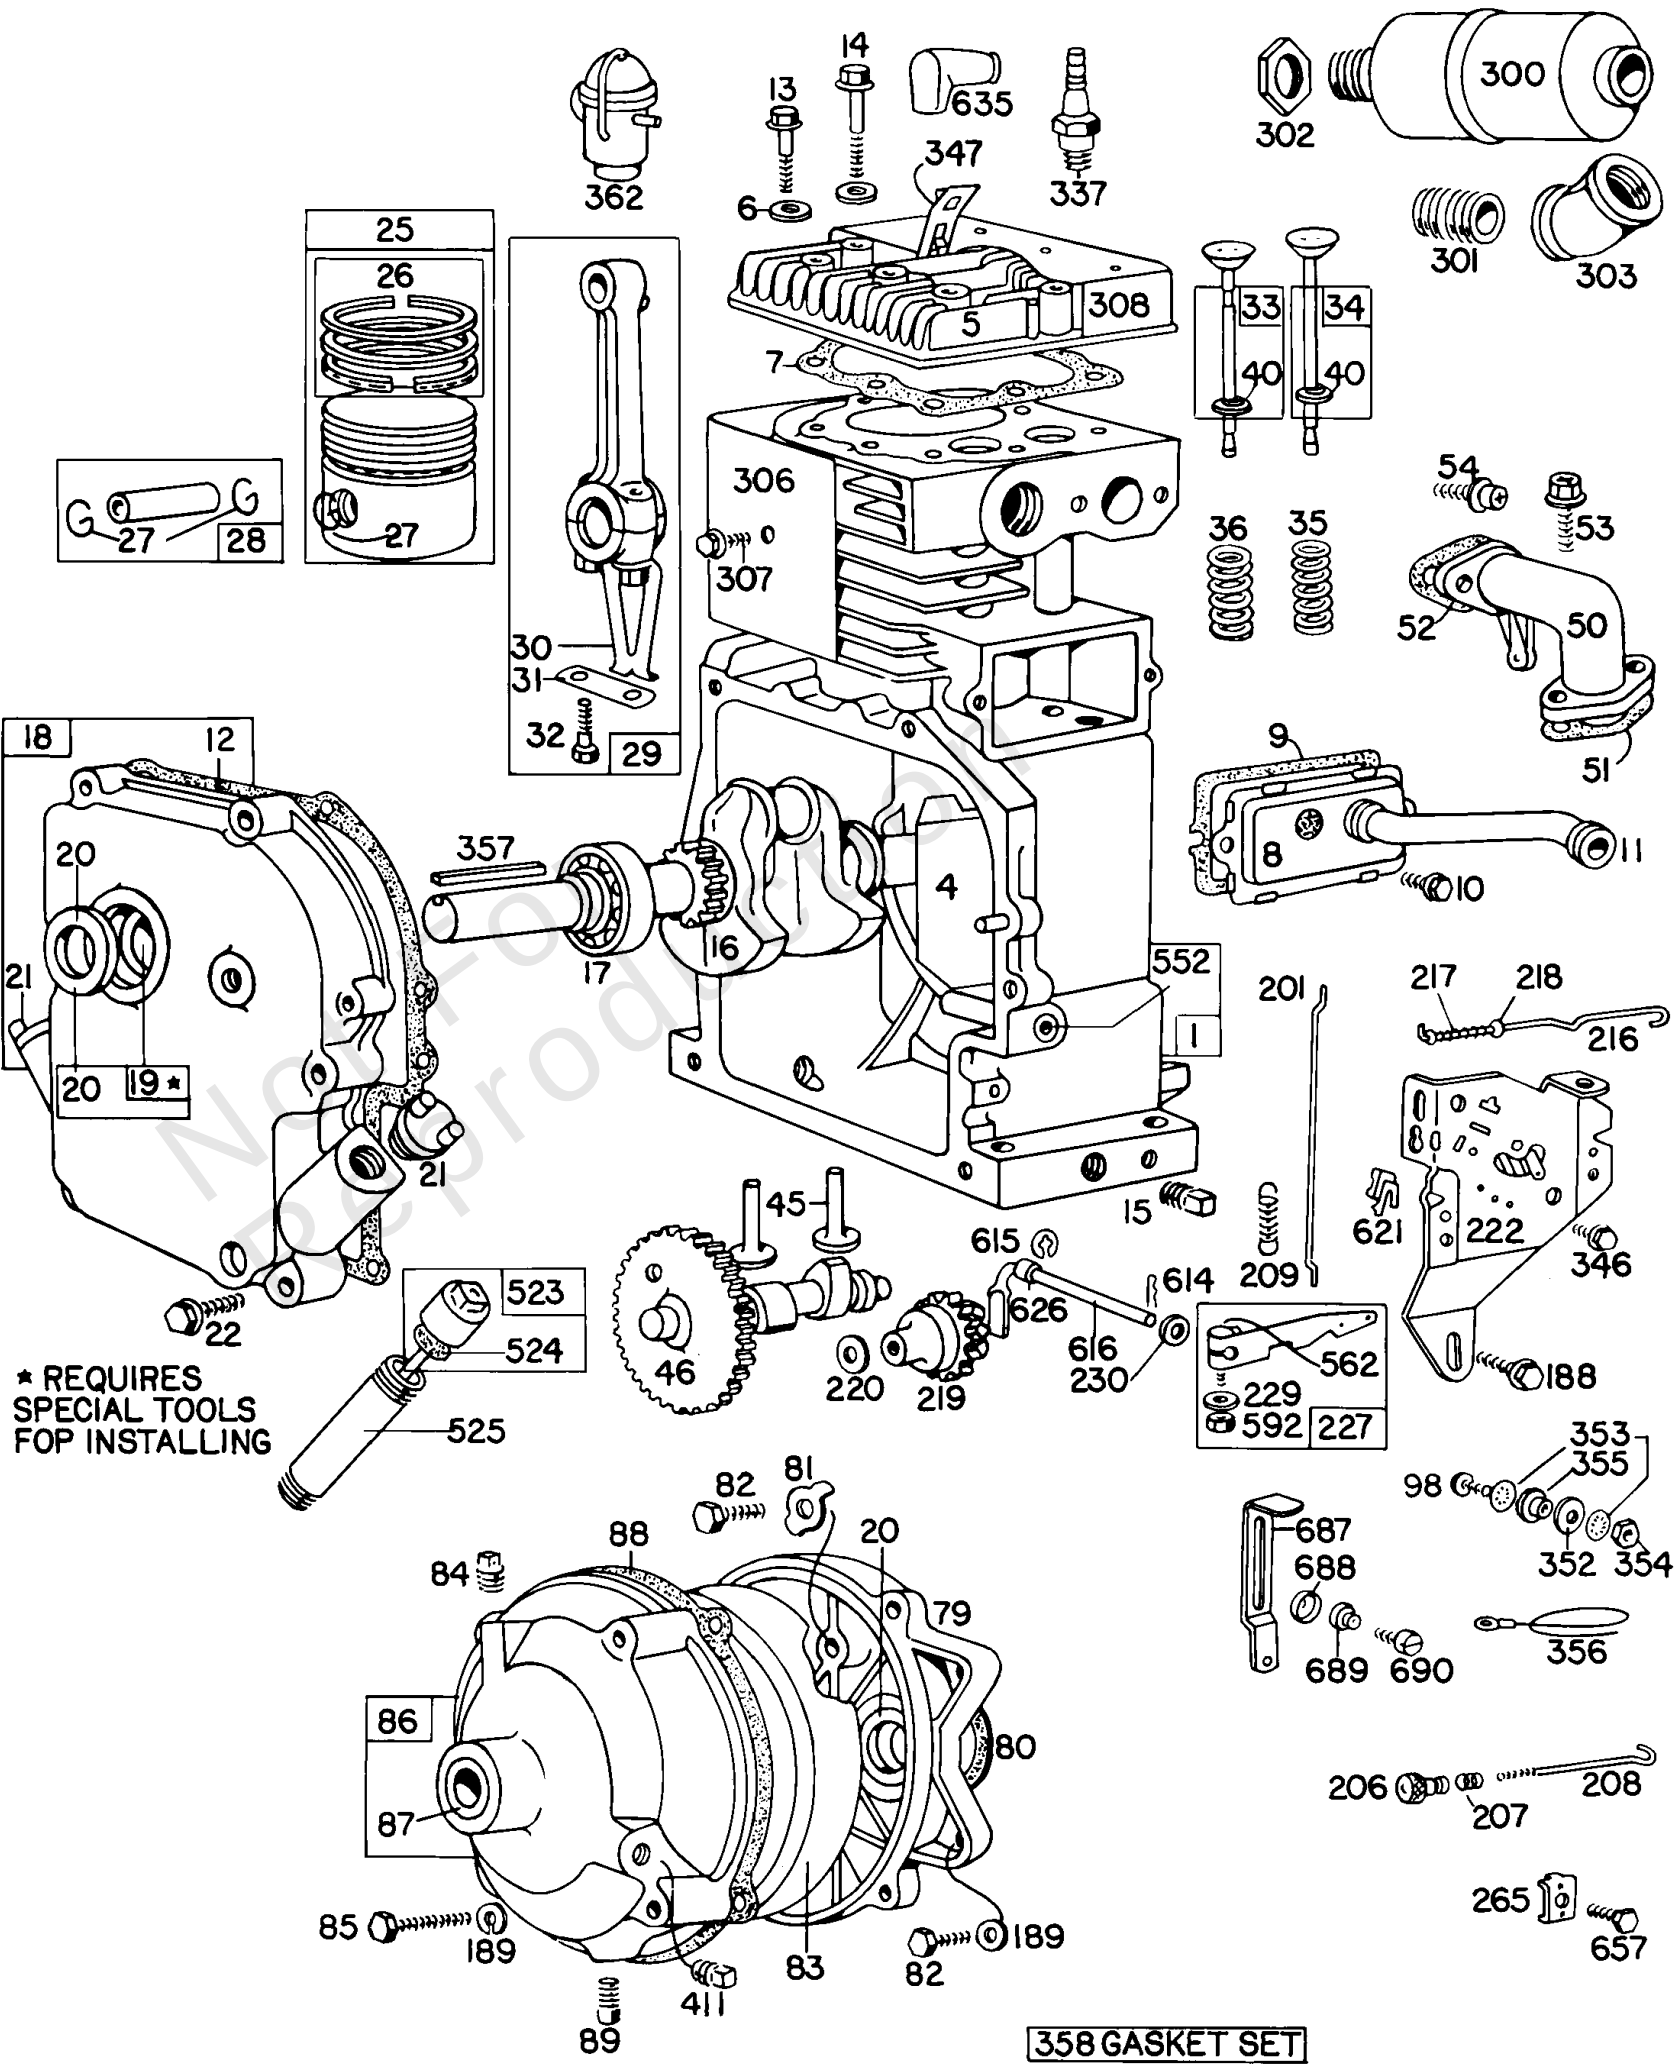

* REQUIRES
SPECIAL TOOLS
FOR INSTALLING

358 GASKET SET

Cylinder, Crankcase, Piston


REF NO	PART NO	QTY	DESCRIPTION
88	27328		GASKET, Gear Cover/Housing
89	91488		PLUG -(1/8)
98	91920		SCREW -(8-32 X 5/8)
188	91449		SCREW
188	93535		SCREW -(5/16-18 X 3/4)
189	90366		WASHER
201	260872		LINK, Throttle
206	230149		NUT, Governor Adjusting -(5-44)
207	26855		SPRING, Governor Link
208	230841		ROD, Governor Control
209	260871		SPRING, Governor -(2700 To 3300 RPM)
216	260880		LINK, Choke
217	260903		SPRING, Choke Return
218	221198		WASHER
219	297656		GEAR, Governor
220	221551		WASHER -(Governor Lever)
222	299012		BRACKET, Control
227	299165		LEVER, Governor Control -(3/16 Diameter)
229	220680		WASHER
230	221559		WASHER -(3/16 I.D.)
265	221535		CLAMP, Casing -(Stamped Steel)
300	294599		MUFFLER
301	91245		ELBOW, Exhaust
302	91242		LOCKNUT -(Muffler and Elbow)
303	91246		ELBOW, Exhaust -(45 Degree)
306	221005		SHIELD, Cylinder
307	221834		CLAMP, Tube
307	93163		SCREW
308	220824		SWITCH, Stop
337	29693		PLUG, Spark
337	298809		PLUG, Spark -Spark Plugs 298809, 29693 and 293918 use Ignition Cable Terminal No. 221798
346	93014		SCREW
347	220884		SWITCH, Stop
347	221808		SWITCH, Stop
352	66068		WASHER -(Fiber)
353	92791		WASHER
354	90576		NUT -(Ground Terminal)

Footnotes:

with Valves with hole in stem except those with Rotocoil.

For Pins and Retainers for Valve Nos. 230385 and 230386, see Note under Ref. 40

For Pins and Retainers for this Valve, see Note under Ref. 40

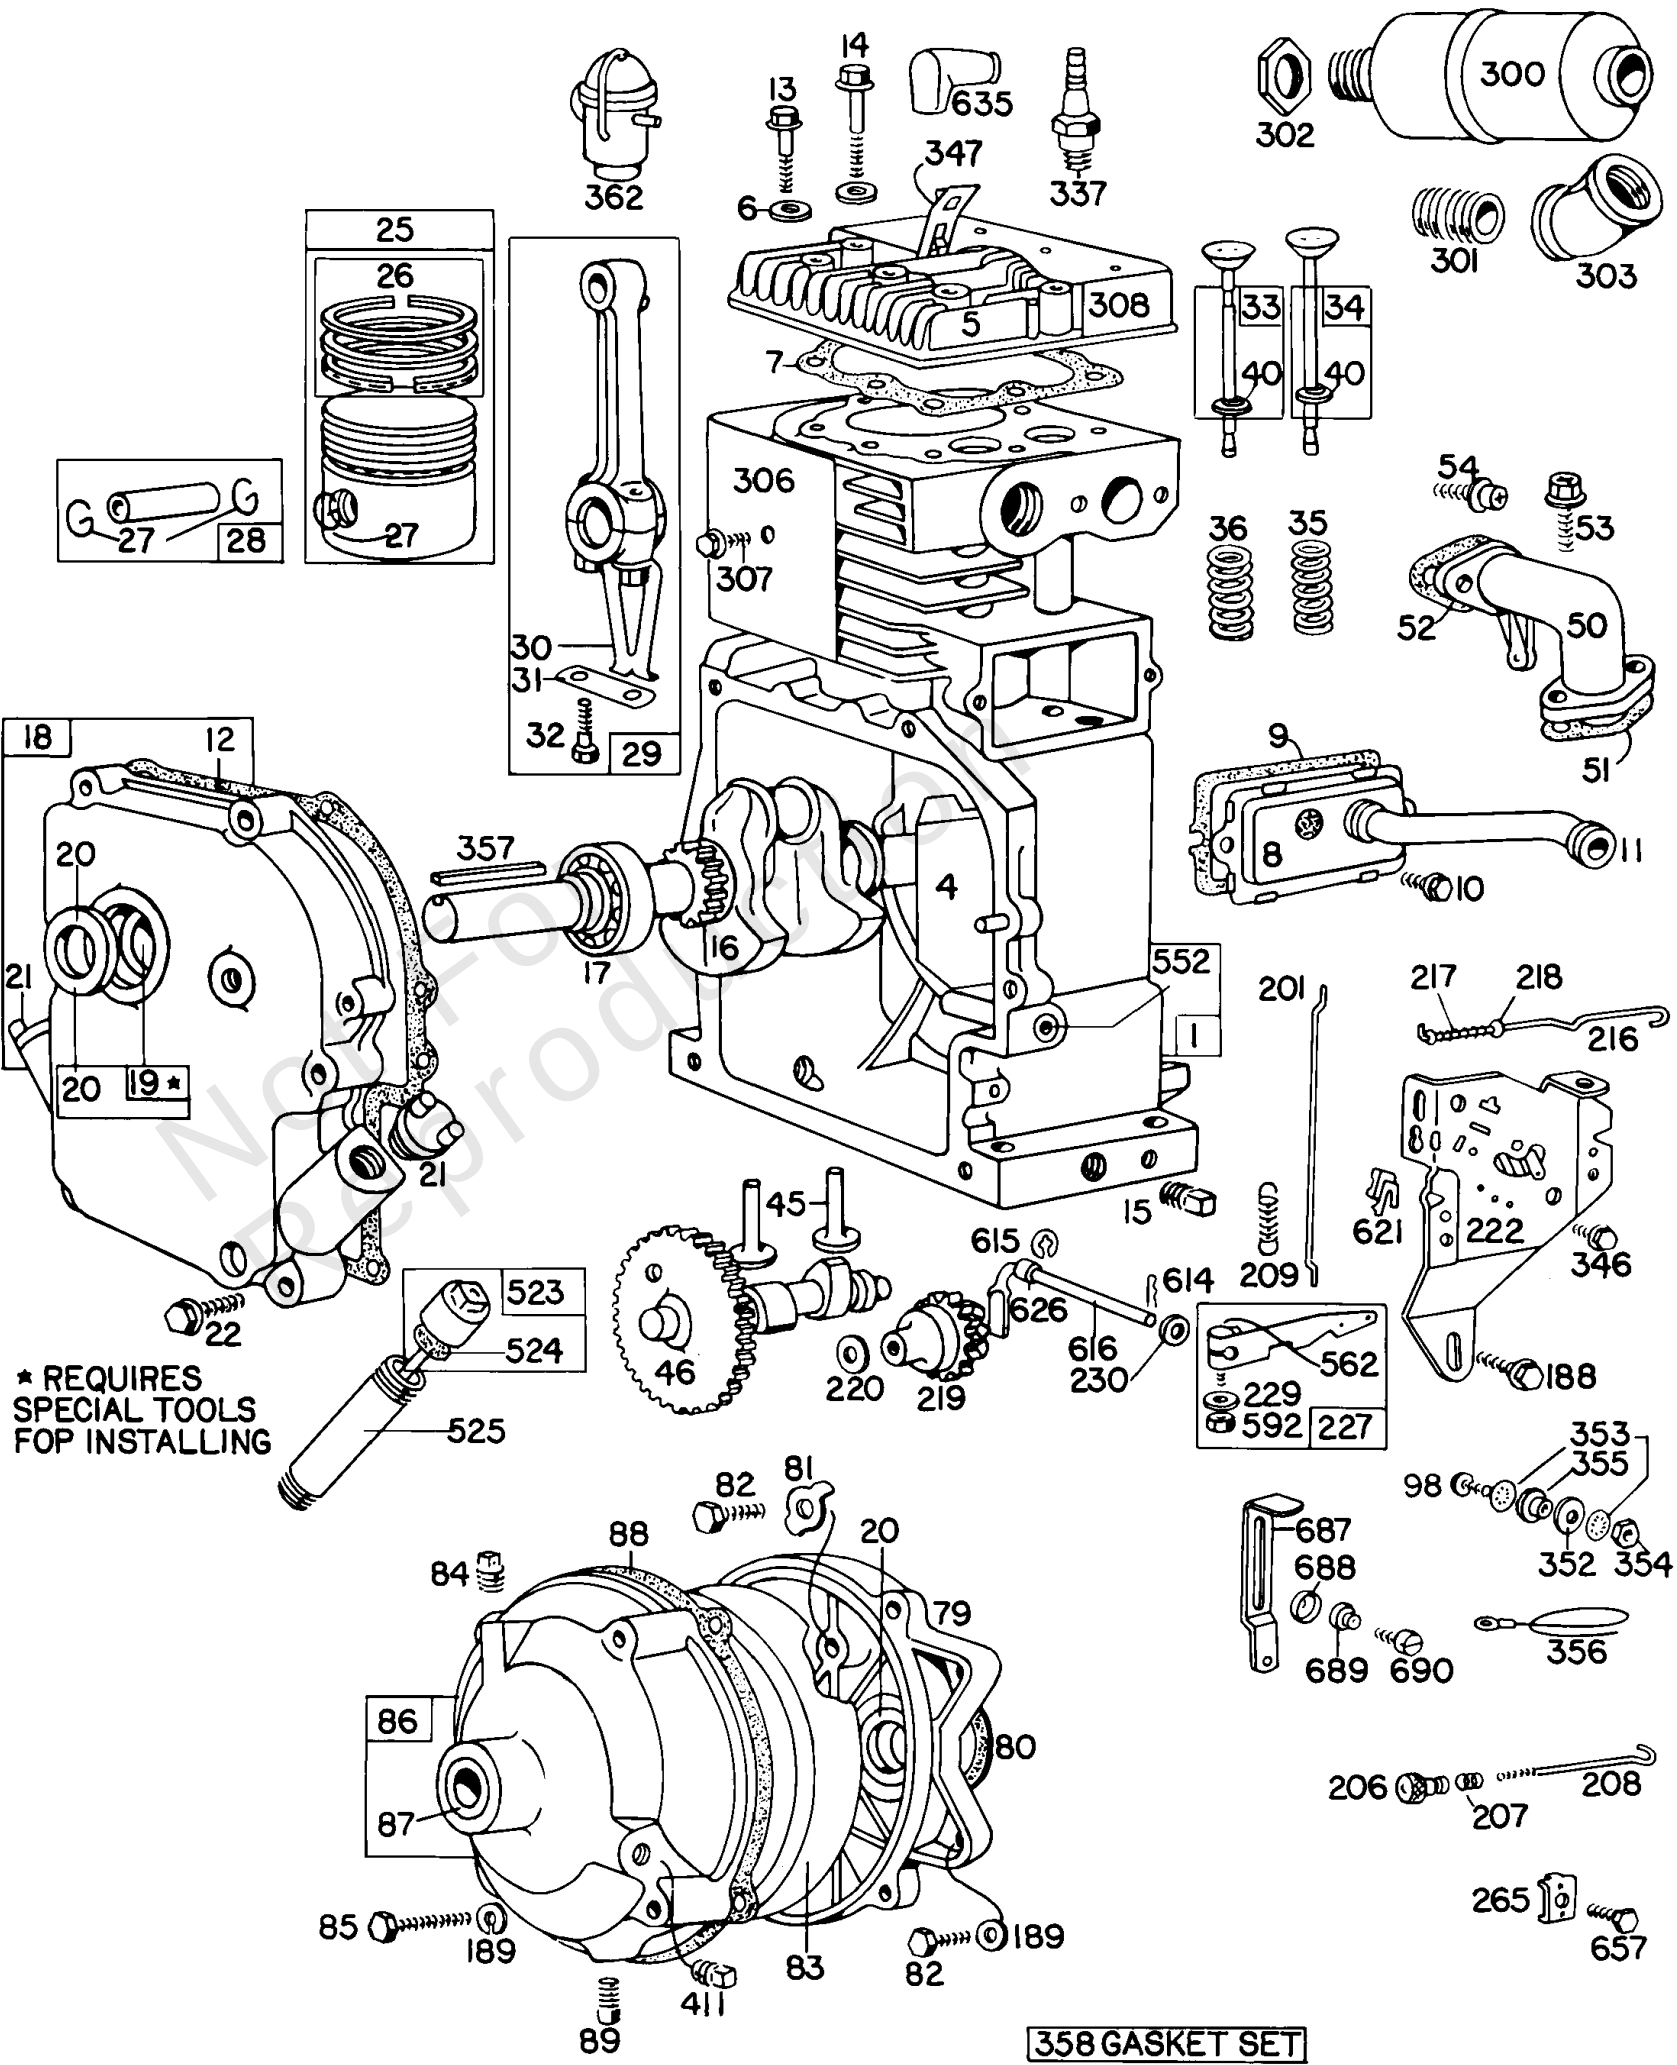

Cylinder, Crankcase, Piston

REF NO	PART NO	QTY	DESCRIPTION
355	66554		WASHER -(Insulating)
356	299500		WIRE, Stop -(Used with Armature Refs. 333A and 333B)
357	91540		KEY, Drive Pulley -(1/4)
358	295970		GASKET SET, Engine
362	291360		SHIELD, Spark Plug -(With Stop Switch)
411	93448		PLUG, Oil Drain -(Flush) (1/4-18 NPTF) (Flush) (1/4 18 NPTF)
523	295923		CAP, Oil Fill
524	65304		SEAL, O-Ring -(Dipstick Cap)
525	230553		PIPE, Oil -(5-1/4)
552	230843		BUSHING, Governor Crank -(3/16 I.D.)
562	92613		BOLT -(Governor Lever)
592	90356		NUT -(10-24)
614	93306		PIN, Cotter
615	93307		RETAINER, Governor Shaft
616	230842		CRANK, Governor
621	297472		SWITCH, Stop
626	230749		SPACER -(Governor Lever)
635	66538		BOOT, Spark Plug
657	93496		SCREW -(10-32 X 5/8)
687	260847		SPRING, Friction
687	298957		SLIDE, Control
689	221766		SPRING, Friction
690	92484		SCREW

Footnotes:


with Valves with hole in stem except those with Rotocoil.

For Pins and Retainers for Valve Nos. 230385 and 230386, see Note under Ref. 40

For Pins and Retainers for this Valve, see Note under Ref. 40

INSTRUCTIONS

To determine the part number of a starter motor, or starter motor part, first identify the starter motor manufacturer and motor model number. See illustration for location. Next, use chart to select part number.

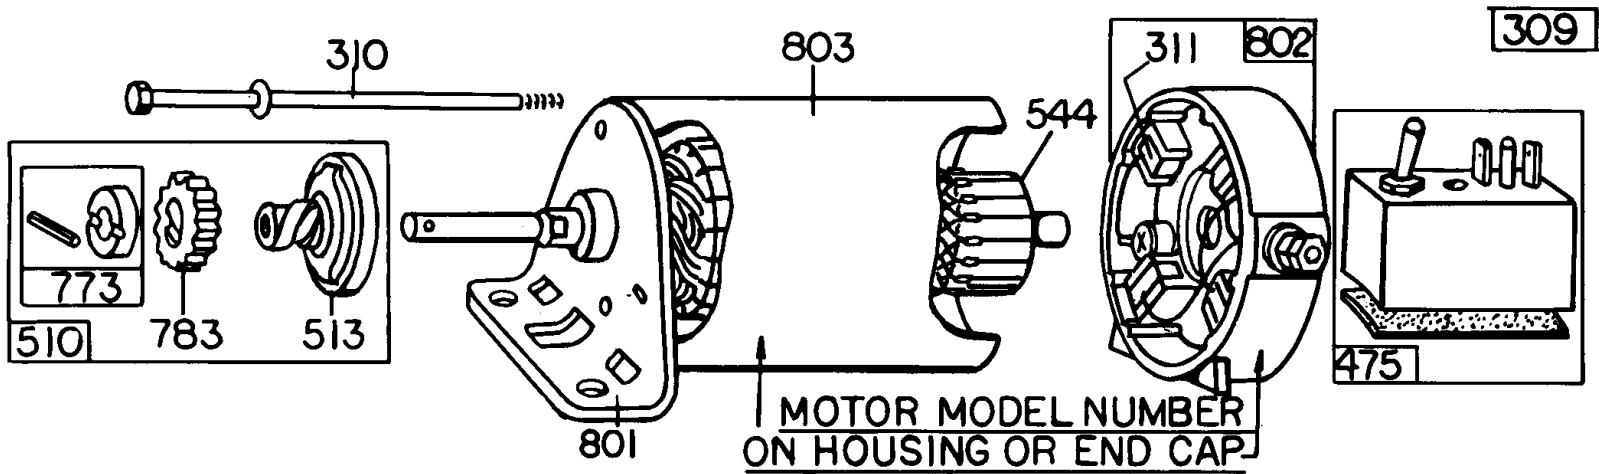

Subject		Ref. No. 309	Ref. No. 510	Ref. No. 801	Ref. No. 544	Ref. No. 803	Ref. No. 802	Ref. No. 311	Ref. No. 310	Ref. No. 475
Starter Motor Mfr. and Motor Model Number		Motor and Drive Assy.	Drive Assembly	End Cap Assy. Drive	Armature Assy.	Housing Assy.	End Cap Assy. Commutator*	Brush Assy.	Thru Bolt Assy.	Rectifier Assy.
American Bosch										
12 V.	SMH 12-A11	390307	390443	390444	390446	390447	390448	390449	390450	
12 V.	SME 12-A8	299330	390094	390092	390086	390097	390089		390080	
12 V.	01965-23-MO-30-SM	390838	391461**	390444	391607	390447	390448	390449	390450	
110 V.	SME 110-C3	299329†	390094	390091	390088	390096	390098	390081	390080	390099
110 V.	SME 110-C6	299556	390094	390092	390088	390095	390098	390081	390080	390084
110 V.	SME 110-C8	299764	390094	390093	390088	390096	390098	390081	390080	390099
Mitsubishi										
12 V.	MMO-5ML	390307	299963	390454	390456	390452	390455	390990	299962	
12 V.	MMO-4FL	299330	299963	390454	390457	390453	390455	390990	299962	
12 V.	MOOIT02271	390838	391461**	391585	391584	390452	390455	390990	93771	
110 V.	J282188	299329	299963	299964	299968	299967	299965		299962	299966
Briggs & Stratton										
12 V.		390838	391461**	392061	390837	390849	390846	391705	391706	

* Includes Brush Set

** Includes #391135 Clutch Assembly (Ref. No. 513)
#280104 Gear (Ref. No. 783)
#391462 Retainer and Pin (Ref. No. 773)


Uses #392247 Switch Shield Assembly

Electric Starter and Chart

REF NO	PART NO	QTY	DESCRIPTION
309	299329		MOTOR, Starter -(Mitsubishi and American Bosch 110V)
309	299330		MOTOR, Starter -(Mitsubishi and American Bosch 12V)
309	299556		MOTOR, Starter -(American Bosch 110V)
309	299764		MOTOR, Starter -(American Bosch 110V)
309	390307		MOTOR, Starter -(Bosch or Mitsubishi)
309	390838		MOTOR, Starter -(3 1/16 Housing)
310	299962		BOLT -(Mitsubishi Starters)
310	390080		SCREW -(American Bosch Starters)
310	390450		BOLT -(American Bosch 12V)
310	391706		SCREW -(3 1/16 Housing)
310	93771		BOLT -(Mitsubishi 12V)
311	390081		SET, Brush -(American Bosch 110V Starters)
311	390449		SET, Brush -(American Bosch 12V)
311	390990		SET, Brush -(Mitsubishi Starters)
311	391705		SET, Brush -(3 1/16 Housing)
475	299966		RECTIFIER -(Mitsubishi 110V)
475	390084		RECTIFIER -(American Bosch 110V)
475	390099		RECTIFIER -(American Bosch 110V)
510	299963		DRIVE, Starter -(Mitsubishi Starters)
510	390094		DRIVE, Starter -American Bosch 12V & 110V (SME 12-A8 & SME 110-C3, C6, or C8)
510	390443		DRIVE, Starter -(American Bosch 12V Or 110V)
510	391461		DRIVE, Starter -(3 1/2 Housing) Includes #391135 Clutch Assembly (Ref. No. 513) #280104 Gear (Ref. No. 783) #391462 Retainer and Pin (Ref. No. 773) Uses #392247 Switch Shield Assembly
544	299968		ARMATURE, Starter
544	390086		ARMATURE, Starter
544	390088		ARMATURE, Starter -(American Bosch 110 V Starters)
544	390446		ARMATURE, Starter
544	390456		ARMATURE, Starter
544	390457		ARMATURE, Starter
544	390837		ARMATURE, Starter -(3 5/8 Housing)
544	391584		ARMATURE, Starter
544	391607		ARMATURE, Starter -(American Bosch 12V)
801	299964		CAP, Drive -(Mitsubishi 110V)

INSTRUCTIONS

To determine the part number of a starter motor, or starter motor part, first identify the starter motor manufacturer and motor model number. See illustration for location. Next, use chart to select part number.

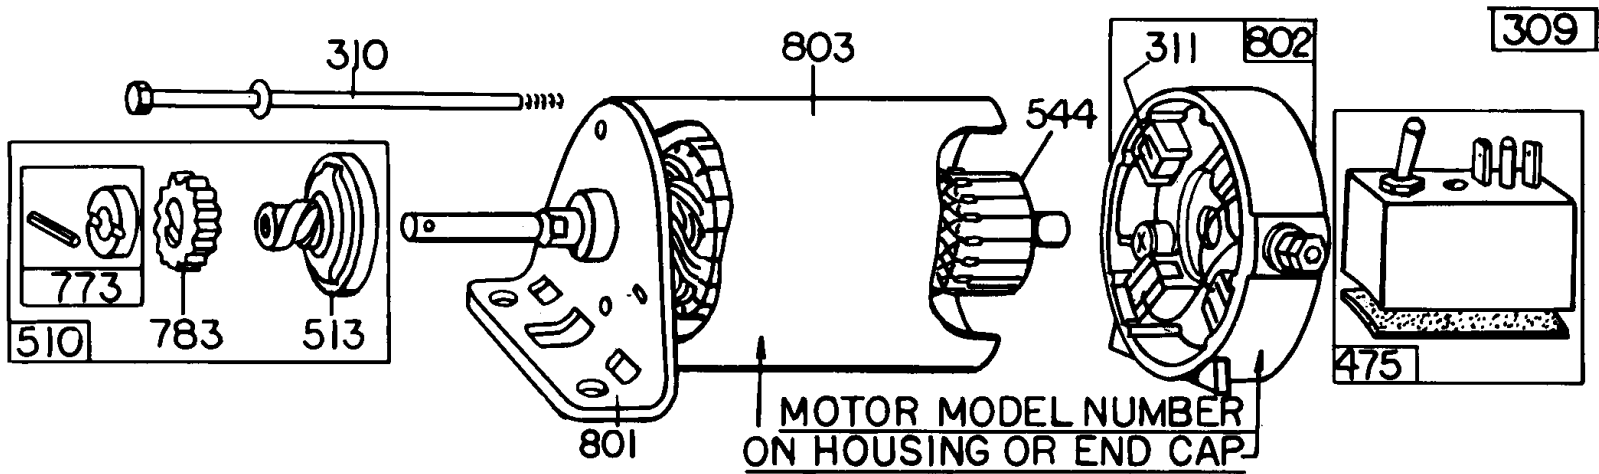

Subject		Ref. No. 309	Ref. No. 510	Ref. No. 801	Ref. No. 544	Ref. No. 803	Ref. No. 802	Ref. No. 311	Ref. No. 310	Ref. No. 475
Starter Motor Mfr. and Motor Model Number		Motor and Drive Assy.	Drive Assembly	End Cap Assy. Drive	Armature Assy.	Housing Assy.	End Cap Assy. Commutator*	Brush Assy.	Thru Bolt Assy.	Rectifier Assy.
American Bosch										
12 V.	SMH 12-A11	390307	390443	390444	390446	390447	390448	390449	390450	
12 V.	SME 12-A8	299330	390094	390092	390086	390097	390089		390080	
12 V.	01965-23-MO-30-SM	390838	391461**	390444	391607	390447	390448	390449	390450	
110 V.	SME 110-C3	299329†	390094	390091	390088	390096	390098	390081	390080	390099
110 V.	SME 110-C6	299556	390094	390092	390088	390095	390098	390081	390080	390084
110 V.	SME 110-C8	299764	390094	390093	390088	390096	390098	390081	390080	390099
Mitsubishi										
12 V.	MMO-5ML	390307	299963	390454	390456	390452	390455	390990	299962	
12 V.	MMO-4FL	299330	299963	390454	390457	390453	390455	390990	299962	
12 V.	MOOIT02271	390838	391461**	391585	391584	390452	390455	390990	93771	
110 V.	J282188	299329	299963	299964	299968	299967	299965		299962	299966
Briggs & Stratton										
12 V.		390838	391461**	392061	390837	390849	390846	391705	391706	

* Includes Brush Set

** Includes #391135 Clutch Assembly (Ref. No. 513)

#280104 Gear (Ref. No. 783)

#391462 Retainer and Pin (Ref. No. 773)

Uses #392247 Switch Shield Assembly

Electric Starter and Chart

REF NO	PART NO	QTY	DESCRIPTION
801	390091		CAP, Drive
801	390092		CAP, Drive -(American Bosch 12V Or 110V)
801	390093		CAP, Drive
801	390444		CAP, Drive -(American Bosch 12V)
801	390454		CAP, Drive -(Mitsubishi 12V)
801	391585		CAP, Drive -(Mitsubishi 12V)
801	392061		CAP, Drive -(3-1/16 or 3-3/4 Housing)
802	299965		CAP, End -(Mitsubishi 110V) Includes Brush Set
802	390089		CAP, End -(American Bosch 12V) Includes Brush Set
802	390098		CAP, End -Includes Brush Set (American Bosch 110 V Starters)
802	390448		CAP, End -(American Bosch 12V) Includes Brush Set
802	390455		CAP, End -Includes Brush Set (Mitsubishi 12Vstarters)
802	390846		CAP, End -(3 1/16 Housing) Includes Brush Set
803	299967		HOUSING, Starter
803	390095		HOUSING, Starter -(American Bosch 110V)
803	390096		HOUSING, Starter -(American Bosch 110V)
803	390097		HOUSING, Starter
803	390447		HOUSING, Starter -(American Bosch 12V)
803	390452		HOUSING, Starter -(Mitsubishi 12V)
803	390453		HOUSING, Starter -(Mitsubishi 12V)
803	390849		HOUSING, Starter -(3 1/16 Housing)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	130G320125F1		Replacement Engine
	-----		Top No-Load Speed: 3600 -Trim: 01
	-----		Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.

Not For Reproduction

