





Parts Manual


Mfg. No: 170432-1535-99

Model Components	Page
(2) Carburetor Assemblies.	4
Blower Hsg,Rewind,Electrical.	10
Cyl,CrankCase,Piston,Controls.	14
Electric Starter and Chart.	22
Electric Starter and Starter.	26
Electric Starters.	30
Fuel Tank Assembly.	36
Gear Case, Mufflers,Deflectors.	38
Replacement Engine - US & Canada.	40

Not For
Reproduction

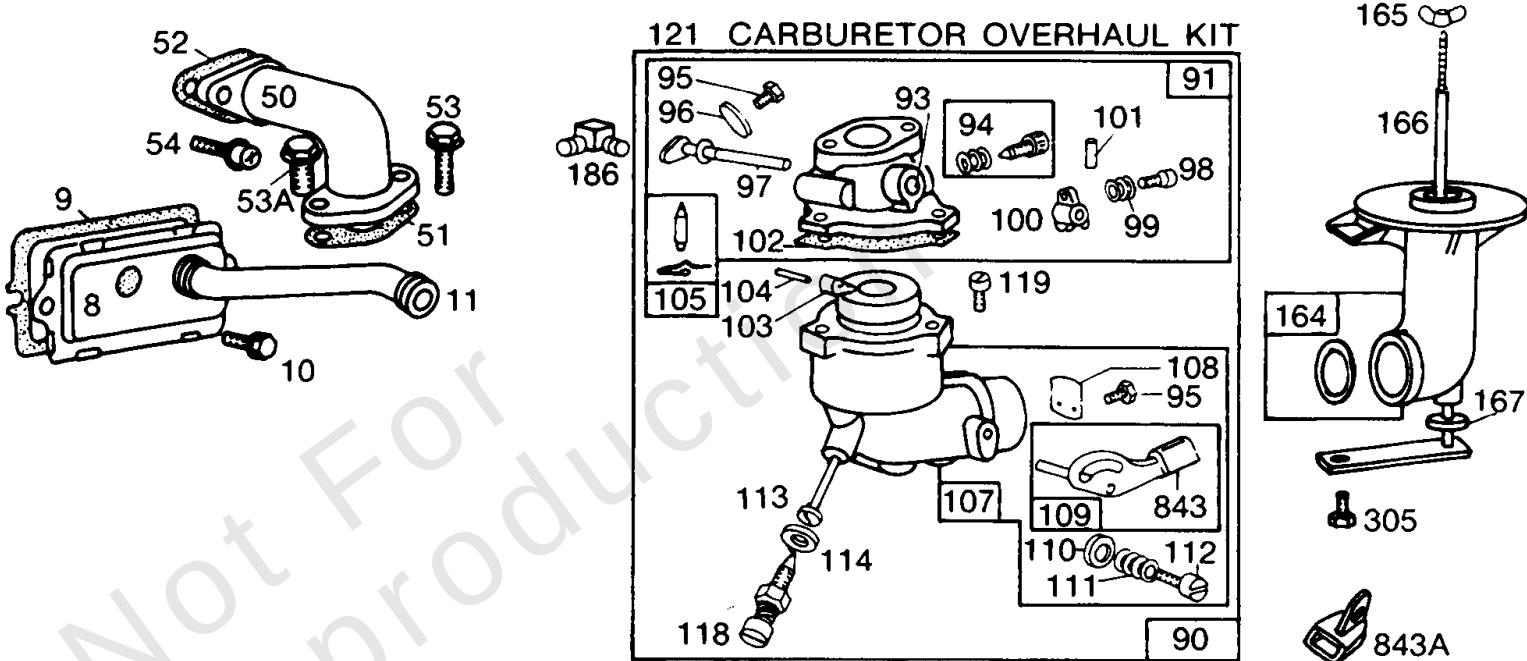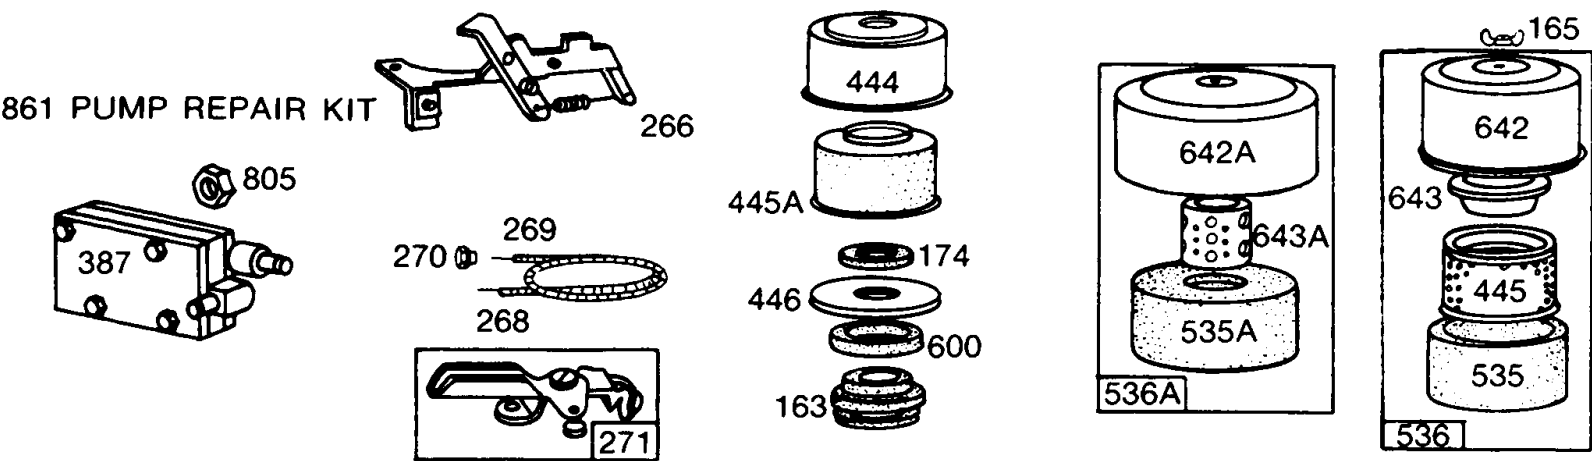

NON-METAL AIR CLEANER PIPE GROUP

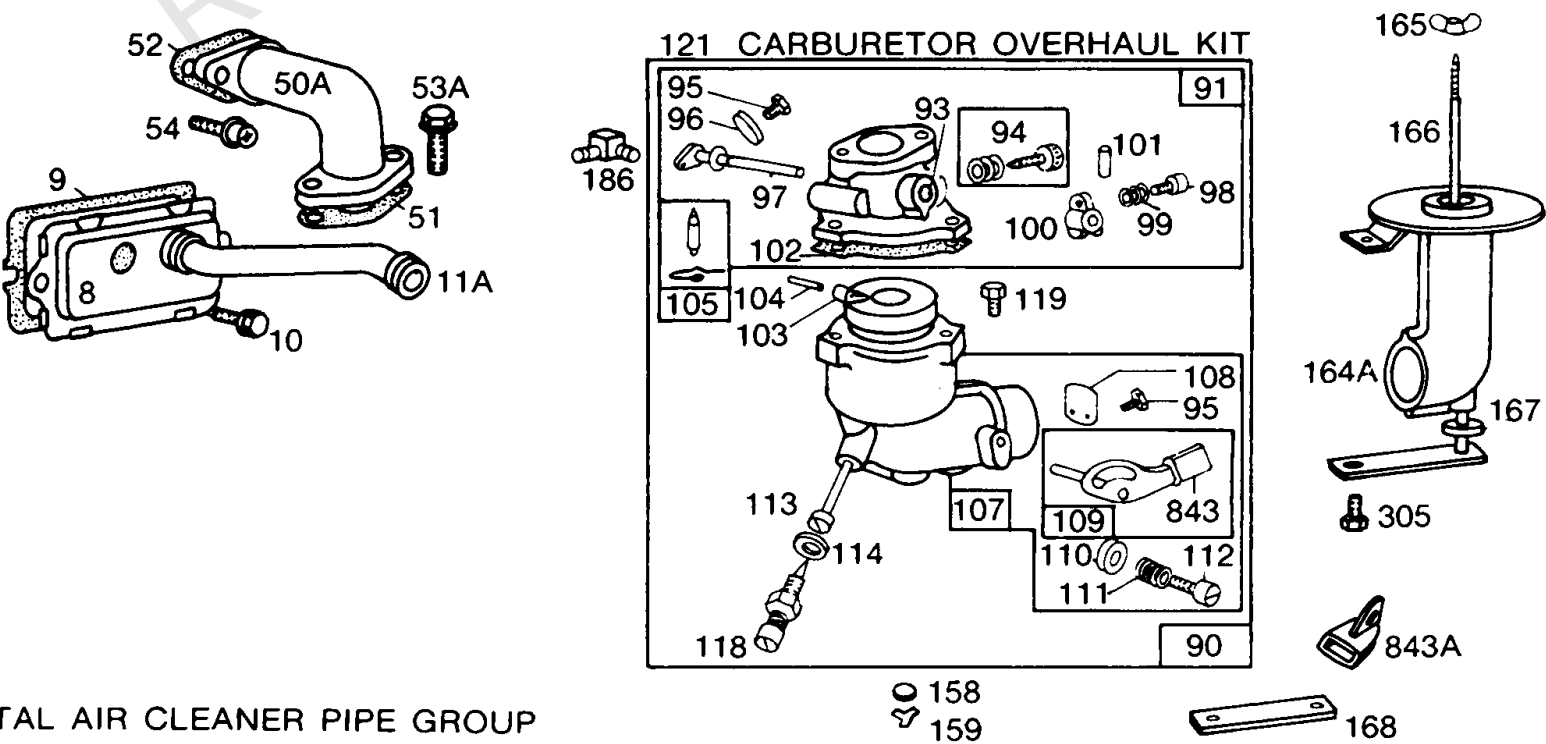

METAL AIR CLEANER PIPE GROUP

(2) Carburetor Assemblies

REF NO	PART NO	QTY	DESCRIPTION
8	390321		BREATHER ASSEMBLY
9	27803		GASKET, Rocker Cover -Included in Gasket Set-Part No. 299577
10	93394		SCREW
11A	67068		TUBE, Breather -(Used with Metal Air Cleaner Pipe)
11	280267		TUBE, Breather -(Used with Nylon Air Cleaner Pipe)
50A	211812		MANIFOLD, Intake
50	212488		MANIFOLD, Intake
51	65647		GASKET, Intake -Included in Carburetor Overhaul Kit-See Ref. 121. Included in Gasket Set-Part No. 299577
52	27828		GASKET, Intake -Included in Gasket Set-Part No. 299577
53A	93357		SCREW
53	93956		SCREW
54	93208		SCREW -(Intake Manifold)
90	299169		CARBURETOR -(Manual Choke)
91	299171		BODY, Upper Carburetor
93	23108		BUSHING, Throttle Shaft
94	292681		VALVE, Idle Mixture -Included in Carburetor Overhaul Kit-See Ref. 121
95	93499		SCREW -(Throttle Valve)
96	62940		VALVE, Throttle
97	298826		SHAFT, Throttle
98	91920		SCREW -(8-32 X 5/8)
99	26157		SPRING, Compression
100	61967		STOP, Throttle
101	93043		PIN, Shaft
102	27918		GASKET, Carburetor Body -Included in Carburetor Overhaul Kit-See Ref. 121
103	99333		FLOAT, Carburetor
104	230896		PIN, Float Hinge -Included in Carburetor Overhaul Kit-See Ref. 121
105	394681		KIT, Needle/Seat -(Gravity Feed) Order 394683 for Fuel Pump Applications
107	299170		BODY, Lower Carburetor
108	221835		VALVE, Choke
109	391987		SHAFT, Choke -(Manual)
110	62899		WASHER -(Thermostat)
111	26155		SPRING, Friction
112	23123		SCREW
113	395207		NOZZLE, Carburetor -Included in Carburetor Overhaul Kit-See Ref. 121
114	68667		WASHER -(Viton Seat) Included in Carburetor Overhaul Kit-See Ref. 121

Footnotes:



Use 392918 Panel Kit

Use 222751 Panel-Instrument


Use 392918 Starter Panel Kit on Engines

(2) Carburetor Assemblies

Mfg. No: 170432-1535-99

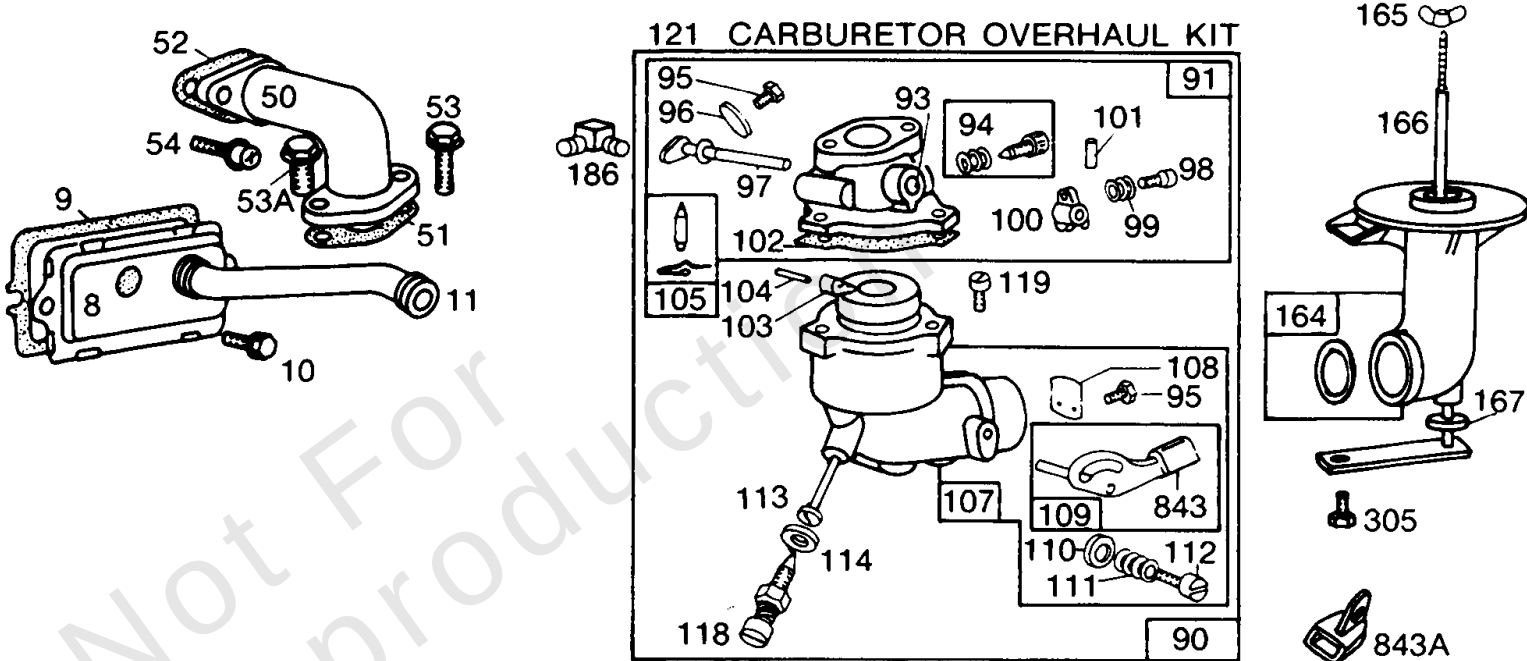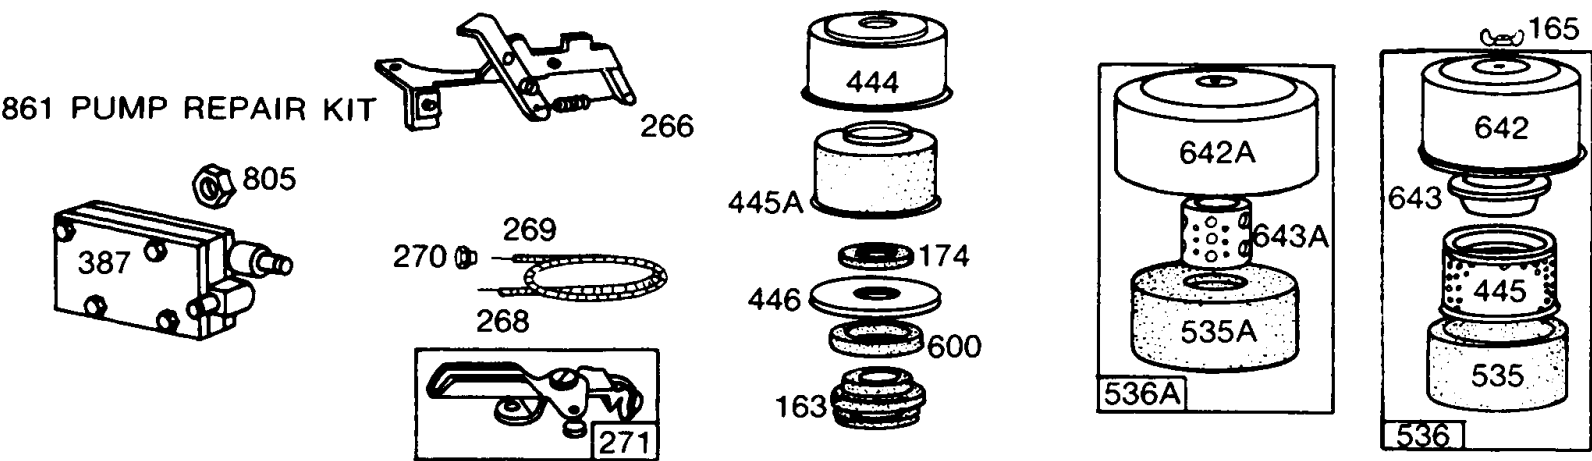

NON-METAL AIR CLEANER PIPE GROUP

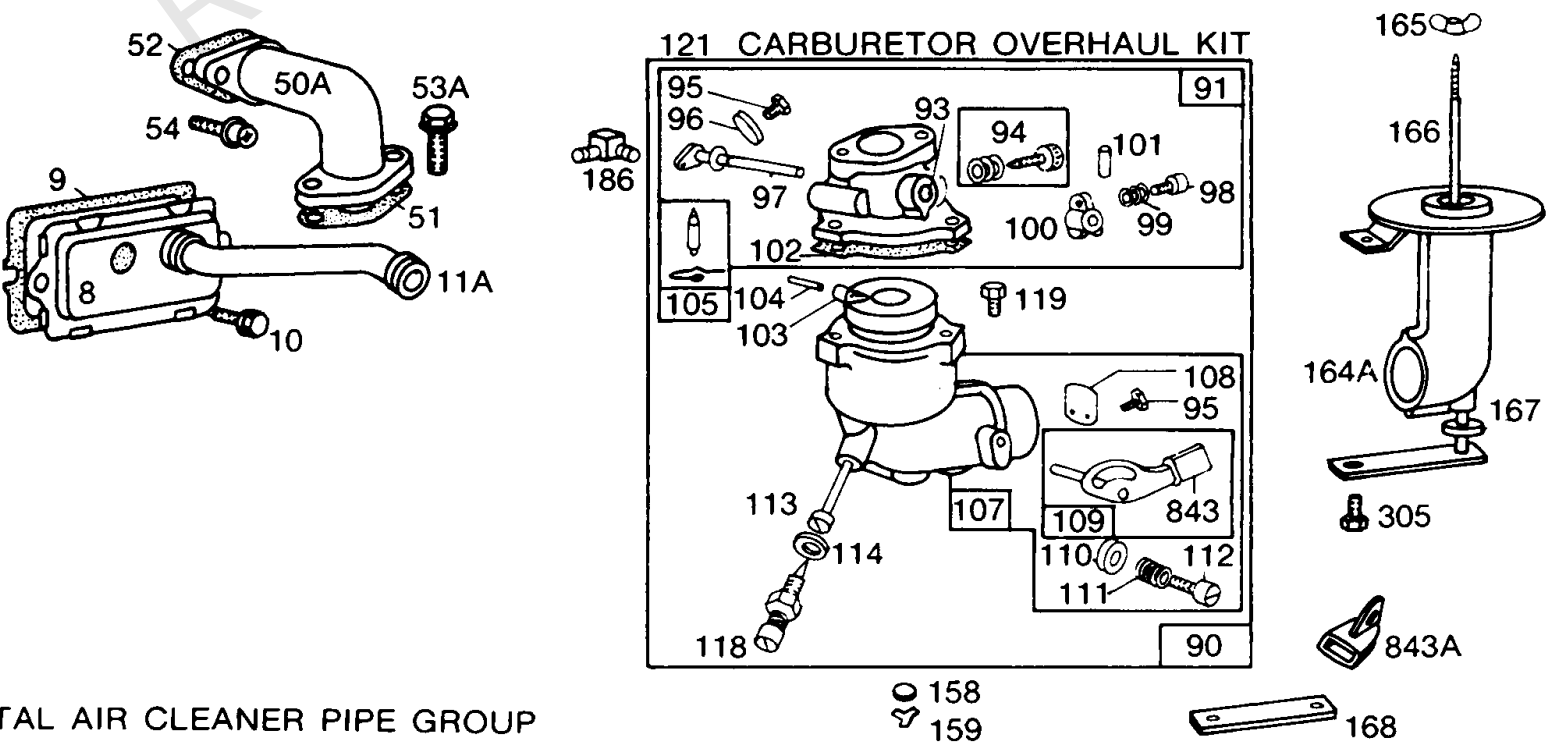

METAL AIR CLEANER PIPE GROUP

(2) Carburetor Assemblies

REF NO	PART NO	QTY	DESCRIPTION
805	231001		NUT
843A	280147		KNOB, Control -(Sno gard)
843	280149		SLEEVE, Lever
861	394462		KIT, Fuel Pump -(Use With Pump 390818 Only)

Not For
Reproduction

Footnotes:
Use 392918 Panel Kit
Use 222751 Panel-Instrument
Use 392918 Starter Panel Kit on Engines

Blower Hsg,Rewind,Electrical

REF NO	PART NO	QTY	DESCRIPTION
363	19165		PULLER, Flywheel
372	220477		CLAMP
373	92987		STARTER, Rewind
375	294628		BREAKER, Ignition
375	299061		BREAKER, Ignition -Includes: 294628 Point Set 65704 Plunger 61760 Key-Flywheel
455	222561		CUP, Flywheel
468	222562		SCREEN, Rotating
516	260374		SPRING, Condensor
517	295423		PULLEY, Rope Starter
518	69932		GRIP, Starter Rope
521	298529		SHIELD, Protective
608	390391		STARTER, Rewind -For Starter Assembly with longer than standard rope (63) order No. 299640
655	222598		ANCHOR, Rewind Spring -(Stamped Rewind Housing)
682	211516		SHIELD, Starter
781	280068		CAP, Starter Pulley
851	221798		TERMINAL, Spark Plug

Footnotes:

Use 392918 Panel Kit

Use 222751 Panel-Instrument

Use 392918 Starter Panel Kit on Engines

Cyl,CrankCase,Piston,Controls

REF NO	PART NO	QTY	DESCRIPTION
854	392884		BRACKET, Stopswitch
869	211661		SEAT, Valve -(Exhaust)
870	211661		SEAT, Valve -(Exhaust)
871	-----		No Nomenclature -231218 or 230655 See Repair Manual

Not For
Reproduction

Footnotes:

Use 392918 Panel Kit
Use 222751 Panel-Instrument
Use 392918 Starter Panel Kit on Engines

