









Parts Manual

Mfg. No: 215802-0123-B1




Model Components	Page
Air Cleaner, Blower Housing.	4
Alternator, Controls, Electric Starter, Governor Spring, Ignition.	6
Camshaft, Crankshaft, Piston, Rings, Connecting Rod.	12
Carburetor, Fuel Supply.	14
Carburetor, Kit - Carburetor Overhaul.	18
Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Intake Manifold, Valves.	22
Cylinder, Engine Sump, Lubrication.	26
Exhaust System, Flywheel, Rewind Starter.	30
Replacement Engine - US & Canada.	34



Not For
Reproduction

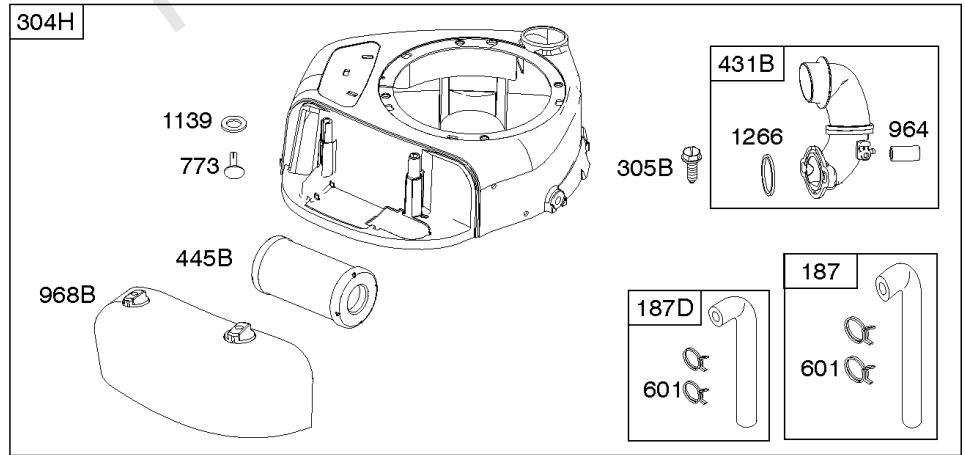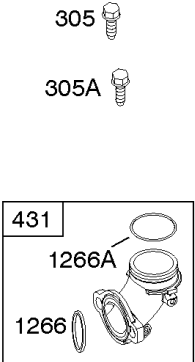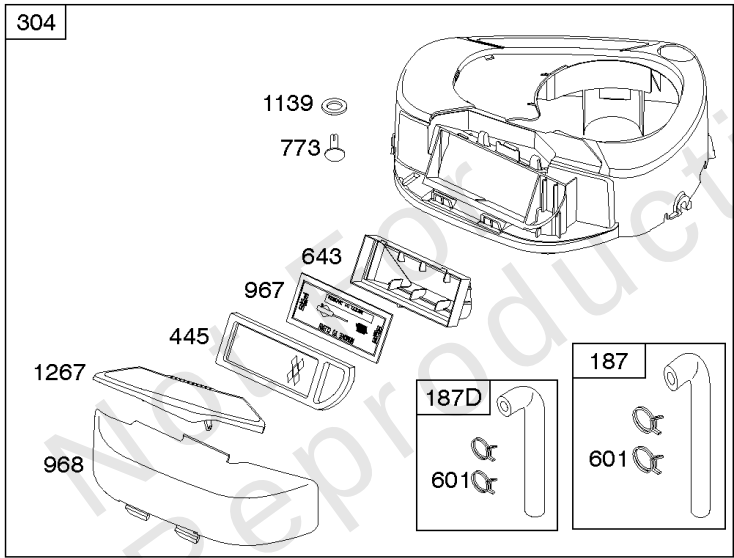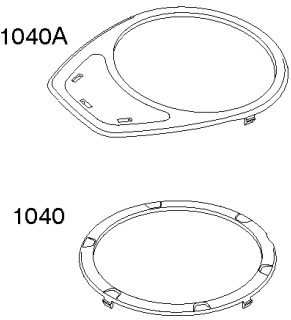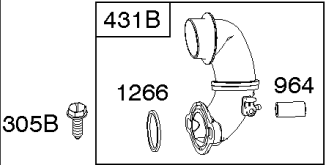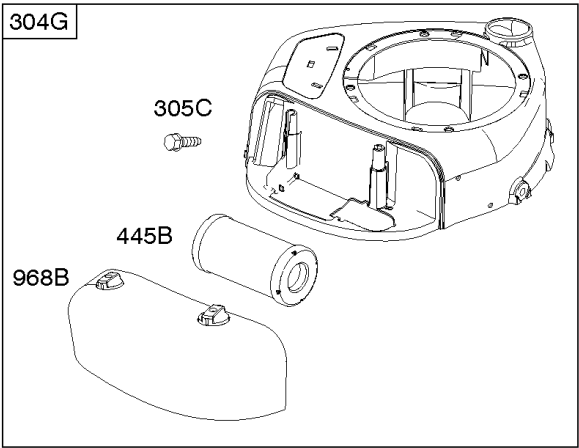

Air Cleaner, Blower Housing







REF NO	PART NO	QTY	DESCRIPTION
187	791805		LINE, Fuel -(Formed)(10-1/4" Long)(Cut to Required Length)
187D	791744		LINE, Fuel -(Formed)(14 Inches Long)(Cut To Required Length)
304	-----		Housing-Blower -(Compatible With Panel Style Filter. No Longer Available. See Reference304H For Replacement Blower Housing Kit.)
304G	591641		HOUSING, Blower -(Black-Compatible With Canister Style Filter)
304H	591906		HOUSING, Blower
305	697102		SCREW -(Blower Housing)
305A	793376		SCREW -(Blower Housing) (Used On Non-Grommet Style Blower Housings)
305C	799370		SCREW -(Blower Housing) (Used On Grommet Style Blower Housings)
305B	795891		SCREW -(Blower Housing) (Blower Housing To Intake Elbow)
431	697122		ELBOW, Intake -(Black-Compatible With Panel Style Filter)
431B	797901		ELBOW, Intake -(Black-Compatible With Canister Style Filter)
445	797007		FILTER, A/C Cartridge -(Flat Panel Air Cleaner)
445B	591583		FILTER, A/C Cartridge -(Non Washable)
601	791850		CLAMP, Hose -(Green)
601	691038		CLAMP, Hose -(Black)
643	697155		RETAINER, Air Filter
773	796448		RETAINER
964	799159		CAP, Connector -(EVAP)
967	697292		FILTER, Pre Cleaner
968	697420		COVER, Air Cleaner -(Black-Compatible With Panel Style Filter)
968B	591646		COVER, Air Cleaner -(Black-Compatible With Canister Style Filter)
1040	698368		PLATE, Trim -(Black)
1139	796449		WASHER -(Fuel Pump Bracket)
1266	691917		SEAL, O-Ring -(Intake Elbow)
1266A	697123		SEAL, O-Ring -(Intake Elbow)
1267	697419		LATCH, Blower Housing -(Black)

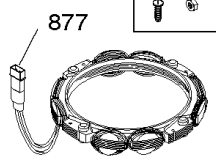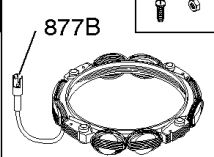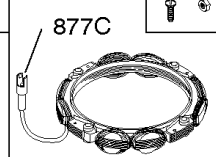DC ONLY		DUAL CIRCUIT		5/9 AMP		TRI CIRCUIT		10/16 AMP	
474A	1059	474B	1059	474C	1059	474C	1059	474D	1059
									

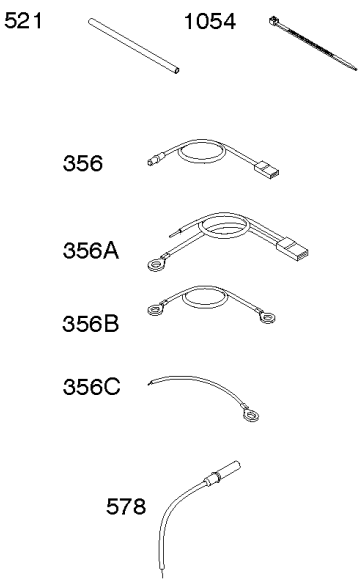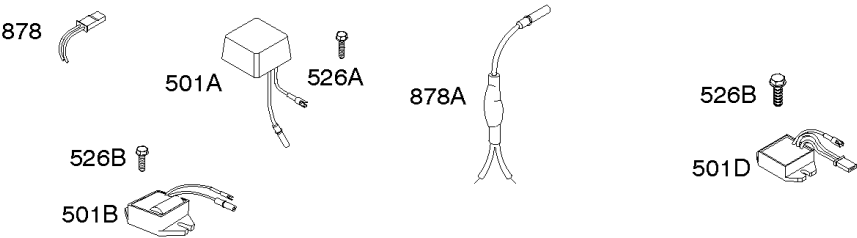






NOTE: All stators use a No. 1119 mounting screw.



NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

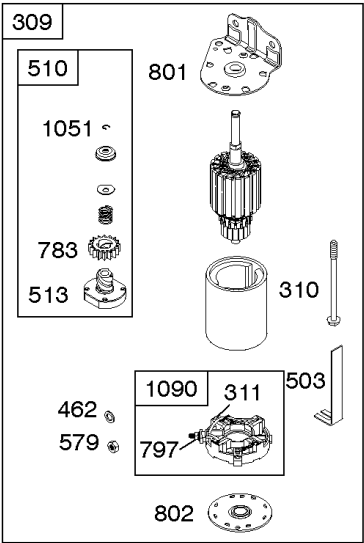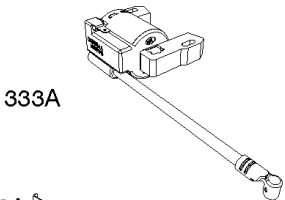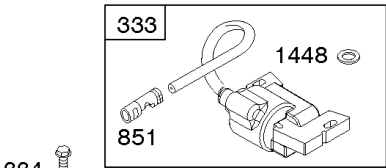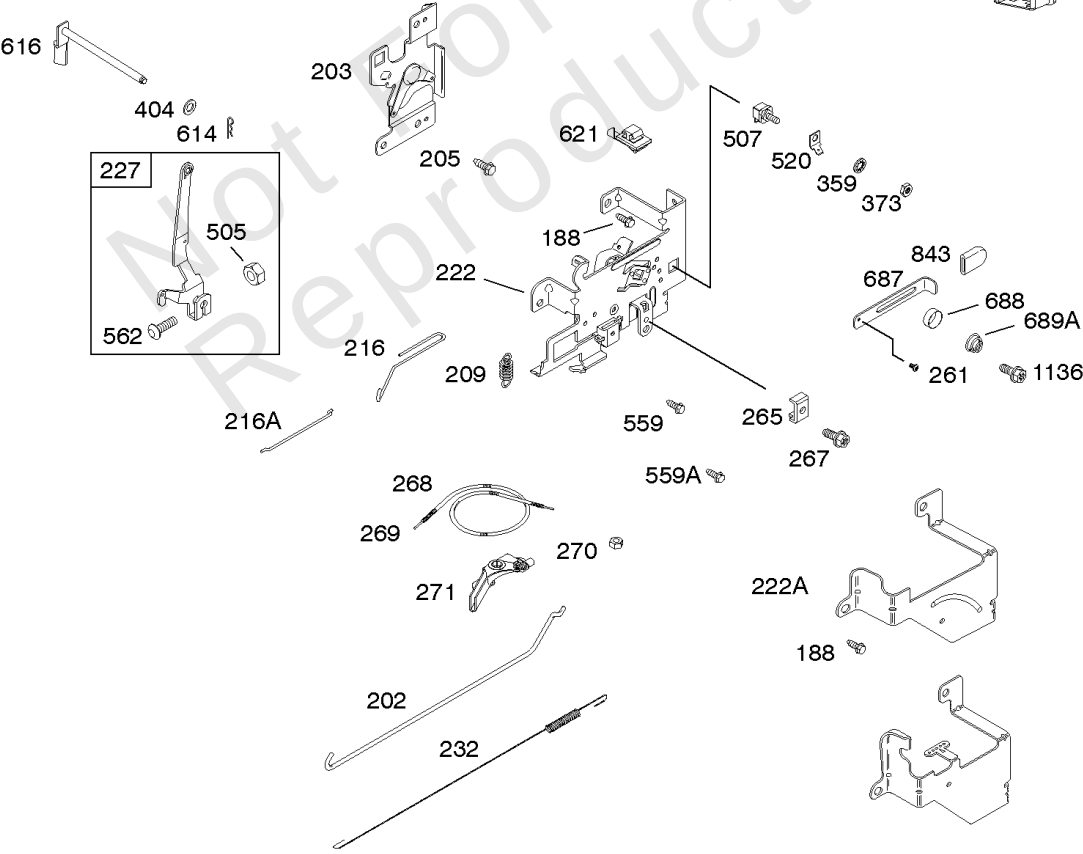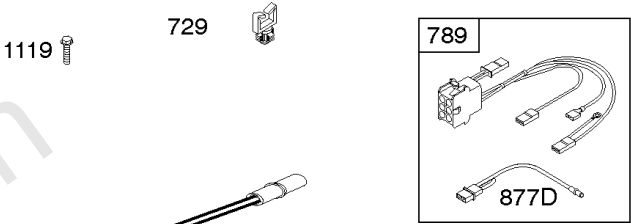

Alternator, Controls, Electric Starter, Governor Spring, Ignition






REF NO	PART NO	QTY	DESCRIPTION
188	691693		SCREW -(Control Bracket)
202	691841		LINK, Mechanical Governor
203	691381		CRANK, Bell
205	691693		SCREW -(Bell Crank)
209	792813		SPRING, Governor
216A	691281		LINK, Choke -(Bell Crank)
222	694042		BRACKET, Control
227	691374		LEVER, Governor Control
232	691842		SPRING, Governor Link
261	697176		SCREW -(Control Slide)
265	691024		CLAMP, Casing
267	794904		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
309	693551		MOTOR, Starter
310	690323		SCREW -(Starter Motor)
311	497608		SET, Brush
333	799650		ARMATURE, Magneto
333A	592841		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
356	697397		WIRE, Stop
356A	398808		WIRE, Stop -(Cut To Required Length)
356B	697089		WIRE, Stop
356C	399222		WIRE, Stop
359	691077		WASHER -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
404	691691		WASHER -(Governor Crank)
462	691261		WASHER -(Starter Cable)
474A	592828		ALTERNATOR -(DC Only)
474B	592831		ALTERNATOR -(Dual Circuit)
474C	592829		ALTERNATOR -(Tri Circuit Or 5/9 Amp. Regulated)
474D	696458		ALTERNATOR -(10 and 16 Amp Regulated)
501A	794360		REGULATOR -(5/9 Amp. Regulated)
501B	698315		REGULATOR -9 Amp Battery-Less

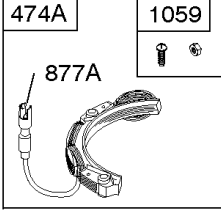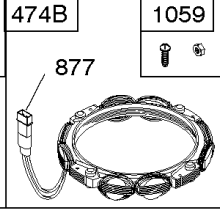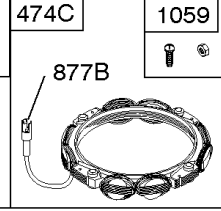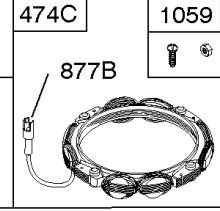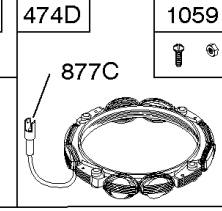DC ONLY		DUAL CIRCUIT		5/9 AMP		TRI CIRCUIT		10/16 AMP	
474A	1059	474B	1059	474C	1059	474C	1059	474D	1059
									

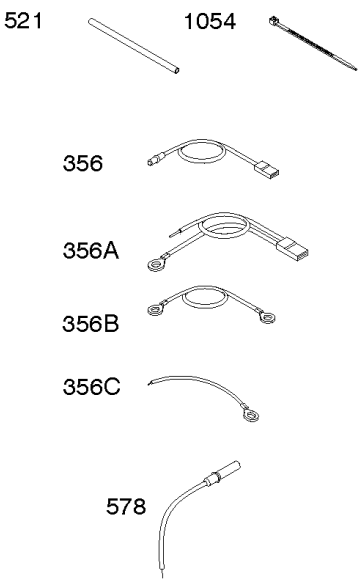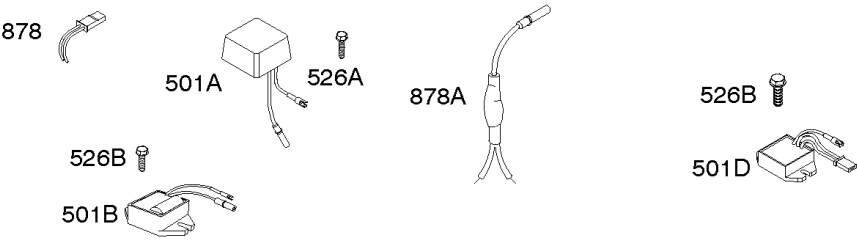






NOTE: All stators use a No. 1119 mounting screw.



NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

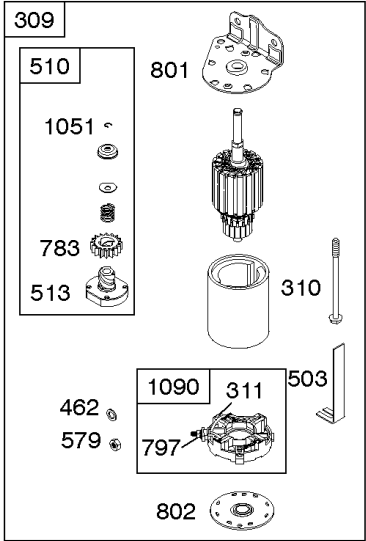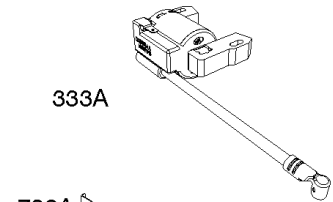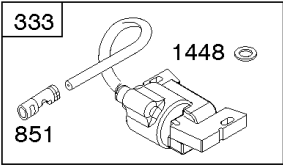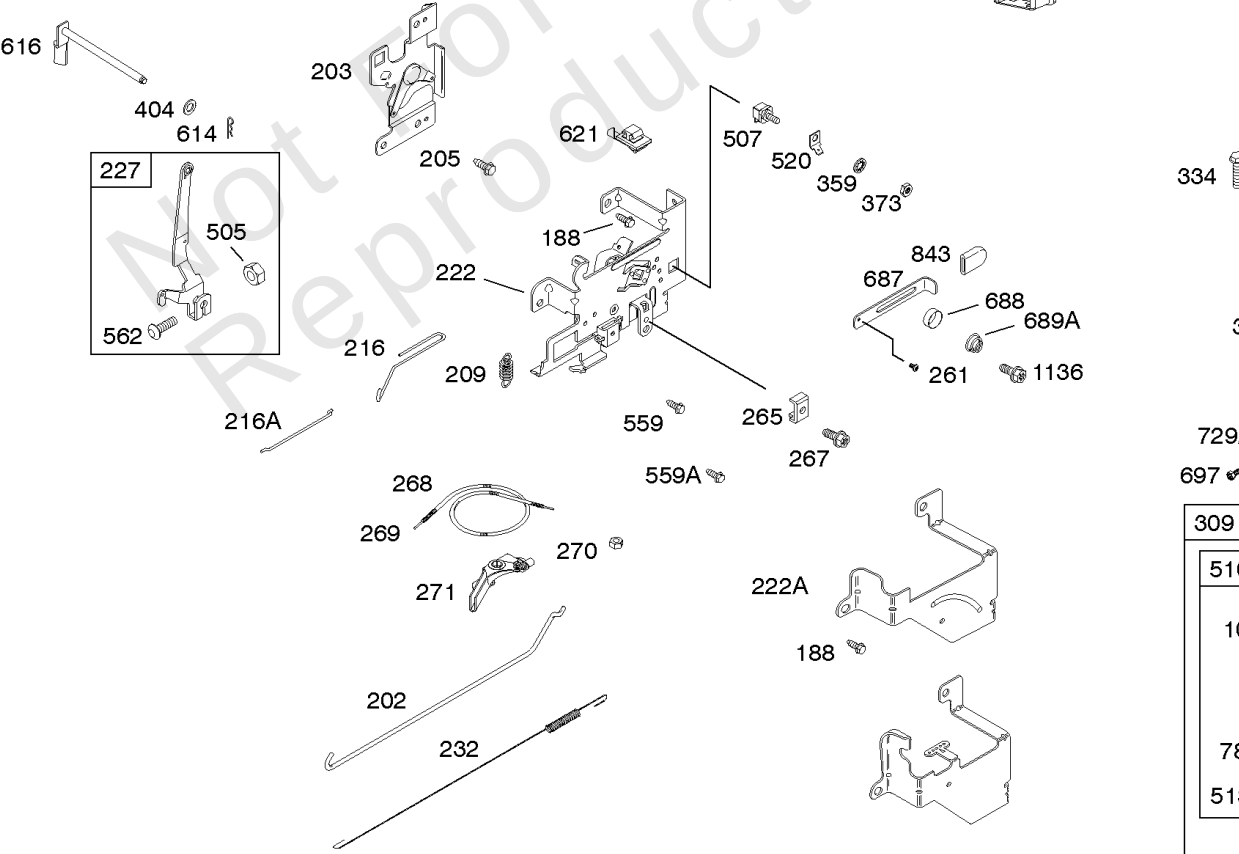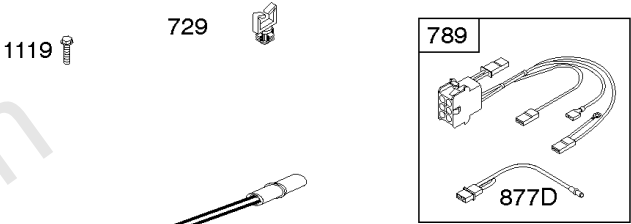

Alternator, Controls, Electric Starter, Governor Spring, Ignition




REF NO	PART NO	QTY	DESCRIPTION
501D	845907		REGULATOR -(10-16 AMP.)
503	691532		STRAP, Starter
505	691251		NUT -(Governor Control Lever)
507	691972		INSULATOR
510	693699		DRIVE, Starter
513	692024		CLUTCH, Drive
520	691084		TERMINAL, Ground
521	690581		SHIELD, Cable
526A	697088		SCREW -(Regulator)
526B	697348		SCREW -(Regulator)
559	697561		SCREW -(Remote Choke Stop) (Length .375 Inches)
559A	693675		SCREW -(Remote Choke Stop) (Length .419 Inches)
562	691119		BOLT -(Governor Control Lever)
578	692306		WIRE ASSEMBLY
579	691029		NUT -(Starter Cable)
614	691620		PIN, Cotter
616	692012		CRANK, Governor
621	692310		SWITCH, Stop
687	697175		SLIDE, Control
688	690395		CAP, Friction
697	791680		SCREW -(Starter Motor) (Drive Cap)
729	691335		CLIP, Wire -(Wire Retainer)
729A	691224		CLIP, Wire -(Starter Motor)
783	693713		GEAR, Pinion
789	698329		HARNESS, Wiring
789A	696576		HARNESS, Wiring
797	693167		NUT -(Brush Retainer)
801	691283		CAP, Drive
802	691286		CAP, End
843	697158		SLEEVE, Lever
851	692424		TERMINAL, Spark Plug
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877A	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877C	399916		WIRE/CONN-ALTERNATOR -(10 and 16 Amp Regulated)
877D	790544		WIRE/CONNECTOR, Alternator
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit)
878	398661		HARNESS, Wiring -(Dual Circuit)
878A	691955		HARNESS, Alternator -(Tri Circuit)

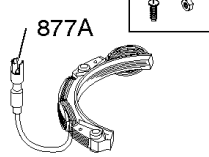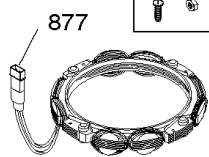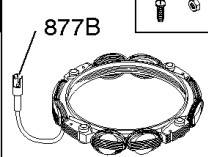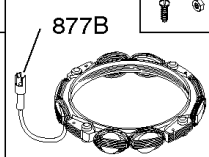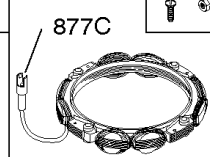DC ONLY		DUAL CIRCUIT		5/9 AMP		TRI CIRCUIT		10/16 AMP	
474A	1059	474B	1059	474C	1059	474C	1059	474D	1059
									

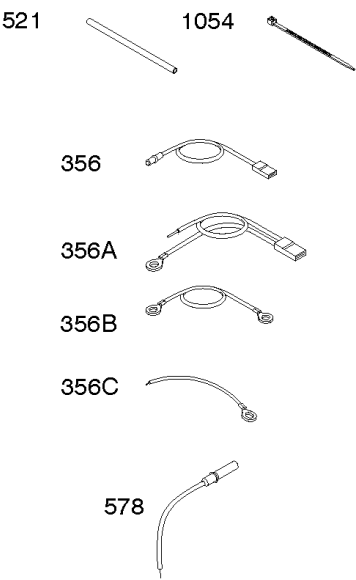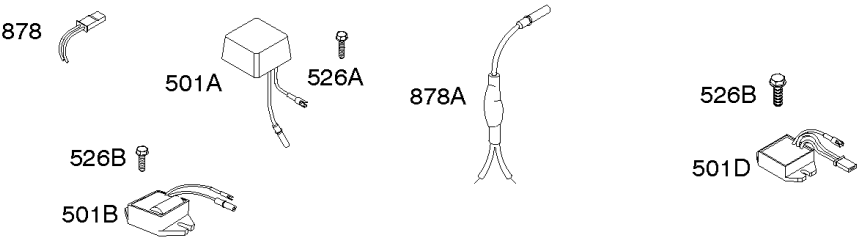

NOTE: All stators use a No. 1119 mounting screw.


NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

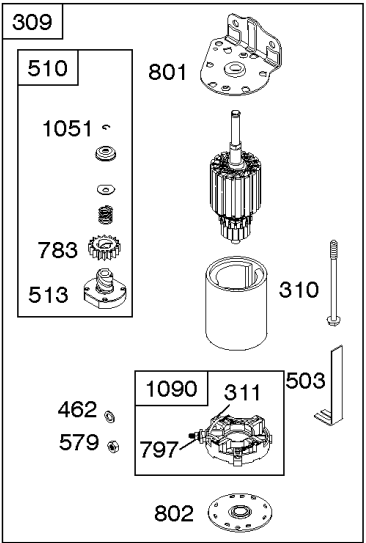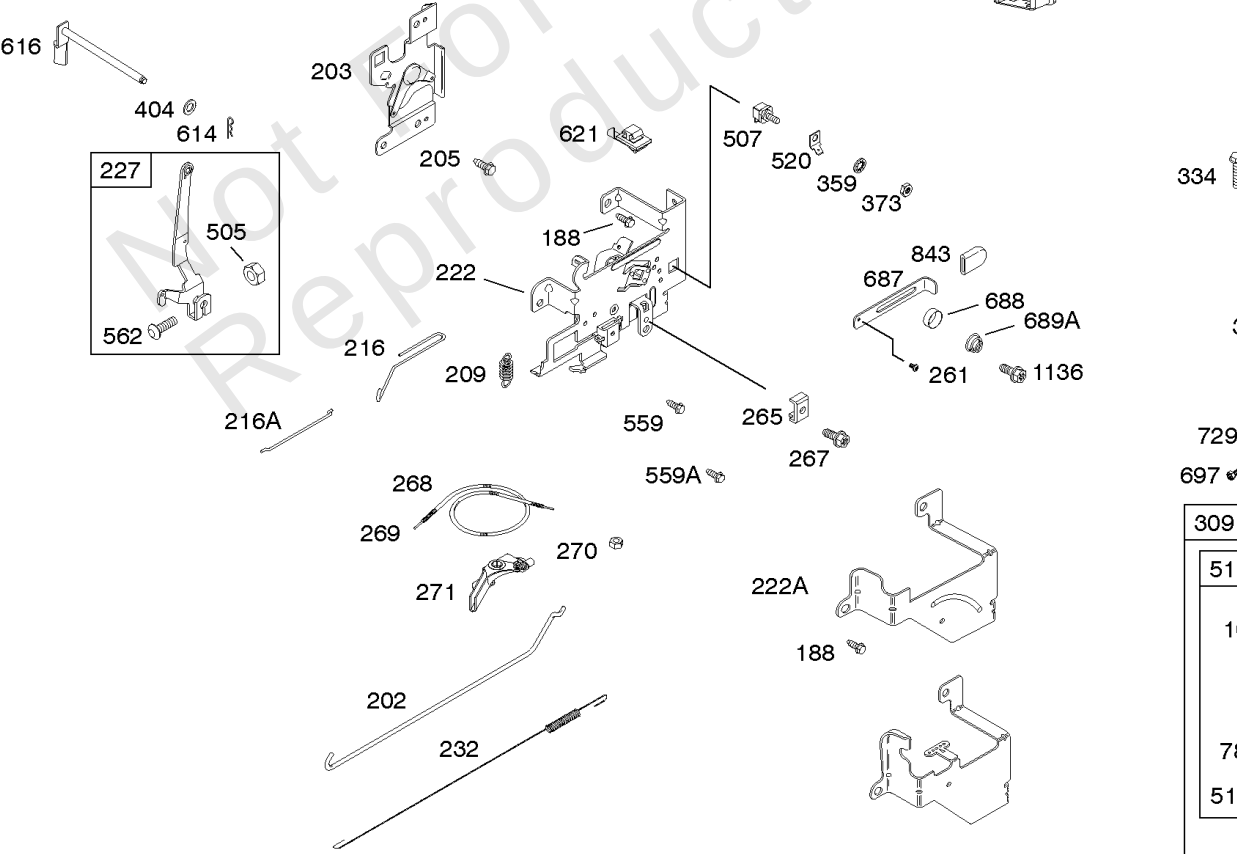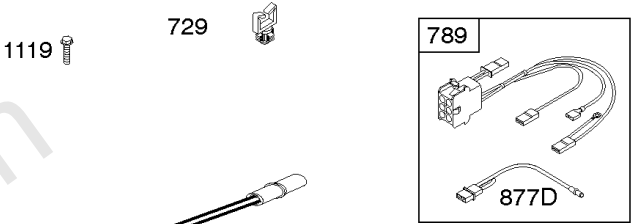

Alternator, Controls, Electric Starter, Governor Spring, Ignition


REF NO	PART NO	QTY	DESCRIPTION
1051	691265		RING, Retaining
1054	280275		TIE, Cable
1059	698516		KIT, Screw/Washer
1090	691293		RETAINER, Brush
1119	691183		SCREW -(Alternator)
1136	792629		SCREW -(Control Bracket)
1448	690260		WASHER -(Magneto Armature)

Not For Reproduction

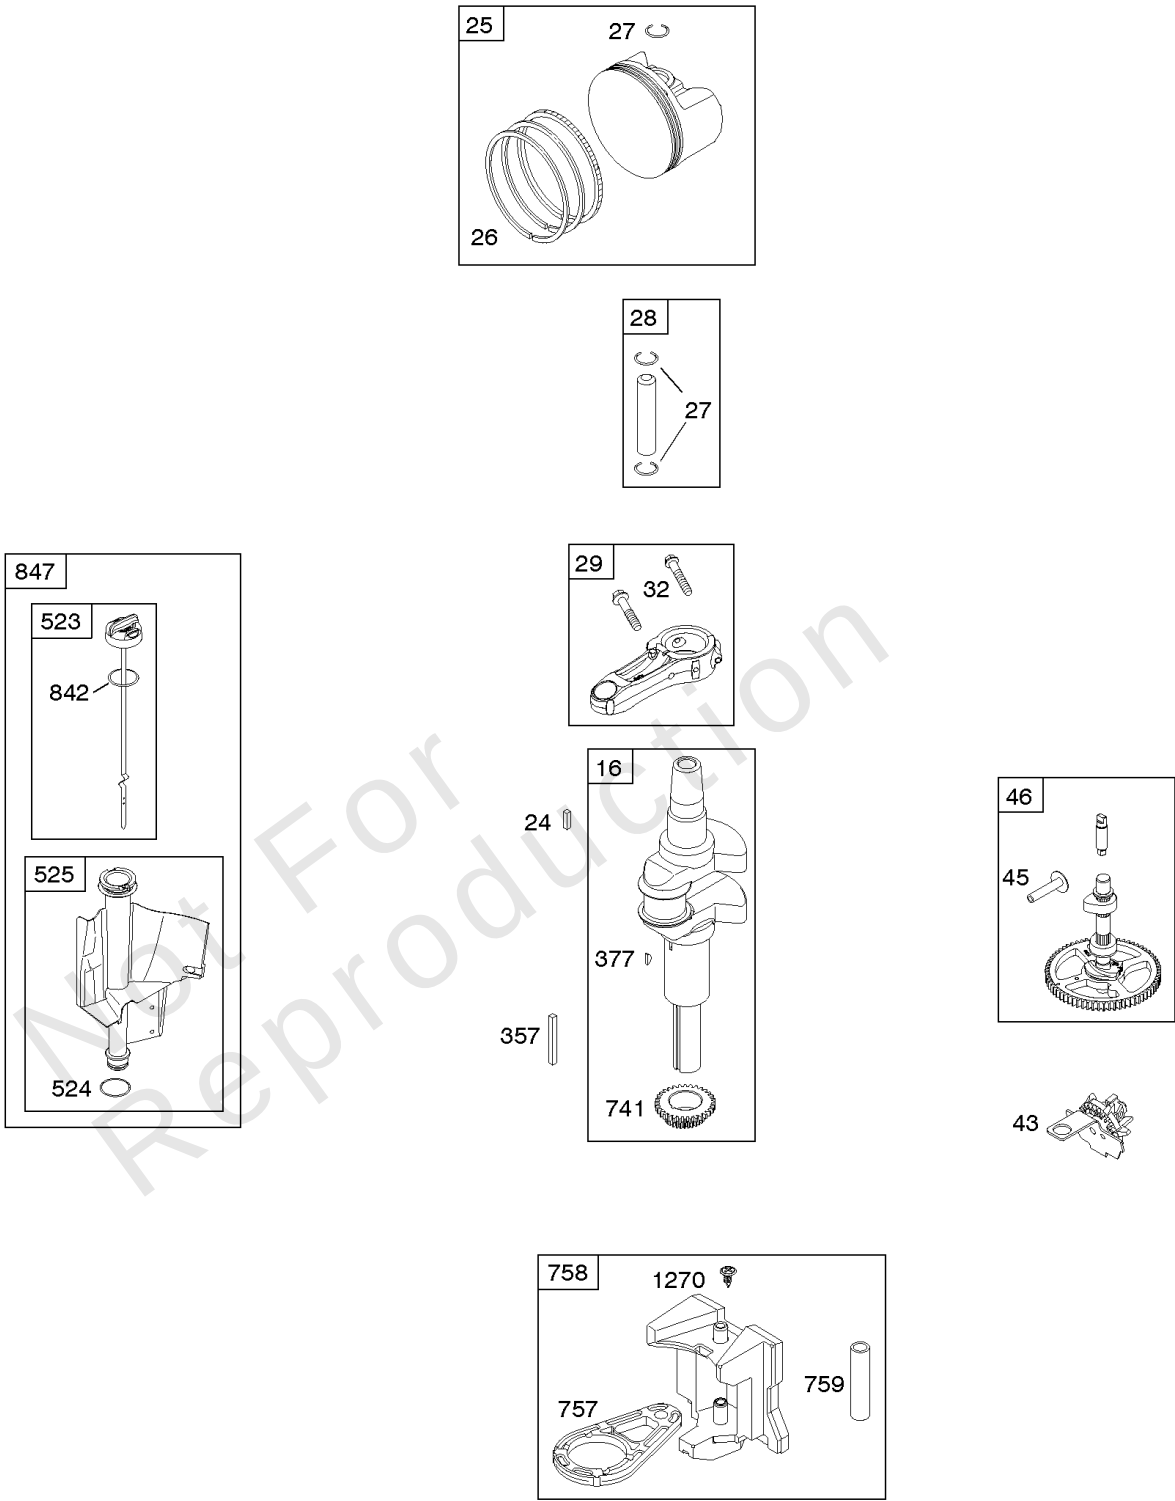


Camshaft, Crankshaft, Piston, Rings, Connecting Rod

REF NO	PART NO	QTY	DESCRIPTION
16	591953		CRANKSHAFT -Used After Code Date 12071600
16	697390		CRANKSHAFT -Used Before Code Date 12071700
24	591757		KEY, Flywheel -Used After Code Date 12071600
24	796335		KEY, Flywheel -Used Before Code Date 12071700
25	792728		PISTON ASSEMBLY -(.020 Oversize)
25	792307		PISTON ASSEMBLY -(Standard)
26	792643		SET, Ring -(.020 Oversize)
26	792306		SET, Ring -(Standard)
27	698138		LOCK, Piston Pin -Used Before Code Date 02100400
27	698469		LOCK, Piston Pin -Used After Code Date 02100300
28	697099		PIN, Piston
29	791633		ROD, Connecting -(Standard)
32	791118		SCREW -(Connecting Rod)
43	691968		SLINGER, Governor/Oil
45	690564		TAPPET, Valve
46	793880		CAMSHAFT
357	691483		KEY, Drive Pulley
377	691639		KEY, Woodruff
523	699908		DIPSTICK
524	691032		SEAL, O-Ring
525	697085		TUBE, Dipstick
741	697128		GEAR, Timing
757	793242		LINK, Counterweight
758	-----		Counterweight -(Must Use Kit 795940, Includes Sump And Counterweight) -Used Before Code Date 05100300
758	697391		COUNTERWEIGHT -Used After Code Date 05100200
759	697392		PIN, Counterweight
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	790443		DIPSTICK/TUBE ASSEMBLY
1270	793243		PLUG, AVS Counterweight

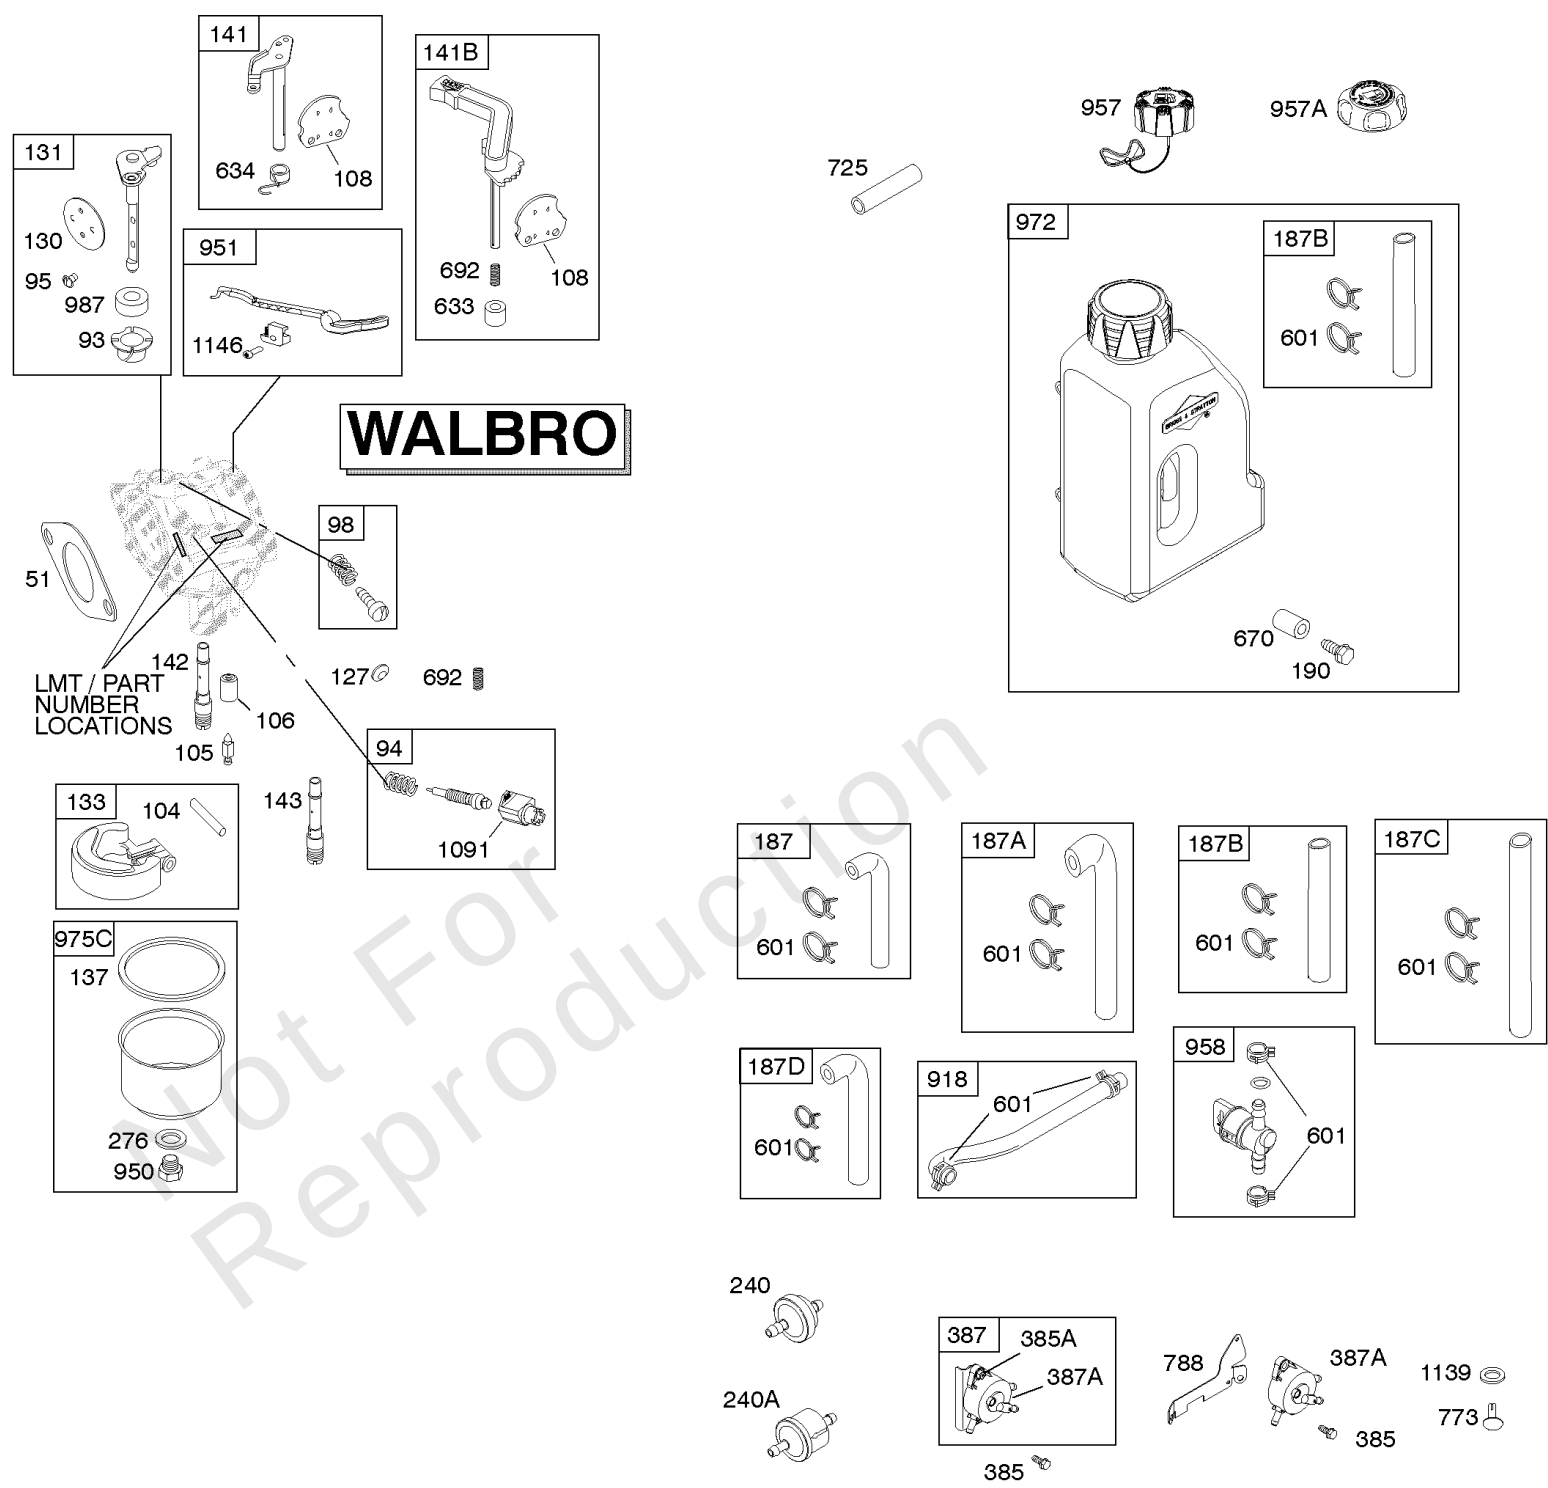






Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
51	692137		GASKET-INTAKE
93	690602		BUSHING, Throttle Shaft
94	794176		KIT, Idle Mixture -(Walbro)
95	691636		SCREW -(Throttle Valve) (Walbro)
98	495800		KIT, Idle Speed -(Walbro)
104	690525		PIN, Float Hinge -(Walbro)
105	231855S		VALVE-FLOAT NEEDLE -(Walbro)
106	691780		SEAT, Inlet -(Walbro)(Pump Feed)
106	690577		SEAT, Inlet -(Walbro)(Gravity Feed)
108	691227		VALVE, Choke -(Walbro)
127	694524		PLUG, Welch -(Walbro)
130	790024		VALVE, Throttle -(Walbro)
131	790901		KIT, Throttle Shaft -(Walbro)
133	494381		FLOAT, Carburetor -(Walbro)
137	281165S		GASKET, Float Bowl -(Walbro)
142	790025		NOZZLE, Carburetor
143	790028		NOZZLE, Carburetor -(High Altitude)
187	791805		LINE, Fuel -(Formed)(10-1/4" Long)(Cut to Required Length)
187A	791806		LINE, Fuel -(Formed)(21) (Cut to Required Length)
187B	791766		LINE, Fuel -(15" Long)(Cut to Required Length)
187C	791745		LINE, Fuel -(23 Inches) (Cut To Required Length)
187D	791744		LINE, Fuel -(Formed)(14 Inches Long)(Cut To Required Length)
190	796174		SCREW -(Fuel Tank)
240A	84001895		FILTER, Fuel -(Clear, 40 Microns)
276	692255		WASHER, Sealing
385	694476		SCREW -(Fuel Pump)
385A	690297		SCREW -(Fuel Pump)
387	697090		PUMP, Fuel -(Includes Mounting Bracket) -Used Before Code Date 08073000
387A	808656		PUMP, Fuel -Used After Code Date 08072900
601	691038		CLAMP, Hose -(Black)
601	791850		CLAMP, Hose -(Green)

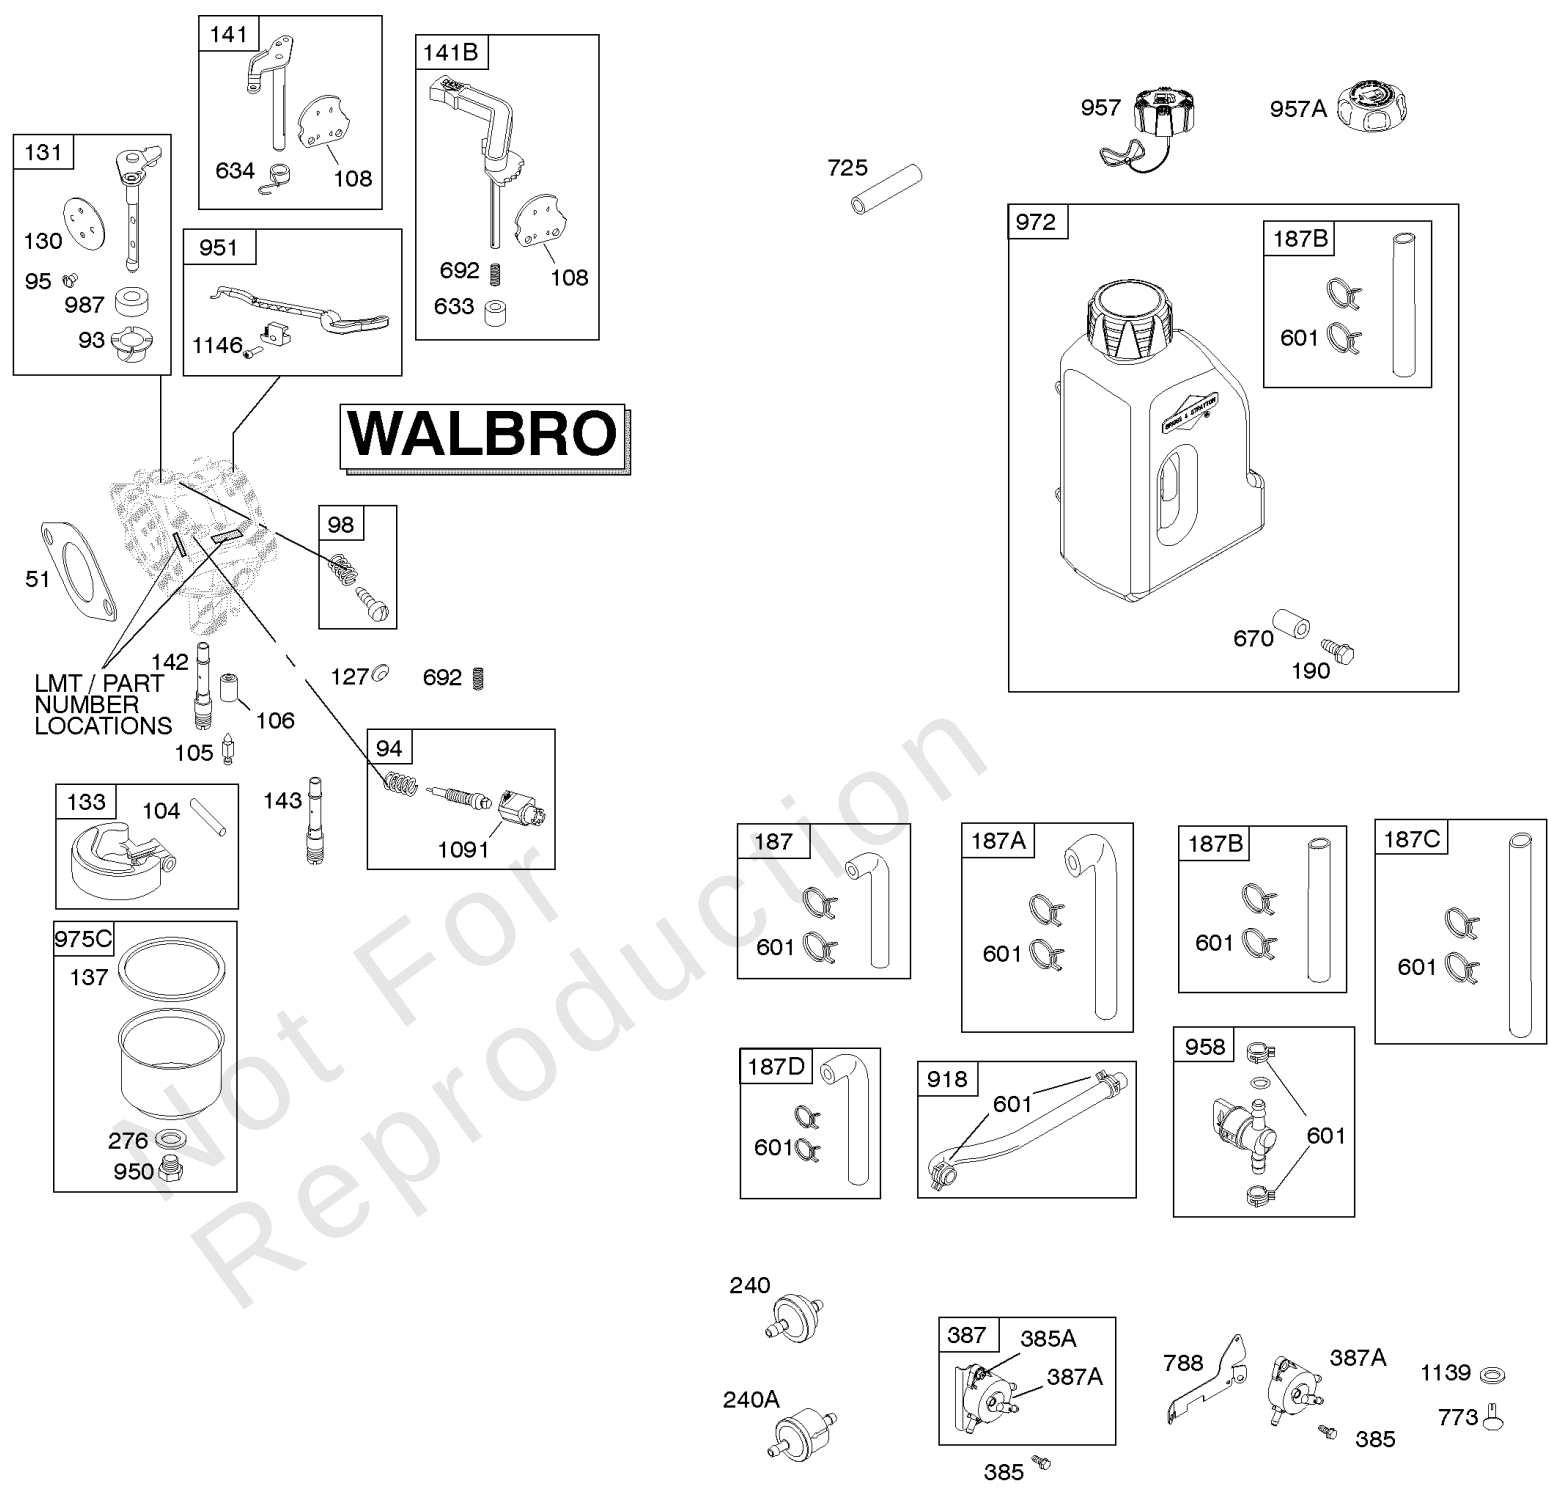






Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
633	690597		SEAL, Choke/Throttle Shaft -(Walbro)
633	699813		SEAL, Choke/Throttle Shaft -(Nikki)
634	690802		SPRING/SEAL ASSEMBLY -(Walbro)
670	796175		SPACER, Fuel Tank
692	691301		SPRING, Detent
725	690403		SHIELD, Heat
773	796448		RETAINER
788	699347		BRACKET, Fuel Pump -Used Before Code Date 08073000
918	791851		HOSE, Vacuum -(Molded)
950	691657		SCREW -(Float Bowl)
951	793386		KIT, Choke Shaft -(Manual Choke)
957A	795027		CAP, Fuel Tank -(Standard)
958	698183		VALVE, Fuel Shut Off
972	792168		TANK, Fuel -(Plastic) (Standard)
975C	495933		BOWL, Float -(Walbro)
987	691326		SEAL, Choke/Throttle Shaft -(Walbro)
1091	691333		CAP, Limiter
1139	796449		WASHER -(Fuel Pump Bracket)
1146	793380		SCREW -(Choke Shaft) (Manual Choke)

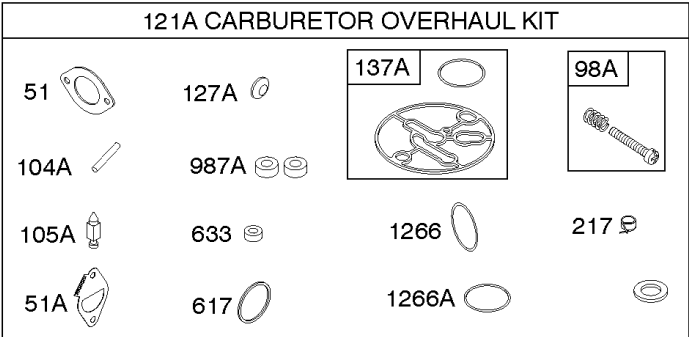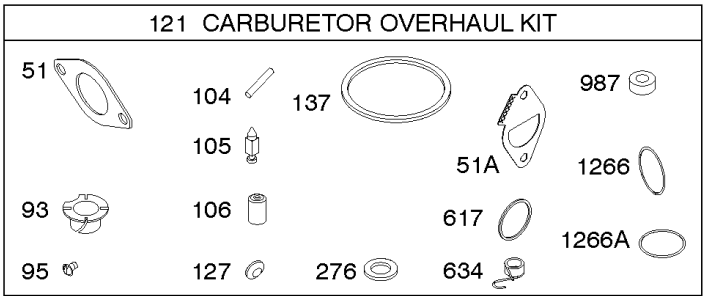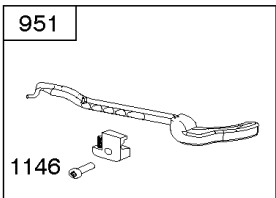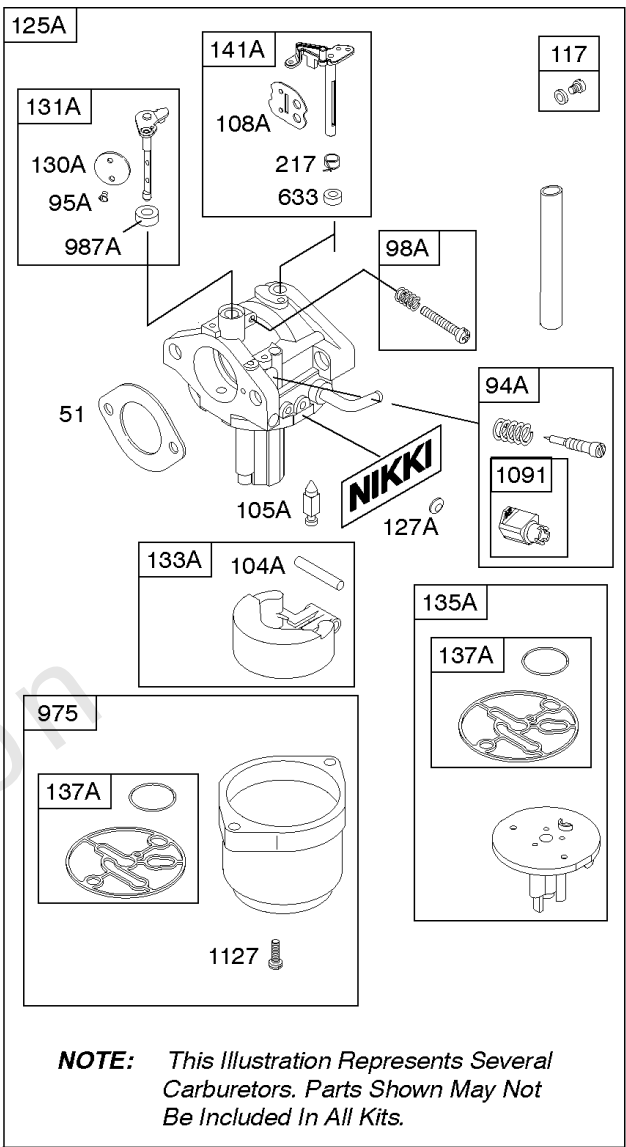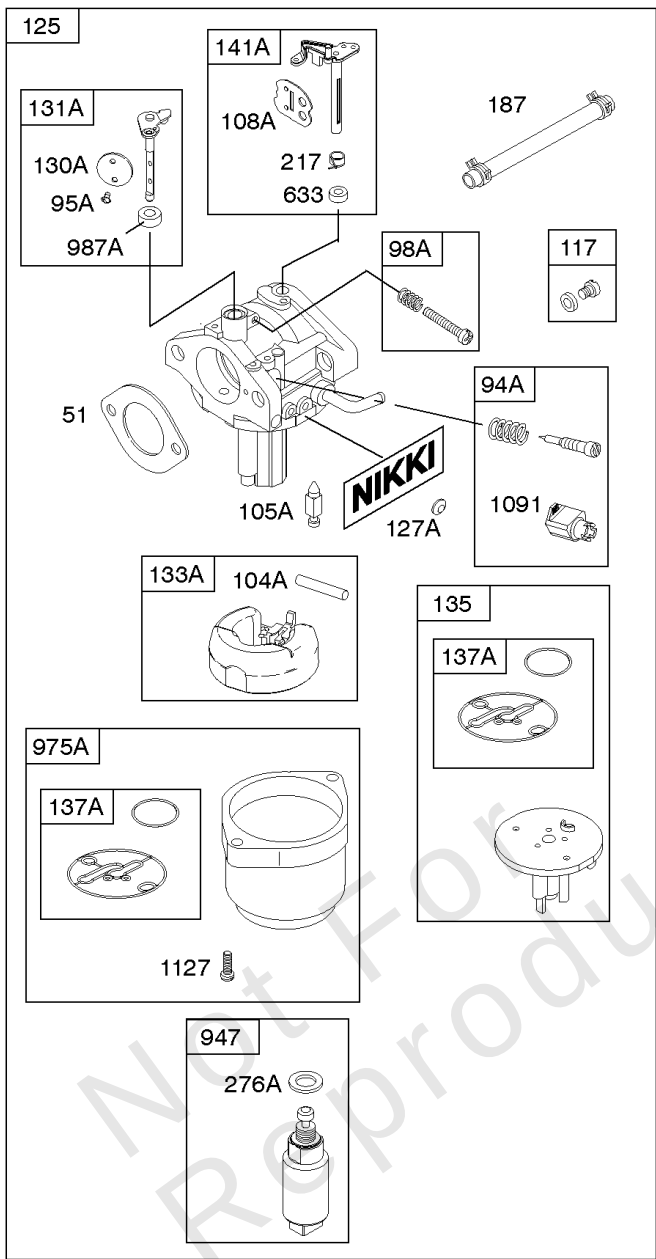




Carburetor, Kit - Carburetor Overhaul

REF NO	PART NO	QTY	DESCRIPTION
51	692137		GASKET-INTAKE
51A	796081		GASKET, Intake
93	690602		BUSHING, Throttle Shaft
94A	793610		KIT, Idle Mixture -(Nikki)
95	691636		SCREW -(Throttle Valve) (Walbro)
95A	690718		SCREW -(Throttle Valve) (Nikki)
98A	695408		KIT, Idle Speed -(Nikki)
104	690525		PIN, Float Hinge -(Walbro)
104A	694918		PIN, Float Hinge -(Nikki)
105	231855S		VALVE-FLOAT NEEDLE -(Walbro)
105A	696136		VALVE, Float Needle -(Nikki)
106	691780		SEAT, Inlet -(Walbro)(Pump Feed)
106	690577		SEAT, Inlet -(Walbro)(Gravity Feed)
108A	698773		VALVE, Choke -(Nikki)
117	699897		JET, Main -(Standard) -Used Before Code Date 07122600
117	794352		JET, Main -(Standard) -Used After Code Date 07122500 -Used Before Code Date 08121500
117	591936		JET, Main -(Standard) -Used After Code Date 08121400
118	699898		JET, Main -(High Altitude) -Used Before Code Date 07122600
118	791405		JET, Main -(High Altitude) -Used After Code Date 07122500 -Used Before Code Date 08121500
118	698788		JET, Main -(High Altitude) -Used After Code Date 08121400
121	796185		KIT, Carburetor Overhaul -(Walbro)
121A	796184		KIT, Carburetor Overhaul -(Nikki)
125A	590399		CARBURETOR -(Nikki)(Gravity Feed) (Hose not included.)
127	694524		PLUG, Welch -(Walbro)
127A	690727		PLUG, Welch -(Nikki)
130A	698774		VALVE, Throttle -(Nikki)
131A	698776		KIT, Throttle Shaft -(Nikki)
133A	694914		FLOAT, Carburetor -(Nikki)

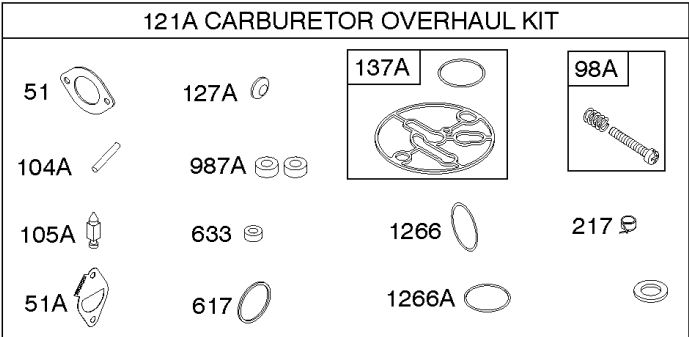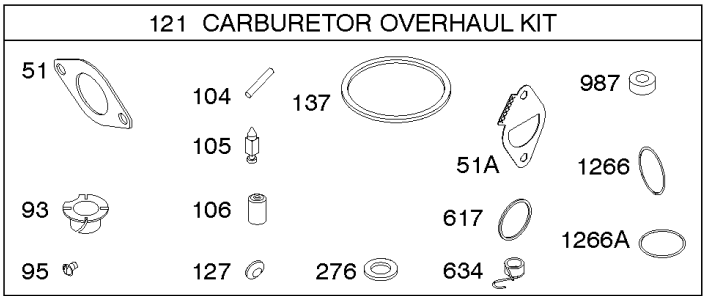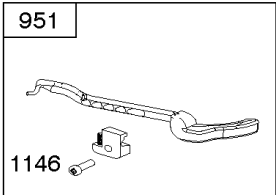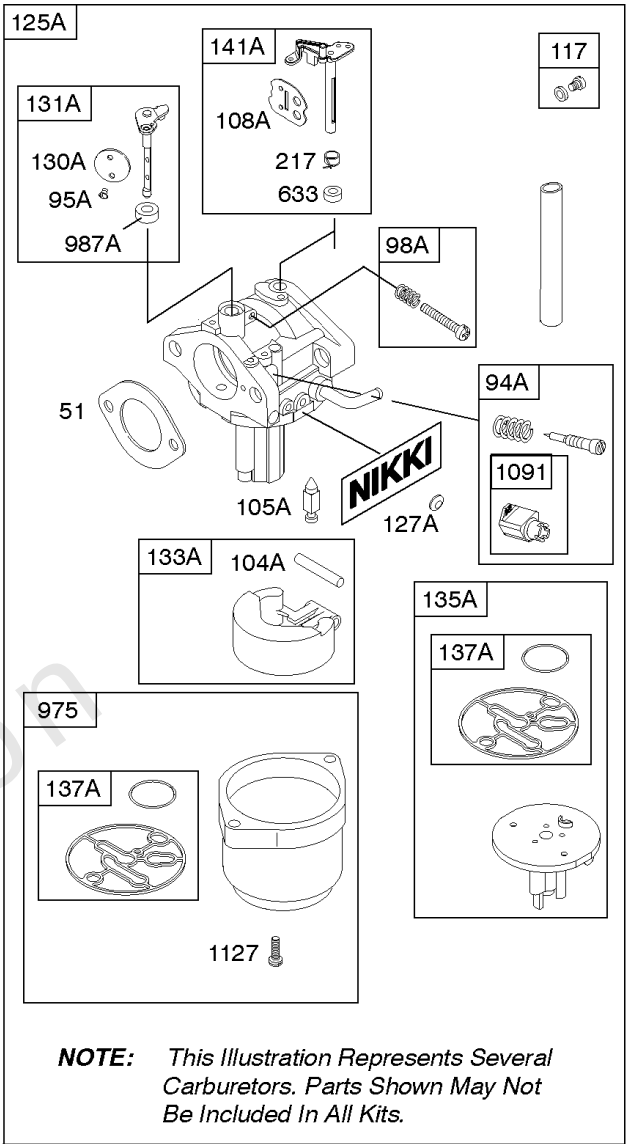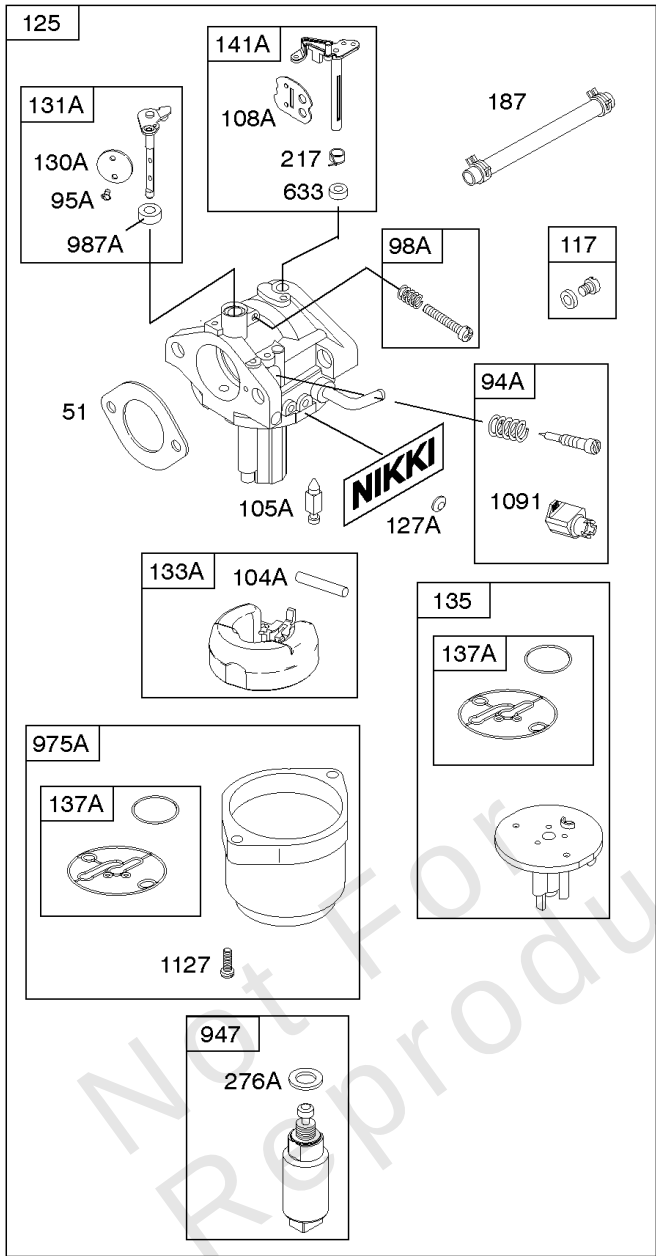




Carburetor, Kit - Carburetor Overhaul

REF NO	PART NO	QTY	DESCRIPTION
135	796400		TUBE, Fuel Transfer
135A	792022		TUBE-FUEL TRANSFER -(Nikki)(Pump Feed)
135A	698780		TUBE, Fuel Transfer -(Nikki)(Gravity Feed)
137	281165S		GASKET, Float Bowl -(Walbro)
137A	698781		GASKET, Float Bowl -(Nikki)
141A	698778		KIT, Choke Shaft -(Nikki)
142	790025		NOZZLE, Carburetor
187	791805		LINE, Fuel -(Formed)(10-1/4" Long)(Cut to Required Length)
217	695409		SPRING, Choke Return
276	692255		WASHER, Sealing
276A	695410		WASHER, Sealing
617	692138		SEAL, O-Ring -(Intake Manifold)
633	690597		SEAL, Choke/Throttle Shaft -(Walbro)
633	699813		SEAL, Choke/Throttle Shaft -(Nikki)
634	690802		SPRING/SEAL ASSEMBLY -(Walbro)
947	699915		SOLENOID, Fuel
951	793386		KIT, Choke Shaft -(Manual Choke)
975	698783		BOWL, Float -(Nikki)
975A	699502		BOWL, Float -(Nikki)
987	691326		SEAL, Choke/Throttle Shaft -(Walbro)
987A	698777		SEAL, Choke/Throttle Shaft -(Nikki)
1091	691333		CAP, Limiter
1127	695407		SCREW -(Float Bowl) (Float Bowl to Carburetor Body)
1146	793380		SCREW -(Choke Shaft) (Manual Choke)
1266	691917		SEAL, O-Ring -(Intake Elbow)
1266A	697123		SEAL, O-Ring -(Intake Elbow)

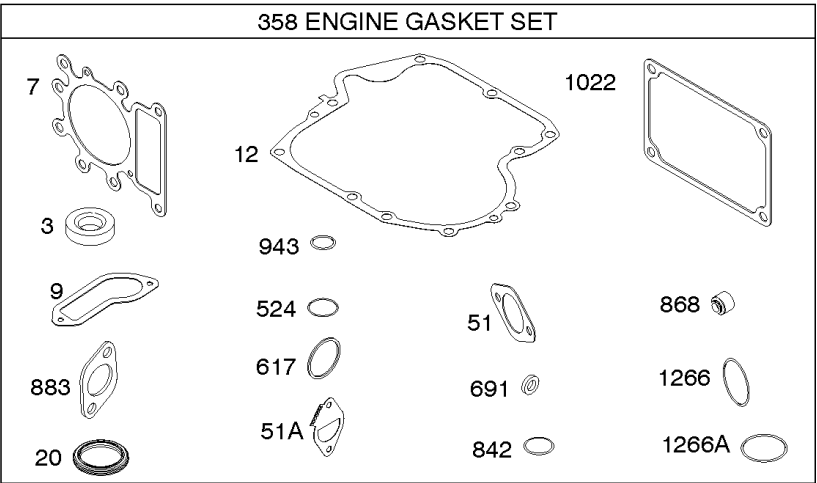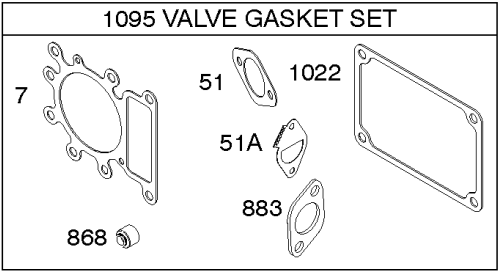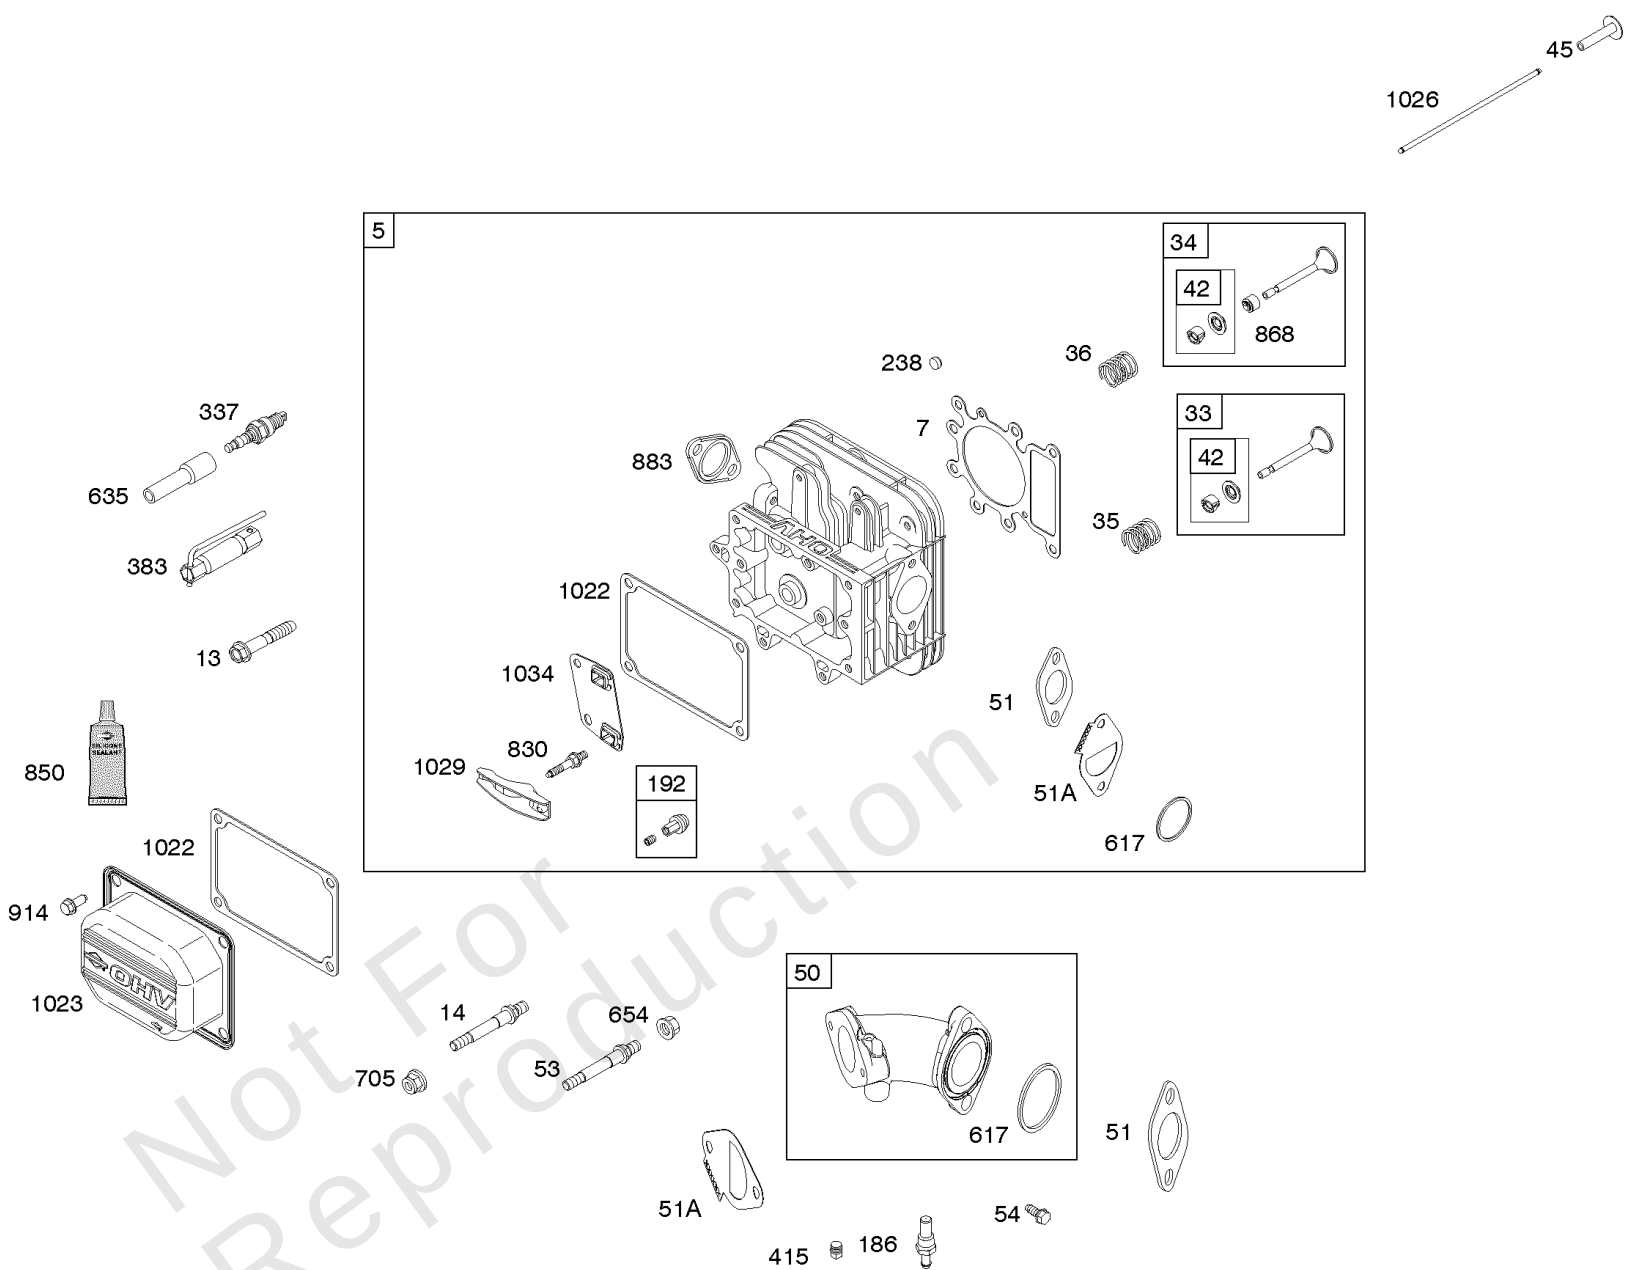

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Intake Manifold, Valves

REF NO	PART NO	QTY	DESCRIPTION
3	391086S		SEAL, Oil -(Magneto Side)
5	796183		HEAD, Cylinder
7	273280S		GASKET, Cylinder Head
9	697109		GASKET, Breather -(After Date Code Use Liquid Sealant Reference 850) -Used Before Code Date 07071900
12	697110		GASKET, Crankcase -(.015" Thick)(Standard)
13	690360		SCREW -(Cylinder Head)
14	790560		STUD -(Cylinder Head)
20	795387		SEAL, Oil -(PTO Side)
33	792868		VALVE, Exhaust -(Chrome)
34	791935		VALVE, Intake
35	691279		SPRING, Valve -(Intake)
36	691279		SPRING, Valve -(Exhaust)
42	499586		KEEPER, Valve
45	690564		TAPPET, Valve
50	592845		MANIFOLD, Intake
51	692137		GASKET-INTAKE
51A	796081		GASKET, Intake
53	591260		STUD -(Carburetor) -Used After Code Date 11120100
53	690227		STUD -(Carburetor) -Used Before Code Date 11120200
54	691148		SCREW -(Intake Manifold)
186	794873		CONNECTOR, Hose
192	691986		ADJUSTER, Rocker Arm
238	691843		CAP, Valve
337	691043		PLUG, Spark -(EMS)
358	796181		GASKET SET, Engine
383	19576S		WRENCH, Spark Plug
415	794903		PLUG -(Square Head)
524	691032		SEAL, O-Ring
617	692138		SEAL, O-Ring -(Intake Manifold)
635	691909		BOOT, Spark Plug
654	690958		NUT -(Carburetor)
691	692407		SEAL, Governor Shaft
705	790561		NUT -(Fuel Tank)
830	691095		STUD, Rocker Arm
842	691031		SEAL, O-Ring -(Dipstick Tube)
850	100106		SEALANT, Liquid -(Rocker Cover Gasket and Breather Gasket) -Used After Code Date 07071800

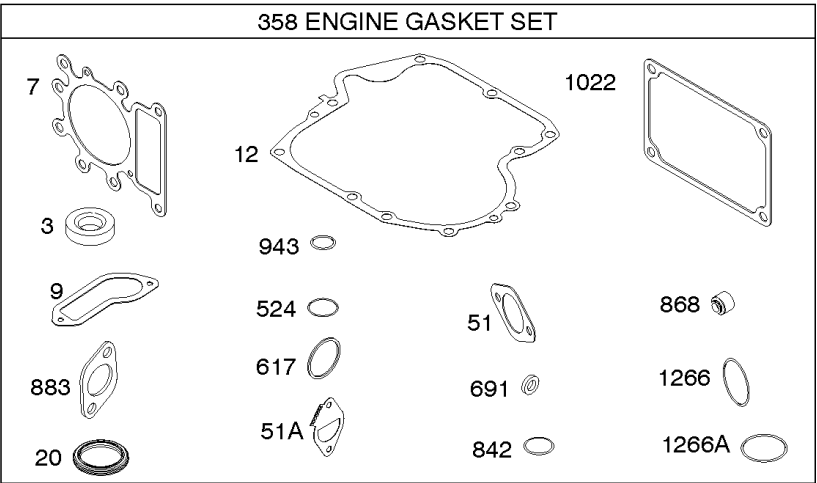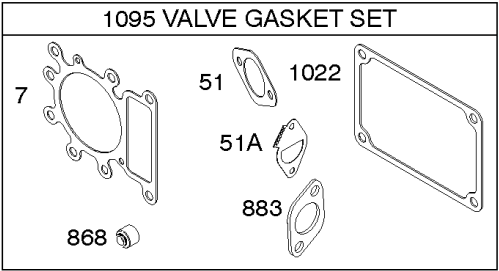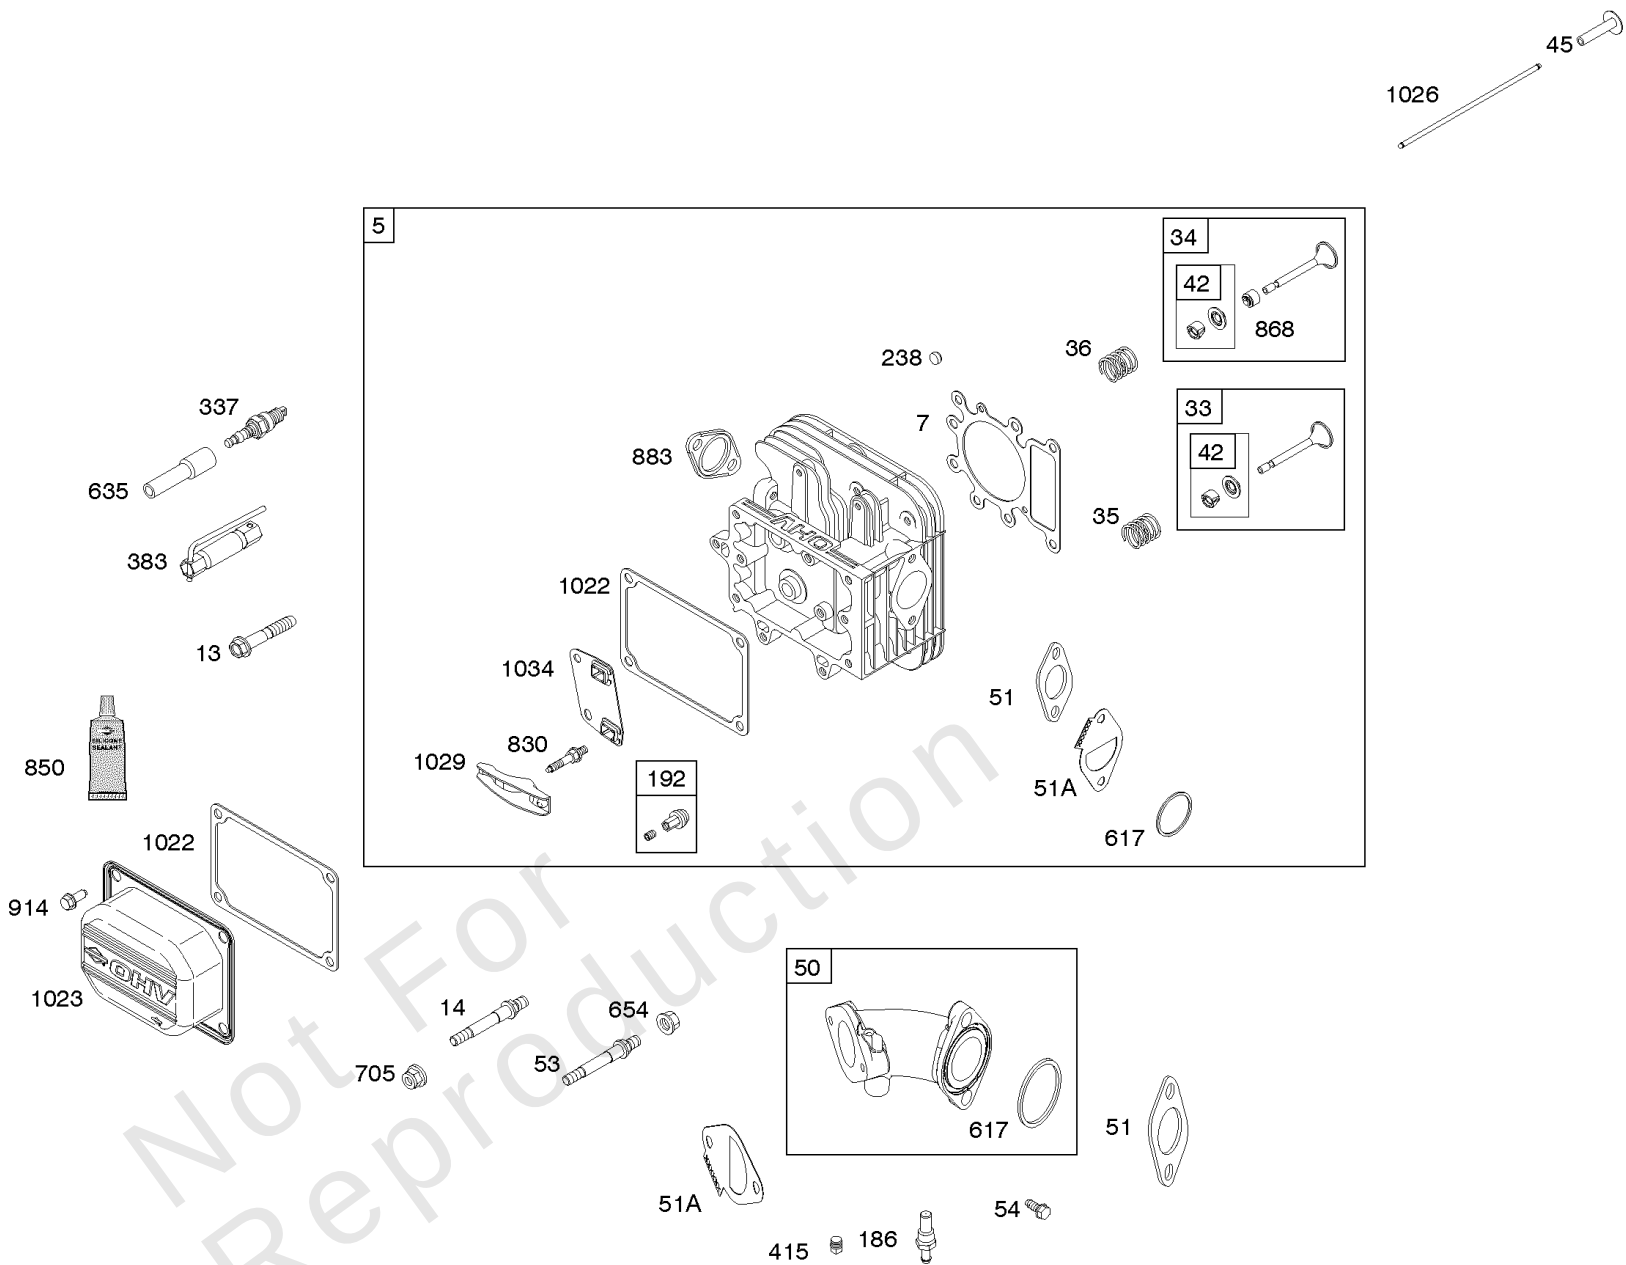

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Intake Manifold, Valves

REF NO	PART NO	QTY	DESCRIPTION
868	690968		SEAL, Valve
883	692236		GASKET, Exhaust
914	691108		SCREW -(Rocker Cover)
943	690589		SEAL, O-Ring -(Oil Pump Cover)
1022	272475S		GASKET, Rocker Cover -(After Date Code Use Liquid Sealant Reference 850) -Used Before Code Date 07091000
1023	797421		COVER-ROCKER
1026	697394		ROD, Push -(Intake)
1026	794573		ROD, Push -(Exhaust)
1029	691751		ARM, Rocker
1034	690822		GUIDE, Push Rod
1095	796189		GASKET SET, Valve
1266	691917		SEAL, O-Ring -(Intake Elbow)
1266A	697123		SEAL, O-Ring -(Intake Elbow)

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL


REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1036 EMISSIONS LABEL

1036A

APPLIES TO ENGINE ONLY
ACN 006 576 656

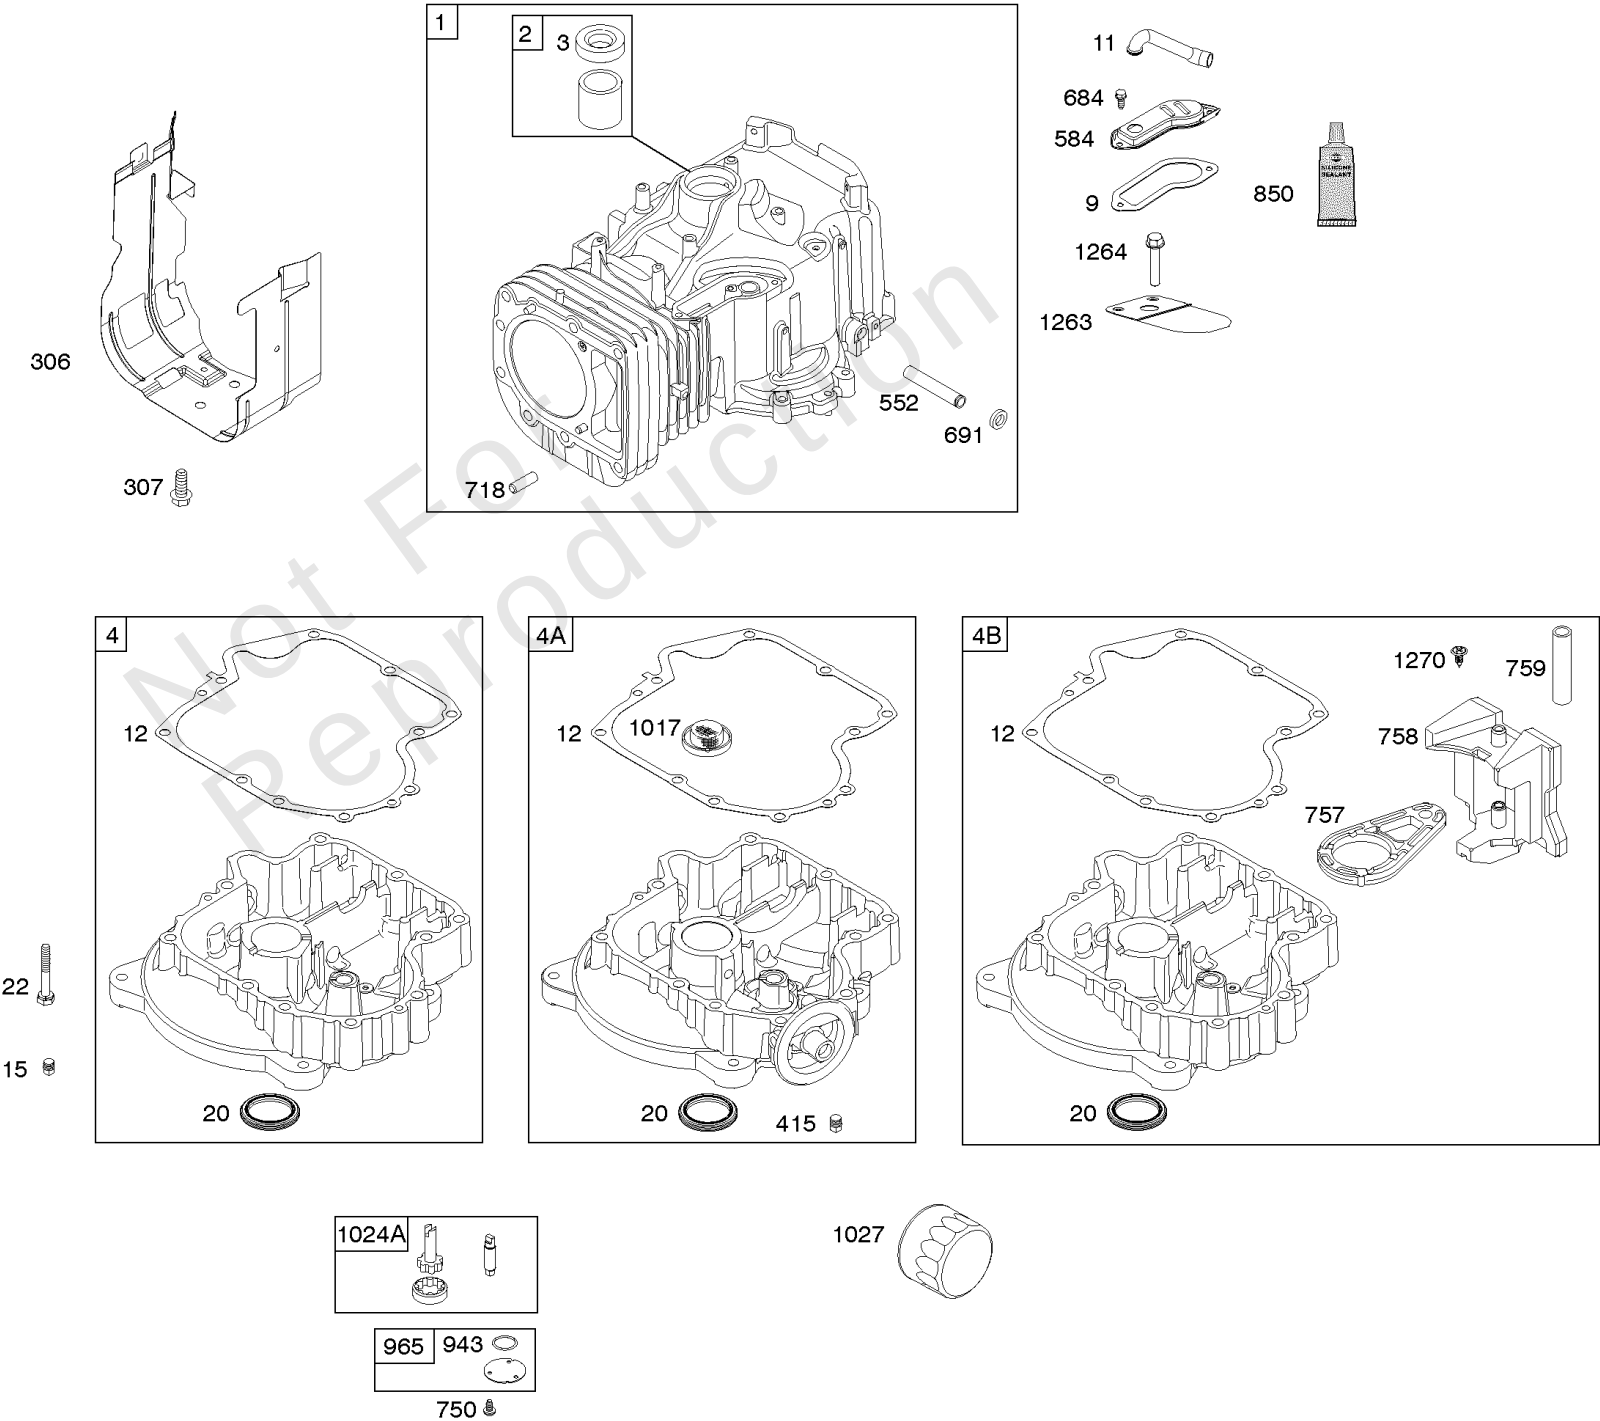

Cylinder, Engine Sump, Lubrication


REF NO	PART NO	QTY	DESCRIPTION
1	697377		CYLINDER ASSEMBLY
2	797673		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
4	697106		SUMP, Engine -Used After Code Date 05100200
4B	795940		COUNTERWEIGHT -(Must Use Kit 795940, Includes Sump And Counterweight) -Used Before Code Date 05100300
9	697109		GASKET, Breather -(After Date Code Use Liquid Sealant Reference 850) -Used Before Code Date 07071900
11	794683		TUBE, Breather
12	697110		GASKET, Crankcase -(.015" Thick)(Standard)
15	690946		PLUG, Oil Drain -(3/8" Standard)
20	795387		SEAL, Oil -(PTO Side)
22	692125		SCREW -(Crankcase Cover/Sump)
306	592778		SHIELD, Cylinder
307	691693		SCREW -(Cylinder Shield)
415	794903		PLUG -(Square Head)
552	697144		BUSHING, Governor Crank
584	794682		COVER, Breather Passage -(Use with Liquid Sealant Reference 850)
684	697157		SCREW -(Breather Passage Cover)
691	692407		SEAL, Governor Shaft
718	690959		PIN, Locating
750	790832		SCREW -(Oil Pump Cover)
757	793242		LINK, Counterweight
758	697391		COUNTERWEIGHT -Used After Code Date 05100200
758	-----		Counterweight -(Must Use Kit 795940, Includes Sump And Counterweight) -Used Before Code Date 05100300
759	697392		PIN, Counterweight
850	100106		SEALANT, Liquid -(Rocker Cover Gasket and Breather Gasket) -Used After Code Date 07071800
943	690589		SEAL, O-Ring -(Oil Pump Cover)
965	499613		COVER, Oil Pump
1027	492932S		FILTER, Oil -(Standard)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1036A	698979		LABEL, Emissions
1058	276344TRI		MANUAL, Operator's
1263	697124		REED, Breather
1264	697104		SCREW -(Breather Reed)



Cylinder, Engine Sump, Lubrication


REF NO	PART NO	QTY	DESCRIPTION
1270	793243		PLUG, AVS Counterweight
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning

Not For Reproduction

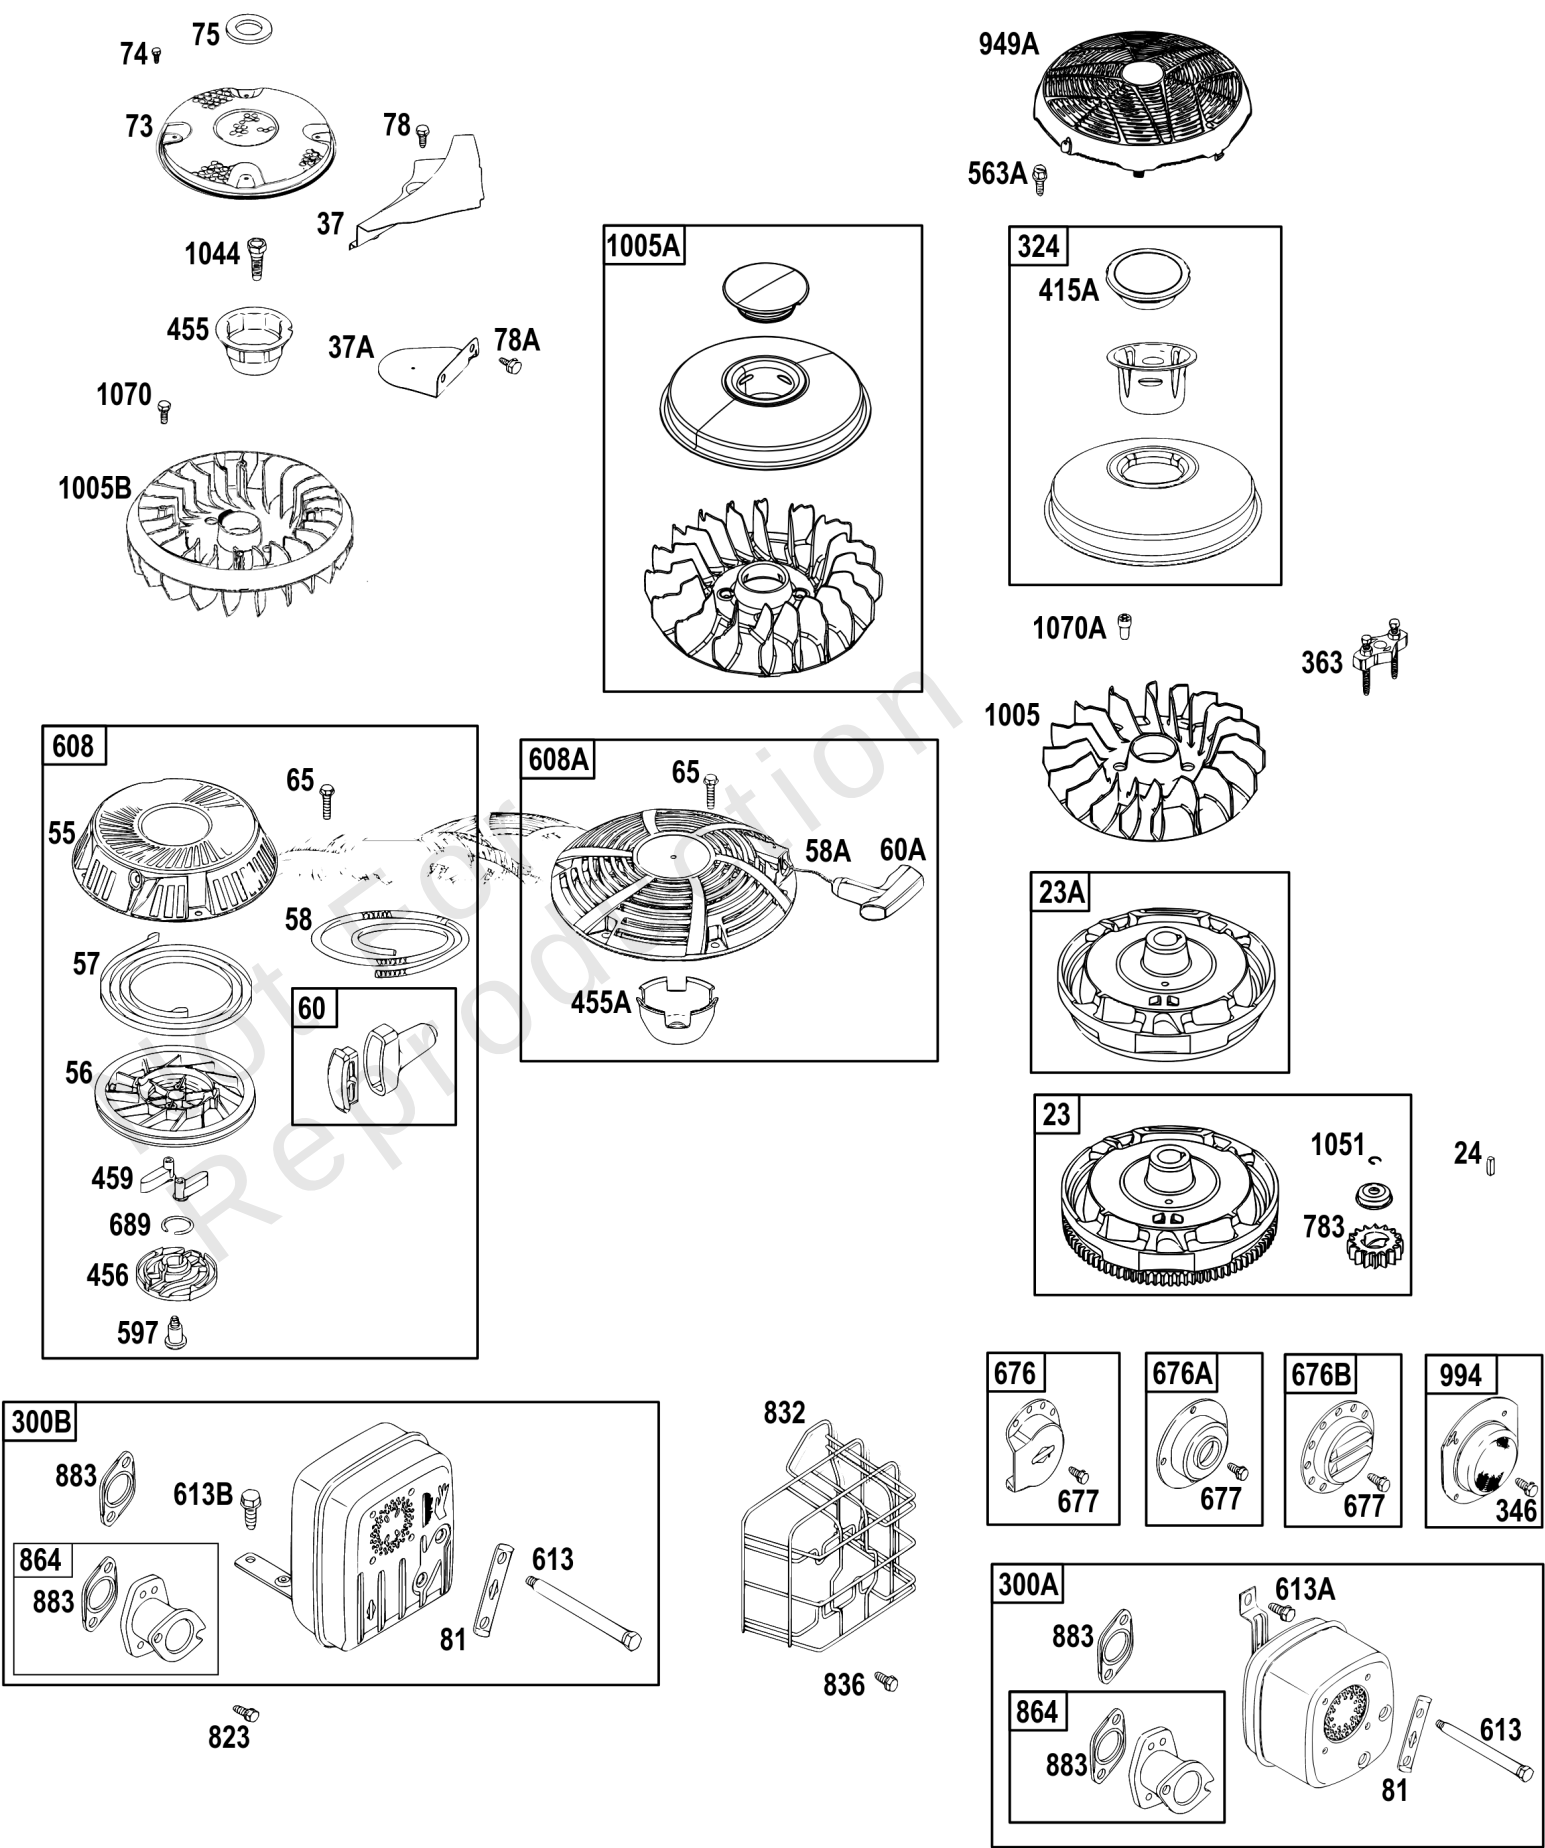

Exhaust System, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23A	591950		FLYWHEEL -Used After Code Date 12071600
23A	693555		FLYWHEEL -Used Before Code Date 12071700
24	796335		KEY, Flywheel -Used Before Code Date 12071700
24	591757		KEY, Flywheel -Used After Code Date 12071600
37	697352		GUARD, Flywheel
37A	697626		GUARD, Flywheel -(Electric Start)
55	695130		HOUSING, Rewind Starter -Used Before Code Date 12082700
56	695129		PULLEY, Starter -Used Before Code Date 12082700
57	695131		SPRING, Rewind Starter -Used Before Code Date 12082700
58	695132		ROPE, Starter -Used Before Code Date 12082700
58A	697316		ROPE, Starter -Used After Code Date 12082600
60	493926		GRIP, Starter Rope
60A	281434S		GRIP, Starter Rope
65	697725		SCREW -(Rewind Starter) -Used Before Code Date 07040900
65	690940		SCREW -(Rewind Starter) -Used After Code Date 12082600
65	690837		SCREW -(Rewind Starter) -Used After Code Date 07040800 -Used Before Code Date 12082700
73	-----		Screen-Rotating -(No Longer Available)(See Reference 1005A for Service Flywheel Fan) -Used Before Code Date 07040900
74	697897		SCREW -(Rotating Screen) -Used Before Code Date 07040900
75	690582		WASHER -(Flywheel)
78	691693		SCREW -(Flywheel Guard)
78A	690364		SCREW -(Flywheel Guard) (Electric Start)
81	691178		LOCK, Muffler Screw
300A	796000		MUFFLER
324	796308		SCREEN/CUP ASSEMBLY -Used After Code Date 07040800
346	794845		SCREW -(Spark Arrestor)
363	19203		PULLER, Flywheel
415A	794129		COVER, Flywheel -(Cover/Retainer) -Used After Code Date 07040800
455	695113		CUP, Flywheel -Used Before Code Date 12082700
455A	796615		CUP, Flywheel -Used After Code Date 12082600
456	695128		PLATE, Pawl Friction -Used Before Code Date 12082700

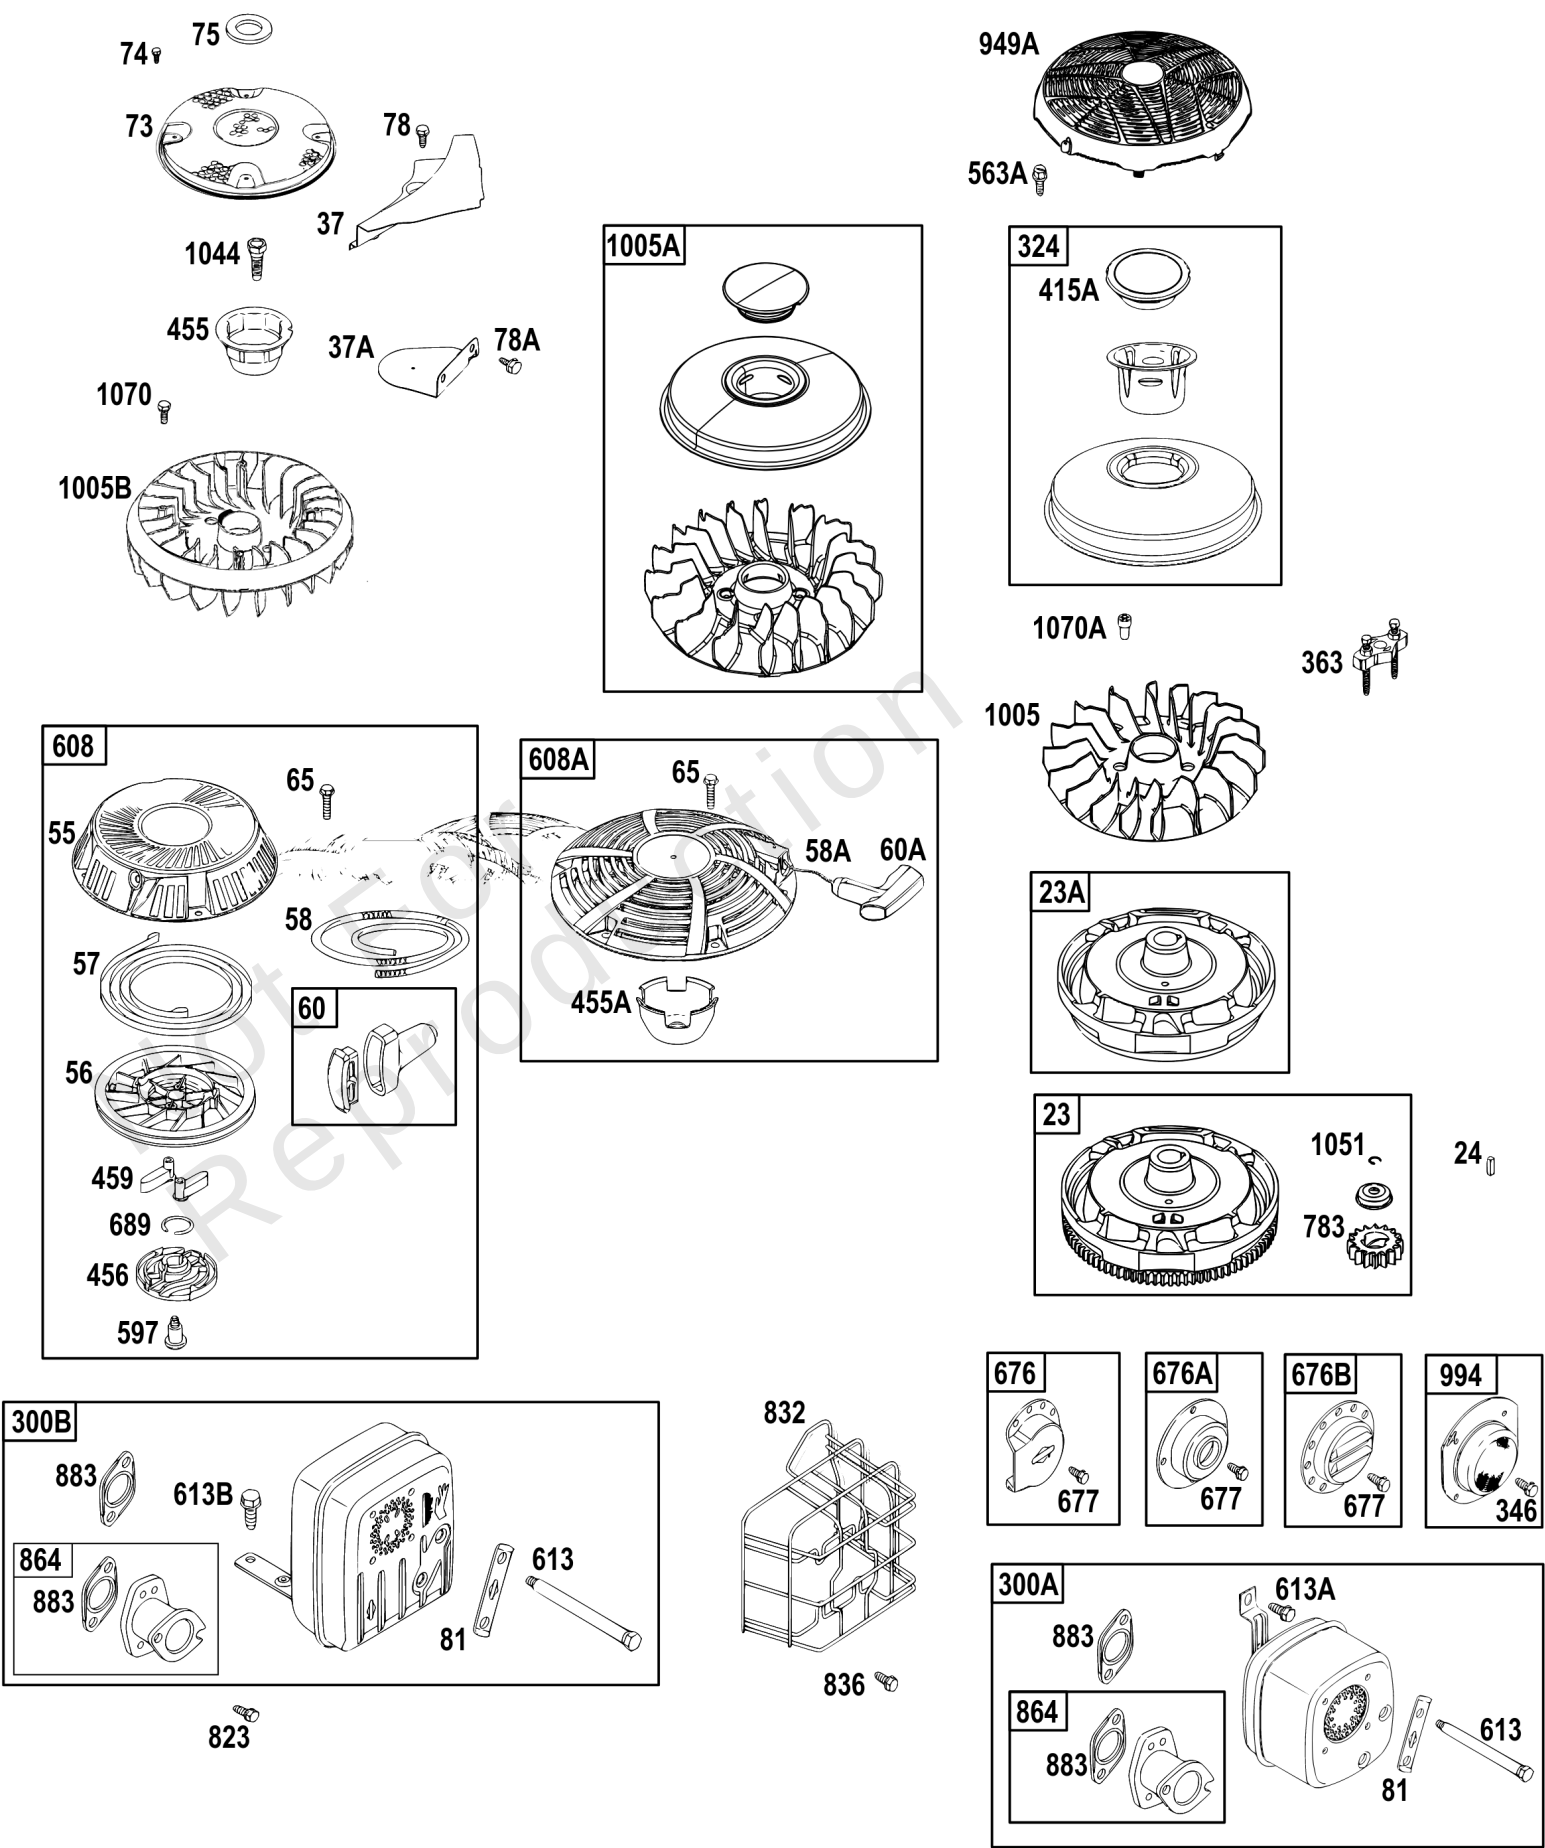

Exhaust System, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
459	281505S		PAWL-RATCHET -Used Before Code Date 12082700
563A	799359		SCREW -(Debris Screen Guard)
597	691696		SCREW -(Pawl Friction Plate) -Used Before Code Date 12082700
608	593939		STARTER, Rewind -(Metal) -Used Before Code Date 12082700
608A	591606		STARTER, Rewind -Used After Code Date 12082600
613	691416		SCREW -(Muffler)
613A	691678		SCREW -(Muffler)
613B	690297		SCREW -(Muffler)
676	795036		DEFLECTOR, Muffler -(Side Out)
676A	396903		DEFLECTOR, Muffler -(Direct Out)
676B	795038		DEFLECTOR, Muffler -(Louvered)
677	690661		SCREW -(Muffler Deflector)
689	691855		SPRING-FRICTION -Used Before Code Date 12082700
783	693713		GEAR, Pinion
823	698941		SCREW -(Muffler Adapter)
832	790244		GUARD, Muffler
864	796002		ADAPTER, Muffler -(2 1/4" Long)
883	692236		GASKET, Exhaust
949A	799358		GUARD, Debris Screen
994	794945		ARRESTOR, Spark
1005	796082		FAN, Flywheel -Used After Code Date 07040800
1005A	796200		FAN, Flywheel -Used Before Code Date 07040900
1005B	-----		Fan-Flywheel -(No Longer Available)(See Reference 1005A for Service Flywheel Fan)
1044	698139		SCREW -(Flywheel)
1051	691265		RING, Retaining
1070	791680		SCREW -(Flywheel Fan) -Used Before Code Date 07040900
1070A	690363		SCREW -(Flywheel Fan) -Used After Code Date 07040800 -Used Before Code Date 08061900

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	2179024020	1	Replacement Engine
	697740	1	Replacement Short Block
	-----		Short Block Note: Engines Built Prior to 07/12/2012 should use short block 697740. Engines built on or after 07/12/2012 should use short block 592055.

Not For Reproduction

