

Cub Cadet®

ILLUSTRATED PARTS MANUAL

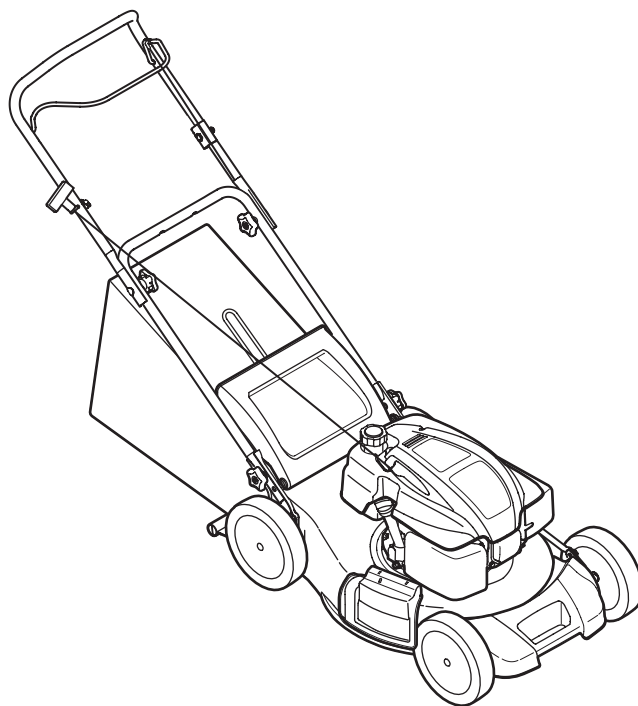

Push and Self-Propelled Mowers

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Lawn Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Briggs Engine 11P905-0873-B1	99	Model CC 98M.....	28
Model CC 500.....	4	Model CC 999 ES.....	32
Model CC540.....	6	Engine Model 2P70M0B.....	36
Model CC 550 ES.....	8	Engine Model 2P70M0C.....	108
Model CC 550 SP.....	10	Engine Model 5P65M0B.....	38
Model CC 46 ES (Kohler Engine).....	12	Engine Model 5P70M0B.....	48
Model CC 46 ES (MTD Engine).....	14	Honda Model GCV160LA.....	58
Model CC860.....	16	Kohler Engine XT173-3315.....	72
Model CC 94M.....	20	Kohler Engine XT173-3316.....	86
Model CC 98H	24		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

This page left intentionally blank.


Model CC 500

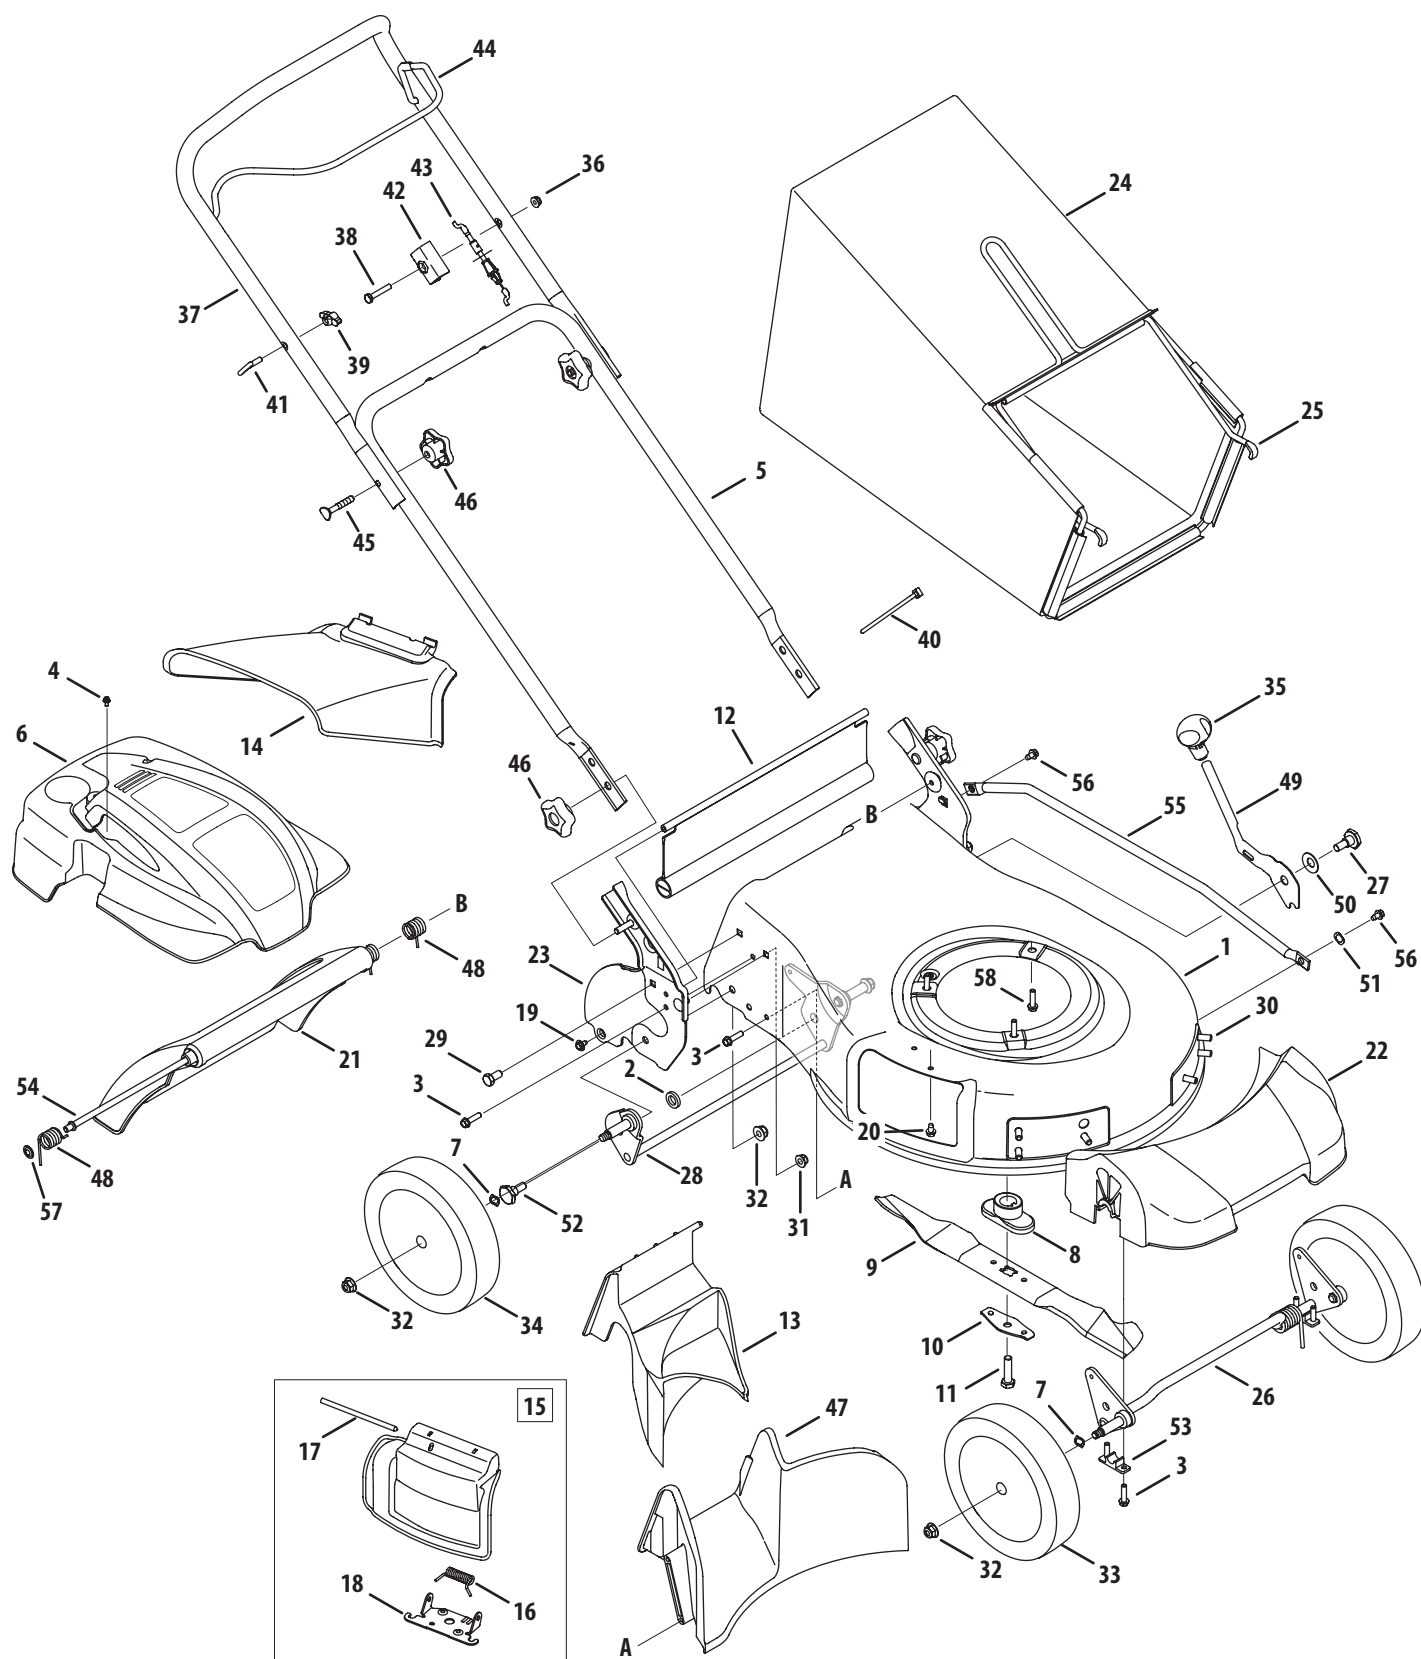

Ref No.	Part Number	Description
1	787-01649	19" Deck
2	731-05880	Spacer, .515 x 1.00 x .310 Lg.
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04232B	Engine Shroud
7	936-0504	Washer, Wave, .510 x .750 x .017
8	748-0376E	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710A	Hinge Pin
18	17032A	Chute Deflector Adapter
19	710-0779A	Screw, #10-16 x .500
20	710-05073	Screw
21	931-05686	Rear Door
22	931-05673	Front Cover
23	687-02325	Handle Bracket - RH
	687-02324	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082	Grass Bag Frame
26	687-02225	Front Bracket Assembly
27	938-0148	Screw, Shoulder, .50 x .66
28	687-02228	Rear Bracket Assembly
29	710-3025	HHcs, 5/16-18 x .625

Ref No.	Part Number	Description
30	710-04995	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	634-04347	Rear Wheel
35	720-04096	Knob
36	712-04064	Nut, Flange Lock, 1/4-20
37	749-04550	Upper Handle
38	710-0606	Screw, 1/4-20 x 1.50
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	731-06749	Control Cable Mount
43	946-04535	Control Cable
44	747-05045	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-05710A	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04745	Spring Lever
50	936-0255	Washer, Bell, .510 x 1.14 x .040
51	736-04413	Washer, Wave, .385 x .598
52	938-0507B	Screw, Shoulder, .500 Dia. X .434
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307	Cross Bracket
56	738-04278	Screw, 1/4-20 x .50
57	726-0201	Nut, Spd.
58	710-0654A	Screw, tt, 3/8-16 x 1.00


Model CC 540

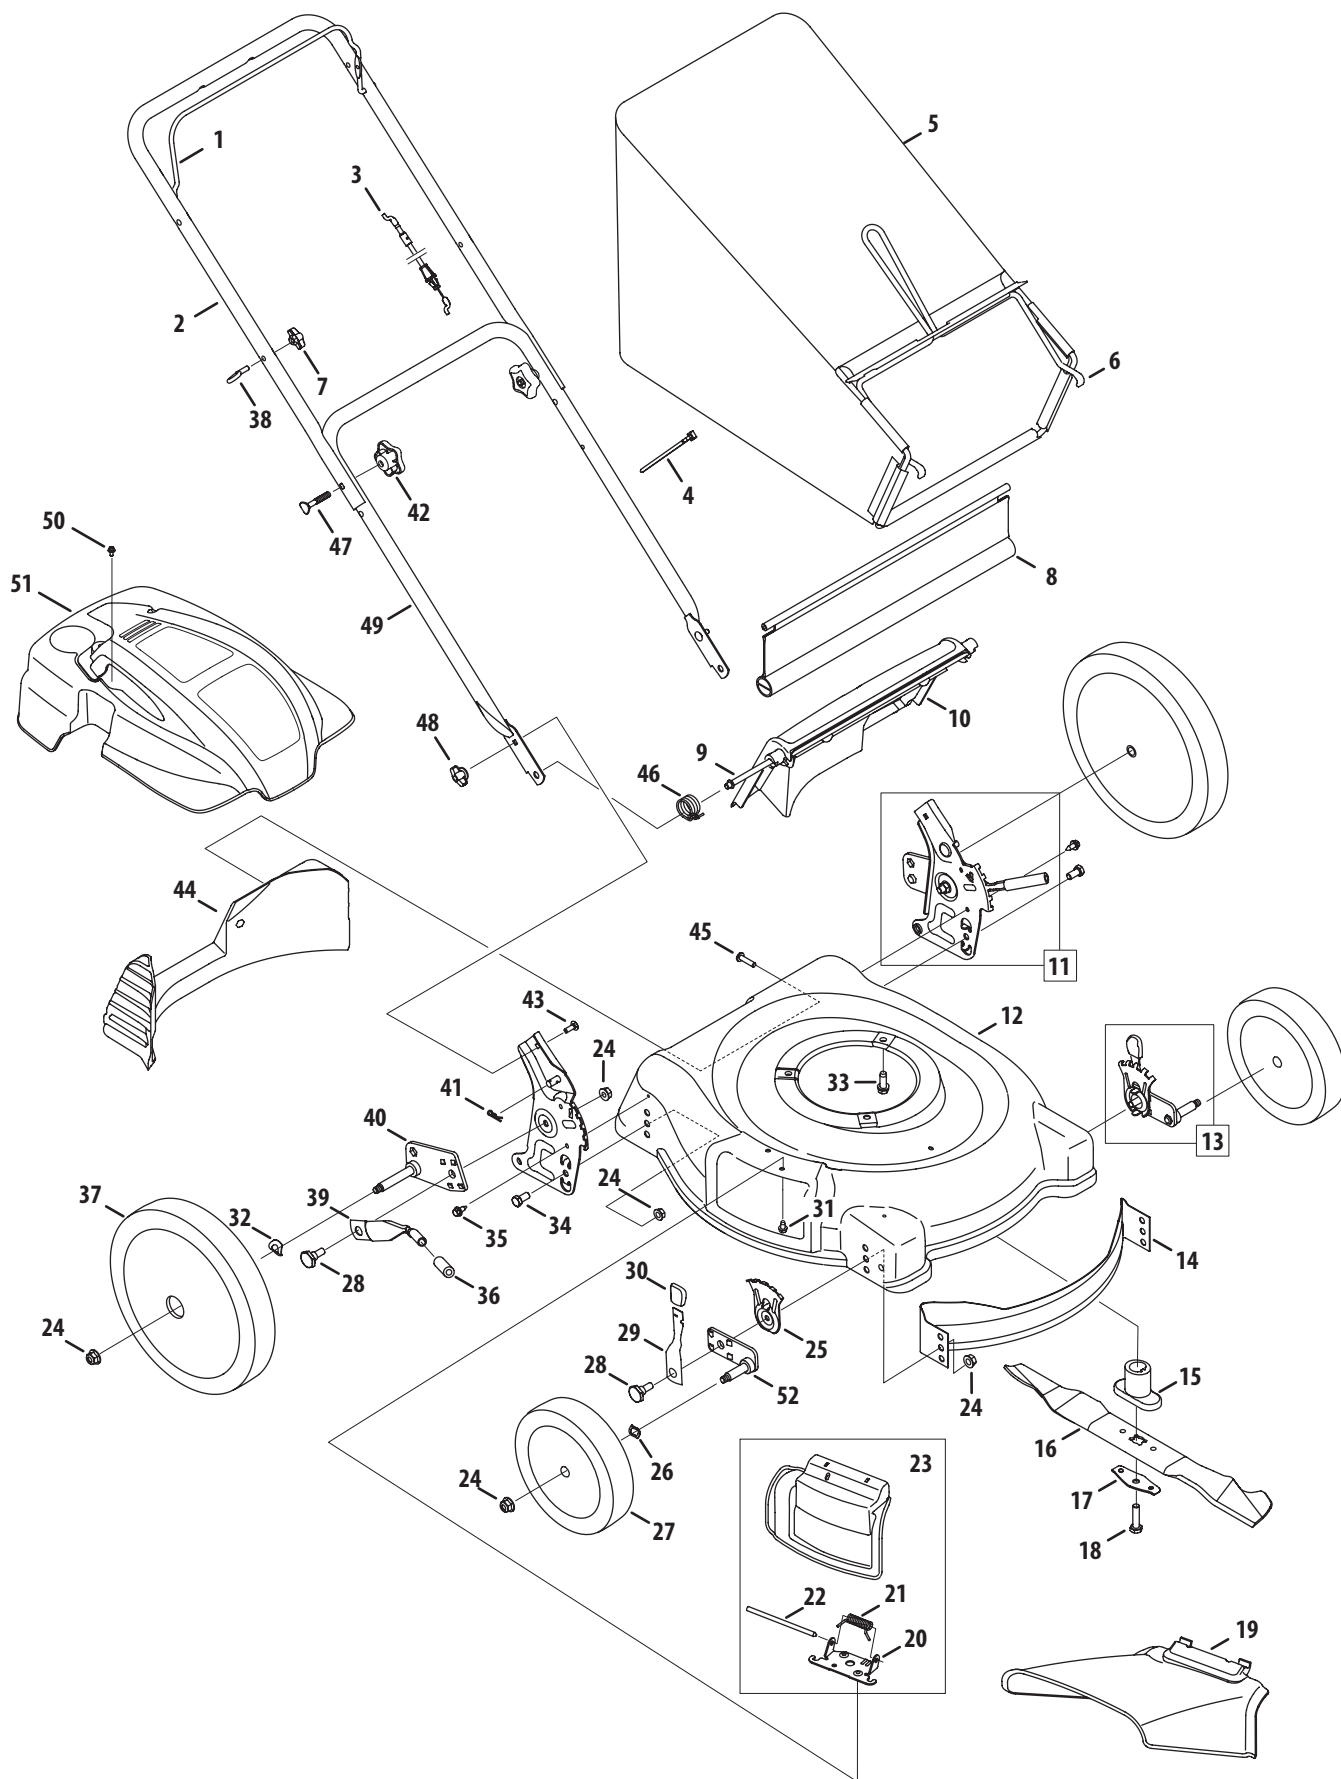

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1.	747-1161A	Blade Control	27.	634-04346	Front Wheel
2.	749-1092A	Upper Handle	28.	738-04266	Shoulder Scr., .5D x .385
3.	946-04704	Control Cable	29.	94832	Front Spring Lever
	746-04104	Control Cable (Kaw.)	30.	720-0426	Height Adjust Knob
4.	926-0240	Cable Tie	31.	710-05073	Screw, 1/4-20 x .500
5.	964-04054	Grass Bag	32.	736-0182	Spring Washer
6.	747-04080A	Grass Bag Frame	33.	710-0654A	TT Screw, 3/8-16 x 1.0
7.	720-0279	Handle Knob	34.	710-0216	Hex Screw, 3/8-16 x .75
8.	731-05642A	Trail shield	35.	710-1652	TT Screw, 1/4-20 x .625
9.	747-04588	Pivot Rod	36.	720-0312	Foam Grip
10.	731-06847	Rear Discharge Door	37.	634-04367	Rear Wheel
11.	987-02280A	Rear Handle Bracket Assy. - LH	38.	710-1205	Eye Bolt
	987-02279A	Rear Handle Bracket Assy. - RH	39.	732-0866	Rear Hi-Wheel Spring Lever
12.	787-01279	Deck 21-inch	40.	987-02335	Rear Pivot Arm Assy - RH
13.	987-02099C	Frnt. Hgt. Adj. Assy. - LH - 7" Whl.		987-02336	Rear Pivot Arm Assy - LH
	987-02100C	Frnt. Hgt. Adj. Assy. - RH - 7" Whl.	41.	914-0104	Hairpin Clip
14.	782-5002B	Front Baffle	42.	720-04072A	Star Knob
15.	748-0377E	Blade Adapter w/Star	43.	710-0703	Carriage Bolt, 1/4-20 x .75
16.	942-0741A	21-inch Mulching Blade	44.	731-04150C	Rear Baffle
17.	736-0524B	Bell Blade Support	45.	710-1241	Screw HL, 1/4-15 x 1.00
18.	710-1257	Hex Screw, 3/8-24 x 2.5	46.	732-04090A	Torsion Spring - RH
19.	731-04177	Side Discharge Chute	47.	710-1174	Carriage Bolt, 5/16-18 x 2
20.	17032A	Deflector Chute Adaptor	48.	912-0397	Wing Nut
21.	732-1014C	Torsion Spring	49.	749-0928A	Lower Handle
22.	747-0710A	Hinge Pin	50.	710-04744†	Screw, HL, #12-16 x 1.00
23.	987-02055	Mulch Plug Assembly	51.	931-04232B†	Engine Shroud
24.	712-04065	Flange Lock Nut 3/8-16	52.	987-02508	Pivot Arm Assy. - RH - 7" Wheel
25.	787-01290A	Height Adjustment Plate		987-02509	Pivot Arm Assy. - LH - 7" Wheel
26.	936-0504	Wave Washer			

† If Equipped


Model CC 550 ES

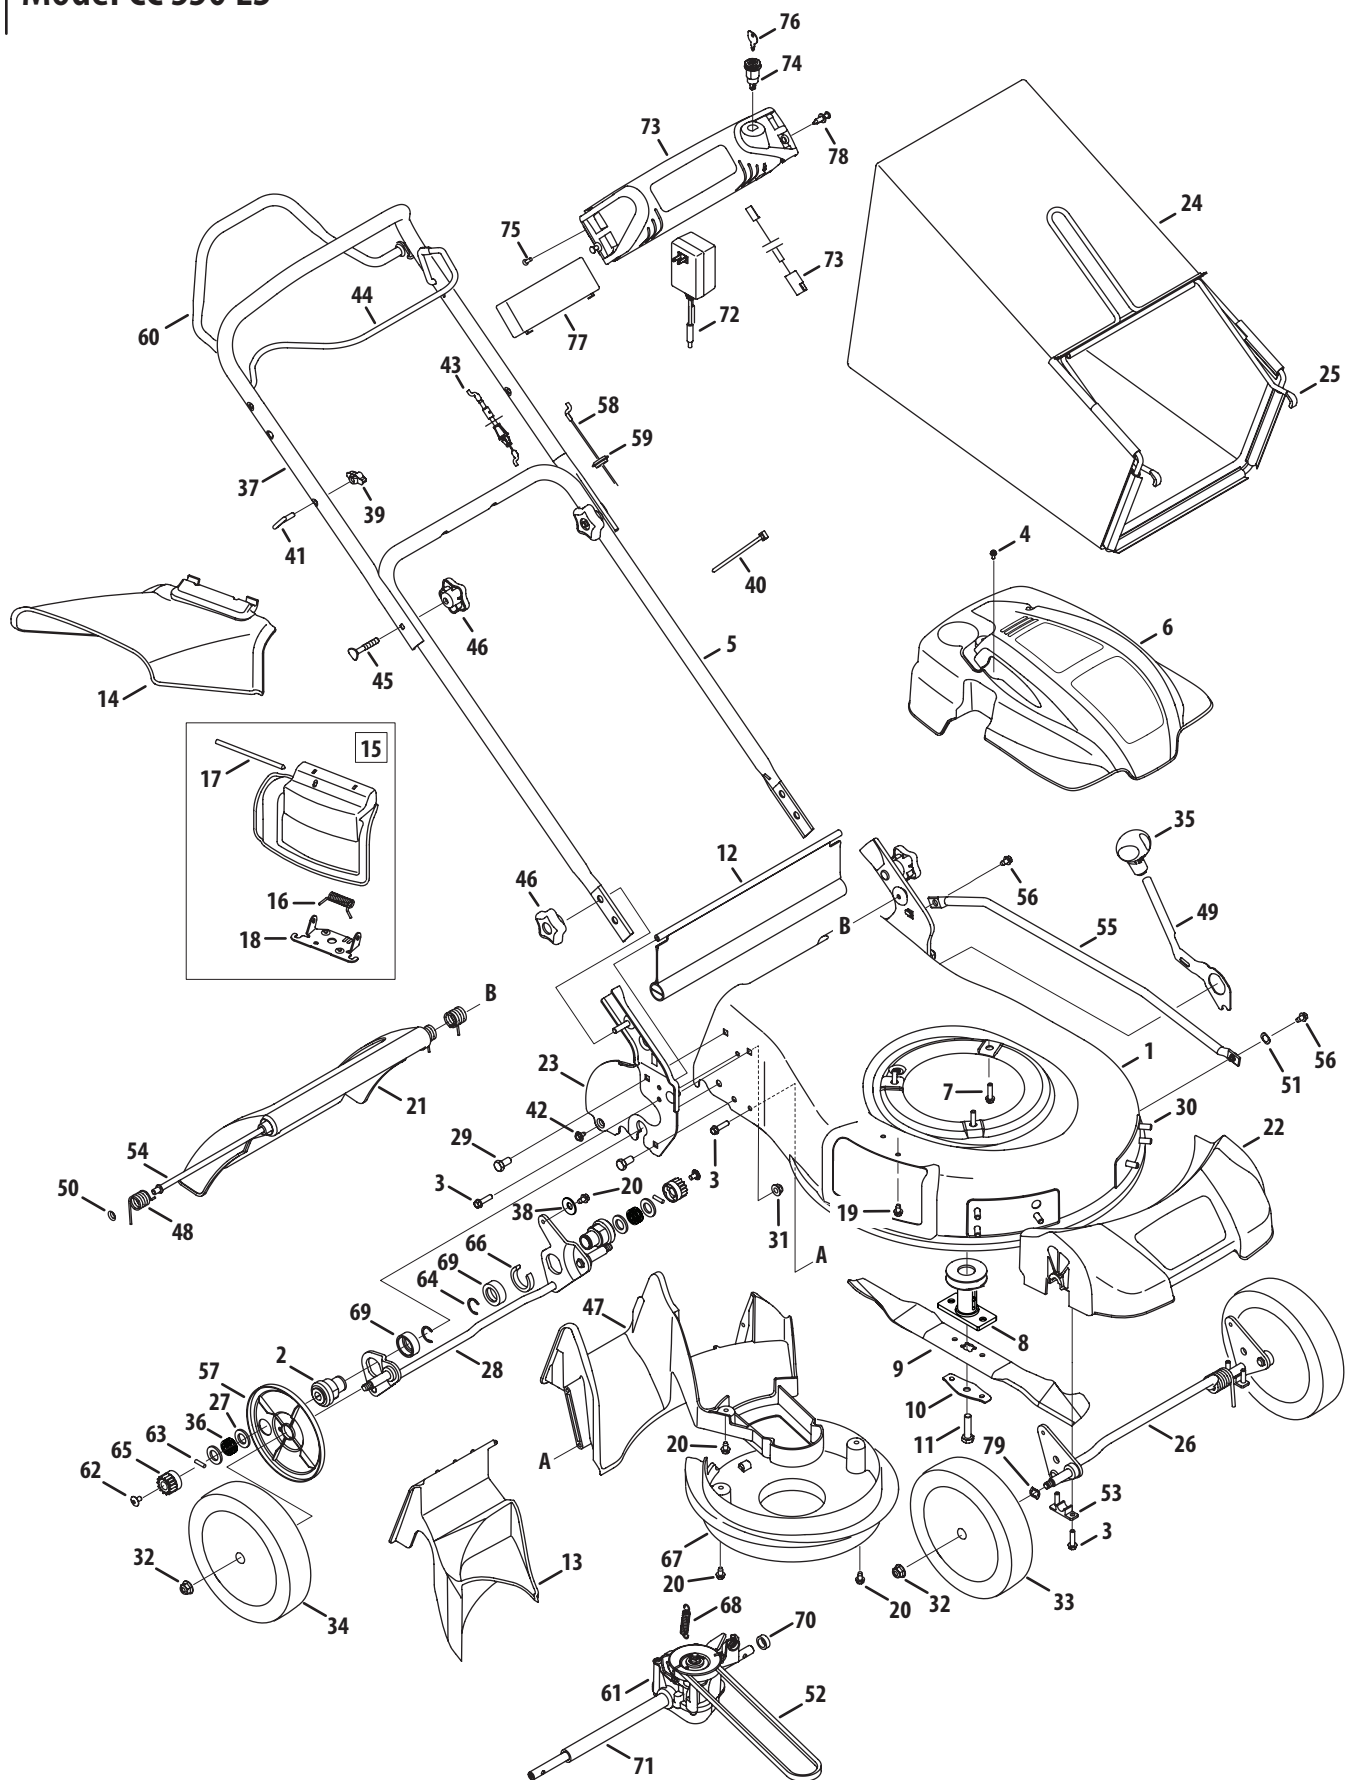

Ref No.	Part Number	Description
1	787-01629	19" Deck
2	687-02415	Transmission Support Bearing
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04232B	Engine Shroud
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02555	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710A	Hinge Pin
18	17032A	Chute Deflector Adapter
19	710-05073	Screw
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05673	Front Cover
23	687-02323	Handle Bracket - RH
	687-02322	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082	Grass Bag Frame
26	687-02225	Front Bracket Assembly
27	936-0369	Washer, Flat, .508 x 1.00 x .020
28	687-02304	Self Propelled Bracket Ass'y
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	934-04348	Rear Wheel
35	720-04096	Knob
36	732-04650	Wave Spring
37	749-04550	Upper Handle
38	736-0242	Washer, Bell, .340 x .872 x .060
39	720-0279	Knob
40	725-0157	Cable Tie

Ref No.	Part Number	Description
41	710-1205	Rope Guide
42	710-0779A	Screw, #10-16 x .500
43	946-04523	Control Cable
44	747-05045	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-06190	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04338C	Spring Lever
50	726-0201	Nut, Spd
51	736-04413	Wshr, Wave, .385 ID x .598 OD
52	954-04158	V-Belt
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307	Cross Bracket
56	738-04278	Scr., Shldr., 1/4-20 x .50
57	731-06974	Wheel Dust Cover
58	946-04519B	Drive Cable
59	735-04059	Grommet
60	747-05047A	Drive Control
61	918-04463A	Transmission
62	710-04531	Screw, 1/4-20 x .390
63	915-0221	Dowel Pin
64	716-0198	Retainer Ring
65	917-04192C	Spur Gear - RH
	917-04184C	Spur Gear - LH
66	731-05872	Spacer, Clip
67	731-06164	Engine Baffle
68	932-04262	Exten. Spring, .429OD x 2.515
69	748-0390	Bearing Support Spacer
70	750-04870	Sleeve Spacer, .550ID x .340 Lg.
71	750-04853	Sleeve Spacer, .550ID x 7.97 Lg.
72	725-04329	Battery Charger
73	925-04072	Electric Start Harness Assembly
74	925-04347	Key Switch
75	710-1667A	Screw, #10-16 x .750
76	925-0201	Key
77	925-04323	Battery
78	728-0199	Rivet
79	936-0504	Washer, Wave, .510 x .750 x .017


Model CC 550 SP

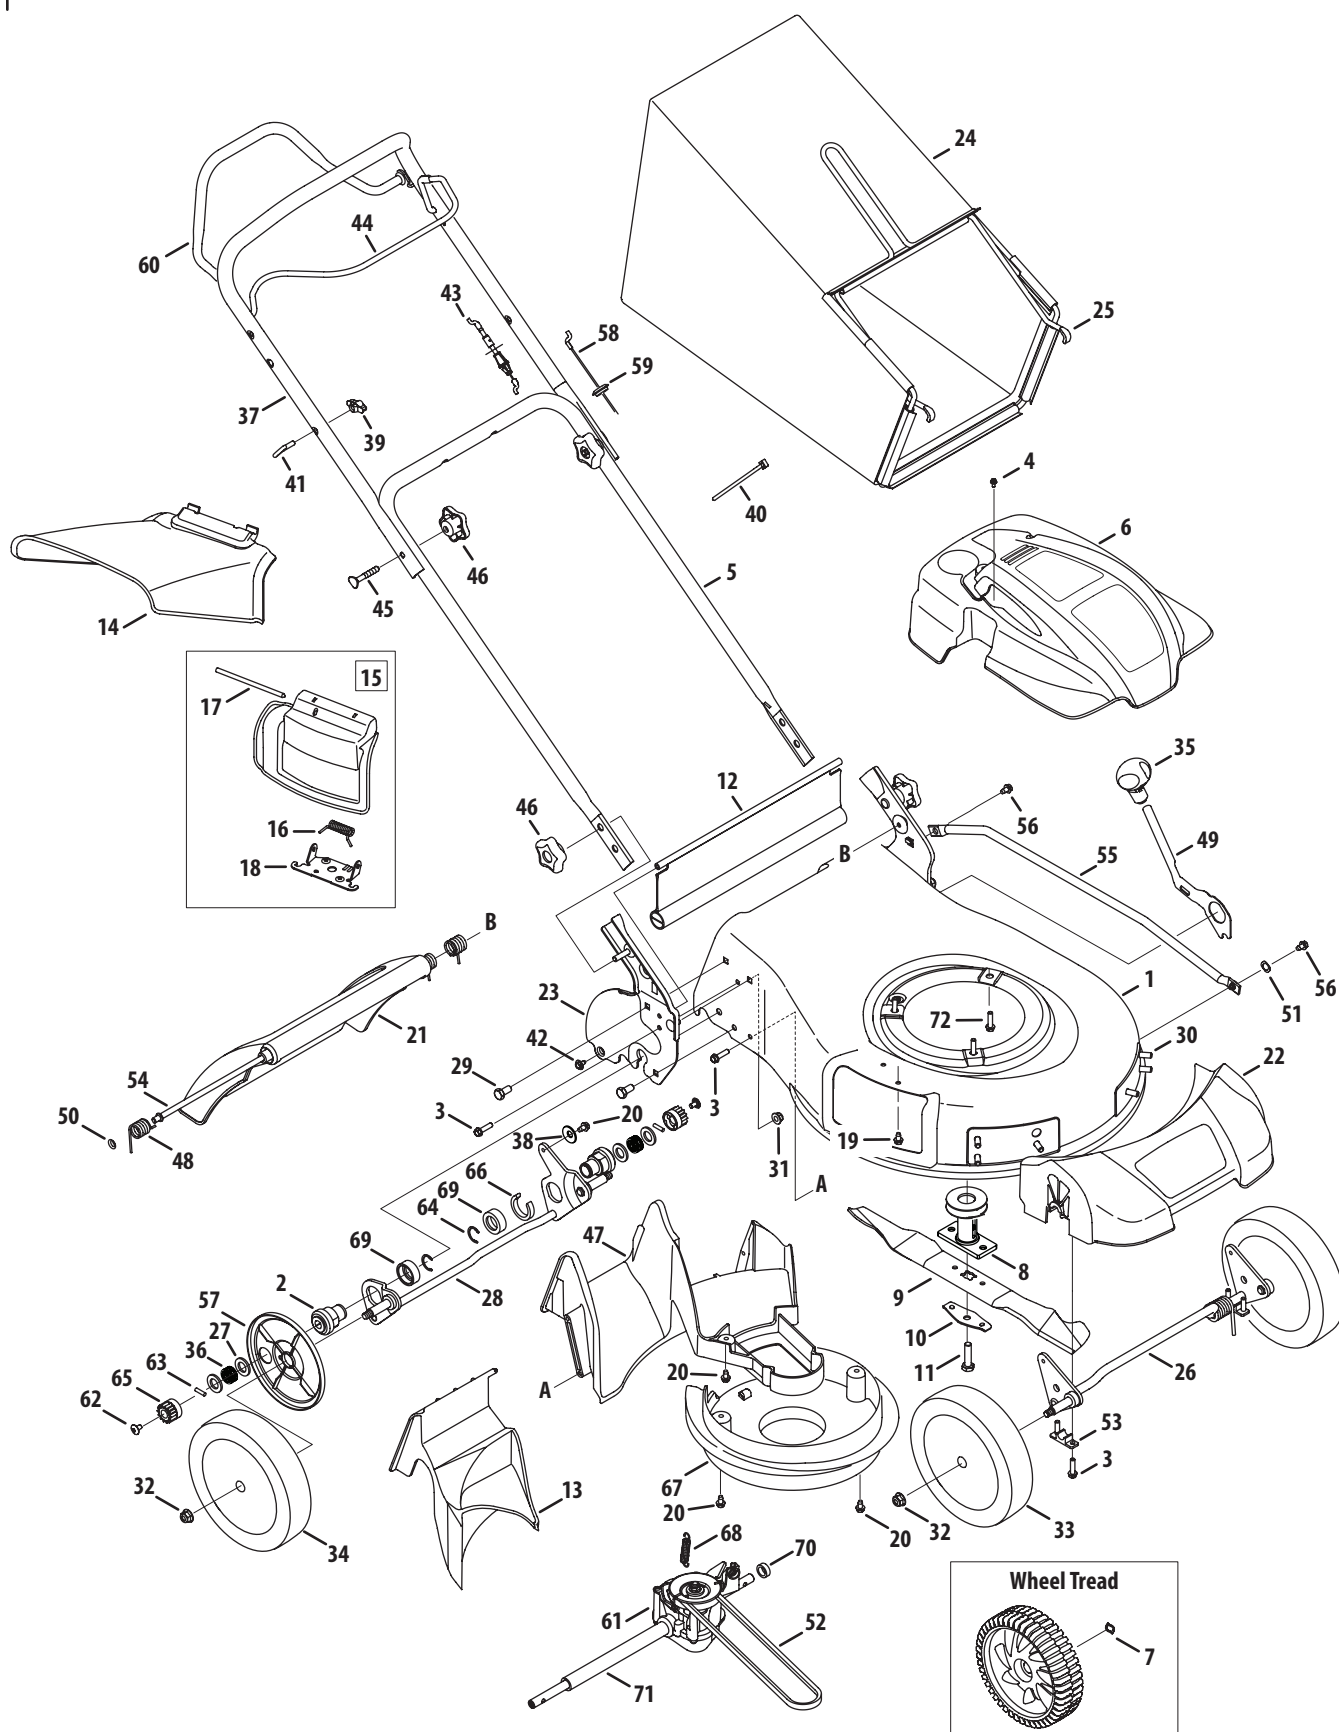

Ref No.	Part Number	Description
1	787-01629	19" Deck
2	687-02415	Transmission Support Bearing
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04232B	Engine Shroud
7	936-0504	Washer, Wave, .510 x .750 x .017
8	687-02555	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710A	Hinge Pin
18	17032A	Chute Deflector Adapter
19	710-05073	Screw
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05673	Front Cover
23	687-02323	Handle Bracket - RH
	687-02322	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082	Grass Bag Frame
26	687-02225	Front Bracket Assembly
27	936-0369	Washer, Flat, .508 x 1.00 x .020
28	687-02304	Self Propelled Bracket Ass'y
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	934-04348	Rear Wheel
35	720-04096	Knob
36	732-04650	Wave Spring
37	749-04550	Upper Handle

Ref No.	Part Number	Description
38	736-0242	Washer, Bell, .340 x .872 x .060
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	710-0779A	Screw, #10-16 x .500
43	946-04721	Control Cable
44	747-05045	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-06190	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04731	Spring Lever
50	726-0201	Nut, Spd
51	736-04413	Wshr, Wave, .385 ID x .598 OD
52	954-04158	V-Belt
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307	Cross Bracket
56	738-04278	Scr., Shldr., 1/4-20 x .50
57	731-06974	Wheel Dust Cover
58	946-04519B	Drive Cable
59	735-04059	Grommet
60	747-05047A	Drive Control
61	918-04463A	Transmission
62	710-04531	Screw, 1/4-20 x .390
63	915-0221	Dowel Pin
64	716-0198	Retainer Ring
65	917-04192C	Spur Gear - RH
	917-04184C	Spur Gear - LH
66	731-05872	Spacer, Clip
67	731-06164	Engine Baffle
68	932-04262	Exten. Spring, .429OD x 2.515
69	748-0390	Bearing Support Spacer
70	750-04870	Sleeve Spacer, .550ID x .340 Lg.
71	750-04853	Sleeve Spacer, .550ID x 7.97 Lg.
72	710-0654A	Screw, 3/8-16 x 1.00

Model CC 46 ES (Kohler Engine)

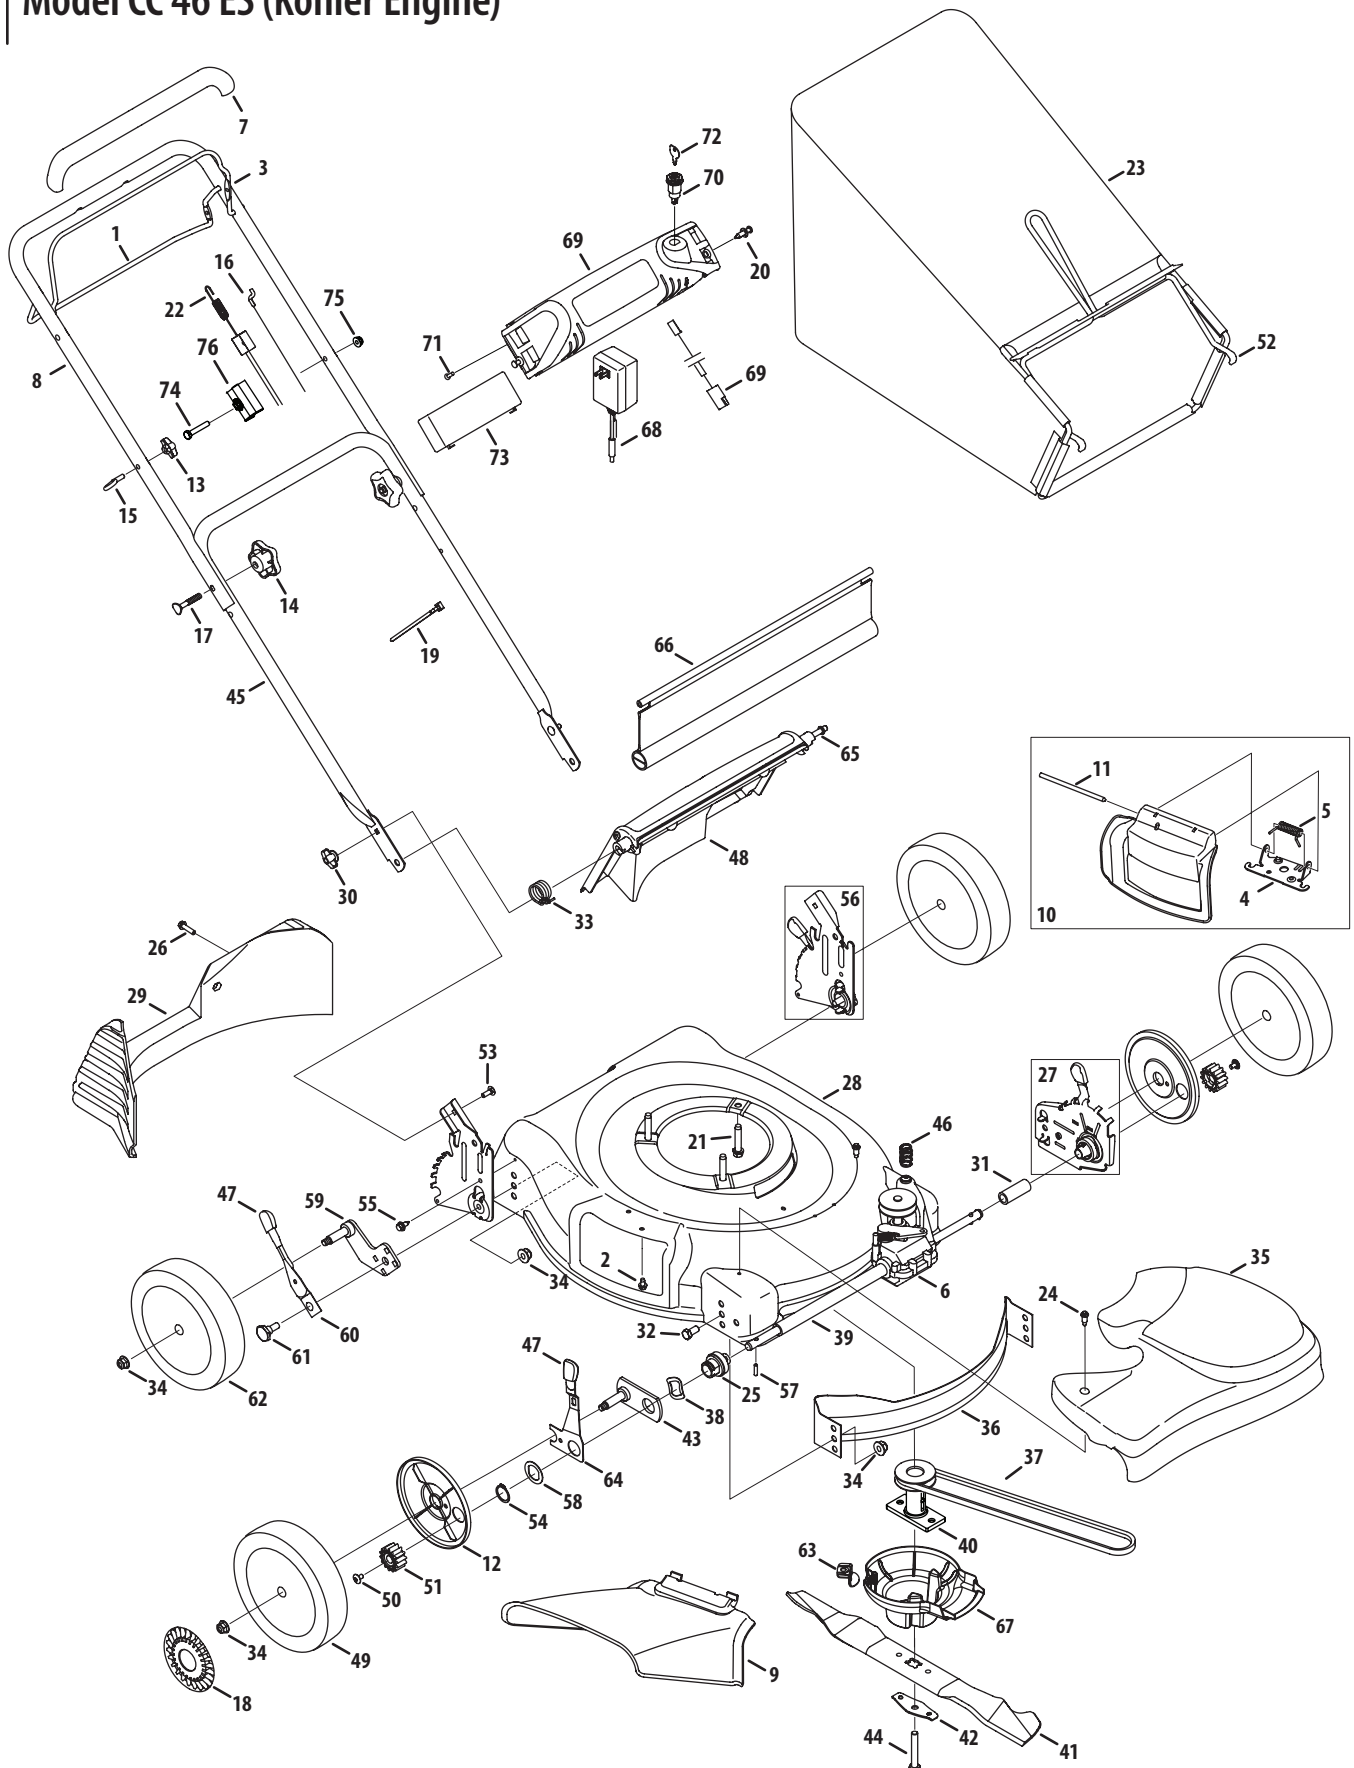


Model CC 46 ES (Kohler Engine)

Ref No.	Part Number	Description
1	747-1214	Drive Control
2	710-05073	Screw
3	747-1161A	Blade Control
4	17032A	Deflector Chute Adapter
5	732-1014	Torsion Spring
6	918-04376B	Transmission Assembly
7	731-05564	Blade Control Cover
8	749-04726	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	747-0710A	Hinge Pin
12	782-7551A	Wheel Dust Cap
13	720-0279	Handle Knob
14	720-04072A	Star Knob
15	710-1205	Eye Bolt
16	946-04589	Control Cable
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	731-07048	Hub Cap
19	926-0240	Cable Tie
20	728-0199	Rivet
21	710-0654A	Self-Tapping Sems Screw
22	946-04303	Drive Cable
23	964-04054	Grass Bag
24	710-1650	Shoulder Screw # 12 -24
25	987-02347	Front Bearing Assembly
26	710-1241	Screw, 1/4-15 x 1.000
27	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
28	787-01278	21" Deck
29	731-04150C	Rear Baffle
30	912-0397	Wing Nut
31	750-04595	Slev. Spacer 1.4" Lg.
32	710-0216	Hex Screw, 3/8-16 x.75
33	732-04090A	Torsion Spring - RH
34	712-04065	Flange Lock Nut, 3/8-16
35	931-05013A	Transmission Cover
36	782-5002B	Front Baffle
37	954-0637A	V-Belt
38	936-0447	Wave Washer
39	750-04594	Sleeve Spacer 8.985" Lg.
40	687-02195A	Blade Adapter

Ref No.	Part Number	Description
41	942-0741A	21" Mulching Blade
42	736-0524B	Blade Bell Support
43	987-02334	Pivot Plate Assembly
44	710-1257	Hex Screw 3/8-24 x 2.50
45	749-0928A	Lower Handle
46	732-1043	Belt Tension Spring
47	720-0426	Adjustment Knob
48	731-06847	Rear Discharge Door
49	734-04223A	Front Wheel
50	710-04531	Screw, 1/4-20 x .390
51	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
52	747-04080A	Grass Bag Frame
53	710-0703	Carriage Bolt 1/4-20
54	916-0102	Snap Ring
55	710-1652	TT Scr. w/Washer 1/4-20 x.625
56	987-02271A	Handle Bracket Assembly - RH
	987-02270A	Handle Bracket Assembly - LH
57	915-0221	Dowel Pin
58	736-0474	Washer
59	987-02333	Pivot Arm Assembly - RH
	987-02332	Pivot Arm Assembly - LH
60	732-04175	Rear Spring Lever
61	738-04266	Shoulder Scr.500 Dia. x.434
62	734-04226A	Rear Wheel
63	787-01593	Engine Baffle Bracket
64	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
65	747-04587	Pivot Rod
66	731-05642A	Rear Trailing Shield
67	753-06116	Engine Baffle
68	725-04329	Battery Charger
69	925-04072	Electric Start Harness Ass'y.
70	925-04347	Key Switch
71	710-1667A	Screw, #10-16 x .750
72	925-0201	Key
73	925-04323	Battery
74	710-0606	Screw, 1/4-20 x 1.50
75	712-04064	Nut, Flglk, 1/4-20
76	731-06749	Control Cable Mount

Model CC 46 ES (MTD Engine)

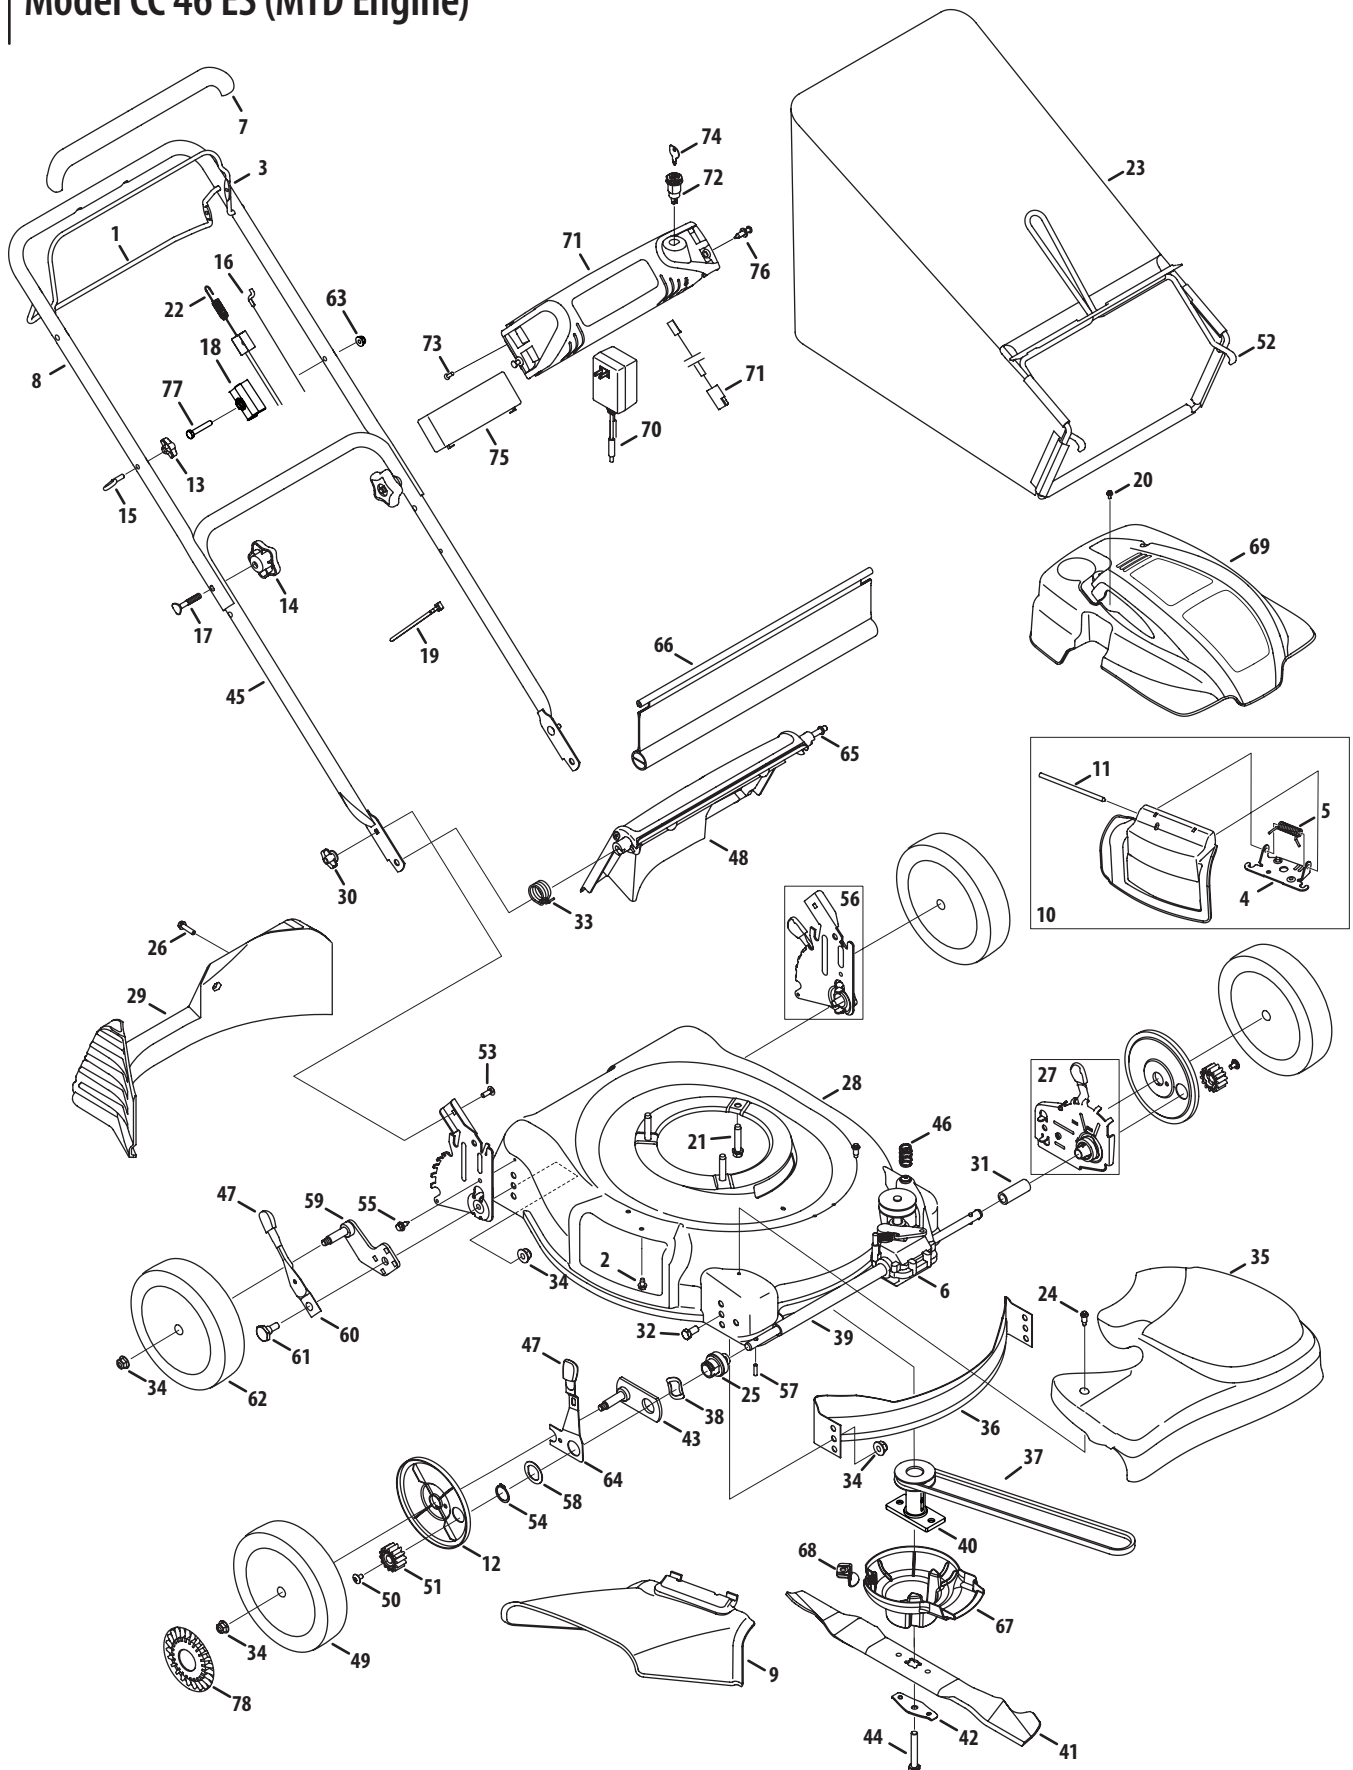


Model CC 46 ES (MTD Engine)

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	747-1214	Drive Control	42	736-0524B	Blade Bell Support
2	710-05073	Screw	43	987-02334	Pivot Plate Assembly
3	747-1161A	Blade Control	44	710-1257	Hex Screw 3/8-24 x 2.50
4	17032A	Deflector Chute Adapter	45	749-0928A	Lower Handle
5	732-1014	Torsion Spring	46	732-1043	Belt Tension Spring
6	918-04376B	Transmission Assembly	47	720-0426	Adjustment Knob
7	731-05564	Blade Control Cover	48	731-06847	Rear Discharge Door
8	749-04726	Upper Handle	49	734-04223A	Front Wheel
9	731-04177	Chute Deflector	50	710-04531	Screw, 1/4-20 x .390
10	987-02055	Mulch Plug Complete	51	717-1762	Gear 14T RH FWD
11	747-0710A	Hinge Pin		717-1761	Gear 14T LH FWD
12	782-7551A	Wheel Dust Cap	52	747-04080A	Grass Bag Frame
13	720-0279	Handle Knob	53	710-0703	Carriage Bolt 1/4-20
14	720-04072A	Star Knob	54	916-0102	Snap Ring
15	710-1205	Eye Bolt	55	710-1652	TT Scr. w/Washer 1/4-20 x.625
16	946-04589	Control Cable	56	987-02271A	Handle Bracket Assembly - RH
17	710-1174	Carriage Bolt 5/16-18 x 2.0		987-02270A	Handle Bracket Assembly - LH
18	731-06749	Control Cable Mount	57	915-0221	Dowel Pin
19	926-0240	Cable Tie	58	736-0474	Washer
20	710-04744	Screw, HL, #12-16 x 1.00	59	987-02333	Pivot Arm Assembly - RH
21	710-0654A	Self-Tapping Sems Screw		987-02332	Pivot Arm Assembly - LH
22	946-04303	Drive Cable	60	732-04175	Rear Spring Lever
23	964-04054	Grass Bag	61	738-04266	Shoulder Scr.500 Dia. x.434
24	710-1650	Shoulder Screw # 12 -24	62	734-04226A	Rear Wheel
25	987-02347	Front Bearing Assembly	63	712-04064	Nut, Flgk, 1/4-20
26	710-1241	Screw, 1/4-15 x 1.000	64	732-0706	Front Lever - RH
27	987-02194A	Height Adjustment Ass'y - RH		732-0707	Front Lever - LH
	987-02193A	Height Adjustment Ass'y - LH	65	747-04587	Pivot Rod
28	787-01278	21" Deck	66	731-05642A	Rear Trailing Shield
29	731-04150C	Rear Baffle	67	753-06116	Engine Baffle
30	912-0397	Wing Nut	68	787-01593	Engine Baffle Bracket
31	750-04595	Slev. Spacer 1.4" Lg.	69	931-04232B	Engine Shroud
32	710-0216	Hex Screw, 3/8-16 x.75	70	725-04329	Battery Charger
33	732-04090A	Torsion Spring - RH		791-182534†	Battery Charger (w/LED Light)
34	712-04065	Flange Lock Nut, 3/8-16	71	925-04072	Electric Start Harness Assembly
35	931-05013A	Transmission Cover	72	925-04347	Key Switch
36	782-5002B	Front Baffle	73	710-1667A	Screw, #10-16 x .750
37	954-0637A	V-Belt	74	925-0201	Key
38	936-0447	Wave Washer	75	925-04323	Battery
39	750-04594	Sleeve Spacer 8.985" Lg.	76	728-0199	Rivet
40	687-02195A	One Piece Blade Adapter	77	710-0606	Screw, 1/4-20 x 1.50
41	942-0741A	21" Mulching Blade	78	731-07048	Hub Cap

† If Equipped

Model CC 860

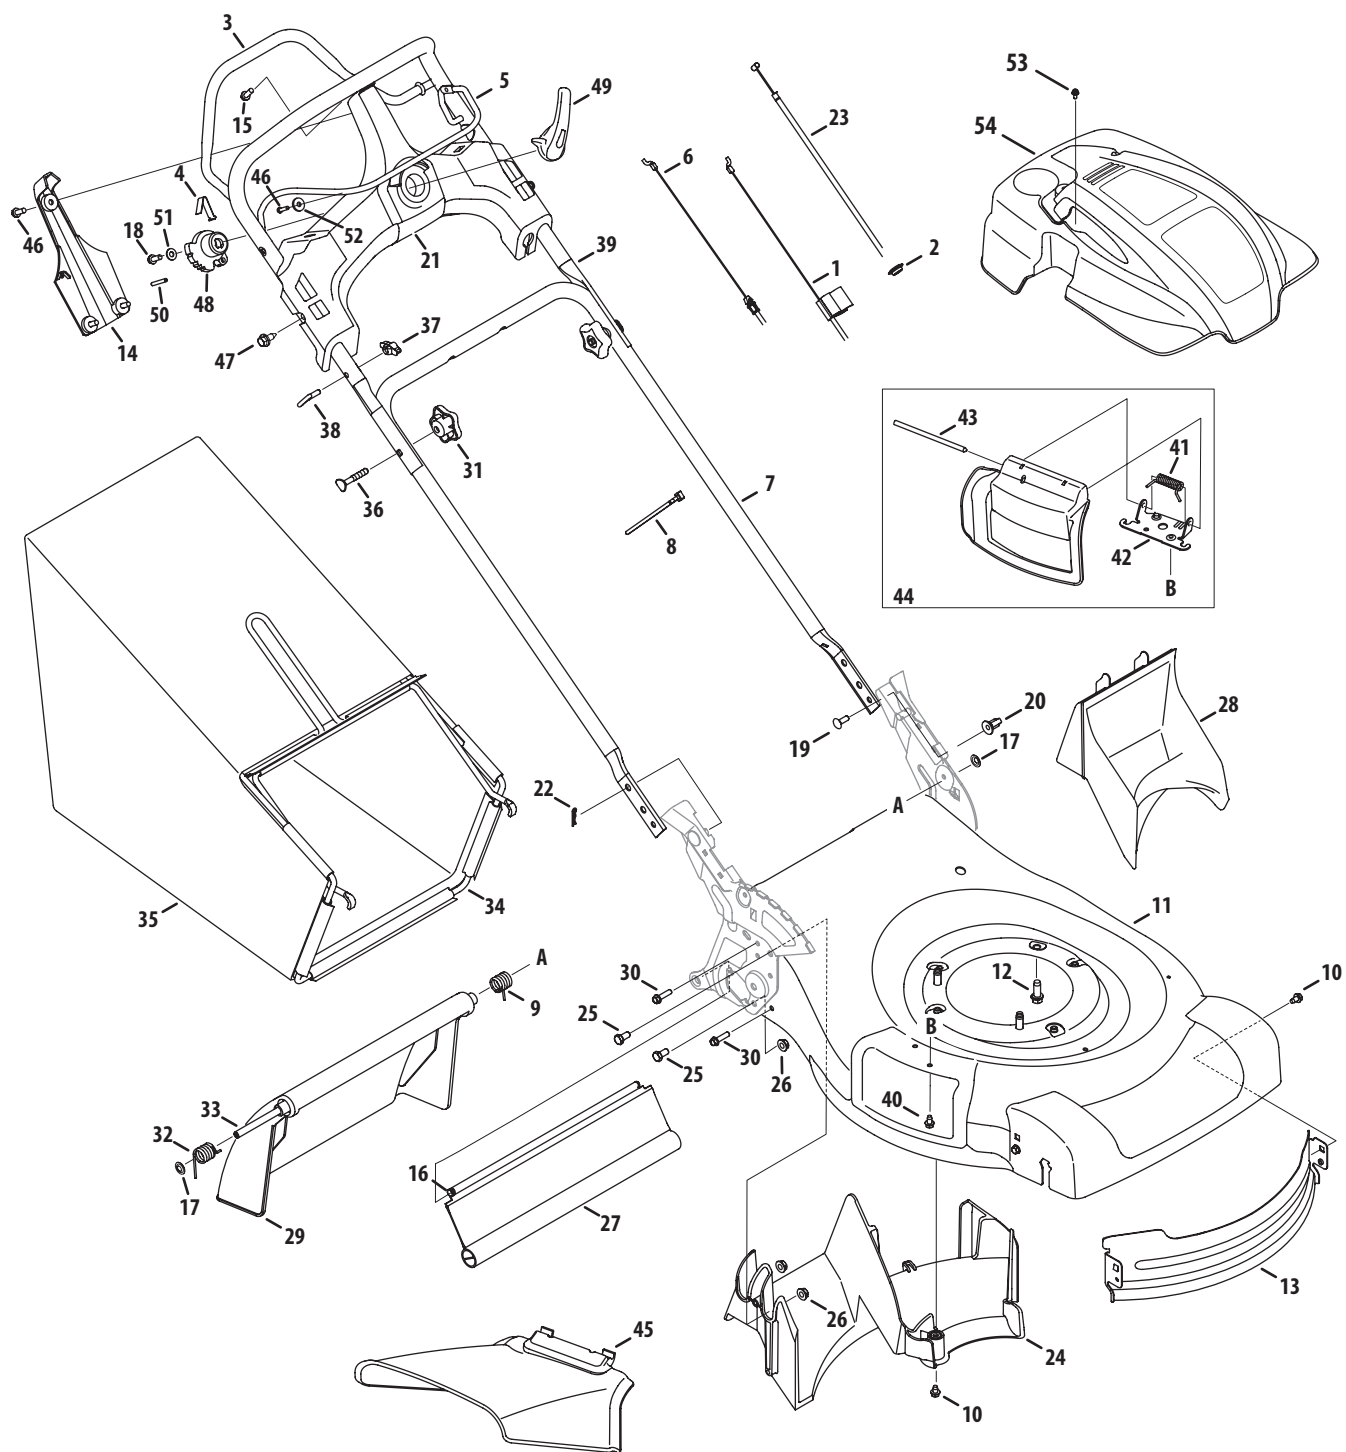


Ref No.	Part Number	Description
1	946-04440	Drive Cable
2	735-04059	Rubber Grommet
3	747-04994A	Drive Control
4	732-04516	Shift Spring
5	747-04995	Blade Control
6	946-04694	Control Cable
	746-04678	Control Cable (Kaw.)
7	749-04557	Lower Handle
8	725-0157	Cable Tie
9	732-04535	Torsion Spring, LH
10	710-0599	TT Screw, 1/4-20 x .500
11	787-01618	21-inch Deck
12	710-0654A	TT Screw, 3/8-16 x 1.00
13	987-01790	Front Deck Baffle
14	731-06304	Variable Spd. Cont. Panel Cover
15	710-0642	Screw, TT, 1/4-20 x .750
16	710-0779A	Screw, #10-16 x .500
17	726-0201	Nut, Speed
18	710-0895	Screw, 1/4-15 x .750
19	710-0703	Carriage Bolt, 1/4-20
20	912-0397	Wing Nut
21	631-04323	Variable Speed Control Panel
22	914-0104	Cotter Pin
23	946-04439A	Variable Speed Cable
24	731-06173	Rear Baffle
25	710-3025	Screw, 5/16-18 x .625
26	712-04063	Flange Lock Nut, 5/16-18
27	731-05462A	Trail shield

Ref No.	Part Number	Description
28	731-05157	Mulch Plug
29	731-05702A	Rear Door
30	710-1241	Screw, 1/4-15 x 1.00
31	720-04072A	Star Knob
32	732-04534	Torsion Spring, RH
33	747-05034	Door Rod
34	647-04051B	Grass Catcher Frame
35	664-04135	Grass Catcher
36	710-1174	Carriage Bolt, 5/16-18 x 2.00
37	720-0279	Wing Nut
38	710-1205	Eye Bolt
39	749-04607	Upper Handle
40	710-05073	Screw, 1/4-20 x .500
41	732-1014C	Torsion Spring
42	17032A	Chute Deflector Adapter
43	747-0710A	Hinge Pin
44	987-02055	Mulch Plug Assembly
45	731-04177	Side Discharge Chute
46	710-04373A	Screw, #12-16 x .75
47	710-0896	Screw, AB, 1/4-14 x .625
48	731-06189	4 Speed Actuator
49	731-06193A	Speed Selector Level
50	715-04073	Dowel Pin
51	936-0275	Washer, Flat, .344 x .688 x .065
52	736-3000	Washer, Flat, .250 x .750 x .119
53	710-04744†	Screw, #12-16 x 1.00
54	931-04232B†	Engine Shroud

† If Equipped


Model CC 860

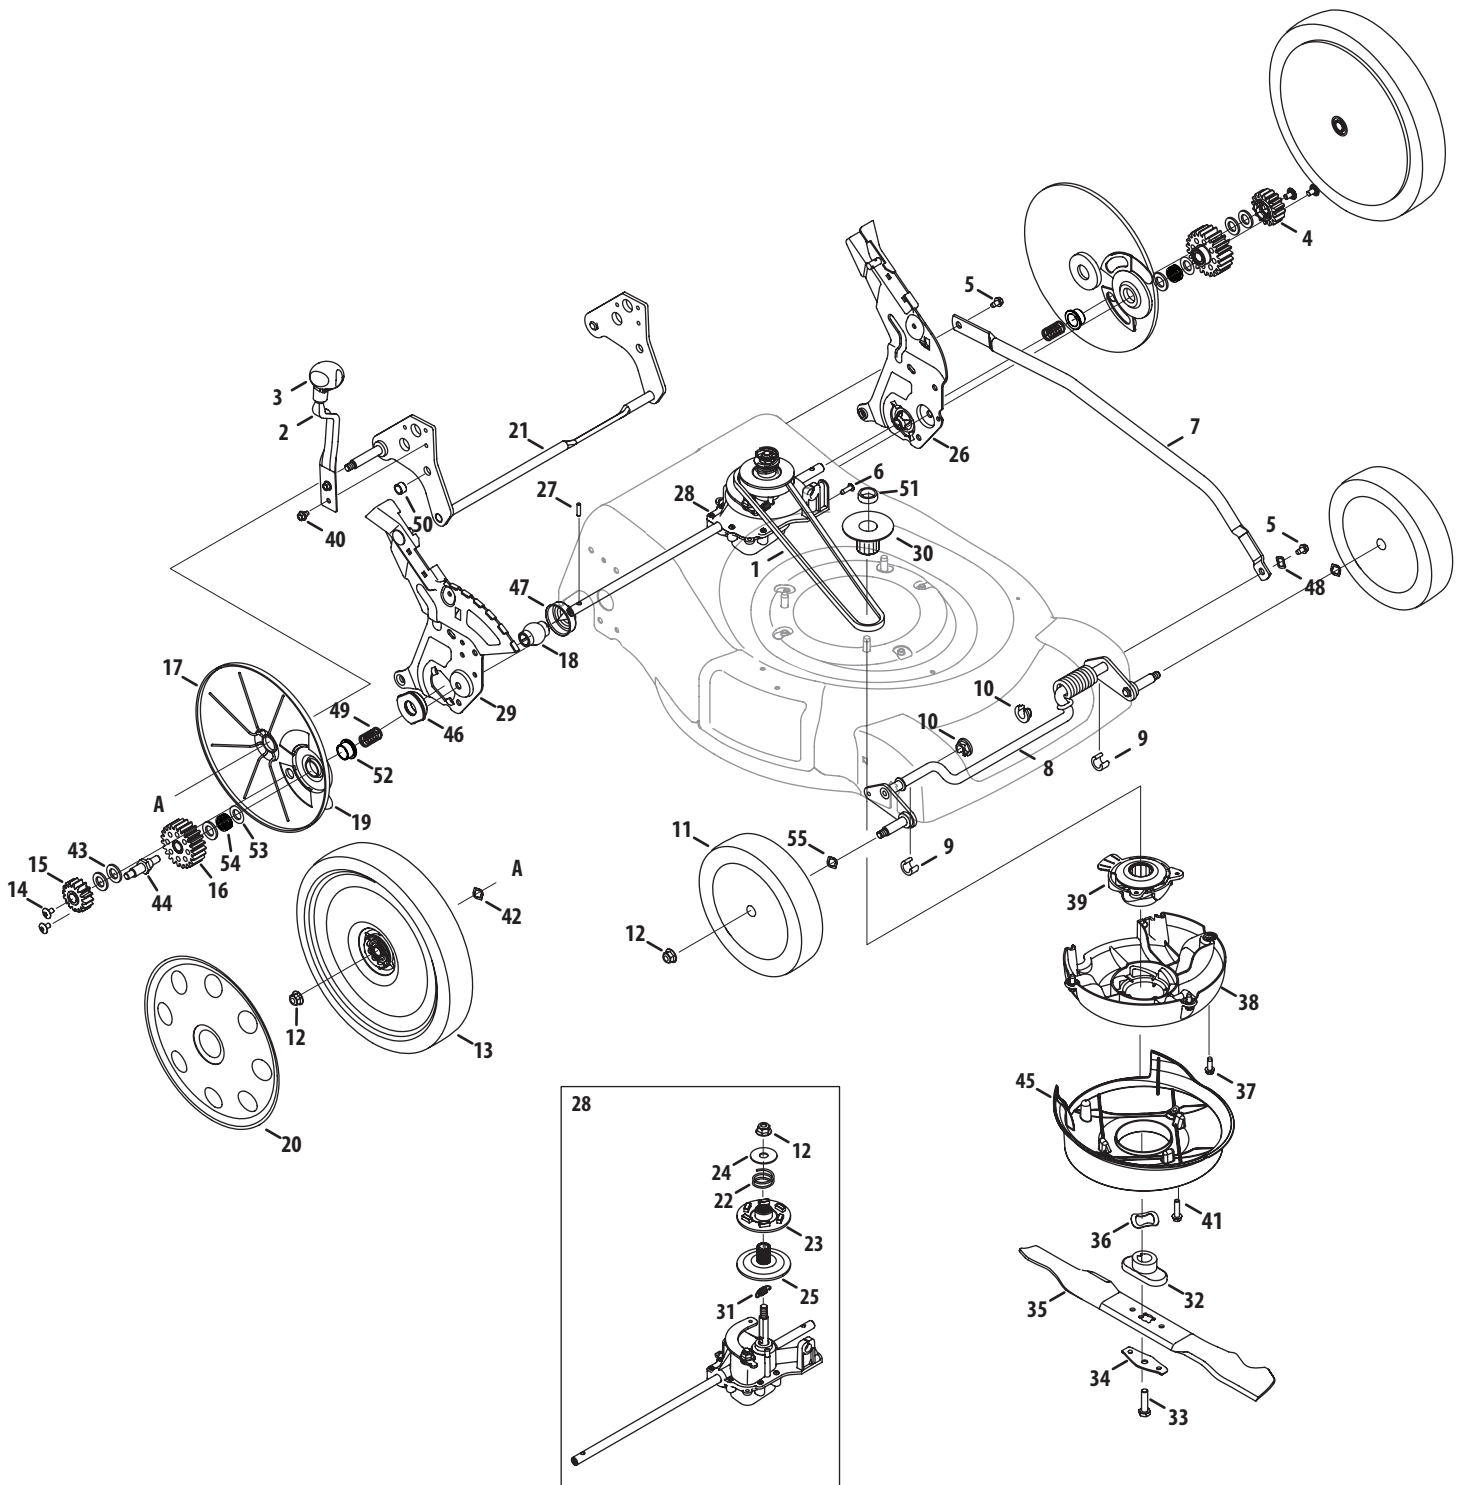

Ref No.	Part Number	Description
1	954-04176A	V-Belt
2	732-04480A	Spring Lever
3	720-04096	Height Adjuster Knob
4	917-04577A	Spur Gear, 16T - LH
5	738-04278	Shldr. Screw, 1/4-20 x 0.50
6	710-0895	Screw, 1/4-15 x .750
7	749-04414B	Cross Bracket
8	687-02367B	Front Bracket Assembly
9	731-05470	Clip Spacer
10	741-04136B	Split Hex Flange Bearing
11	734-04549	Front Wheel
12	712-04065	Flange Lock Nut, 3/8-16
13	934-04404	Rear Wheel
14	710-04531	Screw, 1/4-20 x .39
15	917-04578A	Spur Gear, 16T - RH
16	917-04678	Gear, Spur, 23T
17	731-06145C	Wheel Dust Cover
18	741-0604A	Bearing Sleeve
19	787-01645A	Dust Cover Seal Plate
20	731-07649	Hub Cap
21	687-02390	Rear Bracket Assembly
22	732-04630	Compression Spring
23	756-04316A	Upper Pulley
24	936-0406	Flat Washer, .442 x 1.38 x .060
25	756-04317A	Lower Pulley
26	987-02503	Handle Bracket Assembly LH (Includes Ref. #'s 18, 46, & 47)
27	915-0221	Dowel Pin
28	918-04826A	Transmission Assembly

Ref No.	Part Number	Description
29	987-02537	Handle Bracket Assembly RH (Includes Ref. #'s 18, 46, & 47)
30	756-04315A	Pulley, Half
31	732-04313	Extension Spring
32	748-0376E	Blade Adapter
33	710-1044	Screw, 3/8-24 x 1.50
34	736-0524B	Blade Bell Support
35	942-0741A	21" Mulching Blade
36	936-0526	Washer, Wave, 1.38 x .88 x .029
37	710-0599	TT Screw, 1/4-20 x .500
38	731-06112A	Engine Baffle
39	956-04046	Lower Pulley Assembly
40	710-0653	Screw, TT, 1/4-20 x .375
41	710-04774	Screw, 1/4-15 x 1.25
42	736-0182	Washer, Sprg, .500 x 1.00 x .022
43	936-0272	Washer, Flat, .510 x 1.00 x .060
44	711-05040	Shf., .500 Dia.
45	731-06284	Baffle
46	748-04177	Bearing Support
47	732-0708	Bearing Retainer
48	936-0286	Wshr, Wave, .390 ID x .750 OD
49	732-04557	Sprg, Comp., .63 OD x 1.00 Lg.
50	750-05061	Spacer, .690 x .870 x .150
51	750-05022	Spcr., 7/8 x 1.265 x .27 Lg.
	750-05009	Spcr., 7/8 x 1.125 x .305 Lg. (Kaw.)
52	750-05250	Spcr., Flg., .51 ID x .58 OD
53	936-0369	Washer, Flat, .508 x 1.00 x .020
54	732-04650	Spr, Wave
55	936-0504	Wshr, Wave, .510 x .750 x .017


Model CC 94M

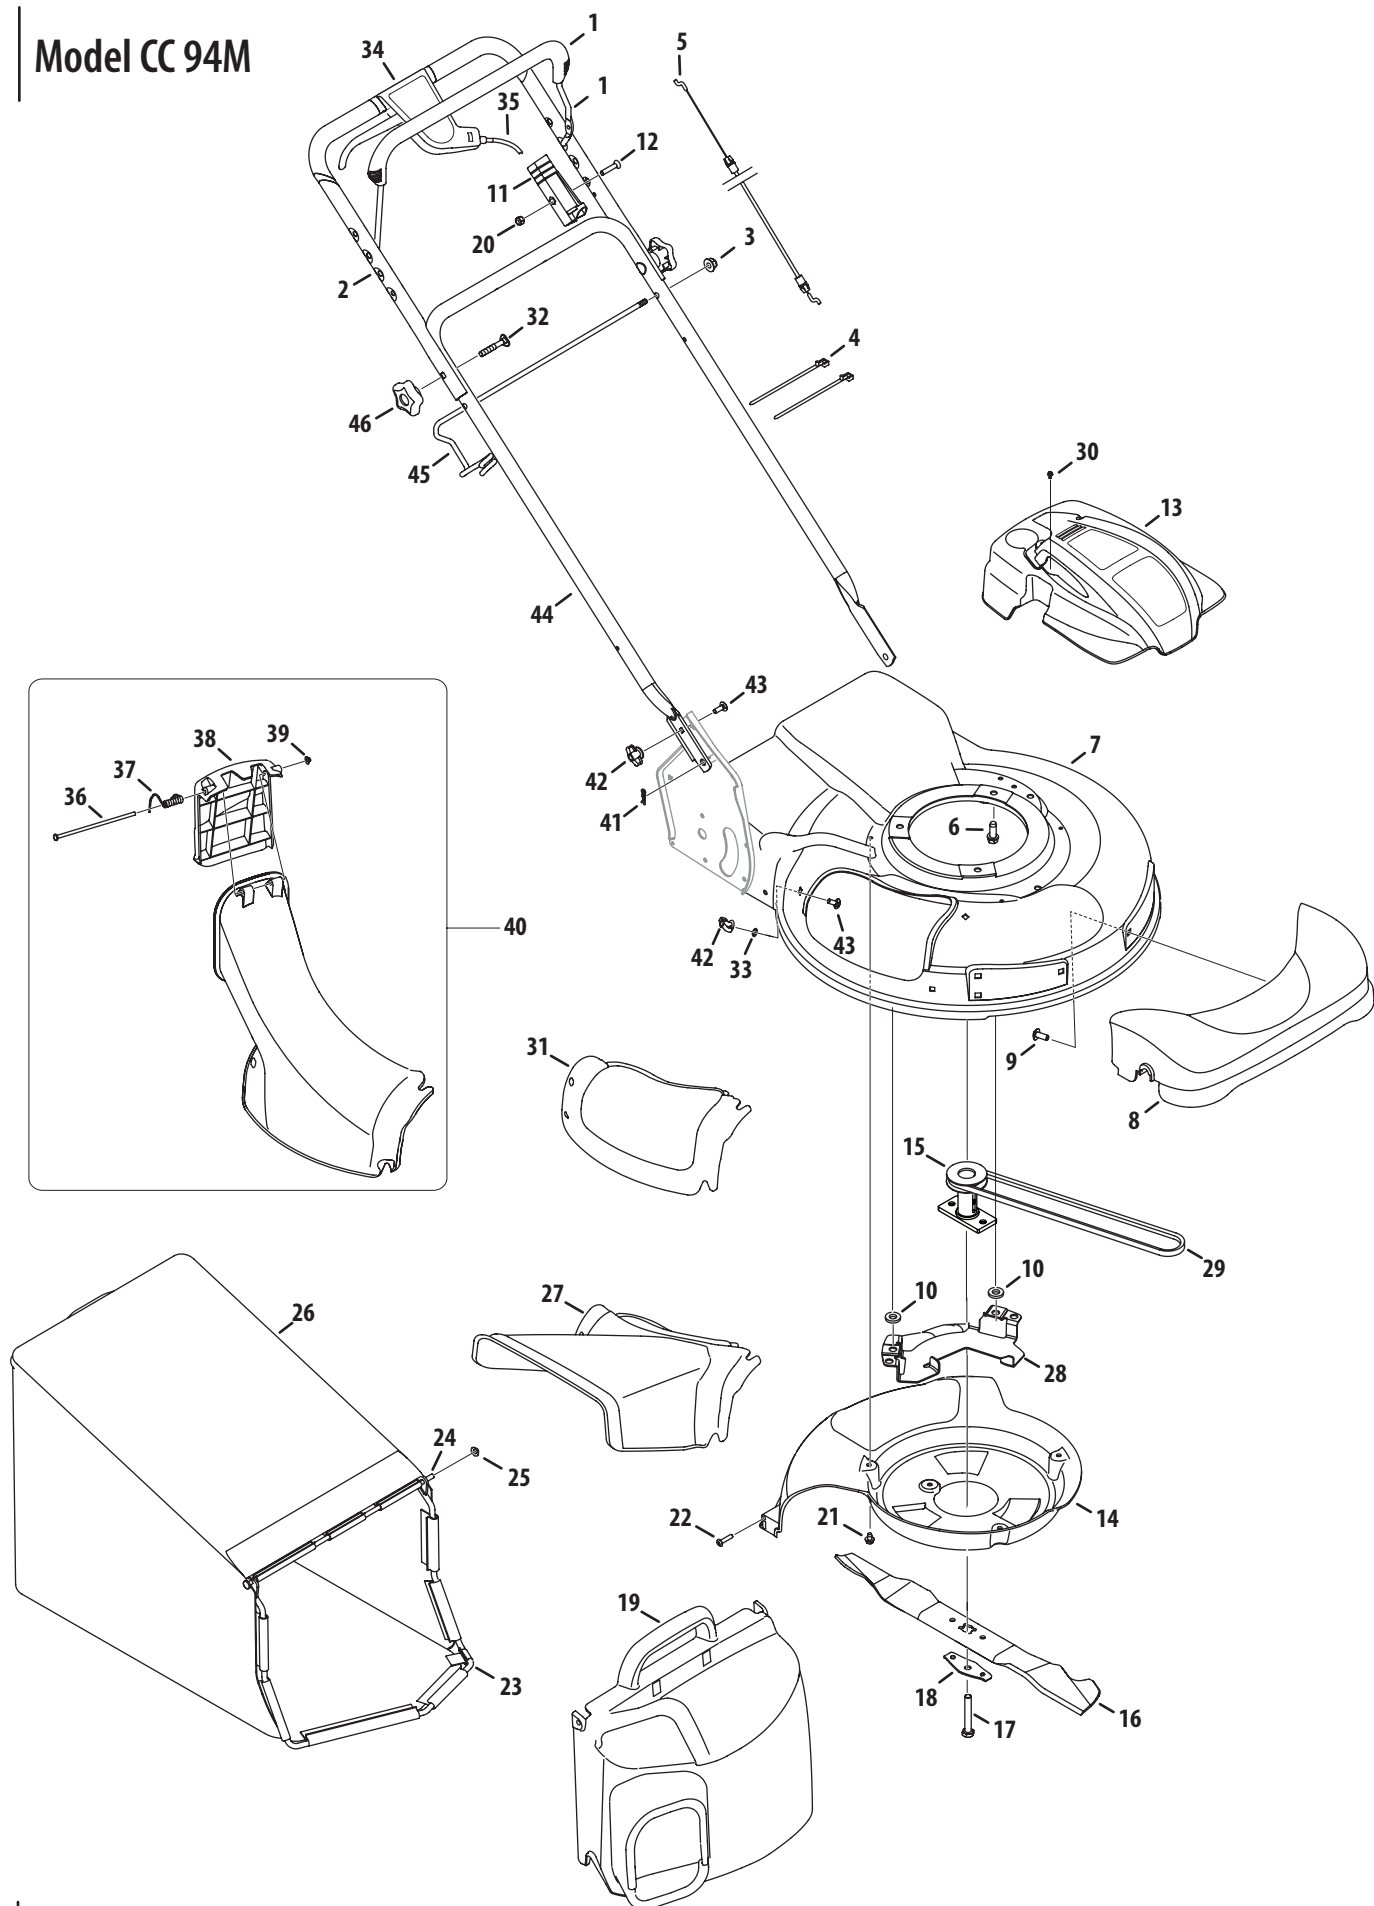

Ref No.	Part Number	Description
1	647-04008	Blade Control Assembly
2	749-04482	Upper Handle
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	746-04532	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	787-01948	21-inch Deck
8	731-1836	Front Axle Cover
9	710-1242	HL Screw, 5/16-14 x .750
10	736-3010	Washer, Flat, .407 x .812 x .135
11	731-06749	Control Cable Mount
12	710-0606	Screw, 1/4-20 x 1.50
13	931-04232B	Engine Shroud
14	631-04564	Engine Baffle
15	687-02195A	Blade Adapter
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-04064	Flange Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937	Grass Bag Frame

Ref No.	Part Number	Description
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-04112	Grass Bag
27	731-1832	Side Discharge Chute
28	782-9063A	Belt Keeper
29	954-0460	V-Belt
30	710-04744	Screw, #12-16 x 1.00
31	931-1833A	Mulch Cover
32	710-1174	Carriage Bolt 5/16-18 x 2
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	946-0711B	Drive Cable
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut
43	710-0703	Carriage Screw 1/4-20 x .75
44	749-0907B	Lower Handle
45	747-0940A	Grass Bag Support Rod
46	720-04072A	Star Knob


Model CC 94M

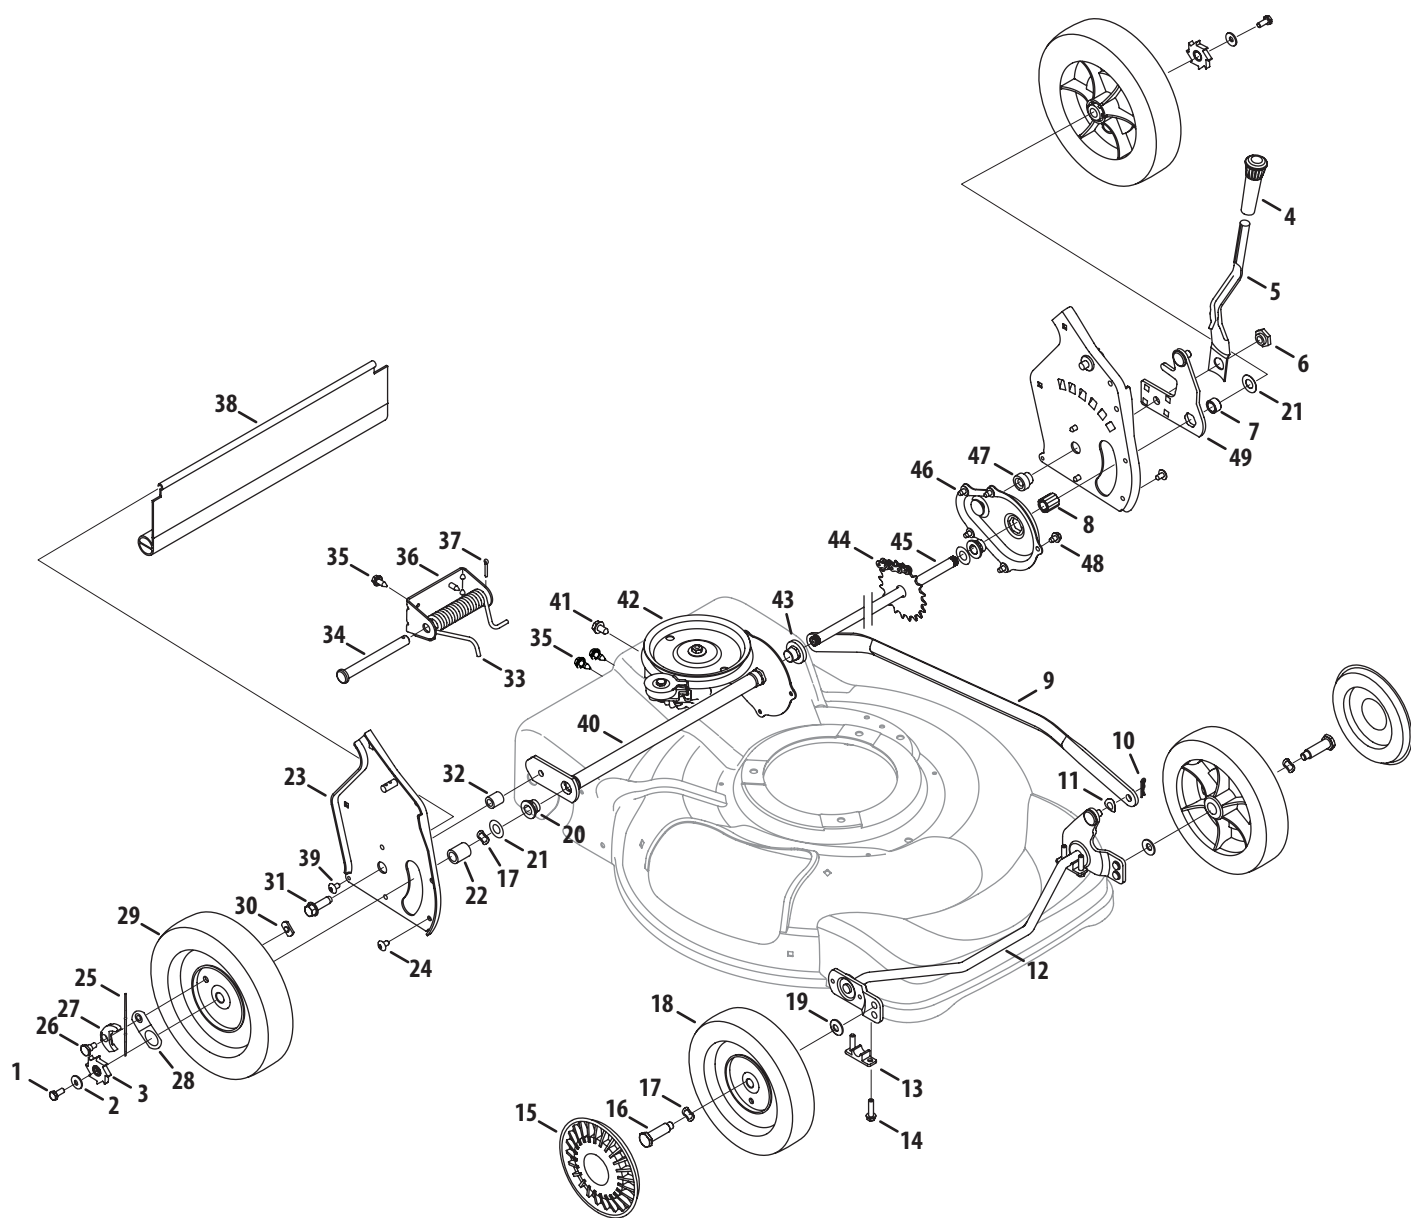

Ref No.	Part Number	Description
1	710-0751	HH Cap Screw 1/4-20 x .620
2	736-0270	Bell Washer .265 x .75 x .062
3	948-0318	Wheel Ratchet
4	720-0223	Grip
5	732-0803A	Spring Lever
6	938-0529	Shoulder Nut
7	750-0515	Spacer .51 x .70 x .38
8	741-0978	Hex Sleeve Bearing
9	782-0565	Single Lever Control Arm
10	914-0104	Hairpin Clip
11	936-0286	Bowed Washer
12	611-0064	Front Axle Assembly
13	741-0492A	Block Bushing
14	710-1241	Hex Screw 1/4-15 x 1
15	731-07048	Hubcap
16	938-0102	Shoulder Scr., .498x1.445x3/8-16
17	936-0504	Wave Washer .510 x .750 x .017
18	734-04226A	Front Wheel 8 x 2.125 COG
19	736-0105	Bell Washer .375 x .870 x .063
20	741-0324A	Hex Flange Bearing
21	936-0369	Flat Washer .508 x 1 x .020
22	950-0151	Spacer .550 x .755 x 1.1
23	687-02494	Handle Bracket Assy RH
	687-02495	Handle Bracket Assy LH
24	710-1348	AB Screw 1/4-14 x .50
25	10622BP	Plastic Ratchet Spring

Ref No.	Part Number	Description
26	938-0137A	Shoulder Scr., .340x.285x1/4-20
27	748-0381	Pawl - RH
	948-0188B	Pawl - LH
28	16855	Ratchet Pawl Plate
29	734-2010A	Rear Wheel 9 x 2.125 Rwd PM
30	912-0414	Weld Nut
31	710-1315	TT Screw 3/8-16 x 1.25
32	750-0807	Spacer .385 x .625 x .700
33	732-0832	Torsion Spring RH
34	911-0835	Clevis Pin .500 x 4.62
35	710-1652	TT Screw 1/4-20 x .625
36	782-0568	Lift Assist Spring Bracket
37	914-0474	Cotter Pin
38	731-06874	Trail shield
39	710-0779A	AB Screw, #10-16 x .500
40	682-7526	Transmission Axle Assembly
41	710-0604A	TT Screw 5/16-18 x .625
42	918-0263A	Transmission
43	941-0522	Hex Flange Bearing
44	913-0453	Chain
45	938-0012	Axle Assembly RR
46	682-7528	Chain Cover Assembly
47	950-1056	Shoulder Spacer .385 x .715
48	710-0653	TT Screw, 1/4-20 x .375
49	682-0531	RR Pivot Arm Assembly


Model CC 98H

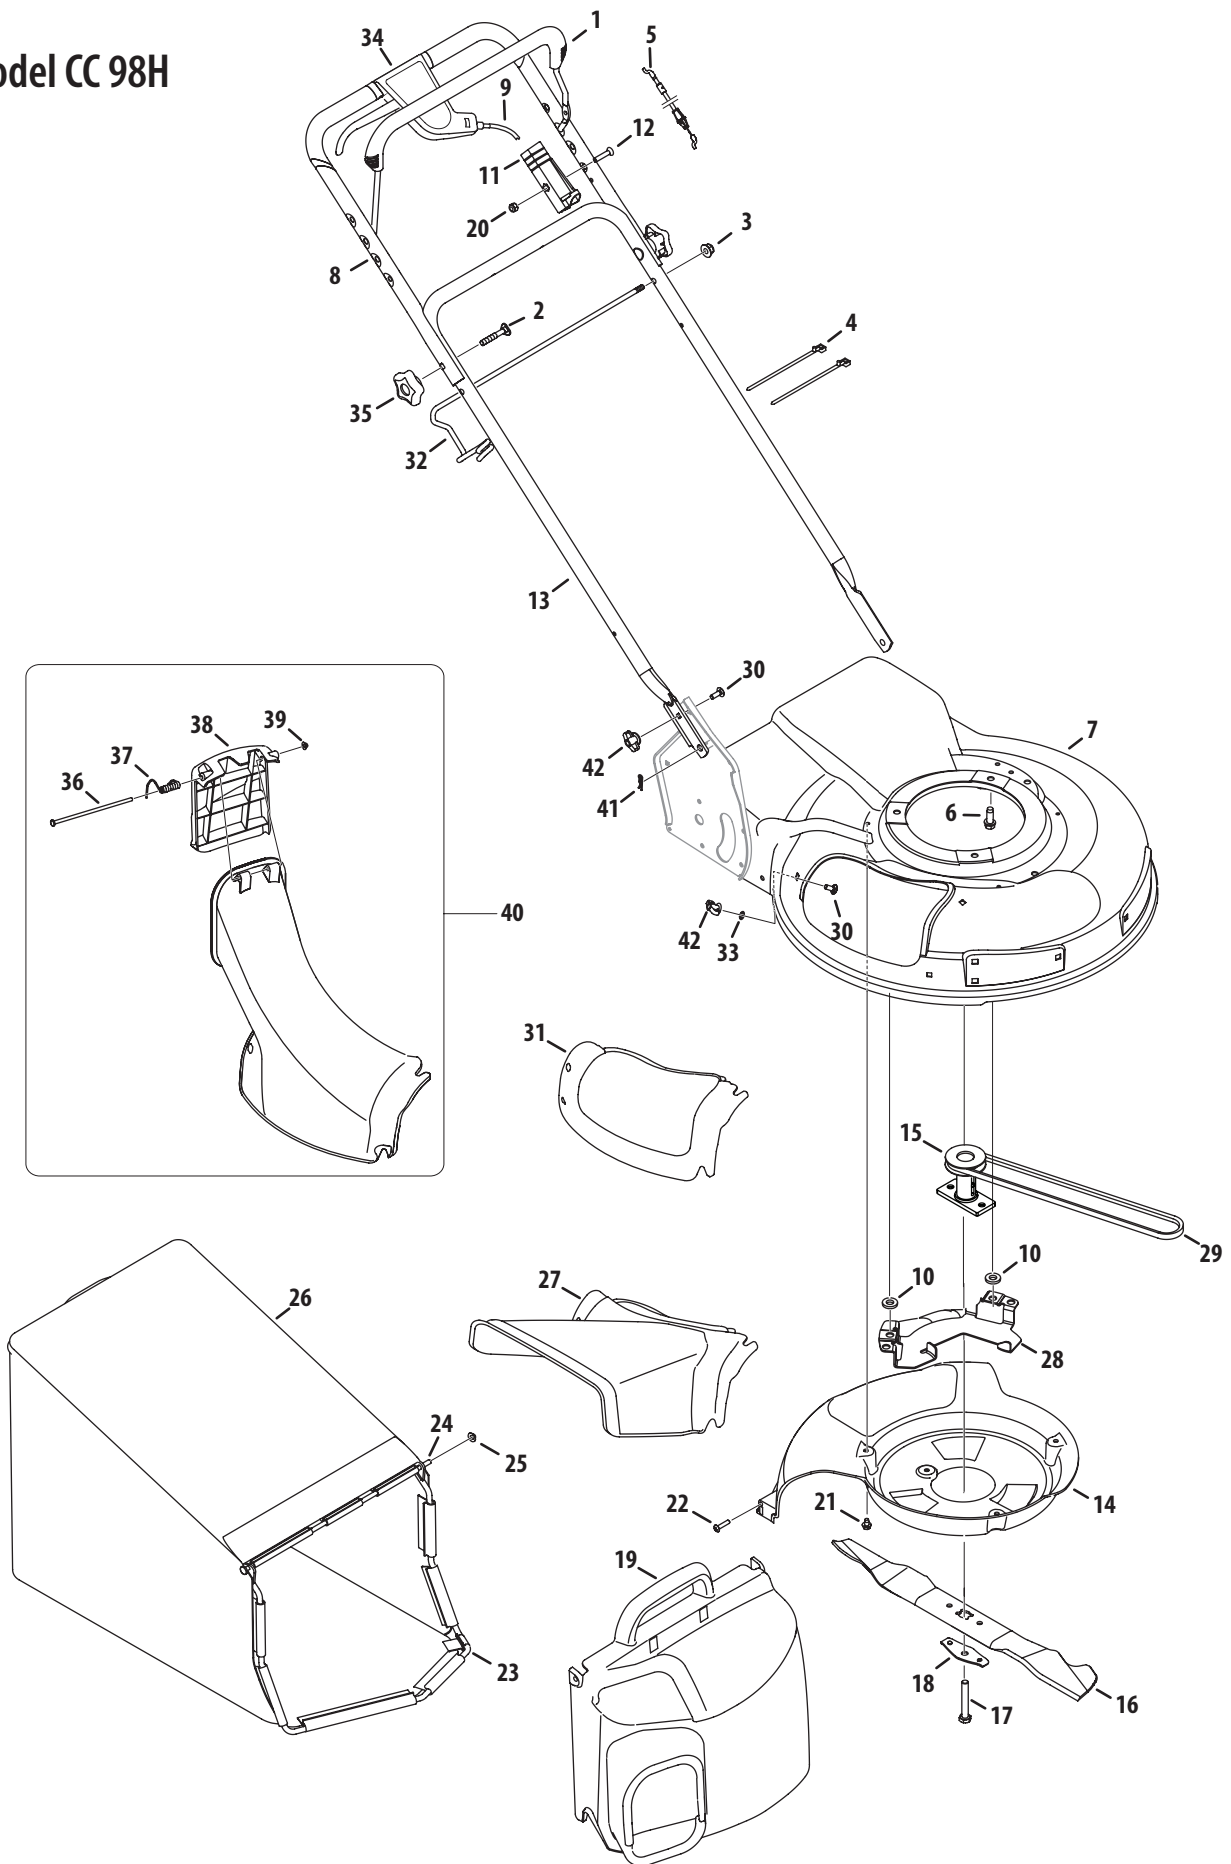

Ref No.	Part Number	Description
1	647-04008	Blade Control
2	710-1174	Carriage Bolt 5/16-18 x 2
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	946-0557	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	787-01948	21-inch Deck
8	749-0439E	Upper Handle
9	946-0711B	Drive Cable
10	736-3010	Washer, Flat, .407 x .812 x .135
11	746-0883	Control Cable Mount
12	710-1270	Screw, 1/4-20 x 1.310
13	749-0907B	Lower Handle
14	631-04564	Engine Baffle
15	987-02221	Blade Adapter
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-0324	Hex Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375

Ref No.	Part Number	Description
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937	Grass Bag Frame
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-04112	Grass Bag
27	731-1832	Side Discharge Chute
28	782-9063A	Belt Keeper
29	954-0460	V-Belt
30	710-0703	Carriage Screw 1/4-20 x .75
31	931-1833A	Mulch Cover
32	747-0940A	Grass Bag Support Rod
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	720-04072A	Star Knob
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut


Model CC 98H

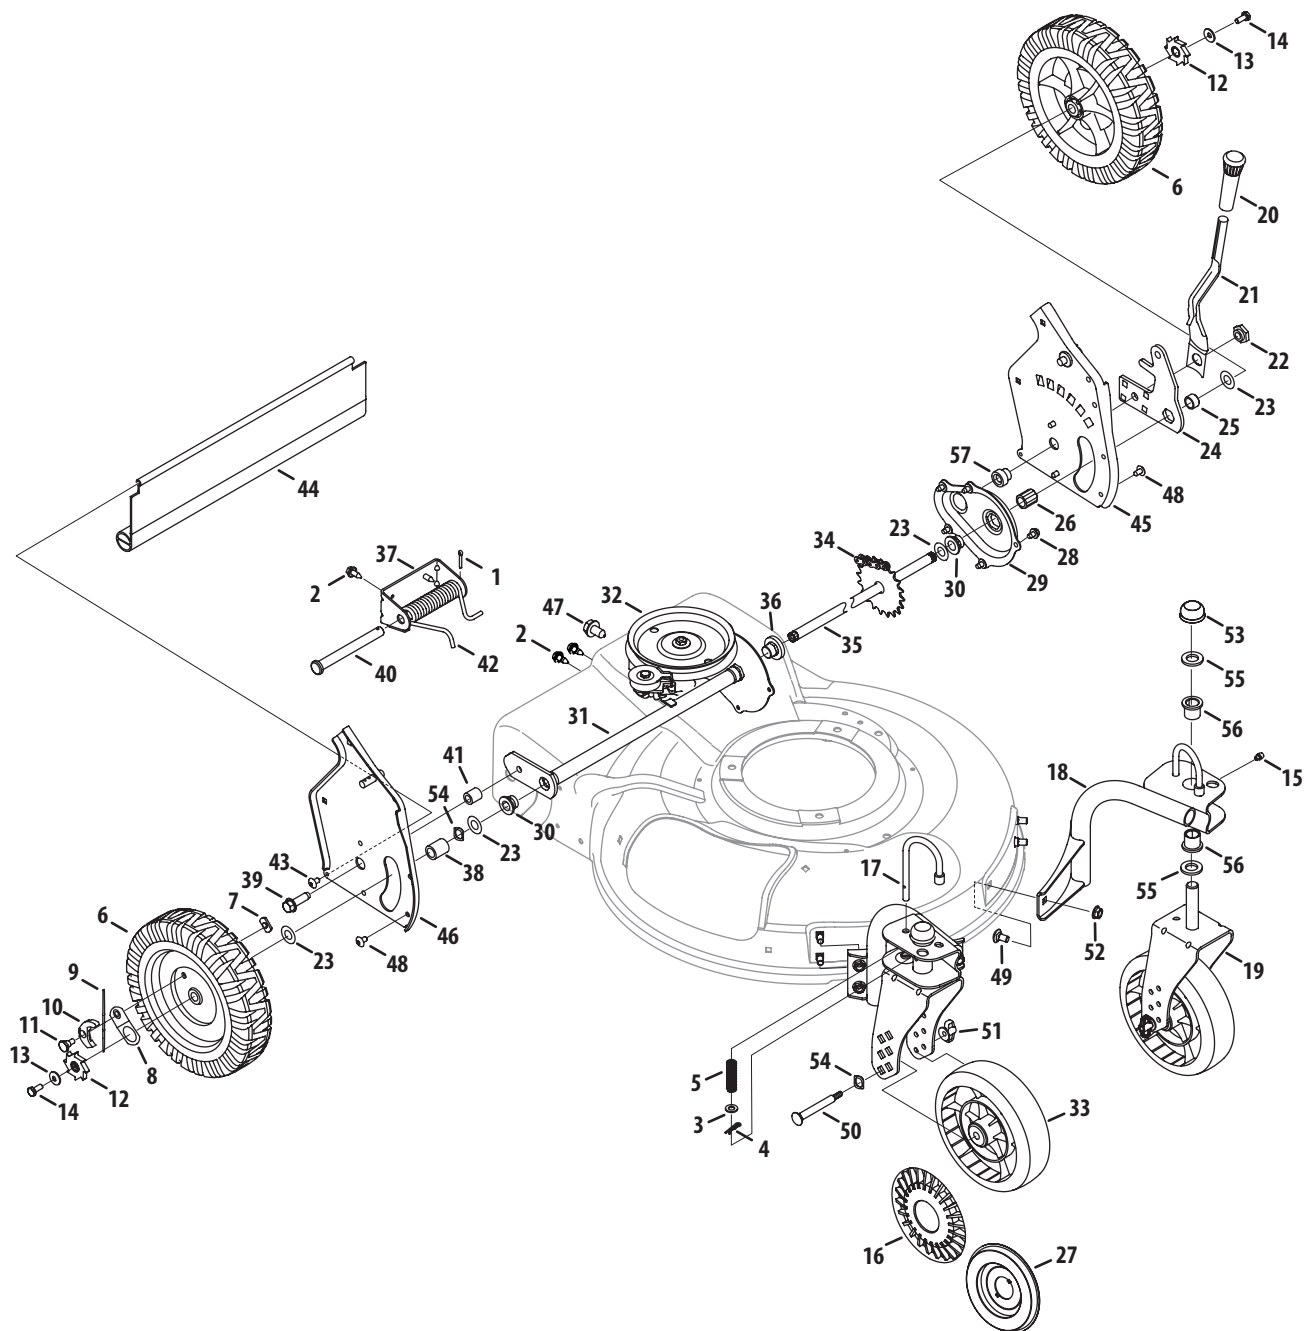

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	737-04331	Grease Fitting
16	731-1888	Hubcap - Spoke w/ Hole
17	747-0924	Wheel Pin Lock
18	682-9020A	Caster Assembly RH
	682-9021A	Caster Assembly LH
19	682-9024	Caster Bracket Assembly RH
	682-9026	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	731-07048	Hubcap - Radial Spoke

Ref No.	Part Number	Description
28	710-0653	Tap Screw 1/4-20 x .375
29	682-7528	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495	Handle Bracket Assembly - LH
46	687-02494	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0504	Wave Washer.510 ID x.750 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	950-1056	Shlder Spacer, .385ID x .715Lg


Model CC 98M

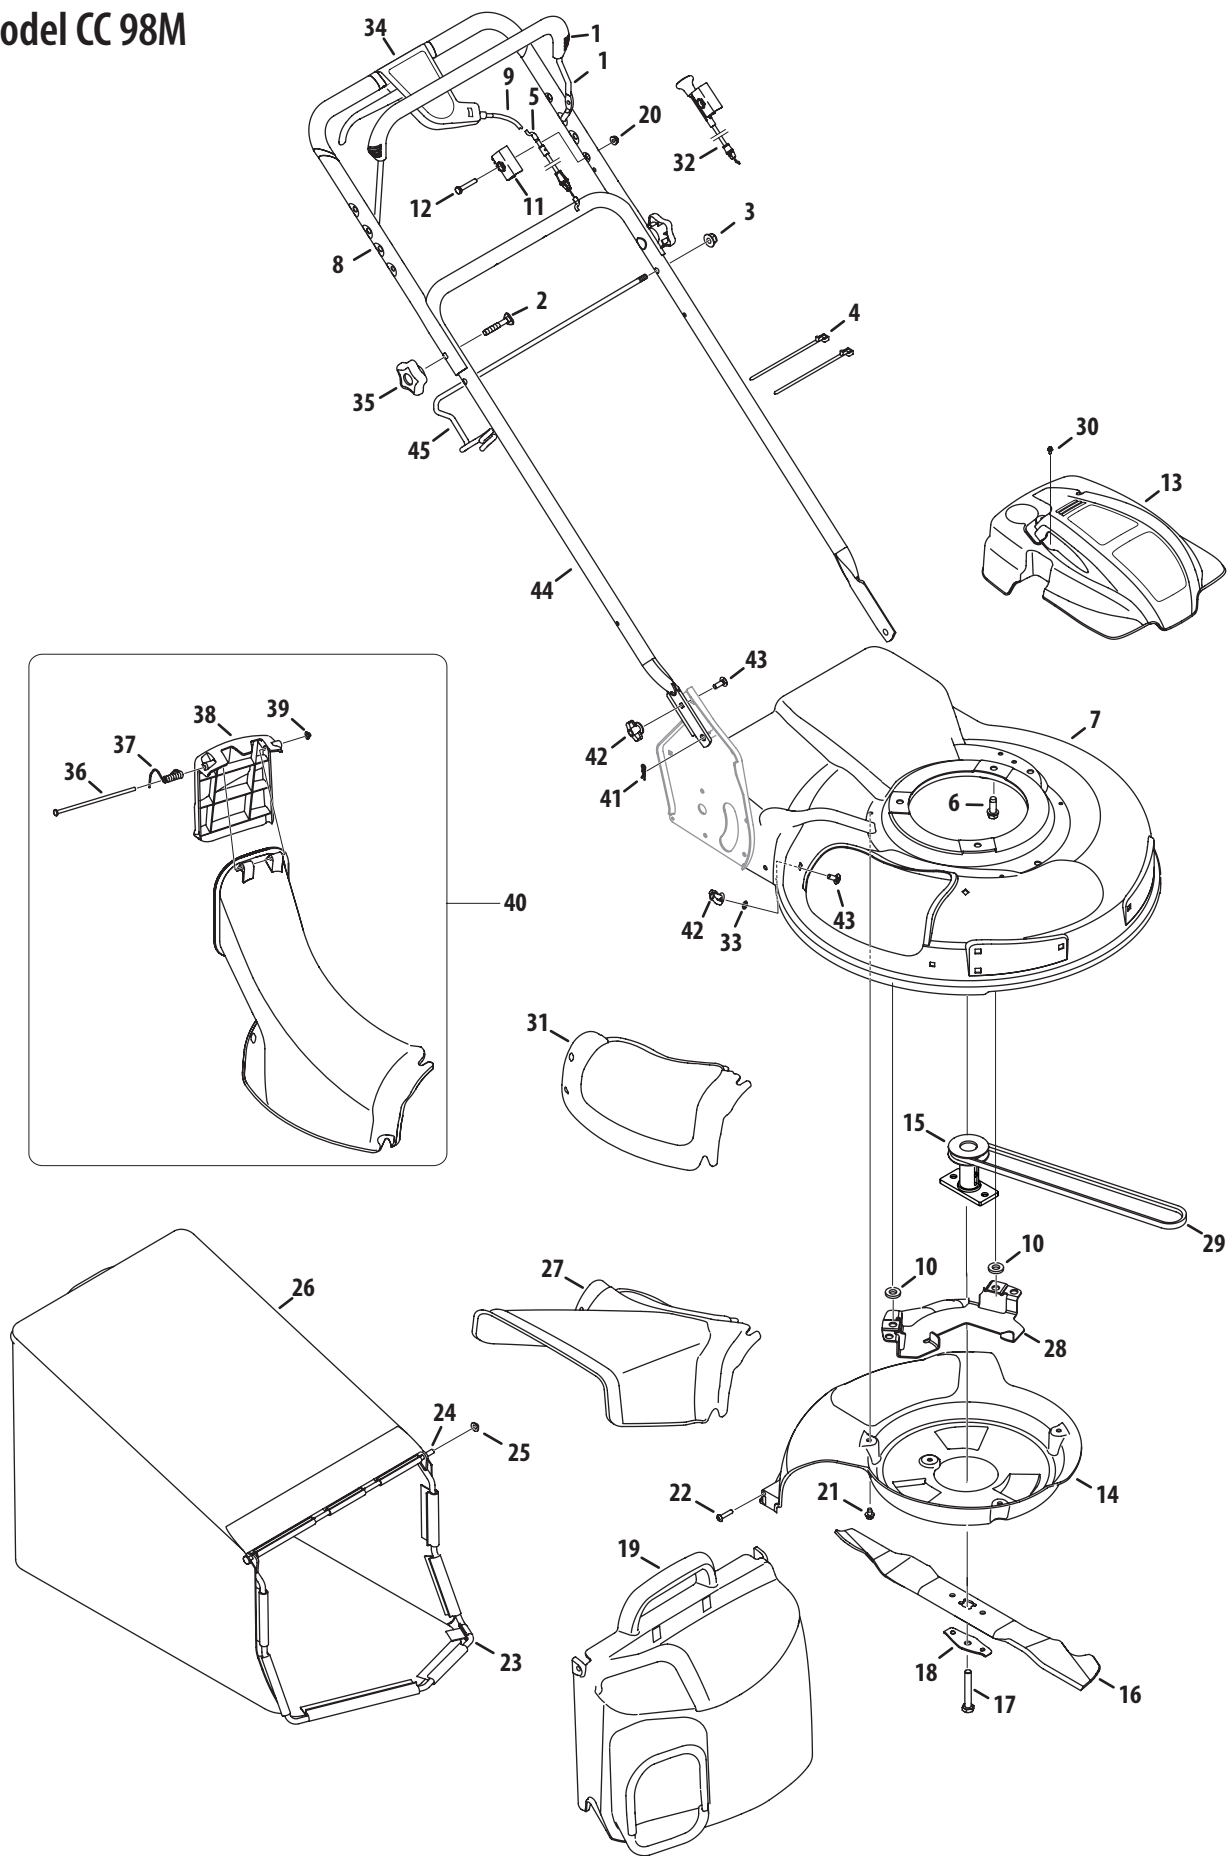

Ref No.	Part Number	Description
1	647-04008	Blade Control Assembly
2	710-1174	Carriage Bolt 5/16-18 x 2
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	746-04532	Control Cable
	946-0557	Control Cable - Kohler
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	787-01948	21-inch Deck
8	749-0439E	Upper Handle
9	946-0711B	Drive Cable
10	736-3010	Washer, Flat, .407 x .812 x .135
11	731-06749	Control Cable Mount
	746-0883	Control Cable Mount - Kohler
12	710-0606	Screw, 1/4-20 x 1.50
13	931-04232B†	Engine Shroud
14	631-04564	Engine Baffle
15	687-02195A	Blade Adapter
	987-02221	Blade Adapter - Kohler
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-04064	Flange Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375

Ref No.	Part Number	Description
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937	Grass Bag Frame
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-04112	Grass Bag Assembly
27	731-1832	Side Discharge Chute
28	782-9063A	Belt Keeper
29	954-0460	V-Belt
30	710-04744†	Screw, #12-16 x 1.00
31	931-1833A	Mulch Cover
32	946-04430A†	Choke Cable
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	720-04072A	Star Knob
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut
43	710-0703	Carriage Screw 1/4-20 x .75
44	749-0907B	Lower Handle
45	747-0940A	Grass Bag Support Rod


† If Equipped

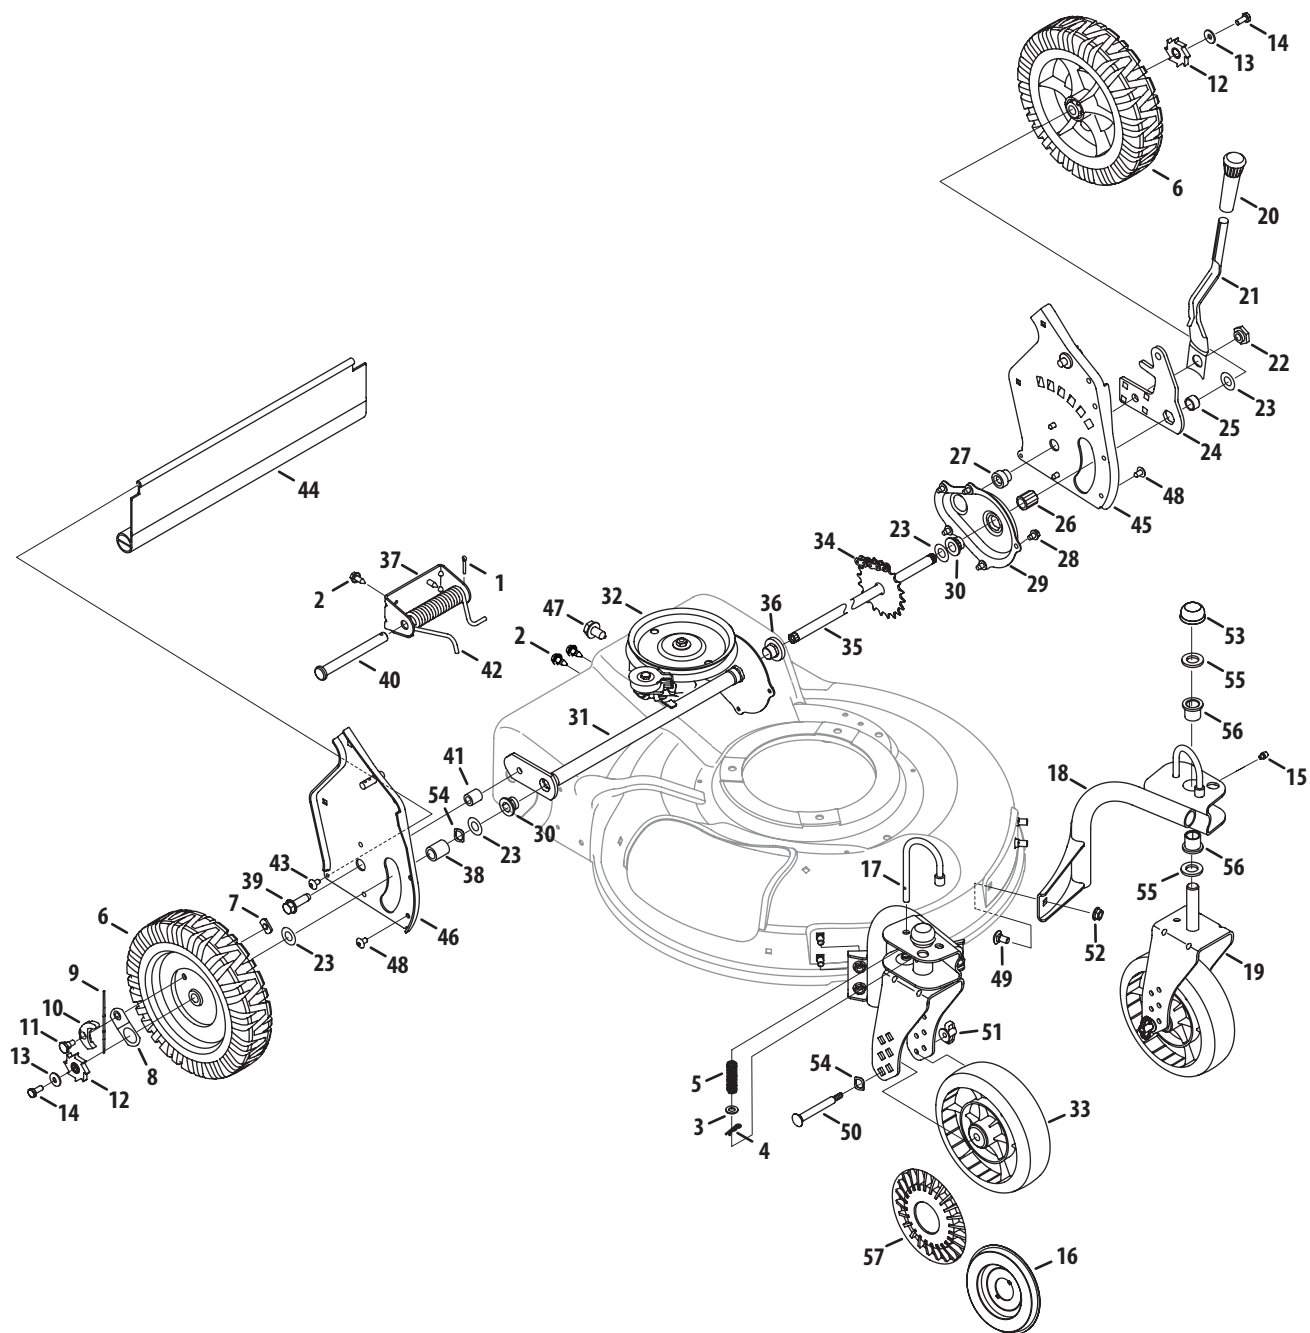

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	737-04331	Grease Fitting
16	731-07048	Hubcap - Radial Spoke
17	747-0924	Wheel Pin Lock
18	682-9020A	Caster Assembly RH
	682-9021A	Caster Assembly LH
19	682-9024	Caster Bracket Assembly RH
	682-9026	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg

Ref No.	Part Number	Description
28	710-0653	Tap Screw 1/4-20 x .375
29	682-7528	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495	Handle Bracket Assembly - LH
46	687-02494	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0504	Wave Washer.510 ID x.750 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1888	Hubcap - Spoke w/ Hole

Model CC 999 ES

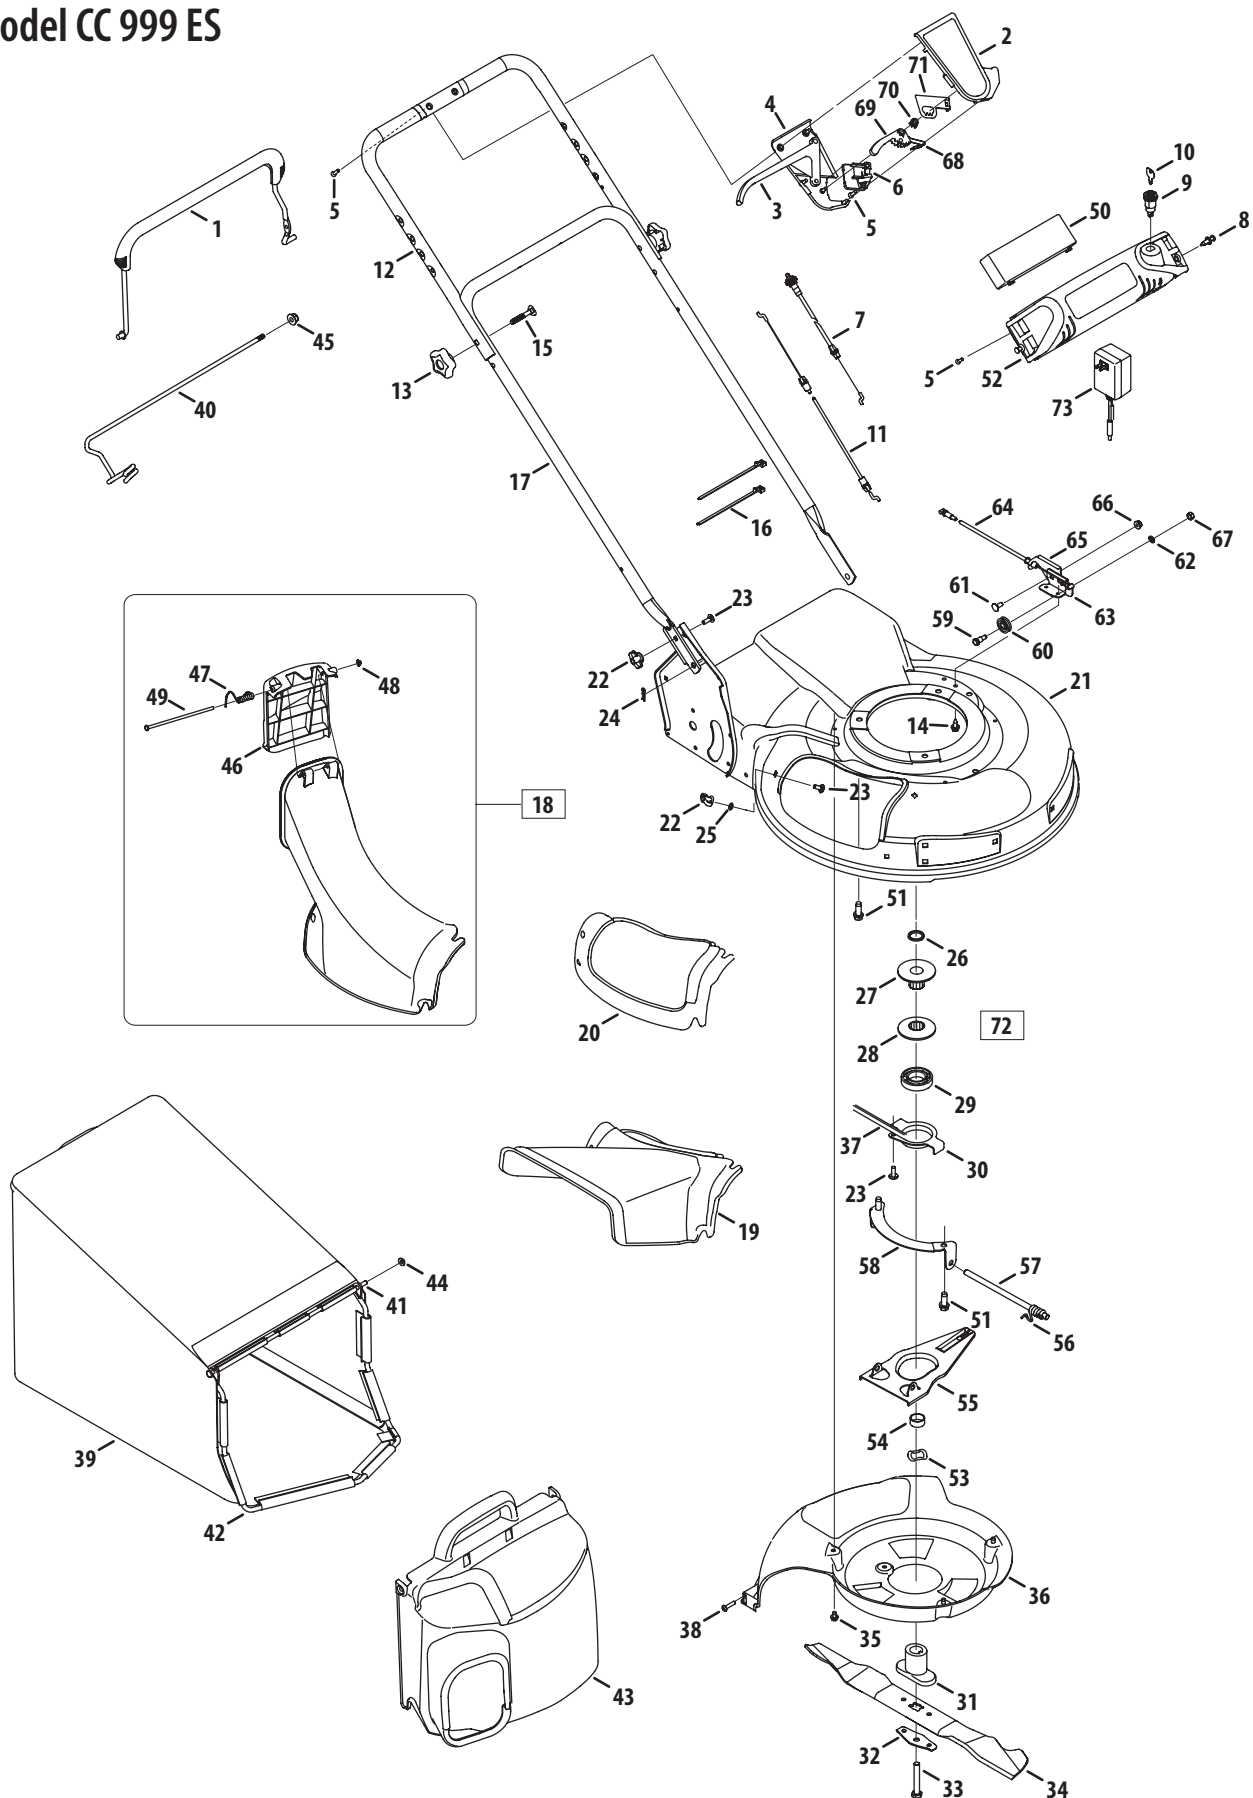


Ref No.	Part Number	Description
1	647-04008	Blade Control
2	753-0717	Upper Control Housing†
3	731-0620A	Drive Control
4	753-0717	Lower Control Housing†
5	710-1667A	C Sunk Tap Screw, #10 x.75 Lg
6	753-0717	Cable Mounting Cap†
7	946-0711B	Drive Cable
8	728-0199	Rivet
9	925-04347	Key Switch
10	925-0201	Key
11	946-04639	Control Cable
12	749-04354A	Upper Handle
13	720-04072A	Star Knob
14	710-1652	Screw, 1/4-20 x .625
15	710-1174	Carriage Bolt, 5/16-18 x 2.0
16	926-0240	Cable Tie
17	749-0907B	Lower Handle
18	931-0066	Adapter Assembly
19	731-1832	Side Discharge Chute
20	931-1833A	Mulch Cover
21	787-01948	Deck 21"
22	912-0397	Wing Nut
23	710-0703	Carriage Bolt, 1/4-20 x .75"
24	914-0104	Cotter Pin
25	726-0233	Push Nut, .25 x ID x .50 OD
26	950-1071	Sleeve Spacer, .88ID x 1.13OD
27	756-0612A	Half Pulley: 2.62 OD
28	756-0613	Half Pulley: 2.62 OD x 1.61
29	741-0545	Ball Bearing
30	682-7527	Cup
31	748-0377E	Blade Adapter
32	736-0524B	Blade Bell Support
33	710-1257	Hex Bolt, 3/8-24 x 2.5
34	942-0741A	21" Mulching Blade
35	710-0653	Screw, 1/4-20 x 3.75
36	631-04564	Engine Baffle
37	954-0460	Belt, 3/8 x 39.24

Ref No.	Part Number	Description
38	710-0895	Screw, 1/4-15 x .750
39	964-04112	Grass Catcher
40	747-0940A	Support Rod w/ Rope Guide
41	747-0939	Pivot Rod
42	747-0937	Grass Catcher Frame
43	631-0071	Grass Catcher Cover
44	926-0106	Cap Nut
45	712-04063	Flange Lock Nut, 5/16-18
46	731-1874A	Chute Door
47	732-0819	Torsion Spring
48	726-0111	Push Cap
49	747-0965	Pivot Rod
50	925-04323	12V Battery
51	710-0654A	Sems Screw, 3/8-16 x 1.00
52	925-04072	Harness Assembly
53	936-0526	Wave Washer, 1.38 ID x.88 OD
54	950-1070	Slve Spacer, .88 ID x 1.00 OD
55	782-7596A	Control Arm
56	932-0807	Torsion Spring
57	711-1114	Pivot Shaft
58	782-7597	Pivot Bracket
59	738-0924A	Shlder Screw, .375 ID x 1/4-14
60	756-0625	Cable Roller
61	710-0134	Carriage Screw, 1/4-20 x .62
62	936-0329	Lock Washer, 1/4
63	782-7575B	Cable Mounting Bracket
64	946-0939A	6 Speed Cable
65	782-7574A	Cable Adjustment Bracket
66	712-04064	Hex Nut 1/4-20
67	912-0138	Hex Nut 1/4-28
68	732-0627A	Shift Lever Spring
69	731-0924	6 Speed Shift Lever
70	913-0397	Gear Insert
71	16864	6 Spd. Rack Cable Bracket
72	956-0613A	Pulley Assembly
73	725-04329	12V Battery Charger

† Only available as part of this kit


Model CC 999 ES

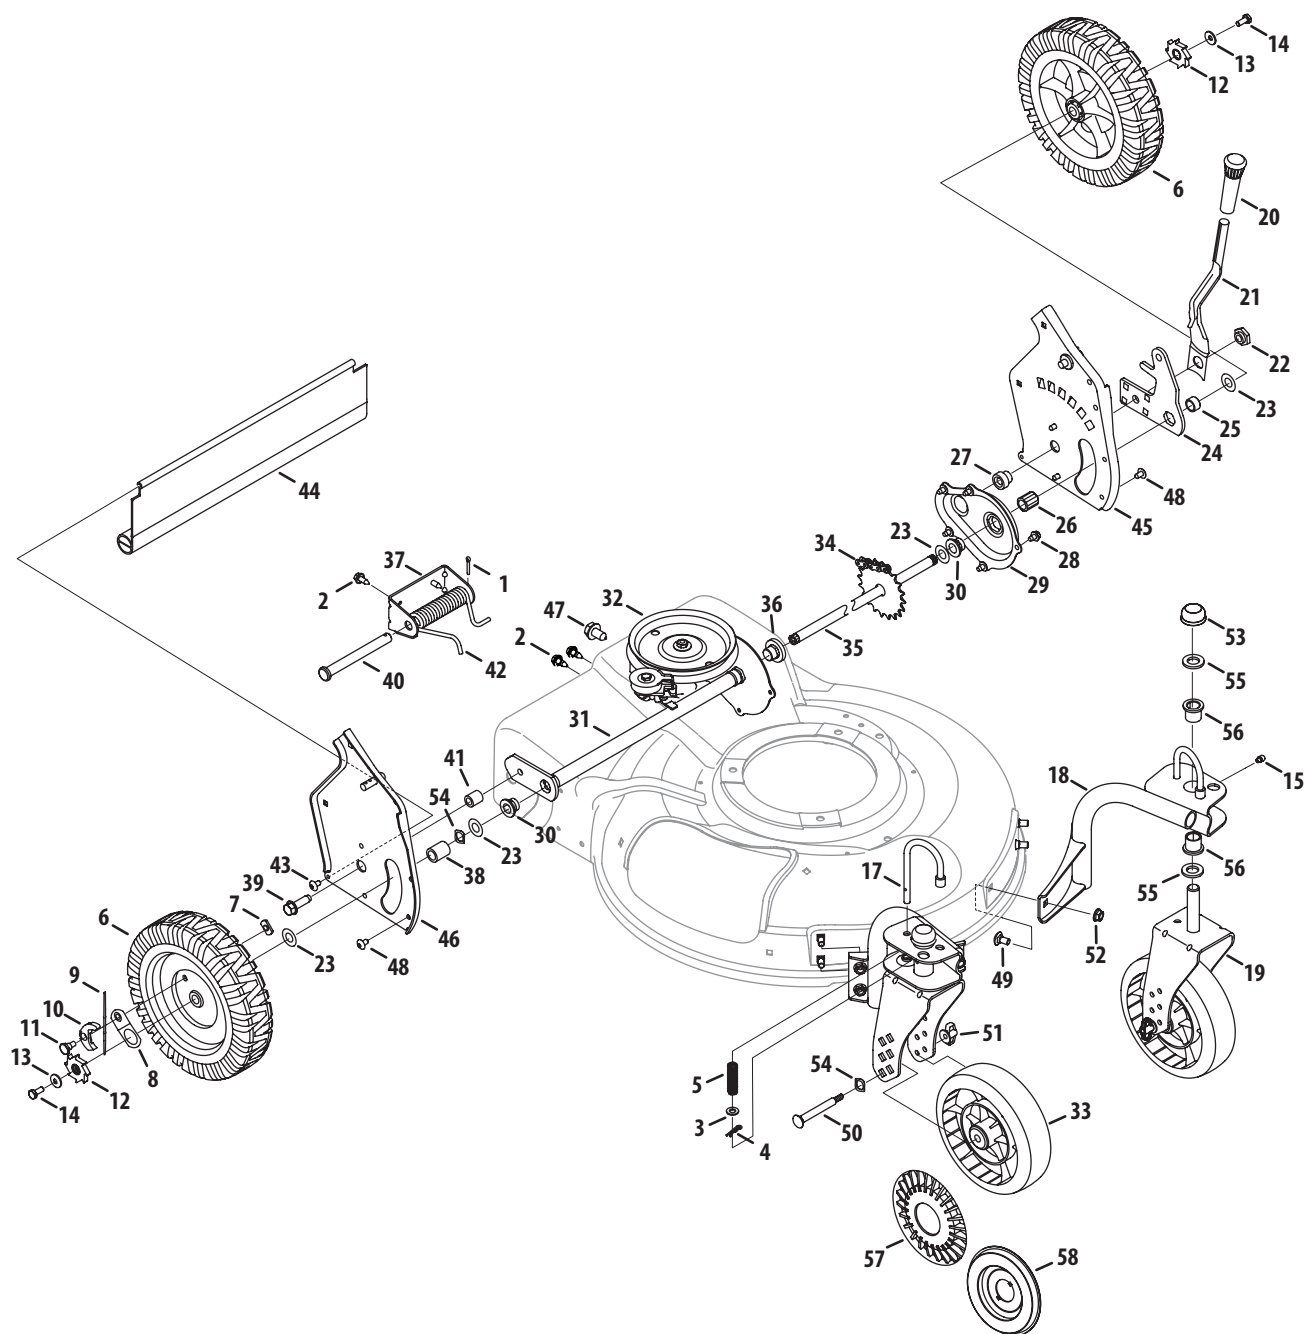

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	737-04331	Grease Fitting
16	731-07048	Hubcap - Radial Spoke
17	747-0924	Wheel Pin Lock
18	682-9020A	Caster Assembly RH
	682-9021A	Caster Assembly LH
19	682-9024	Caster Bracket Assembly RH
	682-9026	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg

Ref No.	Part Number	Description
28	710-0653	Tap Screw 1/4-20 x .375
29	682-7528	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495	Handle Bracket Assembly - LH
46	687-02494	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0504	Wave Washer.510 ID x.750 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1888	Hubcap - Spoke w/ Hole

Engine Model - 2P70MOB

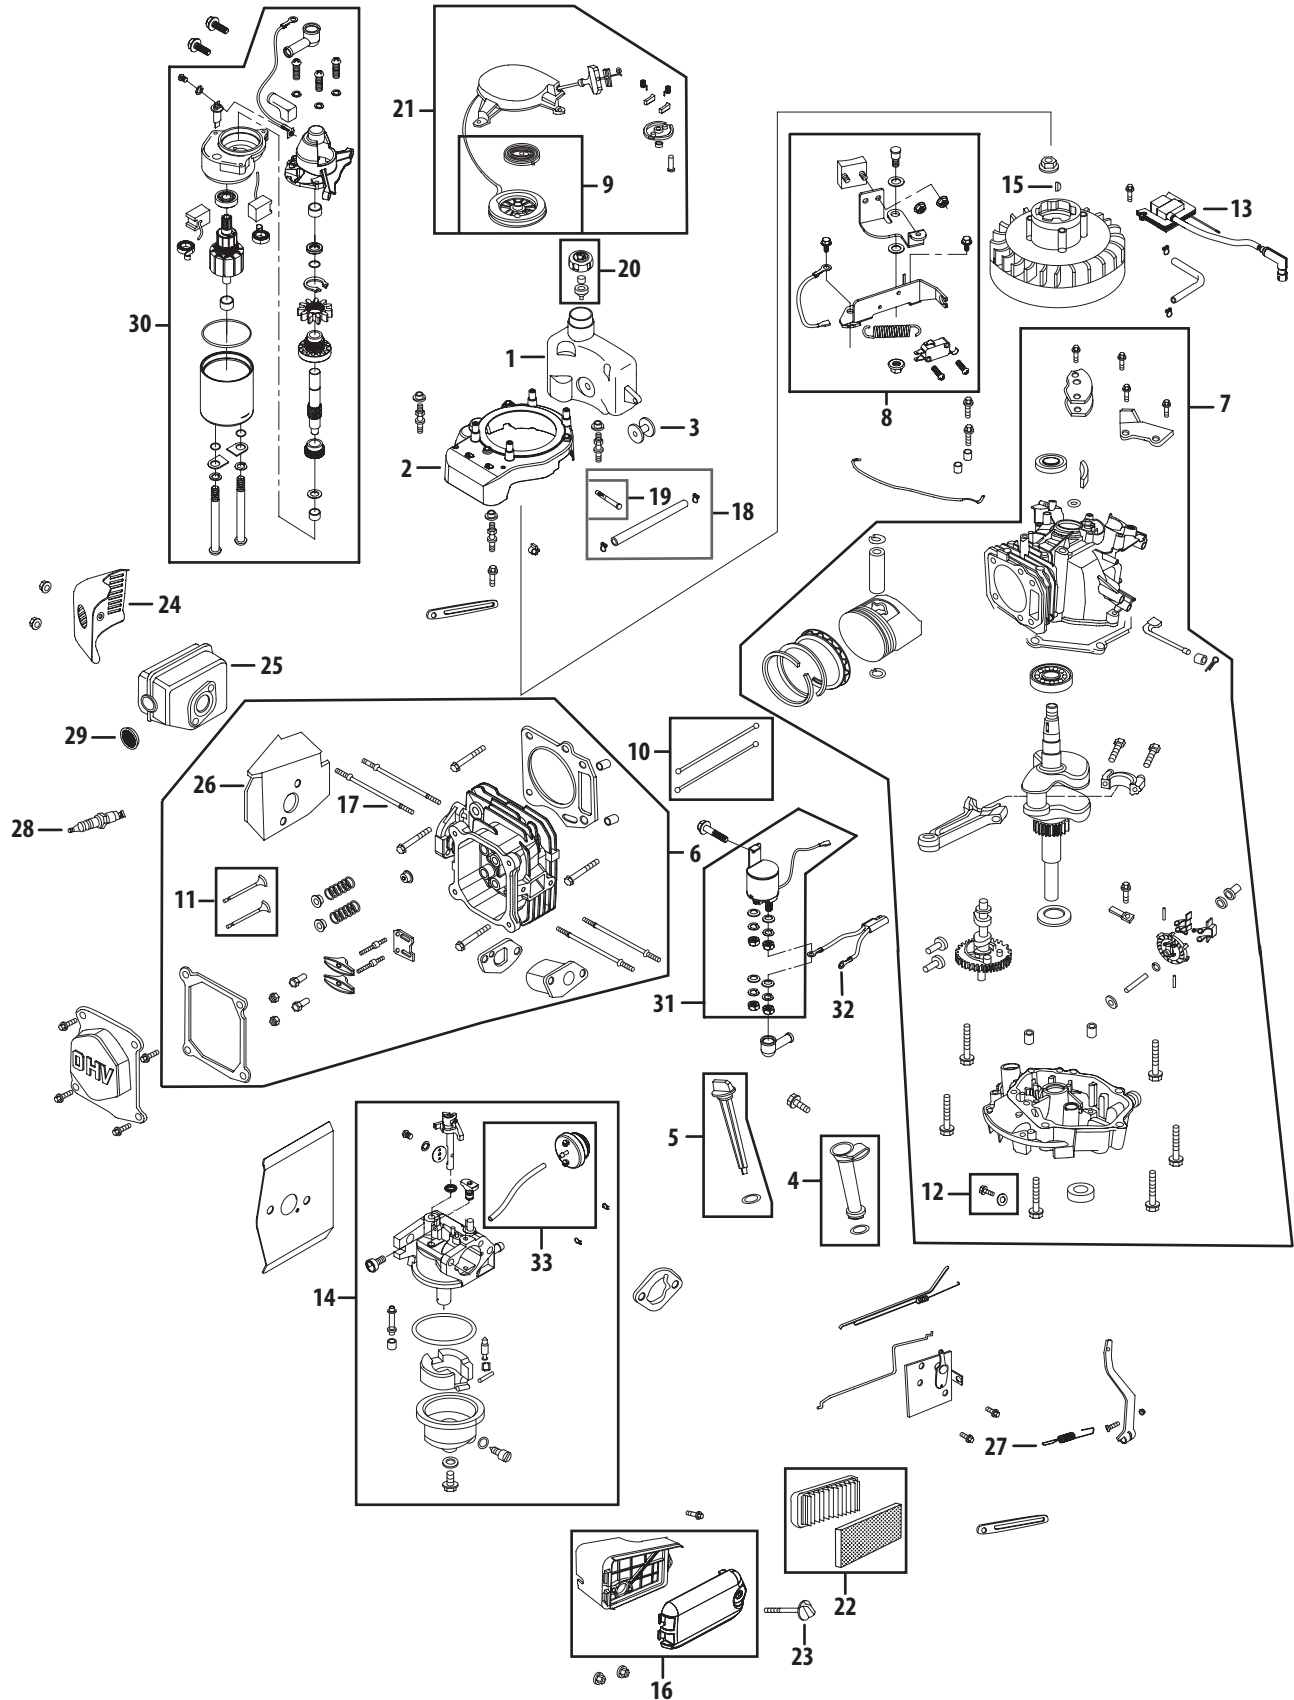


Ref No.	Part Number	Description
1.	951-10368	Fuel Tank
2.	951-10855	Flywheel Shroud
3.	951-10335	Rubber Fuel Tank Mntg. Washer
4.	951-10334	Oil Filler Tube Assembly
5.	951-10852	Dipstick Assembly
6.	951-10413A	Cylinder Head Complete
7.	951-10857A	Short Block Assembly
8.	951-10858	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Ass'y.
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Ass'y.
13.	951-10854	Ignition Coil
14.	951-10881	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10412A	Air Cleaner Housing Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10300	Fuel Cap Assembly


Ref No.	Part Number	Description
21.	951-10299A	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10411	Muffler Guard
25.	951-10403	Muffler
26.	951-11179	Muffler Gasket /Heat Shield
27.	951-11178	Governor Return Spring
28.	951-10292	Spark Plug
29.	951-10351	Spark Arrestor
30.	951-10880A	Electric Starter
31.	951-10823	Relay Assembly
32.	951-10824	Relay Harness Connector
33.	951-10888	Primer Assembly
–	952Z2P70MOB	Engine – Complete
–	712-04221	Flywheel Nut
–	951-11045	Flywheel
–	951-11238	Governor Arm Bracket
–	951-10890	Carburetor Kit – Major
–	951-10859	Cylinder Head Service Kit
–	951-10416	Gasket Kit – Complete
–	951-10417	Gasket Kit – External

NOTE: Illustrated parts without a numeric call-out are not servicable components.

5P65M0B Air Cleaner

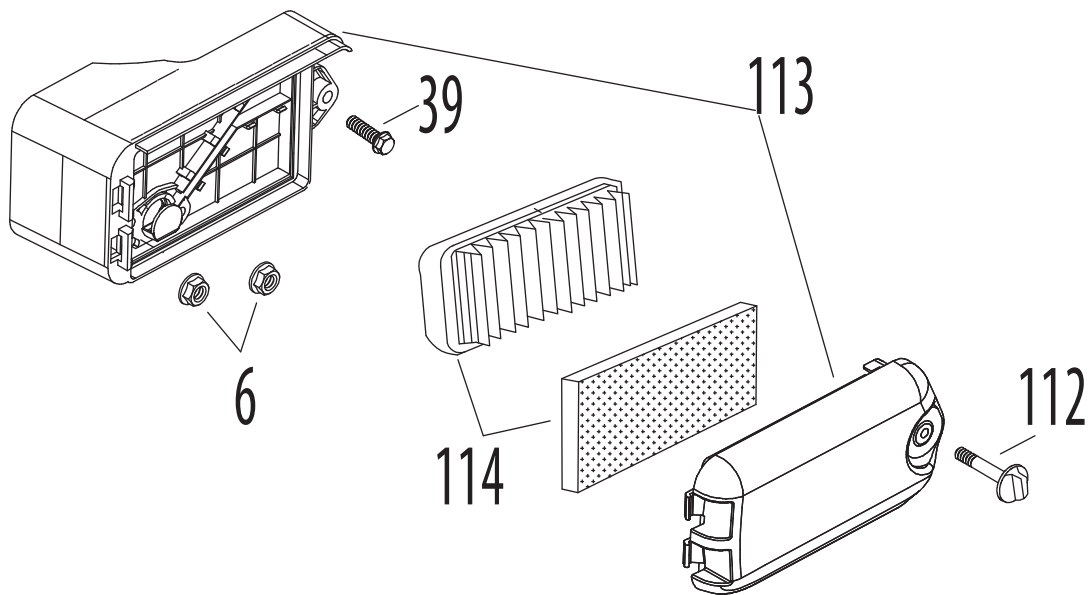


Ref.	Part Number	Description
6	712-04212	Nut M6 X 10 Mm
39	710-04969	Bolt M6x30
112	951-10297	Air Filter Cover Thumb Screw
113	951-10876	Air Cleaner Housing Ass'y Comp
114	951-10298	Air Cleaner Kit

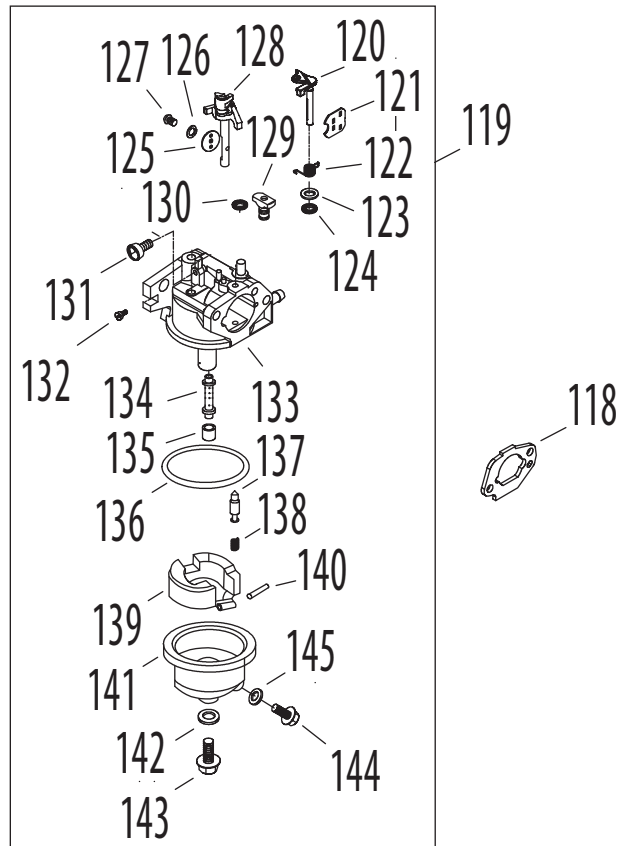

Ref.	Part Number	Description	Ref.	Part Number	Description
118	951-11257	Carburetor Gasket Plate	134	N/A	Main Nozzle / Emulsion Tube
119	951-10873	Carburetor Ass'y (Incl Ref No. 120-145)	135	N/A	Main Jet
120	N/A	Choke Shaft	136	951-11589	Fuel Bowl O-Ring
121	N/A	Choke Plate	137	N/A	Needle Valve
122	N/A	Choke Return Spring	138	N/A	Needle Valve Spring
123	N/A	Choke Shaft Washer	139	N/A	Float
124	N/A	Fiber O-Ring	140	N/A	Float Pin
125	N/A	Throttle Plate	141	N/A	Fuel Bowl
126	N/A	Throttle Plate Lock Washer	142	951-11348	Fuel Bowl Gasket
127	N/A	Throttle Plate Screw	143	710-04945	Fuel Bowl Mounting Bolt
128	N/A	Throttle Shaft	144	710-04903	Fuel Drain Plug
129	N/A	Idle Jet Assembly	145	951-11349	Fuel Drain Plug Gasket
130	N/A	Fiber O-Ring		951-10874	Carburetor Repair Kit - Major
131	N/A	Idle Speed Adjusting Screw			(Incl Ref No. 124,130,131,
132	N/A	Idle Mixture Screw			134-140,142,145)
133	N/A	Carburetor Body			


5P65M0B Crankcase

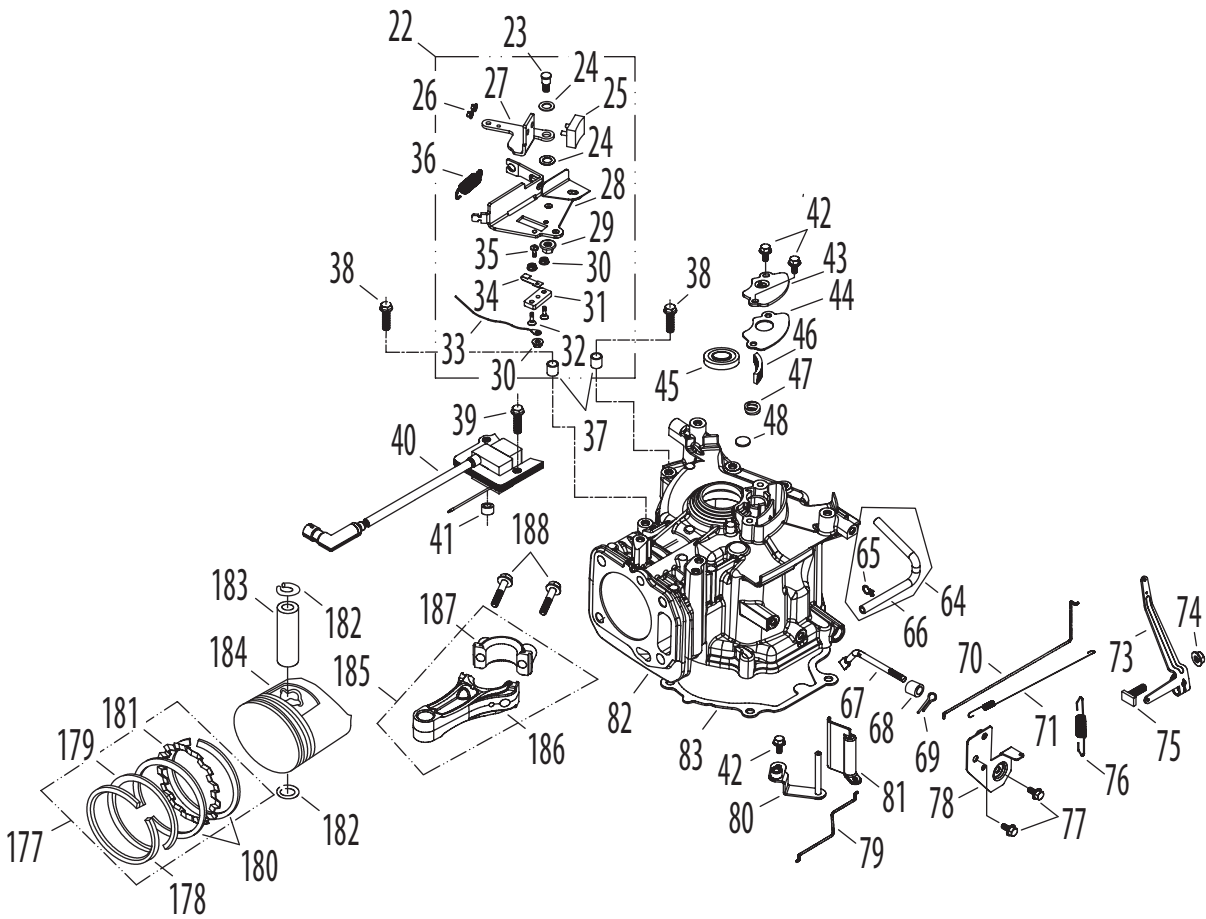

Ref.	Part Number	Description
22	951-10320A	Brake Assembly (Incl Ref No. 23-36)
37	750-05384	Brake Spacer
38	710-04980	Bolt M6×35
39	710-04969	Bolt M6×30
40	951-10367	Ignition Coil Assembly
41	750-05383	Ignition Coil Spacer
42	710-04916	Bolt M6×14
42	710-04916	Bolt M6×14
43	951-11612	Breather Cover Plate
43	951-11612	Breather Cover Plate
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
46	951-11730	Mesh Screen
47	732-04718	Breather Valve Spring
48	951-11614	Breather Valve
64	951-11520	Breather Hose Assembly
65	N/A	Breather Hose Clamp
66	N/A	Breather Hose
67	951-11608	Governor Arm Shaft
68	951-11574	Governor Seal
69	714-04074	Governor Cotter Pin
70	951-11521	Throttle Linkage Rod
71	951-11522	Throttle Linkage Spring
72	N/A	Gover Arm Assembly
73	951-11523	Governor Arm
74	712-04212	Governor Arm Nut M6
75	710-04908	Governor Arm Bolt
76	951-10293	Governor Spring


Ref.	Part Number	Description
77	710-04915	Bolt M6×12
78	951-11544	Throttle / Governor Bracket
79	951-11524	Choke Linkage Rod
80	951-11792	Air Vane Bracket
81	951-11529	Air Vane
82	N/A	Crankcase
83	951-11732	Crankcase Cover Gasket
177	951-11688	Piston Ring Set
178	N/A	Upper Piston Compression Ring
179	N/A	Lower Piston Compression Ring
180	N/A	Piston Oil Ring Segment
181	N/A	Piston Oil Ring Expander
182	951-11603	Piston Pin Snap Ring
183	951-11604	Piston Pin
184	951-11605	Piston
185	951-11744	Connecting Rod Assembly
186	N/A	Connecting Rod
187	N/A	Connecting Rod Cap
188	710-05162	Connecting Rod Bolt
	951-11787	Gasket Kit - Complete (Incl Ref No. 44,45,68,83,91, 108,110,146-148,164,-167,172)
	951-11789	Short Block (Incl Ref No. 42-48,67-69,82-88, 91,93,94,104-110,118,147,148, 164,167,172,173-175-177,182-185,188)
	952Z5P65M0B	Engine Complete

5P65M0B Crankshaft

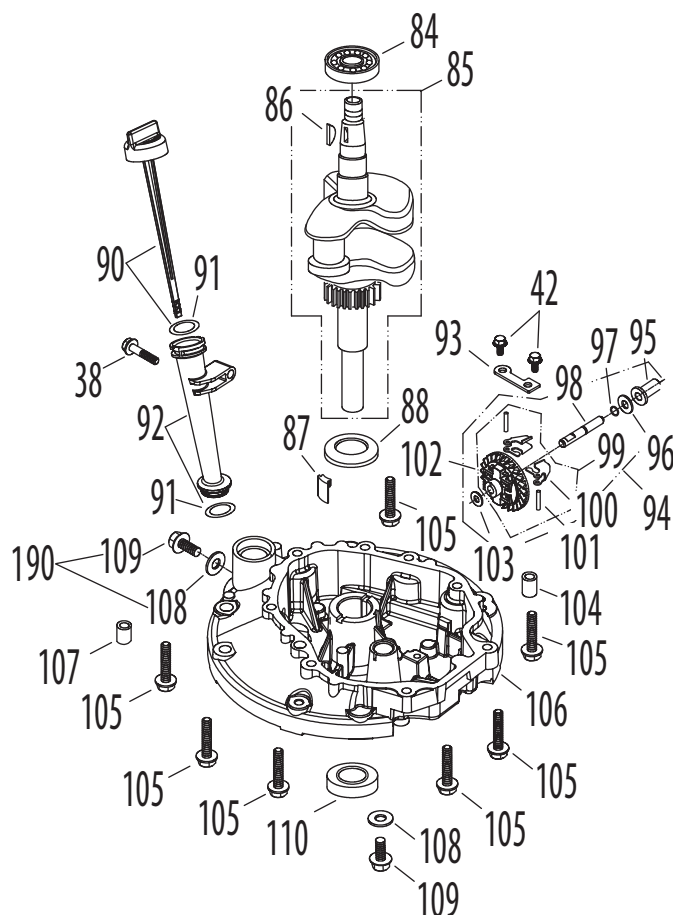

Ref.	Part Number	Description
38	710-04980	Bolt M6x35
42	710-04916	Bolt M6x14
84	951-11369	Main Bearing
85	951-11591	Crankshaft Assembly
86	951-10307	Woodruff Key
87	951-11733	Oil Return Seal
88	736-04491	Crankshaft Thrust Washer
90	951-11795	Dipstick Assembly
91	951-11547	Dipstick and Oil Fill Tube O-Ring
92	951-11765	Oil Filler Tube Assembly
93	951-11609	Governor Gear Mounting Plate
94	951-11549	Governor Gear/Shaft Assembly
95	N/A	Governor Slide Cap
96	N/A	Governor Slide Cap Washer
97	N/A	Governor Ring


Ref.	Part Number	Description
98	N/A	Governor Gear Shaft
99	N/A	Governor Gear Assembly
100	N/A	Governor Fly Weight
101	N/A	Governor Fly Weight Pin
102	N/A	Governor Gear
103	N/A	Governor Gear Washer
104	715-04092	Crankcase Cover Dowel 7x14
105	710-04920	Coil/Sump Bolt M6x28
106	951-11793	Crankcase Cover
107	715-04096	Dowel Pin 9x14
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
110	951-11545	Lower Crankshaft Seal
190	951-10370	Oil Drain Plug and Washer Ass'y

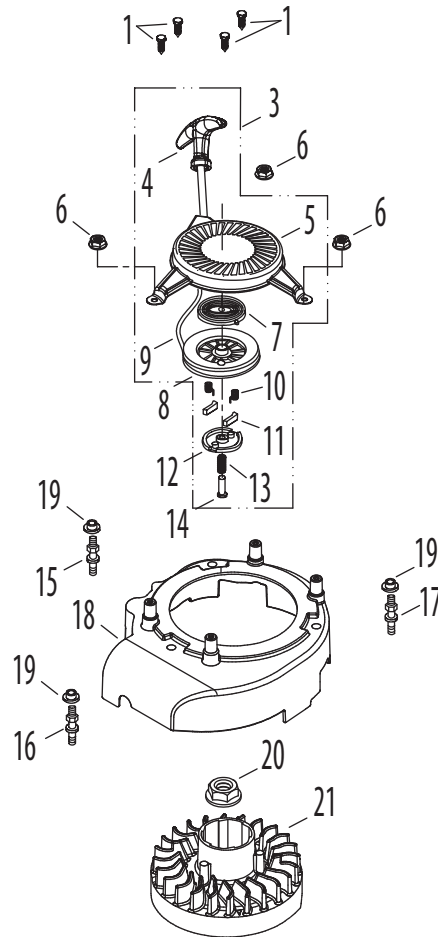

Ref.	Part Number	Description
1	710-04744	Self-Tap Bolt, Hilo #12-16 x 1.00"
3	951-11720	Recoil Starter Assembly
4	N/A	Starter Handle
5	N/A	Starter Housing
6	712-04212	Nut M6 X 10 Mm
7	951-11721	Recoil Spring & Pulley Ass'y
8	951-11721	Recoil Spring & Pulley Ass'y
9	N/A	Starter Rope
10	N/A	Starter Pawl Return Spring
11	N/A	Starter Pawl

Ref.	Part Number	Description
12	N/A	Pressure Plate
13	N/A	Pressure Plate Spring
14	N/A	Pressure Plate Bolt
15	751-11722	Starter/Shroud Stud Black/M6 x 75
16	951-11723	Starter/Shroud Stud Front/M6 x 5.3
17	951-11724	Starter/Shroud Stud White/M6 x 73
18	951-10875	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	712-04221	Flywheel Nut M14
21	951-11043	Flywheel

5P65M0B Cylinder Head

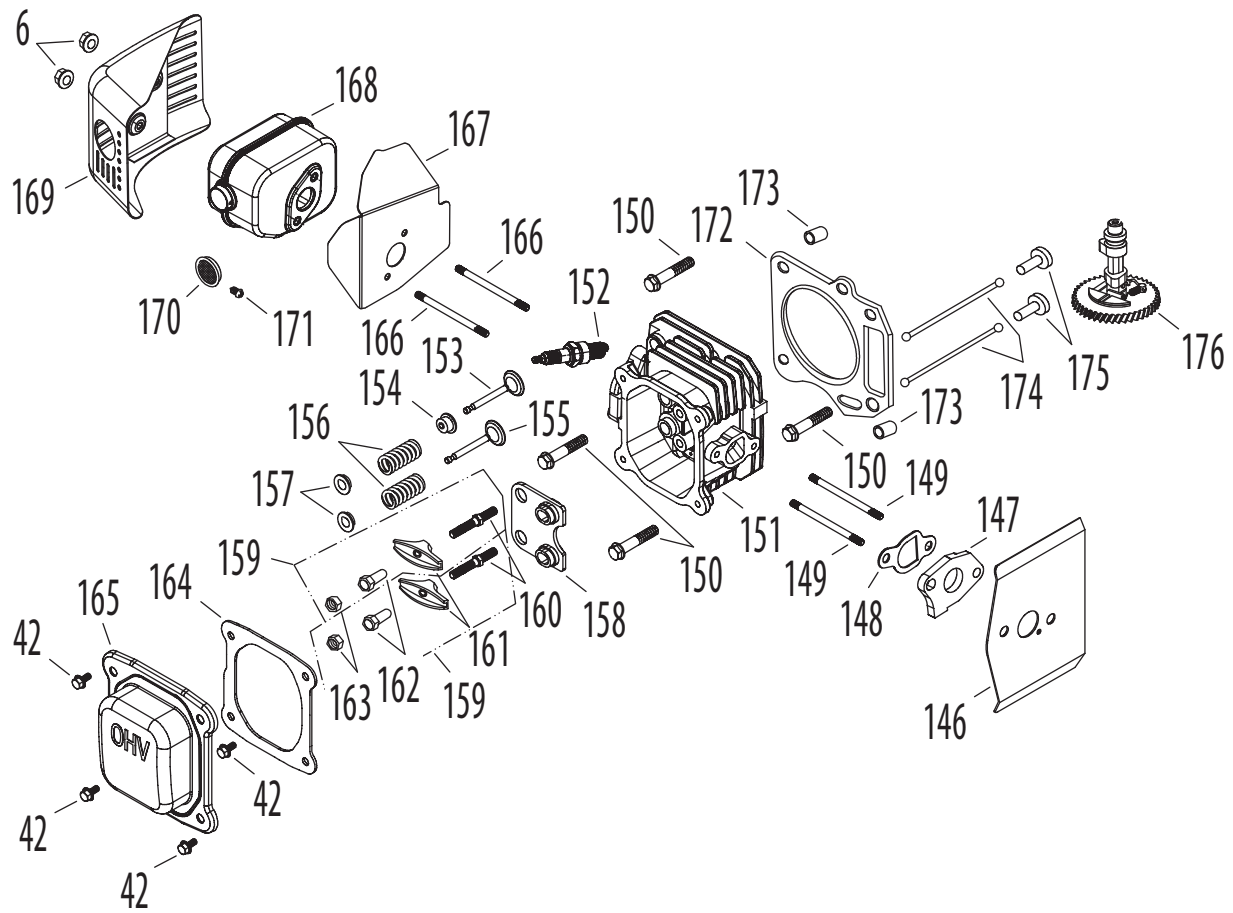


5P65M0B Cylinder Head

Ref.	Part Number	Description
6	712-04212	Nut M6 X 10 Mm
42	710-04916	Bolt M6x14
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
149	710-05093	Carb Stud M6x92
150	710-04982	Head Bolt M8x54
151	N/A	Cylinder Head
152	951-10292	Spark Plug/F6rtc
153	951-10313	Valve Kit (Incl Ref No. 153,155)
154	951-11818	Valve Seal
155	951-10313	Valve Kit (Incl Ref No. 153,155)
156	N/A	Valve Spring
157	N/A	Valve Spring Retainer
158	951-11687	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
161	N/A	Rocker Arm
162	751-11123	Valve Adjustment Nut
163	751-11124	Pivot Locking Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
166	951-10342	Muffler Stud Assembly
167	951-11739	Muffler Gasket

Ref.	Part Number	Description
168	951-10295	Muffler Assembly
169	951-11791	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11555	Cylinder Head Gasket
173	715-04090	Cylinder Head Dowel 10x16
174	951-10314	Push Rod Kit
175	951-11607	Tappet
176	951-11741	Camshaft Assembly
	951-11787	Gasket Kit - Complete (Incl Ref No. 44,45,68,83,91,108, 110,146-148,164,-167,172)
	951-11789	Short Block (Incl Ref No. 42-48,67-69,82-88, 91,93,94,104-110,118,147,148, 164,167,172,173-175-177,182-185,188)
	951-11788	Gasket Kit - External (Incl Ref No. 44,91,108,146-148, 164,167,174)
	951-11746	Cylinder Head Assembly (Incl Ref No. 147,148,151,153-158, 160-164,167,172)
	951-10846A	Cylinder Head Kit (Incl Ref No. 150,154,164,172)
	952Z5P65M0B	Engine Complete


5P65M0B Fuel Tank

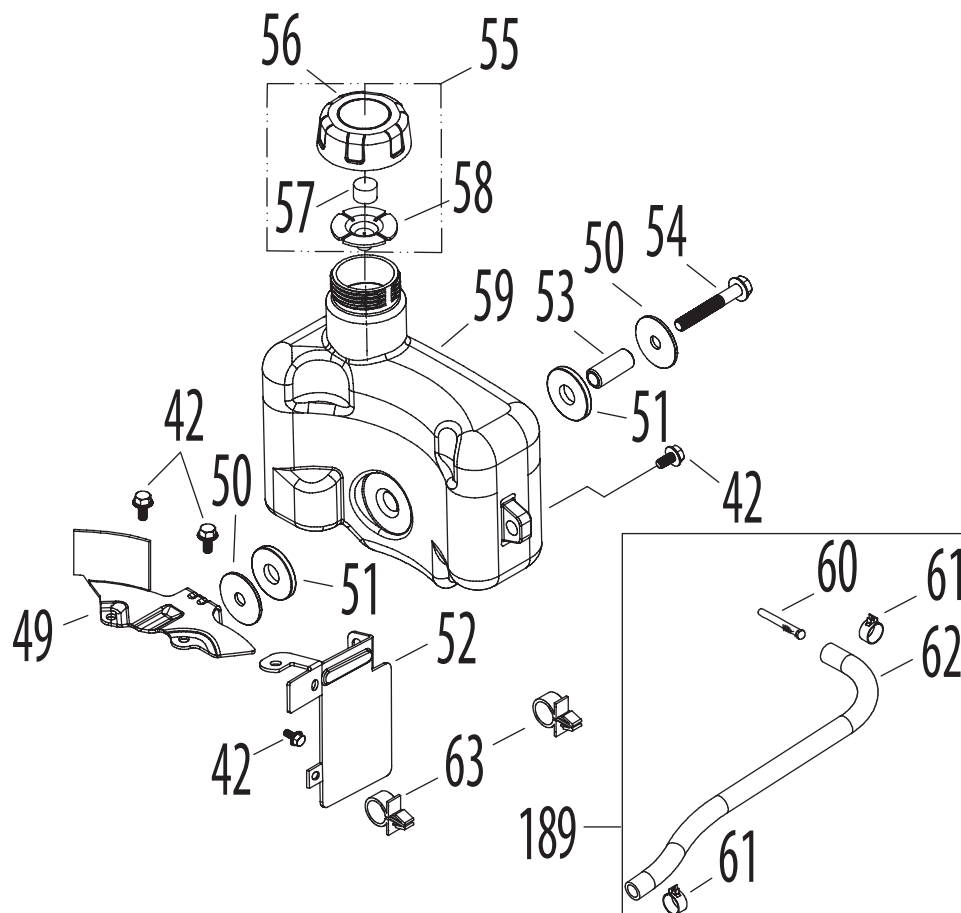


Ref.	Part Number	Description
42	710-04916	Bolt M6×14
49	951-11542	Fuel Tank Bottom Bracket
50	736-04456	Fuel Tank Washer
51	951-10335	Rubber Bushing
52	951-11748	Tank/Label Bracket
53	750-05322	Fuel Tank Bushing
54	710-04922	Tank Bolt M8×50
55	951-10300	Fuel Cap Assembly (Incl. 56-58)
56	N/A	Fuel Cap
57	N/A	Foam Insert
58	N/A	Vent Gasket
59	951-10337	Fuel Tank Assembly
60	951-10358	Fuel Filter
61	951-11731	Fuel Hose Clamp
62	N/A	Fuel Hose
63	723-04071	Plastic Support Clamp
189	951-10363	Fuel Line Kit (Incl. 60-62)

Page Left Blank Intentionally

5P70M0B Air Cleaner

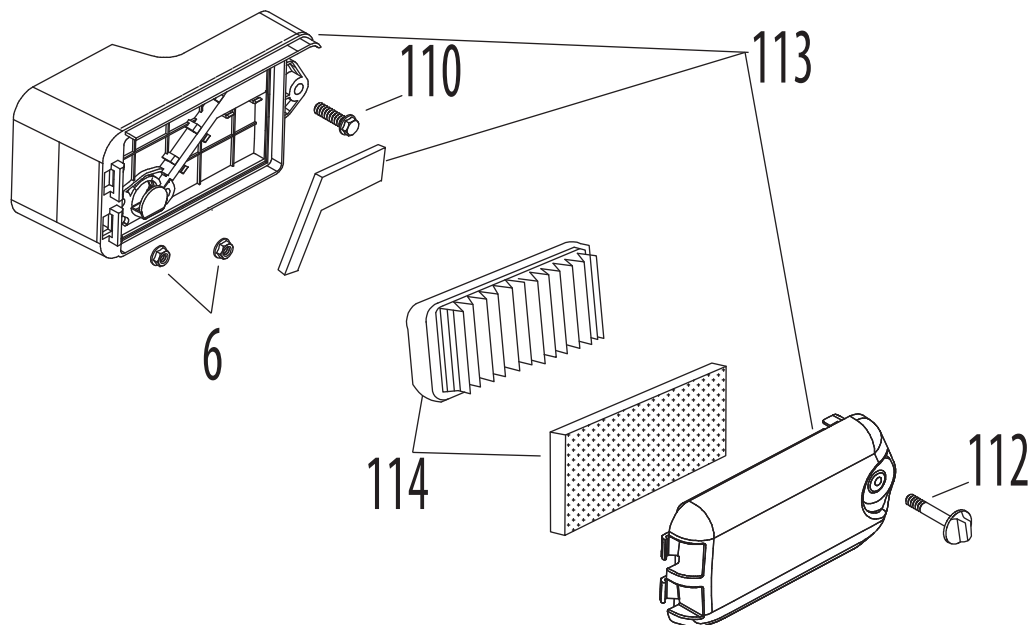


Ref.	Part Number	Description
6	712-04212	Nut M6 X 10 Mm
110	710-04969	A/F Base Bolt M6×30
112	951-10297	Air Filter Cover Thumb Screw
113	951-10412A	Air Cleaner Housing Ass'y Comp
114	951-10298	Air Filter, Sponge Pre-Filter

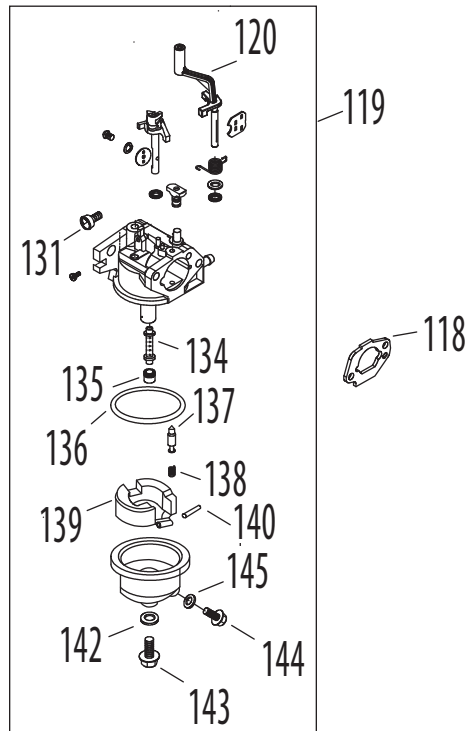

Ref.	Part Number	Description
118	951-11257	Carburetor Gasket Plate
119	951-10765	Carburetor Assembly
120	N/A	Choke & Throttle Shaft Dust Seals
131	N/A	Idle Speed Adjusting Screw
134	N/A	Main Nozzle / Emulsion Tube
135	N/A	Main Jet
136	951-11589	Fuel Bowl O-Ring
137	N/A	Needle Valve (Float)
138	N/A	Needle Valve Spring

Ref.	Part Number	Description
139	N/A	Float
140	N/A	Float Pin
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
	951-11773	Carburetor Repair Kit - Major (Incl Ref No. 120,131,134-142,145)


5P70M0B Crankcase

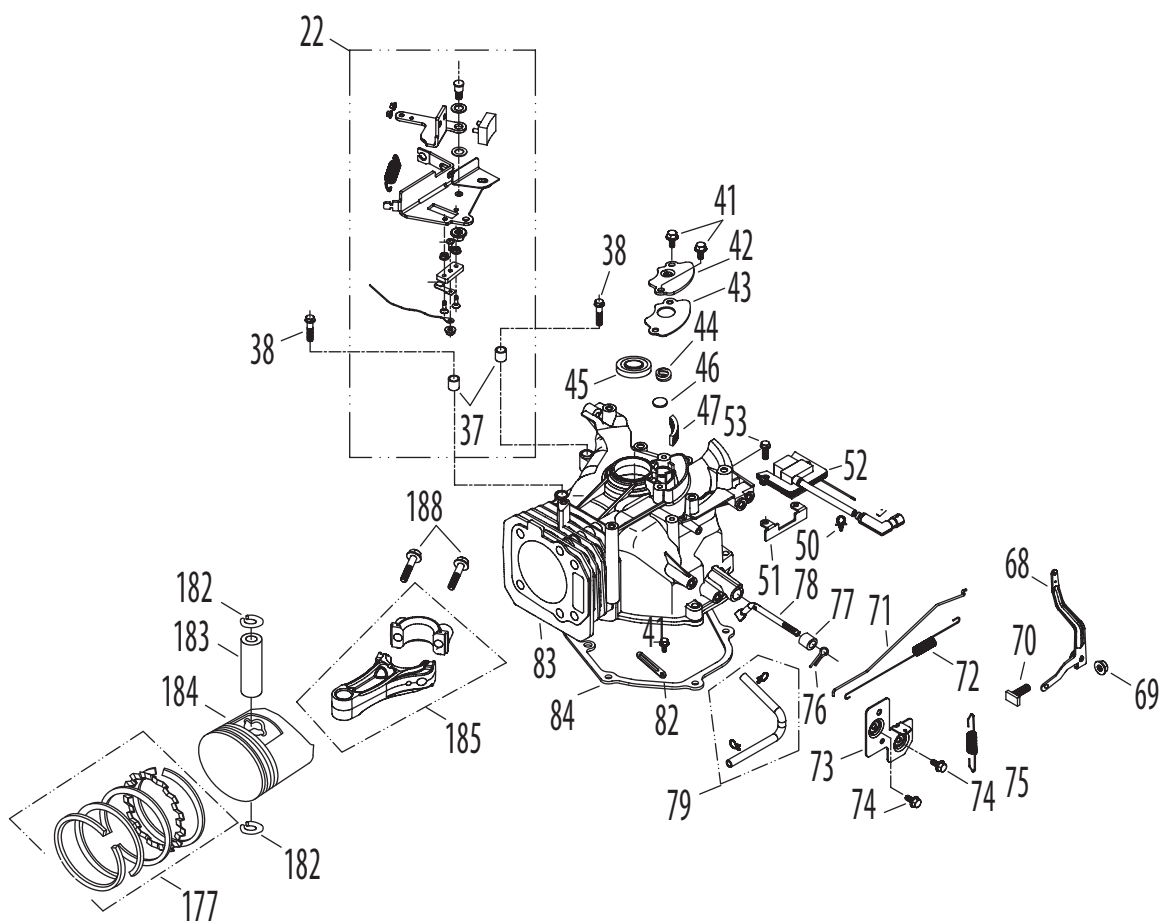

Ref.	Part Number	Description
22	951-10321A	Brake Assembly
41	710-04916	Bolt M6×14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Lower Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
50	951-11618	Plastic Clamp 6.3×8
51	951-11619	Ignition Coil Bracket
52	951-10366	Ignition Coil Assembly
53	710-04979	Bolt M6×18
68	951-11238	Governor Arm Bracket
69	712-04212	Governor Arm Nut M6
70	710-04908	Governor Arm Bolt
71	951-11259	Throttle Linkage
72	951-11258	Throttle Linkage Spring
73	951-11620	Component Bracket
74	710-04915	Bolt M6×12
75	951-10293	Governor Spring
76	714-04074	Governor Cotter Pin
76	714-04074	Governor Cotter Pin


Ref.	Part Number	Description
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
79	951-11260	Breather Hose Assembly
82	951-11622	Flexible Clamp
83	N/A	Crankcase Complete
84	951-11763	Crankcase Cover Gasket
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
	951-10414B	Short Block Assembly (Incl Ref No. 41-47,57,76-78,83-86, 88,91,93-97,107-109,118,147,148,164, 167,172,173,175-177,182-185,188)
	951-11770	Gasket Kit - Complete (Incl Ref No. 43,45,77,84,91,94, 109,146,148,164,167,182)
	951-11772	Gasket Kit - External (Incl Ref 43,91,94,146,148,164,167)
	952Z5P70M0B	Engine Complete

5P70M0B Crankshaft

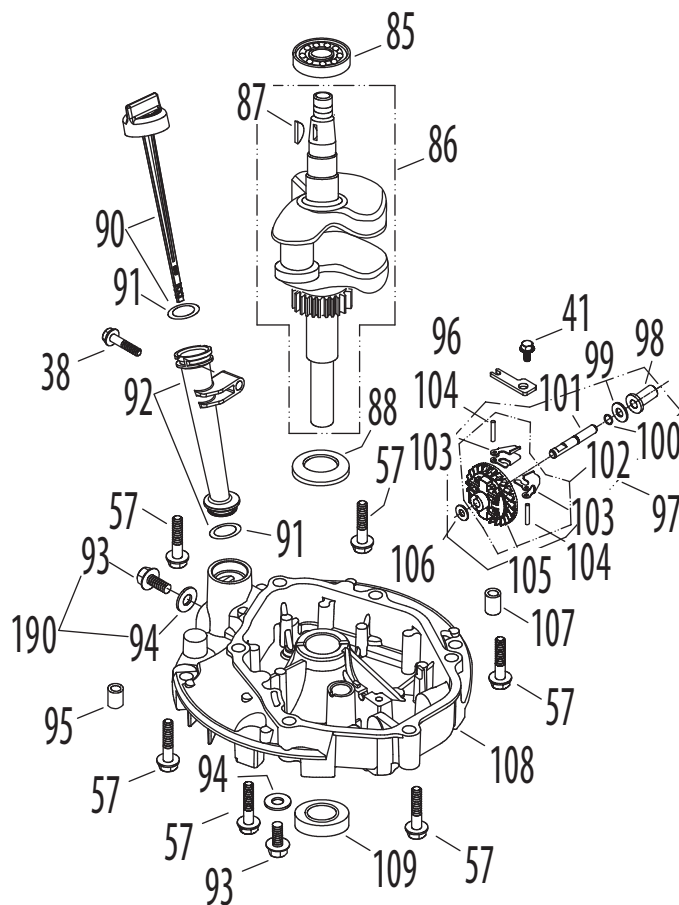

Ref.	Part Number	Description
38	710-04980	Bolt M6×35
41	710-04916	Bolt M6×14
57	710-04922	Tank/Sump Bolt M8×50
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
87	951-10307	Woodruff Key
88	736-04491	Crankshaft Thrust Washer
90	951-11764	Dipstick Assembly
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Filler Tube Assemblby


Ref.	Part Number	Description
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9×14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7×14
108	N/A	Crankcase Cover - dual drain
109	951-11627	Lower Crankshaft Seal
190	951-10370	Oil Drain Plug and Washer Ass'y

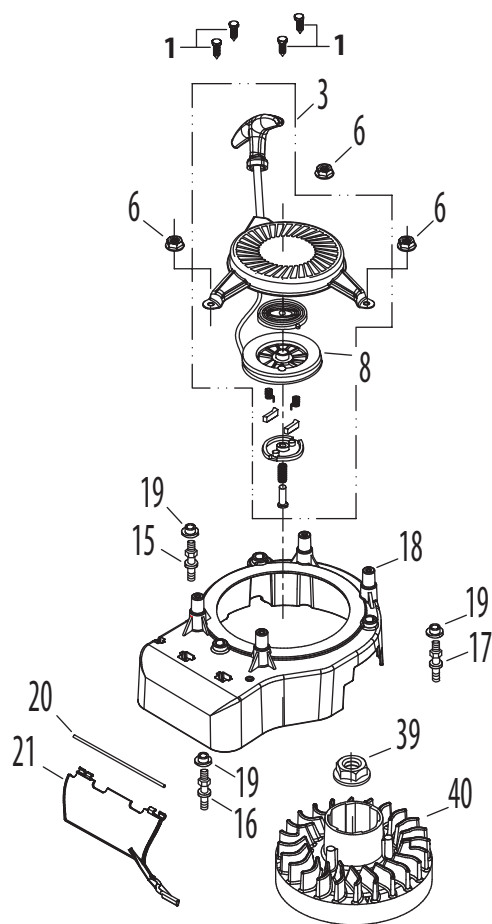

Ref.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1.0"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
8	951-11721	Recoil Spring & Pulley Assembly
15	710-04976	Starter/Shroud Stud M6x85-48
16	710-04977	Starter/Shroud Stud M6x87-51.5
17	710-04978	Starter/Shroud Stud M6x79

Ref.	Part Number	Description
18	951-10764	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	951-11610	Air Vane Shaft
21	951-11611	Air Vane
39	712-04221	Flywheel Nut M14
40	951-11046	Flywheel

5P70M0B Cylinder Head

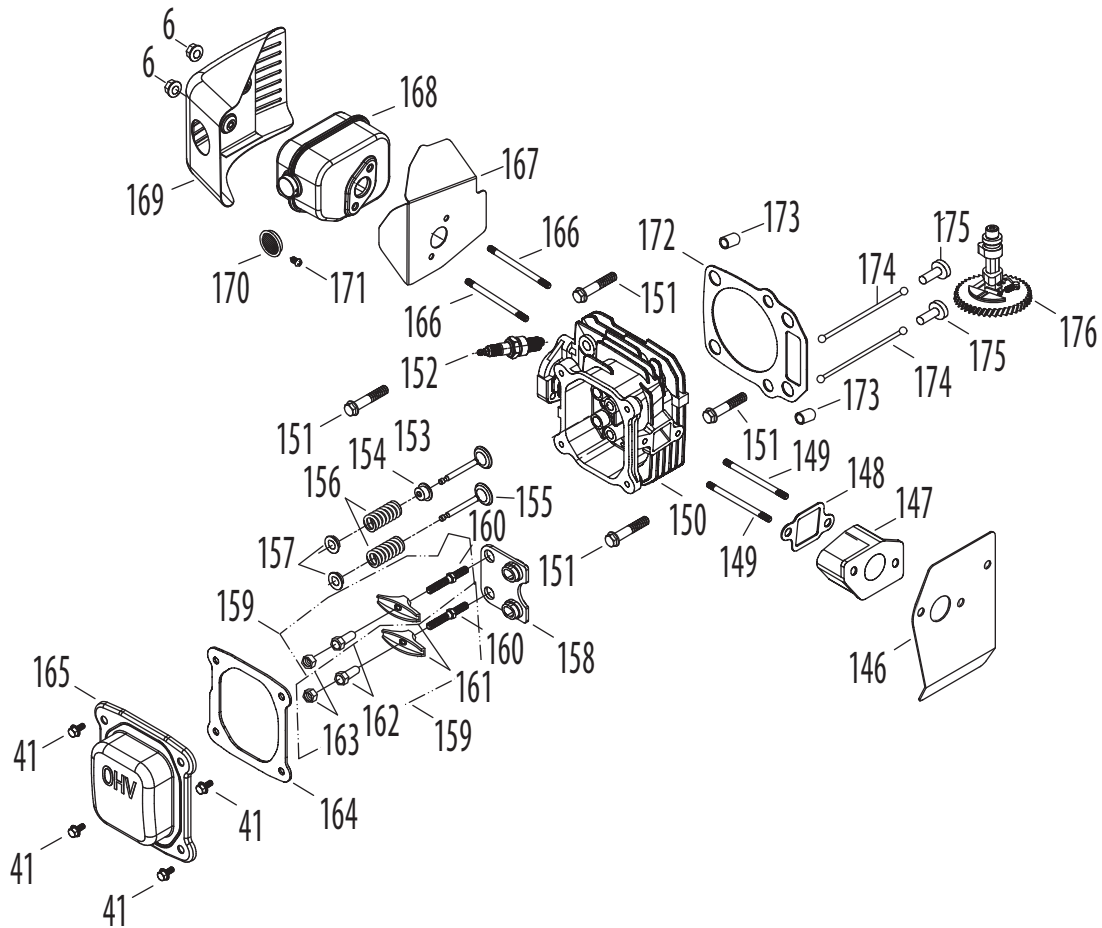


5P70M0B Cylinder Head

Ref.	Part Number	Description
6	712-04212	Nut M6 X 10 Mm
41	710-04916	Bolt M6x14
146	951-11766	Carburetor Gasket
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
149	710-04981	Carb Stud M6x113
150	N/A	Cylinder Head
151	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc
153	951-10345	Valve Kit
154	N/A	Valve Seal
155	951-10345	Valve Kit
156	N/A	Valve Spring
157	N/A	Valve Spring Retainers
158	951-11629	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
161	N/A	Rocker Arm
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
166	951-10342	Muffler Stud Assemblby

Ref.	Part Number	Description
167	951-11739	Muffler Gasket
168	951-10403	Muffler Assembly
169	951-10411	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
174	951-10344	Push Rod Kit
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
	951-10413A	Cylinder Head Assembly (Incl Ref No. 147,148,150, 153-158,160-164,167,172)
	951-10414B	Short Block Assembly (Incl Ref No. 41-47,57,76-78,83-86, 88,91,93-97,107-109,118,147,148,164, 167,172,173,175-177,182-185,188)
	951-11770	Gasket Kit - Complete (Incl Ref No. 43,45,77,84,91,94, 109,146,148,164,167,182)
	951-11772	Gasket Kit - External (Incl Ref 43,91,94,146,148,164,167)
	952Z5P70M0B	Engine Complete


5P70M0B Fuel Tank

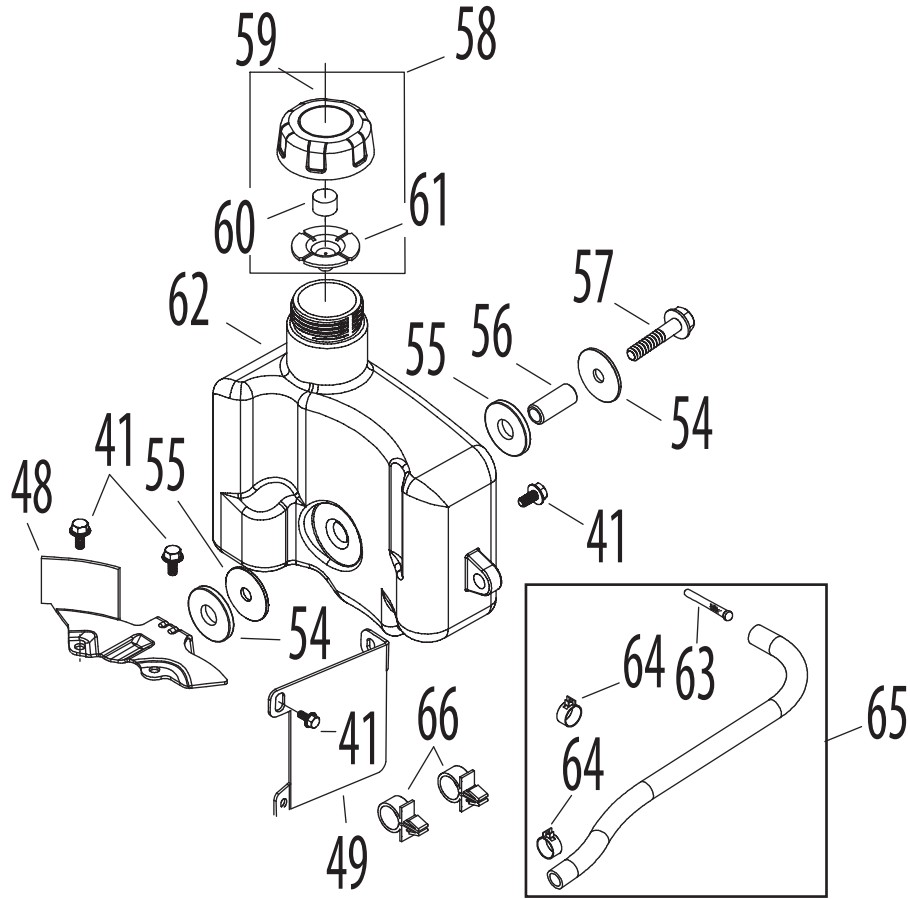

Ref.	Part Number	Description
41	710-04916	Bolt M6x14
48	951-11616	Fuel Tank Bottom Bracket
49	951-11617	Tank/Label Bracket
54	736-04456	Fuel Tank Washer
55	951-10335	Rubber Bushing
56	750-05322	Fuel Tank Bushing
57	710-04922	Tank/Sump Bolt M8x50
58	951-10300	Fuel Cap Assembly
59	N/A	Fuel Cap
60	N/A	Foam Insert
61	N/A	Vent Gasket
62	951-10368	Fuel Tank Assembly
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
65	951-10364	Fuel Line Kit
66	723-04071	Plastic Support Clamp


Page Left Blank Intentionally

Engine Model (Honda GCV160LA)

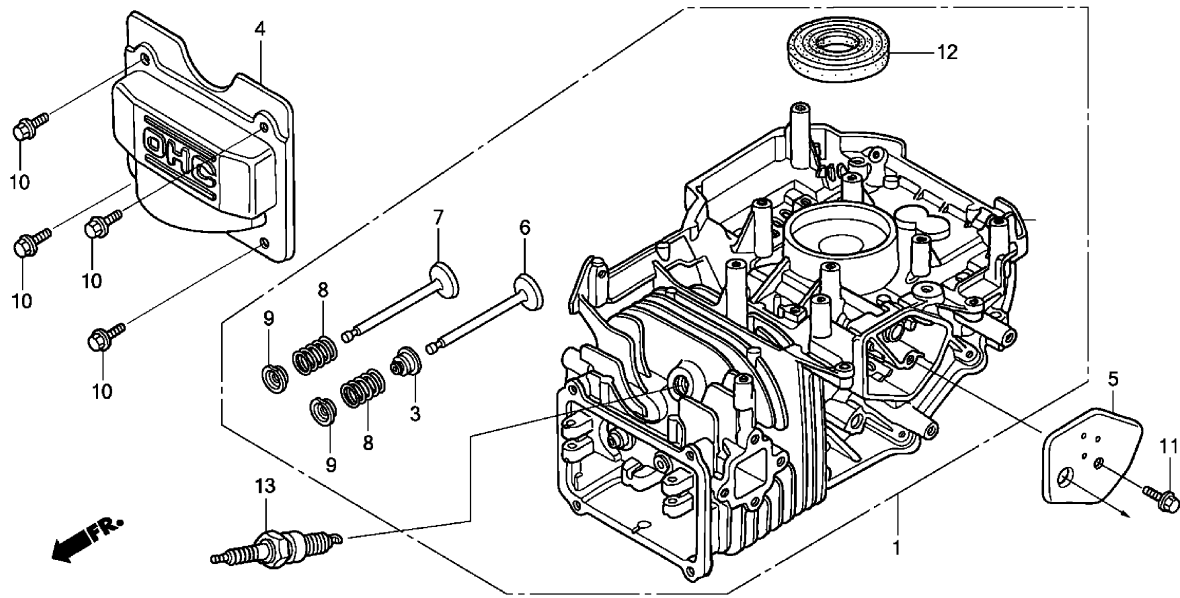

Ref.	PartNumber	Description
1	12000-Z0L-840	Cylinder Assembly
3	12209-ZM0-003	Valve Stem Seal
4	12310-Z0J-000	Head Cover
5	12355-ZL8-000	Cover, Breather
6	14711-Z0J-000	Intake Valve
7	14721-ZL8-000	Exhaust Valve
8	14751-ZL8-000	Valve Spring
9	14771-Z0J-000	Valve Spring Retainer
10	90013-883-000	Flange Bolt, 6 x 12
11	90014-952-000	Flange Bolt, 6 x 14
12	91201-ZL8-003	Oil Seal, 25.4 x 62 x 6
13	98079-56846	SparkPlug,BPR6ES(NGK)


Engine Model (Honda GCV160LA)

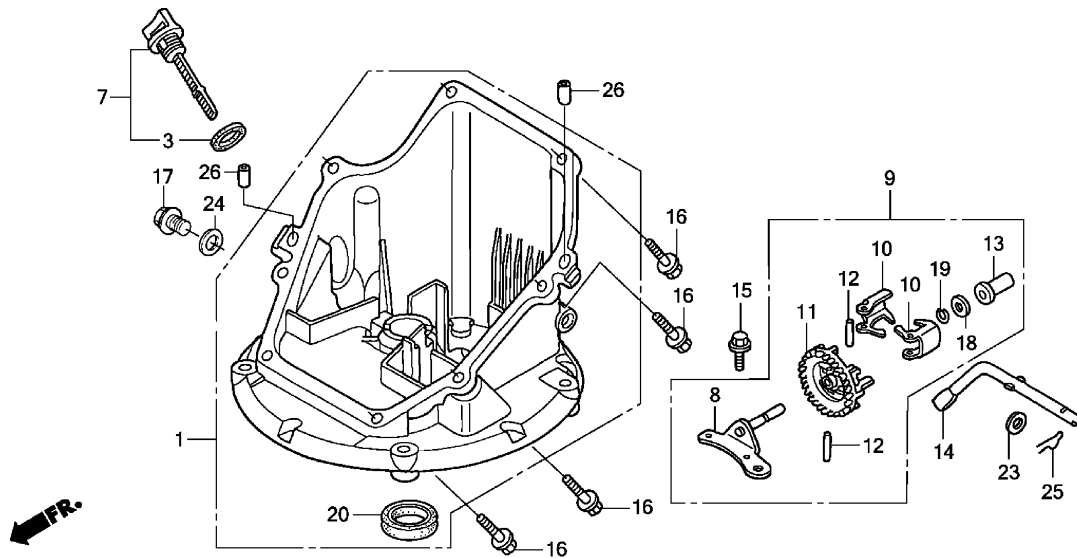


Ref.	PartNumber	Description
1	11300-Z0L-821	Oil Pan Assembly
3	15625-Z2L-801	Oil Filler Cap Gasket
7	15650-Z0L-000	Oil Level Gauge Assembly
8	16508-ZM0-010	Governor Holder Shaft
9	16510-ZM0-010	Governor Assembly
10	16511-ZL8-000	Governor Weight
11	16512-ZM0-000	Governor Weight Holder
12	16513-ZE1-000	Governor Weight Pin
13	16531-ZE1-000	Governor Slider
14	16541-ZM0-000	Governor Arm Shaft

Ref.	PartNumber	Description
15	90014-952-000	Flange Bolt, 6 x 14
16	90121-952-000	Flange Bolt, 6 x 25
17	90131-896-650	Drain Plug Bolt
18	90451-ZE1-000	Thrust Washer, 6mm
19	90602-ZE1-000	Governor Holder Clip
20	91202-ZL8-003	Oil Seal, 28 x 41.25 x 6
23	94101-06800	Plain Washer, 6mm
24	94109-12000	Drain Plug Washer, 12mm
25	94251-08000	Lock Pin, 8mm
26	94301-08200	Dowel Pin, 8x20

Engine Model (Honda GCV160LA)

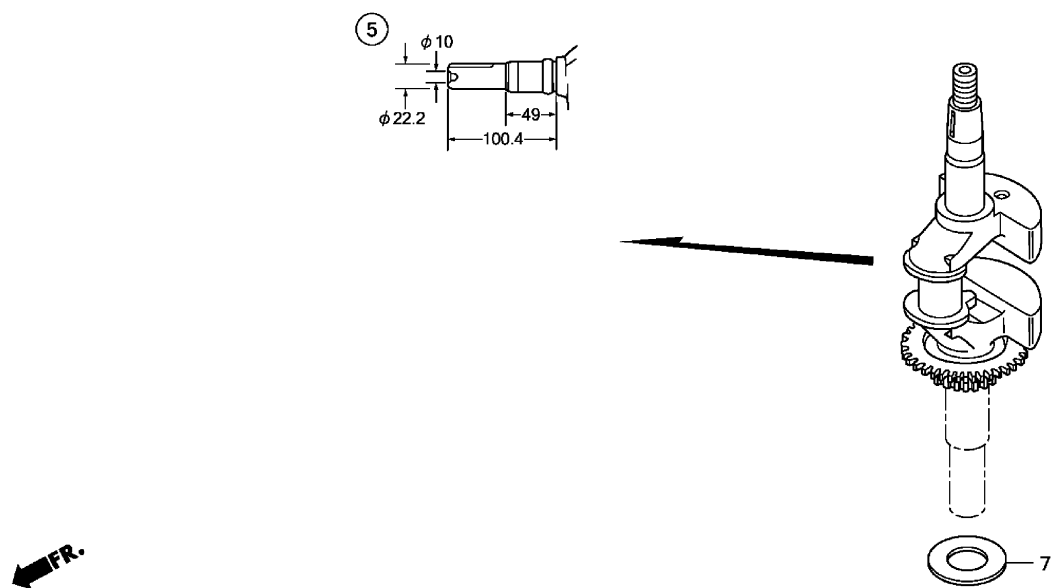


Engine Model (Honda GCV160LA)

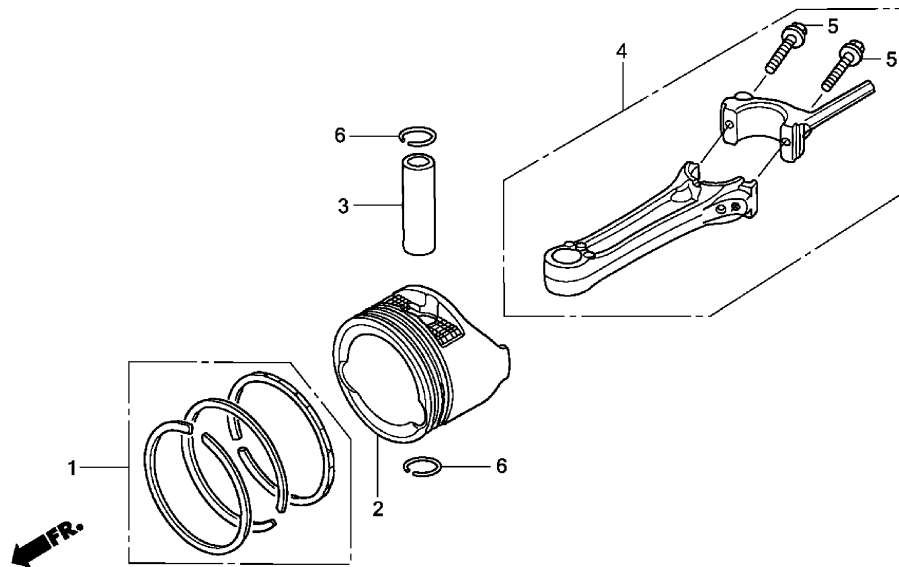


Ref.	PartNumber	Description
1	13010-Z0L-014	Piston Ring Set
2	13101-Z2A-010	Piston
3	13111-ZE0-000	Piston Pin
4	13200-Z0J-000	Connecting Rod Assembly
5	90001-ZE1-000	Connecting Rod Bolt
6	90551-ZE0-000	PistonPinClip,13mm

Engine Model (Honda GCV160LA)

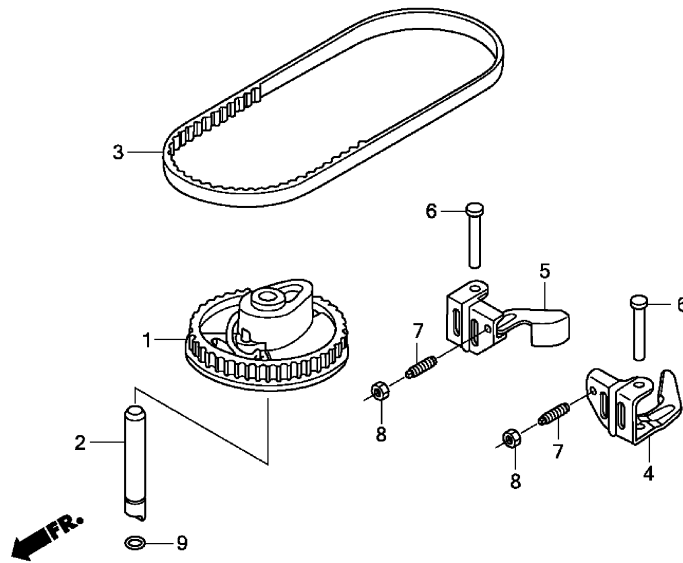


Ref.	PartNumber	Description
1	14320-ZL8-010	Camshaft Pulley
2	14324-ZL8-000	Cam Pulley Shaft
3	14400-Z0J-014	Timing Belt
4	14431-Z0J-000	Intake Rocker Arm
5	14441-Z0J-000	Exhaust Rocker Arm
6	14461-ZL8-000	Rocker Arm Shaft
7	90012-333-000	Tappet Adjusting Screw
8	90206-001-000	Tappet Adjusting Nut
9	91301-ZM0-V31	O-Ring,6.8x1.9

Engine Model (Honda GCV160LA)

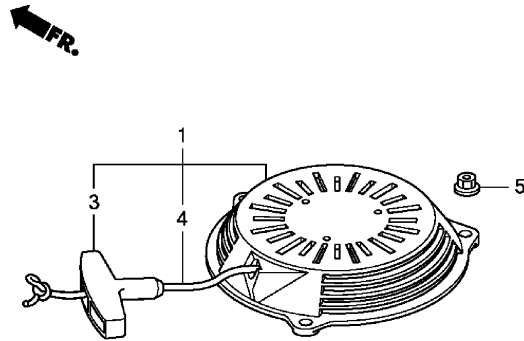

Ref.	Part Number	Description
1	28400-ZL8-023ZA	Recoil Starter Assembly
3	28461-ZL8-003	Starter Grip
4	28462-ZL8-003	Recoil Starter Rope
5	90201-ZM0-000	Flange Nut, 6mm


Engine Model (Honda GCV160LA)

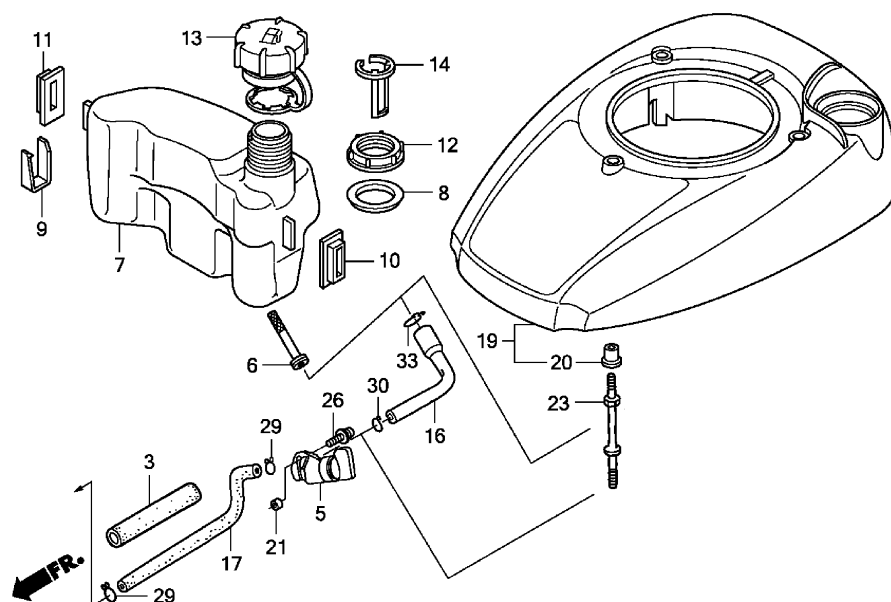

Ref.	Part Number	Description
3	16854-ZH8-000	Fuel Line Sleeve
5	16950-ZM0-003	Petcock Assembly
6	16952-ZA8-800	Fuel Filter
7	17511-Z0L-000	Fuel Tank
8	17514-Z0L-000	Fuel Filler Neck Seal
9	17516-Z0L-000	Tank Mounting Clip
10	17532-Z0L-000	Tank Mounting Rubber
11	17533-Z0L-000	Tank Mounting Rubber
12	17534-Z0L-000	Tank Mounting Nut
13	17620-Z0J-800	Fuel Cap Assembly
14	17636-Z0L-000	Fuel Level Gauge

Ref.	Part Number	Description
16	17701-Z0L-810	Fuel Tank Tube
17	17702-ZM0-800	Fuel Tube
19	19610-Z0L-850ZA	Fan Cover, Black
20	19619-ZL8-300	Fan Cover Collar
21	91501-Z0L-800	Fuel Petcock Collar
23	90043-ZL8-000	Stud Bolt, 42.5mm
26	93891-05010-08	Screw w/ Washer, 5 x 10
29	95002-02080	Tube Clip, B8
30	95002-02100	Tube Clip, B10
33	95002-70000	Tube Clip, C11


Engine Model (Honda GCV160LA)

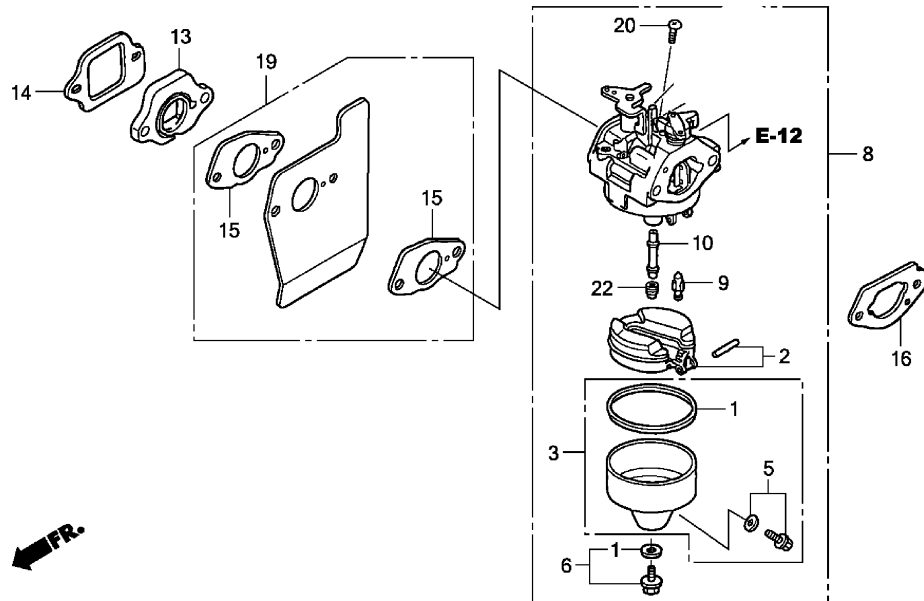

Ref.	Part Number	Description
1	16010-883-015	Gasket Set
2	16013-ZL1-003	Float Set
3	16015-887-782	Float Chamber Set
5	16024-ZE1-811	Drain Screw Set
6	16028-ZE0-005	Screw Set
8	16100-Z0L-862	Carburetor Assembly
9	16155-ZM0-013	Float Valve
10	16166-ZM0-003	Main Nozzle
13	16211-ZL8-000	Carburetor Insulator


Ref.	Part Number	Description
14	16212-ZL8-000	Insulator Gasket
15	16221-887-800	Carburetor Gasket
16	16228-ZL8-000	Carburetor Gasket
19	19650-ZM0-000	Air Guide
20	93500-05006-0H	Pan Screw, 5 x 6
22	99101-124-0600	Main Jet, #60
22	99101-124-0620	Main Jet, #62
22	99101-124-0650	Main Jet, #65

Engine Model (Honda GCV160LA)

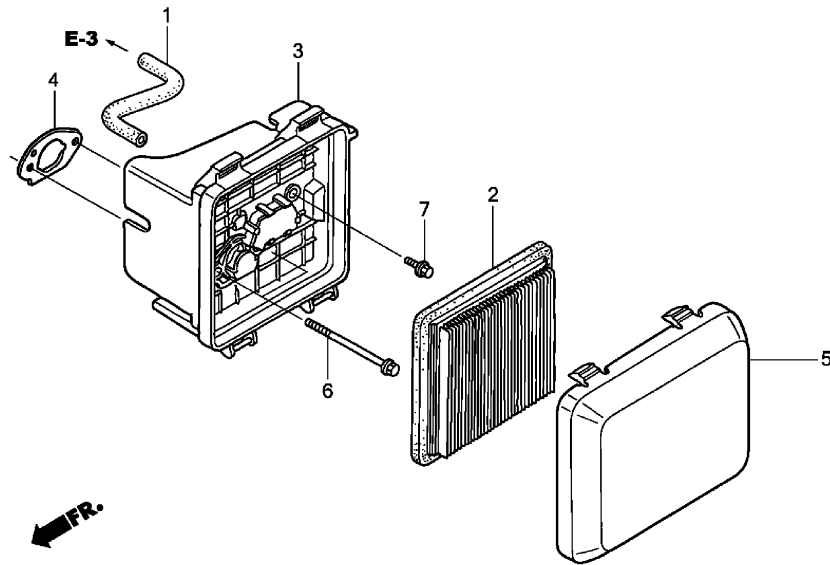


Ref.	Part Number	Description
1	15721-ZM0-000	Breather Tube
2	17211-ZL8-023	Air Cleaner Element
3	17220-ZM0-010	Air Cleaner Case Assembly
4	17228-ZM0-000	Air Cleaner Gasket
5	17231-Z0L-030	Air Cleaner Cover
6	90003-ZM0-000	Flange Bolt, 6 x 86
7	95701-06014-08	Flange Bolt, 6 x 14

Engine Model (Honda GCV160LA)

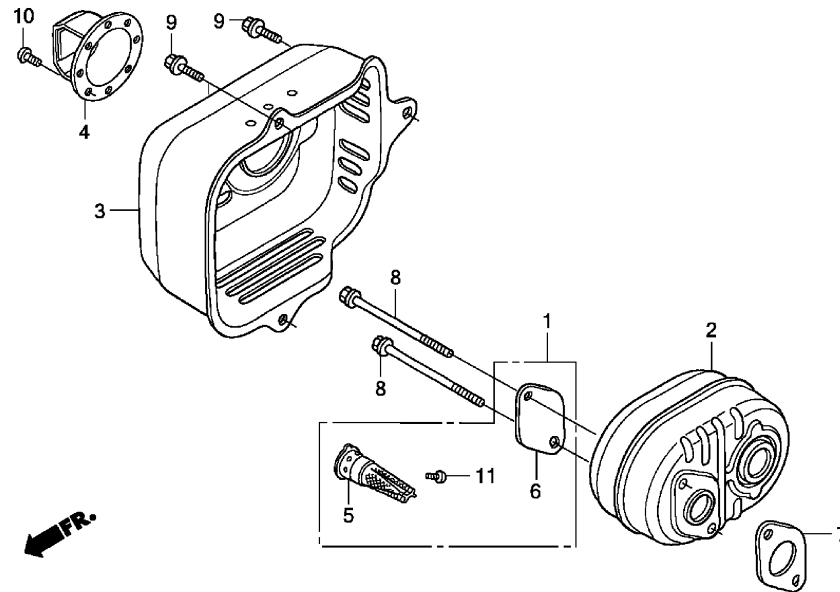


Ref.	PartNumber	Description
1	06180-Z0J-000	Spark Arrester Kit
2	18310-ZM0-000	Muffler
3	18321-Z0L-000	Muffler Protector
4	18348-Z0L-000	Muffler Cap
5	18350-ZL8-000	Spark Arrester
6	18356-ZL8-000	Arrester Number Plate
7	18381-ZL8-305	Muffler Gasket
8	90004-ZL8-000	Flange Bolt, 6 x 79
9	90013-883-000	Flange Bolt, 6 x 12
10	90055-ZE1-000	Tapping Screw, 4 x 6
11	90055-ZE1-000	Tapping Screw, 4 x 6

Engine Model (Honda GCV160LA)

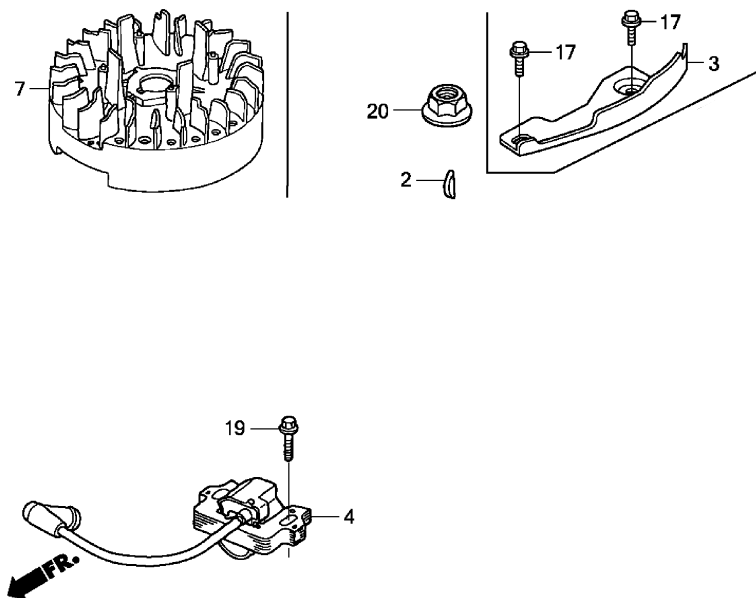


Ref.	PartNumber	Description
2	13331-357-000	Woodruff Key
3	19612-Z0L-000	Side Plate
4	30500-Z0J-003	Ignition Coil Assembly
7	31110-Z0J-013	Complete Flywheel
17	90013-883-000	Flange Bolt, 6 x 12
19	90022-888-010	Flange Bolt, 6 x 20
20	90201-878-003	Nut, 14mm

Engine Model (Honda GCV160LA)

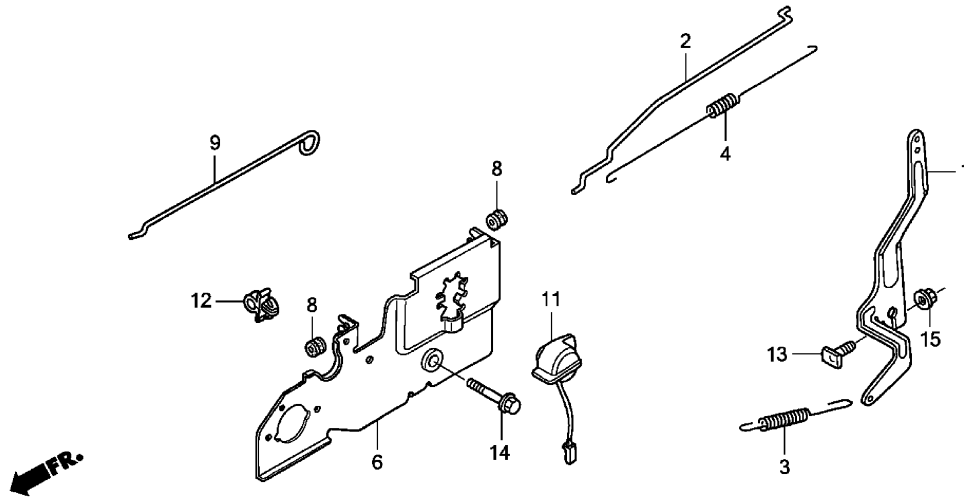

Ref.	PartNumber	Description
1	16551-ZM0-010	Governor Arm
2	16555-Z0L-800	Governor Rod
3	16561-ZM0-V30	Governor Spring
4	16562-ZM0-000	Throttle Return Spring
6	16580-Z0L-800	Control Base
8	16613-893-000	Choke Rod Grommet
9	16674-Z0L-800	Choke Rod
11	35120-Z0L-801	Engine Stop Switch Assembly
12	51125-Z0L-003	Wire Holder
12	90681-959-003	Cable Clip
13	90015-ZE5-010	Governor Arm Bolt
14	90016-ZE8-000	Flange Bolt, 6 x 45
15	94050-06000	FlangeNut, 6mm


Engine Model (Honda GCV160LA)

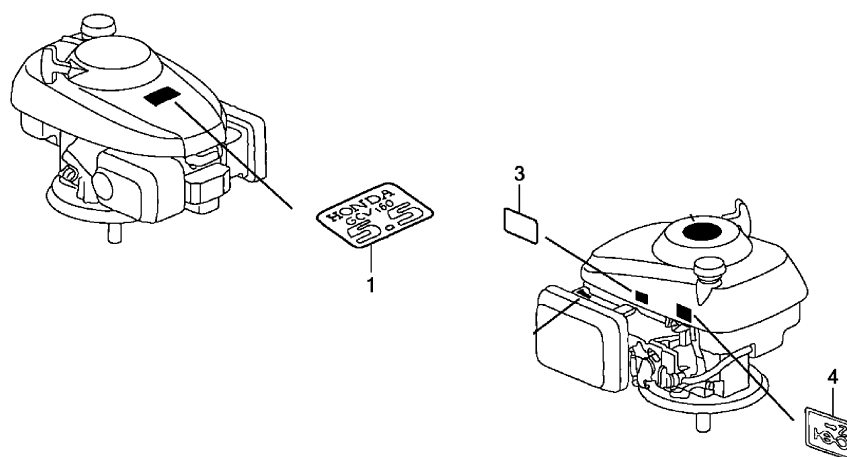


Ref.	PartNumber	Description
1	87101-ZM0-010	Emblem Label
3	87114-ZH7-821	Warning Label
4	87528-ZL8-000	Choke Label

[illegible]

Kohler XT173-3315 Crankshaft

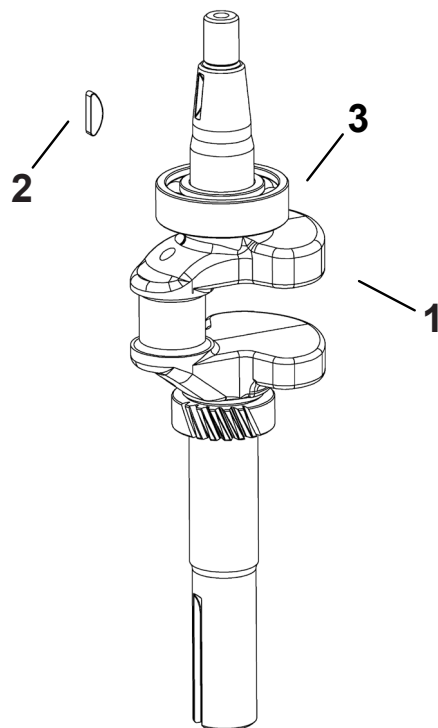


Ref.	Part Number	Description
1	KH-14-014-123-S	Crankshaft Assembly
2	KH-14-340-01-S	Key, Flywheel
3	KH-17-030-12-S	Ball Bearing

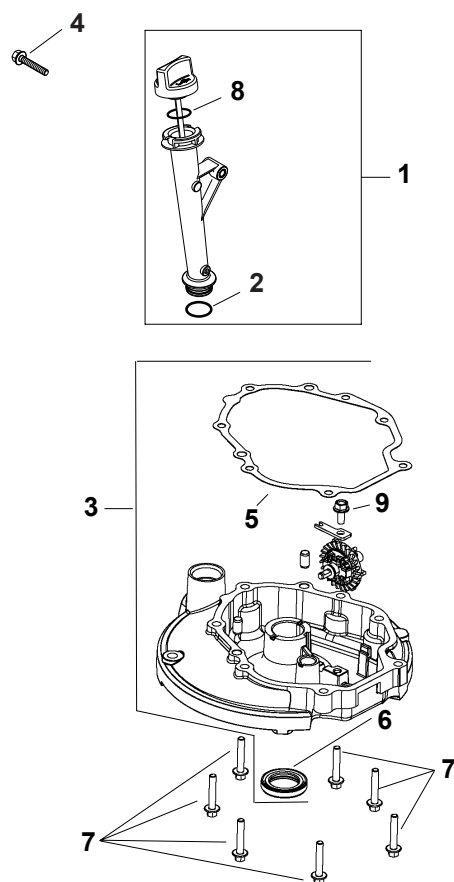


Ref.	Part Number	Description
1	KH-14-123-13-S	Oil Fill Tube Assembly
2	KH-14-153-03-S	Oil Fill Tube O-Ring
3	KH-14-199-06-S	Oil Pan Kit (Inc. Governor Gear Assembly, Dowel Pins)
4	KH-25-086-145-S	Hex Flange Screw, M6
5	KH-14-041-06-S	Oil Pan Gasket
6	KH-14-032-07-S	Oil Seal
7	KH-25-086-161-S	Hex Flange Screw, M8
8	KH-14-153-05-S	O-Ring
9	KH-25-086-159-S	Hex Flange Screw, M6

Kohler XT173-3315 Crankcase

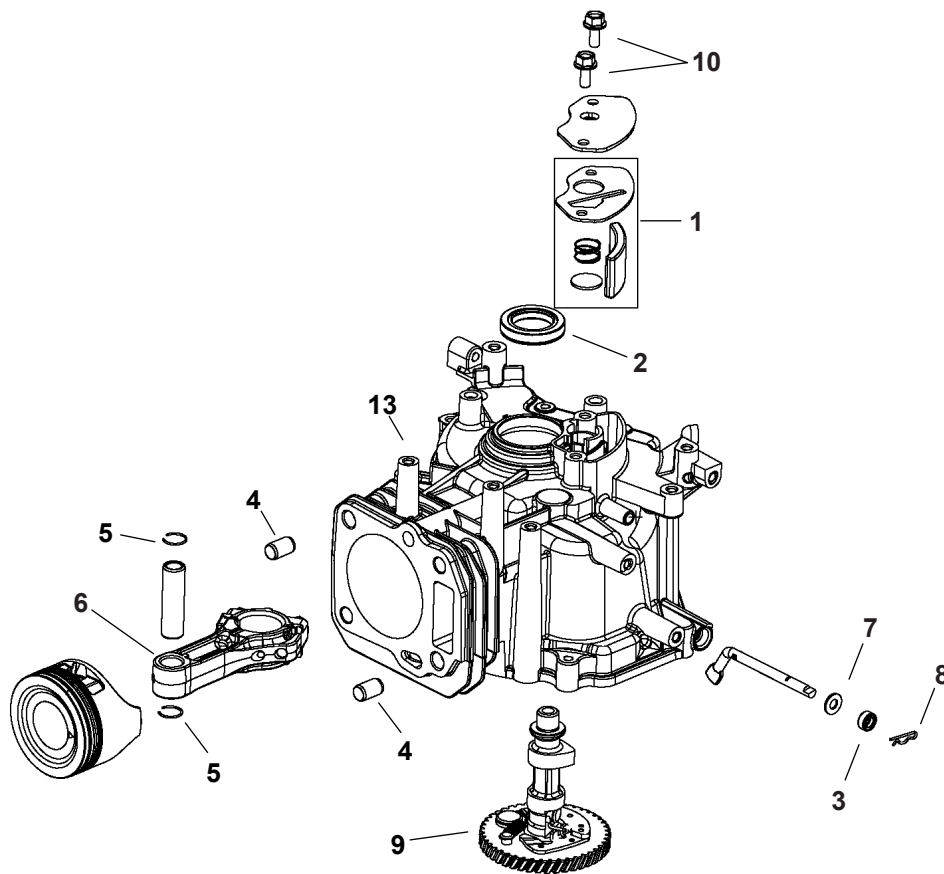

Ref.	Part-Number	Description
1	KH-14-050-01-S	Breather Filter Kit (Inc. Breather Cover Gasket, Breather Cover Spring, Breather Filter, Breather Reed)
2	KH-14-032-02-S	Oil Seal
3	KH-14-032-04-S	Oil Seal
4	KH-14-380-06-S	Cylinder Head Dowel
5	KH-14-018-03-S	Piston Pin Retainer
6	KH-14-067-01-S	Connecting Rod
7	KH-14-468-07-S	Flat Washer (Dia. 13mm O.D.)
8	KH-14-154-01-S	Governor Shaft Clip
9	KH-14-010-12-S	Camshaft Assembly
10	KH-25-086-159-S	Hex Flange Screw, M6
11	KH-14-561-09-S	Crankcase
N/A	KH-14-874-02-S	Piston Kit
N/A	KH-17-108-01-S	Piston Ring Set


Kohler XT173-3315 Blower Housing & Baffles

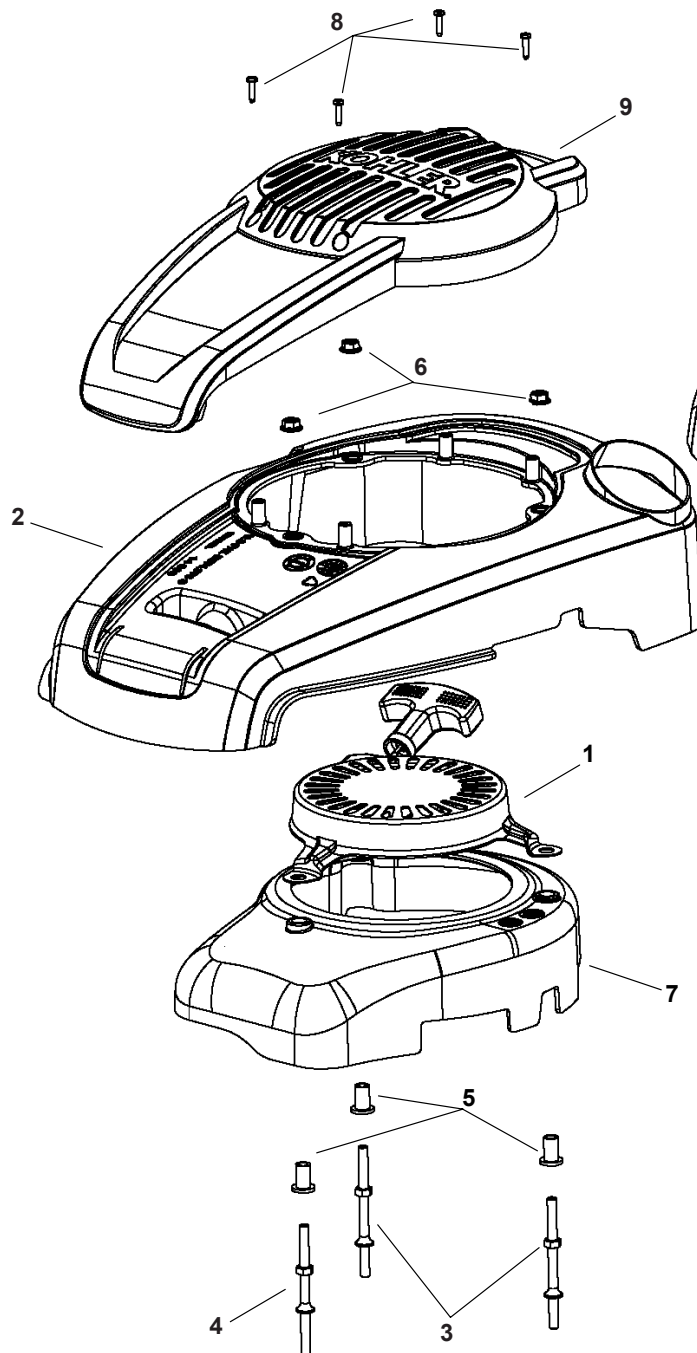


Ref.	Part-Number	Description
1	KH-14-165-07-S	Retractable Starter Assembly
2	KH-14-096-27-S	Engine Cover, Black
3	KH-14-072-12-S	Stud
4	KH-14-072-13-S	Stud
5	KH-14-112-07-S	Spacer

Ref.	Part-Number	Description
6	KH-14-100-08-S	Hex Flange Nut, M6
7	KH-14-027-03-S	Blower Housing
8	KH-25-086-167-S	Screw, #15 6-Lobe Pan Hd
9	KH-14-332-04-S	Engine Cover Insert, Black

Kohler XT173-3315 Head/Valve/Breather

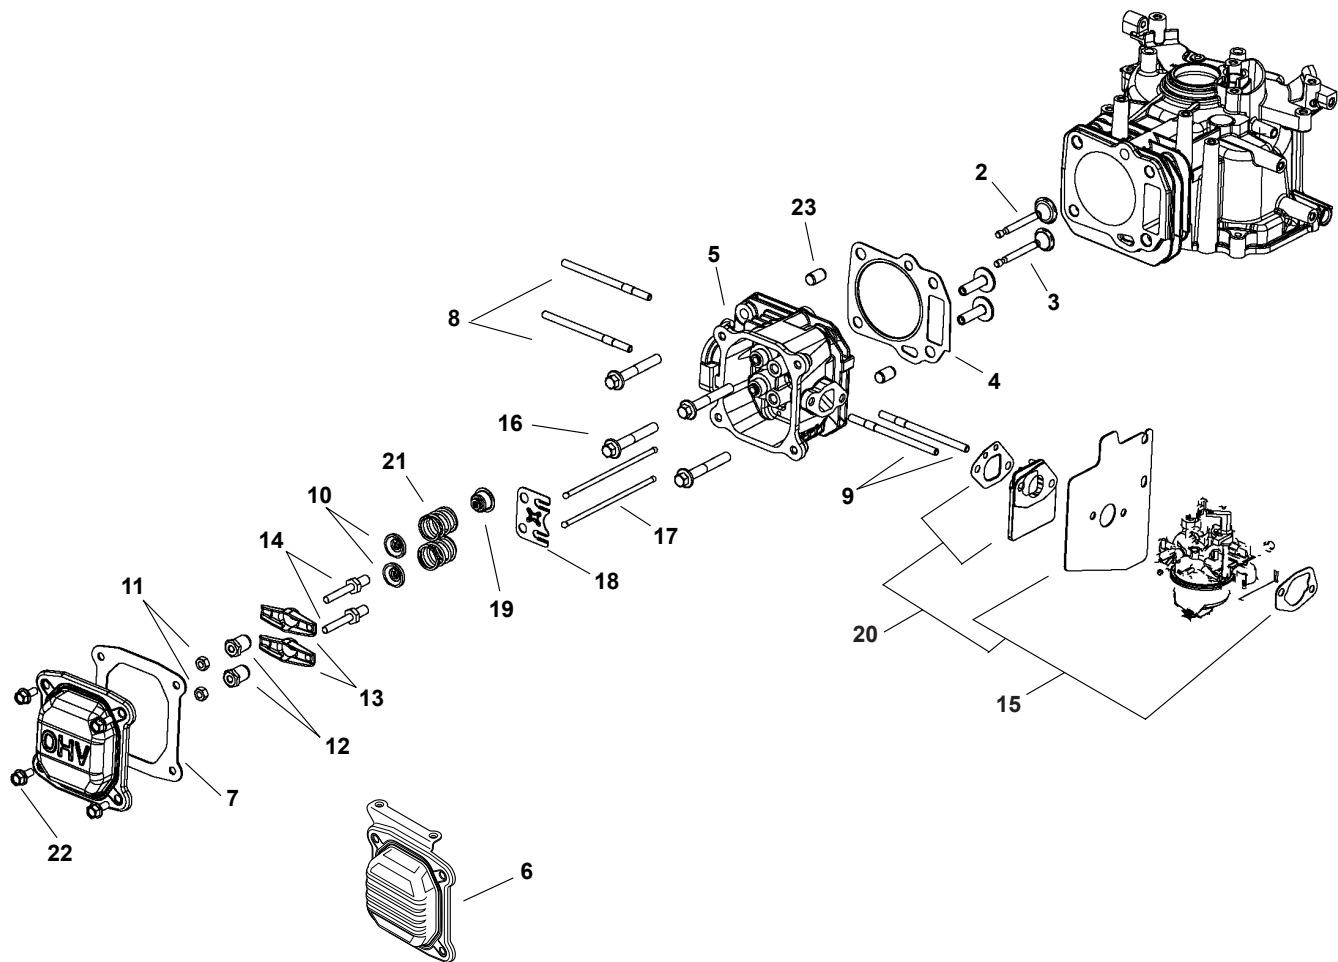


Valve Seal also included
in Gasket Set.

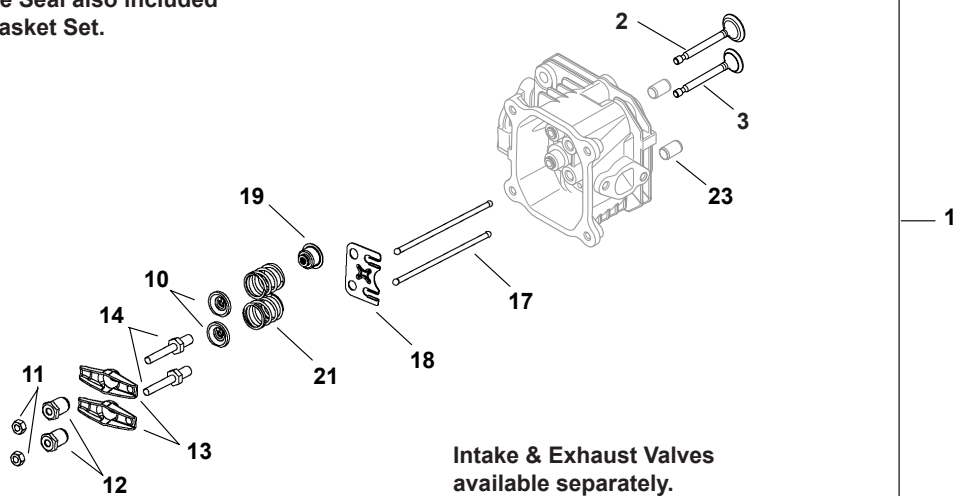

Kohler XT173-3315 Head/Valve/Breather


Ref.	Part-Number	Description
1	KH-14-755-02-S	Valve Train Kit (Inc. Valve Stem Seal, Valve Springs, Push Rod Guide Plate, Cylinder Head Dowels, Push Rods)
2	KH-14-017-01-S	Intake Valve
3	KH-14-016-01-S	Exhaust Valve
4	KH-14-841-04-S	Head Gasket Kit (Inc. Muffler Gasket)
5	KH-14-318-03-S	Cylinder Head Kit
6	KH-14-096-05-S	Valve Cover Kit
7	KH-14-041-01-S	Valve Cover Gasket
8	KH-14-072-06-S	Stud (M6)
9	KH-24-072-06-S	Stud, M6 x 1.0 x 93 (Inc. Muffler Gasket, Exhaust & Flange Lock Nuts)
10	KH-14-018-02-S	Valve Spring Retainer
11	KH-14-100-01-S	Hex Jam Nut
12	KH-14-599-01-S	Rocker Arm Pivot
13	KH-14-186-02-S	Rocker Arm
14	KH-14-072-22-S	Rocker Arm Stud
15	KH-14-041-24-S	Gasket Kit
16	KH-25-086-140-S	Hex Flange Screw, M8
17	KH-14-411-01-S	Push Rod
18	KH-14-146-01-S	Push Rod Guide Plate
19	KH-14-032-08-S	Valve Stem Seal
20	KH-14-112-13-S	Carburetor Spacer
21	KH-14-089-02-S	Valve Spring
22	KH-25-086-159-S	Hex Flange Screw, M6
23	KH-14-380-06-S	Cylinder Head Dowel

Kohler XT173-3315 Ignition/Electrical

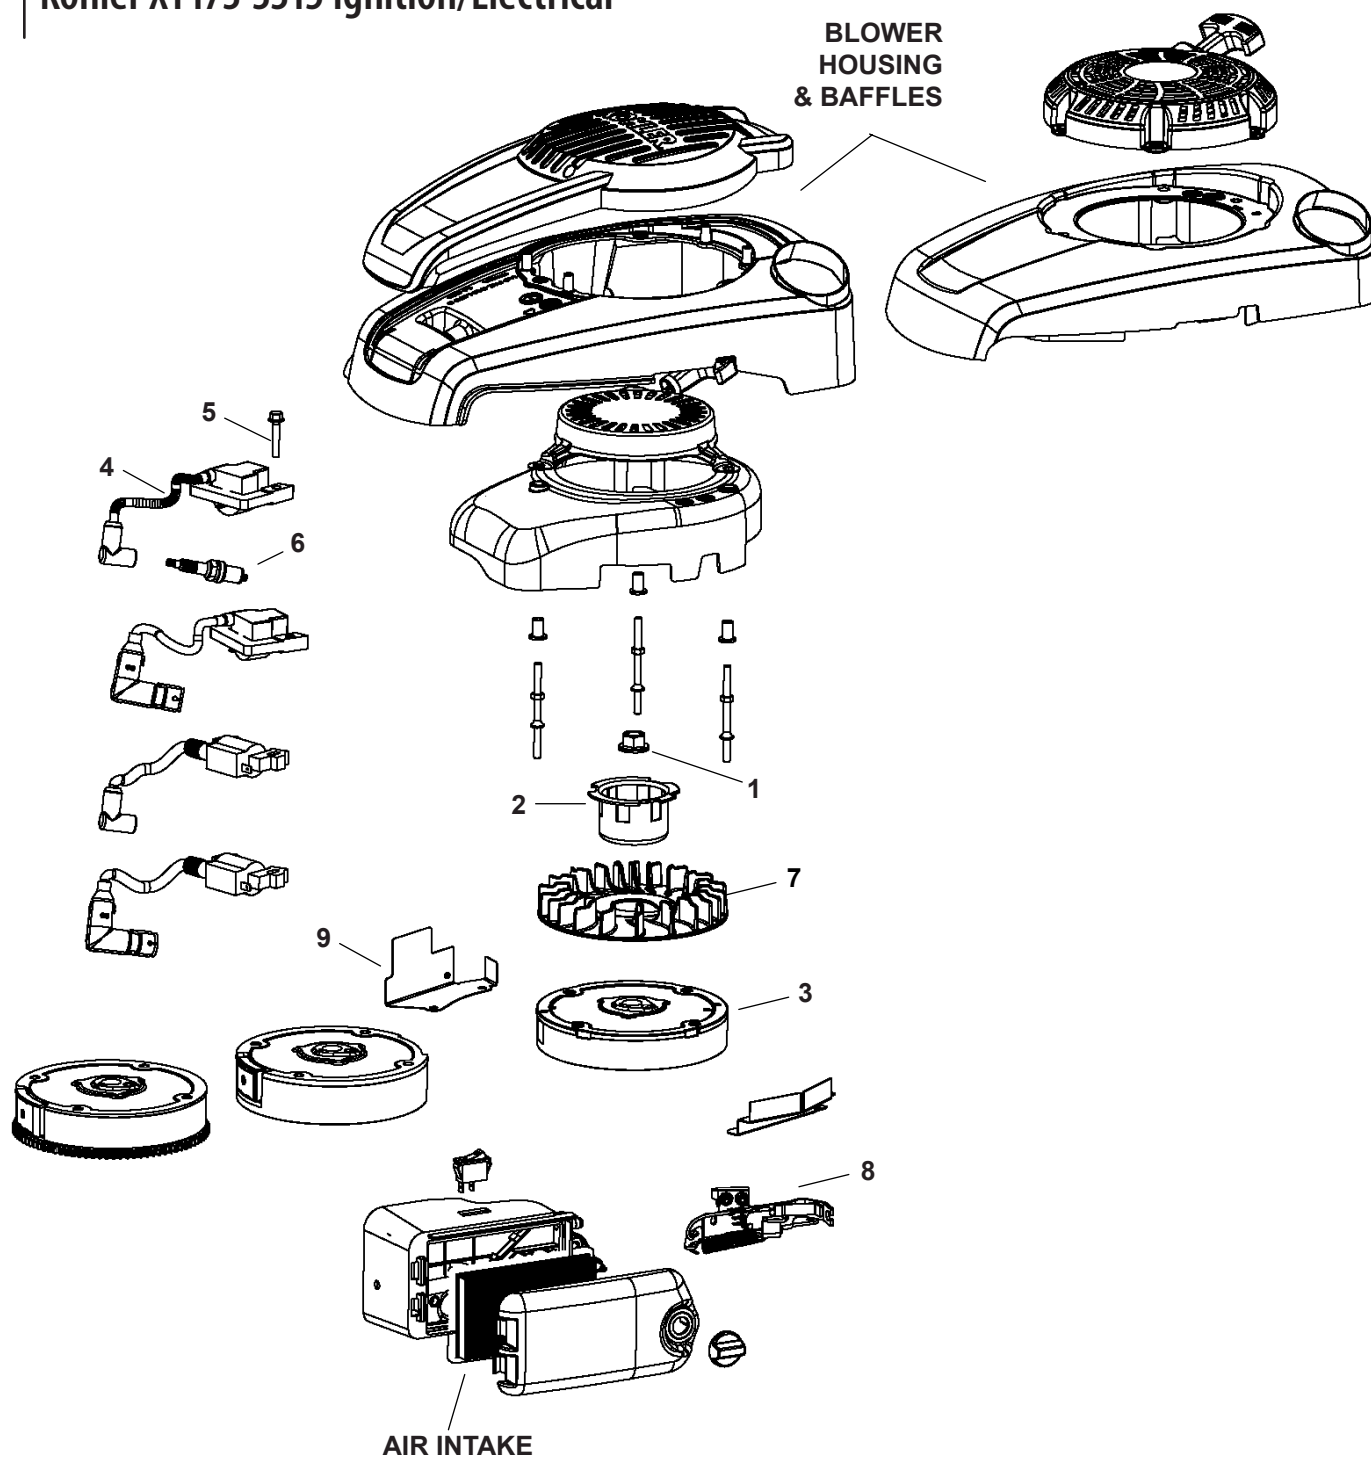


Ref.	Part Number	Description
1	KH-14-100-10-S	Nut, Flywheel (w/ serrations)
2	KH-14-109-02-S	Drive Cup
3	KH-14-025-02-S	Flywheel Assembly
4	KH-14-584-05-S	Ignition Module
5	KH-25-086-145-S	Hex Flange Screw, M6

Ref.	Part Number	Description
6	KH-14-132-03-S	Spark Plug
7	KH-14-157-01-S	Flywheel Fan
8	KH-14-219-07-S	Brake Assembly, Carb Side
9	KH-14-314-01-S	Guard

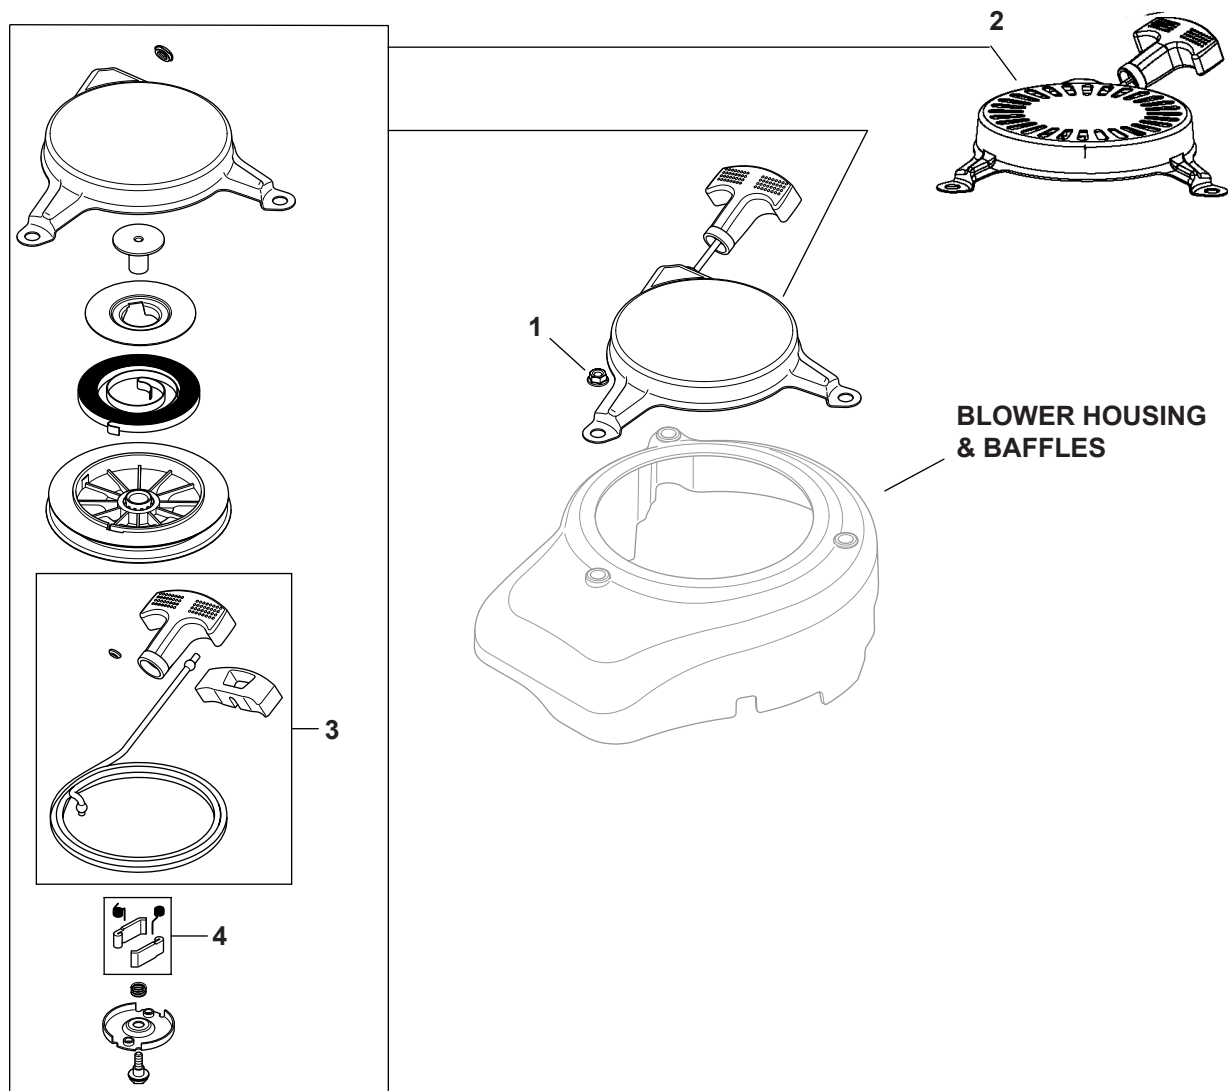


Ref.	Part-Number	Description
1	KH-14-100-08-S	Nut, Hex Flange, M6
2	KH-14-165-07-S	Starter Assembly, Retractable
3	KH-14-160-01-S	Recoil Starter Rope
4	KH-14-379-01-S	Kit, Pawl Repair

Kohler XT173-3315 Fuel System

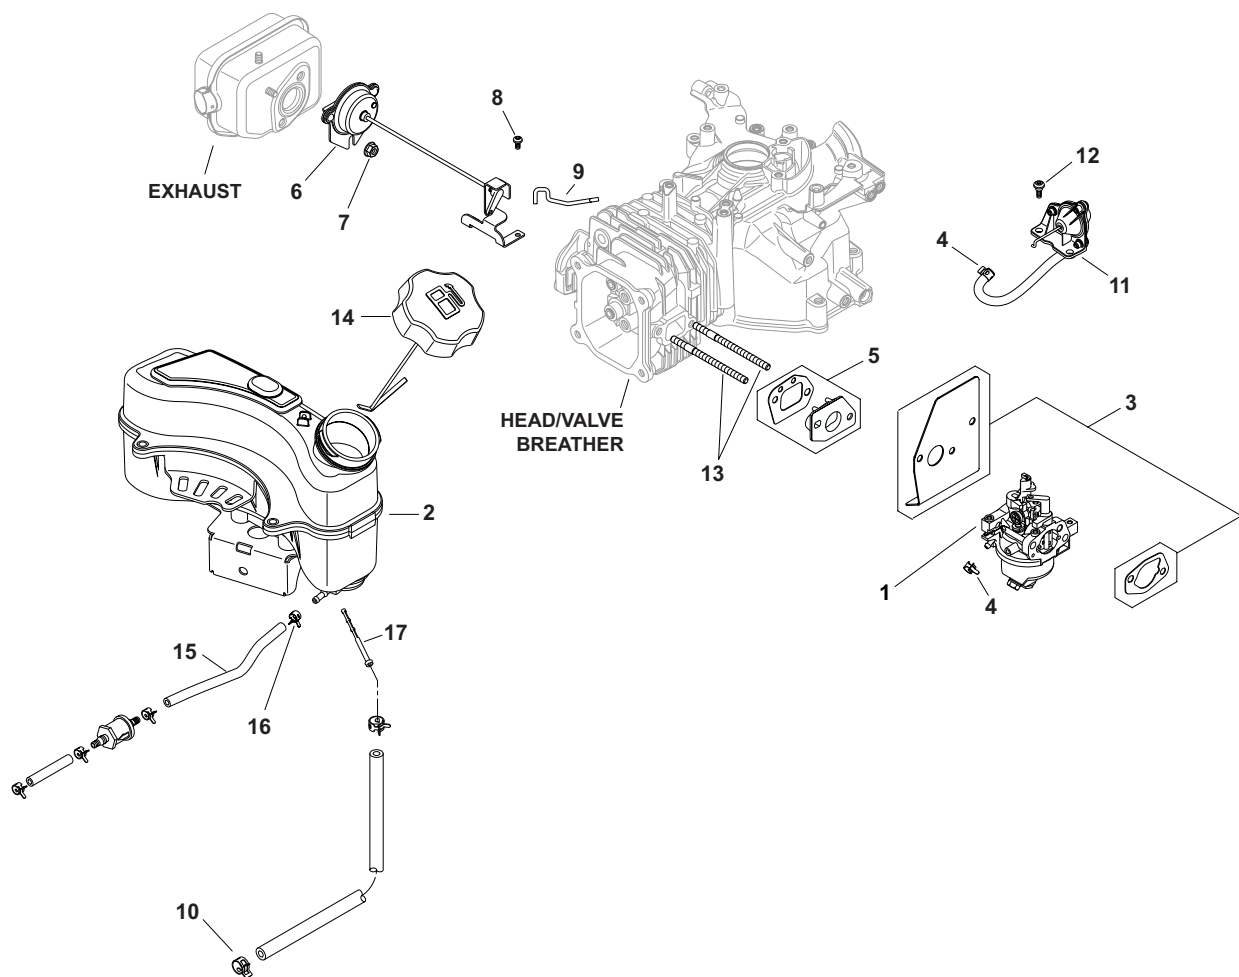


Ref.	Part-Number	Description
1	KH-14-853-41-S	Carburetor, 13MM Auto Choke
2	KH-14-065-29-S	Fuel Tank Assembly
3	KH-14-041-24-S	Kit, Gasket
4	KH-14-237-05-S	Hose Clamp
5	KH-14-112-13-S	Carburetor Spacer Kit
6	KH-14-187-01-S	Arm, Assembly
7	KH-14-100-08-S	Nut, Hex Flange, M6
8	KH-25-086-277-S	Screw, M4 Thread Forming
9	KH-14-079-17-S	Linkage, Auto Choke

Ref.	Part-Number	Description
10	KH-14-237-07-S	Hose Clamp
11	KH-14-268-04-S	Diaphragm, Assembly
12	KH-25-086-275-S	Screw, Shoulder
13	KH-24-072-06-S	Stud, M6 x 1.0 x 93
14	KH-14-227-15-S	Fuel Cap Assembly
15	KH-25-111-69-S	Fuel Hose, Low-Permeation
16	KH-14-237-07-S	Hose Clamp
17	KH-14-050-14-S	Filter, Fuel In-Nipple

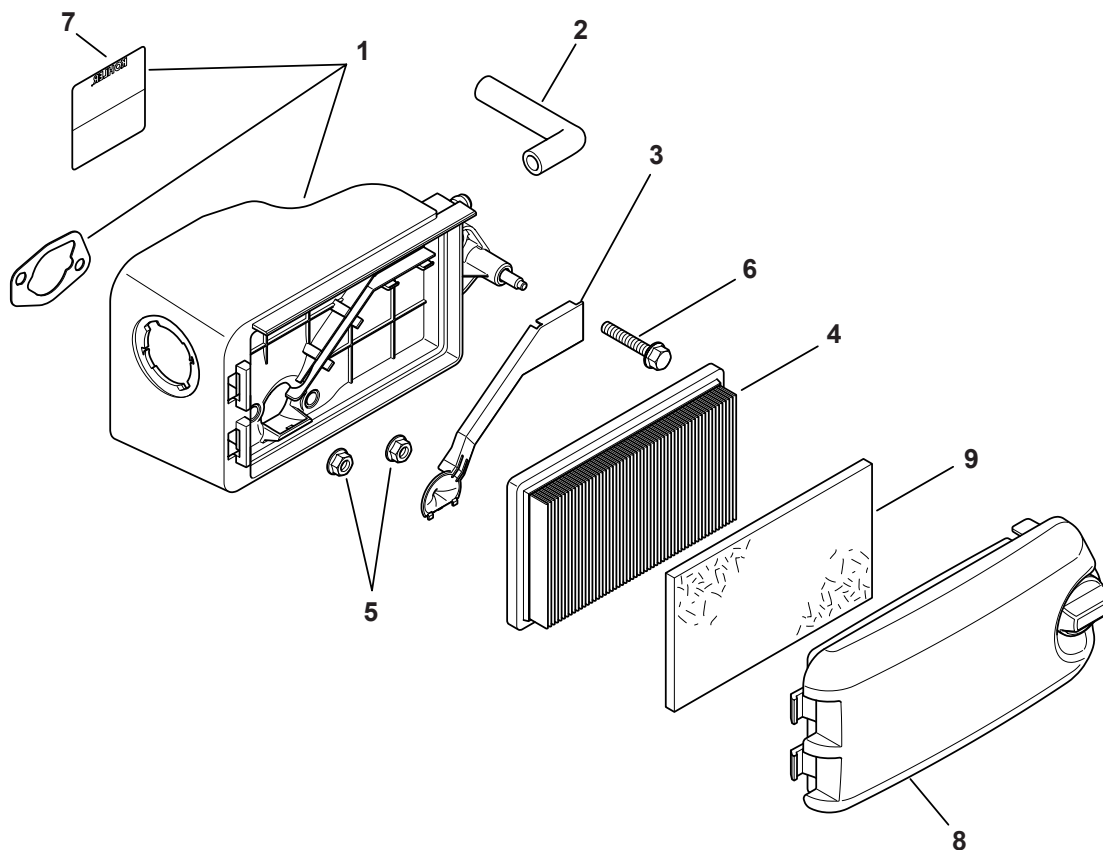


Ref.	Part-Number	Description
1	KH-14-094-13-S	Kit, Air Cleaner Base (Inc. Air Cleaner Base Gasket)
2	KH-14-123-05-S	Breather Hose
3	KH-14-096-51-S	Cover, A/C Base (Breather Gas)
4	KH-14-083-01-S	Air Cleaner Element
5	KH-14-100-08-S	Nut, Hex Flange, M6
6	KH-25-086-145-S	Screw, Hex Flange, M6
7	KH-41-037-10-S	Nameplate, Service
8	KH-14-096-110-S	Air Cleaner Cover
9	KH-14-083-11-S	Carbon Pre-Filter Element

Kohler XT173-3315 Engine Controls

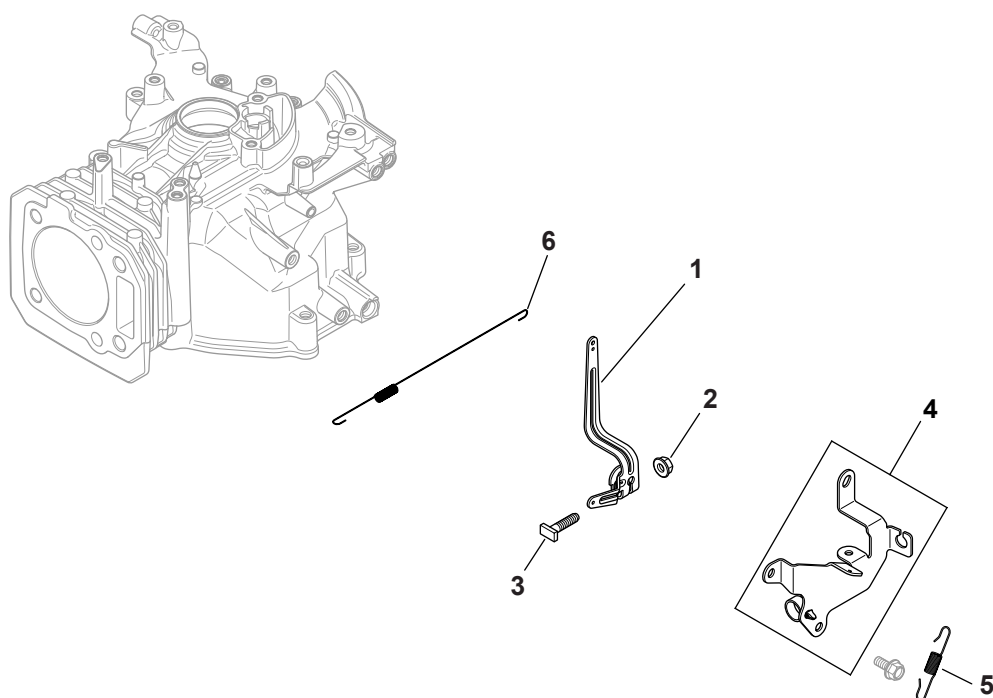


Ref.	Part-Number	Description
1	KH-14-090-12-S	Governor Lever
2	KH-14-100-08-S	Nut, Hex Flange, M6
3	KH-25-086-166-S	Screw, Rectangle Head, M6
4	KH-14-126-22-S	Control Bracket
5	KH-14-089-14-S	Governor Spring
6	KH-14-089-43-S	Linkage Spring

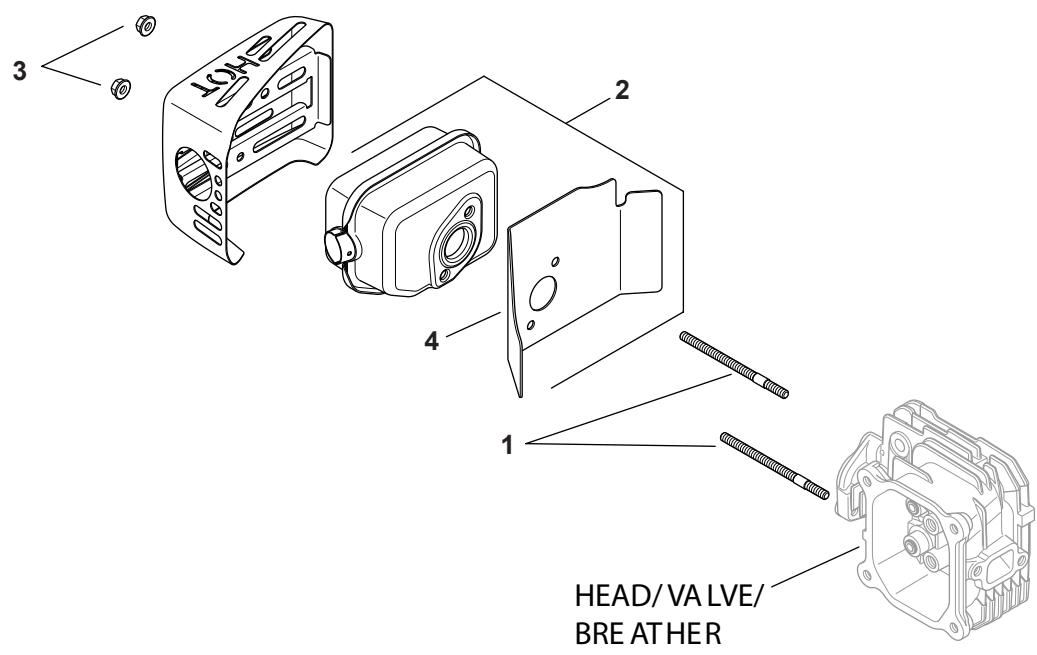

Ref.	Part-Number	Description
1	KH-14-072-06-S	Stud, M6
2	KH-14-068-05-S	Kit, Muffler
3	KH-14-100-09-S	Nut, Hex Flange Lock, M6
4	KH-14-041-22-S	Muffler Gasket

Kohler XT173-3315 Decals

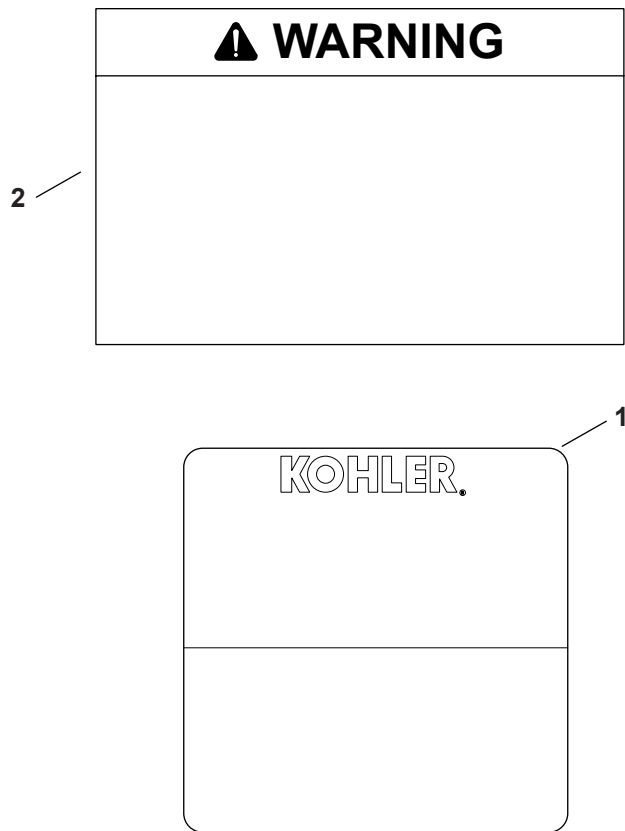


Artwork is representative.
Actual labels may differ depending on model and specification number.


Ref.	Part Number	Description
1	KH-41-037-10-S	Nameplate, Service
2	KH-14-113-57-S	Decal, Warning

[illegible]

Kohler XT173-3316 Crankshaft

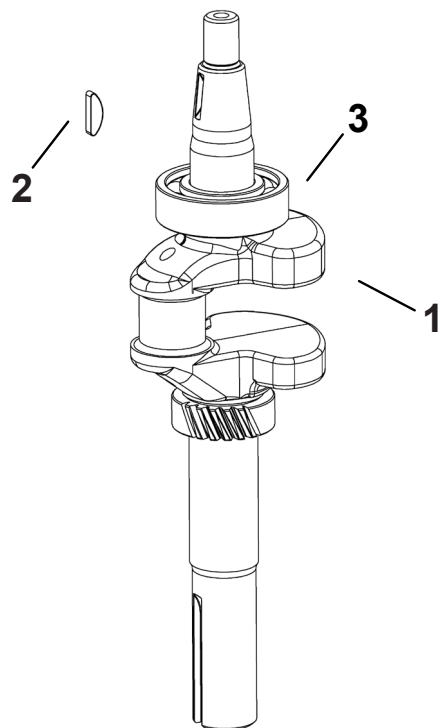


Ref.	Part Number	Description
1	KH-14-014-123-S	Crankshaft Assembly
2	KH-14-340-01-S	Key, Flywheel
3	KH-17-030-12-S	Ball Bearing

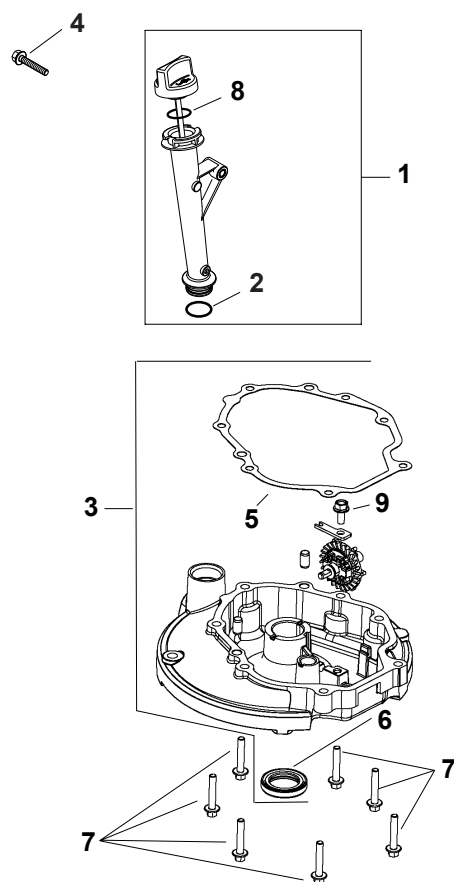


Ref.	Part Number	Description
1	KH-14-123-13-S	Oil Fill Tube Assembly
2	KH-14-153-03-S	Oil Fill Tube O-Ring
3	KH-14-199-06-S	Oil Pan Kit (Inc. Governor Gear Assembly, Dowel Pins)
4	KH-25-086-145-S	Hex Flange Screw, M6
5	KH-14-041-06-S	Oil Pan Gasket
6	KH-14-032-07-S	Oil Seal
7	KH-25-086-161-S	Hex Flange Screw, M8
8	KH-14-153-05-S	O-Ring
9	KH-25-086-159-S	Hex Flange Screw, M6

Kohler XT173-3316 Crankcase

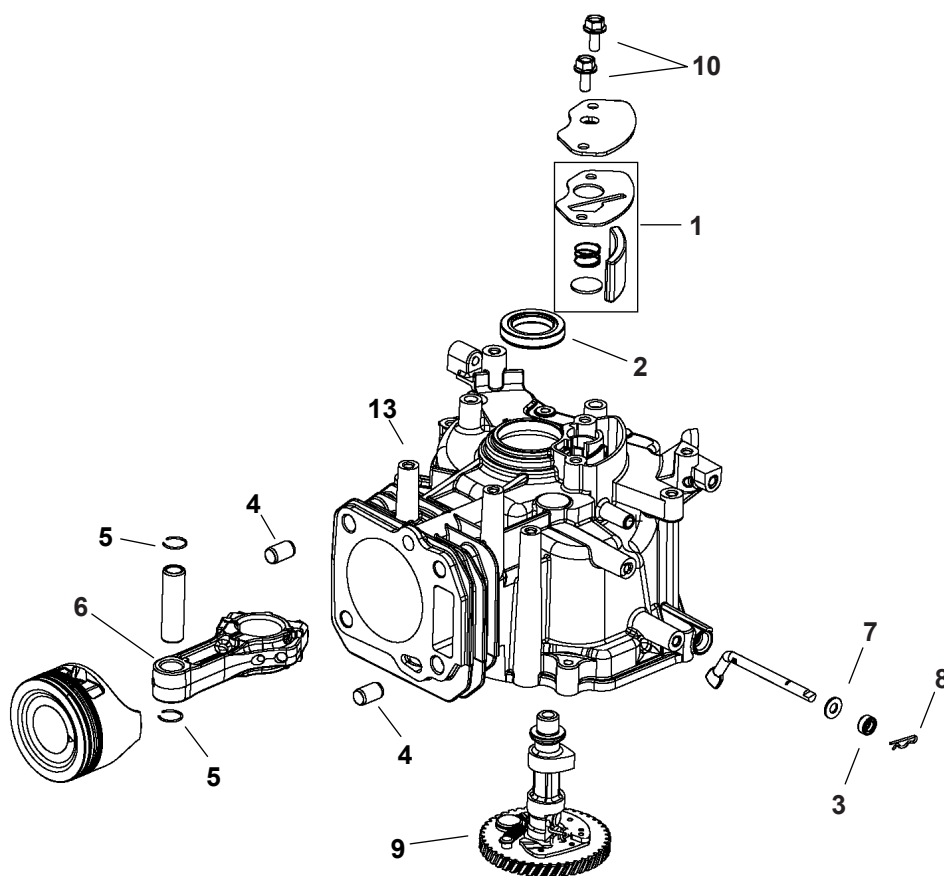

Ref.	Part-Number	Description
1	KH-14-050-01-S	Breather Filter Kit (Inc. Breather Cover Gasket, Breather Cover Spring, Breather Filter, Breather Reed)
2	KH-14-032-02-S	Oil Seal
3	KH-14-032-04-S	Oil Seal
4	KH-14-380-06-S	Cylinder Head Dowel
5	KH-14-018-03-S	Piston Pin Retainer
6	KH-14-067-01-S	Connecting Rod
7	KH-14-468-07-S	Flat Washer (Dia. 13mm O.D.)
8	KH-14-154-01-S	Governor Shaft Clip
9	KH-14-010-12-S	Camshaft Assembly
10	KH-25-086-159-S	Hex Flange Screw, M6
11	KH-14-561-09-S	Crankcase
N/A	KH-14-874-02-S	Piston Kit
N/A	KH-17-108-01-S	Piston Ring Set


Kohler XT173-3316 Blower Housing & Baffles

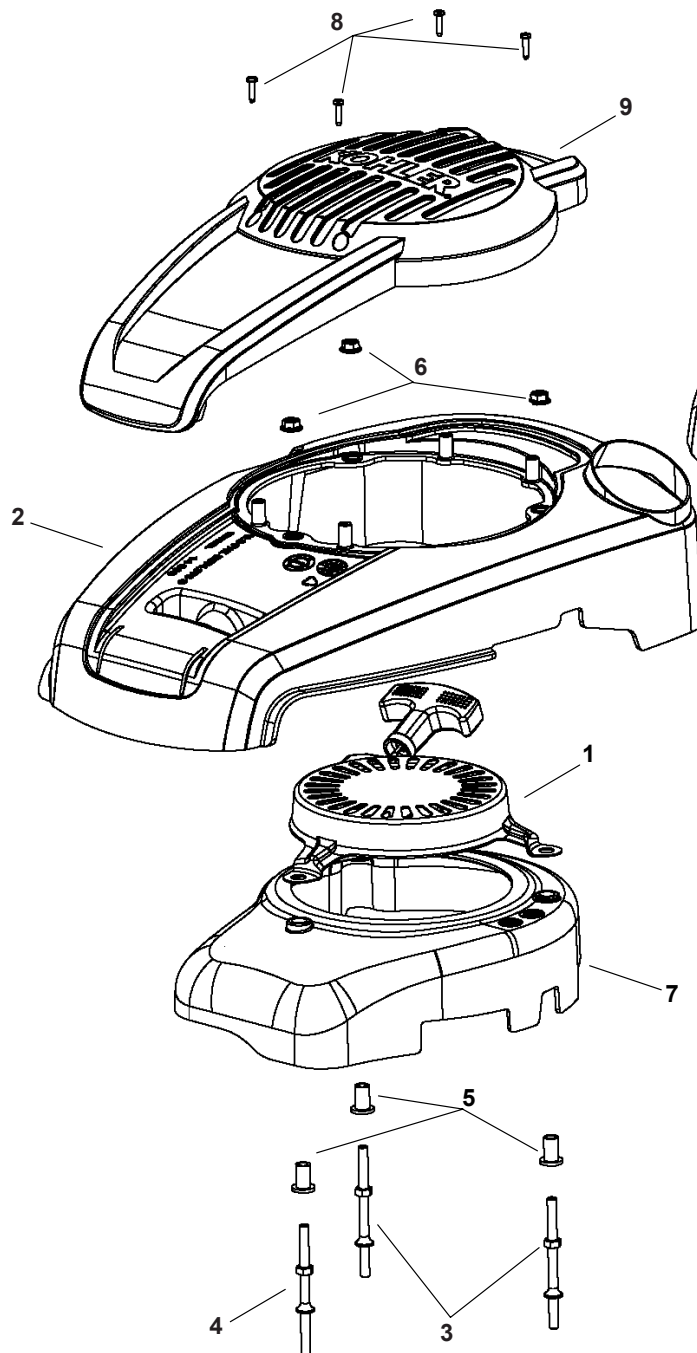


Ref.	Part-Number	Description
1	KH-14-165-07-S	Retractable Starter Assembly
2	KH-14-096-27-S	Engine Cover, Black
3	KH-14-072-12-S	Stud
4	KH-14-072-13-S	Stud
5	KH-14-112-07-S	Spacer

Ref.	Part-Number	Description
6	KH-14-100-08-S	Hex Flange Nut, M6
7	KH-14-027-03-S	Blower Housing
8	KH-25-086-167-S	Screw, #15 6-Lobe Pan Hd
9	KH-14-332-04-S	Engine Cover Insert, Black

Kohler XT173-3316 Head/Valve/Breather

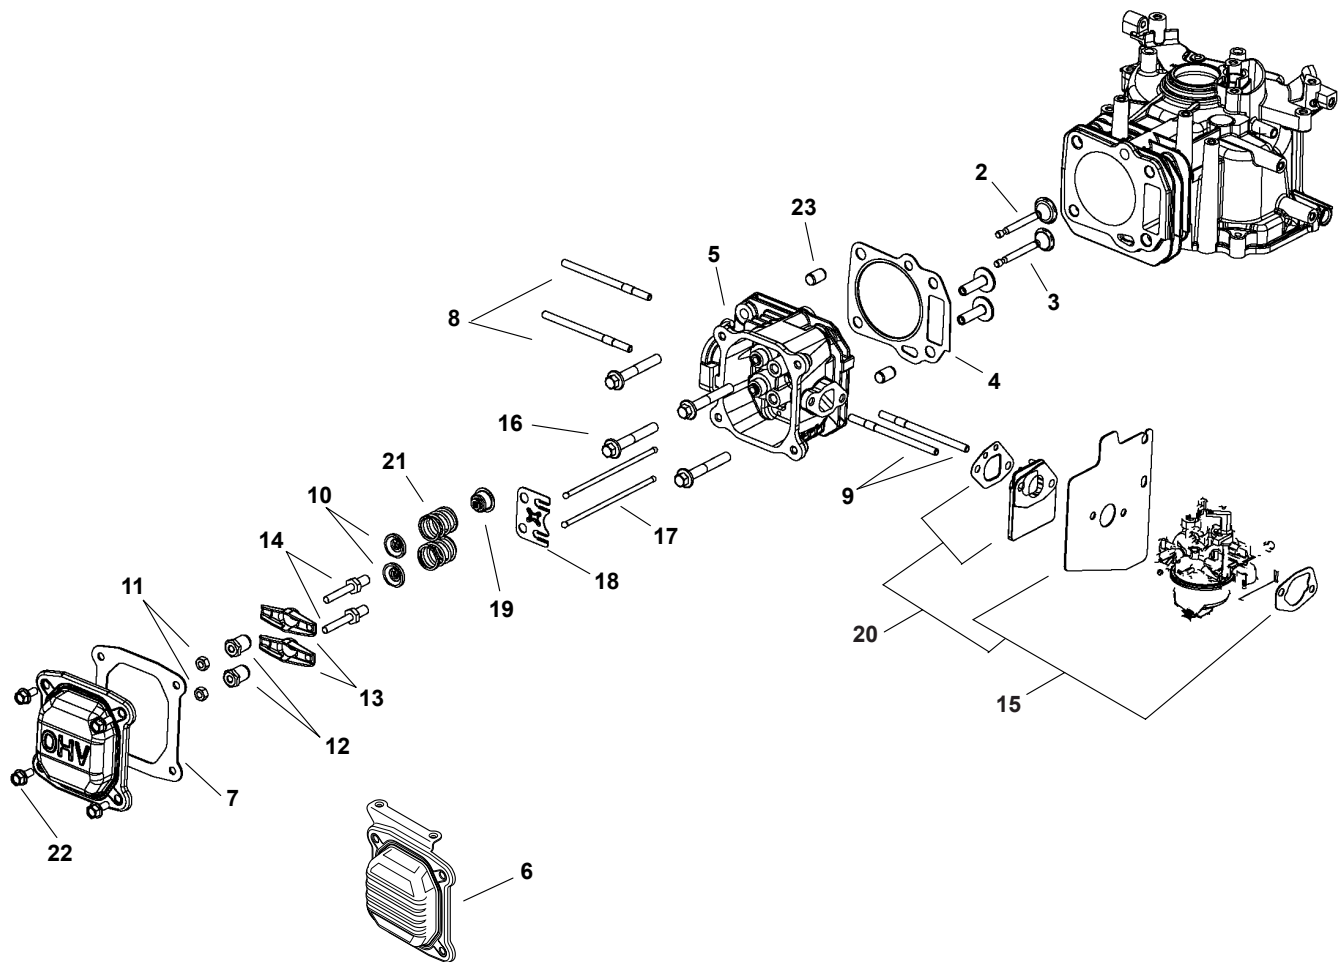


Valve Seal also included
in Gasket Set.

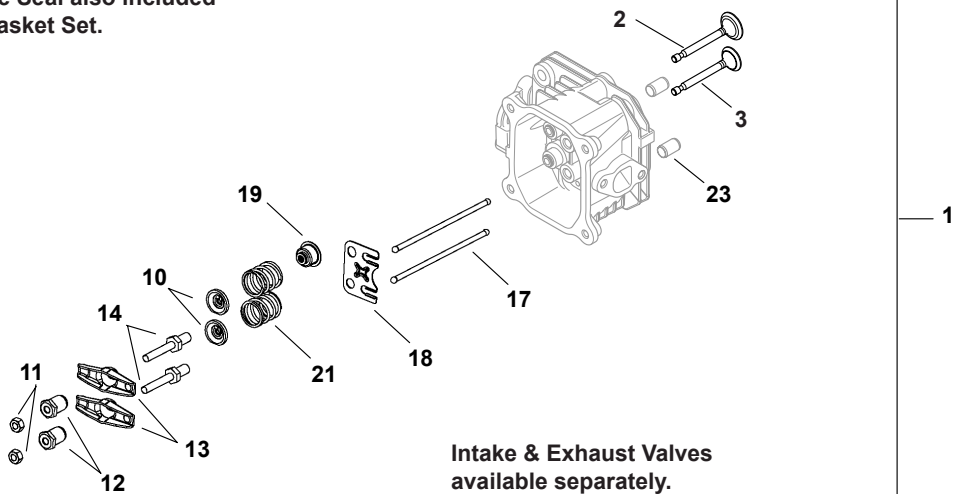

Kohler XT173-3316 Head/Valve/Breather

Ref.	Part-Number	Description
1	KH-14-755-02-S	Valve Train Kit (Inc. Valve Stem Seal, Valve Springs, Push Rod Guide Plate, Cylinder Head Dowels, Push Rods)
2	KH-14-017-01-S	Intake Valve
3	KH-14-016-01-S	Exhaust Valve
4	KH-14-841-04-S	Head Gasket Kit (Inc. Muffler Gasket)
5	KH-14-318-03-S	Cylinder Head Kit
6	KH-14-096-05-S	Valve Cover Kit
7	KH-14-041-01-S	Valve Cover Gasket
8	KH-14-072-06-S	Stud (M6)
9	KH-24-072-06-S	Stud, M6 x 1.0 x 93 (Inc. Muffler Gasket, Exhaust & Flange Lock Nuts)
10	KH-14-018-02-S	Valve Spring Retainer
11	KH-14-100-01-S	Hex Jam Nut
12	KH-14-599-01-S	Rocker Arm Pivot
13	KH-14-186-02-S	Rocker Arm
14	KH-14-072-22-S	Rocker Arm Stud
15	KH-14-041-24-S	Gasket Kit
16	KH-25-086-140-S	Hex Flange Screw, M8
17	KH-14-411-01-S	Push Rod
18	KH-14-146-01-S	Push Rod Guide Plate
19	KH-14-032-08-S	Valve Stem Seal
20	KH-14-112-13-S	Carburetor Spacer
21	KH-14-089-02-S	Valve Spring
22	KH-25-086-159-S	Hex Flange Screw, M6
23	KH-14-380-06-S	Cylinder Head Dowel


Kohler XT173-3316 Ignition/Electrical

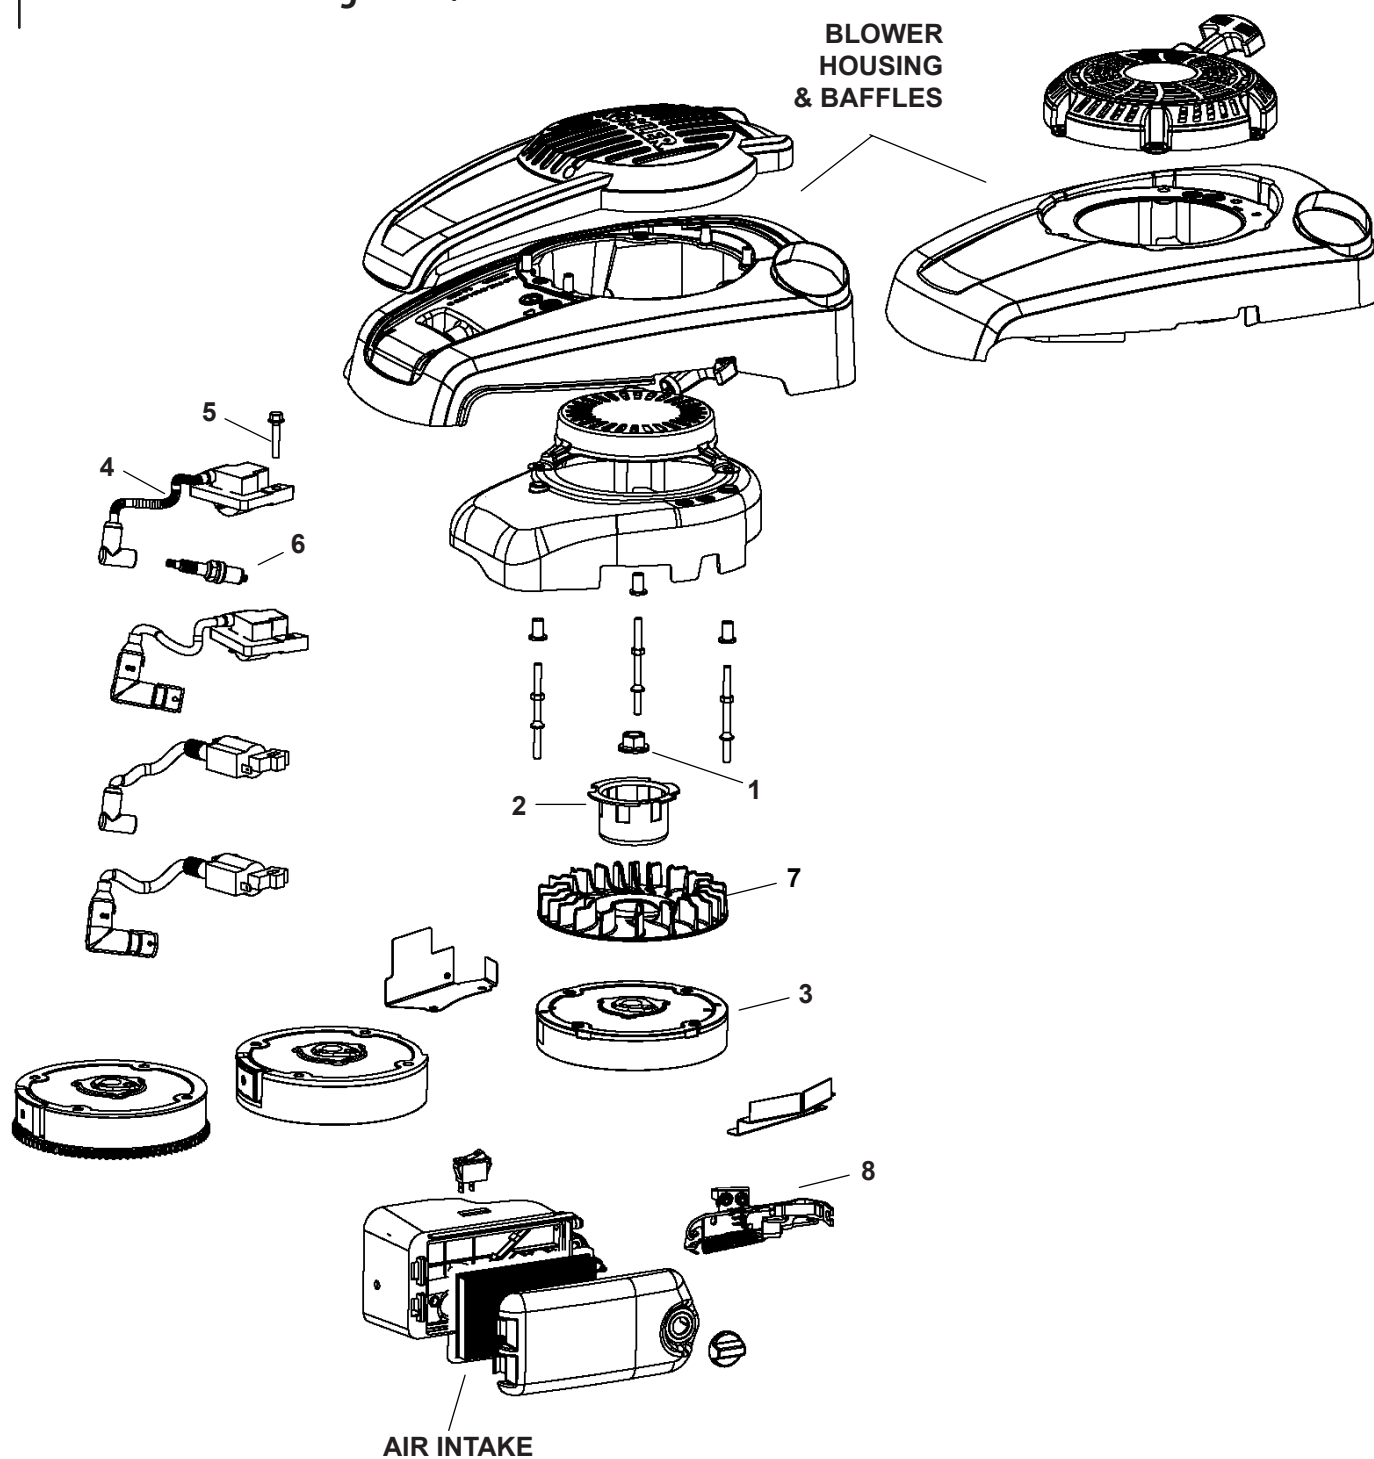

Ref.	Part Number	Description
1	KH-14-100-10-S	Nut, Flywheel (w/ serrations)
2	KH-14-109-02-S	Drive Cup
3	KH-14-025-05-S	Flywheel Assembly
4	KH-14-584-04-S	Ignition Module


Ref.	Part Number	Description
5	KH-25-086-145-S	Hex Flange Screw, M6
6	KH-14-132-03-S	Spark Plug
7	KH-14-157-01-S	Flywheel Fan
8	KH-14-219-11-S	Brake Assembly, ES

Kohler XT173-3316 Starting System

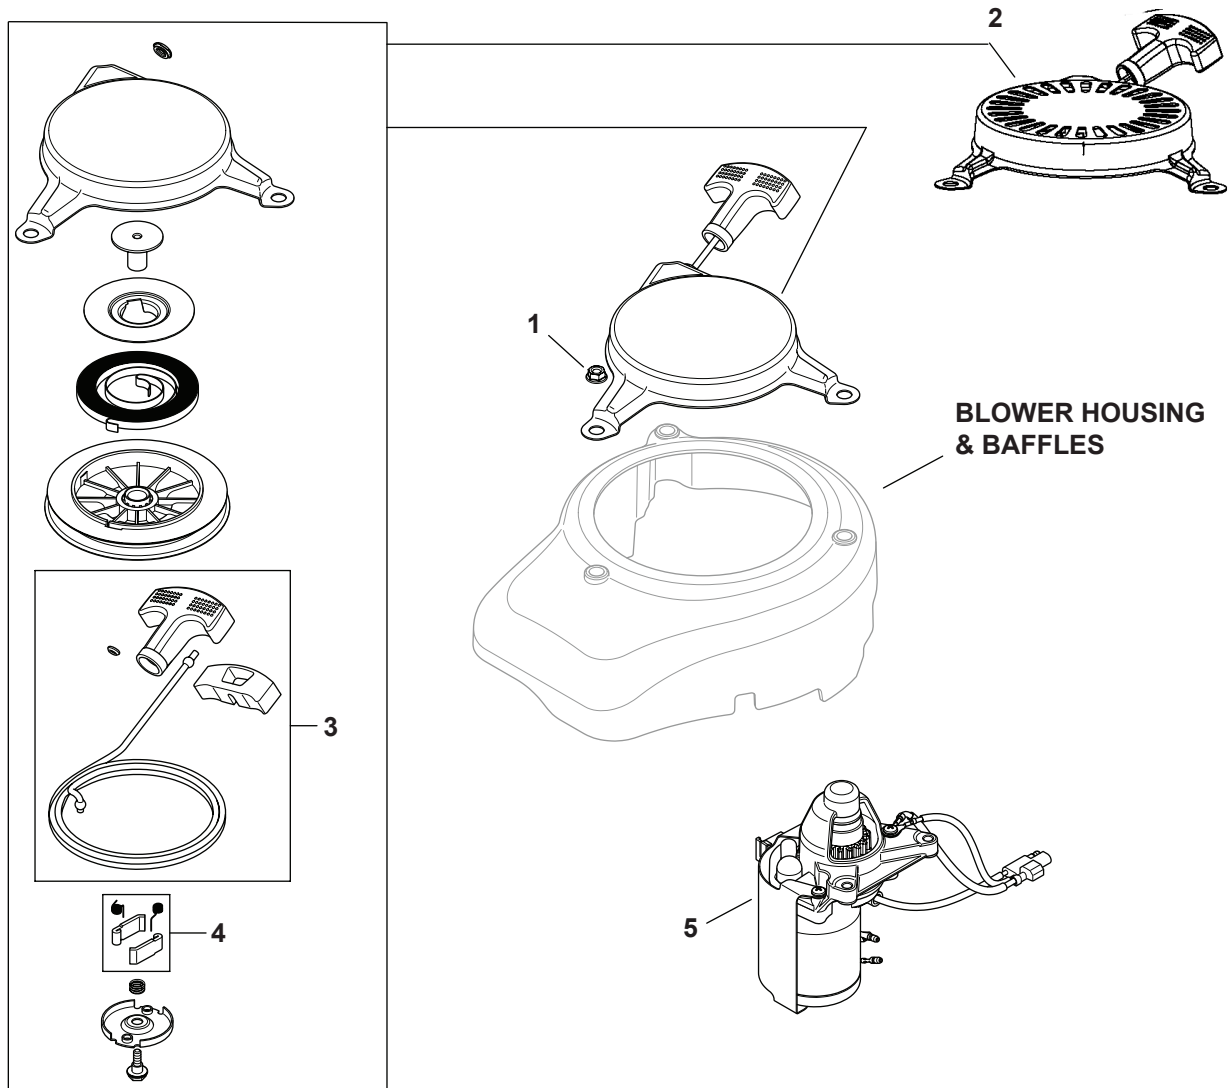


Ref.	Part-Number	Description
1	KH-14-100-08-S	Nut, Hex Flange, M6
2	KH-14-165-07-S	Starter Assembly, Retractable
3	KH-14-160-01-S	Recoil Starter Rope
4	KH-14-379-01-S	Kit, Pawl Repair
5	KH-14-098-04-S	Electric Starter w/ BBC

Kohler XT173-3316 Fuel System

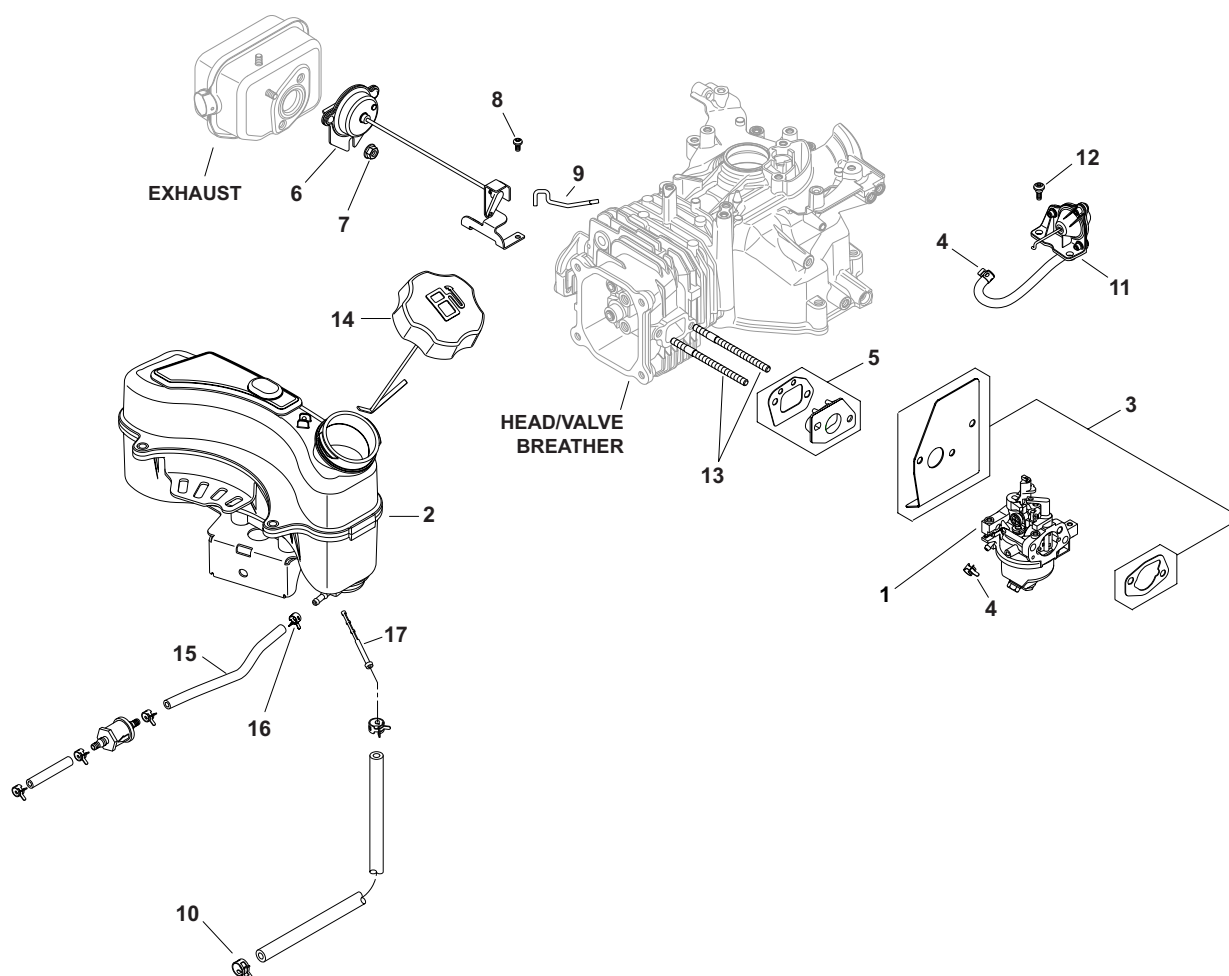


Ref.	Part-Number	Description
1	KH-14-853-41-S	Carburetor, 13MM Auto Choke
2	KH-14-065-29-S	Fuel Tank Assembly
3	KH-14-041-24-S	Kit, Gasket
4	KH-14-237-05-S	Hose Clamp
5	KH-14-112-13-S	Carburetor Spacer Kit
6	KH-14-187-01-S	Arm, Assembly
7	KH-14-100-08-S	Nut, Hex Flange, M6
8	KH-25-086-277-S	Screw, M4 Thread Forming
9	KH-14-079-17-S	Linkage, Auto Choke

Ref.	Part-Number	Description
10	KH-14-237-07-S	Hose Clamp
11	KH-14-268-04-S	Diaphragm, Assembly
12	KH-25-086-275-S	Screw, Shoulder
13	KH-24-072-06-S	Stud, M6 x 1.0 x 93
14	KH-14-227-15-S	Fuel Cap Assembly
15	KH-25-111-69-S	Fuel Hose, Low-Permeation
16	KH-14-237-07-S	Hose Clamp
17	KH-14-050-14-S	Filter, Fuel In-Nipple

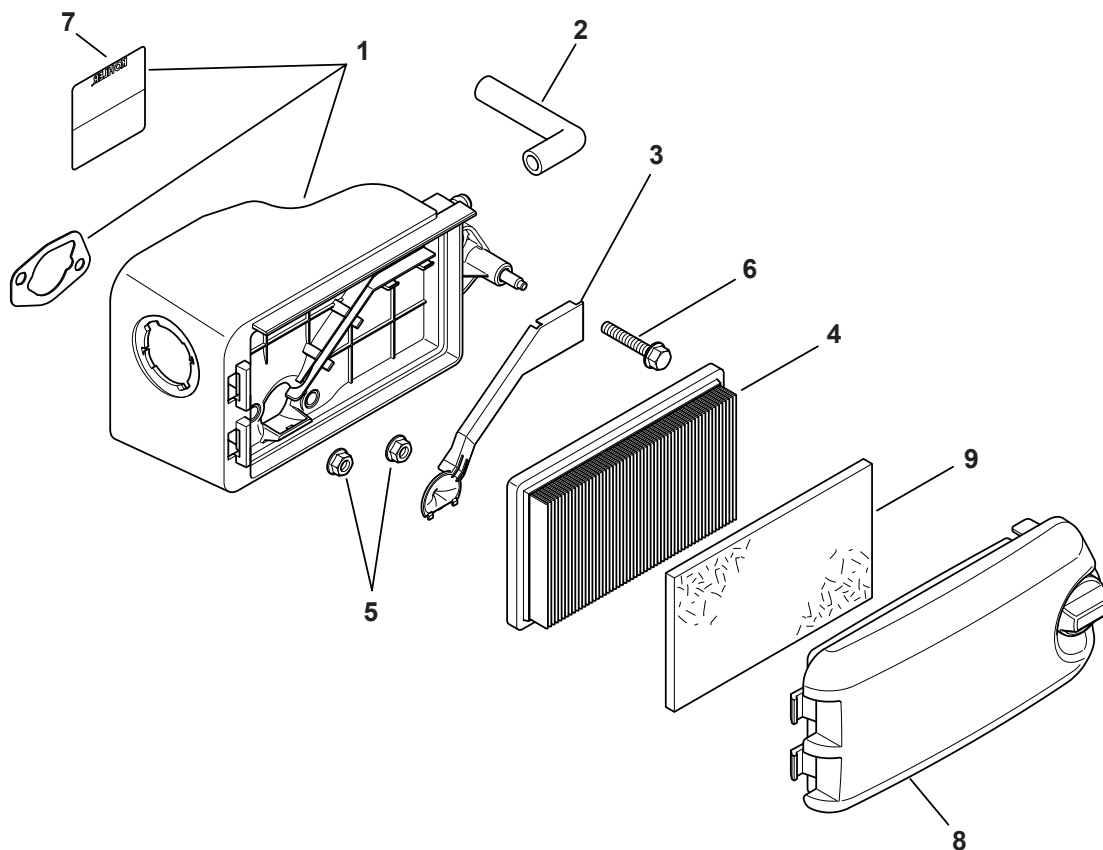


Ref.	Part-Number	Description
1	KH-14-094-13-S	Kit, Air Cleaner Base (Inc. Air Cleaner Base Gasket)
2	KH-14-123-05-S	Breather Hose
3	KH-14-096-51-S	Cover, A/C Base (Breather Gas)
4	KH-14-083-01-S	Air Cleaner Element
5	KH-14-100-08-S	Nut, Hex Flange, M6
6	KH-25-086-145-S	Screw, Hex Flange, M6
7	KH-41-037-10-S	Nameplate, Service
8	KH-14-096-110-S	Air Cleaner Cover
9	KH-14-083-11-S	Carbon Pre-Filter Element

Kohler XT173-3316 Engine Controls

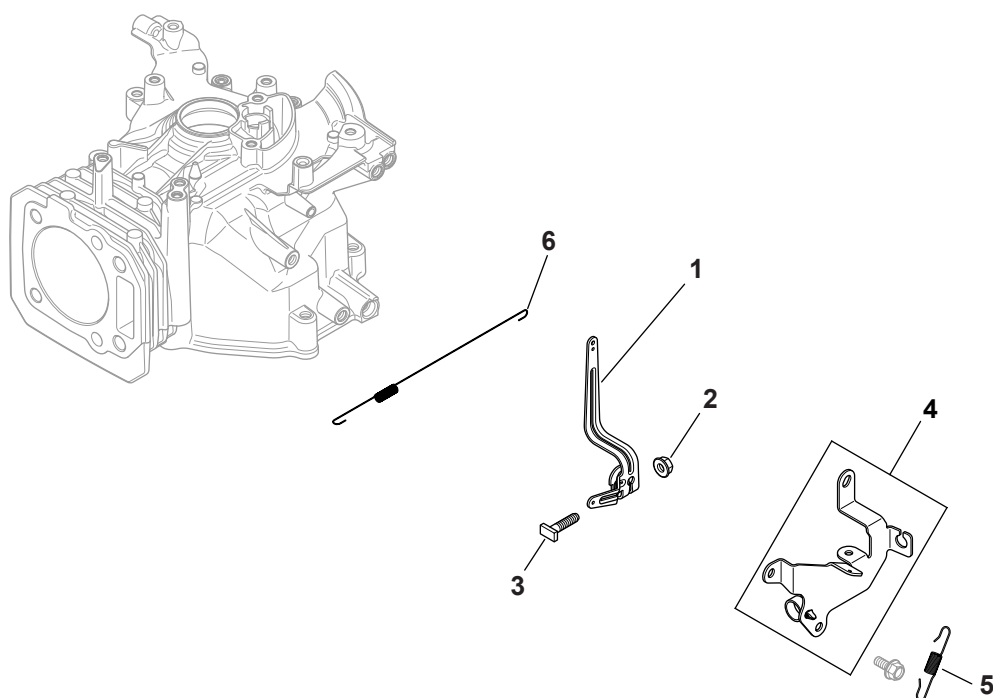


Ref.	Part-Number	Description
1	KH-14-090-12-S	Governor Lever
2	KH-14-100-08-S	Nut, Hex Flange, M6
3	KH-25-086-166-S	Screw, Rectangle Head, M6
4	KH-14-126-22-S	Control Bracket
5	KH-14-089-14-S	Governor Spring
6	KH-14-089-43-S	Linkage Spring

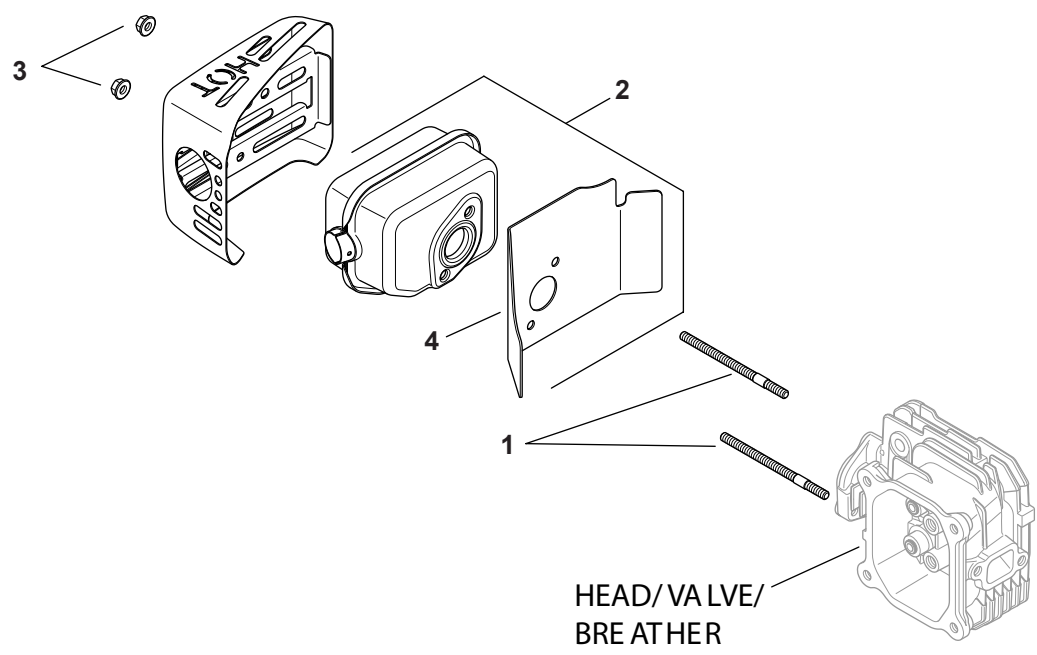

Ref.	Part-Number	Description
1	KH-14-072-06-S	Stud, M6
2	KH-14-068-05-S	Kit, Muffler
3	KH-14-100-09-S	Nut, Hex Flange Lock, M6
4	KH-14-041-22-S	Muffler Gasket

Kohler XT173-3316 Decals

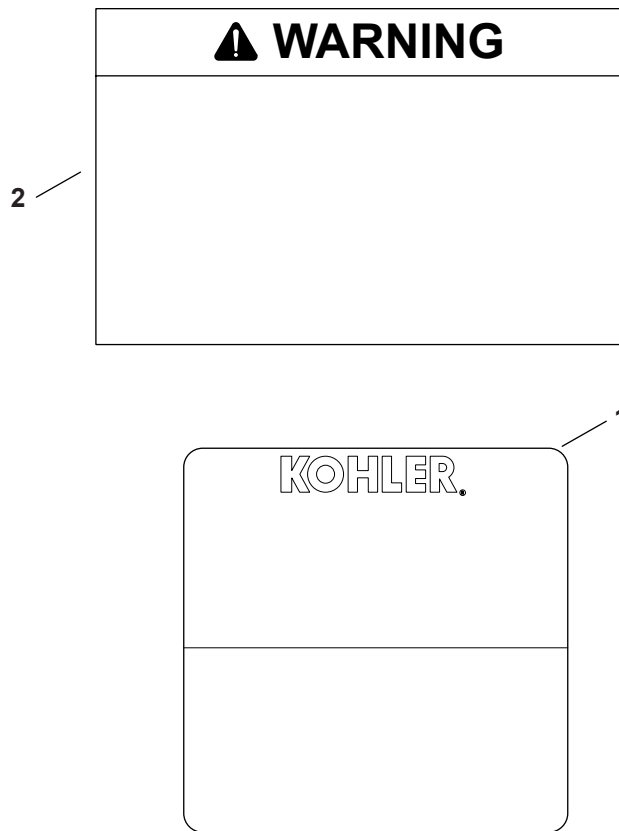

Artwork is representative.
Actual labels may differ depending on model and specification number.

Ref.	Part Number	Description
1	KH-41-037-10-S	Nameplate, Service
2	KH-14-113-57-S	Decal, Warning


Briggs & Stratton 11P905-0873-B1




48 SHORT BLOCK

1058 OPERATOR'S MANUAL














1329 REPLACEMENT ENGINE




1330 REPAIR MANUAL

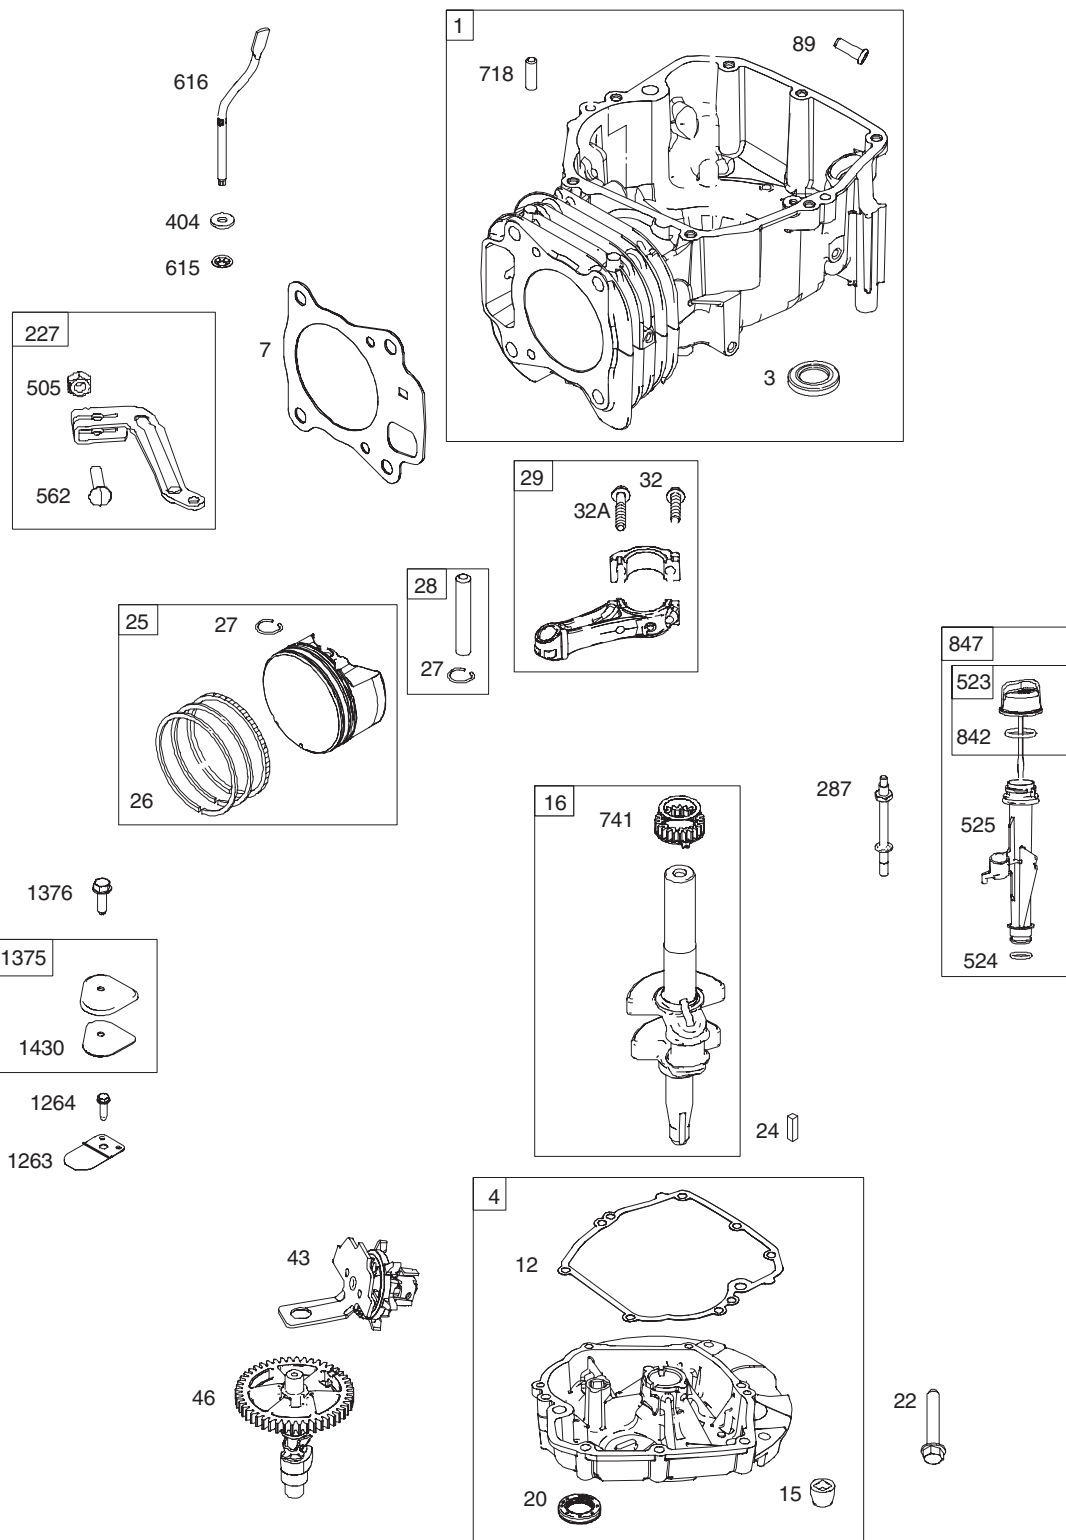






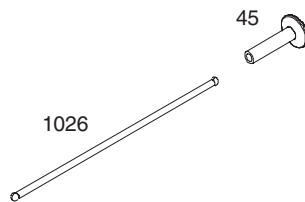
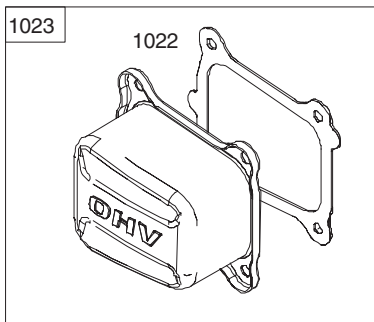
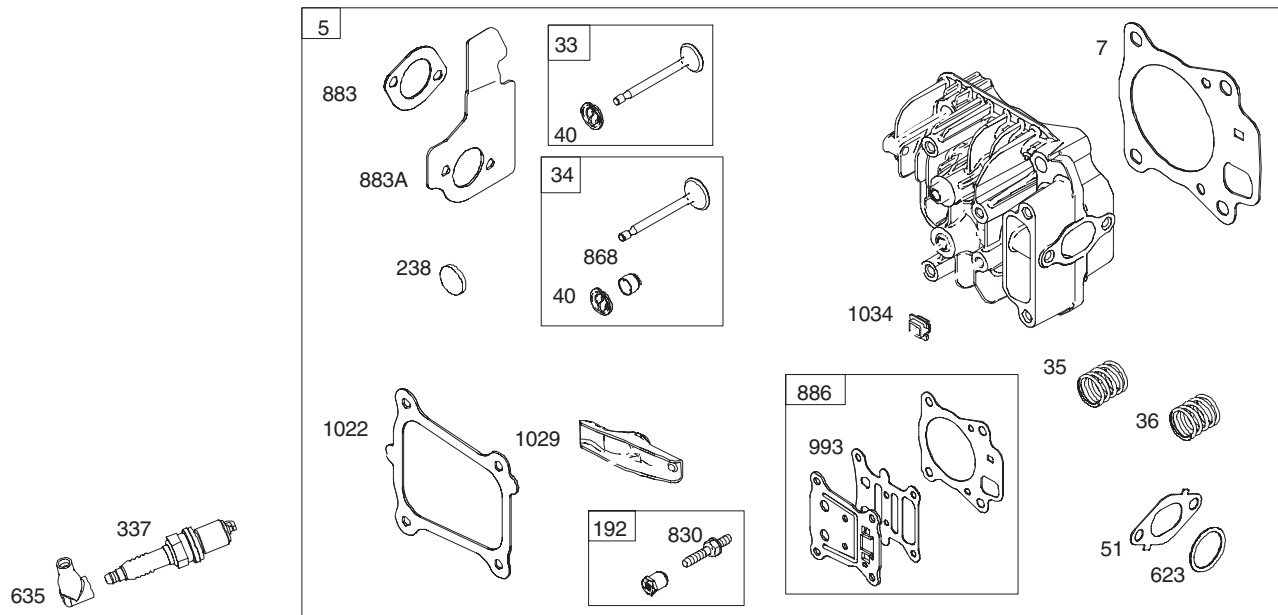


Briggs & Stratton 11P905-0873-B1

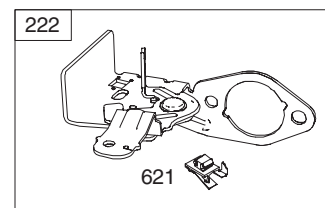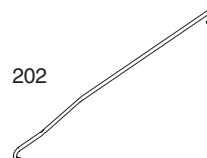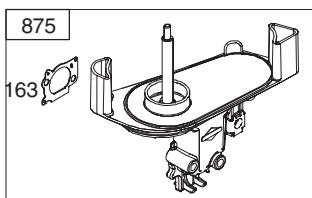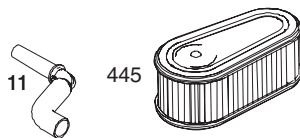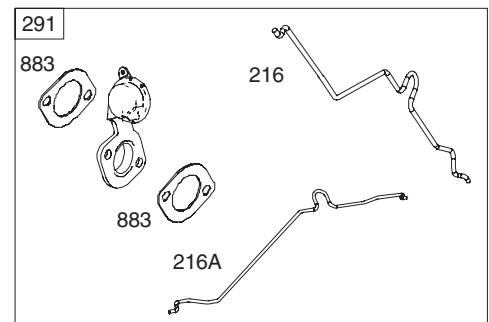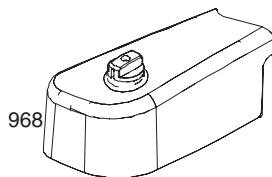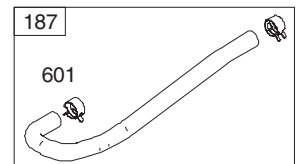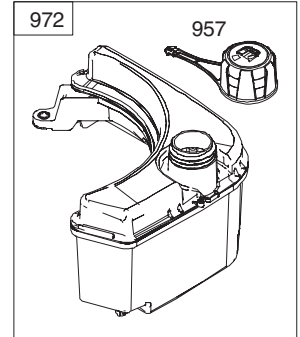
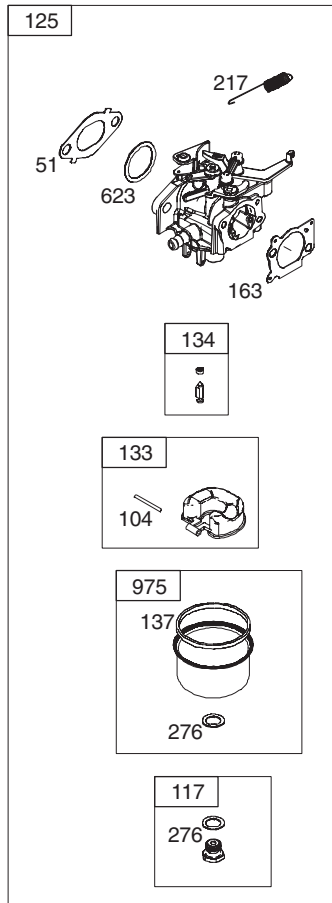
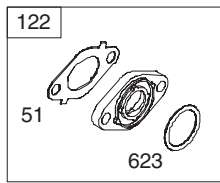


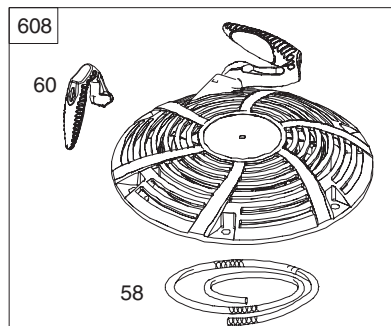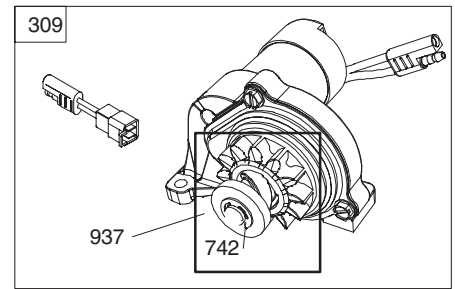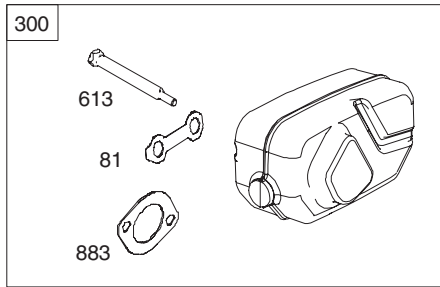

1036 EMISSIONS LABEL

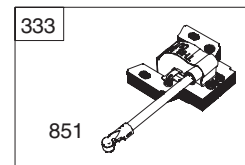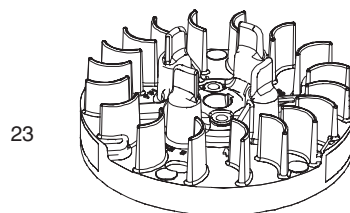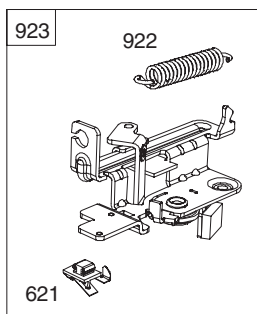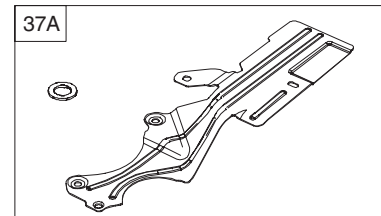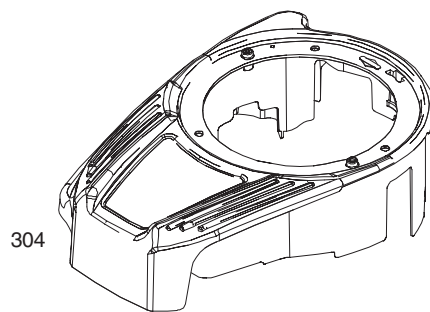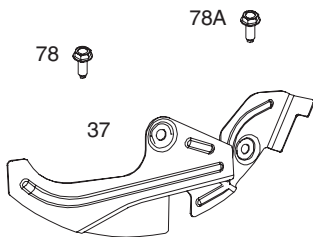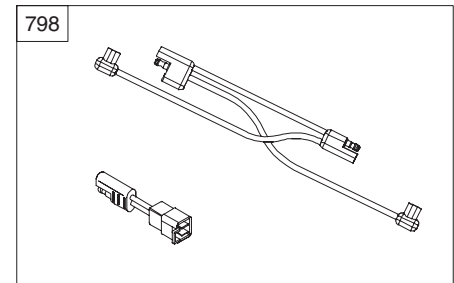

Briggs & Stratton 11P905-0873-B1

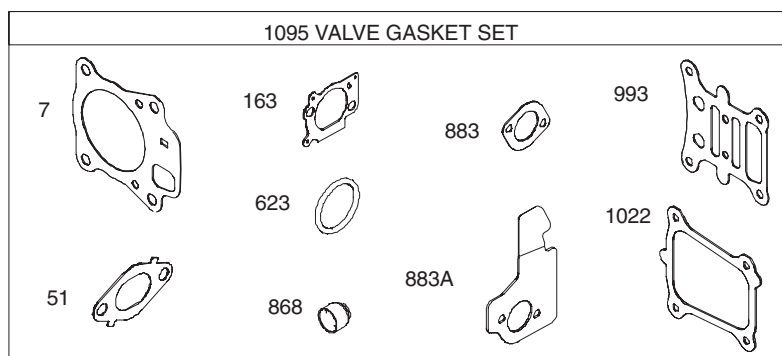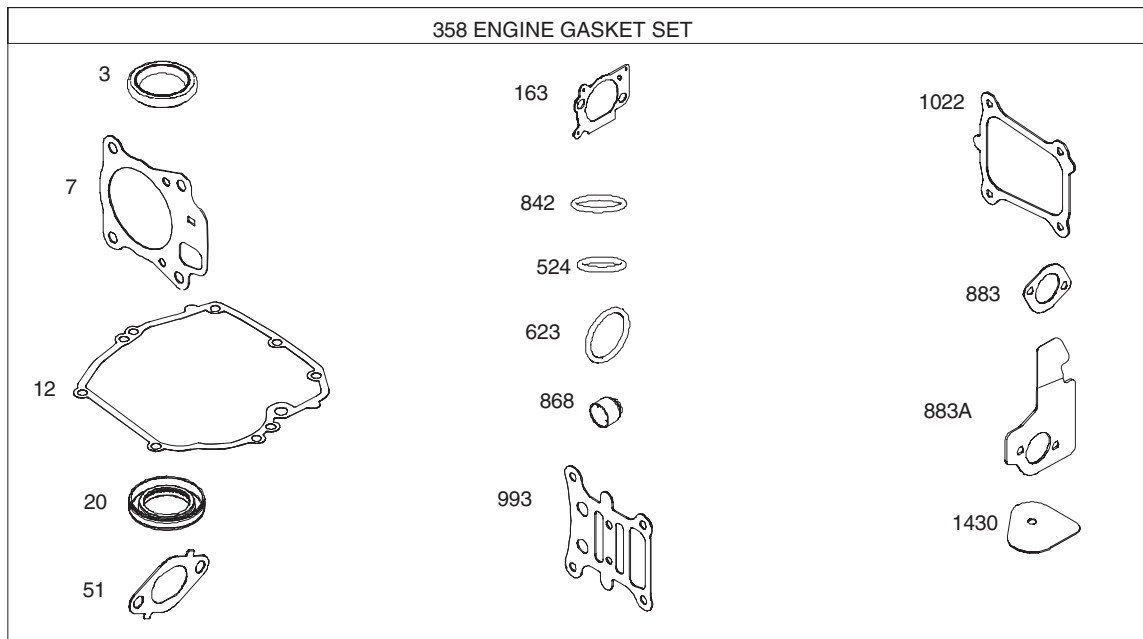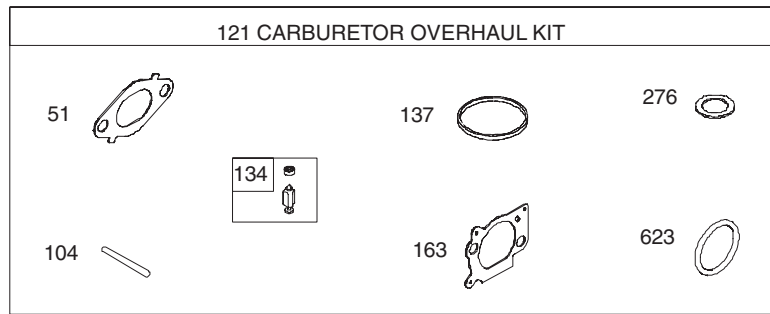

Ref.	Part Number	Description
1	BS-798948	Cylinder Assembly
3	BS-299819s	Seal-Oil (Magneto Side)
4	BS-493279	Sump-Engine
5	BS-796471	Head-Cylinder
7	BS-796475	Gasket-Cylinder Head
11	BS-796478	Tube-Breather
12	BS-692232	Gasket-Crankcase
13	BS-793451	Screw (Cylinder Head)
15	BS-691680	Plug-Oil Drain
16	BS-796469	Crankshaft
20	BS-399781s	Seal-Oil (PTO Side)
22	BS-691092	Screw (Crankcase Cover/Sump)
23	BS-793619	Flywheel
24	BS-222698s	Key-Flywheel
25	BS-796643	Piston Assembly (Standard)
	BS-796644	Piston Assembly (.020" Oversize)
26	BS-796645	Ring Set (Standard)
	BS-796646	Ring Set (.020" Oversize)
27	BS-691588	Lock-Piston Pin
28	BS-298909	Pin-Piston
29	BS-796470	Rod-Connecting
32	BS-691664	Screw (Connecting Rod)
32A	BS-695759	Screw (Connecting Rod)
33	BS-499642	Valve-Exhaust
34	BS-795443	Valve-Intake
35	BS-691304	Spring-Valve (Intake)
36	BS-691304	Spring-Valve (Exhaust)
37	BS-796536	Guard-Flywheel
37	BS-799241	Guard-Flywheel
40	BS-692194	Retainer-Valve
43	BS-796650	Slinger-Governor/Oil
45	BS-690977	Tappet-Valve
46	BS-694039	Camshaft
48	N/A	Short Block
51	BS-796596	Gasket-Intake

Ref.	Part Number	Description
58	BS-697316	Rope-Starter
60	BS-795426	Grip-Starter Rope
75	BS-691736	Washer (Flywheel)
78	BS-793480	Screw (Flywheel Guard)
78A	BS-691127	Screw (Flywheel Guard)
81	BS-691740	Lock-Muffler Screw
89	BS-692348	Plug (Cylinder)
104	BS-691242	Pin-Float Hinge
117	BS-697355	Jet-Main (Standard)
118	BS-494870	Jet-Main (High Altitude)
121	BS-796612	Kit-Carburetor Overhaul
122	BS-796595	Spacer-Carburetor
125	BS-796608	Carburetor
133	BS-398187	Float-Carburetor
134	BS-398188	Kit-Needle/Seat
137	BS-796610	Gasket-Float Bowl
163	BS-691894	Gasket-Air Cleaner
187	BS-796491	Line-Fuel (Formed)
190	BS-793479	Screw (Fuel Tank)
192	BS-796631	Adjuster-Rocker Arm
202	BS-796657	Link-Mechanical Governor
209	BS-796484	Spring-Governor (Metallic Gold)
216	BS-798944	Link-Choke
216A	BS-796485	Link-Choke
222	BS-796482	Bracket-Control
227	BS-796487	Lever-Governor Control
238	BS-691300	Cap-Valve
276	BS-271716	Washer-Sealing
287	BS-793479	Screw (Dipstick Tube)
291	BS-798938	Thermostat
300	BS-798940	Muffler
304	BS-798945	Housing-Blower
309	BS-799241	Motor-Starter
332	BS-690662	Nut (Flywheel)
333	BS-796499	Armature-Magneto

Briggs & Stratton 11P905-0873-B1


Ref.	Part Number	Description	Ref.	Part Number	Description
334	BS-793454	Screw (Magneto Armature)	883A	BS-796677	Gasket-Exhaust
334A	BS-796537	Screw (Magneto Armature)	886	BS-796474	Gasket Kit-Cylinder/Plate
337	BS-692051	Plug-Spark	922	BS-692135	Spring-Brake
356	BS-692390	Wire-Stop	923	BS-796635	Brake
358	BS-796661	Gasket Set-Engine	914	BS-794451	Screw (Rocker Cover)
365	BS-793458	Screw (Carburetor) (M6x21mm)	937	BS-799420	Spline-Starter
404	BS-690272	Washer (Governor Crank)	957	BS-796577	Cap-Fuel Tank (Service Cap)
445	BS-795066	Filter-Air Cleaner Cartridge	957A	BS-692046	Cap-Fuel Tank (O.E.M. Cap)
505	BS-793515	Nut (Governor Control Lever)	968	BS-796493	Cover-Air Cleaner
523	BS-796503	Dipstick	972	BS-796489	Tank-Fuel
524	BS-692296	Seal- Dipstick Tube	975	BS-796611	Bowl-Fuel
525	BS-796502	Tube-Dipstick	993	BS-796473	Gasket-Cylinder Head Plate
562	BS-793514	Bolt (Governor Control Lever)	1022	BS-796480	Gasket-Rocker Cover
592	BS-793481	Nut (Rewind Starter)	1023	BS-796479	Cover-Rocker
601	BS-791850	Clamp-Hose (Green)	1026	BS-796481	Rod-Push
608	BS-796497	Starter-Rewind	1029	BS-691230	Arm-Rocker
613	BS-796496	Screw (Muffler)	1034	BS-691343	Guide-Push Rod
615	BS-690340	Retainer-Governor Shaft	1036		Label-Emissions (Auth. B&S Dealer)
616	BS-798327	Crank-Governor	1058	BS-278415TRI	Operator's Manual
621	BS-692310	Switch-Stop	1059	BS-793471	Kit-Screw/Washer (Fuel Tank)
623	BS-793628	Seal-O Ring (Carburetor Spacer)	1095	BS-796662	Gasket Set-Valve
635	BS-66538s	Boot-Spark Plug	1263	BS-697124	Reed -Breather
670	BS-793485	Spacer-Fuel Tank	1264	BS-793453	Screw (Breather Reed)
718	BS-690959	Pin-Locating	1329	BS-11P905-0873	
741	BS-797521	Gear-Timing	1330	BS-276781	Repair Manual
742	BS-93941	Retainer-E Ring	1375	BS-796476	Cover-Breather/Reed
745	BS-793491	Screw (Brake)	1376	BS-794451	Screw (Breather/Reed Cover)
789	BS-792685	Harness-Wiring	1395	BS-690349	Screw (Air Cleaner Base)
830	BS-796472	Stud-Rocker Arm	1430	BS-796477	Gasket-Breather/Reed
842	BS-691031	Seal-O Ring (Dipstick Tube)			
847	BS-796501	Dipstick/Tube Assembly			
851	BS-493880s	Terminal-Spark Plug			
868	BS-795440	Seal-Valve			
875	BS-796492	Base-Air Cleaner			
883	BS-793497	Gasket-Exhaust			

This page left intentionally blank.

Notes


[illegible]

2P70M0C Air Cleaner

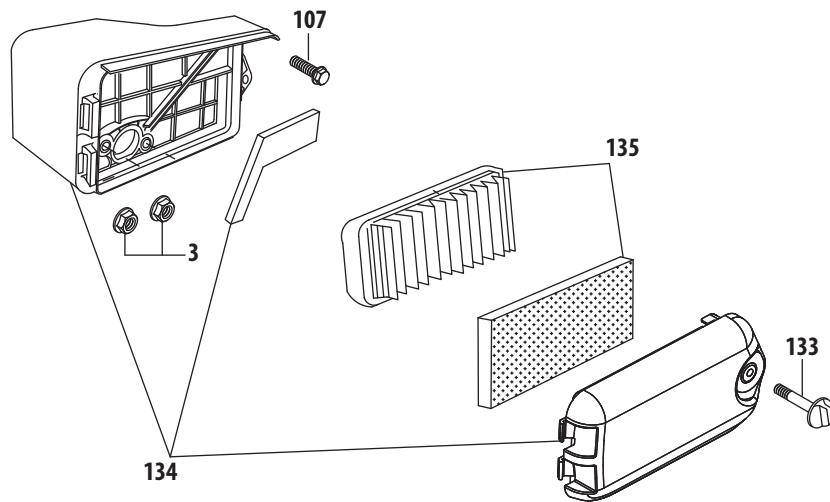

Ref.	Part Number	Description
3	712-04212	Nut M6 X 10 Mm
107	710-04980	Bolt M6×35
133	951-10297	Air Filter Cover Thumb Screw
134	951-10412A	Air Cleaner Housing Assy Comp
135	951-10298	Air Cleaner Kit


2P70M0C Carburetor Assembly

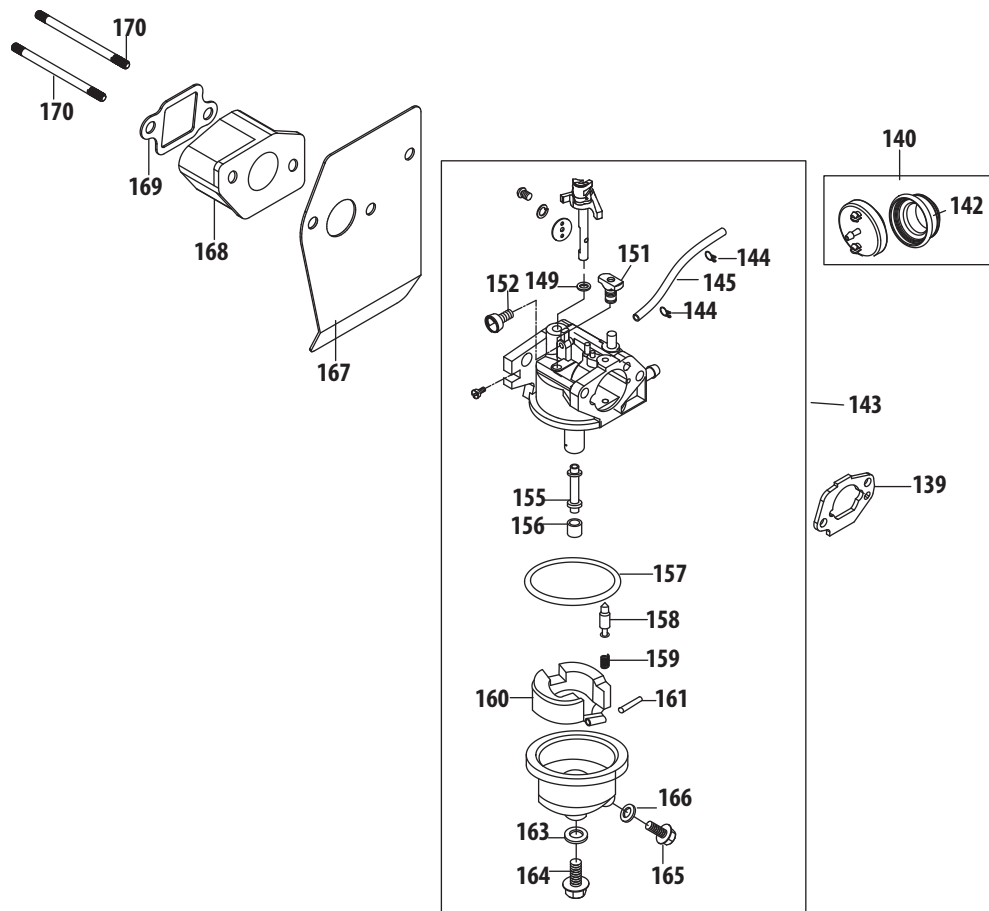

Ref.	Part Number	Description
139	951-11525	Carburetor Gasket Plate
140	951-10639A	Primer Assembly
142	951-11824	Primer Bulb
143	951-10881	Carburetor Assembly
144	723-04093	Primer Hose Clamp
145	951-12473	Primer Hose
149	N/A	Throttle Shaft Fiber O-Ring
151	N/A	Idle Jet Assembly
152	N/A	Idle Speed Adjusting Screw
155	N/A	Emulsion Tube
156	N/A	Main Jet
157	951-11597	Fuel Bowl O-Ring
158	N/A	Needle Valve
159	N/A	Needle Valve Spring

Ref.	Part Number	Description
160	N/A	Float
161	N/A	Float Pin
163	951-11348	Fuel Bowl Gasket
164	710-04945	Fuel Bowl Mounting Bolt
165	710-04938	Fuel Drain Plug
166	951-11349	Fuel Drain Plug Gasket
167	951-12110	Carburetor Gasket
168	951-11255	Carburetor Insulator
169	951-11254	Carburetor Insulator Gasket
170	710-04981	Carb Stud M6x113
	951-10888B	Primer Assembly (Incl.140 145)
	951-12425	Carburetor Kit - Major (Incl.149,151,152,155-161,163,166)


2P70M0C Crankcase

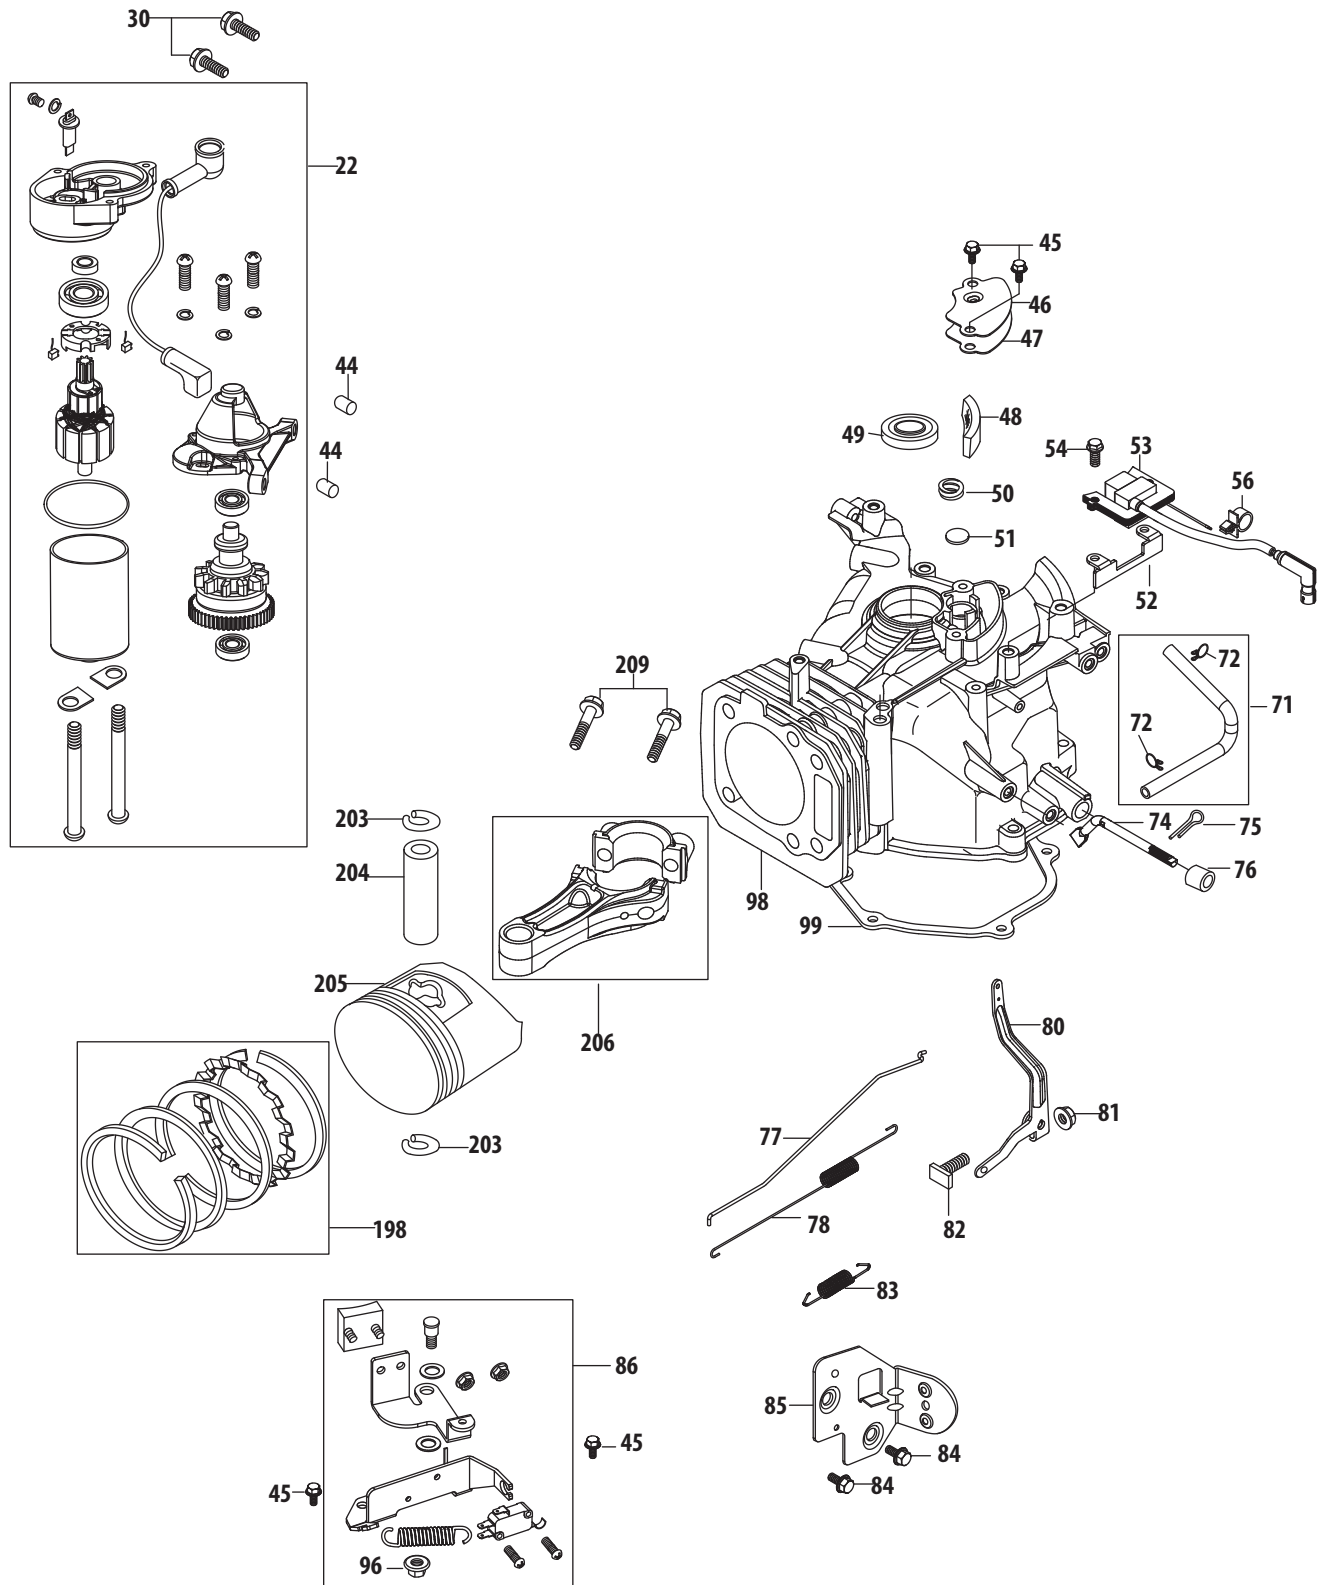

Ref.	Part Number	Description
22	951-12457	Electrical Starter Assembly
30	710-04969	Bolt M6×30
44	715-04088	Dowel Pin 8×8
45	710-04916	Bolt M6×14
46	951-11612	Breather Cover Plate
47	951-11613	Breather Gasket
48	951-11762	Breather Screen
49	951-11545	Upper Crankshaft Seal
50	732-04718	Breather Spring
51	951-11614	Breather Valve
52	951-11619	Ignition Coil Bracket
53	951-10854	Ignition Coil Assembly
54	710-04979	Bolt M6×18
56	951-11618	Plastic Clip
71	951-11260	Breather Hose Assembly
72	726-04101	Breather Hose Clamp
74	951-11608	Governor Arm Shaft
75	714-04074	Governor Arm Cotter Pin
76	951-11574	Governor Seal
77	951-11259	Throttle Linkage
78	951-11258	Throttle Linkage Spring
80	951-11238	Governor Arm
81	712-04212	Governor Arm Nut M6


Ref.	Part Number	Description
82	710-04908	Governor Arm Bolt
83	951-11273	Governor Spring
84	710-04915	Bolt M6×12
85	951-12472	Primer Bracket
86	951-10858	Brake Assembly
96	712-04219	Brake Arm Nut
98	951-10857B	Short Block Assembly (Incl.45-49,51,61,74-76,95,99,100,101, 105,114-119,129-131,139,168,169, 185,188,193,196-198,203-206)
99	951-11763	Crankcase Cover Gasket
198	951-12111	Piston Ring Set
203	951-11632	Piston Pin Snap Ring
204	951-11633	Piston Pin
205	951-11634	Piston
206	951-11768	Connecting Rod Assembly
209	710-05162	Connecting Rod Bolt
	952Z2P70M0C	Complete Engine
	951-10417A	Gasket Kit - External (Incl.47,105,115,167,169,185,188)
	951-10416A	Gasket Kit - Complete (Incl.47,49,76,99,105,115,131, 167,169,185,188,193)

2P70M0C Crankshaft & Crankcase Cover

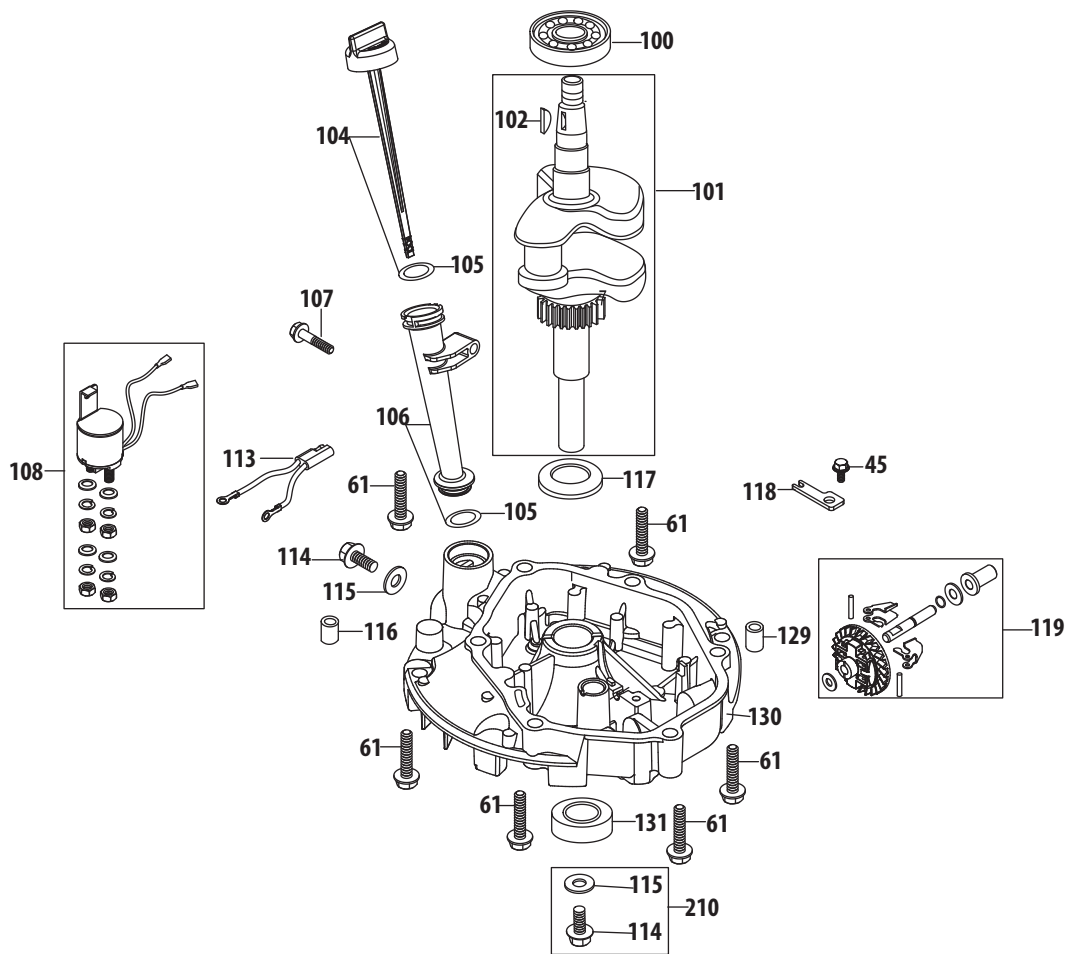


Ref.	Part Number	Description
45	710-04916	Bolt M6×14
61	710-04922	Fuel Tank Bolt M8x50
100	951-11369	Main Bearing
101	951-11624	Crankshaft Assembly
102	951-10307	Woodruff Key
104	951-11764A	Dipstick Assembly
105	951-11547	Oil Fill Tube O-Ring
106	951-11765A	Oil Fill Tube Assemblby
107	710-04980	Bolt M6×35
108	951-10823	Starter Relay Assembly
113	951-10824	Power Connector Harness

Ref.	Part Number	Description
114	710-04906	Oil Drain Plug
115	736-04440	Oil Drain Plug Washer
116	715-04089	Crankcase Cover Dowel 9x14
117	736-04491	Crankshaft Thrust Washer
118	951-11625	Governor Gear Mounting Plate
119	951-11626	Governor Gear/Shaft Assembly
129	715-04092	Crankcase Cover Dowel 7x14
130	951-11794	Crankcase Cover
131	951-11627	Lower Crankshaft Seal
210	951-10370	Oil Drain Plug And Washer Assy

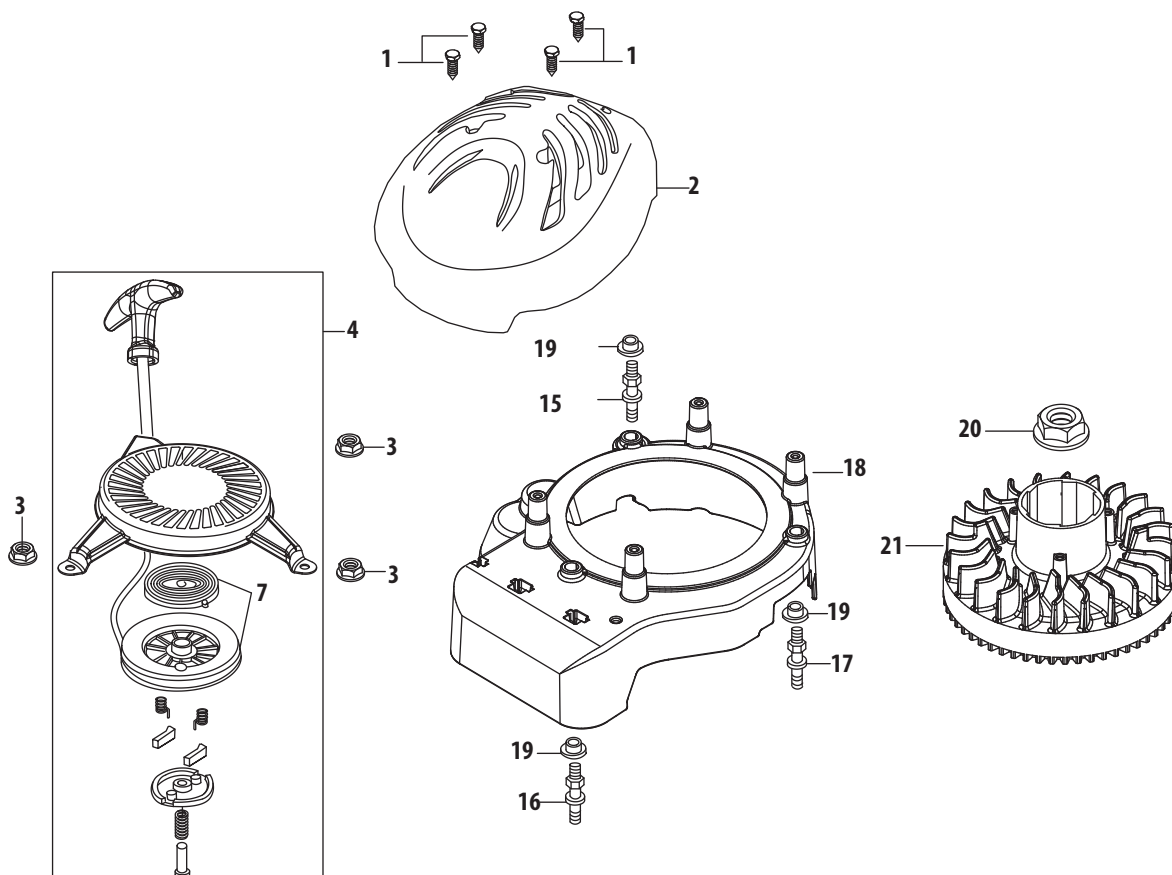


Ref.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1"
3	712-04212	Nut M6 X 10 Mm
4	951-11720	Recoil Starter Assembly
7	951-11721	Recoil Spring And Pulley Assy
15	710-04976	Starter/Shroud Stud Left/Black
16	710-04977	Starter/Shroud Stud Front/Yellow
17	710-04978	Starter/Shroud Stud Right/White
18	951-10855	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	712-04287	Flywheel Nut M14x1.5
21	951-12470	Flywheel

2P70M0C Cylinder Head

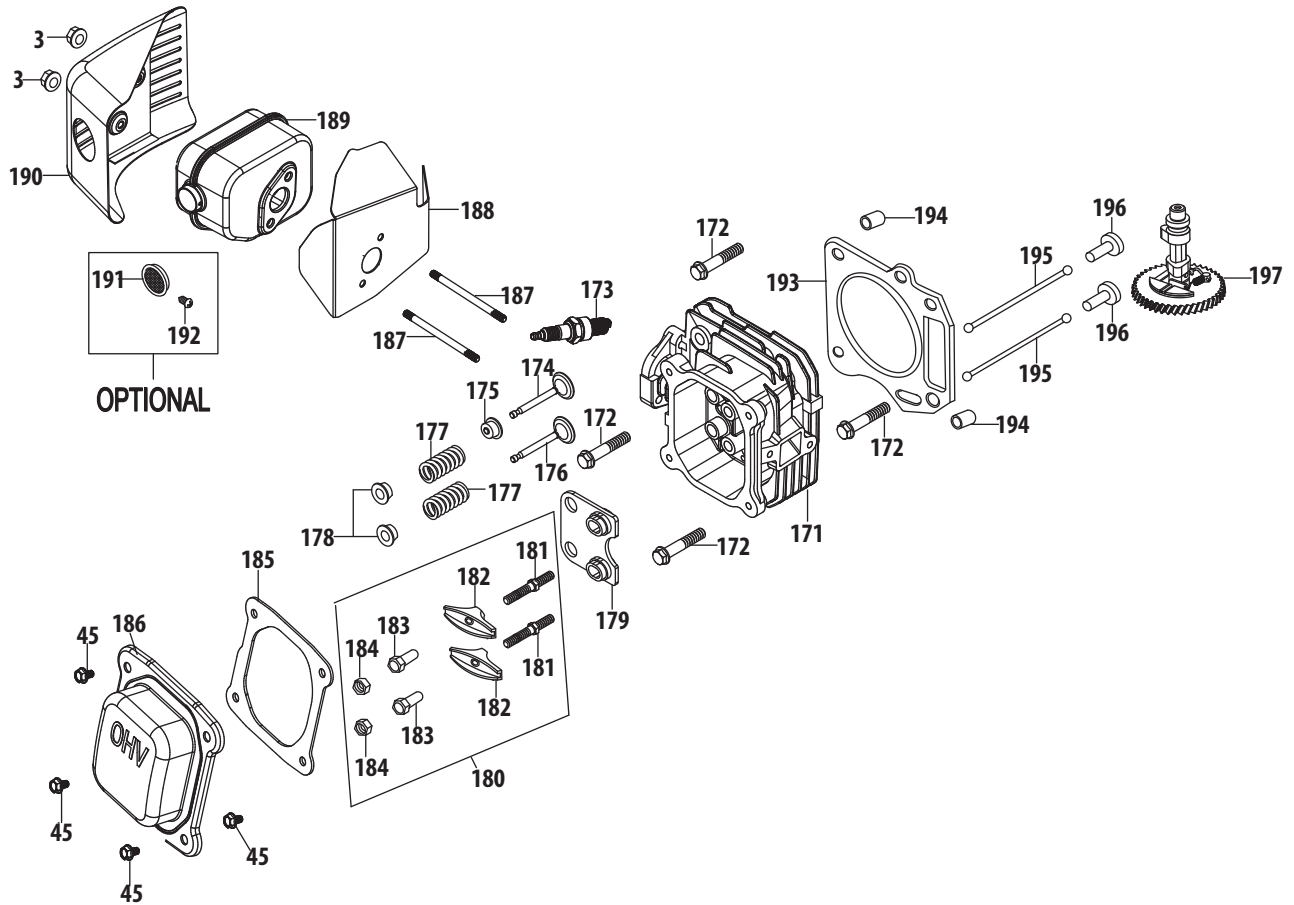

Ref.	Part Number	Description
3	712-04212	Nut M6 X 10 Mm
45	710-04916	Bolt M6x14
171	951-10413B	Cylinder Head Assembly (Incl.168,169,171,174-179, 181-185,188,193)
172	710-04982	Head Bolt M8x54
173	951-10292	Spark Plug/F6Rtc
174	951-10345	Valve Kit
175	951-11818	Intake Valve Seal
176	951-10345	Valve Kit
177	951-12116	Valve Spring
178	951-12000	Valve Spring Retainer
179	951-11629	Push Rod Guide
180	951-11606	Rocker Arm Assembly
181	710-04902	Rocker Arm Stud
182	951-12001	Rocker Arm
183	751-11123	Fulcrum Nut
184	751-11124	Jam Nut
185	951-11551	Valve Cover Gasket
186	951-11548	Valve Cover
187	710-05094	Muffler Stud M6x95
187	951-10342	Muffler Stud Assemblby
188	951-12474	Muffler Gasket
189	951-10295	Muffler Assembly
190	951-10411	Muffler Shield
191	951-10351	Spark Arrestor
192	710-04983	Spark Arrestor Screw
193	951-11630	Cylinder Head Gasket
194	715-04090	Cylinder Head Dowel 10x16
195	751-10344	Push Rod Kit
196	951-11607	Tappet
197	951-11767	Camshaft Assembly
	951-10870	Cylinder Head Service Kit (Incl.172,175,185,193)
	951-10417A	Gasket Kit - External (Incl.47,105,115,167,169,185,188)
	951-10416A	Gasket Kit - Complete (Incl.47,49,76,99,105,115,131, 167,169,185,188,193)

2P70M0C Fuel Tank & Mounting

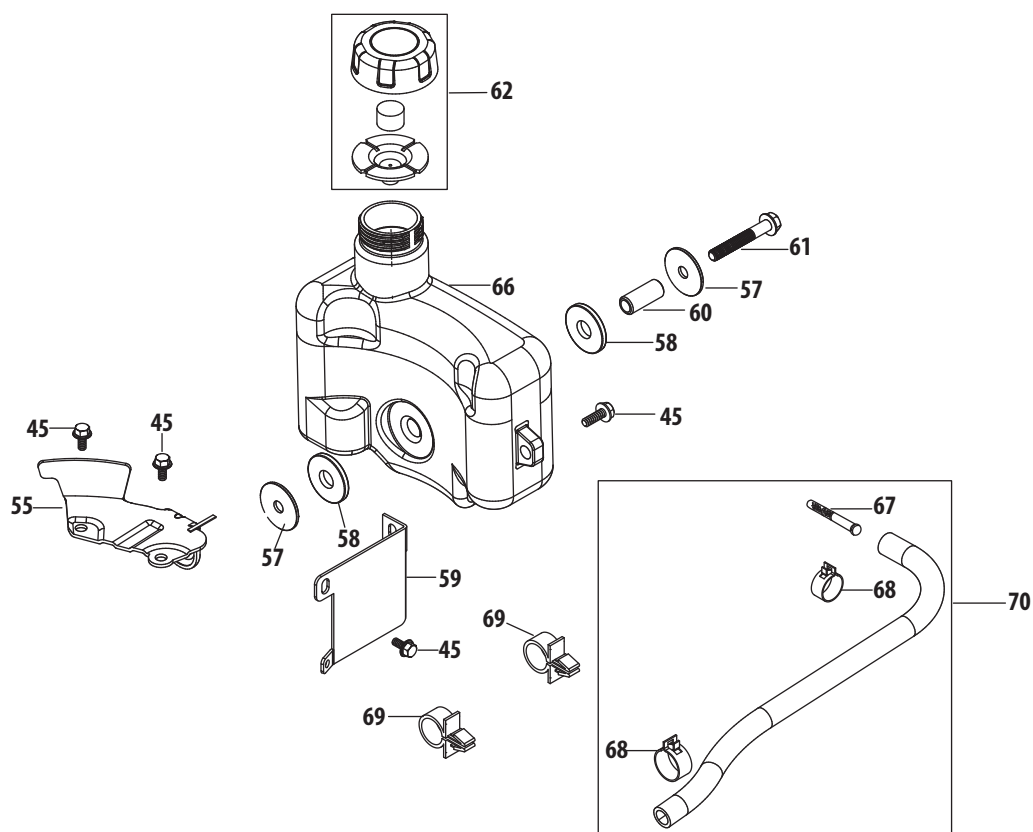

Ref.	Part Number	Description
45	710-04916	Bolt M6×14
55	951-12471	Fuel Tank Bottom Bracket
57	736-04456	Fuel Tank Washer
58	951-10335	Rubber Bushing
59	951-11617	Fuel Tank / Label Bracket
60	750-05322	Fuel Tank Bushing
61	710-04922	Fuel Tank Bolt M8x50
62	951-10300	Fuel Cap Assembly
66	951-10368	Fuel Tank Assembly
67	951-10358A	Fuel Filter
68	951-11700	Fuel Hose Clamp
69	723-04071	Plastic Support Clamp
70	951-10364	Fuel Line Kit

Notes

[illegible]

This image shows a single page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. On the left side, there is a vertical margin line, creating a narrow left margin. The paper appears to be from a notebook or a standard writing template.



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
