

Cub Cadet®

ILLUSTRATED PARTS MANUAL

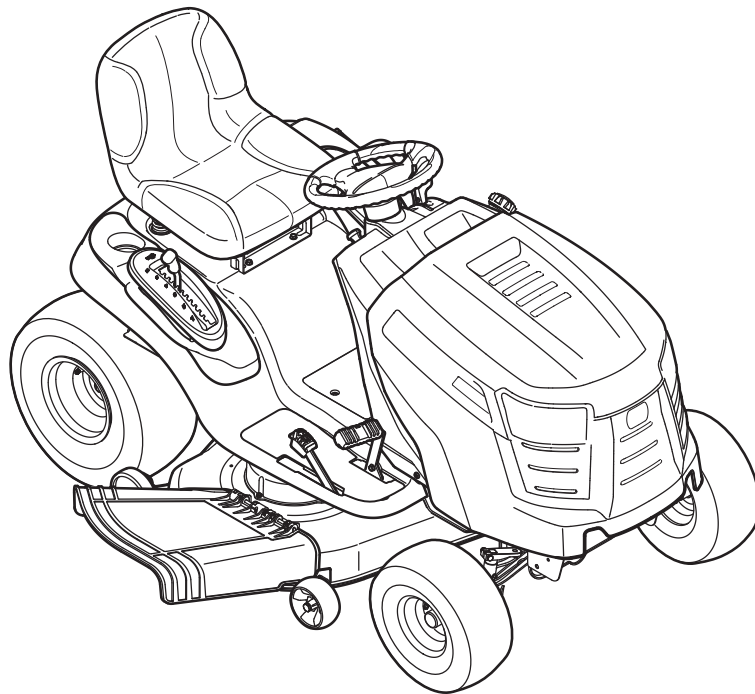

Hydrostatic Lawn Tractor — LTX1042 & LTX1045

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank you for purchasing an Cub Cadet Lawn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Axle, Front	4	Fuel Tank	10
Battery	6	Hood	10
Head Lamps	10	Deck Lift Handle/Linkage	8
Mower Deck, 42-inch	14	Labels	22
Mower Deck, 46-inch	16	Meter, Systems Indicator	10
Pedal Controls	12	Muffler	21
Dash Panel	10	PTO Lever	6
Drive System	12	Seat	8
Electrical Schematic	24	Solenoid	6
Engine Accessories	21	Steering	4
Engine, Kohler SV590/600	25-35	Switches, Interlock	6
Engine, Kohler SV600-3224	36-48	Throttle Control	10
Fender	8	Transmission, Hydrostatic	18
Frame	6	Wheels, Front & Rear	3

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------


SERIAL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

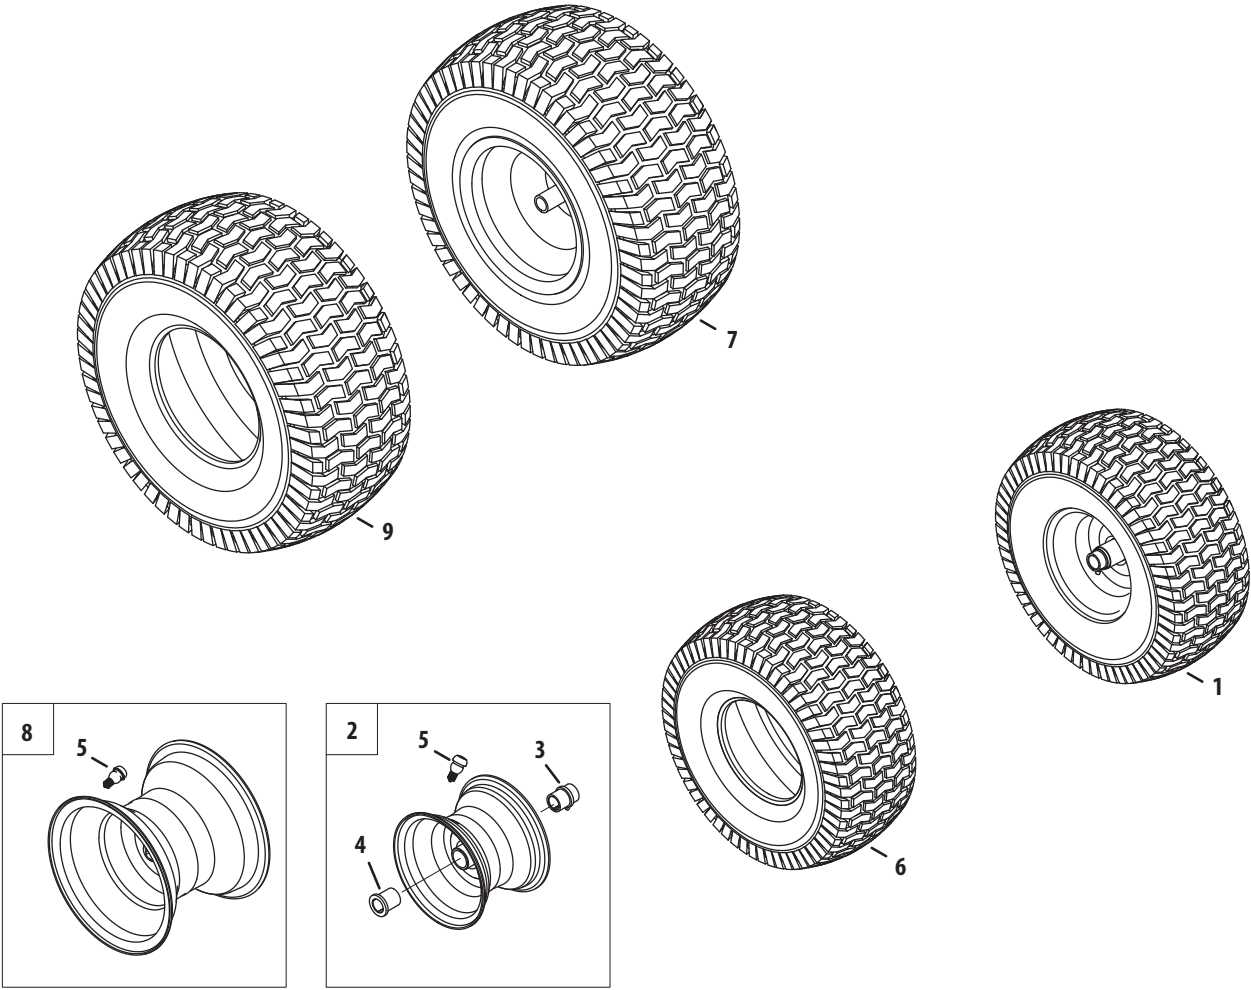


Ref.	Part Number	Description
1.	634-04406-0931	Wheel Ass'y, Complete, 15 x 6 x 6
2.	634-04405-0499	Rim Ass'y, 6.0 x 4.5, Plastic Bearings
3.	741-0990B	Bearing, Flange, .760 ID w/ Fitting
4.	741-0516B	Bearing, Flange, .760 x 1.00 x 1.20
5.	934-0255	Valve, Tubeless Air
6.	734-1731-0901	Tire, 15 x 6 x 6 Sq Shoulder
7.	634-0104-0931	Wheel, Complete, 20 x 8 x 8
8.	634-04369-0499	Rim Ass'y, 8.0 x 7.0 x .750 ID
9.	734-1730-0901	Tire, 20 x 8 x 8 Sq Shoulder

Steering

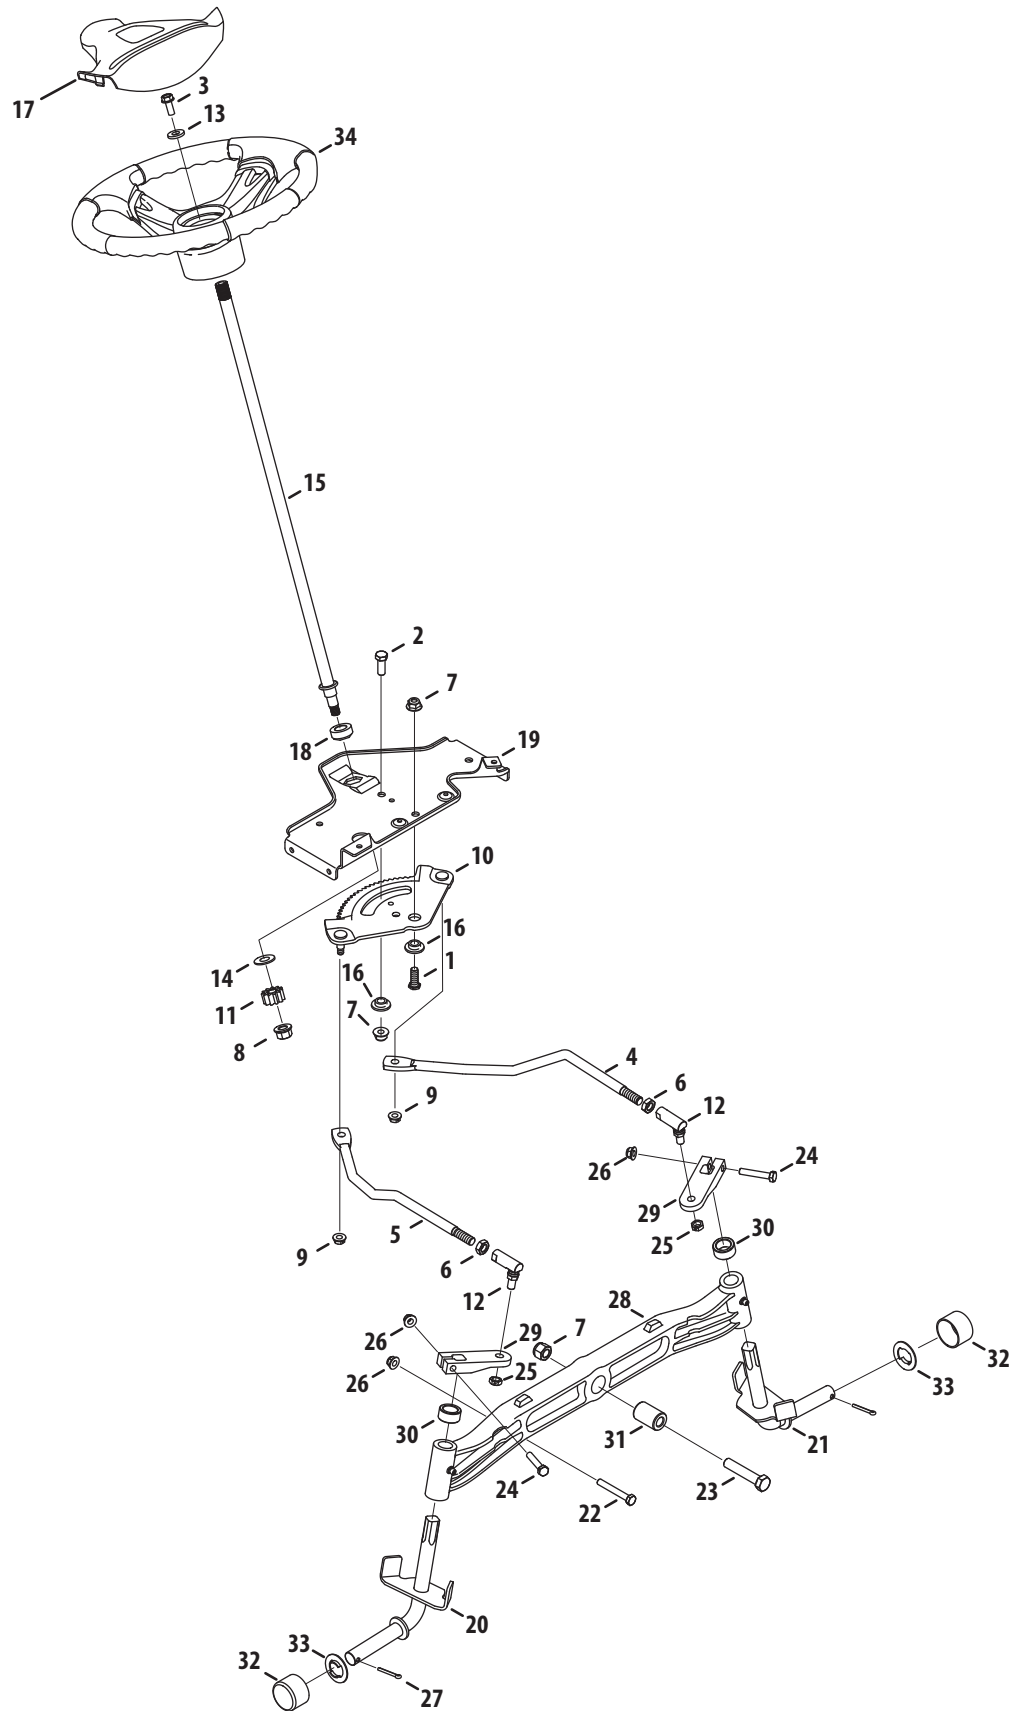


Ref.	Part Number	Description
1.	710-04095	Hex Screw, 3/8-16, 1.00, Gr5, Spec
2.	710-0514	Hex Screw, 3/8-16, 1.00, Gr5, Std
3.	710-0650	Hex Screw, 5/16-18, .875, Gr5, Lock
4.	711-04998	Link, Drag LH
5.	711-04999	Link, Drag RH
6.	912-0240	Nut, Jam, 7/16-20, Gr2
7.	712-04065	Nut, Flange Lock, 3/8-16, Grf,
8.	712-0459	Nut, Flange Lock, 7/16-20, Grb, Lock
9.	712-3004A	Nut, Flange Lock, 5/16-18, Gr5, Sd Lk
10.	717-1550F	Gear, Steering, 11/90 Ratio
11.	717-1554	Gear, Pinion, Steering
12.	923-0448A	Ball Joint, 7/16-20, Lock
13.	936-3004	Washer, Flat, .406 x .875 x .105
14.	736-3084	Washer, Flat, .51 x 1.12 x .06
15.	738-04262	Shaft, Steering, .625 OD x 25, Cub
16.	738-04363	Spacer, Shoulder, .385x 1.25 x .3025
17.	731-04532B	Cover, Steering Wheel, Cub Cadet
18.	741-04237B	Bearing, Flange, Hex 5/8 Pm
19.	783-06043	Bracket, Support, Steering
20.	638-04021	Axle Ass'y, RH .750 Dia. (42" Deck)
	638-04022	Axle Ass'y, RH .750 Dia. (46" Deck)
21.	638-04027	Axle Ass'y, LH .750 Dia. (42" Deck)
	638-04028	Axle Ass'y, LH .750 Dia. (46" Deck)
22.	710-0395	Hex Screw, 5/16-18, 2.25, Gr5, Std
23.	710-0859	Hex Screw, 3/8-16, 2.50, Gr5, Std
24.	710-3180	Hex Screw, 5/16-18, 1.75, Gr5, Std
25.	912-0214	Nut, Hex Lock, 3/8-24, Grb
26.	712-04063	Nut, Flange Lock, 5/16-18, Grf
27.	714-0162	Pin, Cotter, 5/32, 1.25
28.	719-04413A	Axle, Pivot Bar, Cast
29.	748-04065	Steering, Block
30.	748-04068	Spacer, .71 ID x .125 OD x .56
31.	750-05280	Spacer, .385 x 1.00 x 1.5075
32.	731-05674	Cap, Bumper
33.	736-04228A	Washer, Flat, .350 x 1.559 x .062
34.	631-04008A	Wheel, Steering, 3 Spoke, Softgrip

Frame, Electrical and PTO

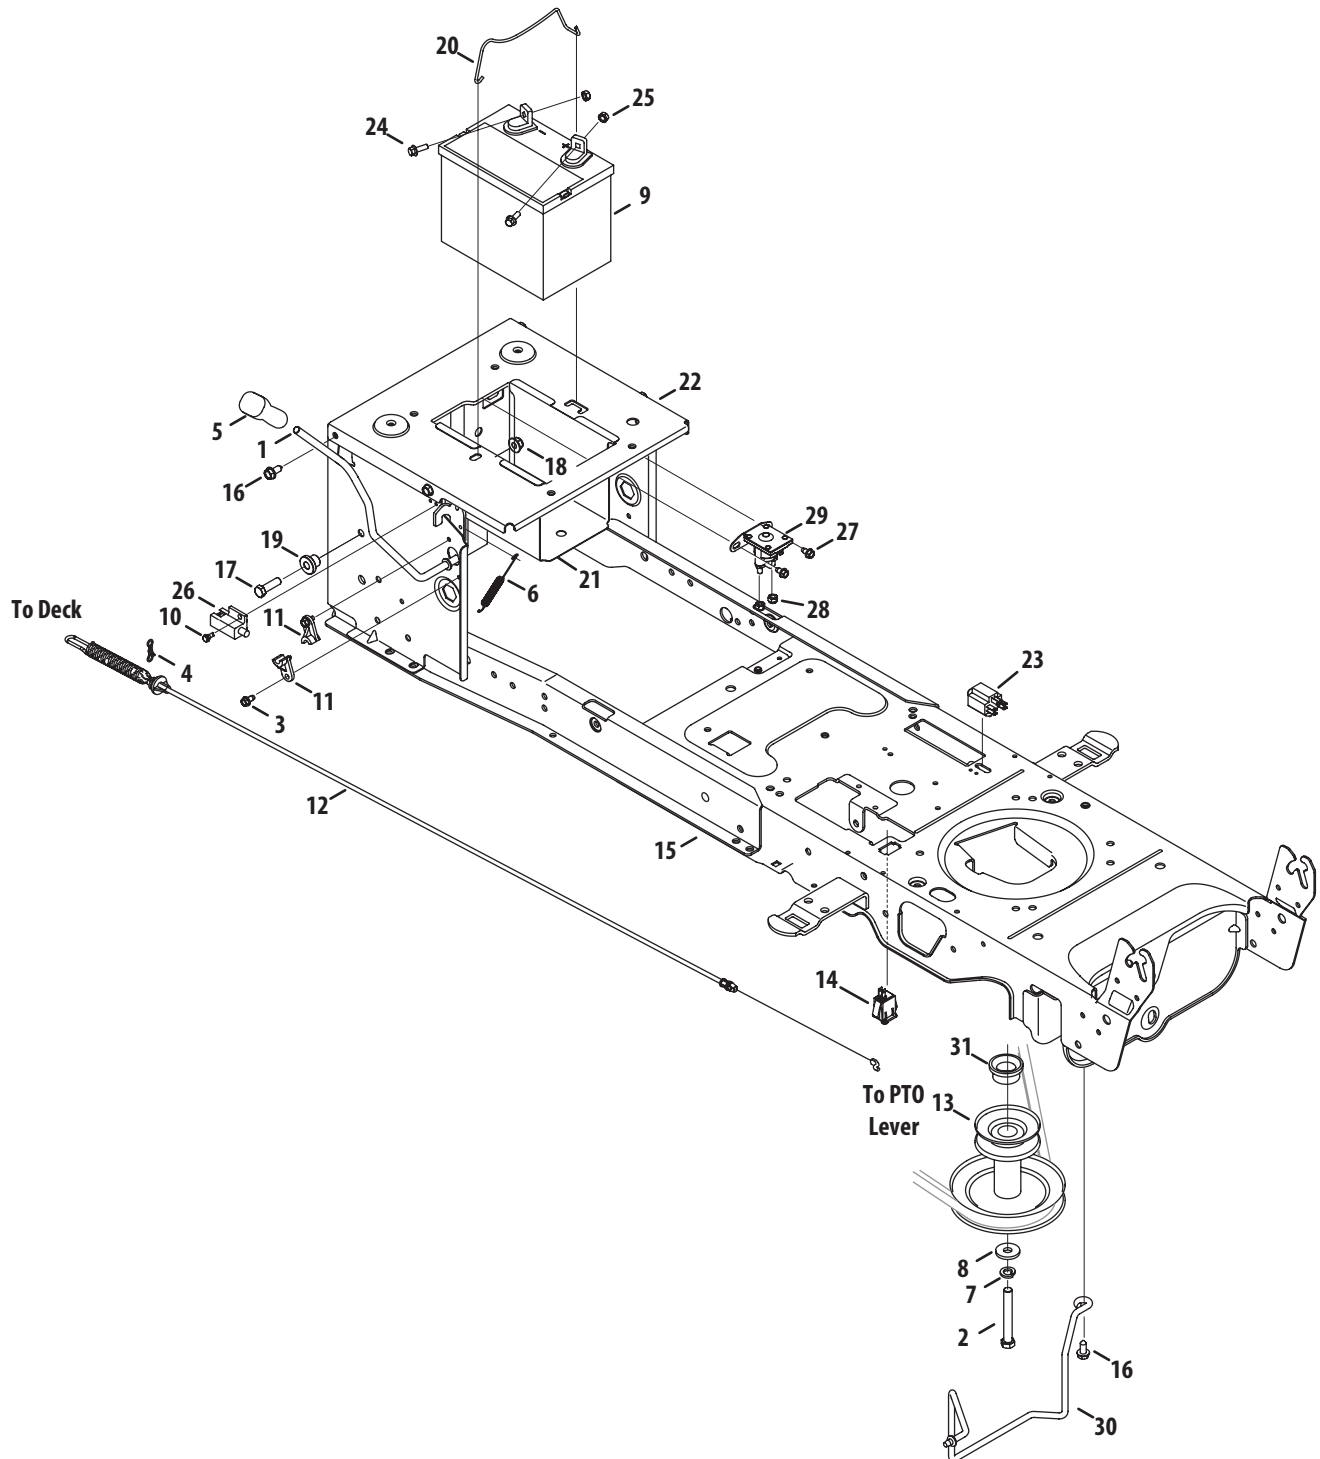

Ref.	Part Number	Description
1.	647-04151	Handle Ass'y, PTO
2.	710-04876	Hex Screw, 7/16-20, 3.50, Gr5
3.	710-0599	Screw, Self-tapping, 1/4-20, 0.50
4.	714-04040	Pin, Cotter, Bow-Tie 72
5.	720-04140A	Grip, Handle, Cub
6.	732-0932	Spring, Ext, .38 Dia x 5.6
7.	936-0171	Washer, Lock, 7/16, Regular Duty
8.	736-0322	Washer, Flat, .450 x 1.250 x .164
9.	925-1707D	Battery
10.	738-04237A	Screw, Shoulder, #10-32, .500
11.	741-04119A	Bearing, PTO
12.	946-04618A	Cable, Engag, Deck
13.	956-04067A	Pulley, Engine, 3.56 x 6.12 Dia.
14.	725-04807	Switch, Plunger, Snap Mount
15.	683-04469B	Frame Ass'y, Lower
16.	710-04484	Screw, Self-tapping, 5/16-18, .750,
17.	710-3005	Hex Screw, 3/8-16, 1.25, Gr5, Std
18.	712-04065	Nut, Flange Lock, 3/8-16, Grf,
19.	738-04058	Spacer, Shoulder, .38 x 1.0 x .70
20.	747-04121A	Rod, Battery
21.	783-0349	Tray, Battery
22.	783-06089	Bracket, Frame, Seat
23.	725-04232	Switch, 3-Pole
24.	710-04666	Hex Flange Screw, 1/4-20, .75, Gr5
25.	712-0271	Nut, Sems, 1/4-20
26.	725-04363	Switch, Interlock
27.	710-0653	Screw, Self-tapping, 1/4-20, 0.375,
28.	712-04064	Nut, Flange Lock, 1/4-20, Grf,
29.	725-04439	Solenoid, 12V, 100 Amp, 4 term
30.	747-05171A	Rod, Keeper
31.	750-0956	Spacer, 1.010 x 1.40 x .825
—	925-04094	Wire Harness, Main


Seat, Fender and Lift

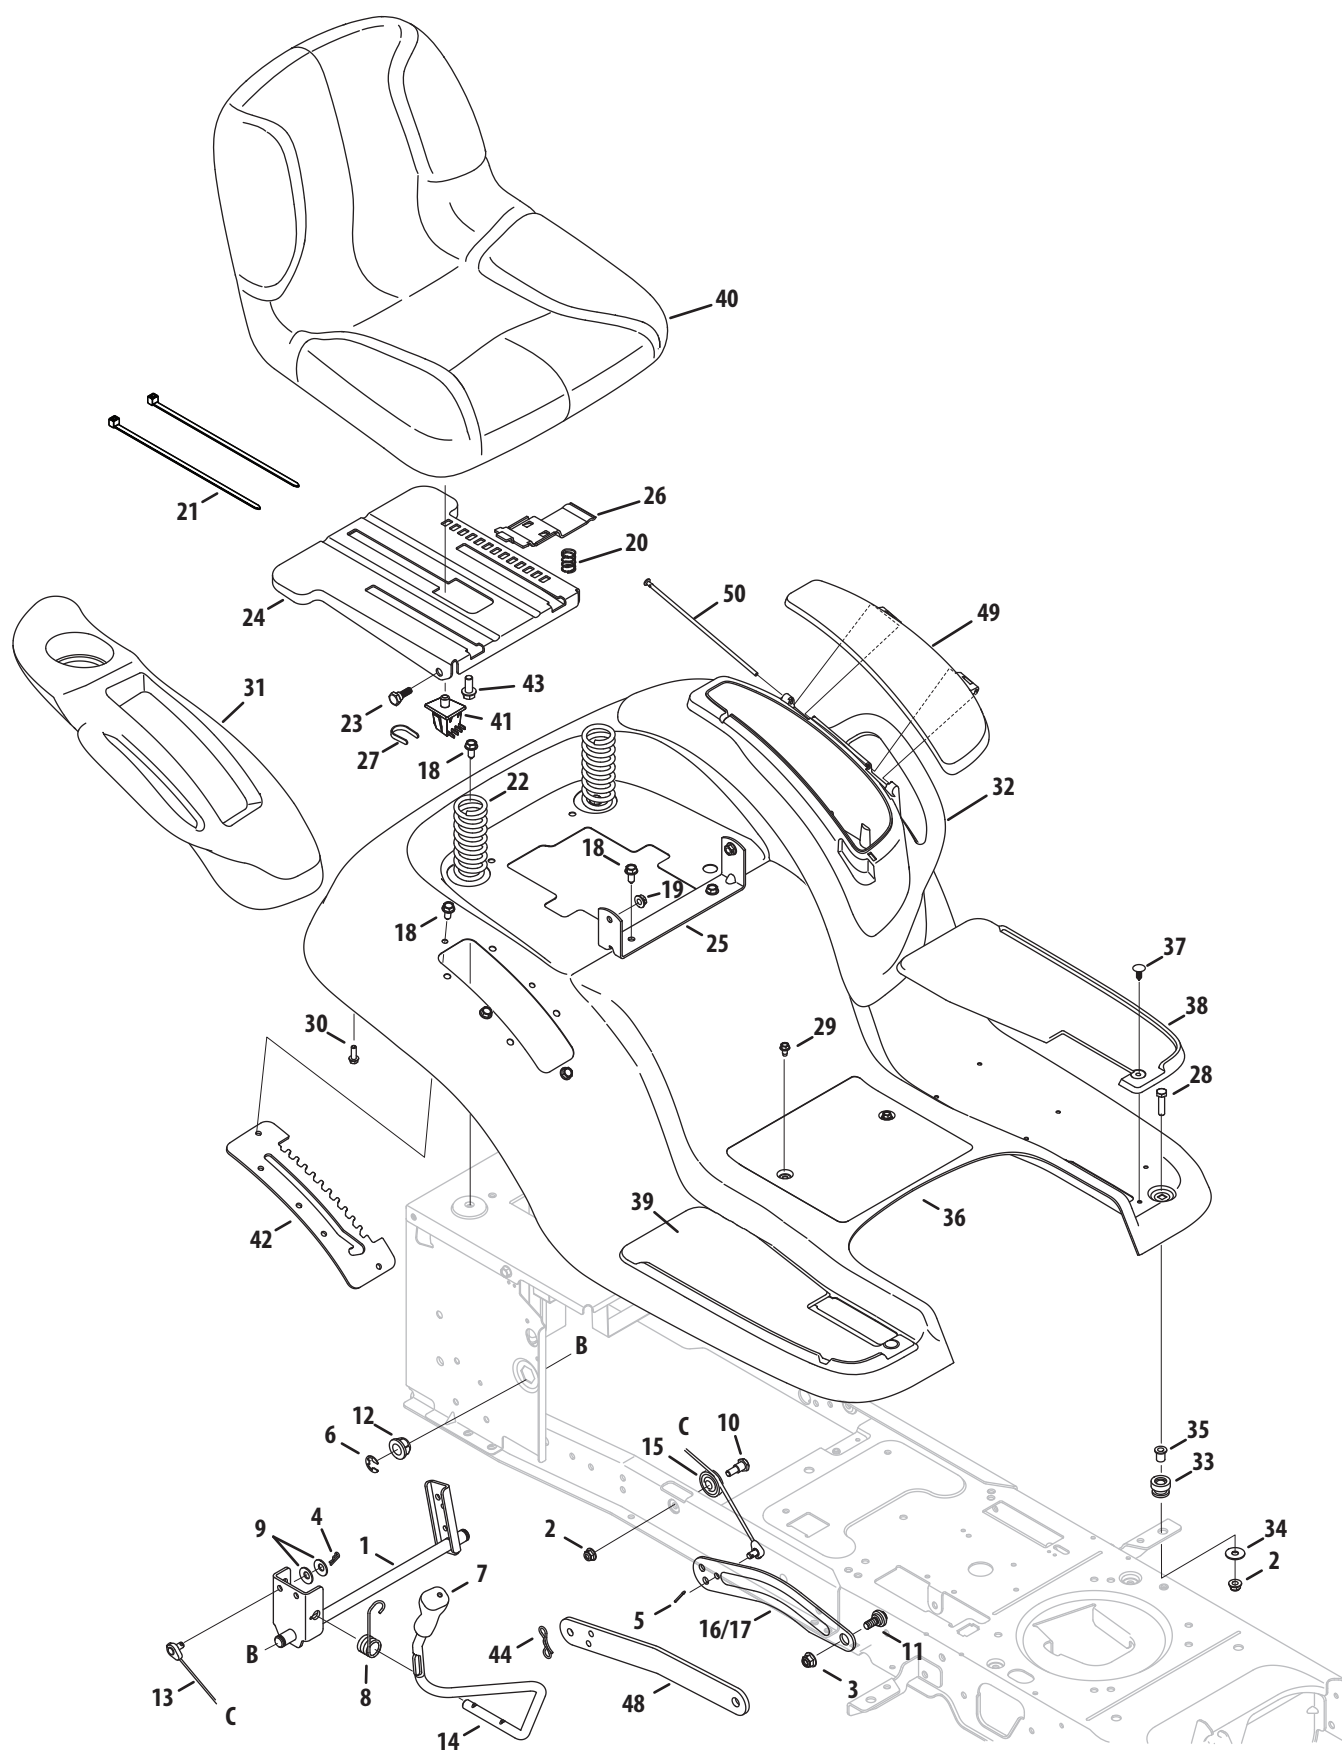

Ref.	Part Number	Description
1.	683-04223	Shaft Ass'y, Lift
2.	712-04063	Nut, Flange Lock, 5/16-18, Grf
3.	712-04065	Nut, Flange Lock, 3/8-16, Grf
4.	914-0104	Pin, Cotter, .072 Dia. x 1.13
5.	714-04040	Pin, Cotter, Bow-Tie 72 (42")
6.	716-0106A	Ring, E Type, .625 Dia. Shaft
7.	720-04139	Grip, Handle, Cub, .50 ID
8.	732-0874	Spring, Torsion
9.	736-0105	Washer, Spring, .401 x .870 x .063
10.	738-0138A	Screw, Shoulder, .437 x .470, 5/16-18
11.	738-04130	Bolt, Shoulder, .625, 3/8-16 (42")
	938-0380	Bolt, Shoulder, .50, 3/8-16 (46")
12.	941-0225	Bearing, Hex Flange
13.	746-0968	Cable, Lift, 16.16
14.	747-04962A	Handle, Lift,
15.	756-04331	Pulley, Roller, Cable
16.	783-04494C	Arm, Lift, RH (42")
17.	783-04711C	Arm, Lift, LH (42")
18.	710-04484	Screw, Self-tapping, 5/16-18, .750,
19.	712-3004A	Nut, Flange Lock, 5/16-18, Gr5, Sd Lk
20.	732-04563	Spring, Comp, .68 x 1.065 x .055
21.	725-0157	Cable, Tie, 3/16 x .05 x 7.4
22.	732-04849	Spring, Compr, 1.50 x 3.90 x .200
23.	938-0296	Screw, Shoulder, .437 x .268, 5/16-18

Ref.	Part Number	Description
24.	783-06049	Bracket, Mounting, Seat
25.	783-06088	Bracket, Pivot, Seat
26.	783-06050	Lever, Seat Adjustment
27.	783-06448	Clip, Retaining, Switch
28.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
29.	710-0599	Screw, Self-tapping, 1/4-20, 0.500,
30.	710-0895	Screw, HL, 1/4-15, 0.750,
31.	731-06700	Cover, Fender, RH
32.	731-06676	Cover, Fender, LH
33.	735-0690	Grommet, .4375 ID x .750
34.	736-3078	Washer, Flat .344 x 1.00 x .063
35.	750-3310	Spacer, Flange, .3125 x .4375 x .625
36.	783-06118	Fender, Cub Hydro
37.	726-3046	Clip, Ratchet, .250 Dia
38.	735-04137	Pad, Foot, LH
39.	735-04139	Pad, Foot, RH
40.	757-04131	Seat, High Back Cloth, Cub
41.	925-05013	Switch, Seat
42.	783-06443	Bracket, Lift, Man PTO, 6 Pos
43.	710-04482	Hex Flange Screw, 3/8/16, .875, Gr5
44.	714-04040	Pin, Cotter, Bow-Tie 72 (46")
48.	783-05546A	Link, Lift (46")
49.	731-06584	Door, Cover, Fender
50.	747-05039	Pin, Door

Fuel Tank, Hood and Dash

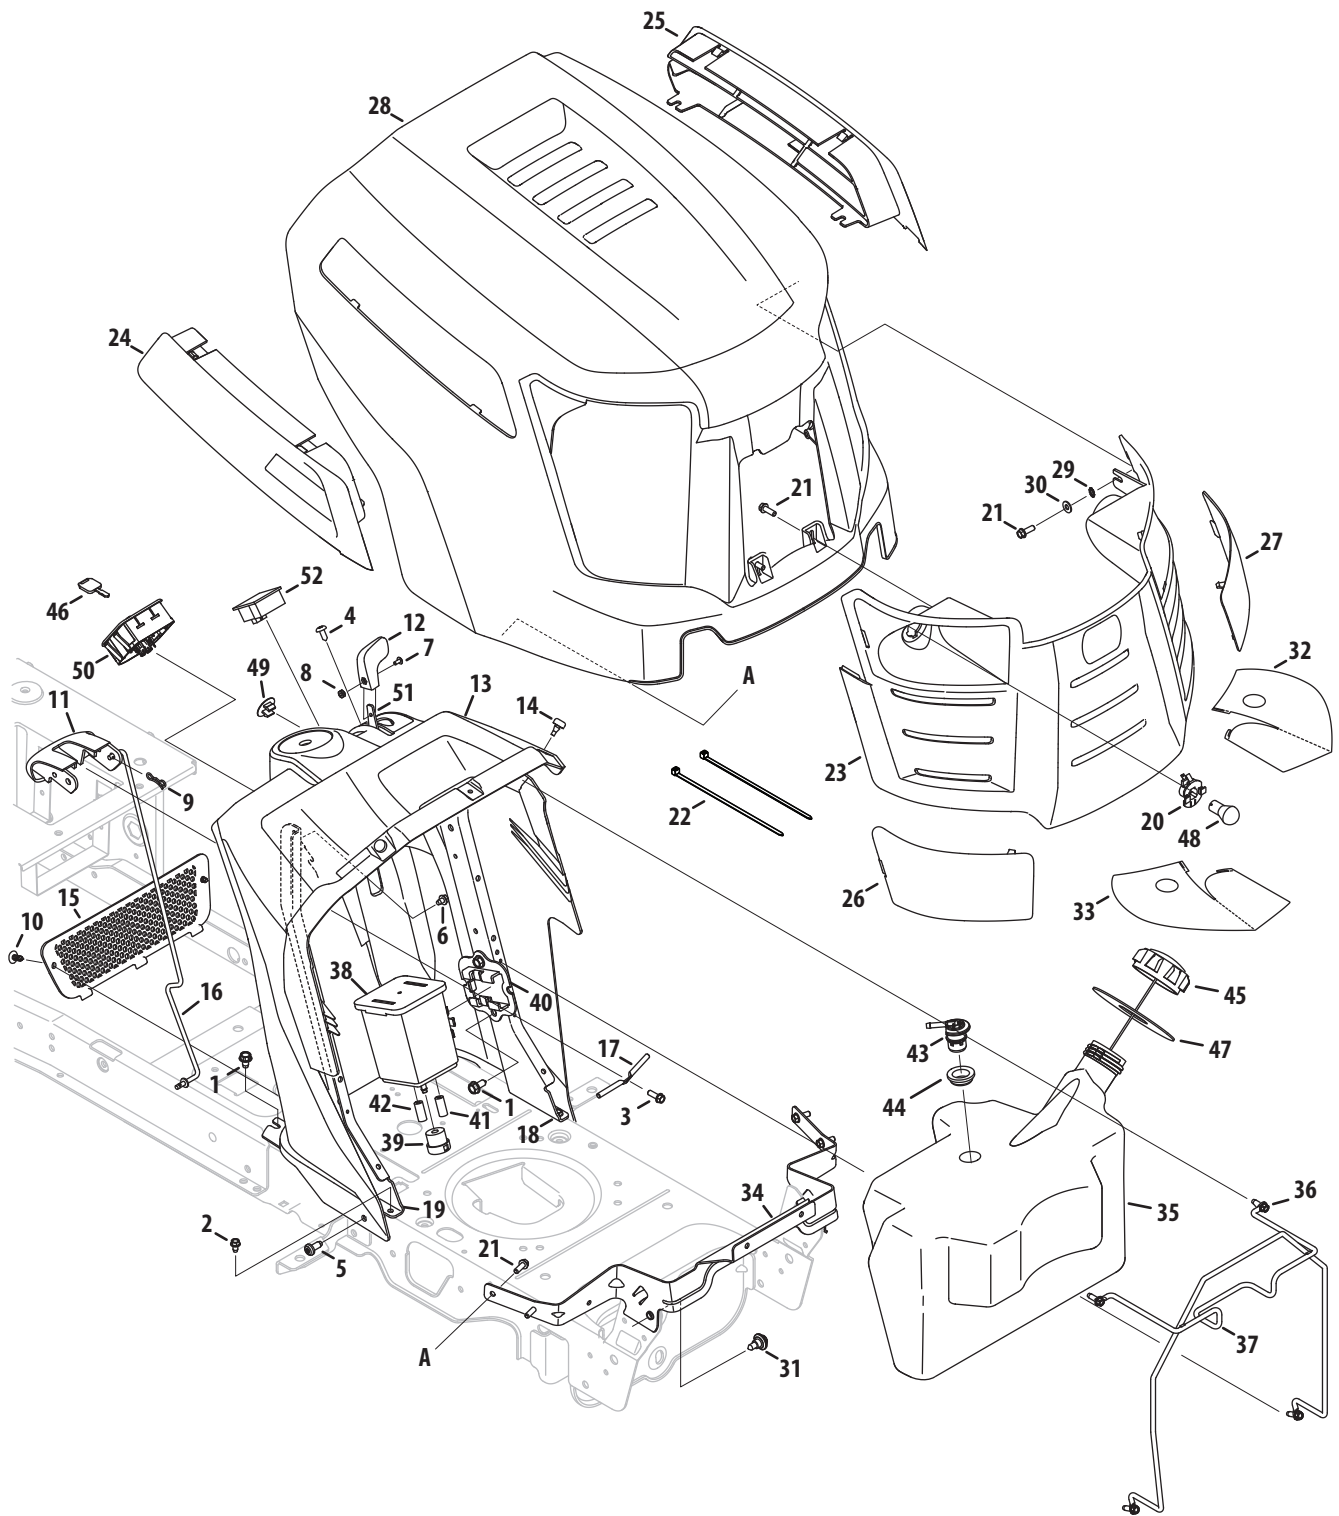


Fuel Tank, Hood and Dash

Ref.	Part Number	Description
1.	710-04484	Screw, Self-tapping, 5/16-18, .750
2.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
3.	710-0895	Screw, HL, 1/4-15, 0.750
4.	710-1017	Screw, Ab, 1/4-14, 0.625,
5.	710-1611B	Screw, Self-tapping, 5/16-18, 0.750,
6.	710-1652	Screw, Self-tapping, 1/4-20 x .625
7.	710-3217	Screw, Mach, #8-32, 0.375
8.	712-0142	Nut, Hex, #8-32
9.	714-04040	Pin, Cotter, Bow-Tie 72
10.	726-3046	Clip, Ratchet, .250 Dia
11.	731-05447A	Lever, Dash, Cruise/Brake
12.	731-06593	Knob, Throttle
13.	931-06666	Dash Panel, A-Style, Man PTO
14.	735-0271A	Bumper, .62 Dia X .3
15.	735-04076	Net
16.	747-05009B	Rod, Control, Latch Cub
17.	747-1196	Rod, Lever, Bent
18.	783-06098	Support, Dash, Plate LH
19.	783-06099	Support, Dash, Plate RH
20.	925-1649	Socket, Lamp
21.	710-05108	Screw, 1/4 Dia, .750
22.	926-0154	Tie, Cable, Push Mount 7.5 Lg
23.	931-04322	Grille Ass'y (Incl. 26, 27, 32 & 33)
24.	931-06542A	Scoop, Hood, RH A-Style
25.	931-06543A	Scoop, Hood, LH A-Style
26.	931-06558	Lens, Hood, RH A-Style
27.	931-06559	Lens, Hood, LH A-Style
28.	931-06634	Hood, A-Style

Ref.	Part Number	Description
29.	936-0222	Washer, Lock, 1/4, External
30.	936-3020	Washer, Flat, .271, .630, .065
31.	738-04091A	Screw, Shoulder, .43x.29, 5/16-18
32.	777X44055	Reflector, Cub A Style, LH
33.	777X44056	Reflector, Cub A Style, RH
34.	783-06114	Bracket, Pivot, Hood A-Style
35.	751-10879B	Tank, Fuel, 3.75 Gal.
	751-10906A	Tank, Fuel, 3.30 Gal. (CA)
36.	710-1652	Screw, Self-tapping, 1/4-20, .625
	710-0642	Screw, Self-tapping, 1/4-20, .75 (CA)
37.	747-05040A	Rod, Support, Fuel Tank
38.	951-10589	Cnstr, Carbon, 5 Gallon (CA)
39.	951-10590	Filter, Vent, Canister (CA)
40.	951-10610	Bracket, Adapter, Canister (CA)
41.	751-10749-14	Hose, Fuel, Low Perm, 3/16 Wht (CA)
42.	751-10750-28	Hose, Fuel, Low Perm, 7/32 Yel (CA)
43.	751-12118	Valve, Rollover Grommet (CA)
44.	735-04081	Grommet, Rubber, 23.0 ID (CA)
45.	751-0603A	Cap, Fuel
	951-10947	Cap, Fuel (CA)
	951-12179	Cap, Fuel *
46.	925-2054A	Key, Ignition
47.	735-04170	Gasket, Fuel Tank
48.	925-0963	Lamp, 12v
49.	731-1999	Plug, Choke
50.	925-04227B	Module Switch, Ignition
51.	946-04617	Cable, Throttle/Choke, 28"
52.	925-04022B	Meter, Indicator

* Models built after Jan. 1, 2011.


Drive System

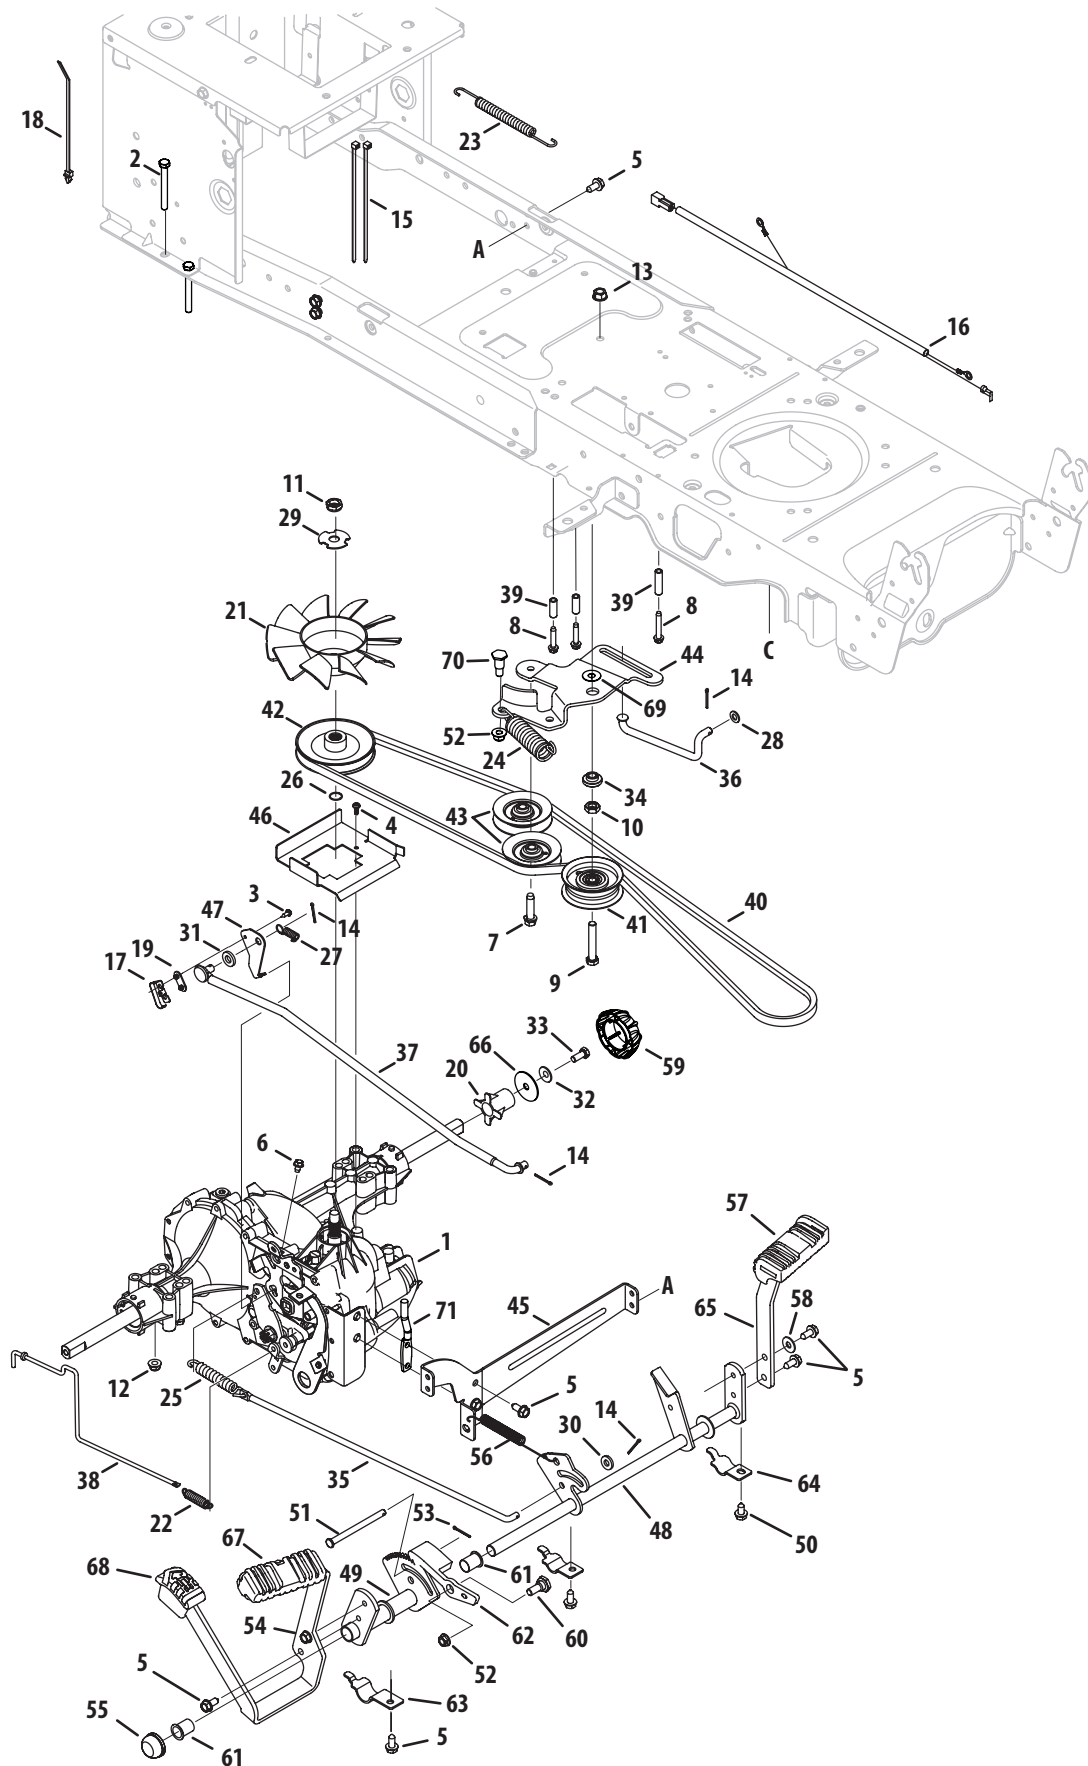

Ref.	Part Number	Description
1.	918-0319	Transmission, Hydro-Gear 0510
2.	710-0176	Hex Screw, 5/16-18, 2.75, Gr5, Std
3.	710-0227	Screw, #8-18, 0.500,
4.	710-0351	Screw, #10-16, 0.500
5.	710-04484	Screw, Self-tapping, 5/16-18, .750
6.	710-0653	Screw, Self-tapping, 1/4-20, 0.375
7.	710-1007	Screw, Self-tapping, 3/8-16, 1.500
8.	710-1325	Screw, Self-tapping, 1/4-20, 1.625
9.	710-3011	Hex Screw, 3/8-16, 2.25, Gr5
10.	912-0240	Nut, Jam, 7/16-20, Gr2
11.	912-0346	Nut, Jam Lock, 1/2-20, Gr5, Nylon
12.	712-04063	Nut, Flange Lock, 5/16-18, Nylon
13.	912-0431	Nut, Flange Lock, 3/8-16
14.	914-0111	Pin, Cotter, 3/32, 1.0
15.	725-0157	Cable, Tie, 3/16 x .05 x 7.4
16.	725-04791A	Jumper Harness, Ground & Reverse
17.	725-1644	Switch, Spring, Short
18.	926-0154	Tie, Cable, Push Mount 7.5
19.	926-0320	Plate, Insulator Nut
20.	731-05299A	Sleeve, .765 Id x 1.500
21.	731-06098	Fan, Hydro
22.	932-0209	Spring, Extension, .48 Od x 2.03
23.	732-04606	Spring, Extension, .500 Dia x 12.6
24.	732-04792	Spring, Extension, 1.00 Dia x 4.75
25.	732-0716D	Spring, Extension, .59 Od x 4.00
26.	732-0729	Ring, Wire
27.	732-3118	Spring, Extension, .375 Od x 1.44
28.	936-0264	Washer, Flat, .330 x .630 x .0635
29.	736-04263	Washer, Lock, Transmission Hydro
30.	936-3008	Washer, Flat, .344 x .750 x .120
31.	736-3010	Washer, Flat, .407x.812x.135, Ht
32.	736-0242	Washer, Bell, .340 x .872 x .060
33.	710-0627	Hex Screw, 5/16-24, .750, Gr5, Lock
34.	738-04420	Spacer, Shoulder, 1.375 x .380 x .183
35.	747-04139	Rod, Brake, LT Hydro
36.	747-04957A	Rod, Transmission, Bypass

Ref.	Part Number	Description
37.	747-04979	Rod, Control, Hydro
38.	747-04991	Rod, Hydro Bypass
39.	750-04456	Spacer, .260 x .372 x 1.420
40.	954-04207	Belt, V-Type
41.	756-04224	Pulley, Idler, Flat 2.75 OD
42.	756-04308	Pulley, Input, 4.13 Dia
43.	756-04325	Pulley, Idler, V-Type x 3.06
44.	783-06027A	Bracket, Idler, Center Double
45.	783-06133	Bracket, Mount, Hydro
46.	783-06260	Bracket, Support, Belt Disengage
47.	783-1019B	Bracket, Actuator, Switch
48.	647-04152B	Control Assembly, Brake
49.	683-04537	Bracket Assembly, Pedal, Hydro
50.	710-0604A	Screw, Self-tapping, 5/16-18, 0.625,
51.	711-05068	Pin, Clevis, 5/16 x 3.985
52.	712-04065	Nut, Flange Lock, 3/8-16, Nylon
53.	714-04040	Pin, Cotter, Bow-Tie 72
54.	783-06059	Bracket, Pedal, Hydro
55.	726-0214	Cap, Push 5/8
56.	732-04587	Spring, Extension, .63 Dia x 4.95
57.	735-04136	Pad, Pedal, Brake
58.	736-0242	Washer, Bell, .340 x .872 x .060
59.	731-2290A	Cap, Hub
60.	938-0380	Bolt, Shoulder, .500 x .270, 3/8-16
61.	741-0495	Bearing, Flange, .630 x .695 x .60
62.	748-04203	Latch, Cruise
63.	783-05914	Bracket, Support, Pedal Strap
64.	783-05940	Bracket, Support, Pedal Strap 5/8
65.	783-06103A	Bracket, Pedal, Brake
66.	736-0430	Washer, Flat, .350 x 1.59 x .062
67.	735-04118A	Pad, Pedal, Forward
68.	735-04135	Pad, Pedal, Reverse
69.	936-0344	Wash, Flat, .385 x 1.00 x .030
70.	738-0430	Scr, Shldr, .50 x .685 3/8-16
71.	747-05444	Belt Keeper Rod


42-inch Deck

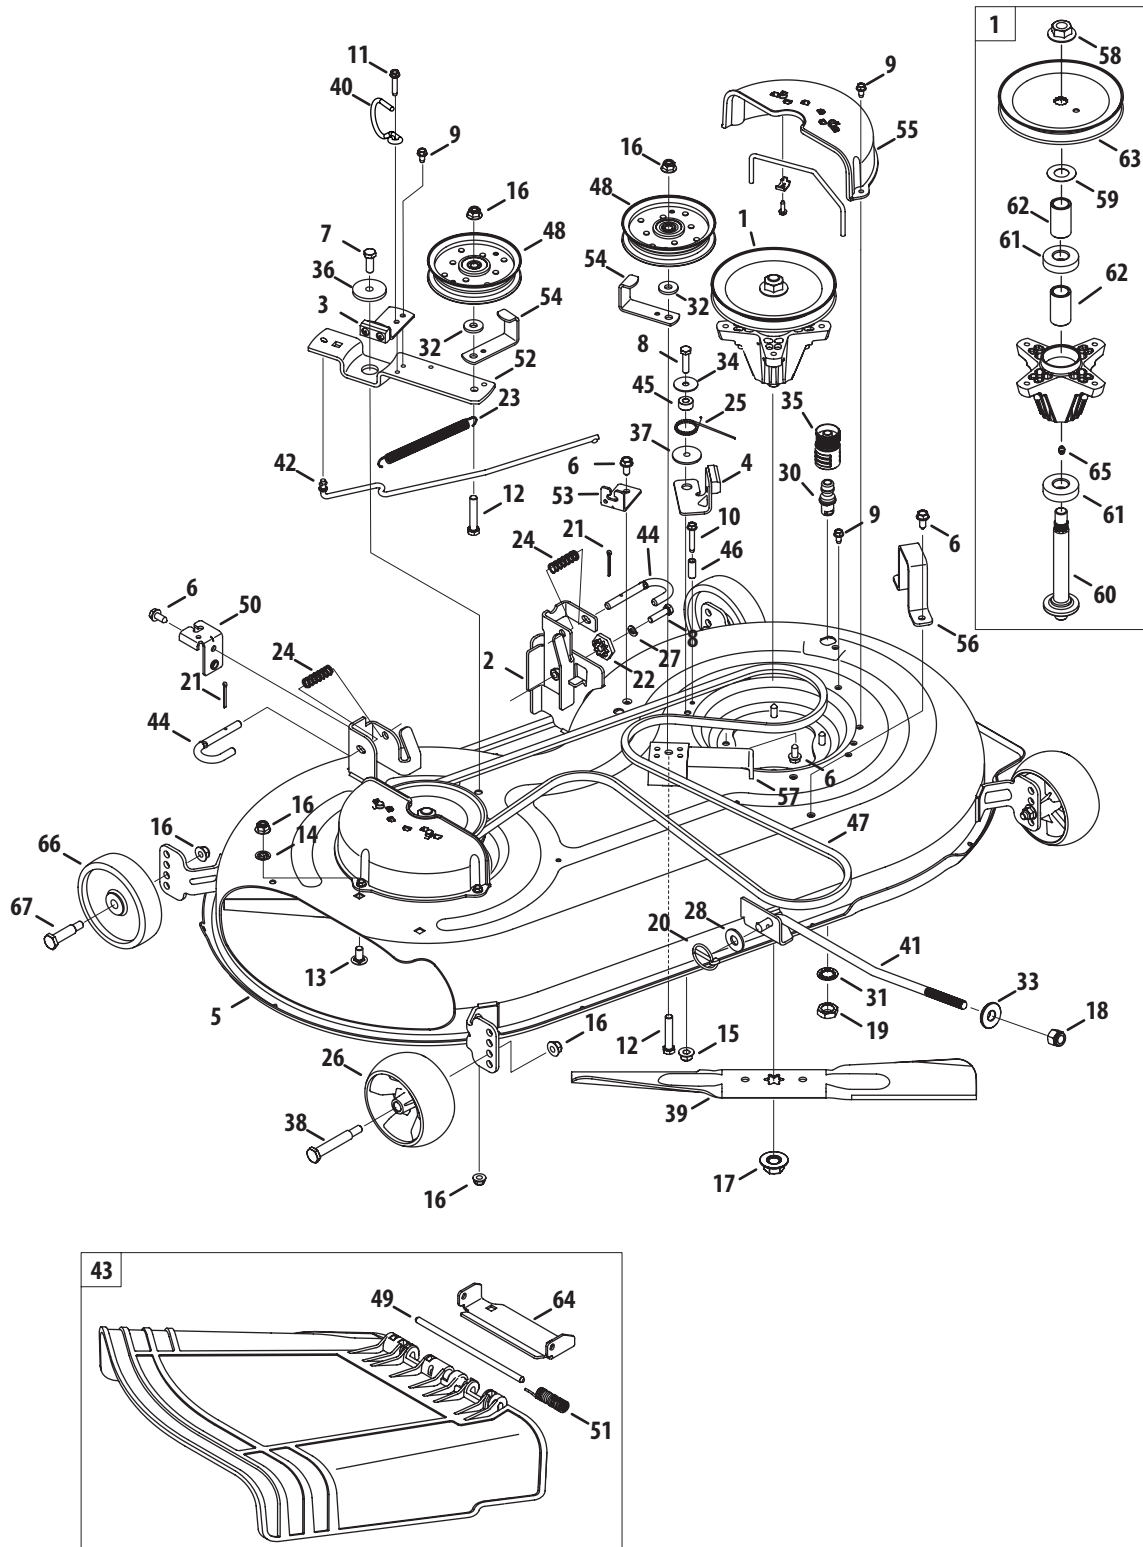

Ref.	Part Number	Description
1.	918-04822A	Spindle Ass'y, Pulley, 6.3 Dia
2.	683-0254B	Bracket Ass'y, Deck, Hanger LH
3.	983-04511	Brake Ass'y, Deck, 42/46
4.	983-04525	Brake Ass'y, Deck, 46"
5.	983-04598	Deck Ass'y, Offset, 42"
6.	710-04484	Screw, Self-tapping, 5/16-18, .750,
7.	710-0514	Hex Screw, 3/8-16, 1.00, Gr5, Std
8.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
9.	710-0599	Screw, Self-tapping, 1/4-20, 0.500,
10.	710-0778	Screw, Self-tapping, 1/4-20, 1.500,
11.	710-0642	Screw, Self-tapping, 1/4-20, .750,
12.	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std
13.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
14.	712-0229	Nut, Push, 3/8
15.	712-04063	Nut, Flange Lock, 5/16-18, Grf,
16.	712-04065	Nut, Flange Lock, 3/8-16, Grf,
17.	712-0417A	Nut, Flange, 5/8-18
18.	712-04243	Nut, Lock, 1/2-13
19.	912-0641	Nut, Hex, M16-1.5
20.	753-04070	Pin, Lynch, .1875
21.	914-0470	Pin, Cotter, 1/8 x 1.25
22.	917-04074	Gear, Deck, Adjustment
23.	932-0384	Spring, Extension, .62 Dia x 6.12
24.	732-04652	Spring, Comp, .535 OD x 1.751
25.	732-04773	Spring, Torsion, .992 I.D x 1.17 O.D
26.	734-04155	Wheel, Deck, 5.0 Dia Ball
27.	936-0119	Washer, Lock, 5/16, Regular Duty
28.	936-0176	Washer, Flat, .265 x .938 x .120
29.	936-0179	Washer, Flat, .531 x 1.25 x .100
30.	737-04003D	Port, Water
31.	736-0225	Washer, Lock, 5/8, Int Tooth
32.	736-0262	Washer, Flat, .385 x .870 x .092
33.	736-0317	Washer, Bell, .63 x 1.25 x .18
34.	736-0362	Washer, Flat, .330 x 1.25 x .06,

Ref.	Part Number	Description
35.	921-04041	Adapter, Water Port
36.	738-04162A	Spacer, Shoulder, .8840 x .190
37.	738-04166	Spacer, Shoulder, .5000 x .1475
38.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
39.	942-04312	Blade, Cut, 21.23" 2-In-1, Cub
40.	747-05323	Rod, Keepr, Belt 42 Idler
41.	747-04944B	Rod, Lift, Deck, Frt, 13.7
42.	747-05105	Rod, Control, Brake 42"
43.	931-04293	Chute Ass'y, Deflector 42" Offset
44.	747-1116	Rod, Handle, Deck Rel .375 Dia
45.	750-0258	Spacer, .315 x .750 x .375
46.	750-0566A	Spacer, .260 x .375 x 1.030
47.	954-04060B	Belt, V Type, A Sec x 96.5
48.	756-04129B	Pulley, Idler, 4.25"Dia
49.	711-04847B	Pin, Hinge, Dia .3125 x 7.96
50.	783-04740	Bracket, Cable, Deck Engage
51.	732-04372	Spring, Torsion, .44 I.D. x 2.0
52.	783-05946	Bracket, Idler, Pivot, 46
53.	783-06243	Bracket, Cable, Deck Engage
54.	783-06368A	Bracket, Guard, Belt, 4.25 Pulley
55.	731-06496	Cover, Belt, Universal
56.	783-06632	Stop, LH, 42 Deck
57.	783-06643	Bracket, Support, Stationary Idler
58.	712-0417A	Nut, Flange, 5/8-18
59.	936-0351	Washer, Flat, .760 Idx1.50 OD
60.	738-1186A	Shift, Spindle, 6.11.
61.	941-0919	Bearing, Ball, .787id x 1.85 Odx.551
62.	750-04936	Spacer, .792 x 1.060 x 1.860
63.	956-1227	Pulley, Deck, 6.3 Dia
64.	783-05823	Bkrt, Chute, 42/46
65.	937-3000	Lube Fitting, 3/16
66.	734-0973	Wheel, Deck
67.	938-0373	Bolt, Shoulder, .496 x 1.525, 3/8-16


46-inch Deck

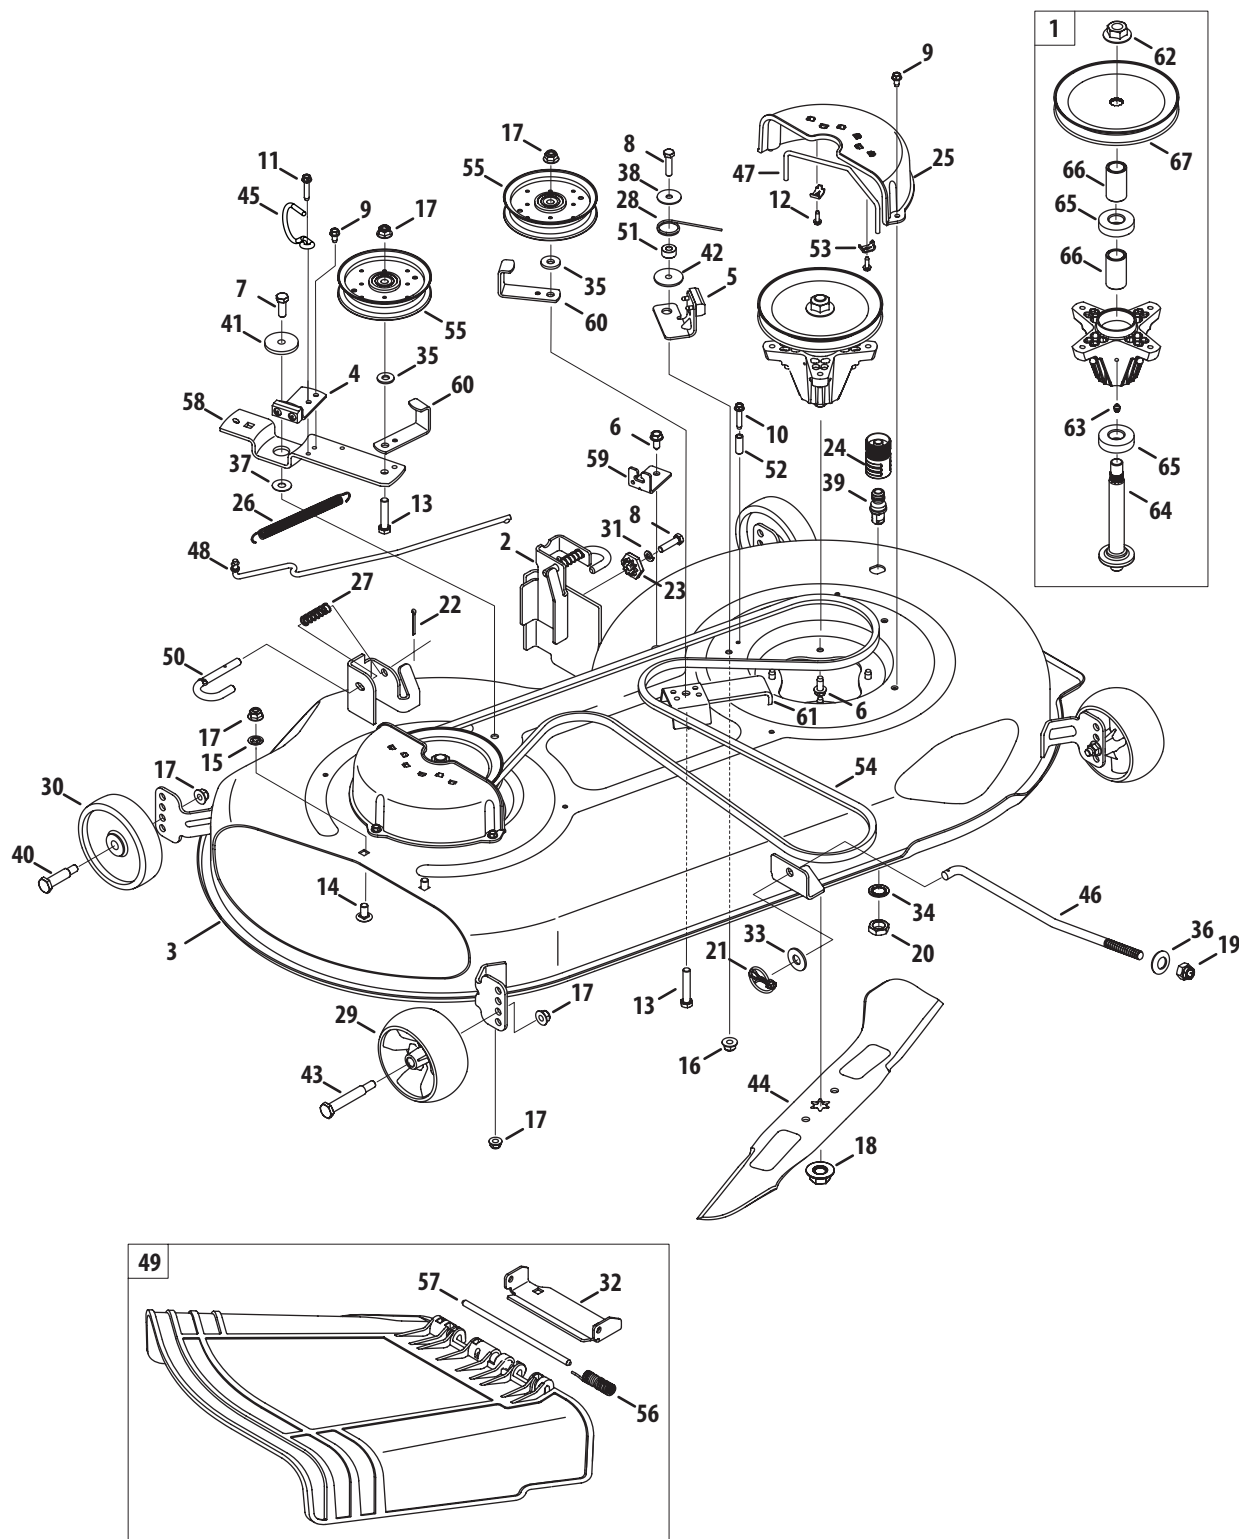

Ref.	Part Number	Description
1.	918-04865A	Spindle Assembly, Pul 6.93 Dia
2.	683-0254B	Bracket Assembly, Deck Hanger, LH
3.	983-04468A	Deck Assembly, Offset, 46"
4.	983-04511	Brake Assembly, Deck, 42/46
5.	983-04525	Brake Assembly, Deck, 46"
6.	710-04484	Screw, Self-tapping, 5/16-18, .750,
7.	710-0514	Hex Screw, 3/8-16, 1.00, Gr5, Std
8.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
9.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
10.	710-0778	Screw, Self-tapping, 1/4-20, 1.500
11.	710-0642	Screw, Self-tapping, 1/4-20, .750
12.	710-1003	Screw, B, #10-16, 0.625
13.	710-3144	Hex Screw, 3/8-16, 2.00, Gr5, Std
14.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
15.	712-0229	Nut, Push, 3/8
16.	712-04063	Nut, Flange Lock, 5/16-18, Nylon
17.	712-04065	Nut, Flange Lock, 3/8-16, Nylon
18.	712-0417A	Nut, Flange, 5/8-18
19.	712-04243	Nut, Lock, 1/2-13
20.	912-0641	Nut, Hex, M16-1.5
21.	753-04070	Pin, Lynch, .1875
22.	914-0470	Pin, Cotter, 1/8 x 1.25
23.	917-04074	Gear, Deck Adjustment
24.	921-04041	Adapter, Water Port
25.	731-06496	Belt Cover, Universal
26.	932-0384	Spring, Extension, .62 x 6.12
27.	732-04652	Spring, Compression, .535 x 1.751
28.	732-04773	Spring, Torsion, .992 ID x 1.17 OD
29.	734-04155	Wheel, Deck, 5.0 Dia Ball
30.	734-0973	Wheel, Deck 5.0 x 1.38
31.	936-0119	Washer, Lock, 5/16, Regular Duty
32.	783-06074	Bracket, Chute, 46
33.	936-0179	Washer, Flat, .531 x 1.25 x .100
34.	736-0225	Washer, Lock, 5/8, Int Tooth

Ref.	Part Number	Description
35.	736-0262	Washer, Flat, .385 x .870 x .092
36.	736-0317	Washer, Bell, .63 x 1.25 x .18
37.	936-0344	Washer, Flat, .385 x 1.0 x .030
38.	736-0362	Washer, Flat, .330 x 1.25 x .06, Ht
39.	737-04003D	Deck Port, Water
40.	938-0373	Bolt, Shoulder, .496 x 1.525, 3/8-16
41.	738-04162A	Spacer, Shoulder, .8840 x .190
42.	748-0234	Spacer, Shoulder
43.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
44.	942-04244A	Blade, Cut, 23.25" 2-In-1, Cub
45.	747-05323	Rod, Belt Keepr, 42 Idler
46.	747-04944B	Rod, Lift, Deck, Frt, 13.7
47.	747-05011	Rod, Keeper, Belt
48.	747-05052	Rod, Control, Brake 46"
49.	631-04288	Chute Assembly, 46" Offset Cub
50.	747-1116	Rod, Deck Release
51.	750-0258	Spacer, .315 x .750 x .375
52.	750-0566A	Spacer, .260 x .375 x 1.030
53.	751B221535	Clamp, Casing
54.	954-04219	Belt, V-Type, A-Sec
55.	756-04129B	Pulley, Idler, 4.25"Dia
56.	732-04372	Spring, Torsion, .44 I.D. x 2.0
57.	711-04847B	Pin, Hinge, 7.96
58.	783-05946	Bracket, Idler, Pivot, 46
59.	783-06243	Bracket, Cable, Deck Engagement
60.	783-06368A	Bracket, Guard, Belt, 4.25 Pulley
61.	783-06643	Bracket, Support, Deck Idler
62.	712-0417A	Nut, Flange, 5/8-18
63.	937-3000	Lube Fitting, 3/16
64.	738-1186A	Shaft, Spindle, 6.11 Lg.
65.	941-0919	Bearing, Ball, .787 x 1.85 x .551
66.	750-04936	Spacer, .792 x 1.060 x 1.860 Lg
67.	756-04356	Pulley, Deck, 6.93 Dia

Hydrostatic Transmission (Hydro-Gear 311-0510)

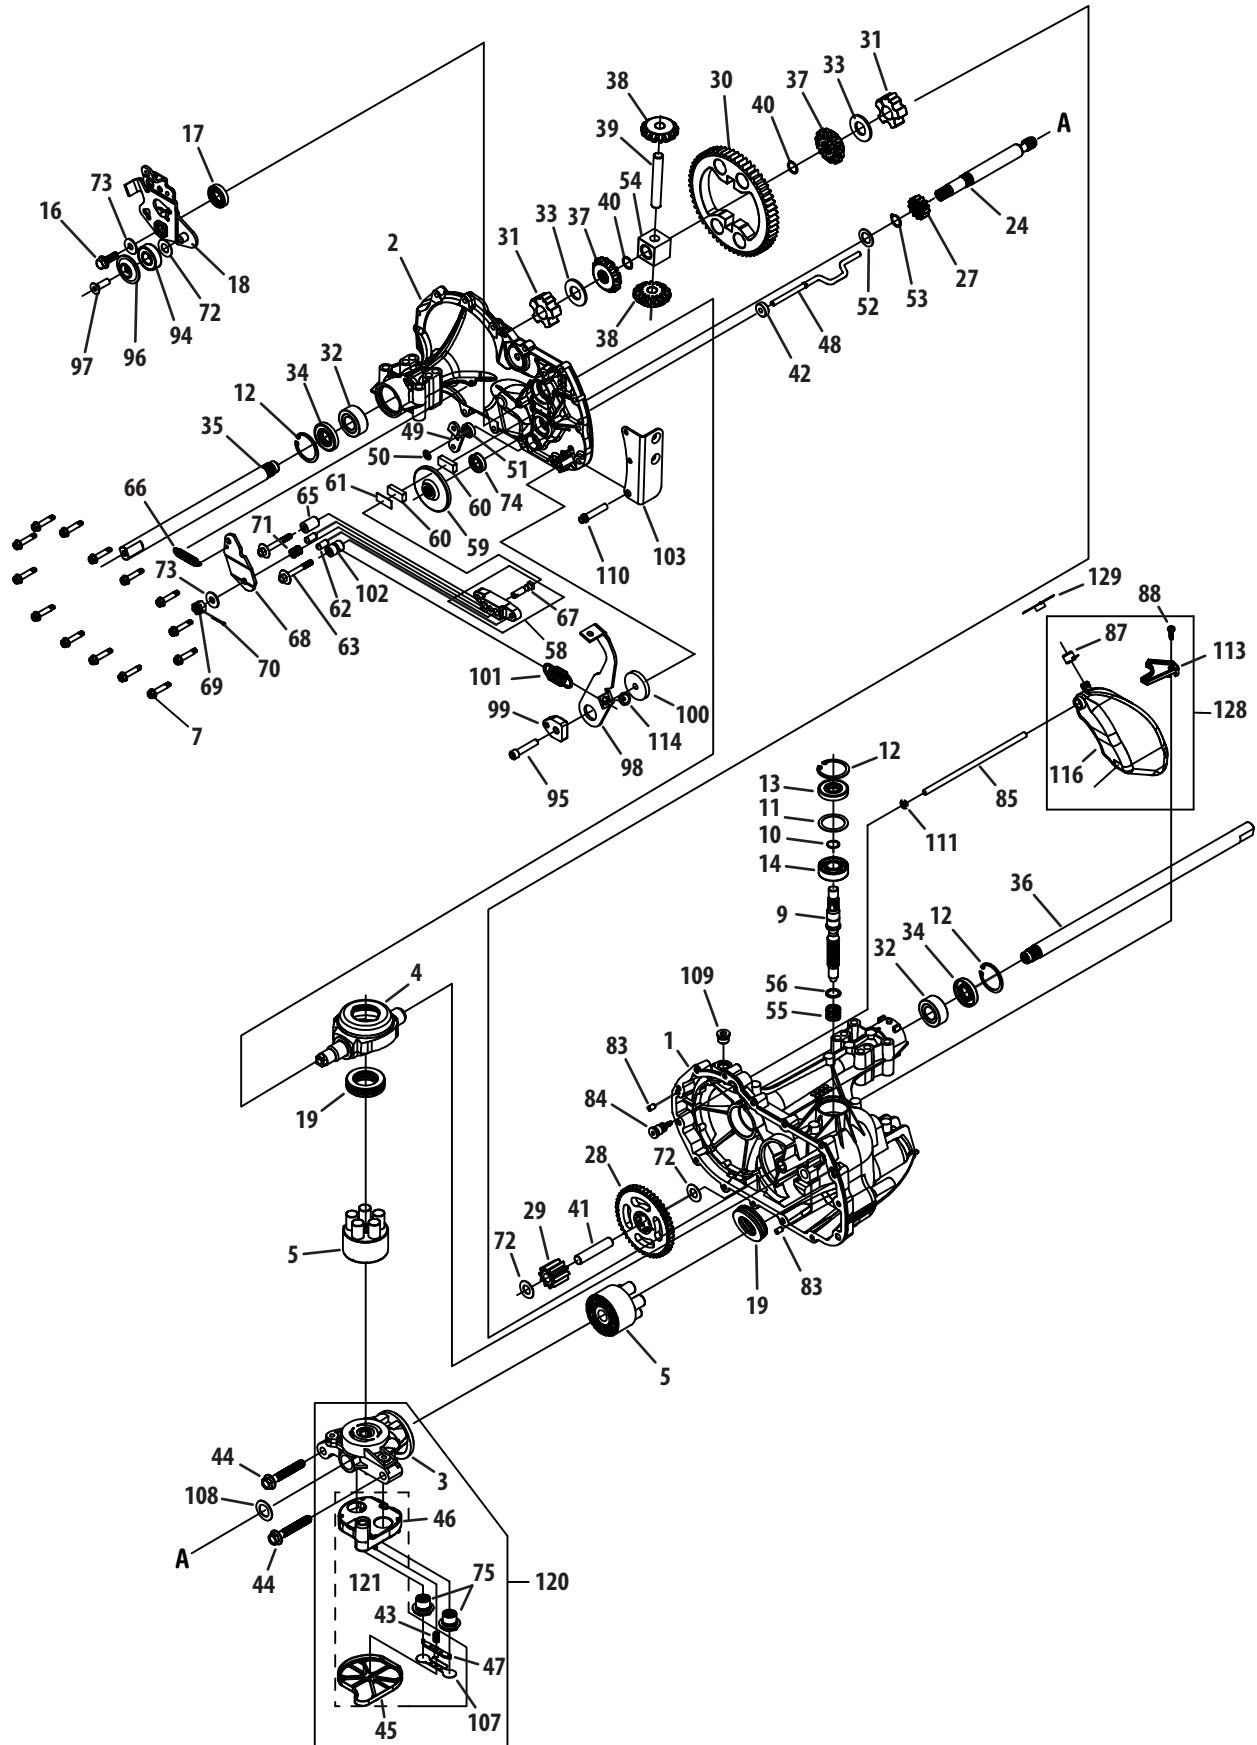


Hydrostatic Transmission (Hydro-Gear 311-0510)

Ref.	Part Number	Description	Ref.	Part Number	Description
1	HG-70467	Main Housing Assembly	40	HG-44871	Ring, Spiral Retaining
		Main Housing, Machined	41	HG-51083	Pin, Jackshaft
		Bushing ,865 x 985 x .790	42	HG-51100	Magnet, Ring
2	HG-70483	Main Housing Assembly	43	HG-51136	Spring, Bypass
		Main Housing, Machined	44	HG-50016	Hydro Mtg Screw 3/8-24 x 2.5
		Bushing ,865 x 985 x .790	45	HG-51581	Bottom, Filter
		Bushing 624 x 719 x . 562	46	HG-51580	Base Filter W/ Poppet
3	HG-70477	Center Section Assembly	47	HG-51091	Actuator Bypass
		Center Section Machined	48	HG-51098	Rod Bypass Actuator
		Bushing. 707 x . 788 x . 591	49	HG-51135	Arm, Bypass
4	HG-51048	Swashplate, Trunnion Machined	50	HG-51116	Retaining Ring 0.250 External
5	HG-70331	Block - Assembly	51	HG-51081	Seal, Lip . 741 x .250 x .250 Tc
		Block - Cylinder	52	HG-44371	Flat Washer 5/8 Id x 1.0 Od x . 05
		Piston	53	HG-44145	Retaining Ring
		Spring, Compression	54	HG-51071	Bearing, Center Block
		Washer - Thrust	55	HG-2003014	Spring - Helical Compression
7	HG-51190	Hex Flange Screw 1/4-20 x-1,25	56	HG-2003017	Washer
9	HG-51062	Shaft, Input	58	HG-62589	Kit, Brake Yoke
10	HG-2000022	Ring - Retaining			Brake Yoke
11	HG-50951	Spacer			Sq. Hd, Bolt 5/16-24 Ribbed
12	HG-50329	Ring - Retaining	59	HG-51072	Rotor, Brake
13	HG-51161	Seal Lip .67 x 1.58 x .276	60	917-0678	Brake Puck
14	HG-50315	Ball Bearing 17mm Id x 40mm Od	61	917-0682	Puck Plate
16	HG-51064	Bolt. Flange 5/16-24 x .94 (Patch)	62	941-0343	Brake Actuating Pin
17	HG-51140	Lip Seal 18 x 32 x 7	63	HG-51146	Hex Screw 1/4-20 x 2 w/ Patch
18	HG-51119	Arm Control	65	HG-23711	Spacer
19	HG-50551P	Bearing 30x52 x 13 Thrust	66	HG-70896	Kit, Spring
24	HG-50966	Shaft Motor	67	HG-44138	So. Hd, Bolt 5/16-24- Ribbed
27	HG-51130	Gear - Pinnion 13t	68	HG-44094	Arm, Brake
28	HG-51129	10t/48t Gear	69	912-0273	Slotted Hex Nut 5/16-24
29	HG-51043	Gear Jot Jackshaft	70	914-0507	Cotter Pin 3/32 x 3/4
30	HG-51044	60t Bull Gear	71	HG-50919	Comp. Spring Brake Anti-Drag
31	HG-51088	Sleeve Bearing . 75 x 1.750 x .625	72	HG-50132	Washer, Ht .5 I. D. x 1 OD, x .032
32	HG-51089	Sleeve Bearing .75 x 1.575 x ,625	73	736-0371	Flat Washer, 11/32 ID x 7/8 OD
33	HG-44875	Washer 3/4 Id x 1-1/2 Od x .13 Thk	74	HG-70719	Kit, Seal
34	HG-51066	Lip Seal Axle Seal			Oil, Seal 625 x Lo x .25
35	HG-51079	Shaft Axle . 75 x 11. 39 (Dd R. H.)			Ring, Ret-Star Washer
36	HG-51078	Shaft Axle .75 x 17. 99 (Dd, L, H.)			Bulletin, Shaft Seal
37	HG-71310	Miter Gear (Splined)	75	HG-51084	Check Plug Assem, .027 Washer
38	HG-44097	Miter Gear 15t (0 .5 Id)	83	HG-9004800-2506	Pin, Standard Headless
39	HG-50146	Shaft	84	HG-51143	Fitting, 5/16 Sae 5/32 Tube

Hydrostatic Transmission (Hydro-Gear 311-0510)

Ref.	Part Number	Description	Ref.	Part Number	Description
85	HG-51147	Hose, Expansion Tank	121	HG-70756	Filter Assembly
87	HG-51251	Cap., Vent			Bottom Filter
88	HG-50653	Bolt, Self Tapping 10-32 x 112			Base Filter w/ Poppet
94	HG-44147	Ball Bearing .62 Id x 1.38 x 44			Spring Bypass
95	HG-50837	Cap Screw, 5/16-24 x 1-112			Actuator Bypass
96	HG-51200	Spacer, Locating			Deflector
97	HG-50870	Screw, Sfhcs	128	HG-70503	Kit, Expansion Tank
98	HG-51120	Arm, Return			Tank, Expansion
99	HG-51097	Puck, Adjusting			Cap, Vent
100	HG-51122	Washer, .325 OD x 1.6 ID x .150			Bolt, Self Tapping 10-32 x 1/2
101	HG-51131	Spring, Extension			Bracket, Support Expansion Tank
102	HG-51123	Spacer, .56 x .26 x .87			Silicon-Sponge 112 x 1/2 x 3/16
103	HG-51223	Bracket, Torque	129	HG-51252	Cap, Expansion Tank Shipping
107	HG-51134	Deflector	—	HG-50928	Sealant
108	HG-51069	Washer, Motor Shaft .71 Id 1.15 Od	—	HG-70463	Seal, O-Ring Kit
109	HG-9005110-5600	Plug, SAE #6	—	—	20w-50 Oil (78.8 oz)
110	HG-50868	Torx Head Screw, 5/16-18			
111	HG-51144	O-Ring, .07 x .301 ID			
113	HG-51179	Bracket, Support Expansion Tank			
114	HG-51184	Spring Guide			
116	HG-51196	Silicon Sponge			
120	HG-70759	Center Section - Bypass Assm			
		Center Section Machined			
		Base Filter w/ Poppet			
		Check Plug Assembly			
		Spring Bypass			
		Actuator Bypass			
		Deflector			
		Bottom, Filter			
		Bushing, .707 x .788 x .591			

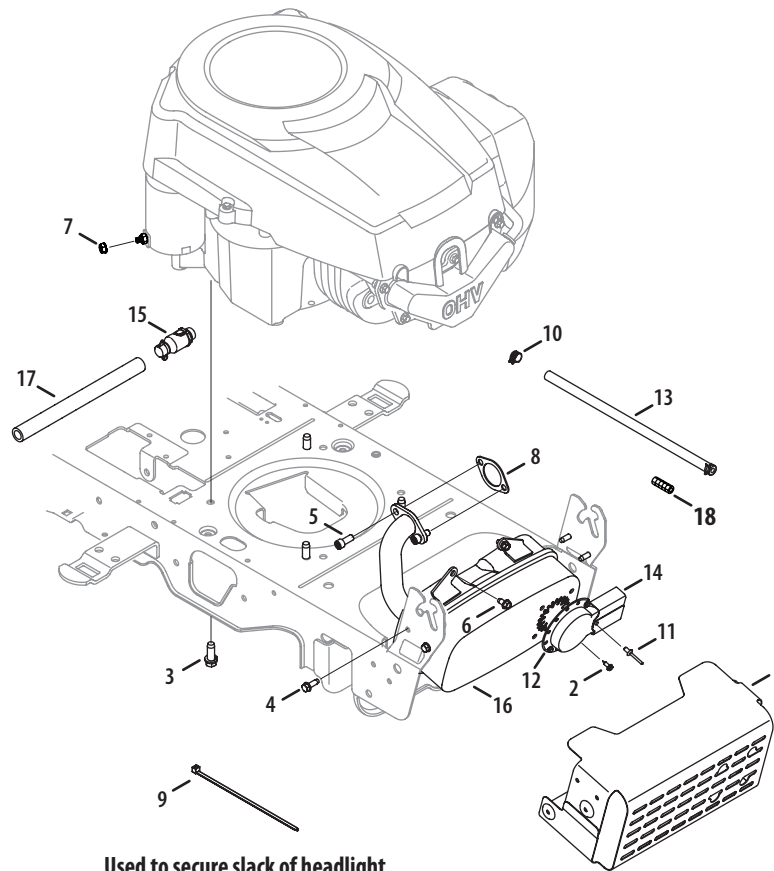

Used to secure slack of headlight
harness to hood hinge

Ref.	Part Number	Description
1.	683-04549	Shield Ass'y, Muffler
2.	710-0227	Screw, Ab, #8-18, 0.500,
3.	710-04683	Screw, Self-tapping, 3/8-16, 1.000,
4.	710-0599	Screw, Self-tapping, 1/4-20, 0.500,
5.	710-1314A	Screw, Socket Head, 5/16-18, .750
6.	710-1652	Screw, Self-tapping, 1/4-20x.625,
7.	712-0271	Nut, Sems, 1/4-20
8.	KH-20-041-12-S	Gasket, Exhaust
9.	725-0157	Cable, Tie, 3/16 x .05 x 7.4
10.	726-0205	Clamp, Hose, .490 Dia.
11.	728-04000	Rivet, Pop, .188 Dia x .300
12.	751-0564B	Deflector, Muffler
13.	751-10349	Hose, Fuel, Low Permeation, 1/4
14.	751-10353	Deflector, Muffler, Long
15.	951-10517A	Drain, Oil
16.	751-11022A	Muffler, Single, Kohler
17.	751-3141-14	Hose, Extension, Oil Drain
18.	751-12089-28	Hose, Vent

LTX 1042 Labels

777D15438



777D12864



777D15437



777I22679




777I23301



777D15269



777S33233

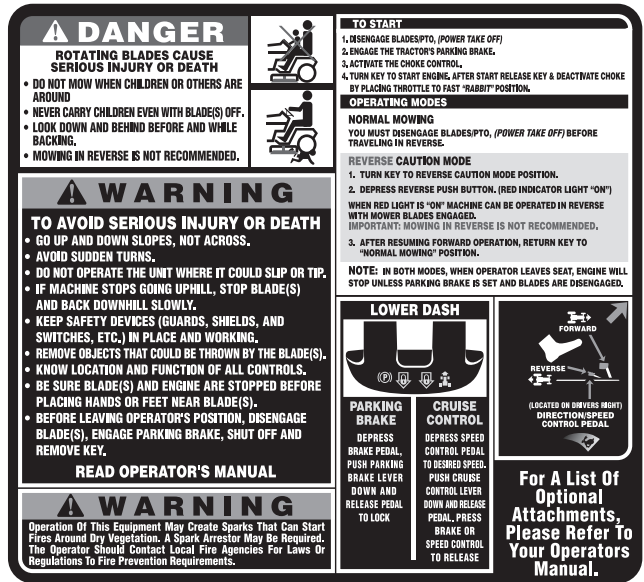

777D15268



777D15402




777D15409



777D15397



777I23490

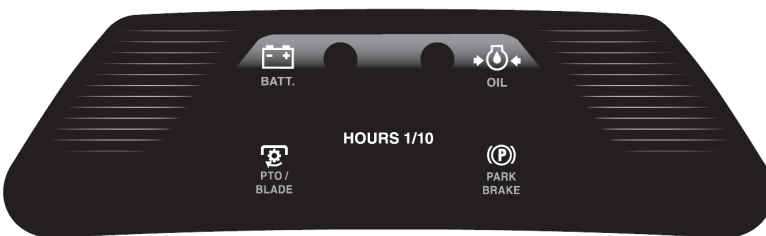

777I23294



777D15442




777D15443




777S30018



777I23092

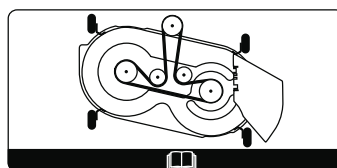

777I23132

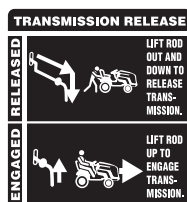

777S33896




777D15419

777I23133

777X44919

MODEL LTX 1042 REPLACEMENT PARTS			
Use only Cub Cadet genuine factory parts			
Blades	942-04312 (2)	Ignition Key	875-2054A
Upper Drive Belt	954-04208	Solenoid	725-04439
Lower Drive Belt	954-0467	Oil Filter	KH-12-050-01-S
Engine To Deck Belt	954-04060B	Air Filter W/ Pre-Cleaner	KH-20-883-02-S1
Deck Spindles	919-04889	Spark Plug	759-3335
		Fuel Filter	KH-25-050-21-S
		Oil Capacity	51.2 oz

www.cubcadet.com

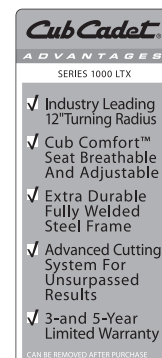

777D15438



777D12864



777D15437



777I22679




777I23301



777D15269



777S33233

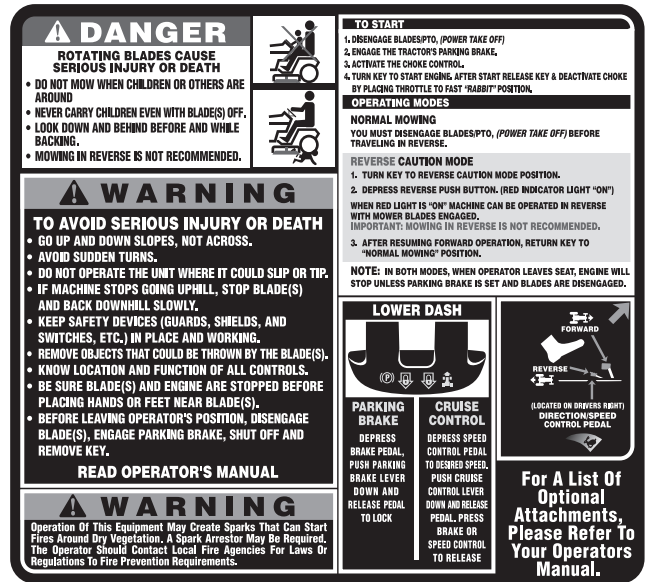

777D15268



777D15402




777D15409



777D15399



777I23490

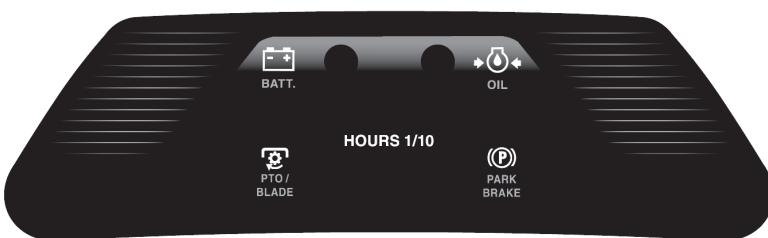

777I23294



777D15435




777D15436




777S30018




777I23092

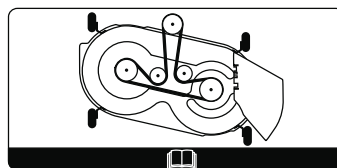

777I23132

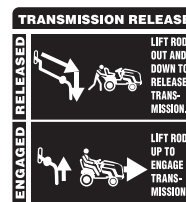

777D15419

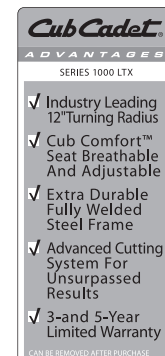

777I23133




777S30503




777X44897

MODEL LTX 1045 REPLACEMENT PARTS			
Use only Cub Cadet genuine factory parts			
Blades	942-04244A / 2	Oil Filter	KN-12-050-01-S
Lower Drive Belt	954-04207	Air Filter W/ Pre-Cleaner	KN-20-883-02-S1
Engine To Deck Belt	954-04219	Spark Plug	759-3336
Deck Spindles	918-04065A	Fuel Filter	KN-25-050-21-S
Ignition Key	925-2054A	Oil Capacity	51.2 oz
Solenoid	725-04439		
www.cubcadet.com			


Electrical Schematic

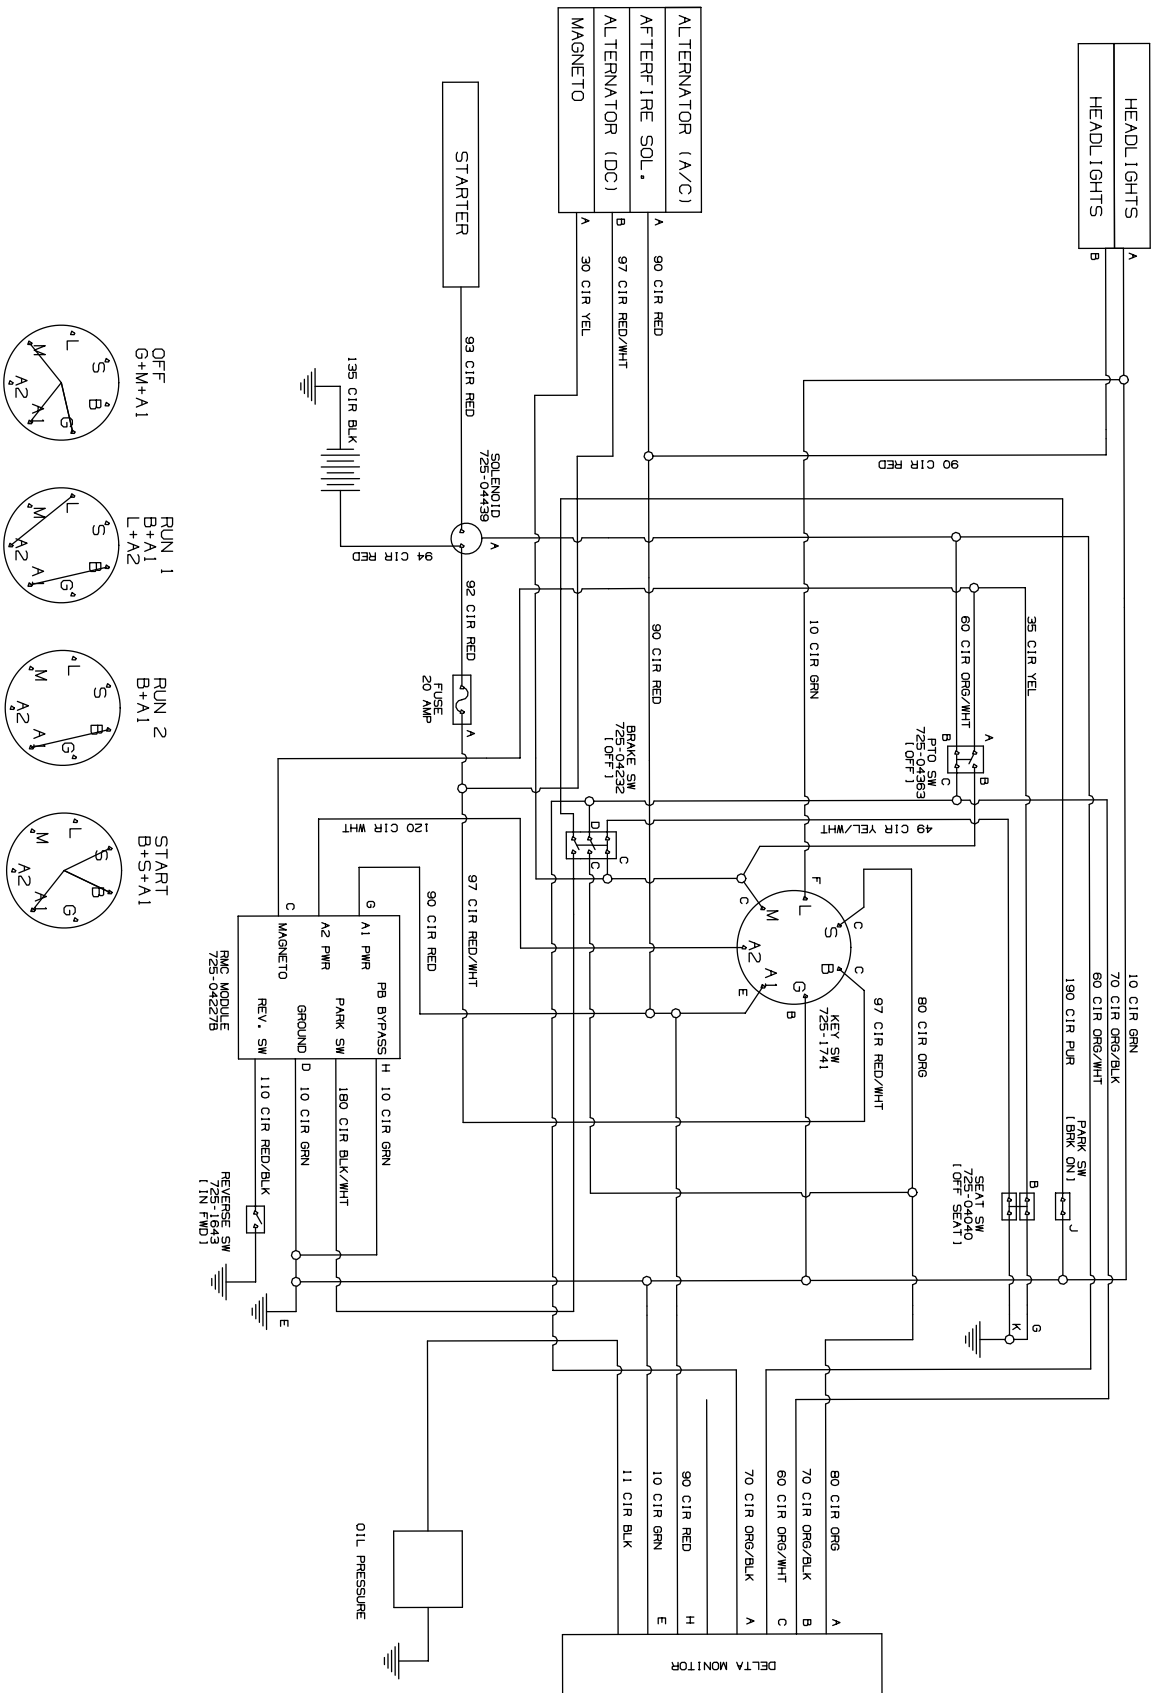

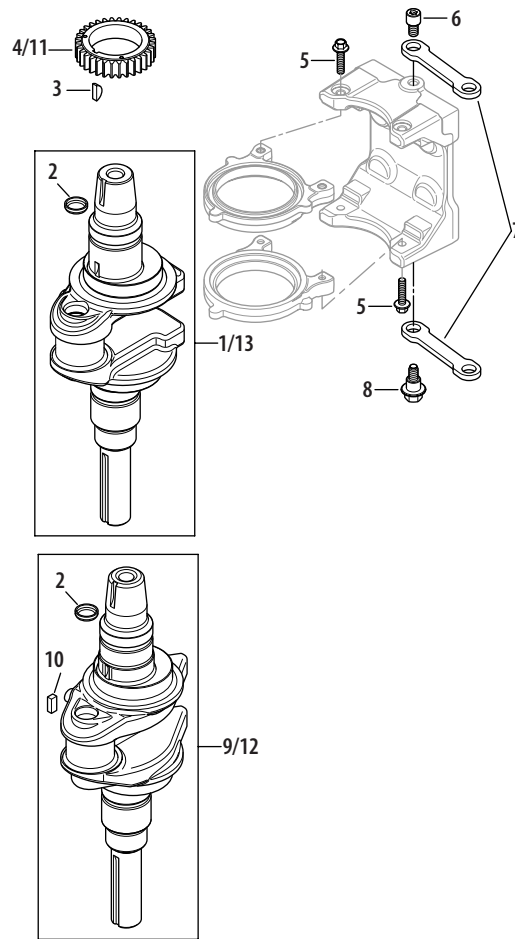


Ref.	Part Number	Description
1.	KH-20-014-38-S	Crankshaft Assembly Kit
2.	KH-25-139-27-S	Cup Plug
3.	KH-X-42-15	Key, 3/16 X 5/8
4.	KH-20-043-15-S	Crankshaft Gear
5.	KH-25-086-137-S	Flange Screw, M6 X 1.0 X 25
6.	KH-25-086-214-S	Link Pivot Screw
7.	KH-20-186-04-S	Balance Weight Linkage
8.	KH-25-086-213-S	Shoulder Screw

Kohler SV590/600 Crankcase

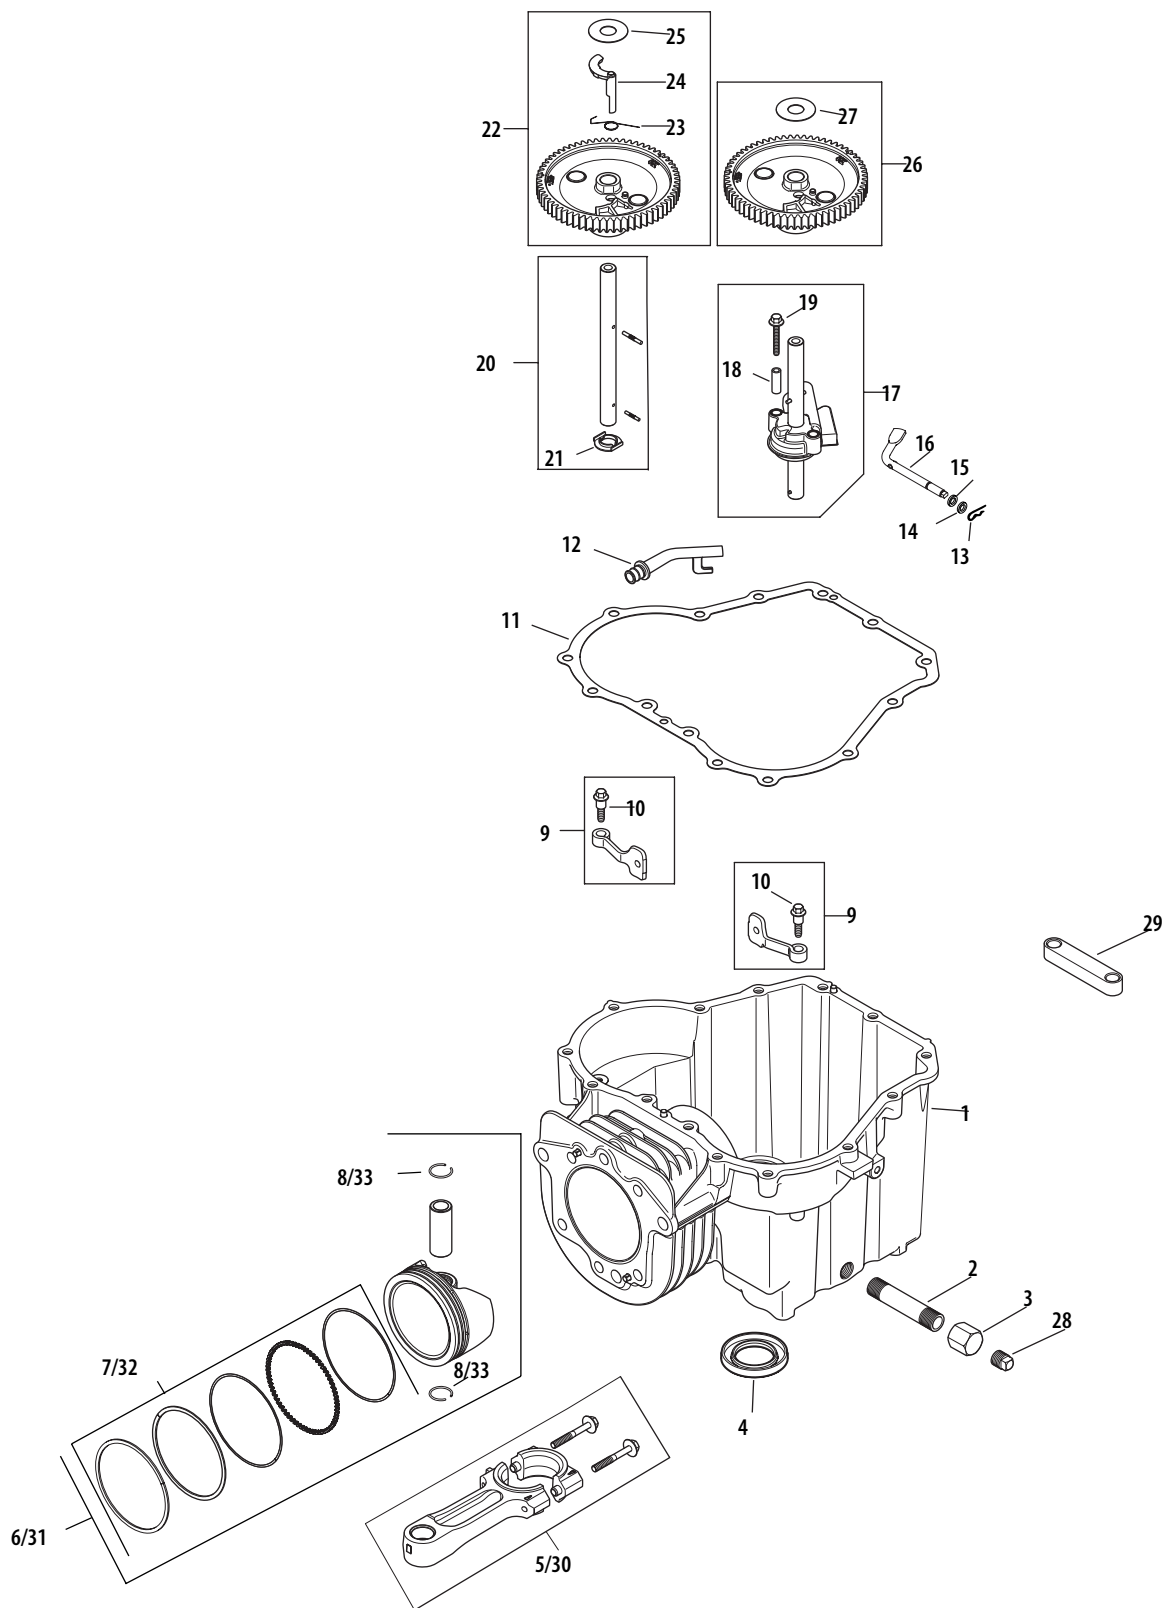


Ref.	Part Number	Description
1	N/A	Crankcase (Use: Short Block)
4	KH-20-032-01-S	Oil Seal
5	KH-20-067-05-S	Connecting Assembly Rod
6	KH-20-874-09-S	Piston w/ Ring Set, 94mm (Incl. 7, 8)
7	KH-20-108-04-S	Ring Set (94mm)
8	KH-62-018-04-S	Piston Pin Retainer
9	KH-20-090-01-S	Cam Lever Ass. Kit (Incl. 10)
10	KH-20-086-06-S	Shd. Thd. Frm. Screw, M6 X 1 X 26
12	KH-20-123-02-S	Drainback Tube
13	KH-12-154-05	Hitch Pin Clip
14	KH-M-631015	Flat Washer, 6 Mm
15	KH-X-25-102-S	Flat Washer, 1/4
16	KH-20-144-02-S	Governor Cross Shaft
17	KH-20-393-02-S	Oil Pump Ass'y Kit (Incl. 11, 18, 19)
18	KH-20-112-02-S	Oil Pump Screw Spacer
19	KH-20-086-13-S	Oil Pump Screw
20	KH-20-144-11-S	Cam Center Shaft Kit (Incl. 21)
21	KH-20-468-08-S	Thrust Washer
22	KH-20-010-04-S	Camshaft Ass'y Kit (Incl. 23-25)
23	KH-20-089-06-S	Acr. Spring
24	KH-20-044-23-S	Acr. Weight
25	KH-20-468-03-S	Thrust -Acr. Washer
26	KH-20-010-04-S	Camshaft Ass'y Kit (Incl. 27)
27	KH-20-468-03-S	Thrust -Acr. Washer
28	KH-25-139-57-S	Square Head Pipe Plug, 3/8
—	KH-20-522-13	SV590/600/600 Short Block

Kohler SV590/600 Oil Pan/Lubrication

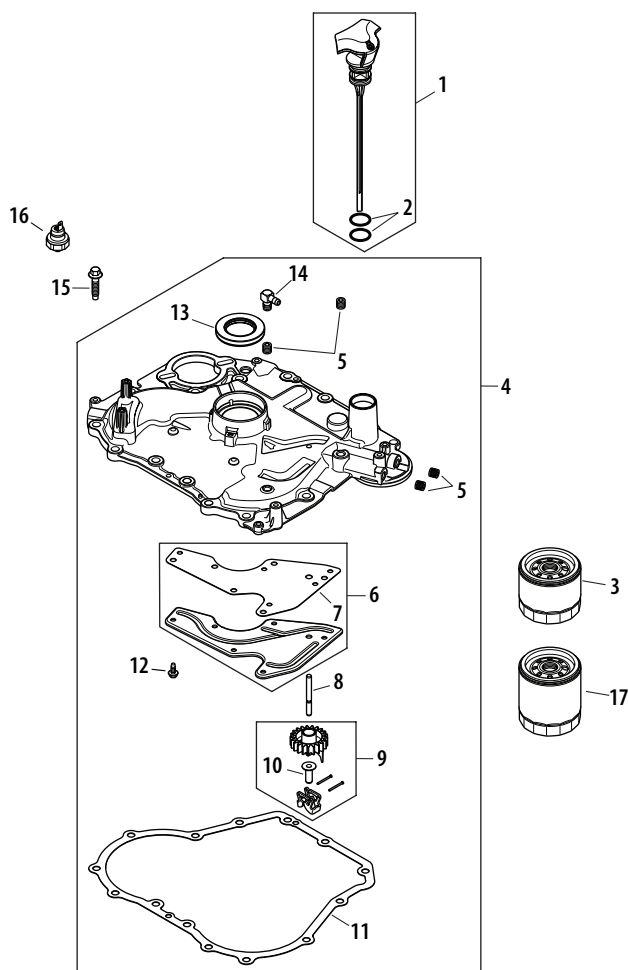

Ref.	Part Number	Description
1.	KH-20-040-08-S	Dipstick Ass'y-Std Yellow (Incl. 2)
2.	KH-20-153-01-S	O-Ring
3.	KH-12-050-01-S	Oil Filter
4.	KH-20-009-30-S	Closure Plate Assembly (Incl. 5-14)
5.	KH-25-139-60-S	Ctsk Pipe Plug, 1/8
6.	KH-20-096-02-S	Oil Passage Cover Kit (Incl. 7)
7.	KH-20-041-02-S	Oil Passage Gasket
8.	KH-20-144-03-S	Governor Cross Shaft
9.	KH-25-310-07-S	Governor Gear Assembly
10.	KH-12-380-01	Governor Regulating Pin
11.	KH-20-041-01-S	Closure Plate Gasket
12.	KH-M-545013-S	Flange. Thd. Frm. Screw, M5 X 0.8 X 13
13.	KH-20-032-01-S	Oil Seal
14.	KH-25-155-02	90° Hose Connector
15.	KH-25-086-127-S	Hex Flange Screw, 1/2


Kohler SV590/600 Head/Valve/Breather

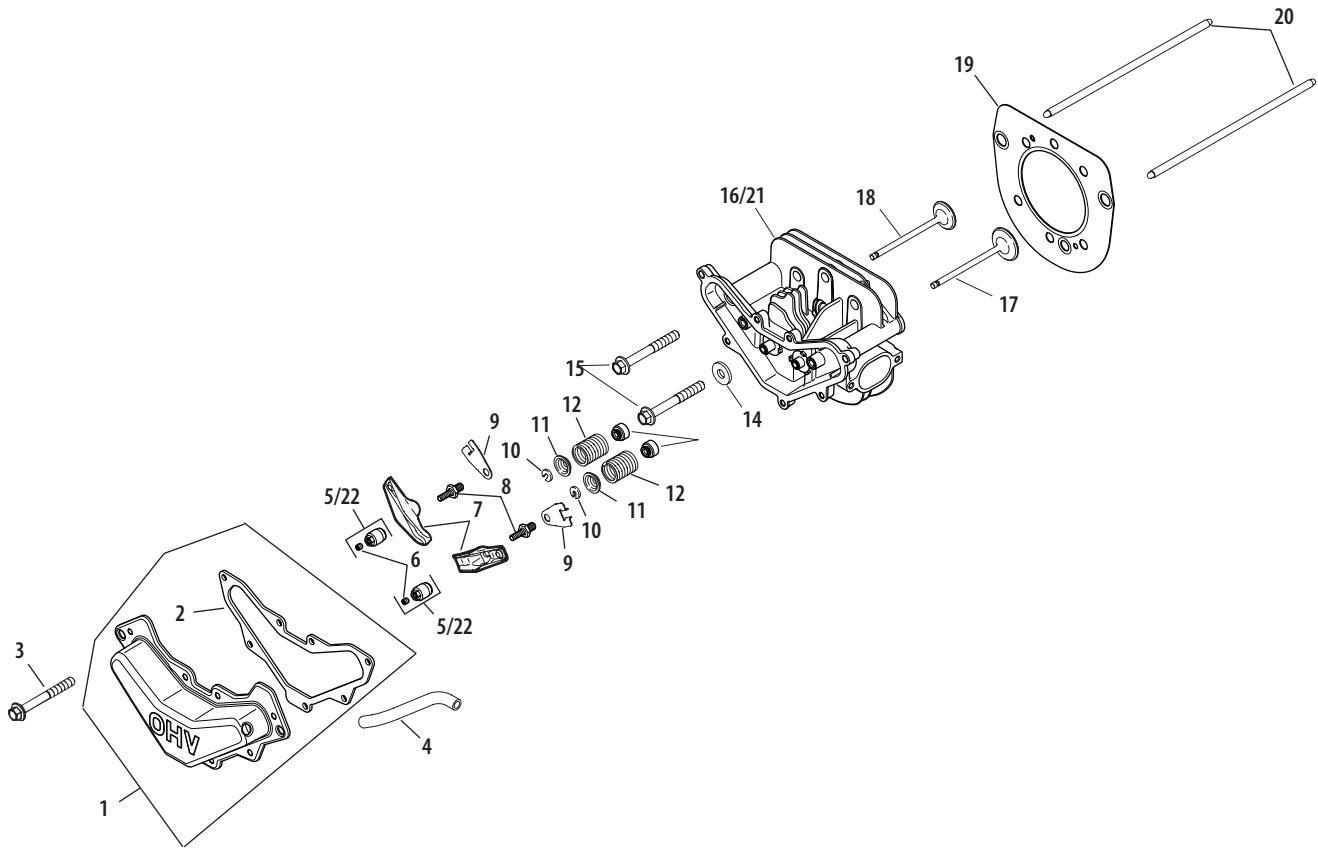

Ref.	Part Number	Description
1.	KH-20-096-14-S	Valve Cover Kit (Incl. 2)
2.	KH-20-041-13-S	Valve Cover Gasket
3.	KH-M-645020-S	Flange. Screw, M6 X 1.0 X 20
4.	KH-20-326-20-S	Breather Hose
5.	KH-20-599-04-S	Rocker Pivot Assembly (Incl. 6)
6.	KH-20-086-04-S	Set Screw
7..	KH-20-186-01-S	Rocker Arm
8	KH-20-072-08-S	Rocker Stud
9.	KH-20-146-03-S	Push Rod Guide Plate
10.	KH-20-062-01-S	Retainer Lock
11.	KH-20-173-01-S	Valve Spring Cap
12.	KH-20-089-03-S	Valve Spring
14.	KH-12-468-05	Flat Washer, 13/32
15.	KH-20-086-02-S	Flange Screw, M10 X 1.5 X 80
17.	KH-20-016-01-S	Exhaust Valve


Ref.	Part Number	Description
18.	KH-20-017-01-S	Intake Valve
19.	KH-20-841-01-S	Cylinder Head Gasket Kit (Incl. 2, 13, 14, 23, 24, 25, 26, 27, 28 & 29)
20.	KH-20-411-04-S	Rod, Push
21.	KH-20-318-11-S	Kit, Cylinder Head (Incl. 28 & 29)
22.	KH-20-599-04-S	Kit Pivot, Rocker Arm (Incl. 6)
—	KH-12-041-01	Carburetor Gasket
—	KH-12-041-02	Air Cleaner Base Gasket
—	KH-20-041-12-S	Exhaust Gasket
—	KH-20-041-18-S	Heat Deflector Gasket
—	KH-20-041-17-S	Heat Deflector Gasket
—	KH-25-086-87-S	Hex Socket Head Cap Screw
—	KH-X-21-1	Spring Lock Washer, 5/16
—	KH-20-755-05-S	Gasket Set

Kohler SV590/600 Ignition/Electrical

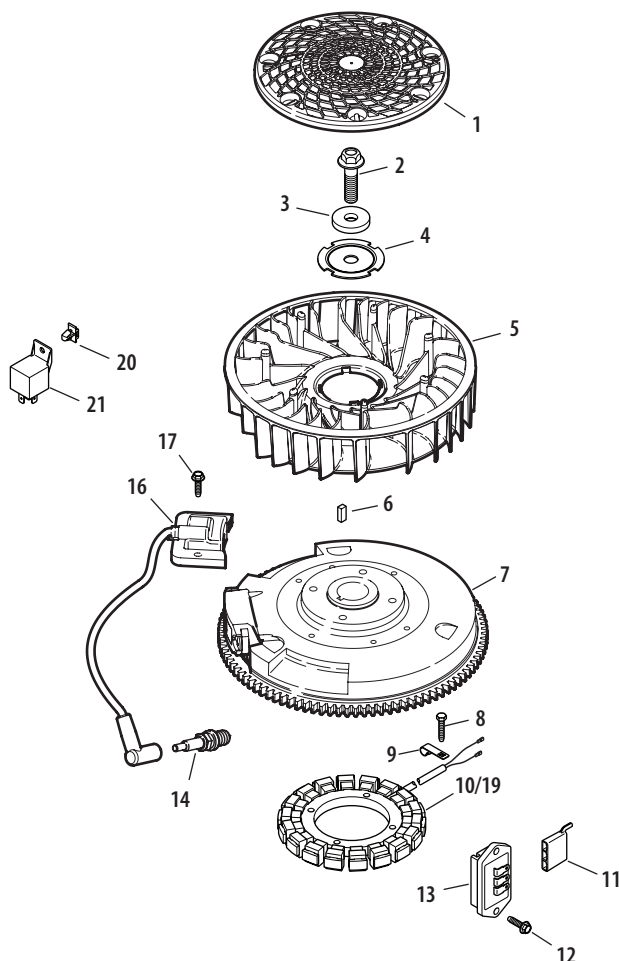


Ref.	Part Number	Description
1.	KH-20-162-02-S	Grass Screen
2.	KH-25-086-125-S	Hex Flange Screw
3.	KH-25-468-09-S	Flat Washer
4.	KH-20-146-05-S	Fan Mounting Plate
5.	KH-20-157-01-S	Fan
6.	KH-25-340-02-S	Straight Flywheel Key
7.	KH-20-025-40-S	Flywheel
8.	KH-M-548025-S	Thd. Frm. Screw, M5 X 0.8 X 25
9.	KH-20-154-04-S	Wire Clip
10.	KH-237878	15 Amp Stator Kit — SV590/600 (Incl. KH-25-452-01-S)
11.	KH-25-155-41-S	Connector

Ref.	Part Number	Description
12.	KH-M-545020-S	Flange. Screw, M5 X .8 X 20
13.	KH-41-403-10-S	Regulator/Rectifier
14.	759-3336	Spark Plug (Std)
16.	KH-20-584-03-S	Ignition Module (CDI Fixed)
17.	KH-M-545020-S	Flange. Thd. Frm., M5 X .8 X 20
19.	KH-20-085-01-S	Stator Assembly Kit — SV600 (Incl. KH-25-454-07-S)
20.	KH-20-366-01-S	Push Wing Mount — SV600
21.	KH-20-404-01-S	Relay — SV600
—	KH-20-176-16-S	Wiring Harness — SV590/600
—	KH-20-176-15-S	Wiring Harness — SV600
—	KH-25-454-05-S	Tie

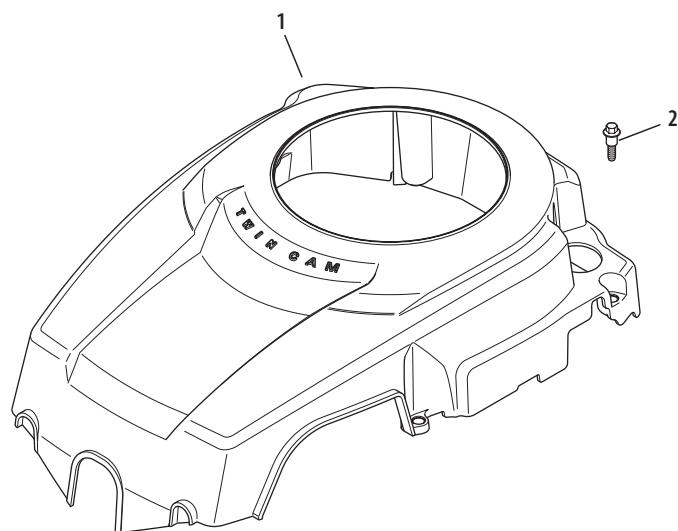


Ref.	Part Number	Description
1	KH-20-027-07-S	Blower Housing Kit (Inc. 3)
2	KH-20-086-06-S	Shd. Thd. Frm. Screw, M6 X 1 X 26
—	KH-41-037-10-S	Service Nameplate

Kohler SV590/600 Starting System

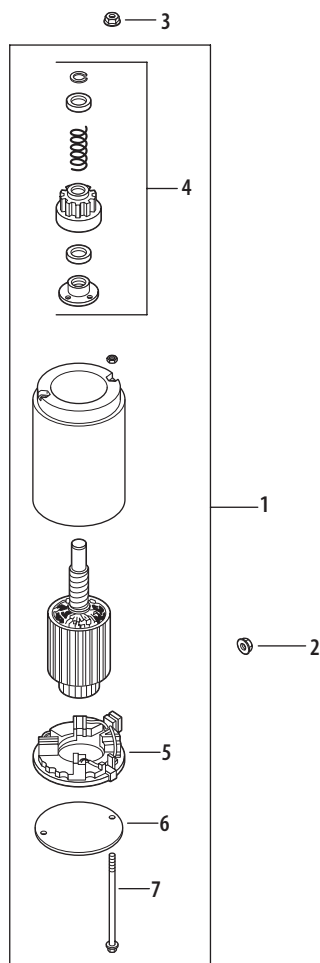


Ref.	Part Number	Description
1	KH-20-098-08-S	Starter Assembly (Inc. 4-7)
3.	KH-25-100-31-S	Free Spinning Flange. Nut, #10-24
4.	KH-20-755-12-S	Drive Kit (J.E.)
5.	KH-12-221-02-S	Brush Kit
6.	KH-20-227-01-S	Drive End Cap (J.E.)
7.	KH-20-211-02-S	Thru Bolt

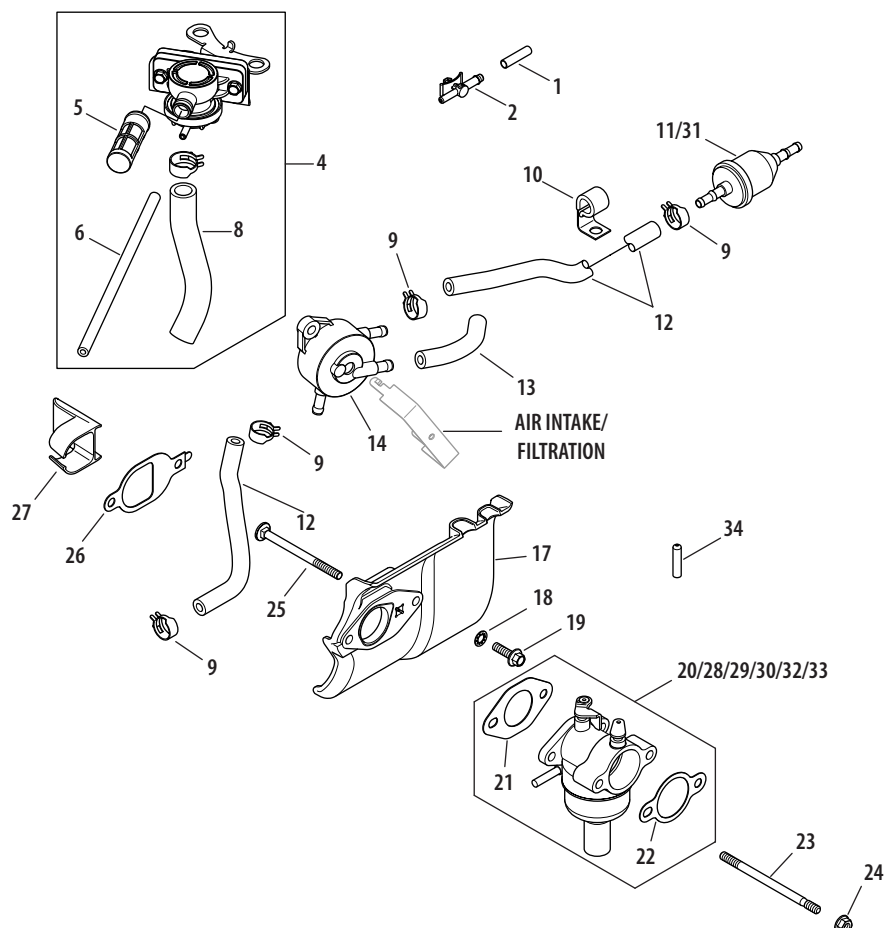

Ref.	Part Number	Description
1	KH-25-173-23-S	Masking Cap
2	KH-25-155-40-S	SAI Connector
9	KH-25-237-14-S	Hose Clamp, 1/2
10	KH-47-154-01-S	Cable Clip
11	KH-25-050-22-S1	Fuel Filter
12	KH-25-111-34-S	Fuel Line
13	KH-12-353-10	Fuel Line
14	KH-24-393-16	Fuel Pump
17	KH-20-265-09-S	Heat Deflector Kit
18	KH-X-22-11	Int. Tooth Lock Washer, 1/4
19	KH-M-651020-S	Flange Screw, M6 X 1.0 X 20
23	KH-20-072-05-S	Stud, M6 X 1.0 X 100
24	KH-M-641060-S	Flange Nut, M6 X 1.0
25	KH-20-072-07-S	Carburetor Stud
26	KH-20-041-18-S	Heat Deflector Gasket


Ref.	Part Number	Description
27	KH-20-332-01-S	Intake Port Insert
30	KH-20-853-35-S	Carburetor Kit (Inc. 21 & 22)
31	KH-25-050-21-S	Fuel Filter
33	KH-20-853-37-S	Carb Tier III Walbro Kit (Inc. 21 & 22)
34	KH-25-173-25-S	Masking Cap
—	KH-25-454-05-S	Tie
—	KH-12-755-109-S	High Altitude Kit
—	KH-12-755-110-S	Repair Choke Kit
—	KH-12-757-02	Repair Float Kit
—	KH-12-757-03	Repair Carburetor Kit
—	KH-12-757-33	Repair Solenoid Kit
—	KH-12-757-37-S	Repair Bowl Replacement Kit
—	KH-20-755-07-S	High Altitude Kit

Kohler SV590/600 Controls

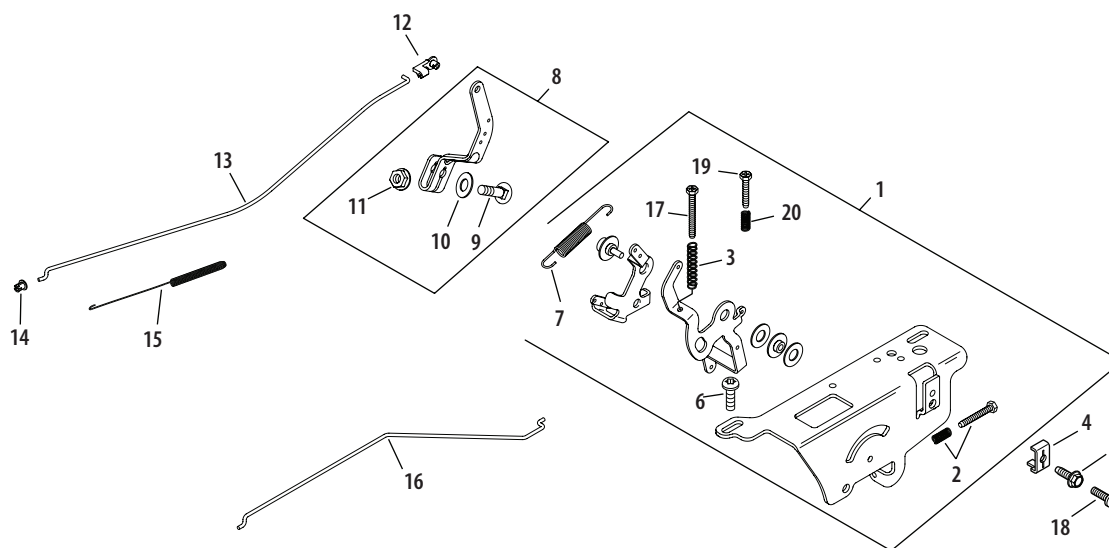


Ref.	Part Number	Description
1	KH-20-536-06-S	Speed Control Assembly Kit (Inc. 2, 3, 6, 7, 17, 19, 20)
2	KH-25-086-297-S	Idle Adj. Screw & Spring Kit
4	KH-12-237-01	Cable Clamp
5	KH-M-545016-S	Flange Screw, M5 X 0.8 X 16
6	KH-M-664020-S	Lbd. Skt. Screw, M6 X 1.0 X 20
7	KH-20-089-11-S	Governor Spring
8	KH-20-090-11-S	Governor Ass'y Lever (Inc. 9-11)
9	KH-52-211-04	Rd. Hd. Sq. Nck. Bolt, 1/4-20 X 1

Ref.	Part Number	Description
10	KH-X-22-11	Int. Tooth Lock Washer, 1/4
11	KH-12-100-07	Hex Flange Nut, 1/4-20
12	KH-25-158-11	Throttle Linkage Bushing
13	KH-20-079-07-S	Throttle Linkage
14	KH-25-158-08	Linkage Retaining Bushing
15	KH-20-089-10-S	Linkage Spring
16	KH-20-079-05-S	Choke Linkage
19	KH-20-086-10-S	Phl. Thd. Frm. Screw, M4 X 0.7 X 25
20	KH-12-089-11-S	Speed Control Spring (Short)

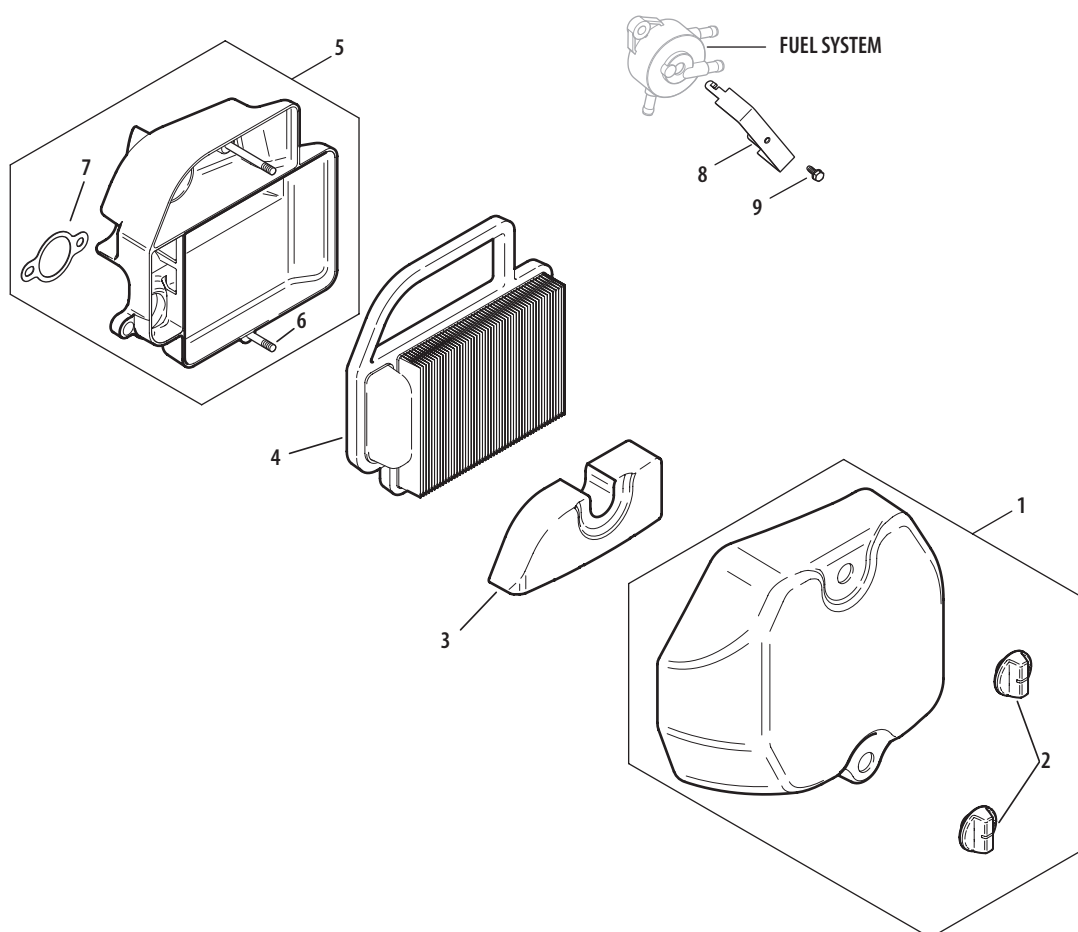


Ref.	Part Number	Description
1.	KH-20-096-04-S	Air Cleaner Cover Kit (Inc. 2)
2.	KH-25-341-04-S	Cover Cover
3.	KH-20-883-02-S1	Pre-Cleaner Element (Dry)
4.	KH-20-883-02-S1	Air Cleaner Element
5.	KH-20-094-04-S	Air Cleaner Base Kit (Inc. 6, 7)
6.	KH-20-072-04-S	Air Cleaner Base Stud
7.	KH-12-041-02	Air Cleaner Base Gasket

Kohler SV600-3224 Crankshaft

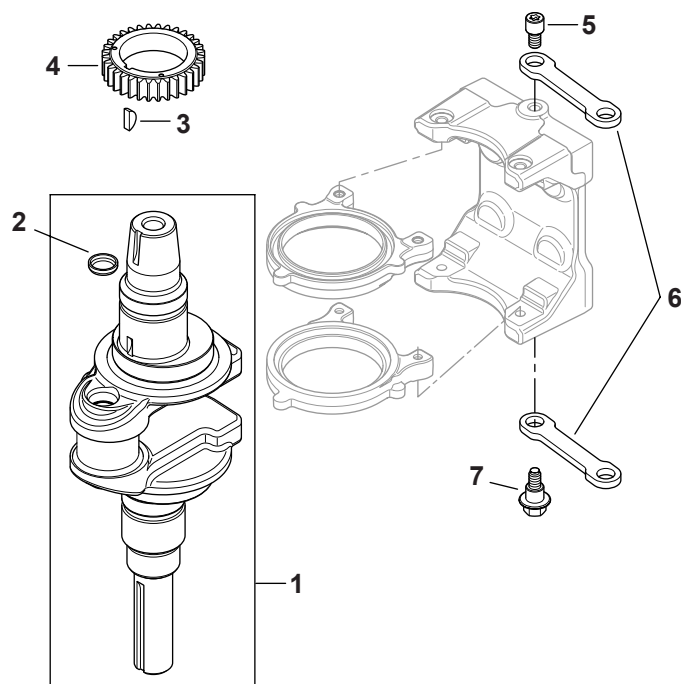


Ref.	Part Number	Description
1	KH-20-014-38-S	Crankshaft Assembly Kit (Inc. 2)
2	KH-25-139-27-S	Cup Plug
3	KH-X-42-15	Key, $\frac{3}{16}$ X $\frac{5}{8}$
4	KH-20-043-15-S	Crankshaft Gear
5	KH-25-086-214-S	Link Pivot Screw
6	KH-20-186-04-S	Balance Weight Linkage
7	KH-25-086-213-S	Shoulder Screw

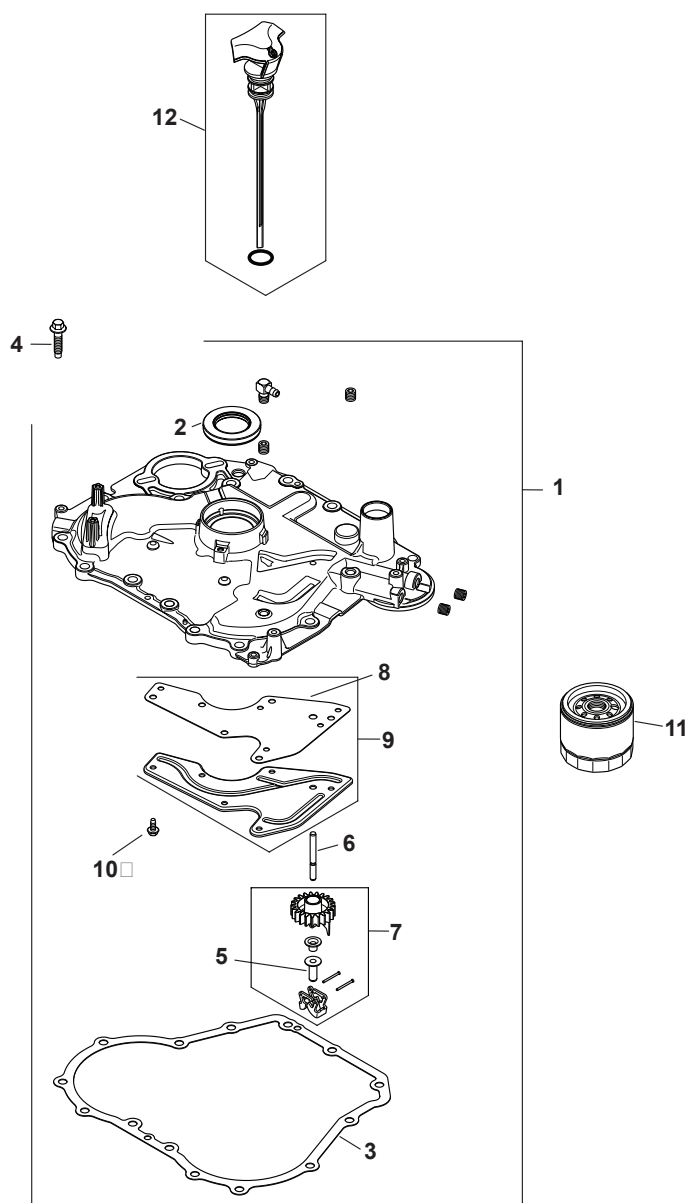

Ref.	Part Number	Description
1	KH-20-009-30-S	Closure Plate Assembly
2	KH-20-032-08-S	Oil Seal
3	KH-20-041-01-S	Closure Plate Gasket
4	KH-25-086-127-S	Hex Flange Screw, ½
5	KH-12-380-01	Governor Regulating Pin
6	KH-20-144-03-S	Governor Cross Shaft


Ref.	Part Number	Description
7	KH-25-310-07-S	Governor Gear Assembly
8	KH-20-041-02-S	Oil Passage Gasket
9	KH-20-096-02-S	Oil Passage Cover Kit (Includes 7)
10	KH-M-545013-S	Flg. Thd. Frm. Screw, M5 X 0.8 X 13
11	KH-12-050-01-S	Oil Filter
12	KH-20-040-08-S	Dipstick Assembly Blade

Kohler SV600-3224 Crankcase

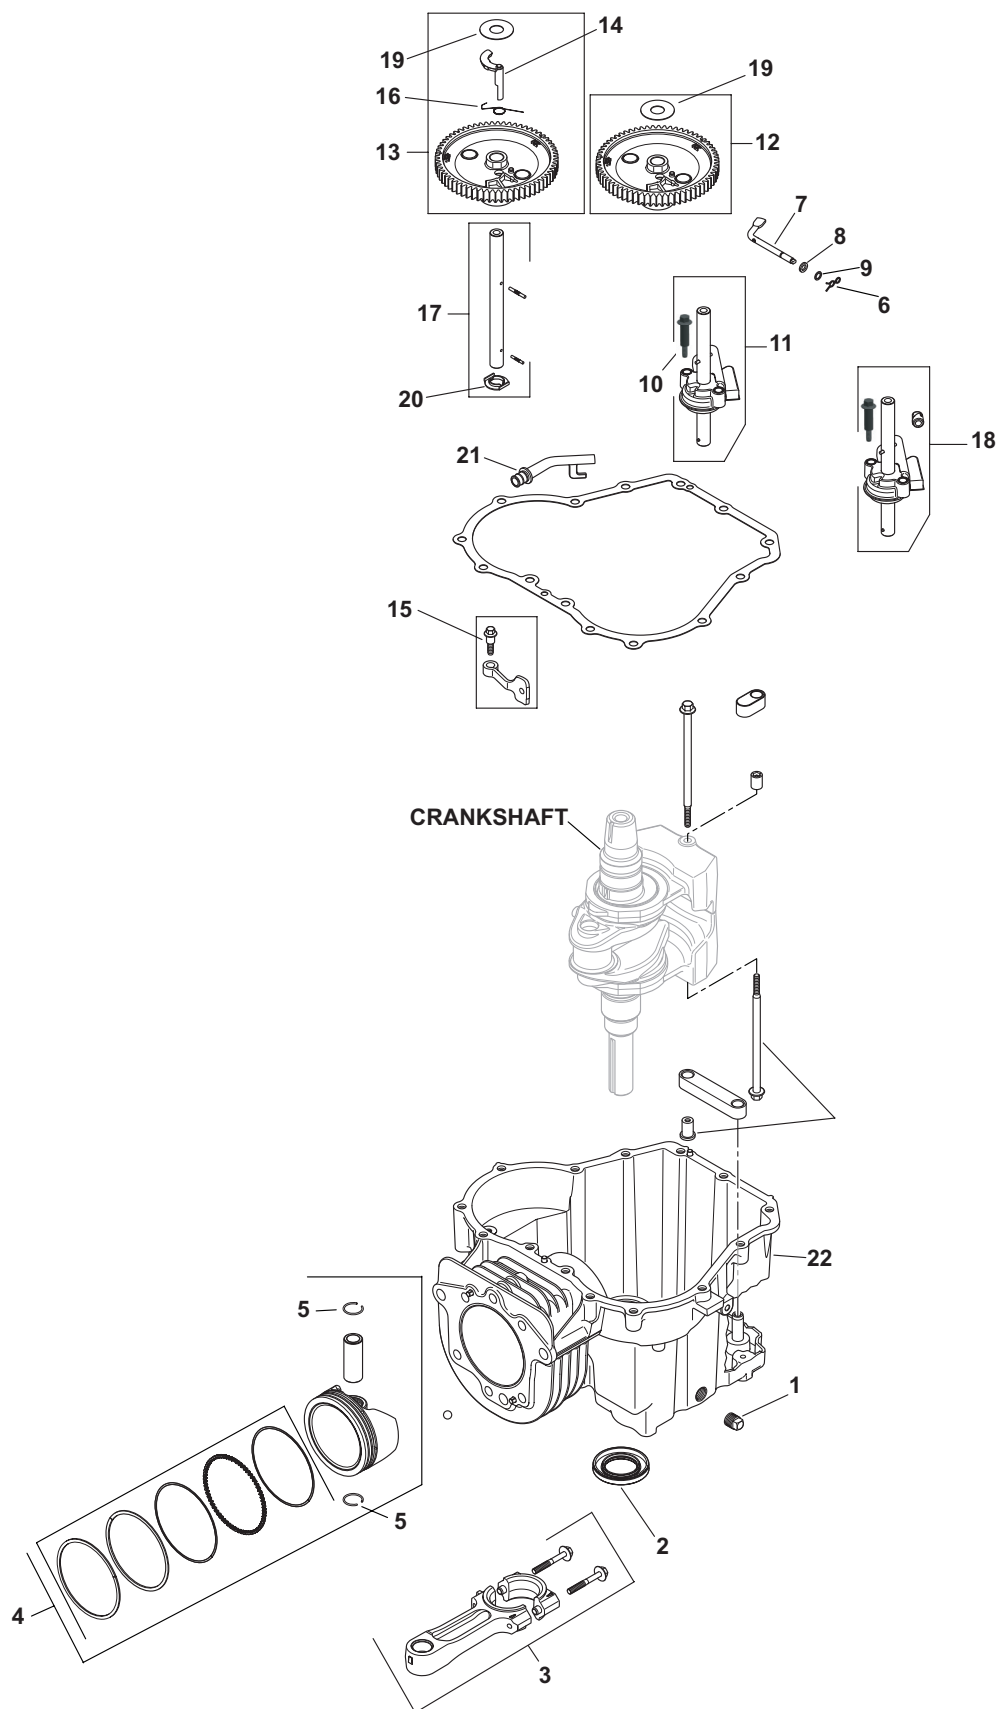

Ref.	Part Number	Description
1	KH-25-139-57-S	Square Head Pipe Plug, $\frac{3}{8}$
2	KH-20-032-08-S	Oil Seal
3	KH-20-067-05-S	Connecting Assembly Rod
4	KH-20-874-16-S	Piston W/ Ring Set Kit, 94mm
5	KH-62-018-04-S	Piston Pin Retainer
6	KH-12-154-05	Hitch Pin Clip
7	KH-20-144-02-S	Governor Cross Shaft
8	KH-M-631015	Flat Washer, 6 Mm
9	KH-X-25-102-S	Flat Washer, $\frac{1}{4}$
10	KH-20-086-12-S	Shd. Thd. Frm. Screw
11	KH-20-393-02-S	Oil Pump Assembly Kit
12	KH-20-010-07-S	Cam Lobe Assembly
13	KH-20-010-08-S	Cam Gear Assembly
14	KH-20-044-32-S	Acr. Weight and Follower Kit
15	KH-20-086-06-S	Shd. Thd. Frm. Screw, M6 x 1 x 26
16	KH-20-089-06-S	Acr. Spring
17	KH-20-144-11-S	Cam Center Shaft Kit
18	KH-20-393-01-S	Oil Pump Kit (Shallow 10mm)
19	KH-20-468-03-S	Thrust -Acr. Washer
20	KH-20-468-08-S	Thrust Washer
21	KH-20-123-02-S	Drainback Tube
22	N/A	Crankcase (Use: Short Block)


Kohler SV600-3224 Head/Valve/Breather

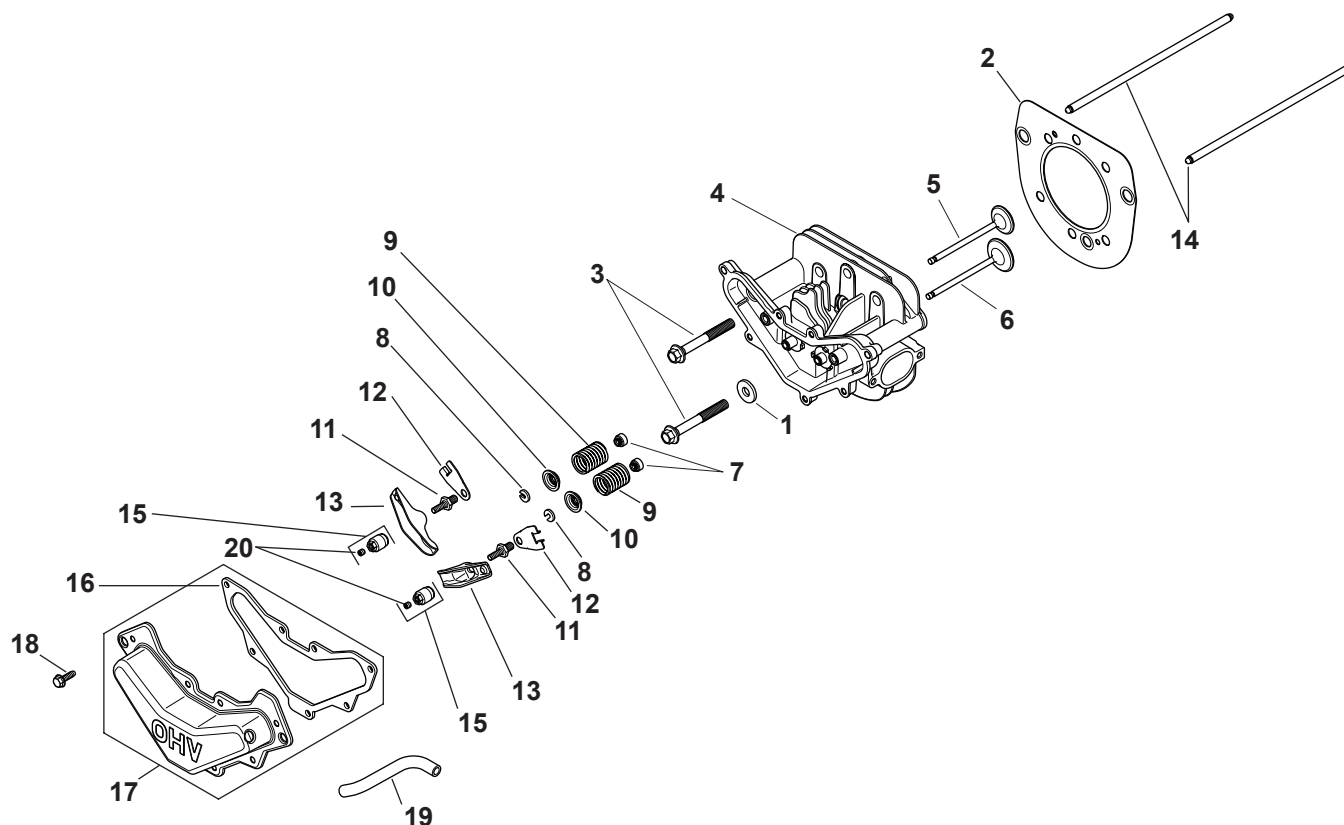

Ref.	Part Number	Description
1	KH-12-468-05	Flat Washer, $\frac{13}{32}$
2	KH-20-841-01-S	Cylinder Head Gasket Kit
3	KH-20-086-02-S	Flange Screw, M10 X 1.5 X 80
4	KH-20-318-14-S	Cylinder Head Kit
5	KH-20-016-01-S	Exhaust Valve
6	KH-20-017-01-S	Intake Valve
7	KH-20-032-10-S	Valve Stem Seal
8	KH-20-062-01-S	Retainer Lock
9	KH-20-089-03-S	Valve Spring
10	KH-20-173-01-S	Valve Spring Cap


Ref.	Part Number	Description
11	KH-20-072-08-S	Rocker Stud
12	KH-20-146-03-S	Push Rod Guide Plate
13	KH-20-186-01-S	Rocker Arm
14	KH-20-411-05-S	Push Rod
15	KH-20-599-04-S	Rocker Pivot Assembly
16	KH-20-041-13-S	Valve Cover Gasket
17	KH-20-096-14-S	Valve Cover Kit
18	KH-M-645020-S	Fly. Thd. Frm. Screw, M6 X 1.0 X 20
19	KH-20-326-20-S	Breather Hose
20	KH-20-086-04-S	Set Screw

Kohler SV600-3224 Blower Housing & Baffles

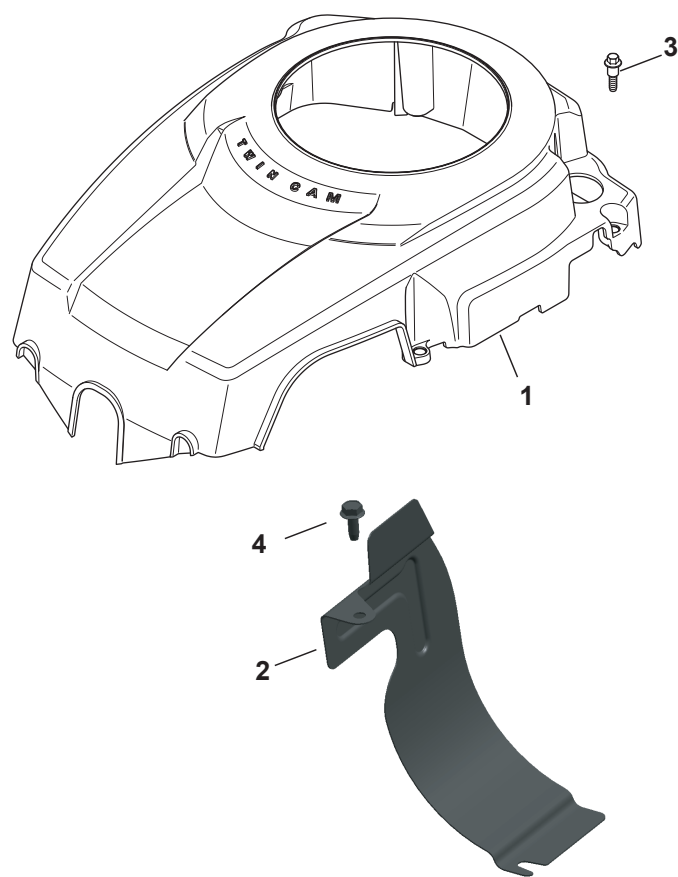


Ref.	Part Number	Description
1	KH-20-027-07-S	Blower Housing Kit
2	KH-20-063-03-S	Barrel Baffle
3	KH-20-086-06-S	Shd. Thd. Frm. Screw, M6 X 1 X 26
4	KH-M-645016-S	Flg. Thd. Frm. Screw, M6 X 1.0 X 16

Kohler SV600-3224 Ignition/Electrical

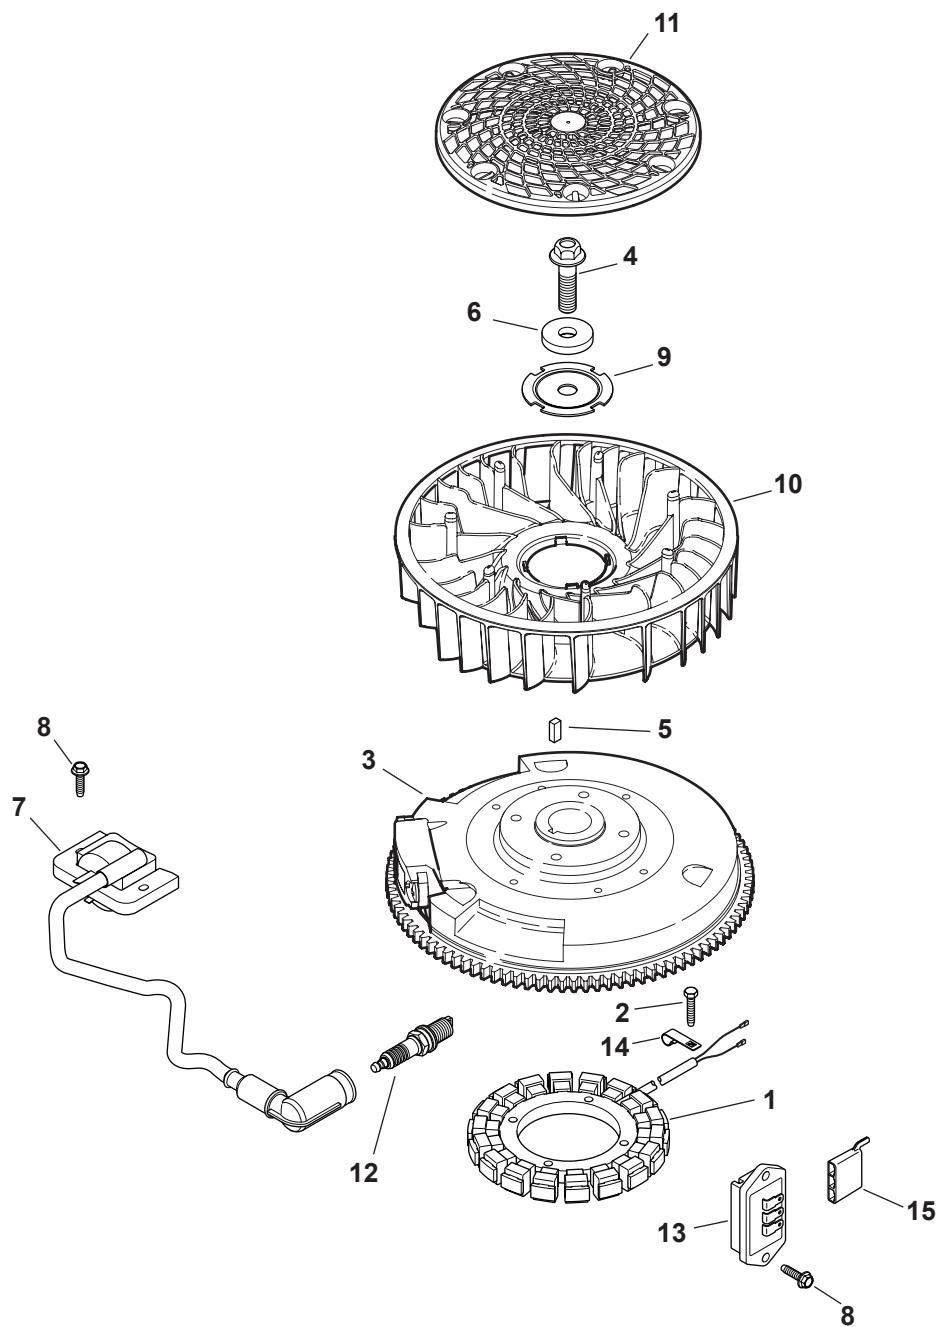


Ref.	Part Number	Description
1	KH-237878	15 Amp Stator Kit
2	KH-M-548025-S	Thd. Frm. Screw, M5 X 0.8 X 25
3	KH-20-025-40-S	Flywheel
4	KH-25-086-362-S	Screw, Hex Flange
5	KH-25-340-04-S	Square Key
6	KH-25-468-09-S	Flat Washer
7	KH-20-584-04-S	Ignition Module
8	KH-M-545020-S	Flg. Thd. Frm. Screw, M5 X .8 X 20
9	KH-20-146-05-S	Fan Mounting Plate
10	KH-20-157-01-S	Fan
11	KH-20-162-02-S	Grass Screen
12	759-3336	Spark Plug
13	KH-41-403-10-S	Regulator/Rectifier
14	KH-20-154-04-S	Wire Clip
15	KH-25-155-41-S	Connector
—	KH-20-176-16-S	Wiring Harness
—	KH-25-454-05-S	Tie

Kohler SV600-3224 Starting System

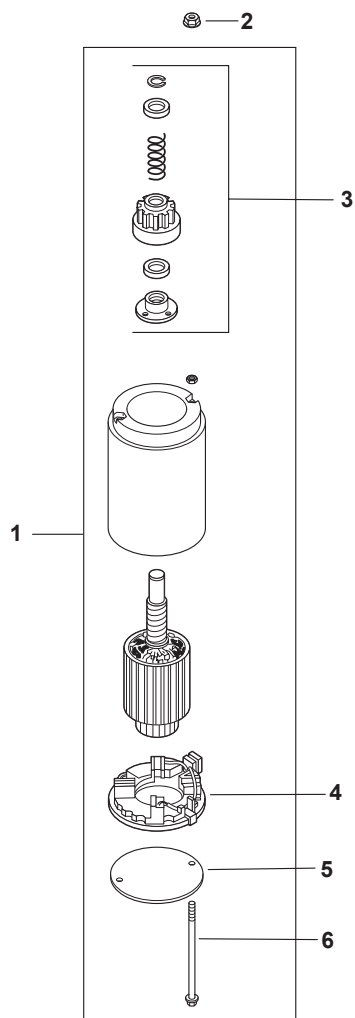


Ref.	Part Number	Description
1	KH-20-098-08-S	Starter Assembly (Inc. 3-6)
2	KH-25-100-31-S	Free Spinning Flg. Nut, #10-24
3	KH-20-755-12-S	Drive Kit (J.E.)
4	KH-12-221-02-S	Brush Kit
5	KH-20-227-01-S	Drive End Cap (J.E.)
6	KH-20-211-02-S	Thru Bolt

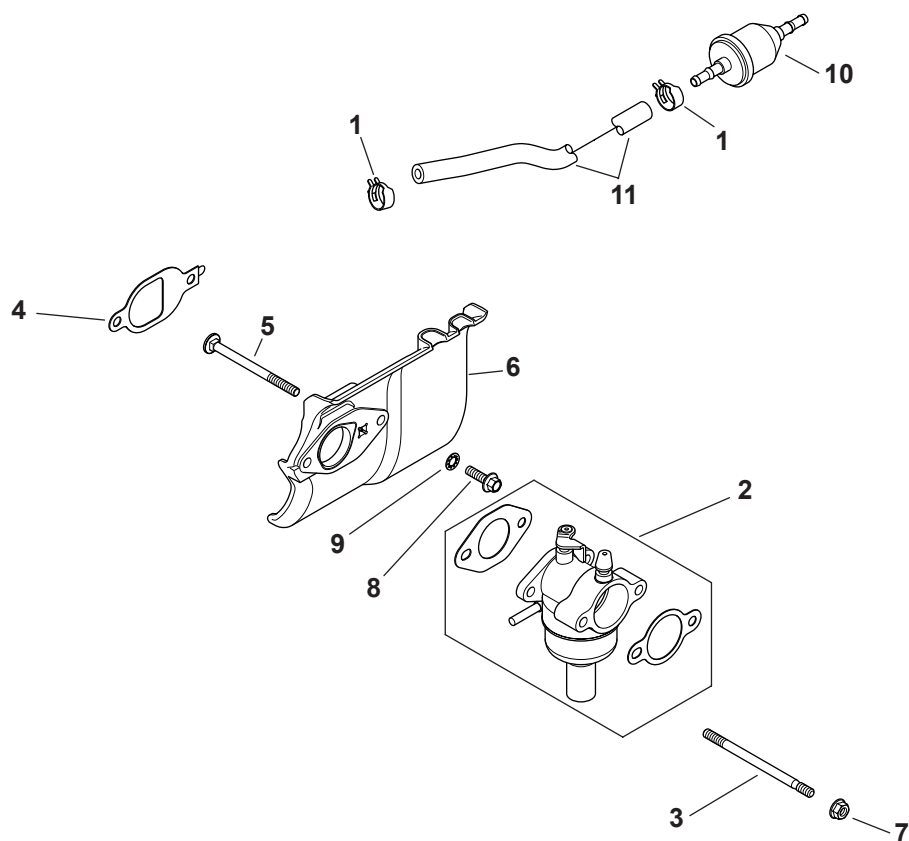


Ref.	Part-Number	Description
1	KH-25-237-31-S	Hose Clamp, ½
2	KH-20-853-71-S	Carburetor Kit
3	KH-20-072-05-S	Stud, M6 X 1.0 X 100
4	KH-20-041-18-S	Heat Deflector Gasket
5	KH-20-072-07-S	Carburetor Stud
6	KH-20-265-09-S	Heat Deflector Kit
7	KH-M-641060-S	Flange Nut, M6 X 1.0
8	KH-M-651020-S	Flange Screw, M6 X 1.0 X 20
9	KH-X-22-11	Int. Tooth Lock Washer, ¼
10	KH-25-050-22-S1	Fuel Filter
11	KH-25-111-72-S	Fuel Line
—	KH-25-454-05-S	Tie

Kohler SV600-3224 Engine Controls

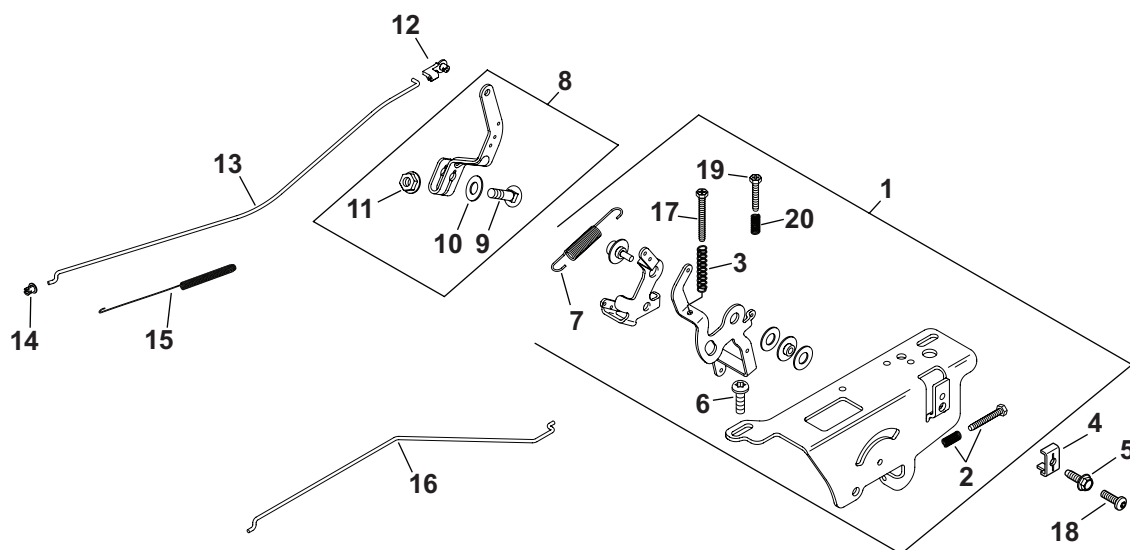


Ref.	Part-Number	Description
1	KH-20-536-06-S	Speed Control Assembly Kit (Inc. 2, 3, 6, 7, 17, 19, 20)
2	KH-25-086-297-S	Idle Adj. Screw & Spring Kit
3	KH-20-089-12-S	Speed Control Spring
4	KH-12-237-01	Cable Clamp
5	KH-M-545016-S	Flg. Thd. Frm. Screw, M5 X 0.8 X 16
6	KH-M-664020-S	Lbd. Skt. Screw, M6 X 1.0 X 20
7	KH-20-089-11-S	Governor Spring
8	KH-20-090-11-S	Governor Assembly Lever (Inc. 9-11)
9	KH-52-211-04	Rd. Hd. Sq. Nck. Bolt, ¼-20 X 1

Ref.	Part-Number	Description
10	KH-X-22-11	Int. Tooth Lock Washer, ¼
11	KH-12-100-07-S	Hex Flange Nut, ¼-20
12	KH-25-158-11	Throttle Linkage Bushing
13	KH-20-079-07-S	Throttle Linkage
14	KH-25-158-08	Linkage Retaining Bushing
15	KH-20-089-10-S	Linkage Spring
16	KH-20-079-05-S	Choke Linkage
17	KH-20-086-18-S	Phl. Thd. Frm. Screw, M4 X 0.7 X 38
19	KH-20-086-10-S	Phl. Thd. Frm. Screw, M4 X 0.7 X 25
20	KH-12-089-11-S	Speed Control Spring (Short)

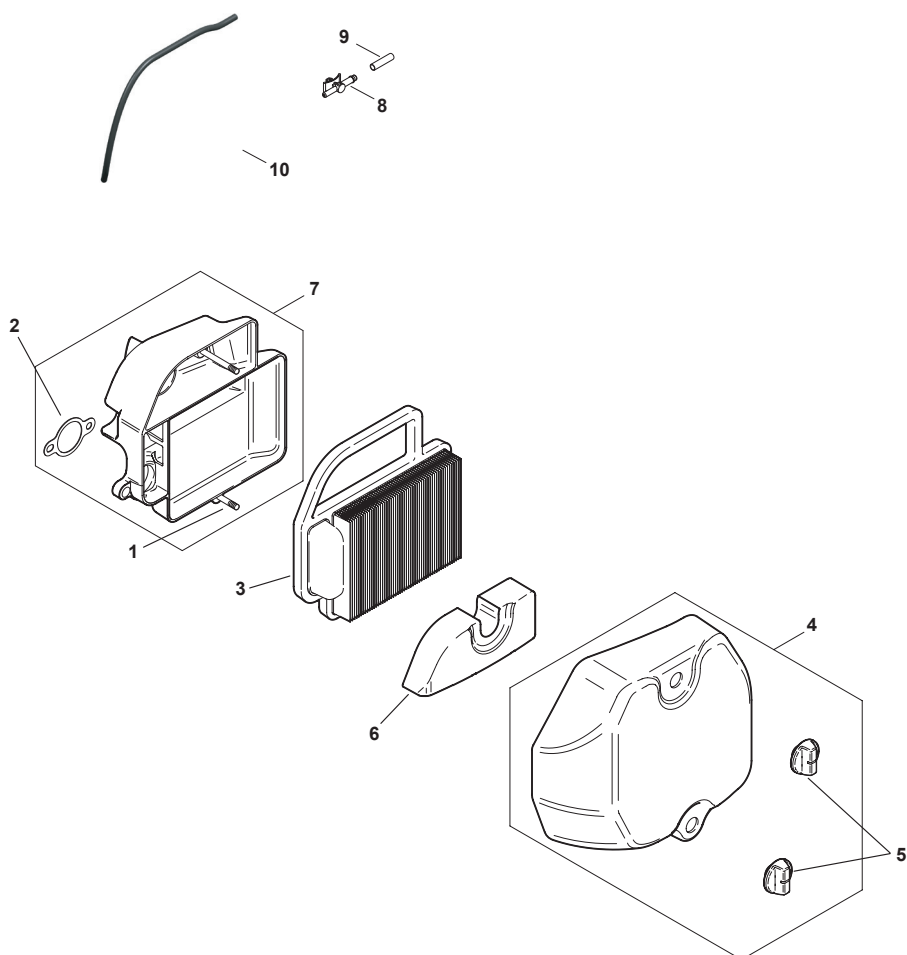

Ref.	Part Number	Description
1	KH-20-072-04-S	Air Cleaner Base Stud
2	KH-12-041-02	Air Cleaner Base Gasket
3	KH-20-883-02-S1	Air Cleaner Element
4	KH-20-096-04-S	Air Cleaner Cover Kit
5	KH-25-341-04-S	Cover Knob
6	KH-20-883-02-S1	Pre-Cleaner Element (Dry)
7	KH-20-094-06-S	Air Cleaner Base Kit
8	KH-25-155-51-S	Evaporative Connector
9	KH-25-173-33-S	Masking Cap
10	KH-25-326-08-S	Hose, Evaporative, 20"

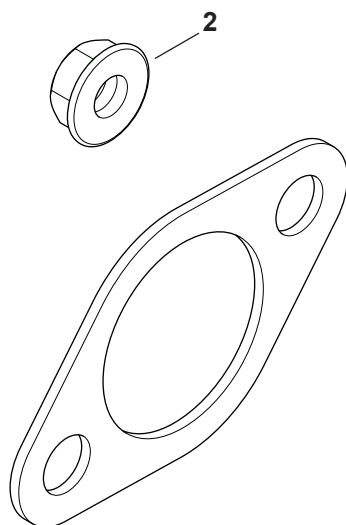

Ref.	Part Number	Description
2	KH-12-100-07	Flange Nut
N/A	Decals	
	KH-25-113-39-S	Clear Laminate Decal
	KH-20-113-14-S	20HP

This image shows a full page of white paper with horizontal grey ruling lines. The lines are evenly spaced and run across the width of the page. In the top-left corner, there is a header area containing the word "Notes" in a bold, black font. A vertical line separates the word from the rest of the page.

[illegible]

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
