



Parts Manual


SERIES 3000

Model GT 3100

TABLE OF CONTENTS

DESCRIPTION	PAGE	DESCRIPTION	PAGE
Axle, Front	12	Fender and Running Board	30
Baffles, Air	14	Frame	32
Battery	26	Fuel Tank	33
Brake Assembly	6	Grille	28
Brake Pedal and Linkage	2	Hood	28
Controls		Hydrostatic Transmission	8
Drive Pedals and Linkage	2	Hydraulic Lines	10
Engine Control Cables	14	Lift Linkage	13
Cable Handles	25	Lift Valve	10
Hydraulic Lift	10	Muffler	14
Dash Panel	25	Pedestal	26
Driveshaft	14	PTO, Front	31
Electrical		Seat	27
Harness, Wire	14	Side Panels	28
Interlock Switches	14	Steering	
Switches, Dash Panel	25	Lower Steering	11
Engine Mounting	14	Pump, Hydraulic Steering	11
Engine		Steering Wheel	25
Air Cleaner	24	Upper Steering	26
Blower Housing	19	Transmission	
Breather	18	Neutral Linkage	4
Carburetor	22	Oil Filter	6
Control Bracket	23	Transmission Mounting	4
Crankshaft	16	Transmission Differential	6
Cylinder Assembly	16	Wheels	34
Cylinder Heads	18		
Electrical	20		
Flywheel	20		
Fuel Pump/Valve Cover	18		
Oil Filter	17		
Oil Pump	17		
Pistons	16		
Starter	21		
Valves	18		


BRAKE AND CONTROL PEDALS

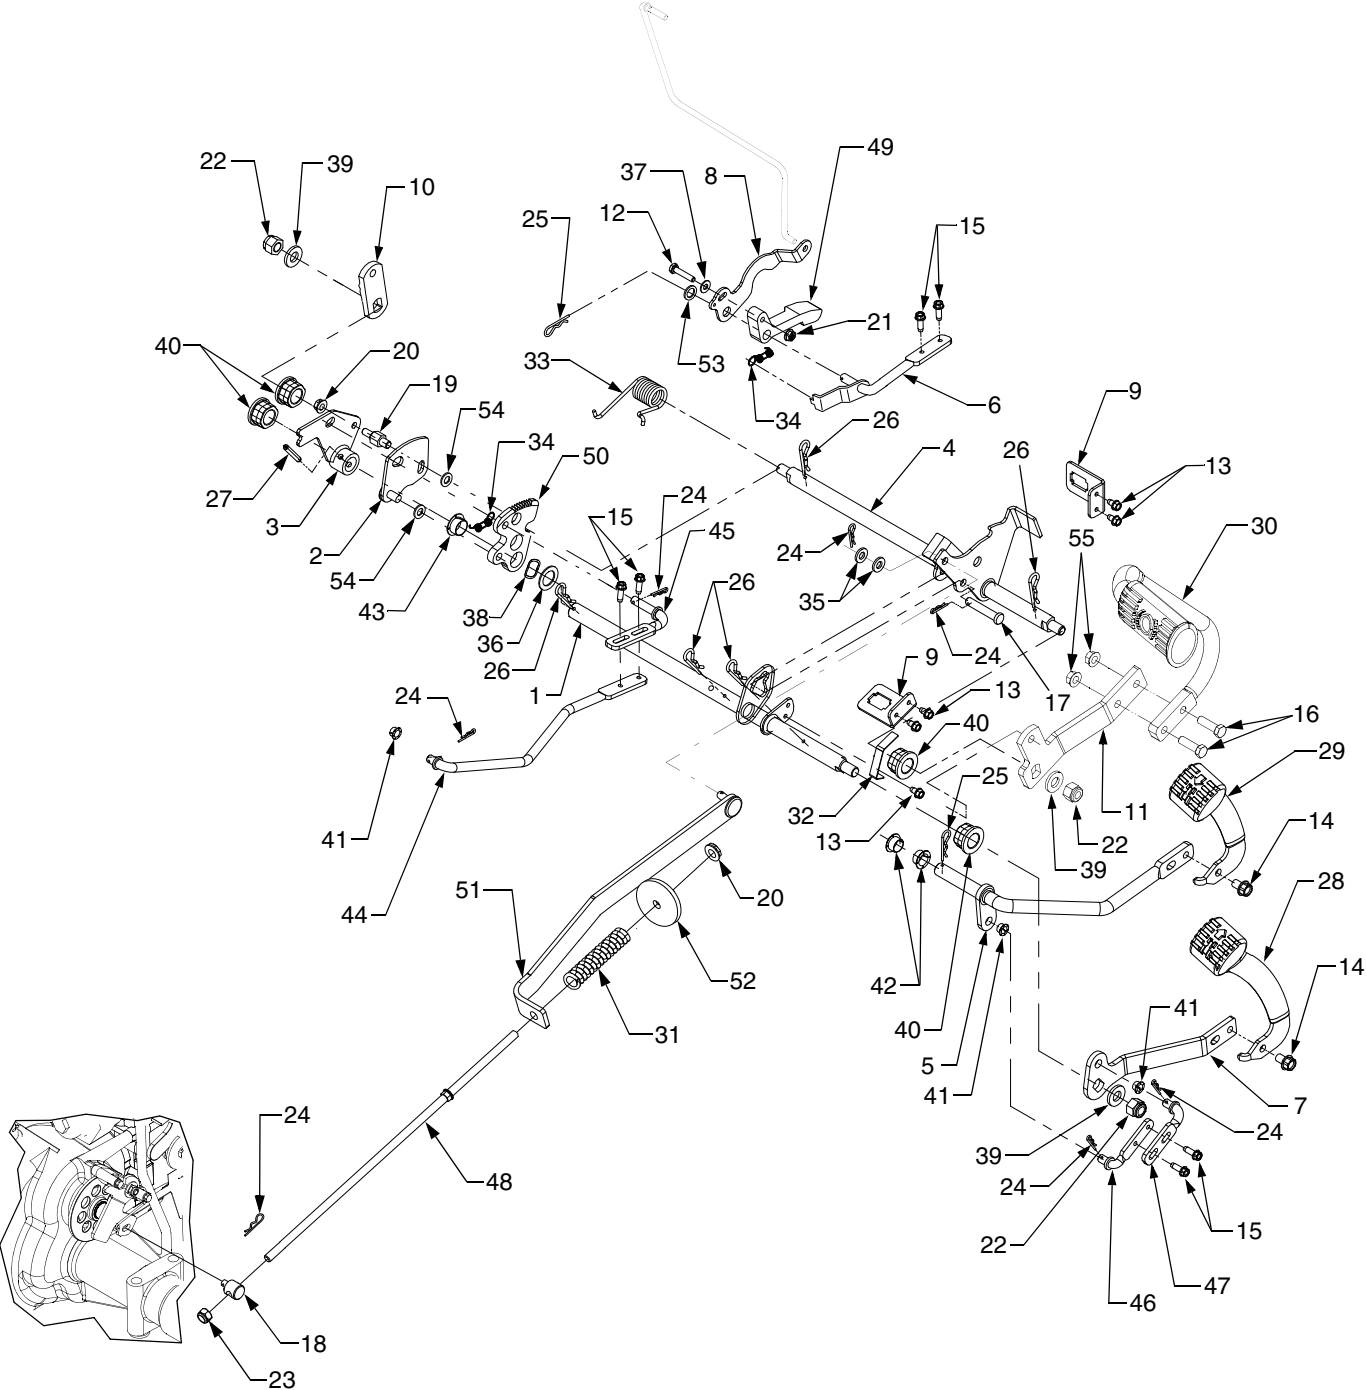

BRAKE AND CONTROL PEDALS

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0379		Shaft Assembly, Pedal	1	27	715-0114		Pin, Spiral Spring, .25 x 1.5	1
2	603-0421A		Plate, Disengagement	1	28	731-3247		Pedal, Forward	1
3	603-0437	0637	Cam, Clutch	1	29	731-3248		Pedal, Reverse	1
4	603-0445A		Shaft Assembly, Brake	1	30	731-3249A		Pedal, Brake	1
5	603-0449B		Shaft Assembly, Reverse	1	31	732-0324		Spring, Compression	1
6	603-0634		Rod Assembly, Cruise	1	32	732-0859A		Spring, No Cut Reverse	1
7	703-3012	0716	Link, Pedal Mounting	1	33	732-0871		Spring, Torsion	1
8	703-3020	0637	Bracket, Rod Adjust	1	34	732-3118		Spring, Extension,	2
9	703-3152	0637	Bracket, Switch	2				.380 OD x 1.44	
10	703-3155	0716	Lever, Brake/Diff. Lock	1	35	736-0275		Washer, Flat, .344 x .688 x .065	2
11	703-3156A	0716	Link, Brake Pedal	1	36	736-0287		Washer, Flat, .79 x 1.24 x .060	1
12	710-0106		Screw, Hex Cap, 1/4-20 x 1.25 GR5	1	37	736-0463		Washer, Flat, .25 x .62	1
13	710-0599		Screw, Hex Wash. Hd. Tapp ... 1/4-20 x .5	5	38	736-0621		Washer, Wave, .785 x 1.0 x .012	1
14	710-0623		Screw, Hex Wash. Hd. Tapp ... 3/8-16 x .75	2	39	736-3019		Washer, Flat, .531 x 1.06 x .134	3
15	710-0642		Screw, Hex Wash. Hd. Tapp ... 1/4-20 x .75	6	40	741-0598		Bearing, Hex Flange	4
16	710-3005		Screw, Hex Wash. Hd. 3/8-16 x 1.25 GR5	2	41	741-3073		Bearing, Flange	3
17	711-0679A		Pin, Clevis, 3/8 x 2.015	1	42	741-3074		Bearing, Flange	2
18	711-1530		Ferrule, Adjust.	1	43	741-3084		Bearing, Flange	1
19	711-04035		Stud, Actuator	1	44	747-3319		Rod, Rear Control	1
20	712-3004A		Nut, Hex Flange Lock, 5/16-18	2	45	747-3320		Rod, Front Control	1
21	712-3027		Nut, Hex Flange Lock, 1/4-20	1	46	747-3324		Rod, Rear Connecting	1
22	712-3058		Nut, Hex Insert Lock, 1/2-20 ...	3	47	747-3353		Rod, Front Connecting	1
23	712-0429		Nut, Hex Insert Lock, 5/16-18	1	48	747-3422		Rod, Brake	1
24	714-0104		Pin, Internal Cotter	8	49	748-04001		Cruise Latch	1
25	714-0145		Pin, Internal Cotter	2	50	748-3080A		Plate, Cruise	1
26	714-0147		Pin, Internal Cotter	5	51	603-0738		Link Assembly, Brake	1
					52	736-0418A		Washer, Flat, .341 x 2.25 x .10	1
					53	736-0160		Washer, Flat, .53 x .93 x .050	1
					54	736-0262		Washer, Flat, .385 x .870 x .092	2
					55	712-0431		Nut, Hex Flange Top Lock, 3/8-16 GRF	2


TRANSMISSION MOUNTING AND NEUTRAL LINKAGE

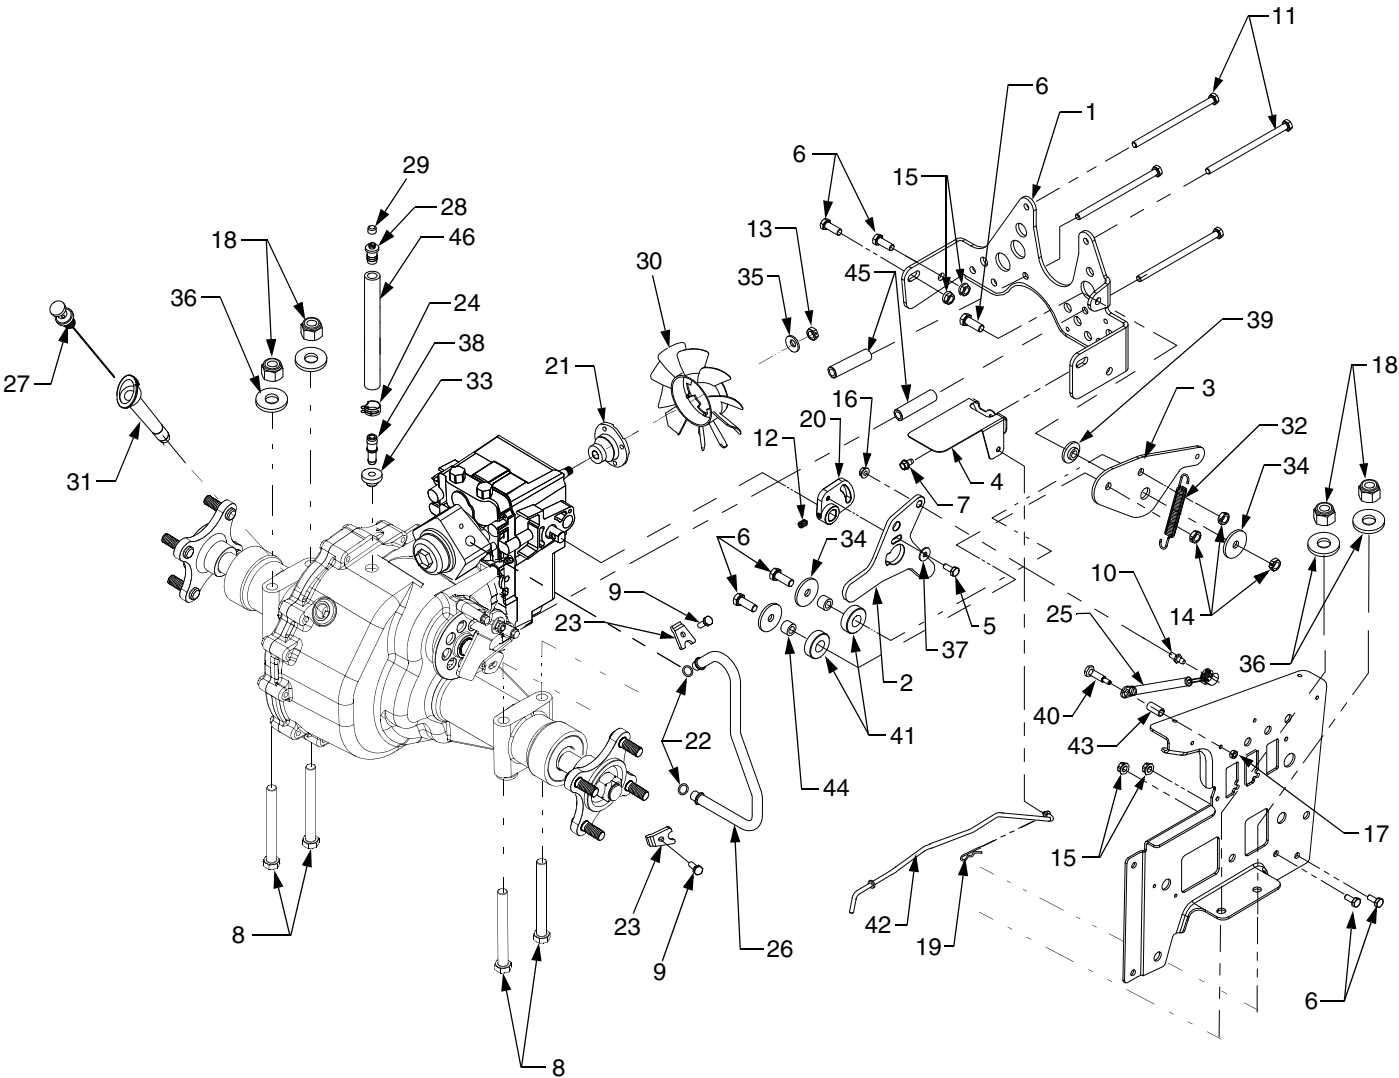

TRANSMISSION MOUNTING AND NEUTRAL LINKAGE

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0698		Bracket, Torque	1
2	703-3478		Plate, Hydro Neutral Return	1
3	703-3477		Link, Neutral Return Bearing	1
4	703-4093		Spring Plate, Hydro Bypass	1
5	710-0433		Screw, Hex Cap, 1/4-20 x .625 GR5 Lock	1
6	710-0514		Screw, Hex Cap, 3/8-16 x 1.0 GR5	7
7	710-0599		Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5	1
8	710-0465		Screw, Hex Cap, 1/2-20 x 4.5 GR5	4
9	710-3015		Screw, Hex Cap, 1/4-20 x .75 GR5	2
10	710-3170		Ball Screw, 5/16-18 x .56	1
11	710-1506		Screw, Hex Wash. Hd. Tapp,	4
			5/16-18 x 5.5 GR5	
12	710-3242		Screw, Set, 5/16 x .5	1
13	712-3059		Nut, Hex Top Lock Jam, 1/2-20	1
14	712-0266		Nut, Hex Ctr. Lock Jam, 3/8-16	3
15	712-0431		Nut, Hex Flange Lock, 3/8-16	4
16	712-3004A		Nut, Hex Flange Lock, 5/16-18	1
17	712-3006		Nut, Hex, 1/4-20	1
18	712-3058		Nut, Hex Insert Lock, 1/2-20	4
19	714-0104		Pin, Internal Cotter	1
20	718-3097		Arm, Hydro	1
21	748-3093		Adapter, Pump	1
22	721-0459		O-Ring, .426 ID x .566 OD x .070	2
23	726-0295		Clamp, Tube	2
24	726-0324		Clamp, Hose	1
25	727-3090		Cylinder, Damper	1
26	727-3139		Tube, Hydro Pickup	1
27	727-3148		Dipstick, Transmission	1
28	731-1480		Plastic Vent	1
29	731-1481		Vent Cap	1
30	731-3297		Fan, Pump	1
31	731-3245		Holder, Dipstick	1
32	732-0429A		Spring, Extension	1
33	735-0279		Grommet	1
34	736-0227		Washer, Flat, .390 x 1.5 x .1	3
35	736-0253		Washer, Bell, .5 x 1.0 x .05	1
36	736-3019		Washer, Flat, .531 x 1.062 x .134	4
37	736-3090		Washer, Flat, .26 x .72 x .06	1
38	737-3092		Fitting, Tube	1
39	738-0347		Spacer, Shoulder	1
40	738-0572		Shoulder Bolt	1
41	741-0155		Bearing, Ball	2
42	747-3424		Rod, Pump Bypass	1
43	750-0434		Spacer, .375 x .5 x 1.02	1
44	750-0497		Spacer, .375 x .624 x .445	2
45	750-3212		Spacer, Hydro, .3223 x .60 x 2.44	2
46	751-0588-8		Fuel Line	8 in.


TRANSMISSION - DIFFERENTIAL

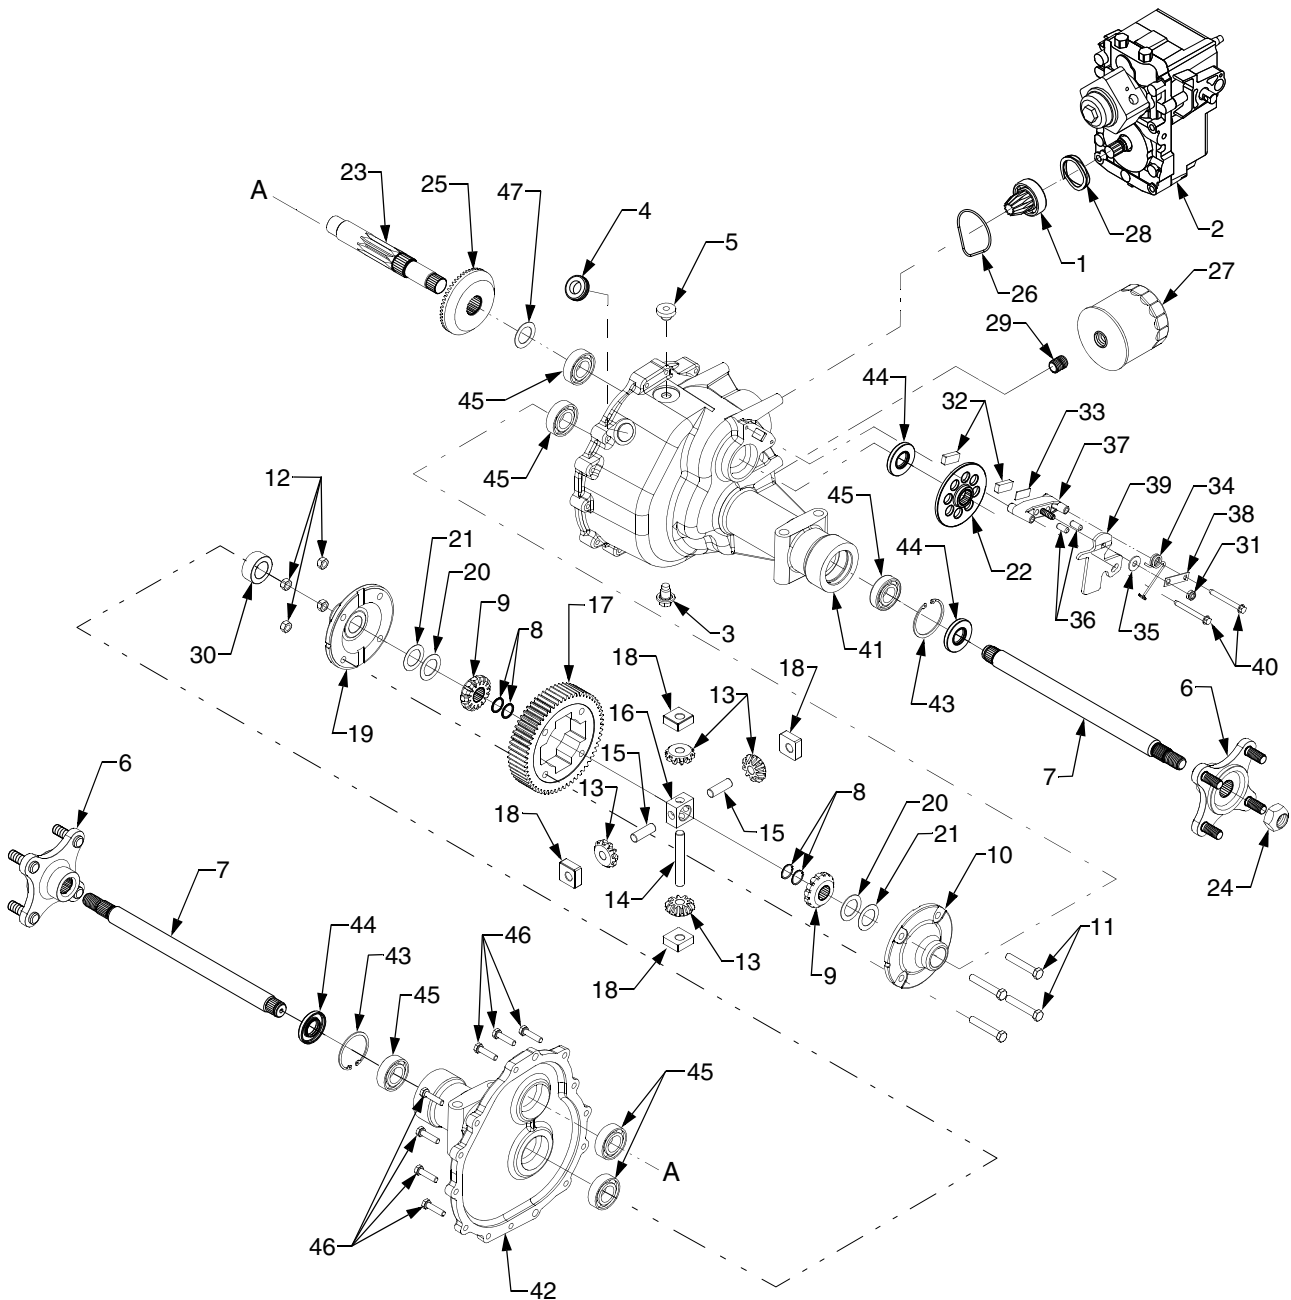

TRANSMISSION - DIFFERENTIAL

REF. NO.	PART NUMBER	DESCRIPTION	QTY	REF. NO.	PART NUMBER	DESCRIPTION	QTY
	618-3236	Transmission Assembly Complete - DOES NOT include Ref. Nos. 1, 2, 6, 24, 26, 27, 28 and 29.	1	25	717-3449	Gear, Bevel 54T	1
1	617-3001	Gear Assembly, Pinion 13T	1	26	721-0519	Seal, Gland O-Ring	1
	741-3037	Bearing, Ball	1	27	723-3014	Filter, Oil	1
2	618-3214	Hydrostatic Transmission Assy. NOTE: For components see separate parts breakdown.	1	28	736-0619	Washer, Spring	1
3	710-1633	Plug, Drain, M14 x 1.5 x .827	1	29	737-3022	Fitting, Filter Nipple	1
4	735-0277A	Grommet, Rubber	1	30	750-3254	Spacer, Axle, 1.0 x 1.665 x .71	1
5	735-0279	Grommet	1	31	712-0273	Nut, Hex Insert Lock, 5/16-24	1
6	618-0579A	Hub Assembly, Wheel	2	32	717-0678	Pad, Brake	2
7	711-1386	Axle Shaft,	2	33	717-0682	Plate, Puck	1
8	716-0172	Retaining Ring	4	34	732-0925	Spring, Torsion	1
9	717-1119	Gear, Spur, 14T	2	35	736-0371	Washer, Flat, .343 x .88 x .062	1
10	719-3165	Housing, Diff. Cover RH	1	36	741-0343	Pin, Brake Actuator	2
11	710-0331	Hex Cap Screw, 3/8-24 x 2.25 GR5	4	37	761-0207A	Yoke, Brake	1
12	712-3054	Nut, Hex Lock, 3/8-24	4	38	761-0208	Bracket, Brake Anti-Rotation	1
13	717-1120	Gear, Differential 10T	4	39	761-3074	Arm, Brake Actuator	1
14	717-1173	Shaft, Cross, .5 x 3.485	1	40	710-1206	Screw, Hex Wash. Hd. Tapp	2
15	717-1178	Shaft, Cross, Special	2			1/4-20 x 2.375	
16	717-1180	Differential Pinion Block	1	41	619-3071A	Housing, RH	1
17	717-3466	Gear, Spur 60T	1	42	619-3072	Housing, LH	1
18	718-3101	Block, Thrust Miter	4	43	716-0204	Retaining, Ring	2
19	719-3164	Housing, Differential Cover LH	1	44	721-0523	Seal, Oil, 1.0 ID	3
20	736-0420	Washer, Flat, 1.0 x 1.56 x .040	2	45	741-3114	Bearing, Ball	6
21	736-0424	Washer, Flat, 1.0 x 1.56 x .020	2	46	710-0573	Screw, Hex Cap Locking	14
22	761-0215	Disc, Brake	1			5/16-18 x 1.25 GR5	
23	711-1385A	Shaft, Output 9T	1	47	736-0615	Washer, Flat, 1.0 x 1.56 x .030	1
24	712-1329	Nut, Lock, 3/4-16	2		759-3958	Sealant, Loctite Black, 5.3 oz. Tube	1
					737-3120	Drive System Fluid Plus - Quart	5.5
					737-3121	Drive System Fluid Plus - Gallon	AR


HYDROSTATIC TRANSMISSION

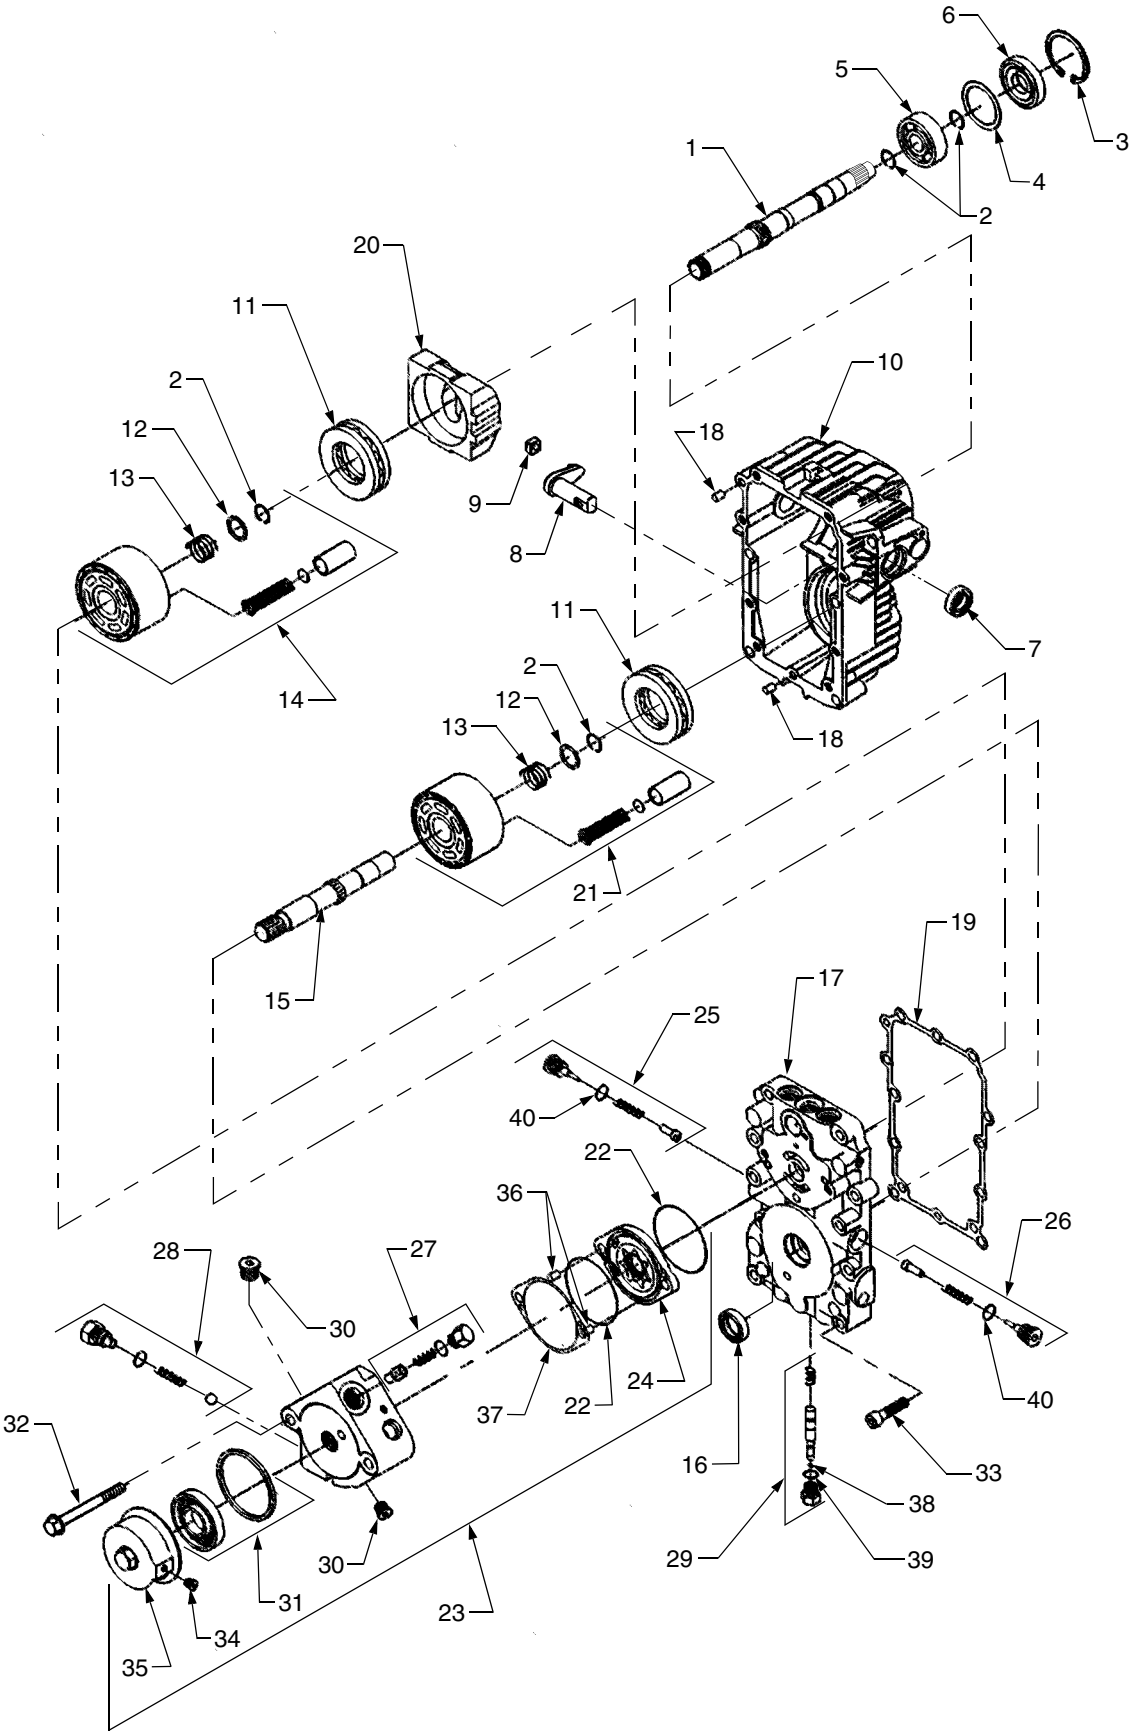

HYDROSTATIC TRANSMISSION



REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	HG-51206	Shaft, Pump	1
2	HG-2000022	Ring, Wire Retaining	4
3	HG-2000038	Ring, Retaining	1
4	HG-2000023	Spacer	1
5	HG-2000032	Bearing, Ball	1
6	HG-2000036	Seal, Lip	1
7	HG-2000037	Seal, Lip	1
8	HG-2000014	Arm, Trunnion	1
9	HG-2000015	Guide, Slot	1
10	HG-2510097	Housing Assembly	1
11	HG-50552	Bearing Assembly, Thrust Ball	2
12	HG-2000024	Washer, Block Thrust	2
13	HG-2000025	Spring, Block	2
14	HG-2510014	Kit, Pump Cylinder Block	1
15	HG-2000007	Shaft, Motor	1
16	N/A	Not Used In This Application	
17	HG-2510098	Kit, Center Section	1
18	HG-50641	Pin	2
19	HG-2000061	Gasket, Center Section	1
20	HG-50203	Swashplate, Variable	1
21	HG-2510013	Kit, Motor Cylinder Block	1
22	HG-9004100-1430	O-Ring	2
23	HG-2510083	Kit, Auxiliary Charge Pump	1
24	HG-50761	Gerotor & Housing Assembly	1
25	HG-2510050	Kit, Check Valve	1
26	HG-2510034	Kit, Check Valve w/ .044 Orifice	1
27	HG-2510081	Kit, Check Relief	1
28	HG-2510082	Kit, Auxiliary Relief Valve	1
29	HG-2510012	Kit, Bypass Valve	1
30	HG-9005110-4400	Plug, 7/16-20	2
31	HG-2510090	Kit, Auxiliary Filter	1
32	HG-50969	Screw, Flange Head Cap, M8 x 60 ..	2
33	HG-9007314-0808	Screw, Socket Head Cap	8
34	HG-9005110-3100	Plug, 5/16-24	1
35	HG-50994	Cover, Filter	1
36	HG-50408	Pin	2
37	HG-2000044	Shim, Charge Pump	1
38	N/A	O-Ring-Order Seal Kit HG-2510010	
39	N/A	O-Ring-Order Seal Kit HG-2510010	
40	N/A	O-Ring-Order Seal Kit HG-2510010	
	HG-2510010	Kit, Overhaul Seal (Includes Ref. Nos. 2, 3, 4, 6, 7, 19, 22, 38, 39 & 40)	1

HYDRAULIC VALVE AND LINES

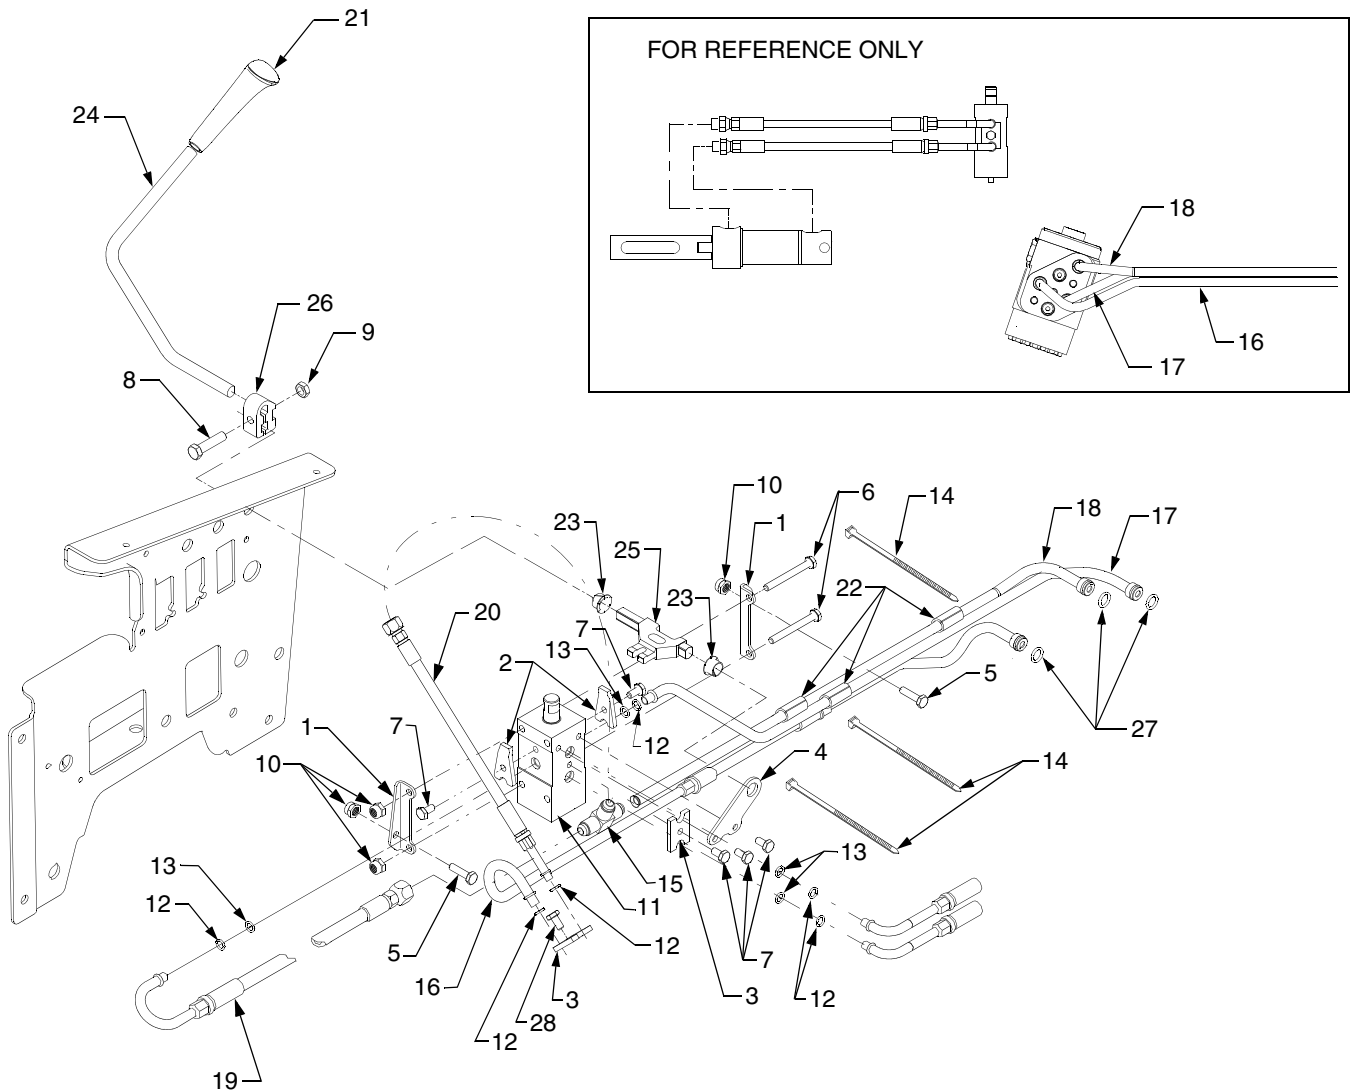


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	703-1801		Bracket, Valve Mounting	2	14	726-0197		Cable Tie	3
2	703-1802		Clamp, Side Valve	2	15	727-3056		T-Fitting, 9/16-18 Thrd.	1
3	703-1803		Clamp, Double Valve	2	16	727-3130		Tube, Hydraulic (Pump to Strng) ..	1
4	703-3154		Bracket, Lift Valve	1	17	727-3131		Tube, Hydraulic (Aux. from Strng) ..	1
5	710-0597		Screw, Hex Cap	2	18	727-3162		Tube, Hydraulic (Strng Return) ..	1
			1/4-20 x 1.0 GR5		19	727-3160		Tube, Hydraulic (Aux Return)	1
6	710-0641		Screw, Hex Cap	2	20	727-3161		Tube, Hydraulic (Return to Pump) ..	1
			1/4-20 x 2.25 GR5		21	731-3259		Knob, Lift	1
7	710-3013		Screw, Hex Cap	5	22	735-3007		Rubber Spacer	3
			1/4-20 x .50 GR5		23	741-0491		Bearing, Nylon Flange	2
8	710-3083		Screw, Hex Cap	1	24	747-3349A		Handle, Center Lift Valve	1
			5/16-18 x 1.375 GR5		25	748-3081A		Link, Lift	1
9	712-0429		Nut, Hex Insert Lock, 5/16-18	1	26	748-3082		Clamp, Handle	1
10	712-3027		Nut, Hex Flange Lock, 1/4-20	4	27	721-0493		O-Ring, .426 x .566 x .070	3
11	717-3452		Valve, Hydraulic	1	28	710-0751		Screw, Hex Cap	1
12	721-0492		O-Ring, Backup	4				1/4-20 x .62 GR5	
13	721-3021		O-Ring	6					

LOWER POWER STEERING

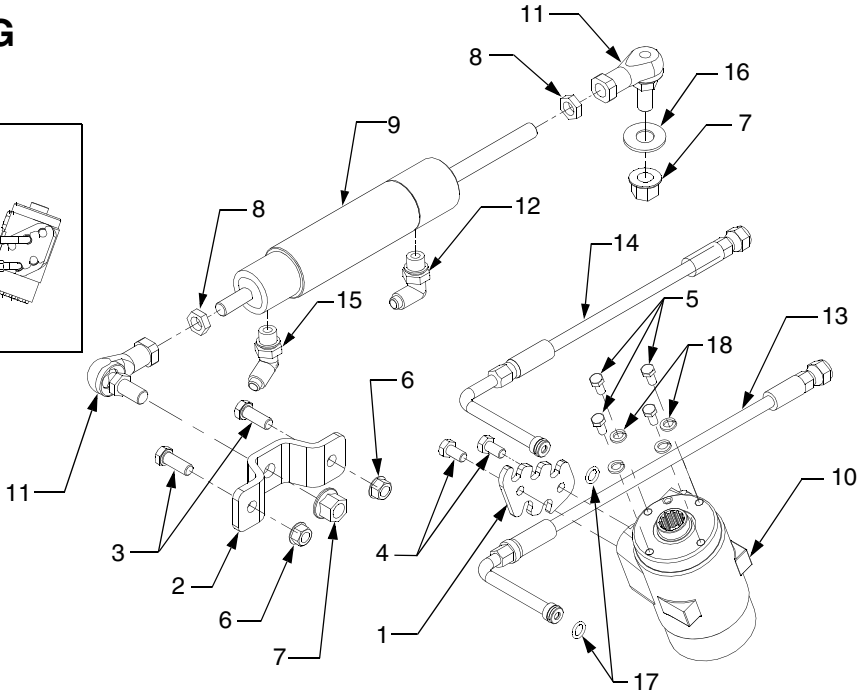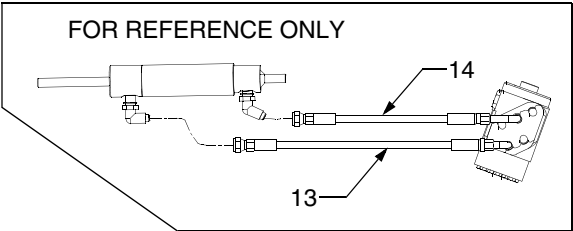


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	703-3015	0716	Plate, Steering Pump Port	1	9	717-3424		Cylinder, Steering	1
2	703-3189	0716	Bracket, Cylinder Mounting	1	10	717-3442		Pump, Hydraulic Steering	1
3	710-0514		Screw, Hex Cap 3/8-16 x 1.0 GR5	2	11	723-0462		Ball Joint, 12MM x 1.75 RH	2
4	710-3138		Screw, Hex Cap M8-1.25 x 16MM GR5	2	12	727-3012		Fitting, 90 Degree Elbow	1
5	710-3140		Screw, Hex Cap, M6 x 14MM	4	13	727-3126		Hose, Front Steering	1
6	712-0431		Nut, Hex Flange Lock, 3/8-16	2	14	727-3127		Hose, Rear Steering	1
7	712-3103		Nut, Hex Flange Lock, M12 x 1.75	2	15	727-3159		Fitting, 45 Degree	1
8	712-3104		Nut, Hex, M12 x 1.75 RH	2	16	736-3084		Washer, Flat, .51 x 1.12 x .060 ..	1
					17	721-0493		O-Ring, .426 x .566 x .070	2
					18	736-0329		Washer, Lock, 1/4"	4

HYDRAULIC STEERING PUMP

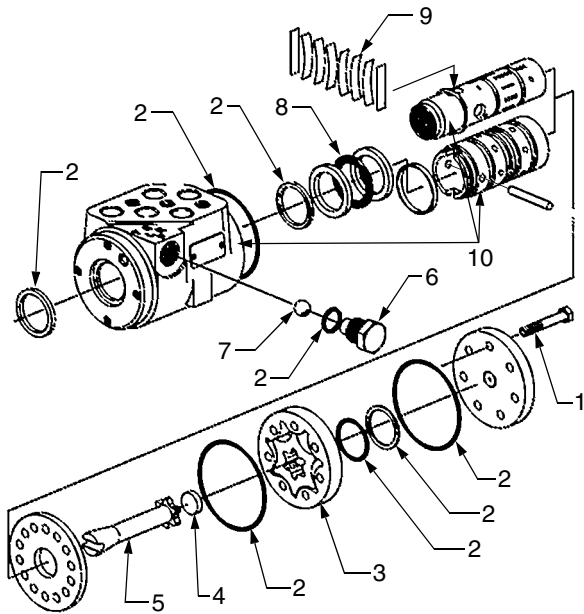


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	ET-14543-002	Screw, Hex Cap, 1.57" Lg.	1
2	ET-64455-000	Seal Kit (Includes All Parts Marked Ref. 2)	1
3	ET-22991-003	Gerotor Assembly	1
4	ET-22919-005	Spacer, .240 Lg.	1
5	ET-22918-000	Drive	1
6	ET-9199-000	Plug, Manual Check	1
7	ET-285020-140	Ball, Manual Check	1
8	ET-64457-000	Bearing Kit	1
9	ET-64456-000	Spring Kit, Centering	1
10	N/A	Spool, Sleeve and Housing — Not Available as Replacement Parts. Order Complete Steering Pump	

FRONT AXLE

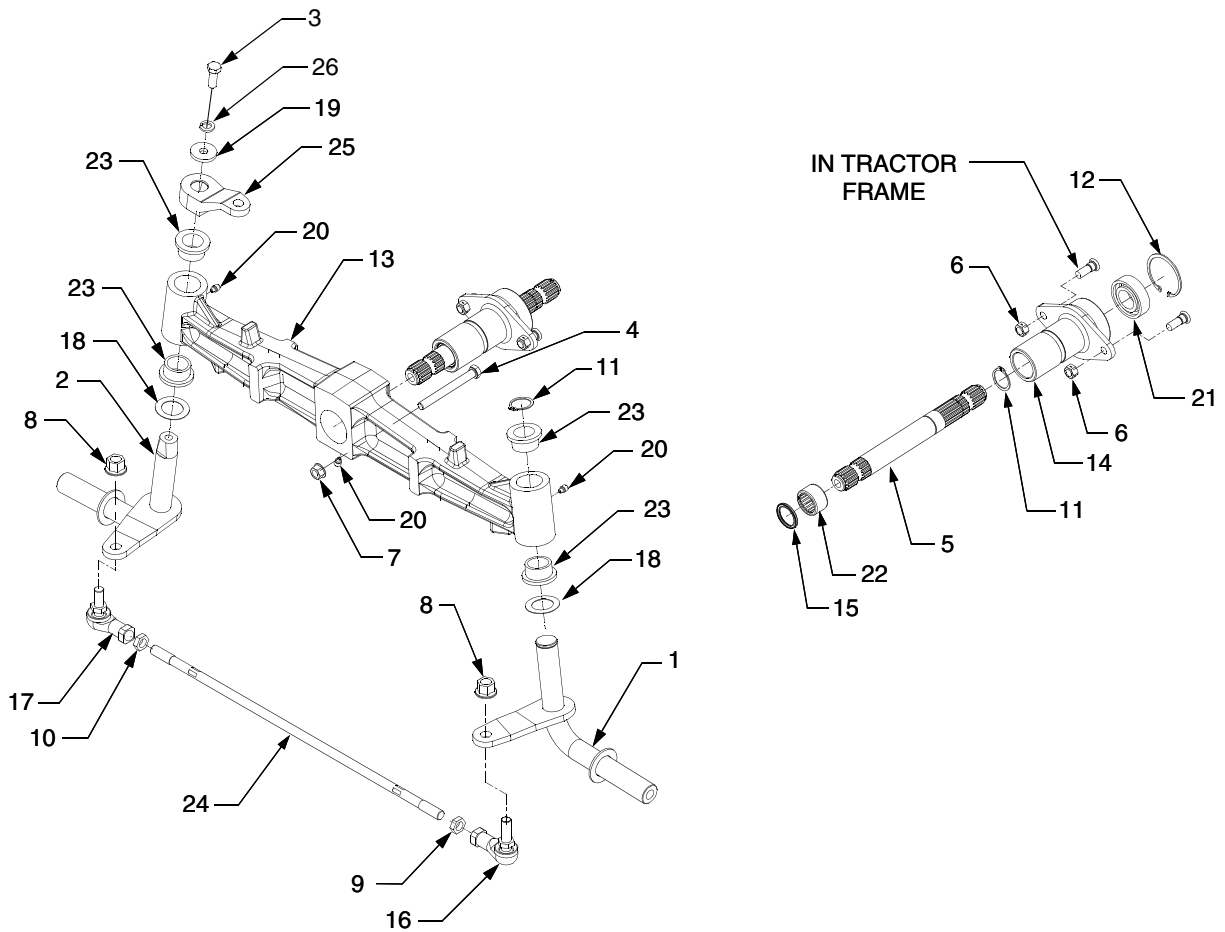


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0426	0637	Axle, RH Steering	1	13	719-3119A		Pivot Axle	1
2	603-0427	0637	Axle, LH Steering	1	14	719-3120		Axle Carrier	1
3	710-0591		Screw, Hex Cap Lock, 3/8-24 x 1.0 GR5	1	15	721-0462		Seal, Grease, 1.31 x 1.0	1
4	710-3085		Screw, Hex Cap	1	16	723-0462		Ball Joint, 12MM x 1.75 RH	1
5	711-1141		Shaft, Splined	1	17	723-0463		Ball Joint, 12MM x 1.75 LH	1
6	712-0355		Nut, Hex Center Lock, 3/8-24	2	18	736-0163		Washer, Flat, 1.03 x 1.62 x .030	2
7	712-0431		Nut, Hex Flange Lock, 3/8-16	1	19	736-0247		Washer, Flat, .406 x 1.25	1
8	712-3103		Nut, Hex Flange Lock, M12 x 1.75	2	20	737-3000		Fitting, Lube, 3/16 Drive	3
9	712-3104		Nut, Hex - RH, M12 x 1.75	1	21	741-0131		Bearing, Ball	1
10	712-3105		Nut, Hex - LH, M12 x 1.75	1	22	741-0363		Bearing, Needle	1
11	716-0102		Snap Ring, 1.0 Dia. Shaft	2	23	741-0558		Bearing, Flange	4
12	716-0188		Retaining Ring, Internal, 2.0	1	24	747-3348A		Tie Rod, M12 x1.75 RH & LH	1
					25	748-3074		Steering Arm	1
					26	736-0169		Washer, Lock, 3/8	1

CENTER HYDRAULIC LIFT LINKAGE

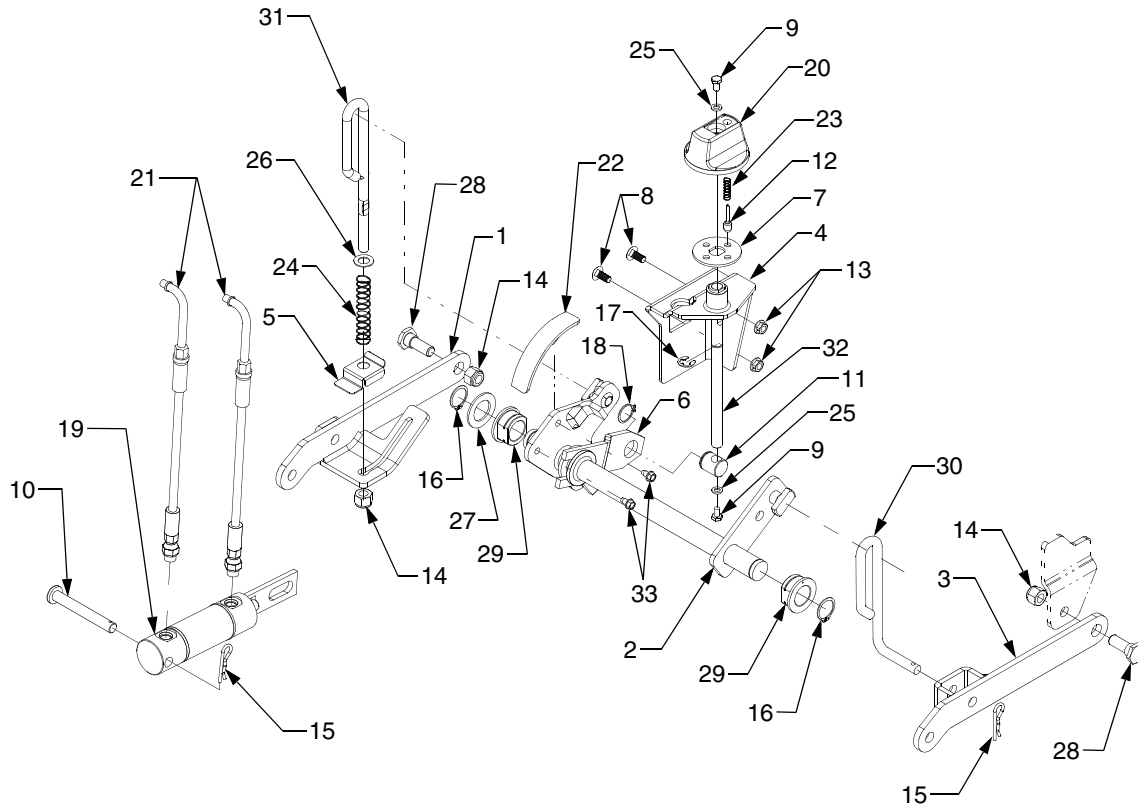

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0434		Link, LH Lift	1	19	717-3518		Cylinder, Center Lift	1
2	603-0435A		Shaft Assembly, Lift	1	20	720-0236		Knob	1
3	603-0456	0716	Link, RH Lift	1		777120243		Graphic, Height Adjust	1
4	603-0803		Bracket, Downstop	1	21	727-3135		Hose, Lift	2
5	703-3426		Stop Bracket, Lift Rod	1		725-0157		Tie, Cable	1
6	703-3797		Arm, Downstop	1	22	731-3215B		Indicator, Lift Position	1
7	748-3103		Disk, Detent	1	23	732-0437		Spring, Compression	1
8	710-3178		Bolt, Carriage, 3/8-16 x .75	2	24	732-0870A		Spring, Compression	1
9	710-3013		Screw, Hex Cap, 1/4-20 x .5 GR5	2	25	736-0142		Washer, Flat, .281 x .5 x .063 ...	2
10	711-1206		Pin, Clevis, .5 x 3.75	1	26	736-0160		Washer, Flat, .536 x .93 x .050 .	1
11	711-1553		Ferrule, Adjustment	1	27	736-0250		Washer, Flat, 1.0 x 1.7 x .10	1
12	711-1561		Pin, Detent Plunger	1	28	738-0744A		Shoulder Screw	2
13	712-0431		Nut, Flange Lock, 3/8-16 GR5 ...	2	29	741-0170		Bearing, Flange w/Flats	2
14	712-3083		Nut, Hex Lock, 1/2-13	3	30	747-3330		Rod, RH Lift	1
15	714-0147		Pin, Internal Cotter	2	31	747-3331A		Rod, LH Lift	1
16	716-0102		Snap Ring, 1.0 Dia. Shaft	2	32	747-3437		Screw, Adjustment	1
17	716-0104		Ring, 'E' Retaining, .5 Dia.	1	33	710-0599		Screw, Hex Wash. Hd. Tapp	2
18	716-0111		Snap Ring, .875 Dia. Shaft	1				1/4-20 x .5	


DRIVESHAFT AND ENGINE CONNECTIONS

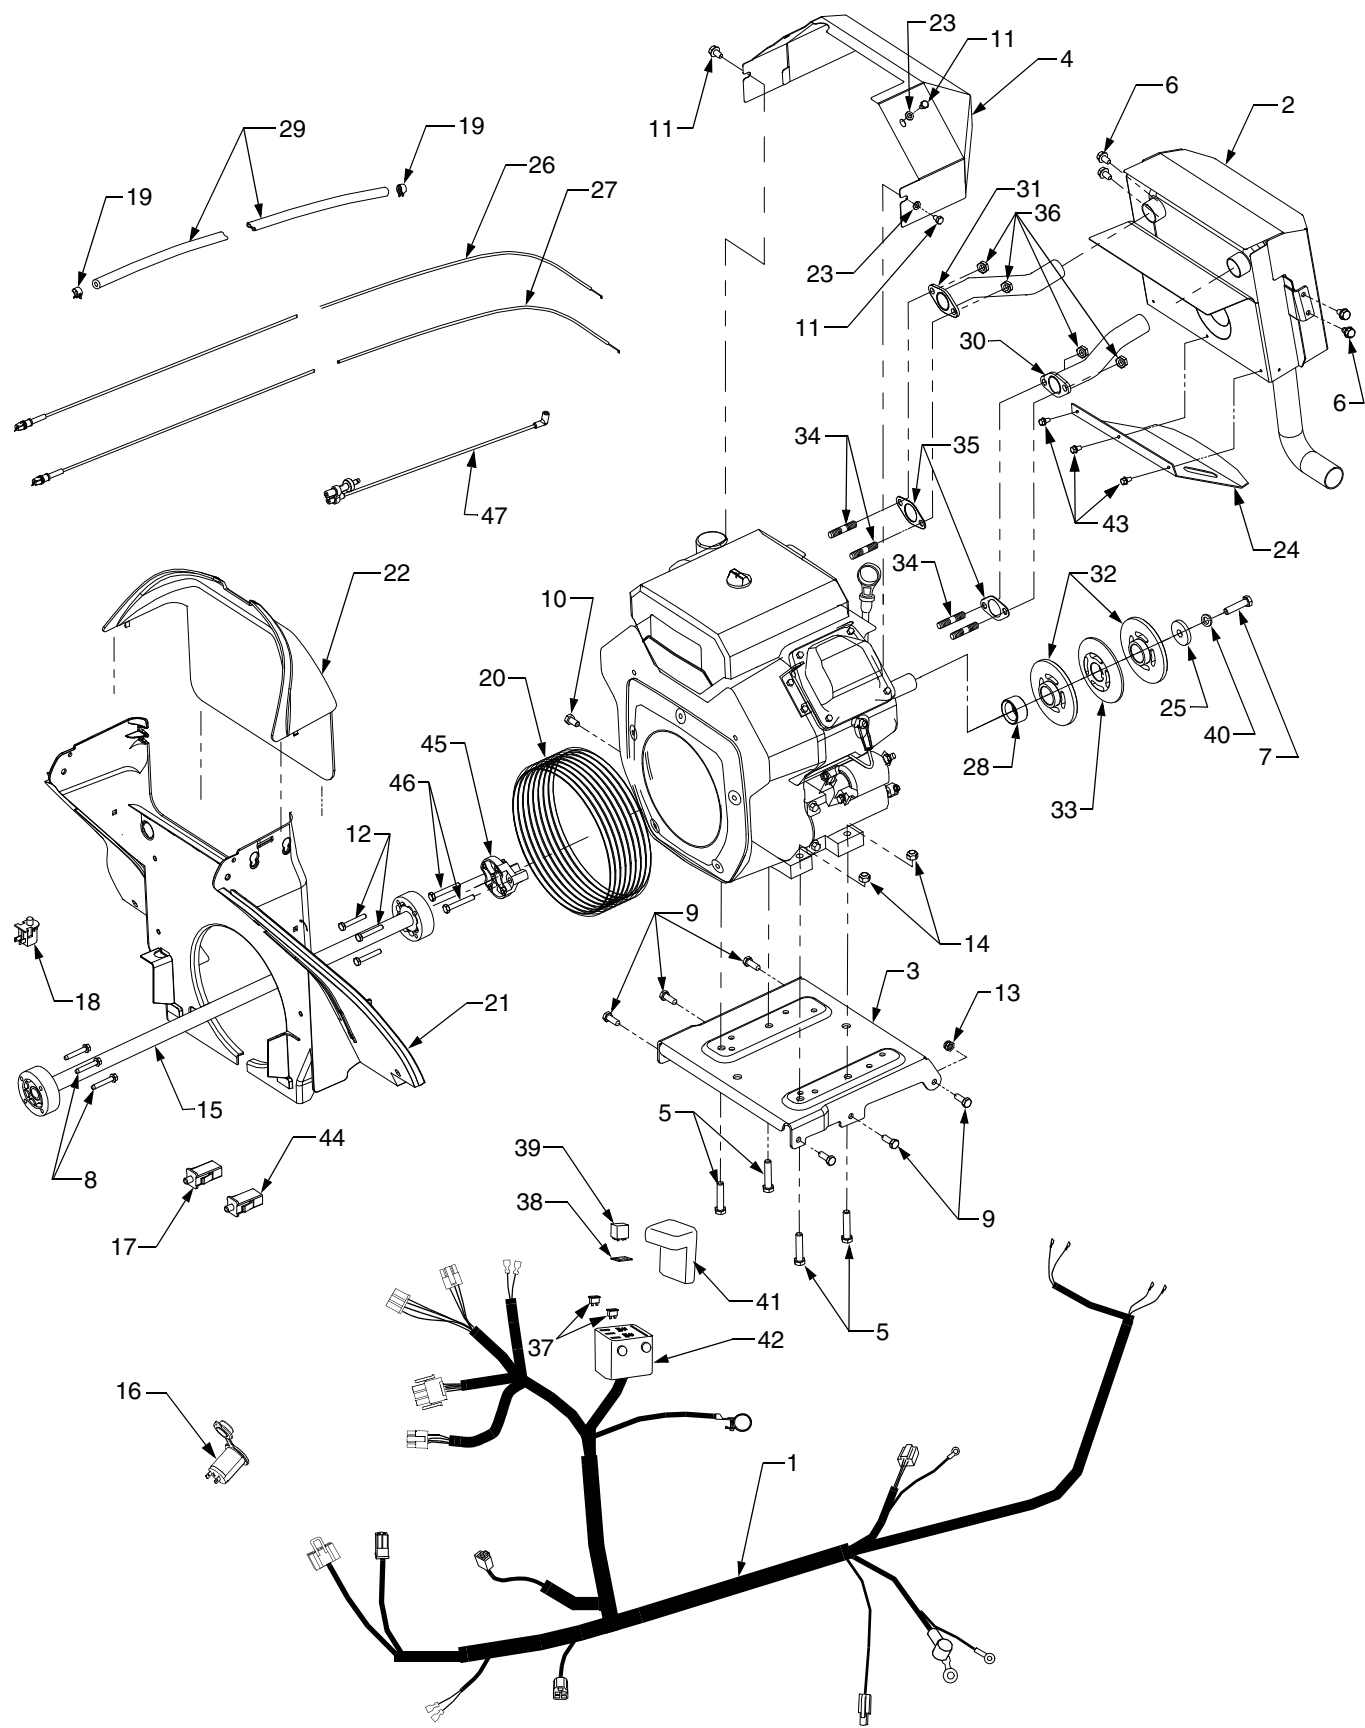

DRIVESHAFT AND ENGINE CONNECTIONS


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	629-04107		Harness, Wire	1
	726-0154		Tie, Pushmount	4
	726-3055		Clip, Cable	2
2	651-3003		Muffler Assembly	1
3	703-2909	0716	Plate, Engine Mounting	1
4	703-2999		Shield, Muffler Heat	1
5	710-0539		Screw, Hex Cap, 3/8-24 x 1.75 GR5	4
6	710-0607		Screw, Hex Wash. Hd. Tapp 5/16-18 x .5	4
7	710-0757		Screw, Hex Cap, 7/16-20 x 1.5 GR5	1
8	710-1062		Screw, Hex Cap Lock..... 1/4-20 x 1.25 GR5	4
9	710-3038		Screw, Hex Cap, 5/16-18 x .875 GR5	6
10	710-0237		Screw, Hex Cap, 5/16 - 24 x .625 GR5	1
11	710-3209		Screw, Hex Cap, M6 - 1.0 x 10MM	4
12	710-3288		Screw, Hex Cap, Lock 1/4-20 x 1.62 GR5	4
13	712-0429		Nut, Hex Insert Lock, 5/16-18	6
14	712-3054		Nut, Hex Lock, 3/8-24	4
15	718-3093		Shaft, Drive, 27.125 Long	1
16	725-2003		Receptacle, 12V Power	1
17	725-3164A		Switch, Plunger (Reverse)	1
18	725-04040		Switch, Snap Mount (Seat)	1
19	726-0205		Clamp, Hose	2
20	731-3166		Boot, Intake	1
21	731-3221A		Baffle, Lower Air	1
22	731-3231A		Baffle, Upper Air	1
23	736-0142		Washer, Flat, .281 x .50 x .06	4
24	703-3398		Shield, Lower Exhaust	1
25	736-3017		Washer, Flat, .417 x 1.5 x .225	1
26	746-3075		Cable, Throttle Control	1
27	746-3077		Cable, Choke Control	1
28	750-3357		Spacer, Crankshaft	1
29	751-10349		Hose, Fuel Line	54 in.
30	751-3154		Pipe, Exhaust RH	1
31	751-3155		Pipe, Exhaust LH	1
32	756-3091A		Pulley Half	2
33	756-3099		Pulley, Center	1
34	KH-25-072-04		Stud, M8 - 1.25 x 33MM	4
35	KH-24-041-49-S		Gasket, Exhaust	2
36	712-3086		Nut, Hex, M8 x 1.25	4
37	725-3243		Fuse, 25 Amp	2
38	721-0342		Gasket, Silicone	1
39	725-1648		Relay	1
40	736-0171		Washer, Lock, 7/16	1
41	759-3868		Cover, Fuse Box	1
42	759-3869		Box, Fuse	1
43	710-3007		Screw, Hex Wash. Hd. Tapp, #12-24 x .38	3
44	725-3191A		Switch, Plunger (Brake)	1
45	719-3096		Adapter, Drive Shaft	1
46	KH-24-086-16		Screw, Hex Flange, M10 x 1.5 x 90	2
47	751-3199		Hose, Vacuum	

CRANKCASE AND CRANKSHAFT

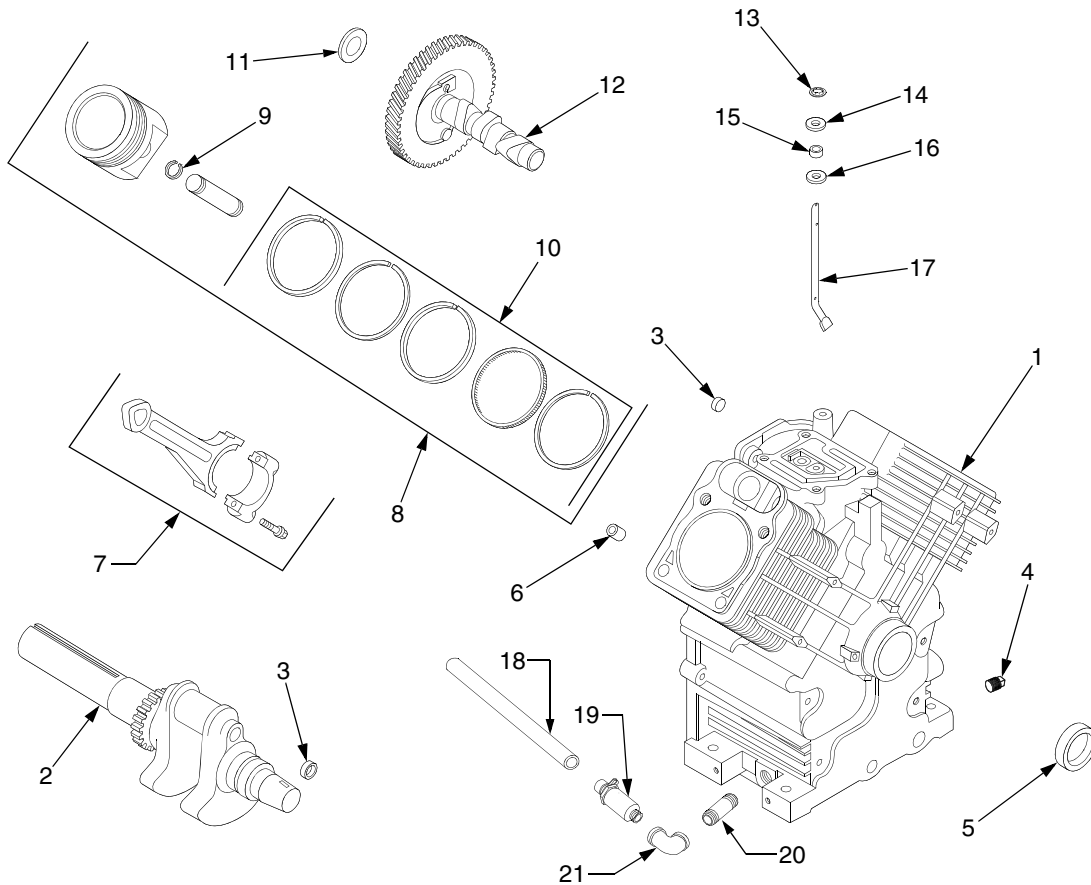


REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-76524	Engine, Complete	1	11	KH-12-422-09-S	Shim, Camshaft, .0320	AR
	KH-24-522-249	Short Block	1		KH-12-422-13-S	Shim, Camshaft, .0400	AR
	KH-24-782-27	Miniblock	1		KH-12-422-07-S	Shim, Camshaft, .0280	AR
2	KH-24-014-06-S	Crankshaft (Includes 3)	1		KH-12-422-08-S	Shim, Camshaft, .0300	AR
3	KH-52-139-09-S	Plug, Cup	1		KH-12-422-10-S	Shim, Camshaft, .0340	1
4	KH-25-139-57-S	Plug, Hex Head, 3/8 NPTF	2		KH-12-422-11-S	Shim, Camshaft, .0360	AR
5	KH-24-032-19-S	Seal, Oil	1		KH-12-422-12-S	Shim, Camshaft, .0380	AR
6	KH-24-380-16-S	Pin, Locating	6	12	KH-24-012-10-S	Camshaft	1
7	KH-24-067-24-S	Rod, Connecting, Std	2	13	KH-24-018-09-S	Ring, Retainer	1
	KH-24-067-14-S	Rod, Connecting, .010	2	14	KH-M-931010-S	Washer, Nylon	1
8	KH-24-874-34-S	Piston w/Ring Set, Std	2	15	KH-28-032-09-S	Seal, Governor Cross Shaft	1
	KH-24-874-10	Piston w/Ring Set, .010	2	16	KH-24-468-15-S	Washer, Plain	1
	KH-24-874-11	Piston w/Ring Set, .020	2	17	KH-24-144-38-S	Shaft, Governor Cross	1
	KH-24-874-15	Piston w/Ring Set, .003	2	18	751-3141-12	Hose, Oil Drain	12 in.
9	KH-24-018-01	Retainer, Piston Pin	4	19	751-10517	Drain, Oil	1
10	KH-24-108-08-S	Ring Set, Std	1	20	737-0199	Pipe, Straight	1
	KH-24-108-09-S	Ring Set, .010	1	21	737-0272	Elbow, 90 °	1
	KH-24-108-10-S	Ring Set, .020	1		KH-24-755-108-S	Gasket Set	1

OIL PAN/LUBRICATION

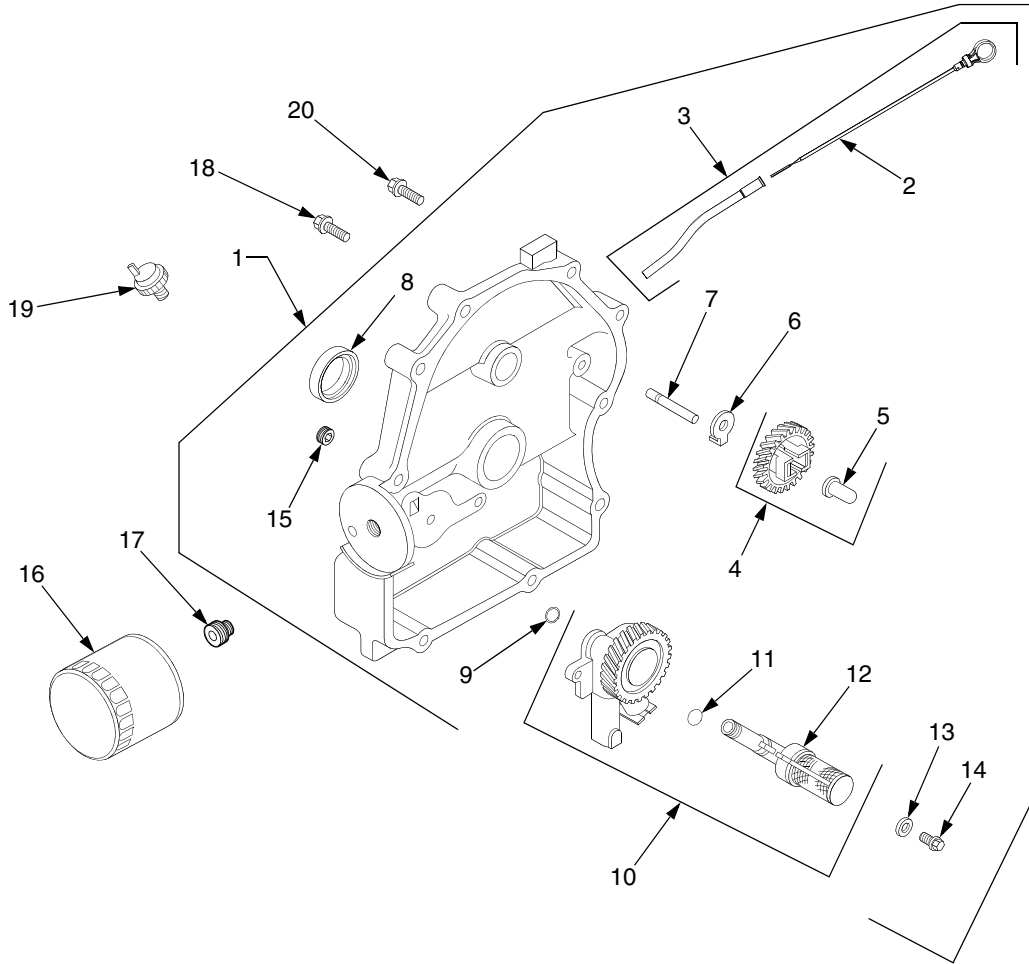


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-54-009-07	Plate, Closure Assembly (Includes 2-15)	1
2	KH-24-038-10-S	Dipstick	1
3	KH-24-755-121-S	Tube, Dipstick (Includes 2)	1
4	KH-24-043-12	Kit, Governor Gear (Includes 5) ..	1
5	KH-12-380-01	Pin, Governor Regulating	1
6	KH-24-448-02-S	Tab, Locking	1
7	KH-12-144-02	Shaft, Governor Gear	1
8	KH-25-032-06-S	Seal, Oil (PTO End)	1
9	KH-24-153-08	O-Ring	1
10	KH-24-393-51-S	Oil Pump Assembly	1
		(Includes 11,12)	
11	KH-24-153-01	O-Ring, Oil Pick-Up	1
12	KH-24-381-04	Pick-Up, Oil	1
13	KH-M-631005	Washer, Plain	2
14	KH-M-645025-S	Screw, Hex Flange M6 x 1 x 25 ..	2
15	KH-25-139-60-S	Plug, Pipe 1/8"	2
16	KH-12-050-01-S	Filter, Oil	1
17	KH-24-136-01	Nipple, Oil Filter	1
18	KH-24-086-16	Screw, Hex Flange M8 x 1.25 x 45	9
19	KH-25-099-27-S	Switch, Pressure	1
20	KH-24-086-17-S	Screw, Hex Flange M8 x 1.25 x 45	1

CYLINDER HEAD, VALVES AND BREATHER

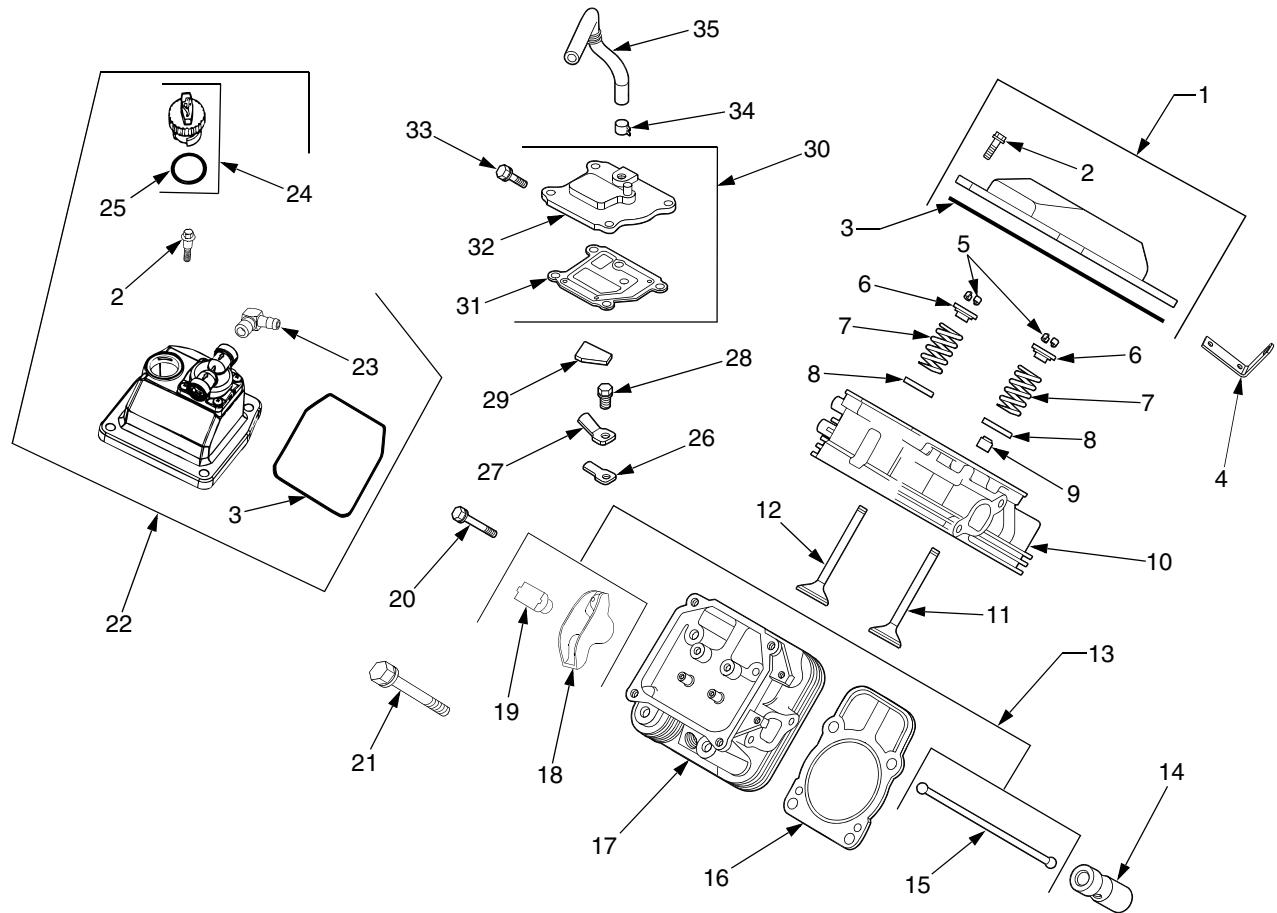


REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-24-755-141-S	Kit, Valve Cover (Includes 2-3)	1	18	KH-25-186-01	Arm, Rocker	4
2	KH-651030-S	Screw, Hx. Flng, M6 x 1.0 x 30	8	19	KH-24-599-02-S	Pivot, Rocker Arm	4
3	KH-24-153-30-S	O-Ring, Valve Cover	2	20	KH-M-640034	Screw, Hex Flng, M6 x 1.0 x 34	4
4	KH-24-445-01	Strap, Lifting	1	21	KH-12-086-16-S	Screw, Hex Flng, M10 x 1.5 x 90	8
5	KH-12-755-03	Kit, Retainer	4	22	KH-24-559-10-S	Cover Kit, Fuel Pump Valve (Includes 2,3, 24,26)	1
6	KH-12-173-01	Cap, Valve Spring	4	23	KH-25-294-11-S	Connector, 90°	2
7	KH-24-089-02	Spring, Valve	4	24	KH-24-227-02-S	Cap Assembly, Oil Fill (Incl. 27)	1
8	KH-235011-S	Retainer, Spring	4	25	KH-24-153-09	O-Ring	1
9	KH-66-032-05-S	Seal, Valve Stem	2	26	KH-24-402-03	Reed, Breather	1
10	KH-24-318-68-S	Kit, Cylinder Head #1	1	27	KH-66-018-04-S	Retainer, Breather Reed	1
11	KH-24-017-01	Valve, Intake Std	2	28	KH-M-0545010	Screw, Hex Flng, M5 x 0.8 x 10	1
	KH-24-017-02	Valve, Intake, .25mm	2	29	KH-24-050-11-S	Filter, Breather	1
12	KH-24-016-01	Valve, Exhaust Std	2	30	KH-24-033-01	Kit, Breather (Includes 33-35)	1
	KH-24-016-02	Valve, Exhaust, .25mm	2	31	KH-24-041-51-S	Gasket, Breather	1
13	KH-24-755-66	Kit, Valve Train (Incl. 15,18,19)	1	32	KH-24-096-86-S	Cover, Breather	1
14	KH-25-351-04-S	Lifter, Valve	4	33	KH-M-645020-S	Screw, Hex Flng M6 x 1.0 x 20	4
15	KH-24-411-05	Rod, Push	4	34	KH-25-237-14-S	Clamp, Breather	1
16	KH-24-841-02-S	Kit, Cylinder Head Gasket (Includes 22, 25)	2	35	KH-24-326-89-S	Hose, Breather	1
17	KH-24-318-71-S	Kit, Cylinder Head #2	1		KH-24-755-147-S	Kit, Cylinder Head Hardware	1

BLOWER HOUSING AND BAFFLES

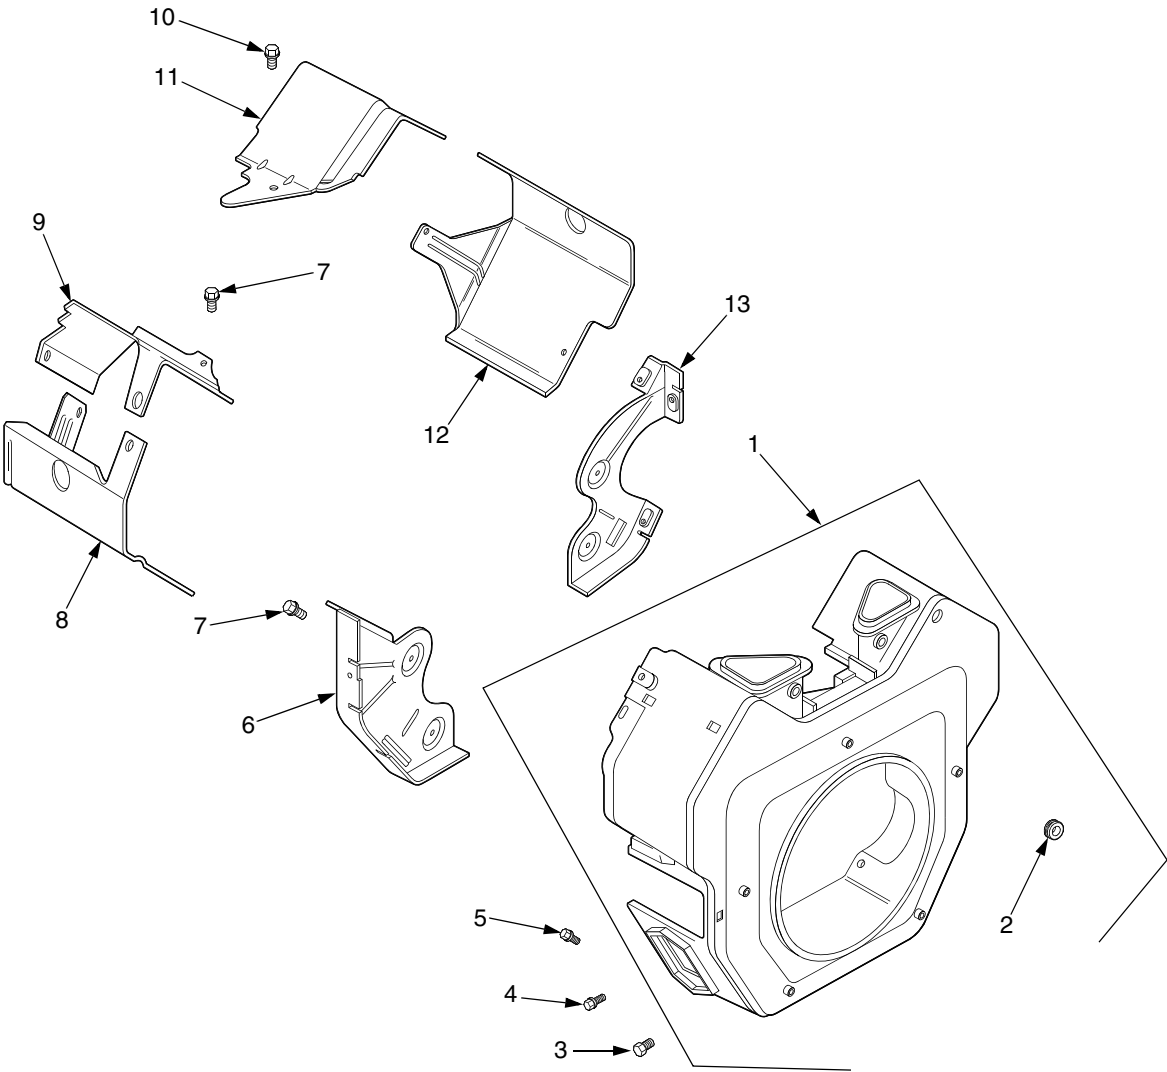

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-24-027-163-S	Housing, Blower (Includes 2)	1
2	KH-25-313-06-S	Grommet	1
3	KH-M-561016-S	Screw, Hex Flange M5 x 0.8 x 16	1
4	KH-M-545016-S	Screw, Hex Flange M5 x 0.8 x 16	3
5	KH-M-545020-S	Screw, Hex Flange M5 x 0.8 x 20	4
6	KH-24-146-16-S	Plate, Backing #2 Side	1
7	KH-M-645016-S	Screw, Hex Flange M6 x 1.0 x 16	6
8	KH-24-063-20	Baffle, Cyl. Barrel #2 Side	1
9	KH-24-063-17	Baffle, Valley #2 Side	1
10	KH-M-0545010	Screw, Hex Flange M5 x 0.8 x 10	2
11	KH-24-063-59-S	Baffle, Valley #1 Side	1
12	KH-24-063-85-S	Baffle, Cyl. Barrel #1 Side	1
13	KH-24-146-20-S	Plate, Backing #1 Side	1


IGNITION/ELECTRICAL

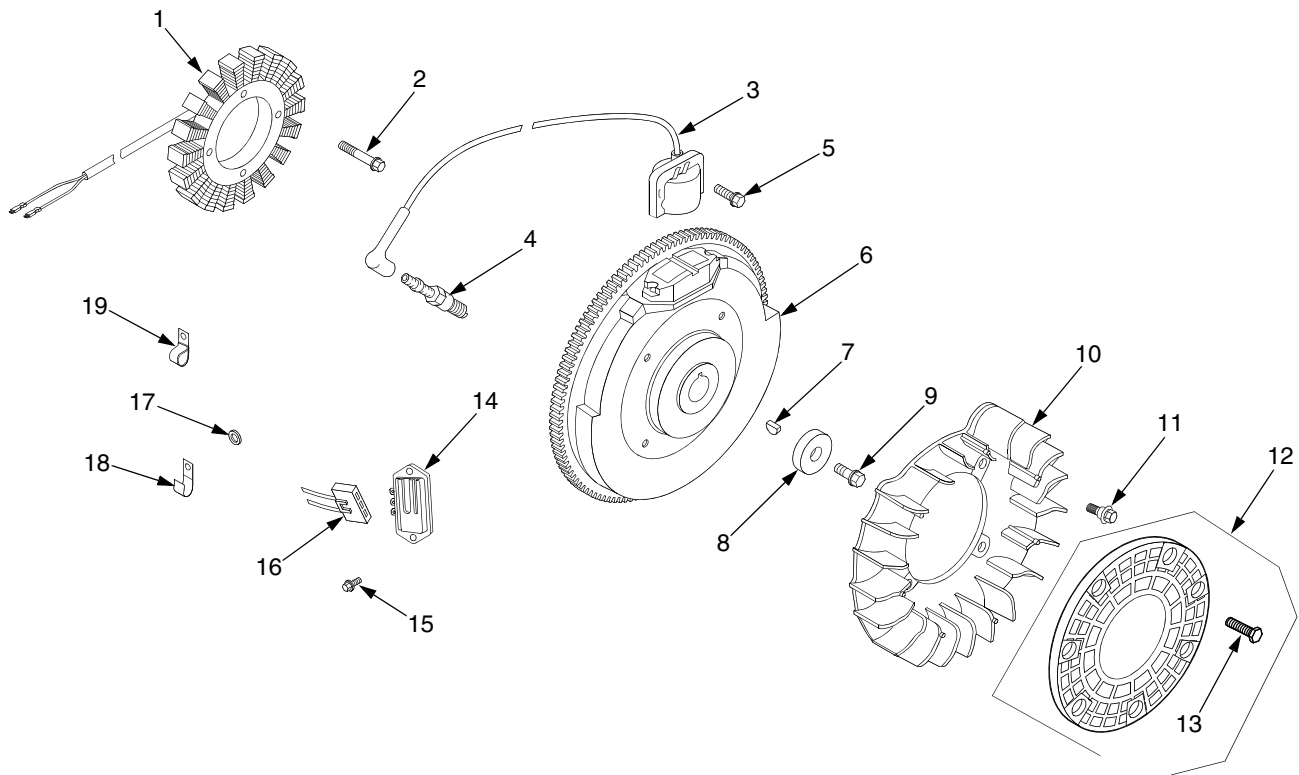

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-237878	Stator Kit, 15 Amp	1	13	KH-25-086-117-S	Screw, Hex Hd. M4 x 0.7 x 25	4
2	KH-M-548025-S	Screw, Stator Mtg. M5 x .8 x 25	2	14	KH-41-403-09	Regulator - Rectifier	1
3	KH-24-584-45-S	Module, Ignition	2	15	KH-25-086-157-S	Screw, Hex Flange Hi-Lo	2
4	759-3336	Spark Plug	2	16	KH-236602-S	Connector, Regulator-Rectifier	1
5	KH-M-545020-S	Screw, Module M5 x .8 x 20	4	17	KH-X-25-63	Washer, Plain 1/4"	1
6	KH-24-025-04	Flywheel Assembly	1	18	KH-235173	Clip, Cable	1
7	KH-X-42-15	Key	1	19	KH-12-154-01	Clamp, Insulated	1
8	KH-12-468-03	Washer, Flywheel Mtg. Screw	1	†	KH-24-176-08	Harness, Wire	1
9	KH-12-086-14	Screw, Flywheel Mtg, M10x1.5 x	1	†	KH-25-454-03-S	Tie, Wire	2
10	KH-24-157-16-S	Fan	1	†	KH-24-126-137-S	Bracket, Ground Strap	1
11	KH-25-086-47	Bolt, Shoulder	4	†	KH-25-452-01-S	Terminal	1
12	KH-54-755-15	Screen, Grass	1				


† Not Shown

STARTING SYSTEM

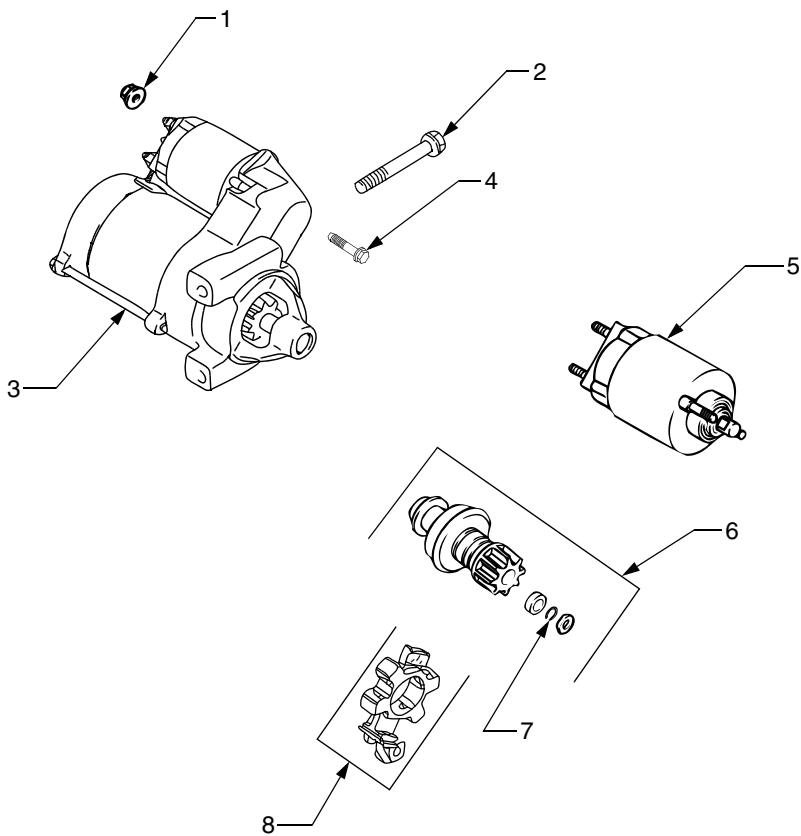


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-M-0841080	Nut, Hex Flange M8 x 1.25"	1
2	KH-M-851080-S	Screw, Hex Flange M8 x 1.25 x 80	2
3	KH-25-098-09-S	Starter, Solenoid Shift Assembly (Includes 4-8)	1
4	KH-25-435-06-S	Kit, Solenoid	1
5	KH-25-755-33-S	Kit, Pinion Drive (Includes 7)	1
6	KH-25-221-01-S	Kit, Brush	1
7	KH-25-141-05-S	Ring, Retainer	1
8	KH-25-086-113-S	Screw, External Torx Hd.	3

FUEL SYSTEM

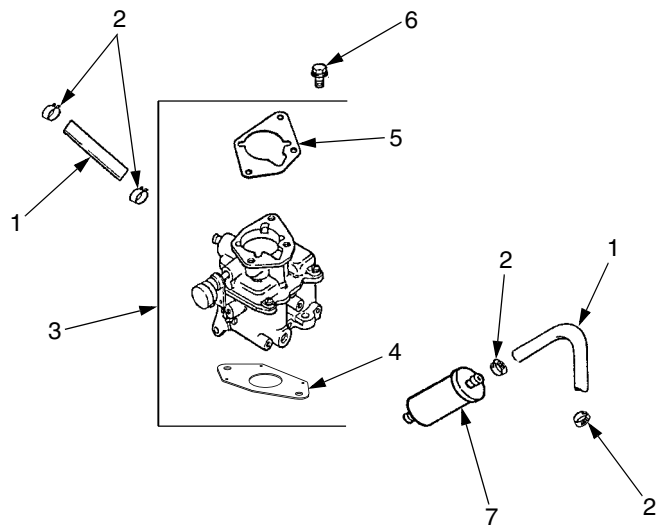


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-25-111-34-S	Line, Fuel (24" - cut to length)	2
2	KH-25-237-14-S	Clamp, Hose	4
3	KH-24-853-59-S	Kit, Carburetor w/Gasket	1
		(Includes 4-6)	
4	KH-24-041-53-S	Gasket, Carburetor	1
5	KH-24-041-06	Gasket, Air Cleaner Base	1
6	KH-25-086-124-S	Screw, Hex Flange	2
7	KH-24-050-13-S	Filter, Fuel	1
		Not Illustrated	
	KH-24-518-24-S	Lead, Ground	1
	KH-24-757-01	Kit, Solenoid	1
	KH-24-757-02-S	Kit, Float Repair	1
	KH-24-757-03-S	Kit, Carburetor Repair	1
	KH-24-757-07	Kit, Choke Repair	1
	KH-24-755-125-S	Kit, High Altitude	1

ENGINE CONTROLS

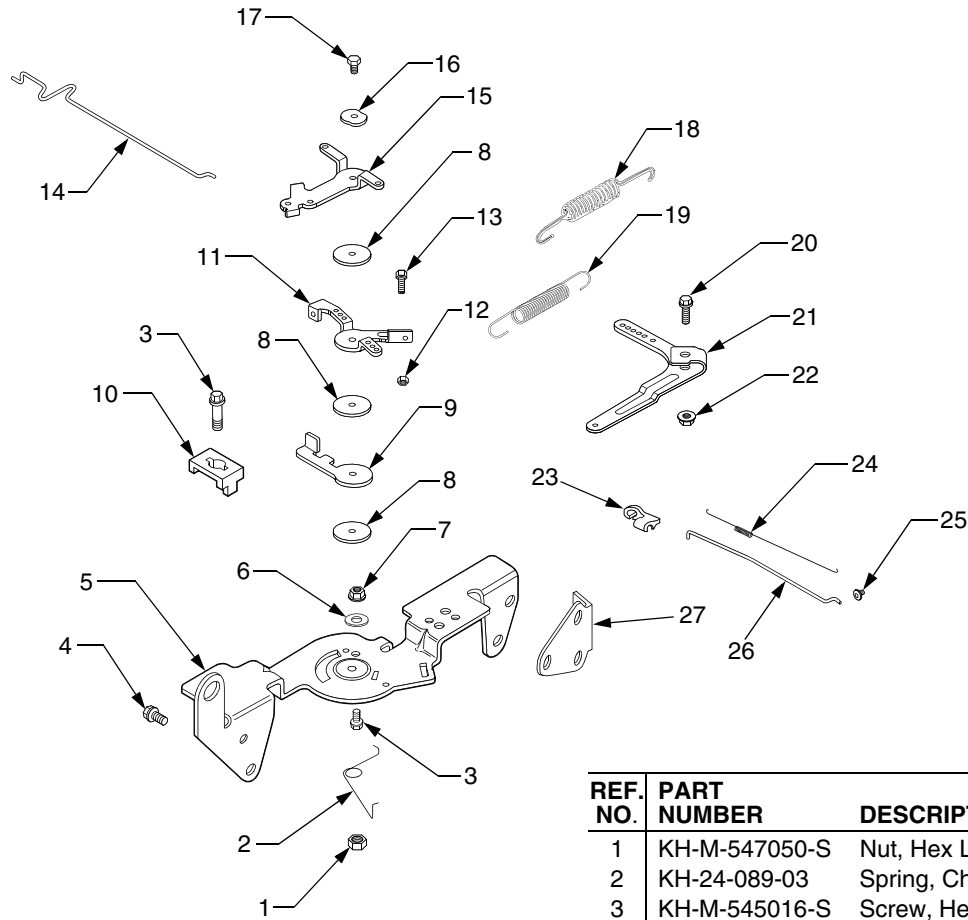


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-M-547050-S	Nut, Hex Lock M5 x 0.8	1
2	KH-24-089-03	Spring, Choke Return	1
3	KH-M-545016-S	Screw, Hex Flange M5 x 0.8 x 16	3
4	KH-M-645016-S	Screw, Hex Flange M6 x 1.0 x 16	4
5	KH-24-126-56	Bracket, Control	1
6	KH-X-20-1	Washer, Lock	1
7	KH-M-541050-S	Nut, Hex Flange	1
8	KH-24-468-01	Washer, Plain 5.5mm	3
9	KH-24-090-07	Lever, Throttle Actuator	1
10	KH-12-237-01	Clamp, Cable	2
11	KH-24-090-13	Lever, Throttle Control	1
12	KH-M-446030-S	Nut, Hex M4 x 0.7	1
13	KH-M-401030	Screw, Hex Cap M4 x 0.7 x30	1
14	KH-24-079-21-S	Linkage, Choke	1
15	KH-24-090-05	Lever, Choke	1
16	KH-41-468-03	Washer, Spring 1/4"	1
17	KH-M-545020-S	Screw, Hex Flange M5 x 0.8 x 20	1
18	KH-24-089-51-S	Spring, Throttle Limiter	1
19	KH-24-089-48-S	Spring, Governor	1
20	KH-24-211-03-S	Screw, Round Hd. Square Neck	1
21	KH-24-090-51-S	Lever, Governor	1
22	KH-M-641060-S	Nut, Hex Flange M6 x 1.0	1
23	KH-25-158-08	Bushing, Linkage Retaining	1
24	KH-24-089-01	Spring, Linkage	1
25	KH-25-158-11	Bushing, Linkage Retaining	1
26	KH-24-079-01	Linkage, Throttle	1
27	KH-24-126-04	Bracket	1

AIR INTAKE

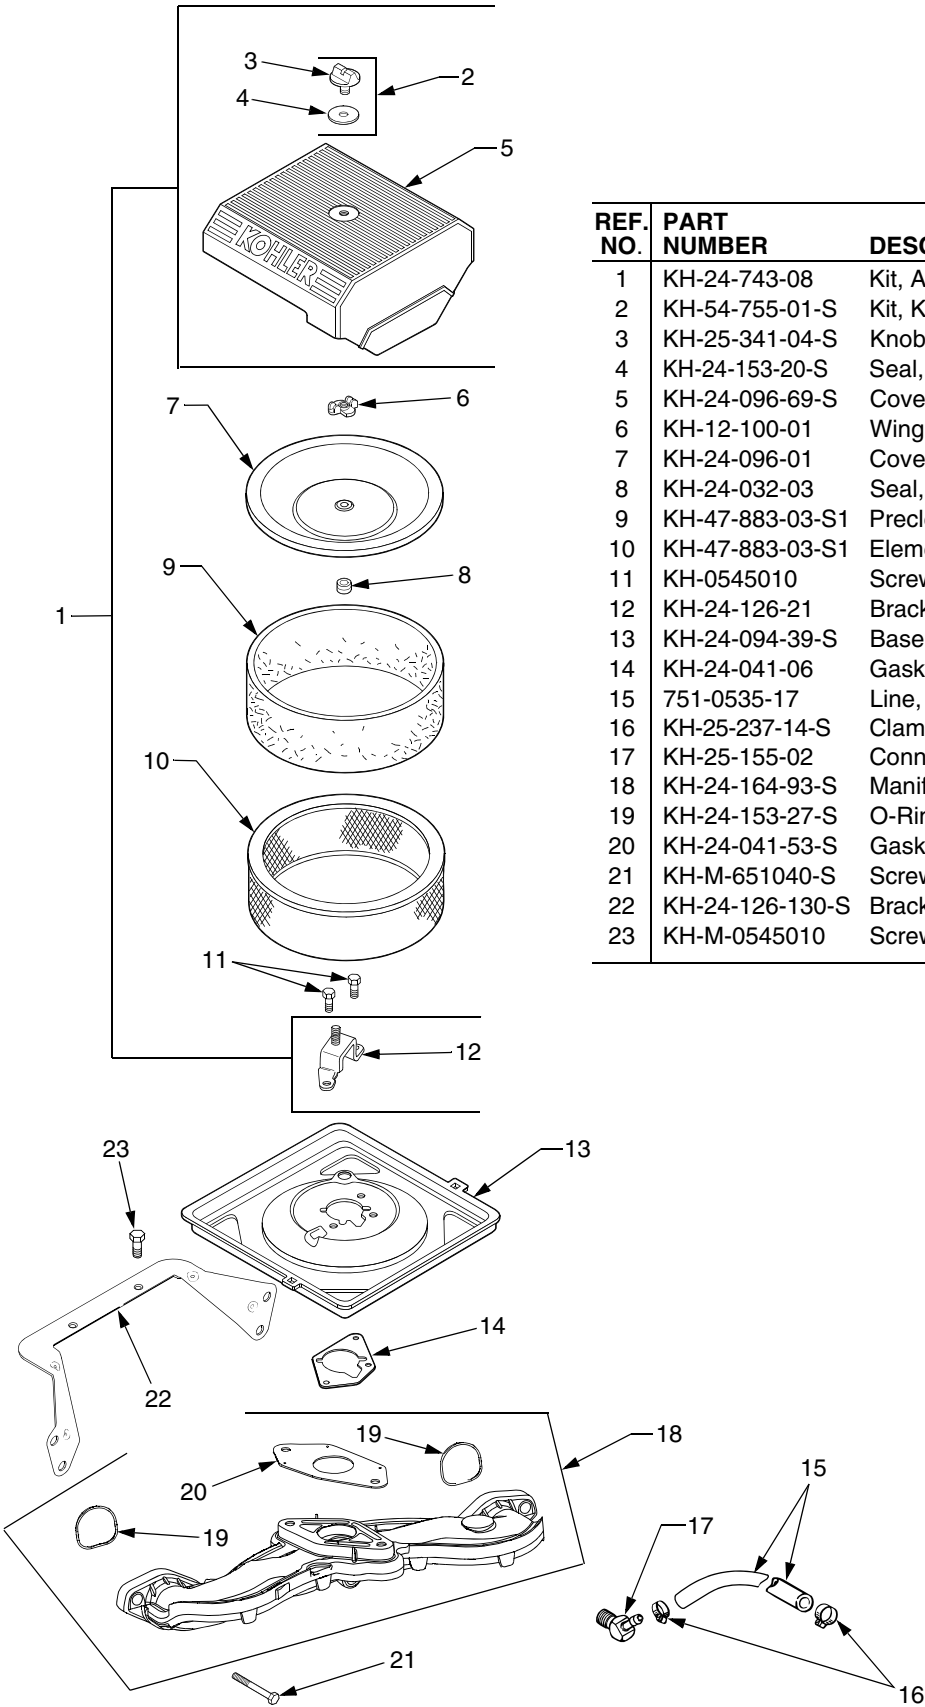


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	KH-24-743-08	Kit, Air Cleaner Cover (Incl 2-5, 12)	1
2	KH-54-755-01-S	Kit, Knob w/Seal (Incl. Ref #3,4)	1
3	KH-25-341-04-S	Knob, Cover	1
4	KH-24-153-20-S	Seal, Air Cleaner Cover Knob	1
5	KH-24-096-69-S	Cover, Air Cleaner	1
6	KH-12-100-01	Wing Nut	1
7	KH-24-096-01	Cover, Inner Air Cleaner	1
8	KH-24-032-03	Seal, Inner Air Cleaner	1
9	KH-47-883-03-S1	Precleaner, Element (Includes Ref. 10)	1
10	KH-47-883-03-S1	Element, Air Cleaner (Includes Ref. 9)	1
11	KH-0545010	Screw, Flnge Thrd Frmg, M5 x .8 10...	3
12	KH-24-126-21	Bracket, Air Cleaner Base	1
13	KH-24-094-39-S	Base, Air Cleaner	1
14	KH-24-041-06	Gasket, Air Cleaner Base	1
15	751-0535-17	Line, Fuel 17"	1
16	KH-25-237-14-S	Clamp, Hose	2
17	KH-25-155-02	Connector, Hose 45°	1
18	KH-24-164-93-S	Manifold, Intake (Includes 19,20)	1
19	KH-24-153-27-S	O-Ring, Intake Manifold	2
20	KH-24-041-53-S	Gasket, Carburetor	1
21	KH-M-651040-S	Screw, Hex Flange, M6 x 1.0 x 40	4
22	KH-24-126-130-S	Bracket, Air Cleaner Base	1
23	KH-M-0545010	Screw, Hex Flng, M5 x 0.8 x 10	2

DASH PANEL

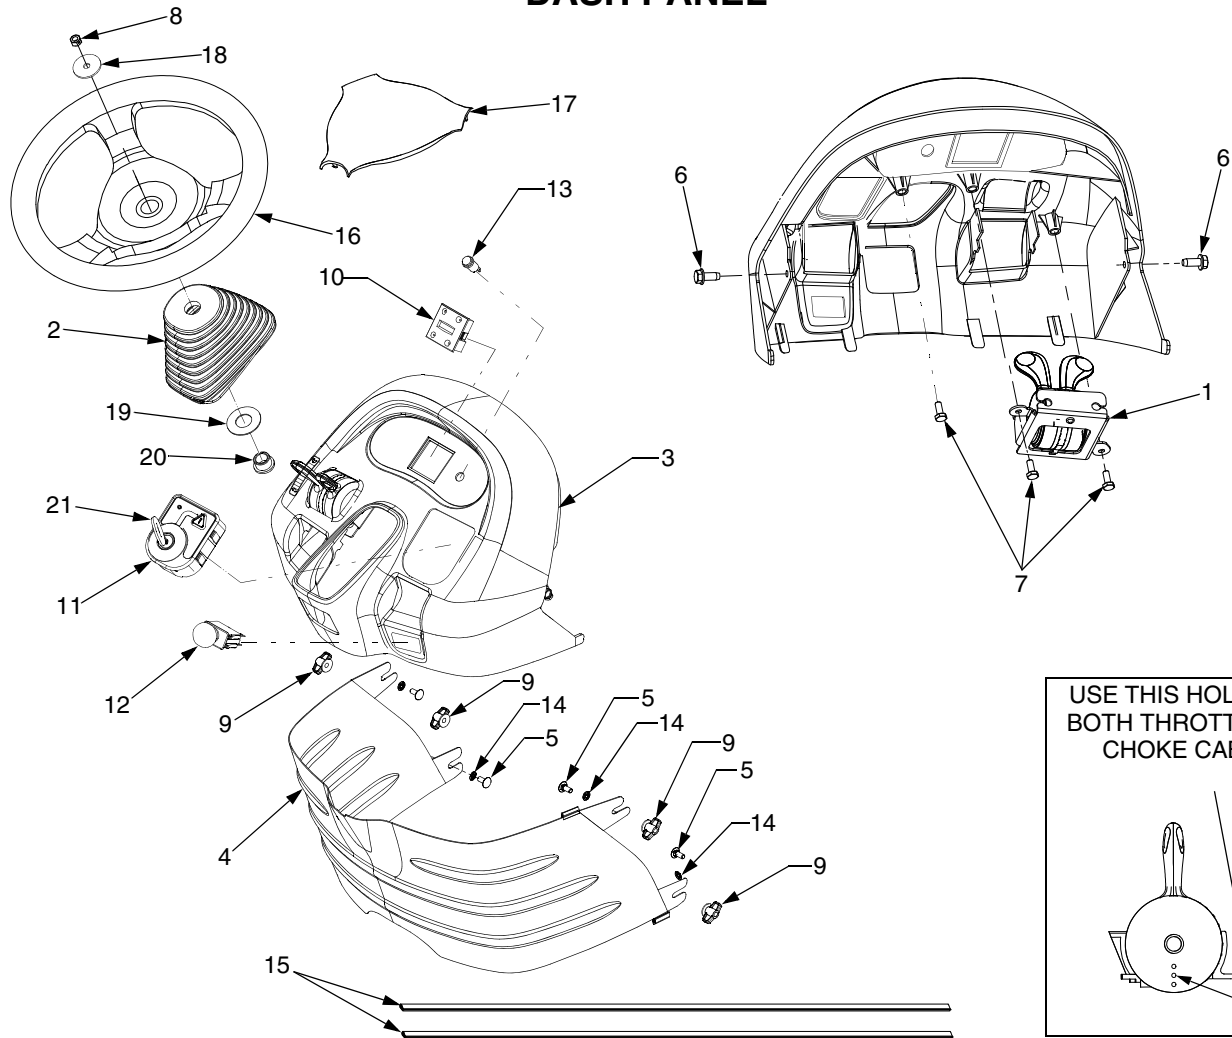


REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE DESCRIPTION	QTY.
1	603-0586	Control Ass'y, Throttle/Choke	1	10	725-4036C	Meter, Indicator / Hour	1
2	631-0076	Boot, Tilt Steer	1	11	725-04227B	Switch, Key/Module	1
3	631-04144	Dash Panel	1	12	725-04258	Switch, PTO	1
	777122466	Graphic, Monitor Light Cover	1	13	725-04288	Lamp, Yellow Fuel	1
4	703-3072	Screen, Dash	1	14	726-0233	Nut, Push	4
5	710-0134	Carriage Bolt, 1/4-20 x .62	4	15	731-0511-37	Seal, Screen (Cut to fit screen)	2
6	710-1260A	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75	2	16	731-3209	Steering Wheel	1
7	710-3013	Screw, Hex Cap 1/4-20 x .50 GR5	3	17	731-3210	Cover, Steering Wheel	1
8	712-0237	Nut, Hex Lock, 5/16-24	1	18	736-04062	Washer, Flat, .34 x 1.5 x .10	1
9	712-0397	Wing Nut, 1/4-20 w/Bell Washer	4	19	736-0514	Washer, Flat, .885 x 1.85 x .06	1
				20	748-0176	Bearing, Flange, .63ID x .62 Lg	1
				21	725-2054A	Key, Ignition	2

PEDESTAL AND CONNECTIONS

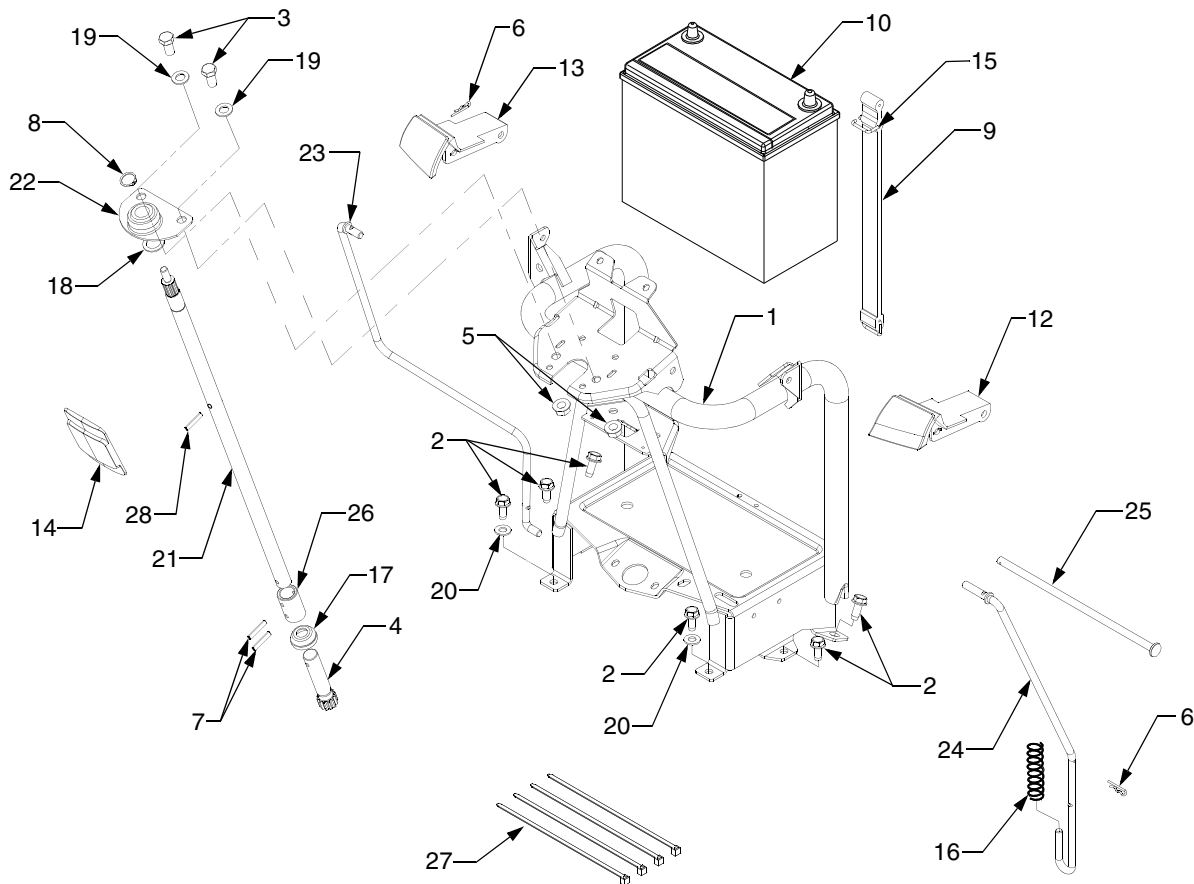


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-04248	0637	Pedestal Assembly	1	14	731-3323		Cover, Fixed Steering	1
2	710-1260A		Screw, Hex Wash. Hd. Tapp 5/16-18 x .75	6	15	732-0696		Hook, Wire Rectangular	2
3	710-0216		Screw, Hex Cap	2	16	732-0870		Spring, Compression, .676 x 2.57	1
4	711-1423		Shaft, Lower Steering	1	17	735-0269		Boot, Shaft Cover	1
5	712-0431		Nut, Hex Flange Lock, 3/8-16	2	18	736-0116		Washer, Flat, .635 x .93 x .06	1
6	714-0104		Pin, Internal Cotter	2	19	736-0185		Washer, Flat, .375 x .738 x .063	2
7	715-0120		Pin, Spirol, 3/16 x 1.0	2	20	736-0275		Washer, Flat, .344 x .688 x .065	2
8	716-0115		Ring, Retaining, .56 Dia Shaft	1	21	738-3177		Shaft, Upper Steering	1
9	723-0467		Strap, Battery (Incl. Ref No. 15)	1	22	741-3111		Bearing, Steering Support	1
10	925-3255		Battery	1	23	747-3327		Rod, Cruise Control	1
12	731-3225		Lever, Park Brake	1	24	747-3328		Rod, Parking Brake	1
13	731-3226		Lever, Cruise	1	25	747-3354		Rod, Cruise/Brake Pivot	1
					26	750-1229		Sleeve, Fixed Steering	1
					27	725-0157		Cable Tie, Harness	4
					28	715-0129		Pin, Spirol, 1/8 x .812	

SEAT ASSEMBLY

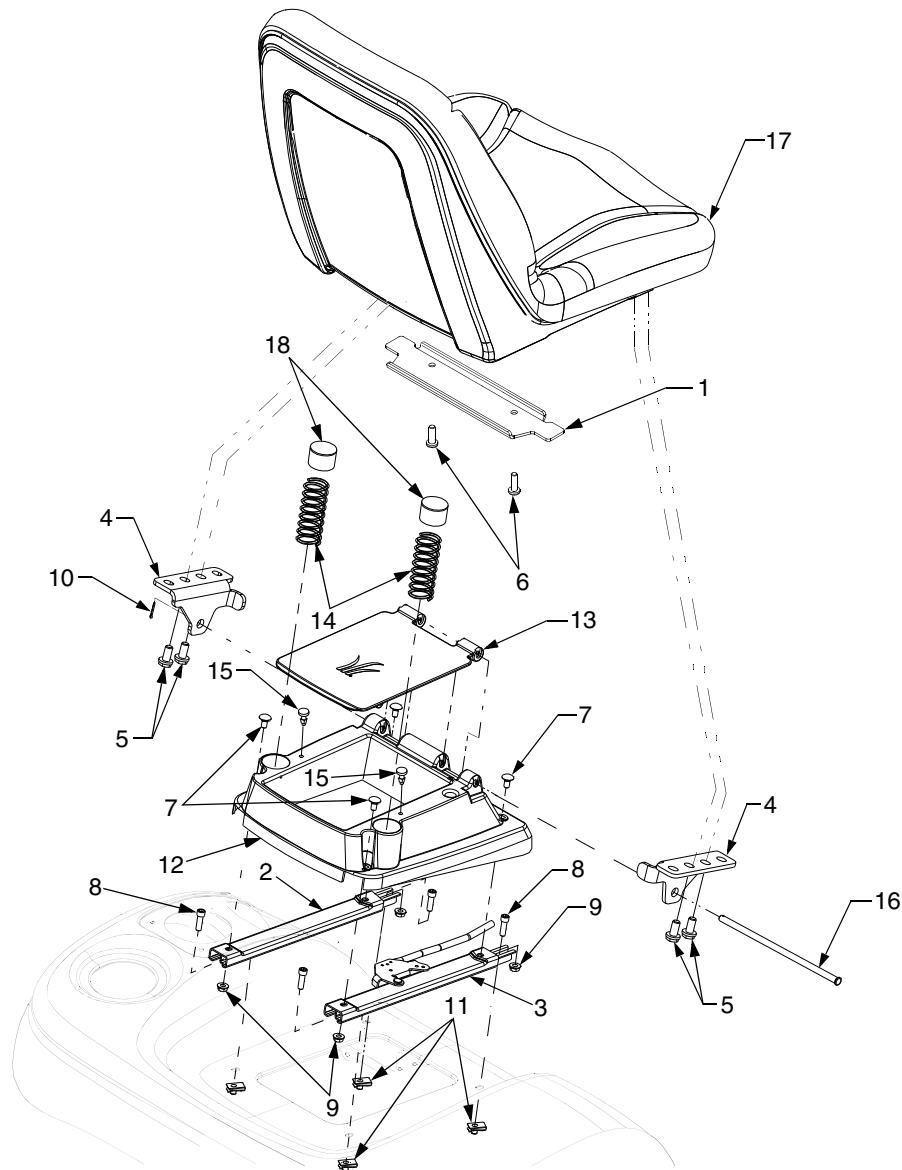

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	703-05121A	0637	Bracket, Seat Spring Support .	1	9	712-3004A		Nut, Hex Flange Lock, 5/16-18	4
2	703-3208		Track, Seat, w/o Latch	1	10	714-0507		Pin, Cotter, 3/32 x .75	1
3	703-3431		Track, Seat, w/Latch	1	11	726-0211		Speed Nut, U-Type, 5/16-18 ...	4
4	703-3888		Bracket, Seat	2	12	731-3240B		Base, Seat	1
5	710-0759		Screw, Hex Wash. Hd. 5/16-18 x .625	4	13	731-3244		Lid, Tlbox	1
6	710-0971		Screw, Phil Pan Hd. Mach 5/16-18 x 1.0	2	14	732-1163		Spring, Compression	2
7	710-1636		Carriage Bolt, 5/16-18 x .62	4	15	735-0271A		Bumper	2
8	710-1669		Screw, Pan Torx Hd. 5/16-18 x 1.0	4	16	747-3357A		Rod, Seat Pivot	1
					17	757- 04031		Seat, High Back	1
						777D09646		Graphic, USA	1
					18	731-05674		Cap, Spring	2


HOOD, GRILLE AND SIDE PANELS

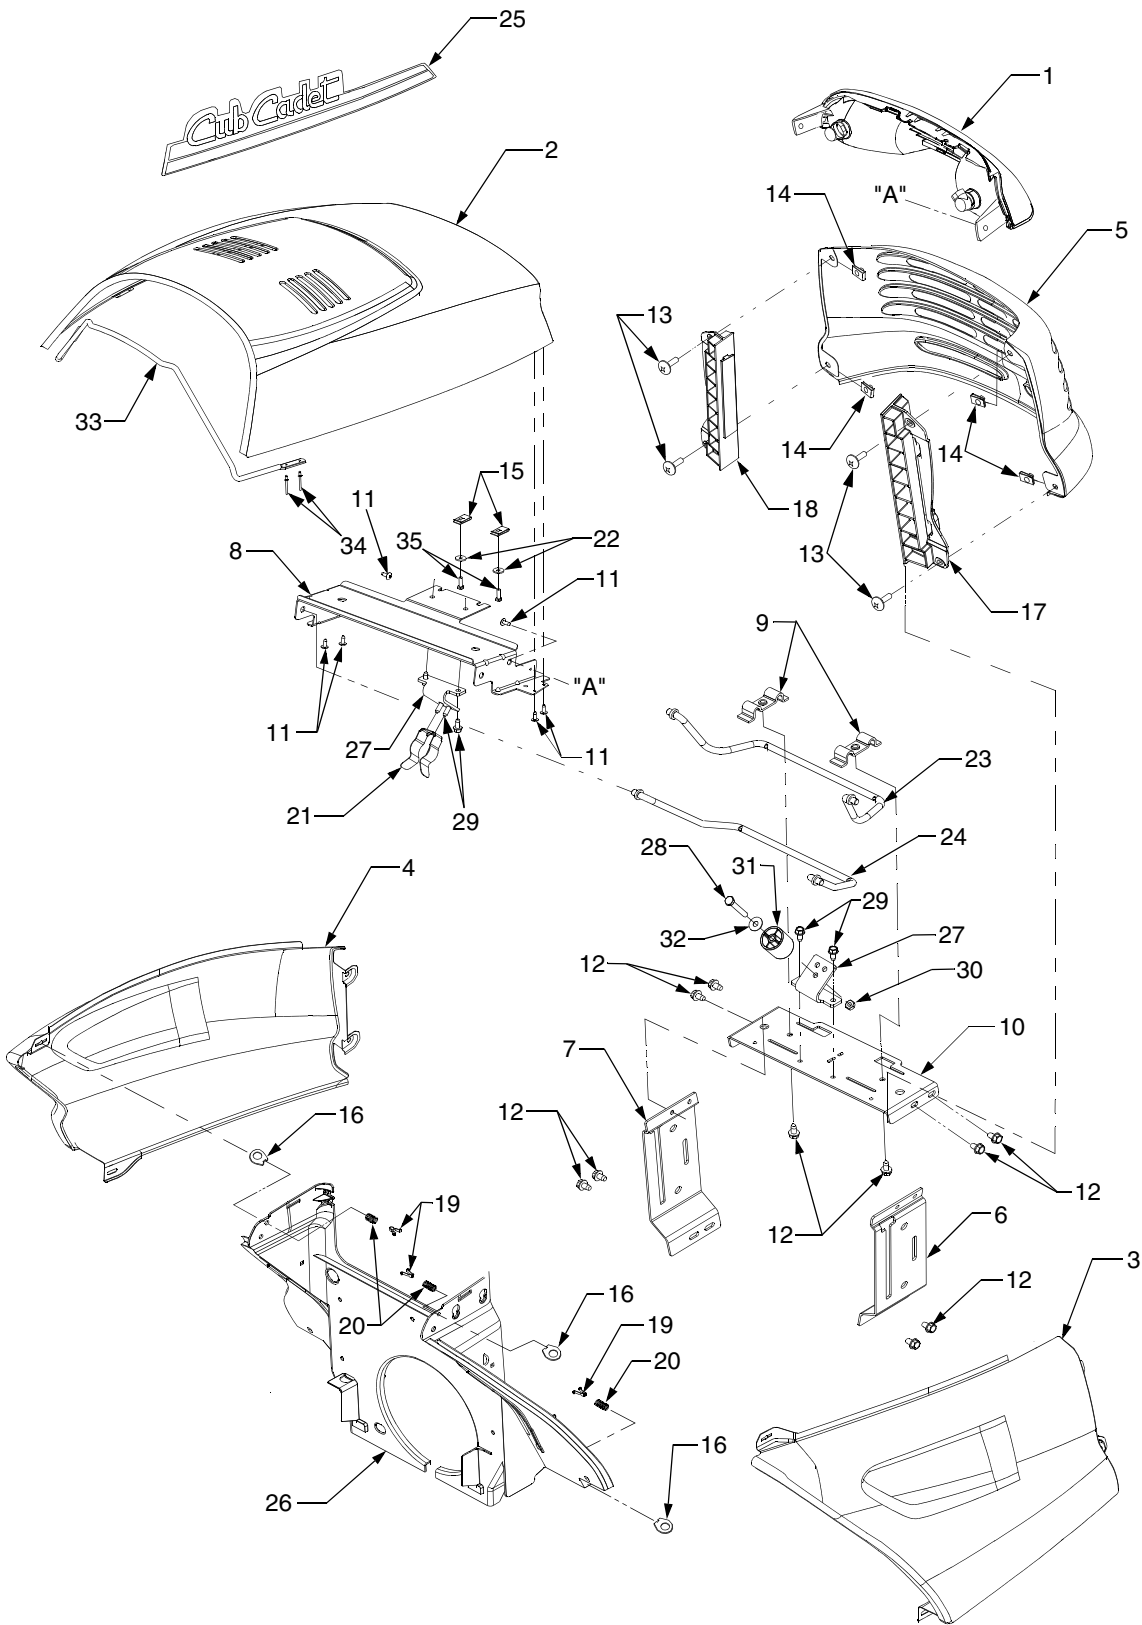

HOOD, GRILLE AND SIDE PANELS


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	625-04001A		Headlight Assembly	1
	725-0963		Bulb, Headlight	2
	725-1649		Socket Assembly, Headlight	2
2	703-05000A	0499	Hood	1
3	703-2946	0499	Side Panel, RH	1
	777D08868		Graphic, GT 3100	1
	777X41482		Graphic, Lift Hood	1
	777X40079		Strip, Protective	1
4	703-2947	0499	Side Panel, LH	1
	777D08868		Graphic, GT 3100	1
	777X41482		Graphic, Lift Hood	1
	777X40079		Strip, Protective	1
5	703-2950	0499	Grille, Series 3000	1
	777I20314		Graphic, Warning	1
6	703-2984	0716	Support, Grille - RH	1
7	703-2985	0716	Support, Grille - LH	1
8	703-3070B	0499	Bracket, Upper Hood	1
	777S30538		Graphic, Hot Surface	1
9	703-3071		Bracket, Rod Retainer	2
10	703-3101B	0716	Support, Hood	1
11	710-0351		Screw, Truss Hd, Tapp, #10-16 x .5	6
12	710-0607		Screw, Hex Wash. Hd. Tapp	10
			5/16-18 x .5	
13	710-0924		Screw, Phil. Pan Hd.	4
			1/4-20 x .75	
14	726-3054		Nut, U Type Speed, 1/4-20	4
15	726-0139		Nut, U-type Speed, #10	2
16	726-3056		Latch, 1/4 Turn	4
17	731-3227		Mount, Side Panel/Grille RH	1
18	731-3228		Mount, Side Panel/Grille LH	1
19	732-0936		Clip, Spring	4
20	732-0937		Spring, Compression	4
21	732-1178		Spring, Hood Latch	1
22	736-0400		Washer, Flat, .194 x .62 x .063	2
23	747-3478		Rod, Upper Hood	1
24	747-3338		Rod, Lower Hood	1
25	777D09725		Graphic, Hood - RH	1
	777D09724		Graphic, Hood - LH	1
26	731-3221A		Baffle, Lower Air	1
27	703-4088	0716	Bracket, Hood Latch Support	2
28	710-0136		Screw, Hex Cap, 1/4-20 x 1.75 GR5	1
29	710-1005		Screw, Hex Wash Hd Tapp,	6
			1/4-14 x .5	
30	712-3051		Nut, Hex Top Lock, 1/4-20	1
31	731-3232		Roller, Hood Latch	1
32	736-0342		Washer, Flat, .283 x .75 x .030	1
33	747-04085		Rod, Hood Support	1
34	728-0117		Rivet, Pop, .125 OD	4
35	710-0436		Screw, Hex Tapp, #10-16 x .625	2

FENDER AND RUNNING BOARD

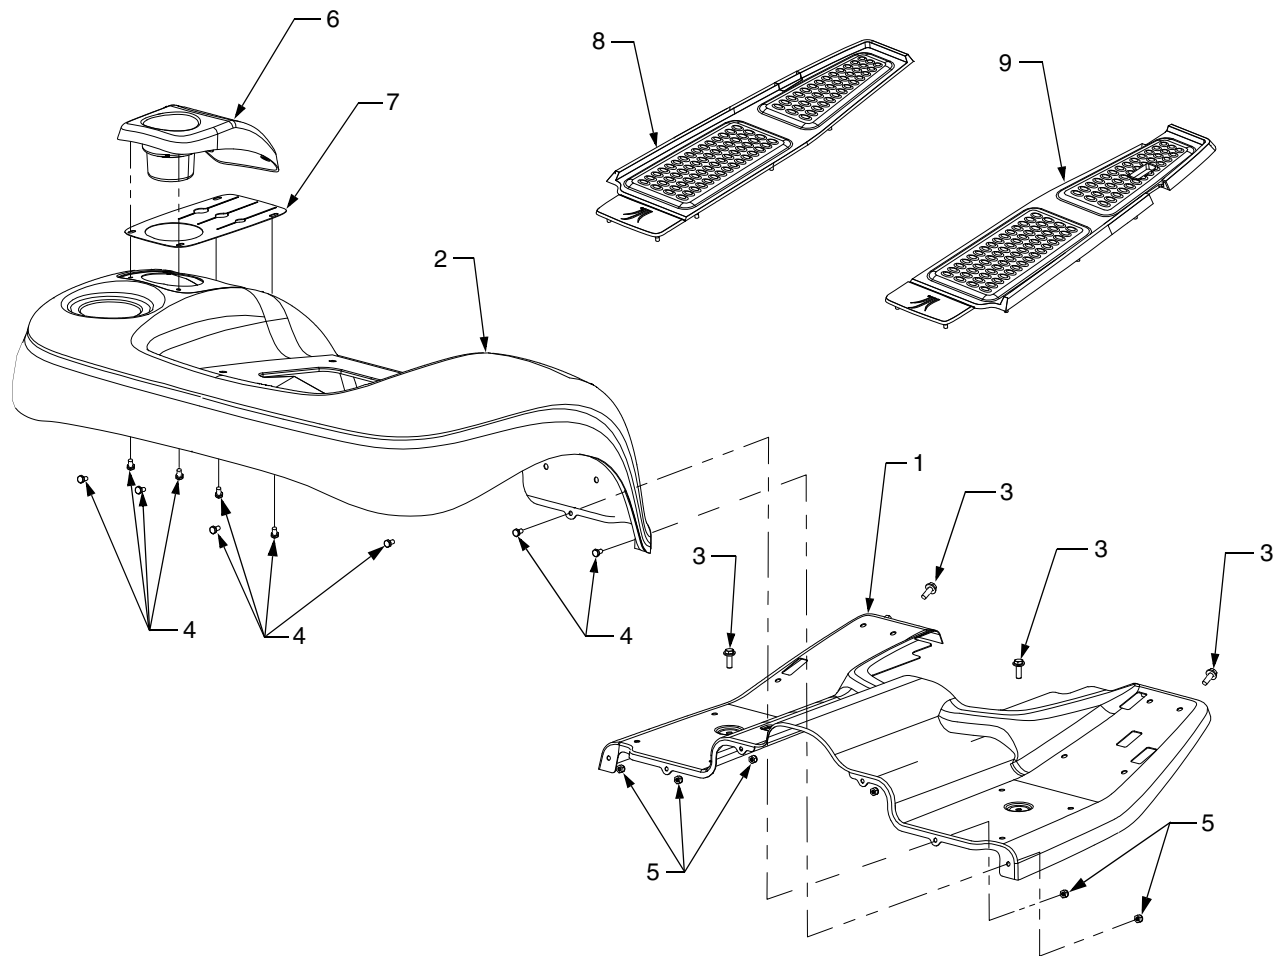


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	703-3622	0716	Running Board	1
	777S32517		Graphic, Danger Reverses Mow .	1
	777I22483		Graphic, Starting Instructions	1
	777I20859		Graphic, Height Adjustment	1
2	703-05571	0716	Fender	1
	777D07684		Graphic, 3000 Series	1
3	710-0602		Screw, Hex Wash. Hd. Tapp	4
			5/16-18 x 1.0	
4	710-3013		Screw, Hex Cap, 1/4-20 x .5 GR5	10
5	712-0324		Nut, Hex Lock, 1/4-20	6
6	731-3239		Cover, Lift Lever	1
7	731-3253		Flap, Lift Lever	1
8	735-0275		Pad. Floor LH	1
9	735-0276		Pad. Floor RH	1

FRONT PTO

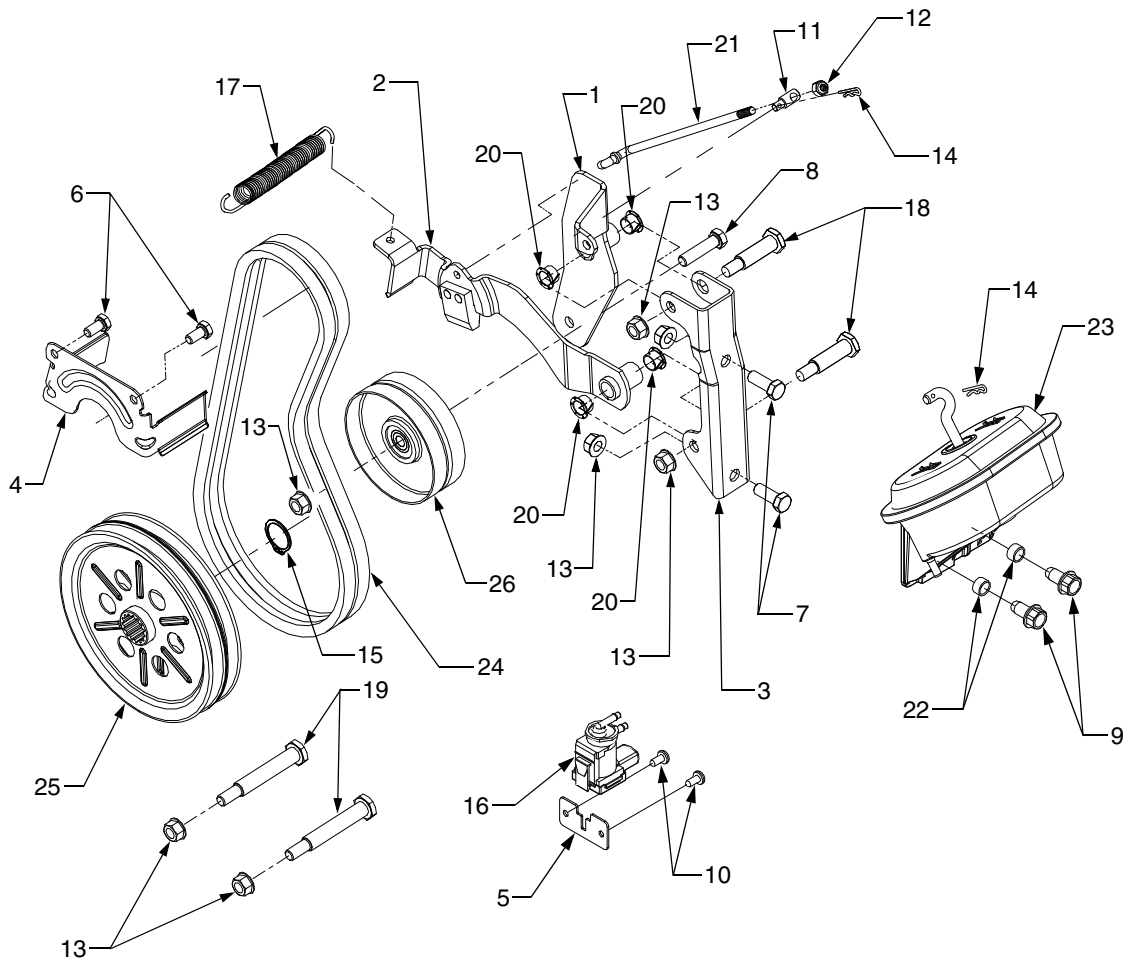


REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-0442	0637	Bracket, Idler	1	13	712-0431		Nut, Flange Lock, 3/8-16	7
2	759-3867		Bracket Assembly, Brake	1	14	714-0104		Pin, Internal Cotter	2
3	703-3009	0637	Bracket, PTO Mounting	1	15	716-0102		Snap Ring, 1.0 Dia Shaft	1
4	703-3165	0637	Belt Guide	1	16	725-3278		Solenoid, Vacuum Actuator	1
5	703-3812	0716	Bracket, Solenoid Mounting	1	17	732-0470A		Spring, Extension, .530 x 4.74 ...	1
6	710-0237		Screw, Hex Cap	2	18	738-0213		Shoulder Screw, .498 x 1.45	2
			5/16-24 x .625 GR5		19	738-3056		Shoulder Screw	2
7	710-0514		Screw, Hex Cap	2	20	741-0491		Bearing, Nylon Flange	4
			3/8-16 x 1.0 GR5		21	747-3322		Rod, PTO Brake	1
8	710-0520		Screw, Hex Cap	1	22	750-0526		Spacer, .380 x .5 x .265	2
			3/8-16 x 1.5 GR5		23	751-3173		Vacuum Actuator	1
9	710-0623		Screw, Hex Wash. Hd. Tapp	2	24	754-3084		V-Belt, A-Section x 37.63	1
			3/8-16 x .75					(Set of two belts)	
10	710-0748		Screw, Phil. Hd. Tapp	2	25	756-3092		Pulley, PTO Drive. 6.75-Double .	1
			#12-14 x .5		26	756-3094		Pulley, Flat Idler, 4.0	1
11	711-1196		Ferrule, Brake Adjustment	1					
12	712-0324		Nut, Hex Insert Lock, 1/4-20	1					

FRAME AND HITCH PLATE

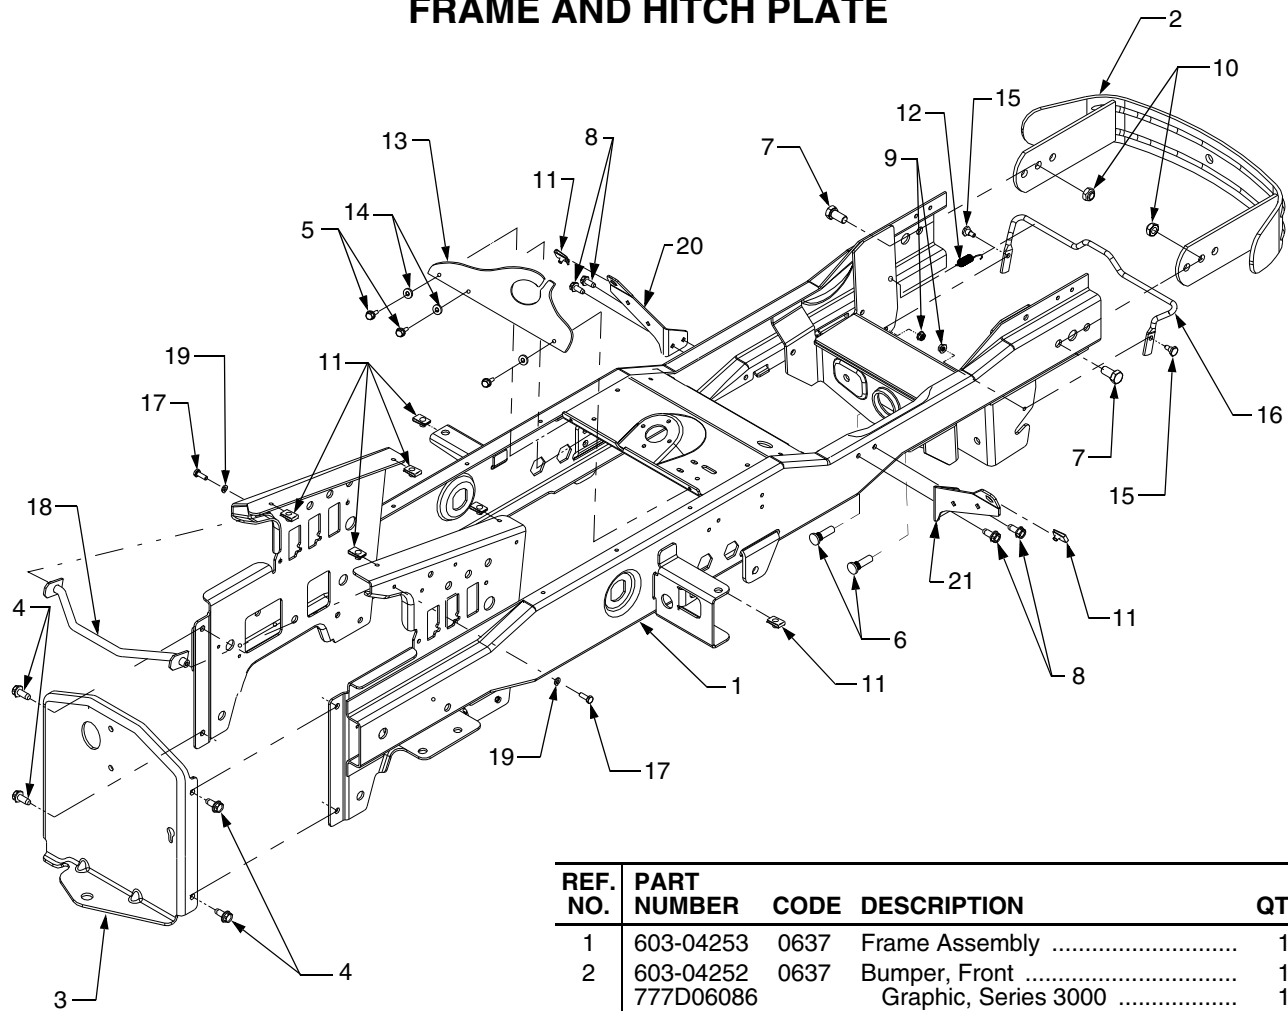

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	603-04253	0637	Frame Assembly	1
2	603-04252	0637	Bumper, Front	1
	777D06086		Graphic, Series 3000	1
3	703-3546	0716	Hitch Plate	1
	777I20773		Graphic, Trans. Release	1
	777S30265		Graphic, Trans. Oil	1
4	710-0623		Screw, Hex Wash. Hd. Tapp	4
			3/8-16 x .75	
5	710-0599		Screw, Hex Wash. Hd. Tapp	3
			1/4-20 x .5	
6	710-0617		Screw, Round Hd., 3/8-24	2
7	710-3131		Screw, Hex Cap	2
			1/2-13 x 1.0 GR5	
8	710-1260A		Screw, Hex Wash. Hd. Tapp	4
			5/16-18 x .75	
9	712-3027		Nut, Hex Flange Lock, 1/4-20	2
10	712-3083		Nut, Hex Lock, 1/2-13	2
11	726-0211		Speed Nut, U-Type, 5/16-18	8
12	732-3002		Spring, Extension	1
13	735-0653		Flap, Intk.	1
14	736-0342		Washer, Flat, .283 x .75 x .030	3
15	738-0704		Shoulder Screw, .312 x .18	2
16	747-3336		Rod, Front Latch	1
17	710-3015		Screw, Hex Cap, 1/4-20 x .75 GR5	2
18	647-04010		Shaft, Tank Constraint	1
19	736-0329		Washer, Lock, 1/4	2
20	703-3417	0716	Bracket, Running Board LH	1
21	703-3418	0716	Bracket, Running Board RH	1


FUEL TANK

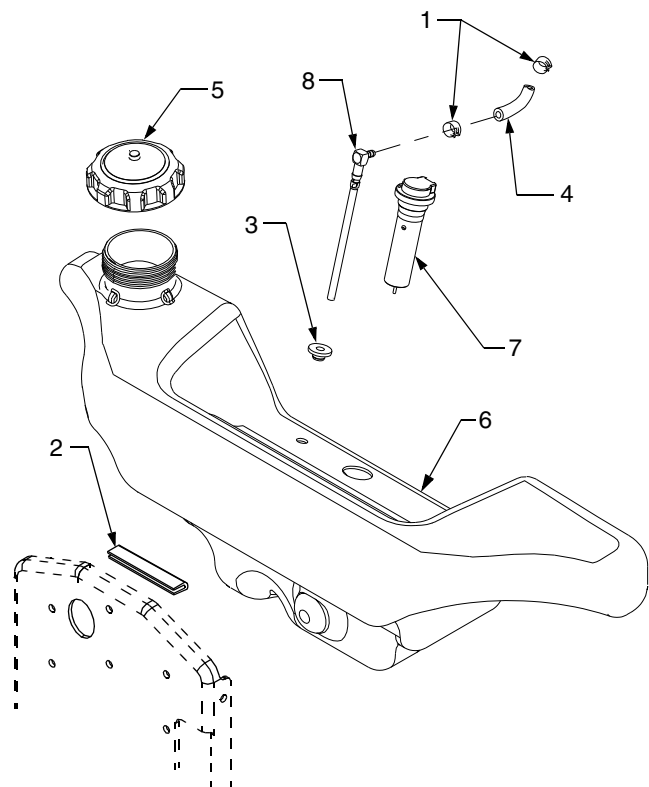

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	726-0205	Clamp, Hose	2
2	731-3268	Trim, Tank Protector	4 in.
3	735-0149	Bushing, Rubber	1
4	751-10349-54	Fuel Line	54 in.
5	751-3124B	Cap, Fuel	1
6	651-3002A	Tank Assembly, Fuel, Includes Ref. Nos. 3,5,7 and 8	1
7	751-3161	Sensor, Low Fuel	1
	751-3146	Grommet	1
8	751-3162A	Fitting, Fuel Pickup	1

FRONT WHEELS

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	734-3053	0499	Rim Assembly, Wheel	2
2	734-3187A		Tire, Turf, 16 x 6.5 x 8.0	2
3	737-0224		Lube Fitting	2
4	741-3002		Bearing, Ball	4
5	710-3126		Screw, Hex Cap, 1/2-13 x 1.0 GR5	2
6	731-3020		Hubcap	2
7	734-0255		Valve, Tubeless Air	2
8	736-0179		Washer, Flat, .531 x 1.25 x .1	4
9	736-3095		Washer, Flat, .535 x 1.92 x .060	2

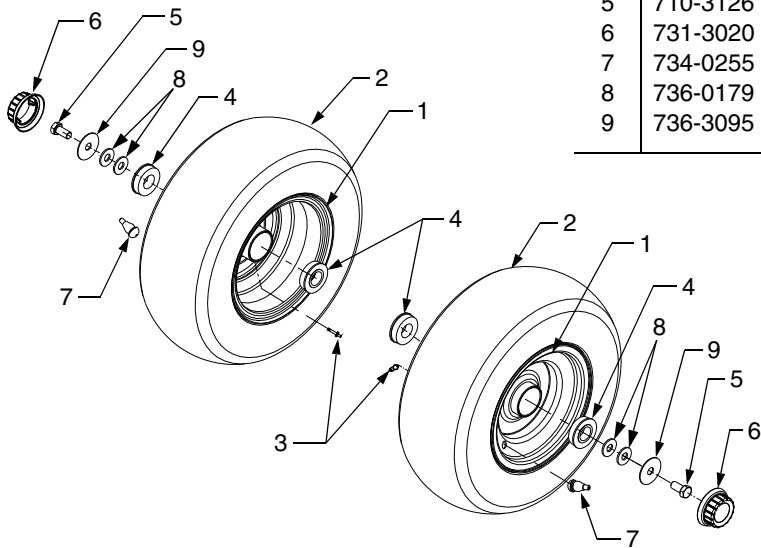

REAR WHEELS

REF. NO.	PART NUMBER	CODE	DESCRIPTION	QTY.
1	734-3190A		Tire, Turf, 23 x 9.5 - 12	2
2	634-3189	0499	Rim Assembly, Wheel	2
3	734-0255		Valve, Tubeless Air	2
4	712-3050		Lug Nut, 7/16-14	8

