


---

# ***Cub Cadet®***

## **ILLUSTRATED PARTS MANUAL**

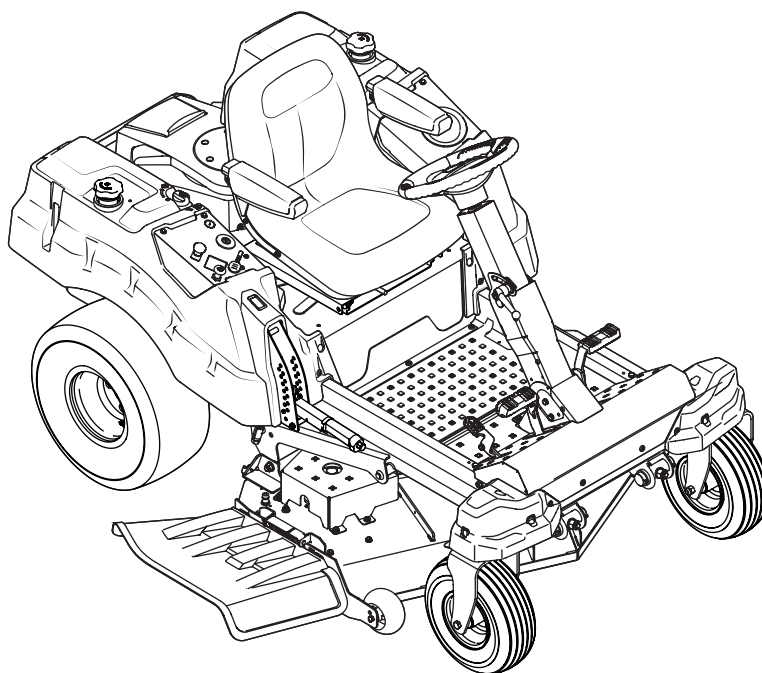

### **ZForce-SZ 54-inch Cutting Deck**

---

**CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019**

---

# To The Owner

## Thank You

Thank you for purchasing a Cub Cadet Zero-Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

## Table of Contents

|                                          |                    |                                                            |                    |
|------------------------------------------|--------------------|------------------------------------------------------------|--------------------|
| <a href="#">Drive System .....</a>       | <a href="#">4</a>  | <a href="#">Steering Column &amp; Pedal Controls .....</a> | <a href="#">16</a> |
| <a href="#">Deck Lift .....</a>          | <a href="#">6</a>  | <a href="#">Steering Linkage.....</a>                      | <a href="#">18</a> |
| <a href="#">Seat Adjustment.....</a>     | <a href="#">8</a>  | <a href="#">54" Deck .....</a>                             | <a href="#">20</a> |
| <a href="#">Frame .....</a>              | <a href="#">9</a>  | <a href="#">Wiring Harness Schematic - 725-06074A.....</a> | <a href="#">22</a> |
| <a href="#">Operator's Platform.....</a> | <a href="#">10</a> | <a href="#">Labels .....</a>                               | <a href="#">23</a> |
| <a href="#">Fuel Tank .....</a>          | <a href="#">12</a> | <a href="#">RH Transmission 618-05126.....</a>             | <a href="#">26</a> |
| <a href="#">Electrical.....</a>          | <a href="#">13</a> | <a href="#">LH Transmission 618-05127A.....</a>            | <a href="#">28</a> |
| <a href="#">Engine Accessories .....</a> | <a href="#">14</a> | <a href="#">Kohler KT740-3017 .....</a>                    | <a href="#">30</a> |
| <a href="#">Front Axle.....</a>          | <a href="#">15</a> |                                                            |                    |

## Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

### MODEL NUMBER

|  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|

### SERIAL NUMBER

|  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|
|  |  |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|--|

## Painted Parts



When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

|      |                    |
|------|--------------------|
| 0637 | Black              |
| 4021 | Yellow (Cub Cadet) |
| 0499 | Beige (Cub Cadet)  |

|      |                                   |
|------|-----------------------------------|
| 0685 | Blue (Cub Cadet)                  |
| 0691 | Black Jack (Cub Cadet Commercial) |

**This page left intentionally blank.**


# Drive System

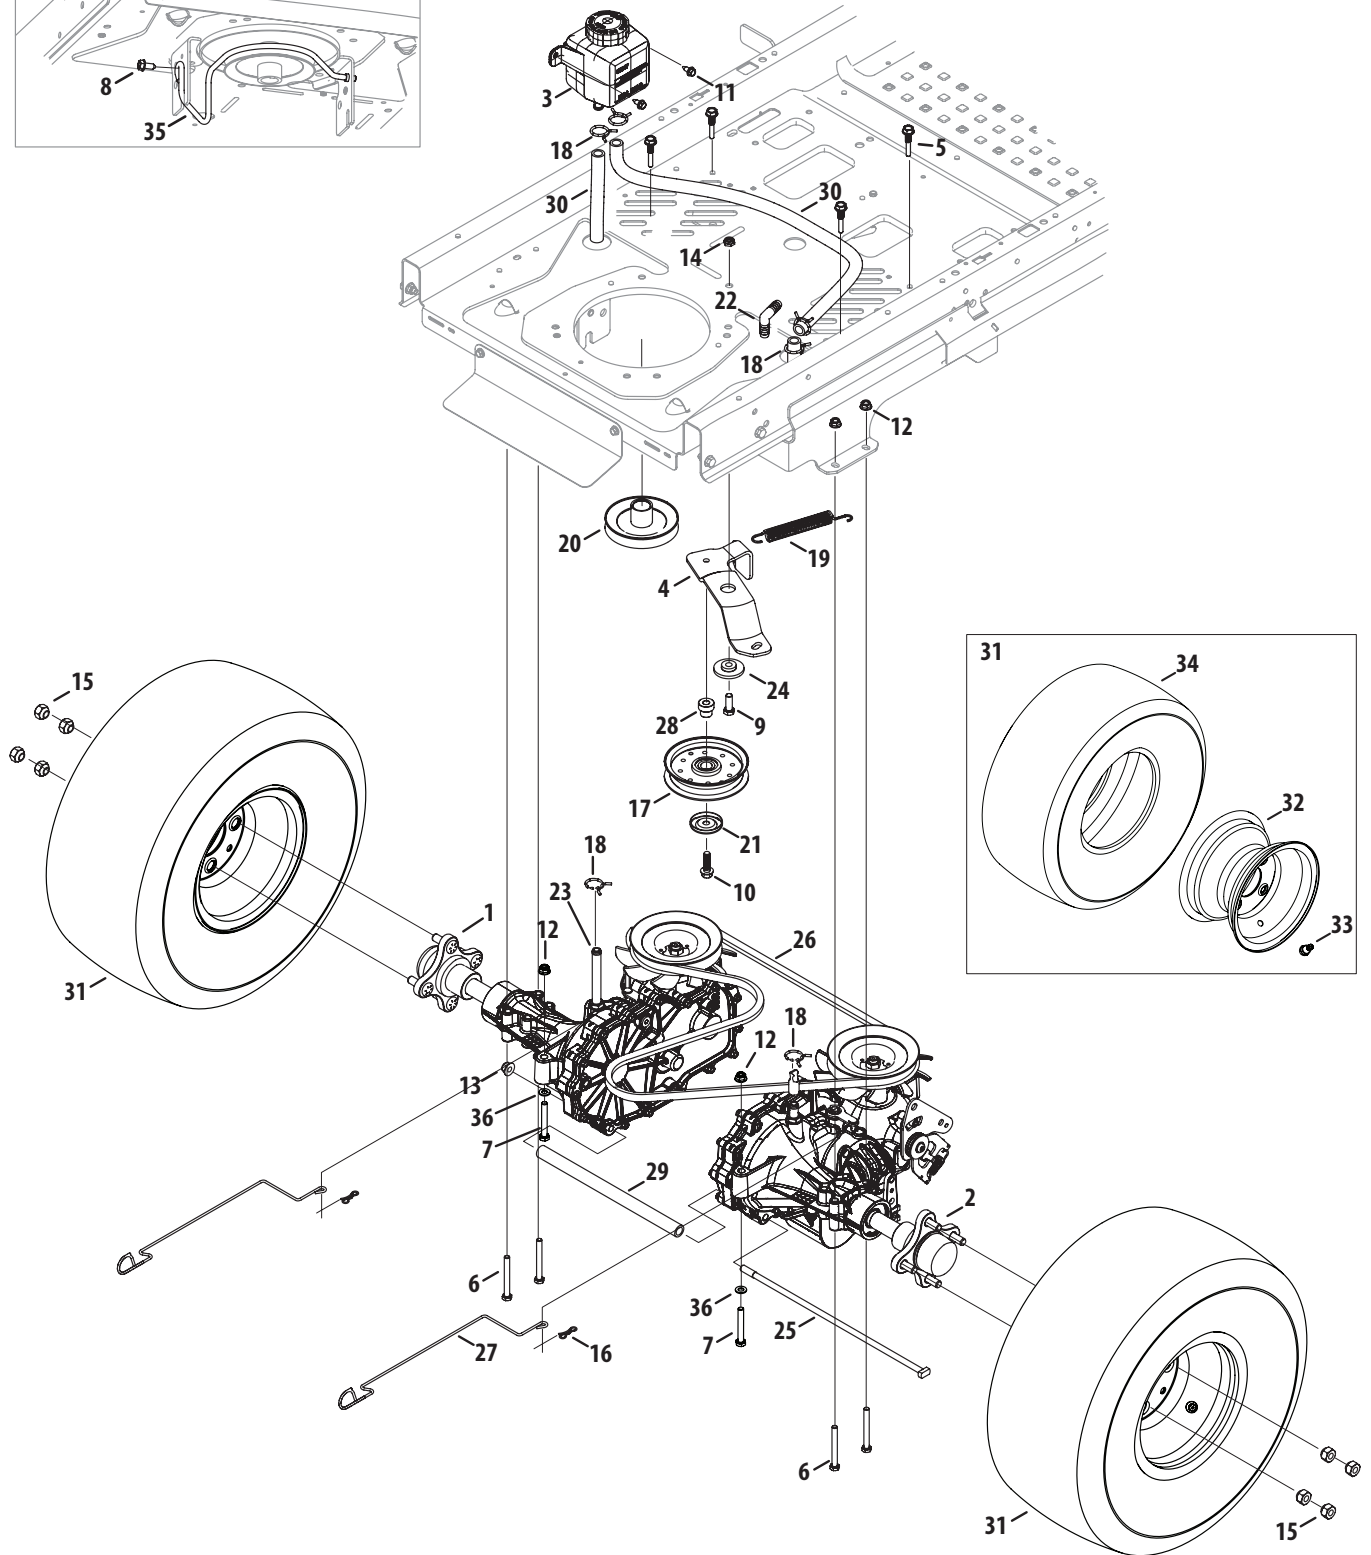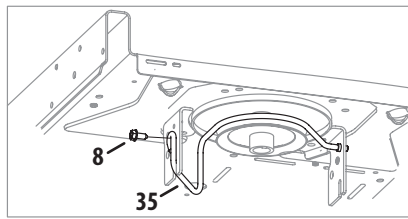



| Ref. | Part Number    | Description                       |
|------|----------------|-----------------------------------|
| 1    | 918-05127A     | Transmission Assembly, LH         |
| 2    | 918-05126      | Transmission Assembly, RH         |
| 3    | 631-04286      | Expansion Tank Assembly           |
| 4    | 703-08605      | Idler Bracket                     |
| 5    | 711-06112      | Keeper Rod, .25 x 1.535           |
| 6    | 710-0176       | Hex Screw, 5/16-18 x 2.75         |
| 7    | 710-0395       | Hex Cap Screw, 5/16-18 x 2.25     |
| 8    | 710-04484      | Hex Washer Screw, 5/16-18 x .750  |
| 9    | 710-0514       | Hex Screw, 3/8-16 x 1.00          |
| 10   | 710-1315       | Hex Washer Screw, 3/8-16 x 1.250  |
| 11   | 710-1652       | Hex Washer Screw, 1/4-20 x .625   |
| 12   | 712-04063      | Flange Lock Nut, 5/16-18          |
| 13   | 712-04065      | Flange Lock Nut, 3/8-16           |
| 14   | 912-3020       | Jam Lock Nut, 3/8-16              |
| 15   | 712-3050       | Lug Nut, 7/16-14                  |
| 16   | 714-04040      | Bow-Tie Cotter Pin                |
| 17   | 756-05042      | Idler Pulley, 4.25 Dia.           |
| 18   | 726-05015      | Hose Clamp, .75 Dia. x .312       |
| 19   | 732-04229      | Extension Spring, .75 Dia. x 6.02 |
| 20   | 756-04494      | Engine Pulley                     |
| 21   | 783-08389      | Pulley Cap                        |
| 22   | 737-04342      | Elbow, 90                         |
| 23   | 737-05023      | Fitting, 9/16, Barb               |
| 24   | 738-04162C     | Shoulder Spacer, .884 x .190      |
| 25   | 738-04251A     | Rod, .337 Dia. x 14.75 LG         |
| 26   | 954-04317A     | Belt, A-Type x 67.0               |
| 27   | 747-05657A     | Bypass Rod                        |
| 28   | 748-05029A     | Shoulder Spacer                   |
| 29   | 750-06147A     | Spacer, .75 OD x 11.31 LG         |
| 30   | 751-14485-32   | Fuel Hose, 1/2 ID                 |
| 31   | N/A            | Complete Wheel, 20 x 10-8         |
| 32   | 934-0246A-0499 | Rim Only                          |
| 33   | 934-0255       | Valve Tubeless                    |
| 34   | 734-1873-0901  | Tire Only                         |
| 35   | 747-06044      | Engine Keeper Rod                 |
| 36   | 932-0264       | Flat Washer .330 ID x .630 OD     |


# Deck Lift

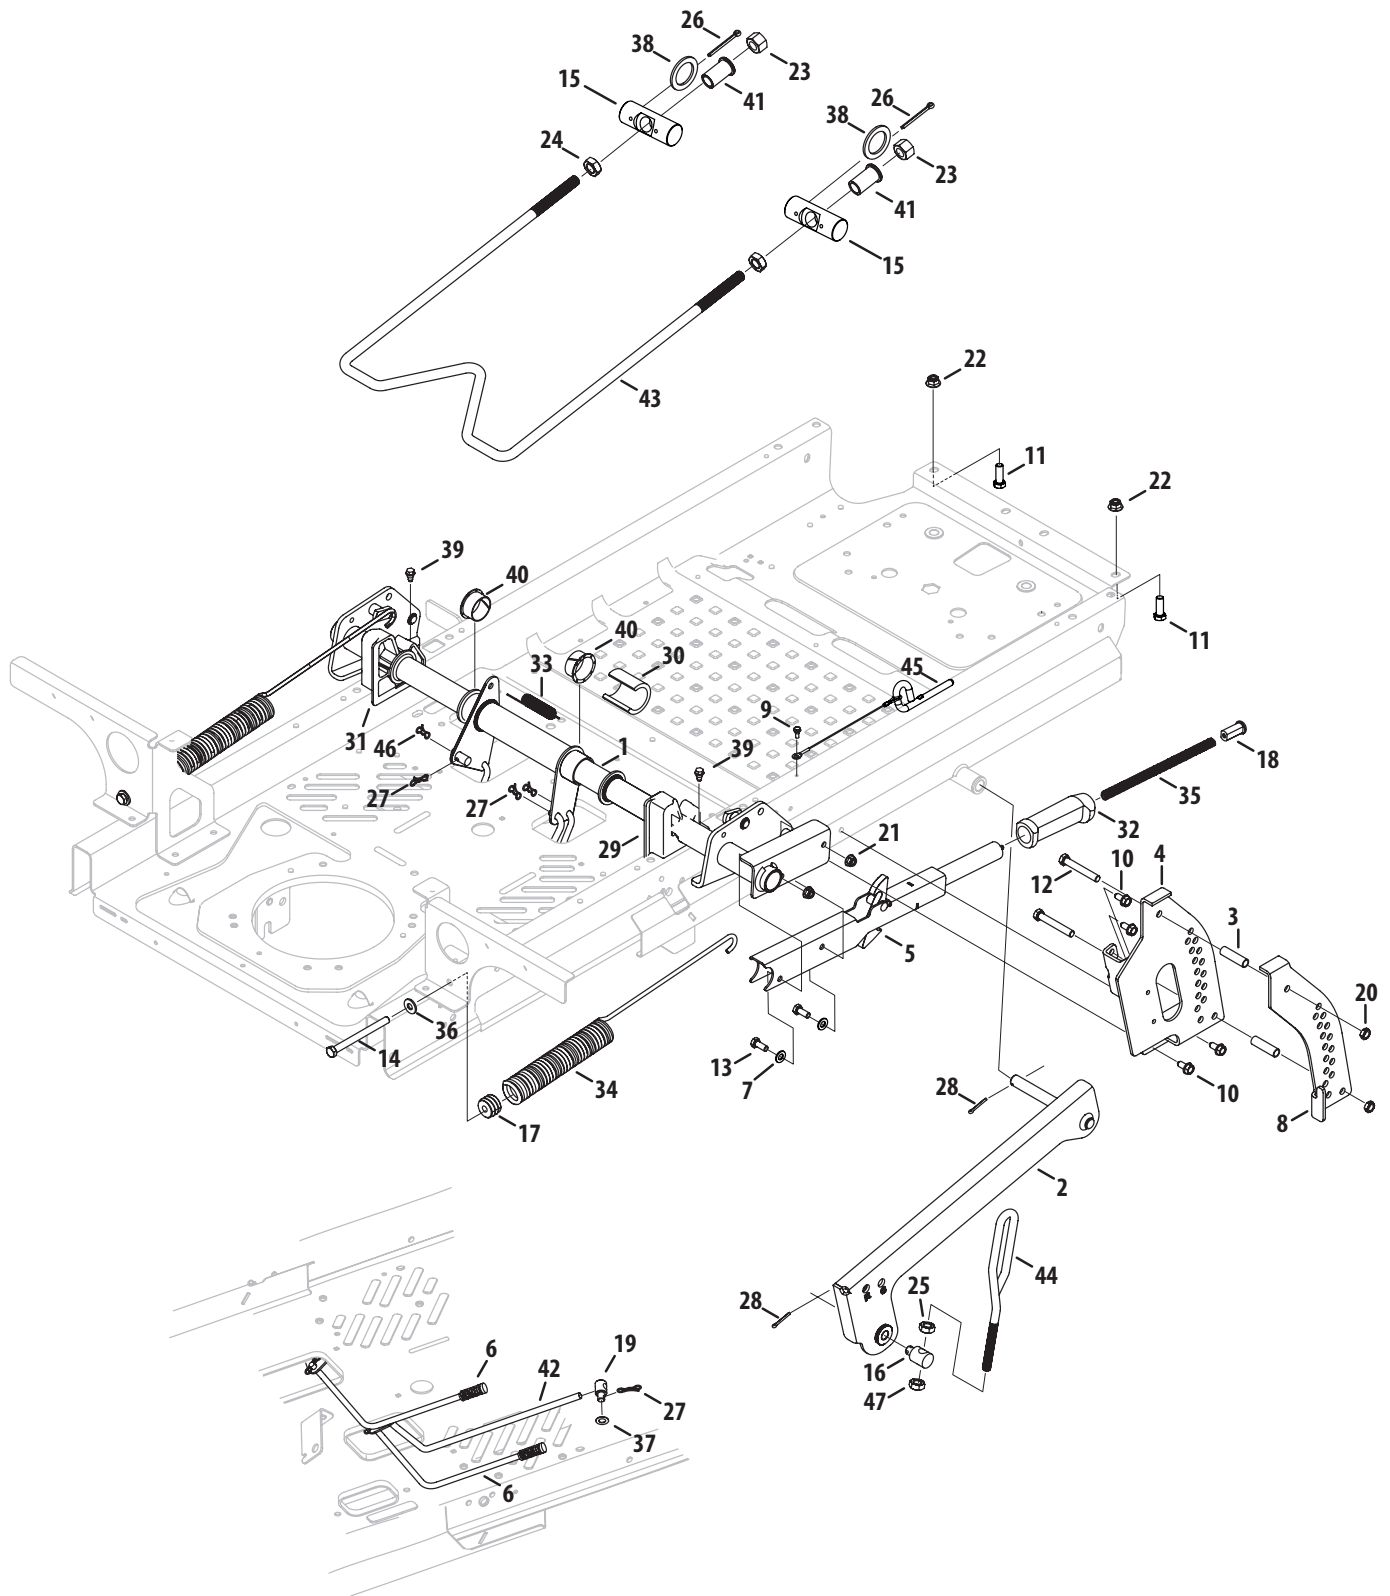


| Ref | Part Number | Description                      |
|-----|-------------|----------------------------------|
| 1   | 603-04973   | Deck Lift Shift Assembly         |
| 2   | 603-05086A  | Lift Arm, RH                     |
|     | 603-05087A  | Lift Arm, LH                     |
| 3   | 750-06031   | Spacer, .386 x .63 x 1.75        |
| 4   | 603-05208   | Index Bracket Assembly           |
| 5   | 903-05143A  | Latch Handle Assembly            |
| 6   | 647-05027   | Brake Rod Assembly               |
| 7   | 932-0264    | Flat Washer .330 ID x .630 OD    |
| 8   | 703-09936   | Outer Index Bracket              |
| 9   | 910-0224    | Screw, #10-16, .50               |
| 10  | 710-04484   | Hex Washer Screw, 5/16-18 x .750 |
| 11  | 710-0514    | Hex Screw, 3/8-16 x 1.00         |
| 12  | 710-0859    | Hex Head Screw, 3/8-16 x 2.50    |
| 13  | 710-3008    | Hex Cap Screw, 5/16-18 x .75     |
| 14  | 710-3279    | Hex Screw, 3/8-16 x 4.25         |
| 15  | 711-06216A  | Pivot Pin, 1.25                  |
| 16  | 711-06284   | Ferrule, .496 x .528             |
| 17  | 711-0635    | Spring Insert                    |
| 18  | 711-0642A   | Handle Button                    |
| 19  | 911-0832    | Ferrule, 3/8-24 x .375           |
| 20  | 712-0266A   | Jam Lock Nut, 3/8-16             |
| 21  | 712-04063   | Flange Lock Nut, 5/16-18         |
| 22  | 712-04217   | Flange Lock Nut, 3/8-16          |
| 23  | 712-05045A  | Nylock Nut, 5/8-11               |

| Ref | Part Number | Description                          |
|-----|-------------|--------------------------------------|
| 24  | 912-3015    | Jam Nut, 5/8-11                      |
| 25  | 912-3048    | Nut, Jam, 1/2-13                     |
| 26  | 714-0211    | Cotter Pin, 3/16 x 2.0               |
| 27  | 714-04040   | Bow-Tie Cotter Pin                   |
| 28  | 914-0470    | Cotter Pin 1/8 x 1.25                |
| 29  | 731-09683   | Deck Lift Bracket                    |
| 30  | 731-09687   | Spacer, 1.375 Shaft                  |
| 31  | 731-09707   | Deck Lift Bracket, LH                |
| 32  | 731-3158    | Grip, Deck Lift Handle               |
| 33  | 732-04587   | Extension Spring, .63 Dia. x 4.95 LG |
| 34  | 732-05096   | Extension Spring, 1.485 OD x 17.58   |
| 35  | 732-3097    | Spring, Compression, .4 x 8.52       |
| 36  | 736-0262    | Flat Washer, .385 x .870 x .092      |
| 37  | 936-0314    | Washer, .375 x .700 x .030           |
| 38  | 736-05070   | Flat Washer, 1.875 x 1.38 x .097     |
| 39  | 738-04278   | Shoulder Screw, .500 x 1/4-20        |
| 40  | 741-05059   | Flange Bearing, 1.38 x 1.75 x .50    |
| 41  | 741-05075A  | Flange Bearing, .875 x .702 x 1.10   |
| 42  | 747-05592B  | Brake Rod                            |
| 43  | 747-05725A  | Deck Hanger Rod, 5/8                 |
| 44  | 747-06259A  | Lift Adjust Link                     |
| 45  | 747-06355   | Lock Rod, .375                       |
| 46  | 714-05005   | Bow-Tie Cotter Pin                   |
| 47  | 712-05046   | Hex Nut, 1/2-13                      |

## Seat Adjustment

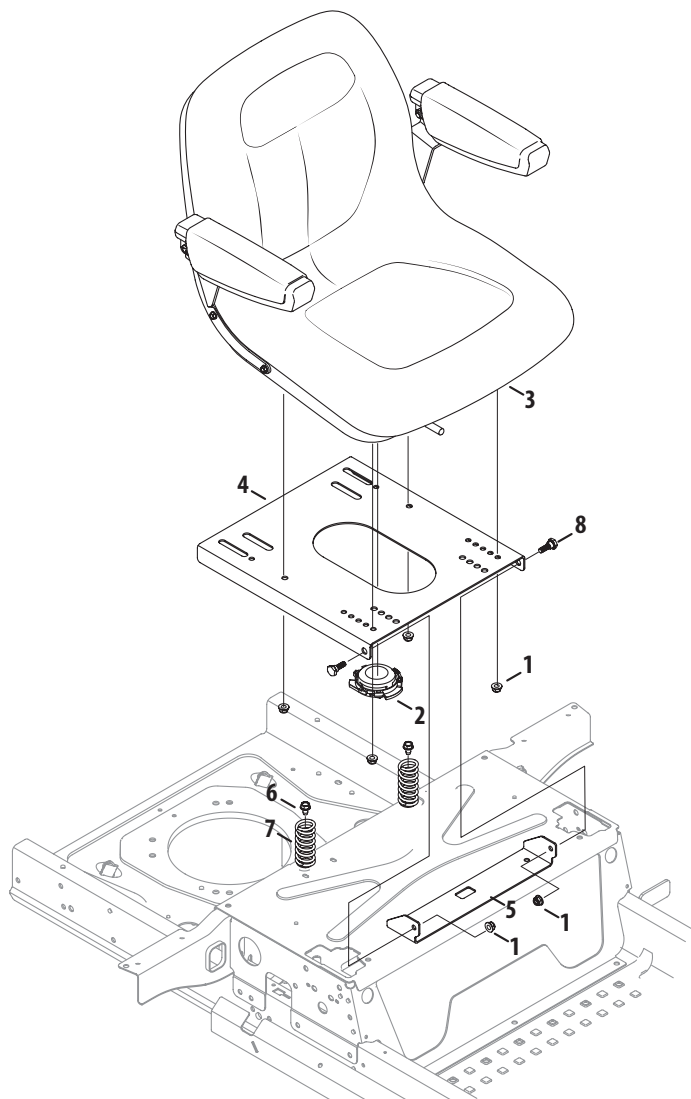


| Ref. | Part Number | Description                           |
|------|-------------|---------------------------------------|
| 1    | 712-04063   | Flange Lock Nut, 5/16-18              |
| 2    | 725-05208   | Seat Switch                           |
| 3    | 757-04136   | Seat                                  |
| 4    | 703-09603A  | Seat Plate                            |
| 5    | 703-09633   | Seat Bracket                          |
| 6    | 710-1260A   | Hex Washer Screw, 5/16-18 x .750      |
| 7    | 732-04508   | Compression Spring, 1.71 x 3.25 x .23 |
| 8    | 938-0296    | Shoulder Screw, 5/16-18 x .437 x .268 |

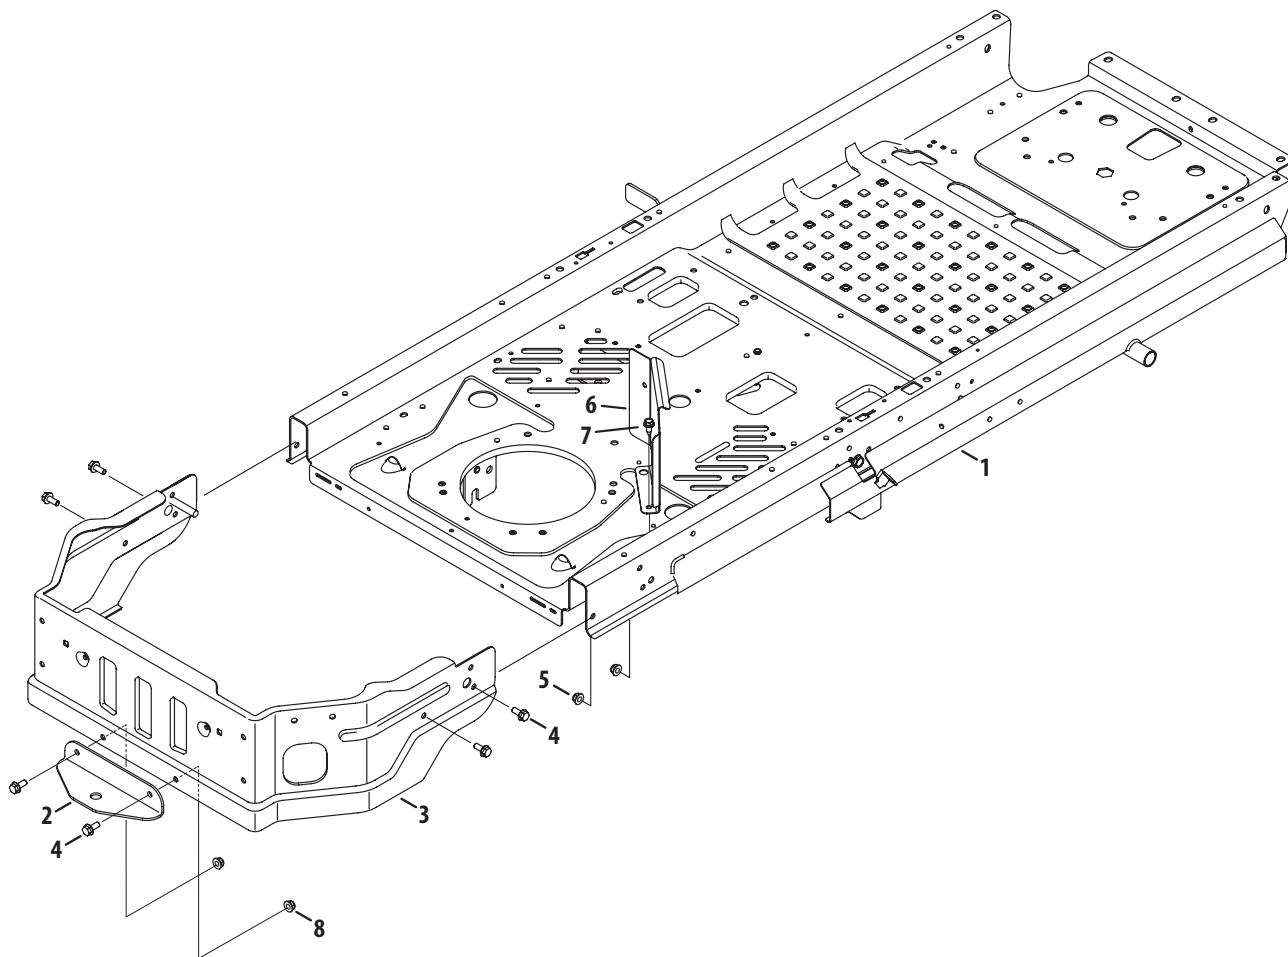


| Ref | Part Number | Description                      |
|-----|-------------|----------------------------------|
| 1   | 603-04982   | Frame Assembly                   |
| 2   | 703-07543C  | Hitch Bracket                    |
| 3   | 703-09302A  | Rear Bumper                      |
| 4   | 710-04043   | Screw, 5/16-18, Hexflange        |
| 5   | 712-04063   | Flange Lock Nut, 5/16-18         |
| 6   | 703-09611   | Engine Heat Shield               |
| 7   | 710-1652    | Hex Washer Screw, 1/4-20 x .625  |
| 8   | 712-04339   | Flange Counter Lock Nut, 5/16-18 |

# Operator's Platform

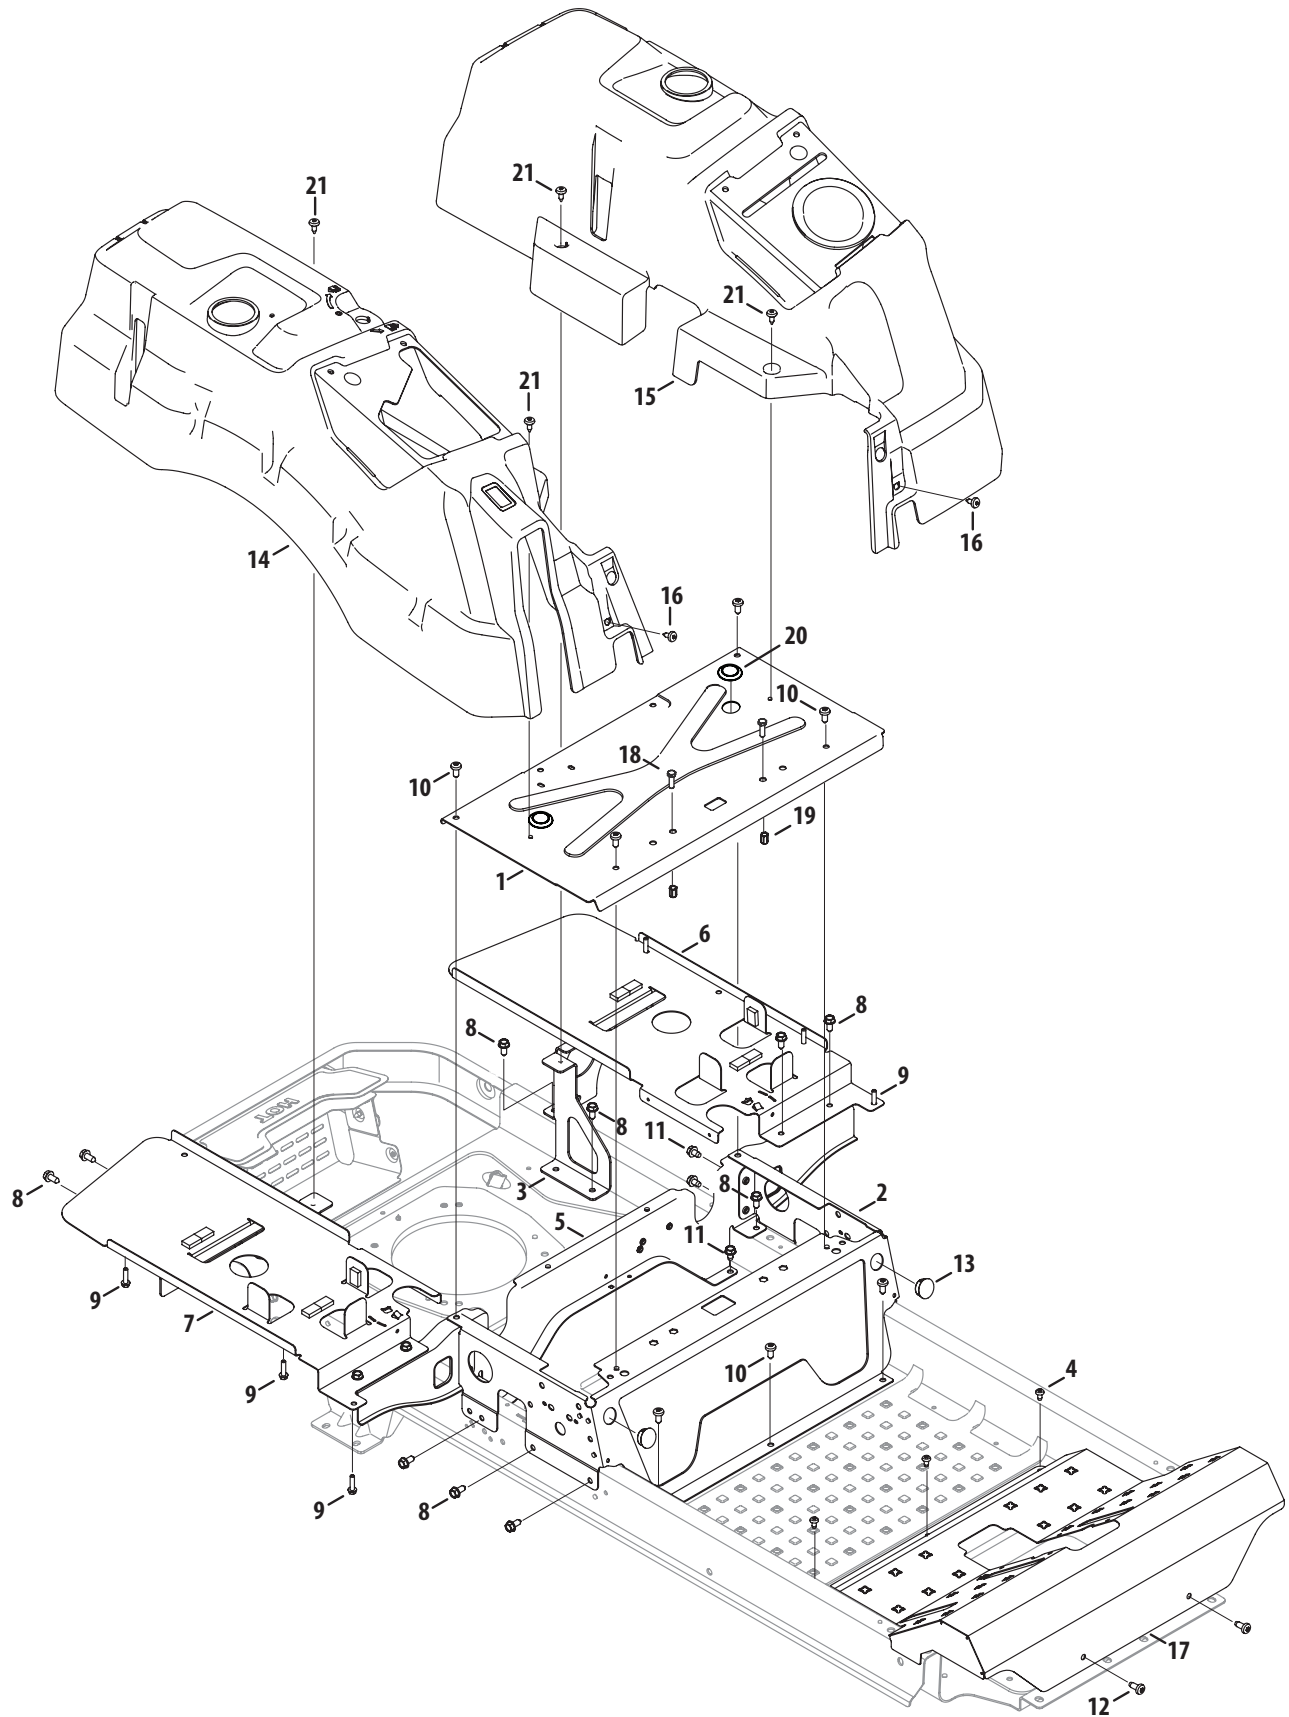

| Ref. | Part Number | Description                        |
|------|-------------|------------------------------------|
| 1    | 703-09186D  | Seatbox Plate                      |
| 2    | 703-09320   | Seat Frame                         |
| 3    | 703-09326A  | Rear Support Bracket, LH           |
|      | 703-09330A  | Rear Support Bracket, RH           |
| 4    | 710-04483   | Screw, 1/4-20 x .50                |
| 5    | 703-09332A  | Rear Seatbox Brace                 |
| 6    | 703-09404A  | Tank Support Plate, LH             |
| 7    | 703-09775   | Tank Support Plate, RH             |
| 8    | 710-04484   | Hex Washer Screw, 5/16-18 x .750   |
| 9    | 710-05109   | Hex Washer Screw, 5/16-14 x 1.00   |
| 10   | 710-05424   | Self Tapping Screw, 5/16-18 x .750 |
| 11   | 710-0607    | Hex Washer Screw, 5/16-18 x .50    |
| 12   | 710-1611B   | Screw, 5/16-18 x .75               |
| 13   | 731-09477   | Plastic Plug                       |
| 14   | 931-09529   | RH Console                         |
| 15   | 931-09543   | LH Console                         |
| 16   | 738-04549A  | Shoulder Screw, 1/4-20             |
| 17   | 603-05093A  | Floor Board, Fab                   |
| 18   | 710-0643    | Hex Cap Screw, 5/16-18 x 1.00      |
| 19   | 728-04068   | Nut, 5/16-18                       |
| 20   | 726-3045A   | Button Plug                        |
| 21   | 738-05090   | Shoulder Screw, .368 x .115, M6-1  |


## Fuel Tank

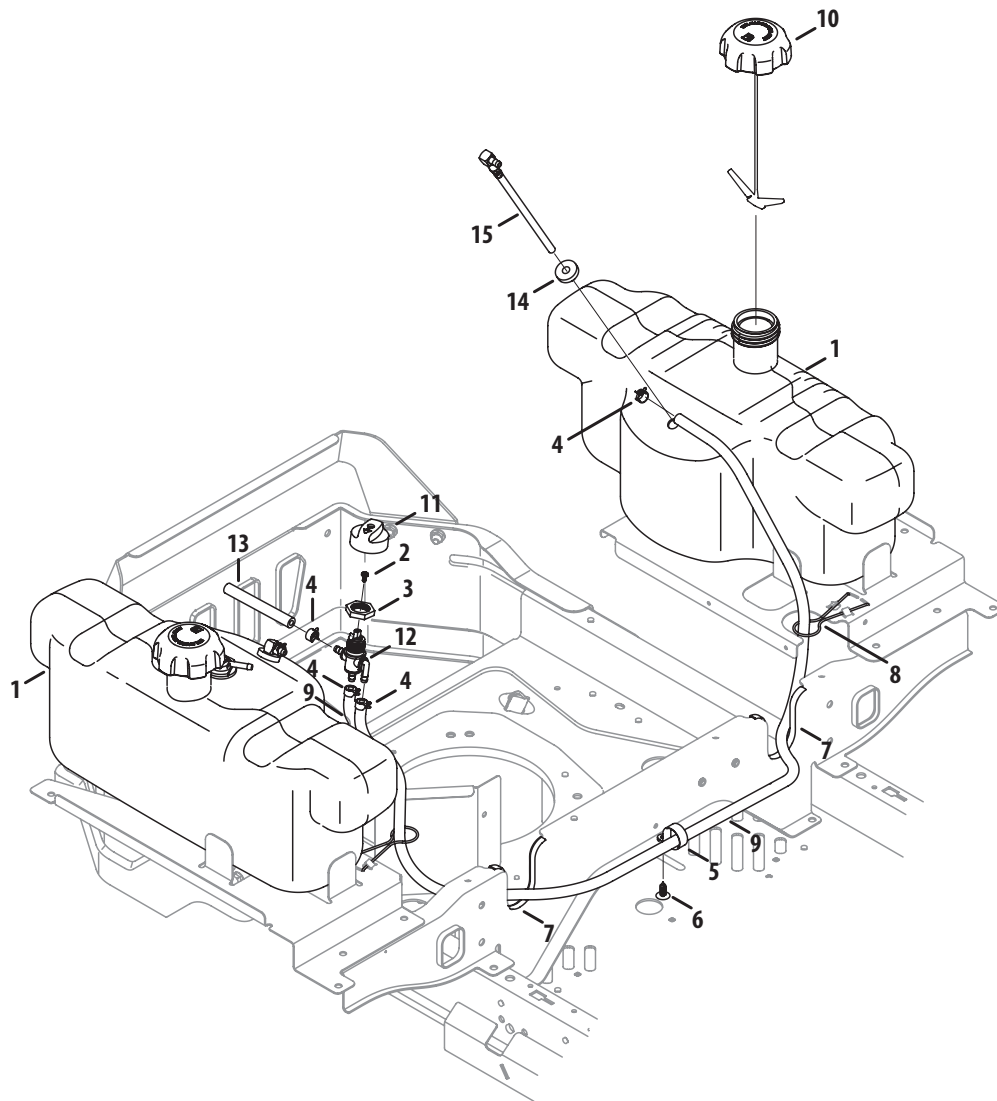

| Ref. | Part Number | Description           |
|------|-------------|-----------------------|
| 1    | 951-05138   | Fuel Tank, 3.5 Gallon |
| 2    | 710-06152   | Screw, M4-0.7 x 8mm   |
| 3    | 712-05048   | Nut, 3 Way Select     |
| 4    | 726-0205    | Hose Clamp, .490 Dia. |
| 5    | 726-04119   | Hose Clamp, 1.0       |
| 6    | 726-3046    | Ratchet Clip, .250    |
| 7    | 731-0511    | Trim Strip            |
| 8    | 747-06306   | Tank Support Rod      |

| Ref. | Part Number  | Description                    |
|------|--------------|--------------------------------|
| 9    | 751-10349-54 | Fuel Hose, Low Permeation, 1/4 |
| 10   | 951-12179B   | Fuel Cap                       |
| 11   | 951-14488    | Fuel Cap, 3 Way                |
| 12   | 751-14526    | Fuel Switch                    |
| 13   | 751-14738    | Fuel Hose, Low Permeation, 1/4 |
| 14   | 935-0149     | Fuel Tank Bushing              |
| 15   | 751-10442    | Fuel Pickup Fitting            |




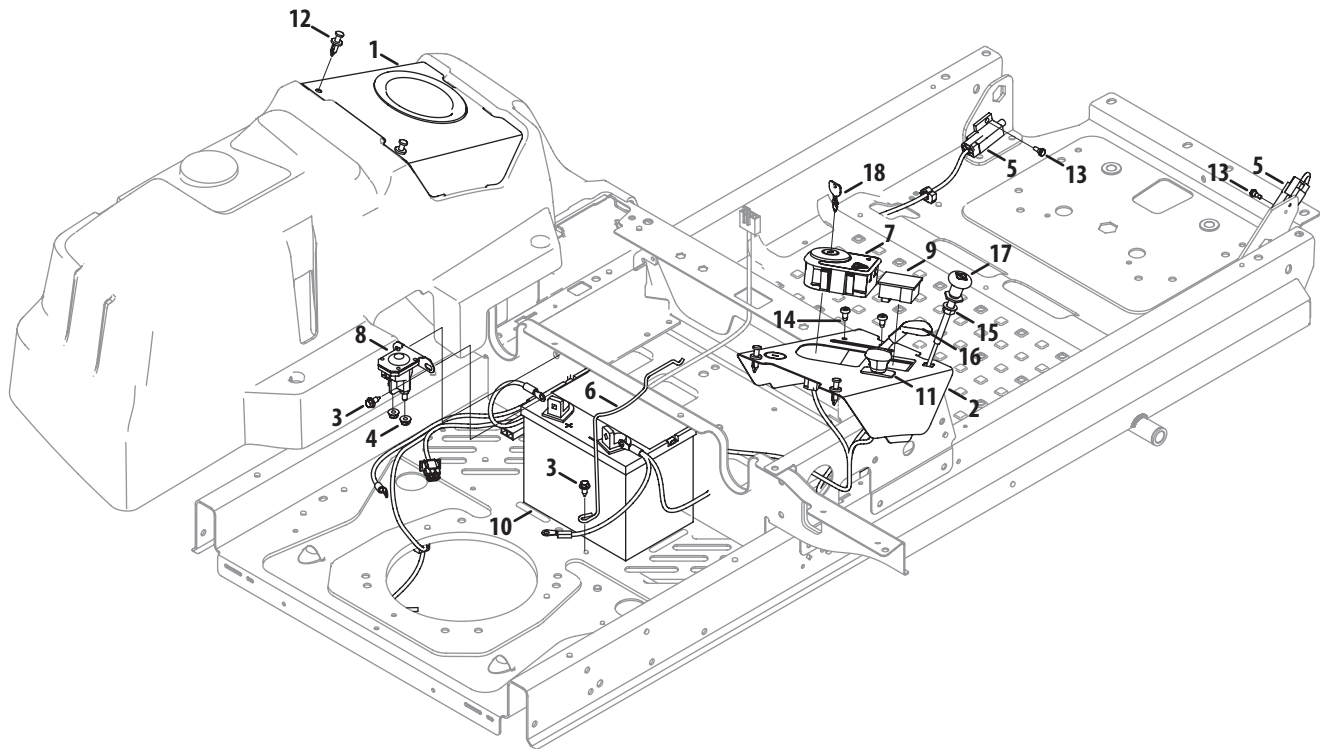

| Ref. | Part Number | Description                     |
|------|-------------|---------------------------------|
| 1    | 703-09338A  | Console Cover, LH               |
| 2    | 703-09378A  | Console Cover, RH               |
| 3    | 710-1652    | Hex Washer Screw, 1/4-20 x .625 |
| 4    | 712-04064   | Flange Lock Nut, 1/4-20         |
| 5    | 725-04363   | Interlock Switch                |
| 6    | 747-05685   | Battery Rod                     |
| 7    | 725-06102A  | Key Switch                      |
| 8    | 725-06153   | Solenoid                        |
| 9    | 925-06170   | Hour Meter/Service Minder       |
| 10   | 925-1707D   | Battery                         |

| Ref. | Part Number | Description                   |
|------|-------------|-------------------------------|
| 11   | 925-3233    | Electric PTO Switch           |
| 12   | 728-0199    | Plastic Rivet                 |
| 13   | 738-04237A  | Shoulder Screw, #10-32 x .500 |
| 14   | 710-05070A  | Screw, 1/4-20 x .50           |
| 15   | 912-3005    | Flange Lock Nut, 3/8-16       |
| 16   | 946-05133   | Throttle Cable                |
| 17   | 946-04214   | Choke Cable                   |
| 18   | 625-05000   | Key, Assembly                 |
| —    | 925-06074A  | Harness Assembly              |


## Engine Accessories

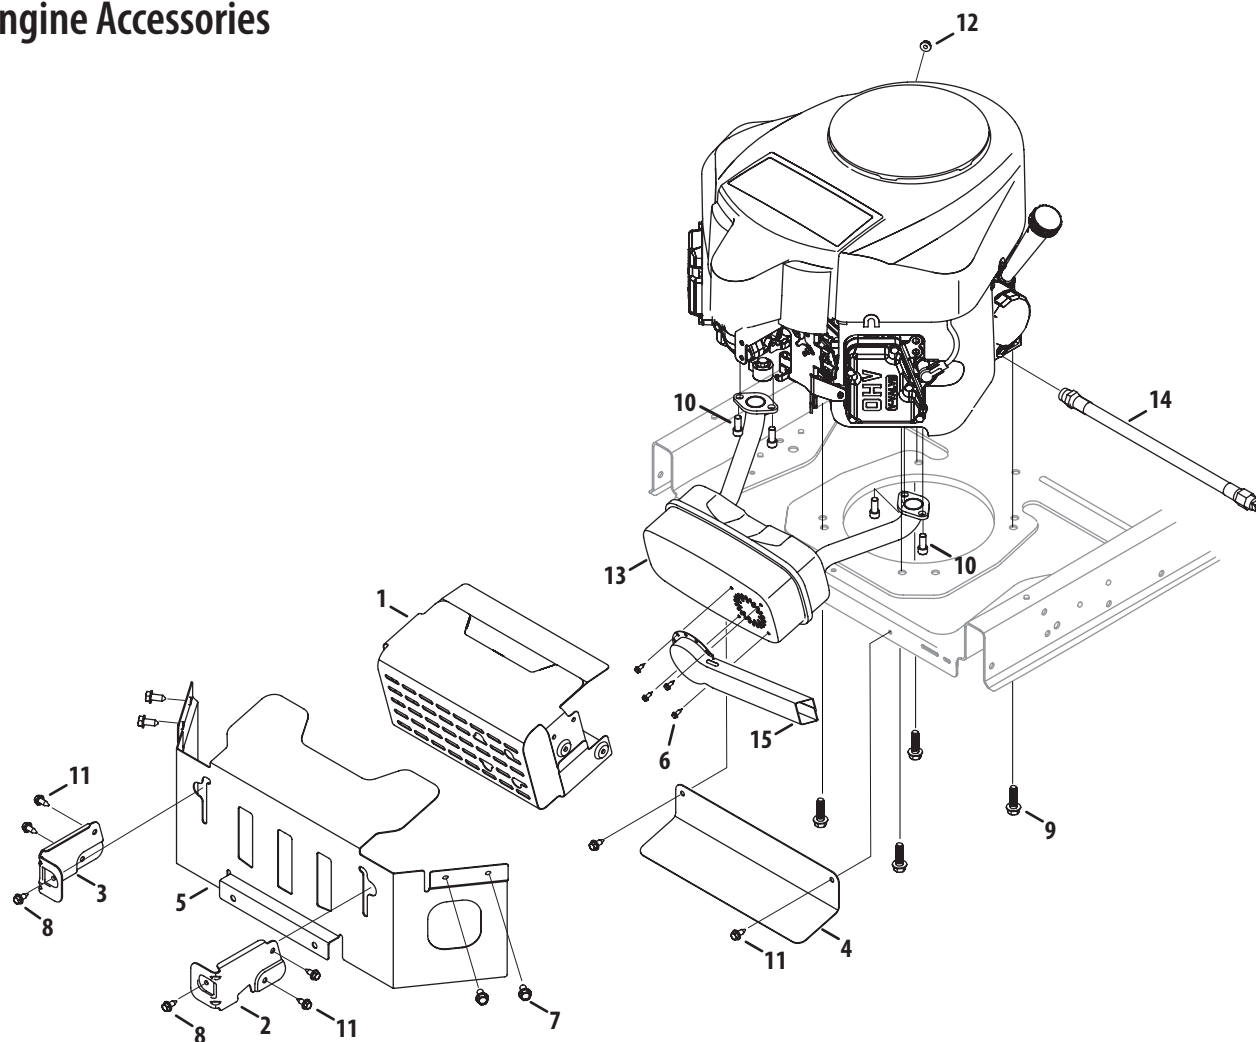

| Ref. | Part Number | Description                      |
|------|-------------|----------------------------------|
| 1    | 603-05156A  | Muffler Shield Assembly          |
| 2    | 703-08671A  | Muffler Shield Bracket, RH       |
| 3    | 703-08695   | Muffler Shield Bracket, LH       |
| 4    | 703-09195   | Lower Heat Shield                |
| 5    | 703-09615A  | Muffler Shield                   |
| 6    | 710-0227    | Hex Washer Screw, #8-18 x .500   |
| 7    | 710-04484   | Hex Washer Screw, 5/16-18 x .750 |
| 8    | 710-0653    | Screw, 1/4-20 x .375             |

| Ref. | Part Number | Description                     |
|------|-------------|---------------------------------|
| 9    | 710-04683C  | Hex Washer Screw, 3/8-16 x 1.00 |
| 10   | 710-1314A   | Socket Hd Screw, 5/16-18 x .750 |
| 11   | 710-1652    | Hex Washer Screw, 1/4-20 x .625 |
| 12   | 712-04064   | Flange Lock Nut, 1/4-20         |
| 13   | 751-10528B  | Twin Muffler                    |
| 14   | 751-10291A  | Oil Drain Hose                  |
| 15   | 751-11424A  | Muffler Deflector Long          |


## Front Axle

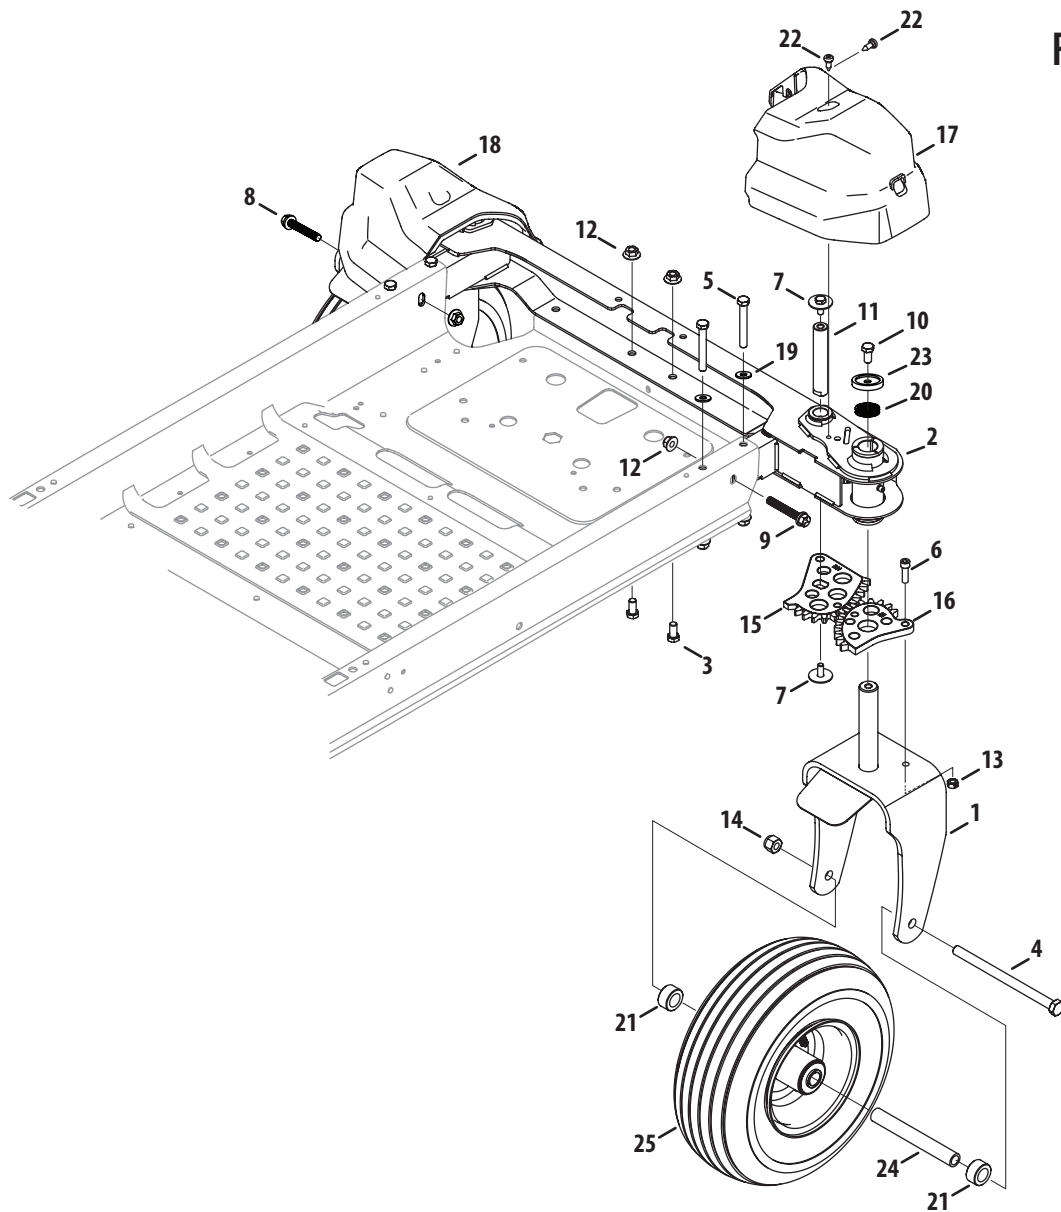

| Ref. | Part Number | Description                       |
|------|-------------|-----------------------------------|
| 1    | 603-05020   | Caster Wheel Bracket              |
| 2    | 903-05106   | Front Axle                        |
| 3    | 710-0216    | Hex Cap Screw, 3/8-16 x .75       |
| 4    | 710-04652   | Bolt, 1/2-20 x 7.25               |
| 5    | 710-04656A  | Screw, 3/8-16 x 2.75              |
| 6    | 710-05398   | Socket Head Screw, 5/16-18 x 1.00 |
| 7    | 710-06041   | Hex Cap Screw, 5/16-18 x .75      |
| 8    | 710-06045   | Hex Flange Screw, 3/8-16 x 2.25   |
| 9    | 710-06093   | Hex Flange Screw, 3/8-16 x 2.00   |
| 10   | 710-3119    | Hex Screw, 3/8-16 x .75           |
| 11   | 711-06081A  | Pivot Gear Steering Shaft         |
| 12   | 712-04217   | Flange Lock Nut, 3/8-16           |
| 13   | 912-3009    | Hex Lock Nut, 5/16-18             |

| Ref. | Part Number | Description                     |
|------|-------------|---------------------------------|
| 14   | 912-3058    | Hex Lock Nut, 1/2-20            |
| 15   | 717-04952   | 12-Tooth Variable Gear          |
| 16   | 717-05133   | 13-Tooth Variable Spur Gear     |
| 17   | 731-09291A  | Axle Cover, RH                  |
| 18   | 731-09320A  | Axle Cover, LH                  |
| 19   | 736-0262    | Flat Washer, .385 x .870 x .092 |
| 20   | 736-05033A  | Wave Washer, 1.25 x 1.00 x .300 |
| 21   | 750-05572   | Spacer, .76 x 1.23 x .63        |
| 22   | 738-04549A  | Shoulder Screw, 1/4-20          |
| 23   | 738-05093   | Shoulder Spacer, 1.75 x .180    |
| 24   | 750-04775A  | Spacer, .51 ID x .75 OD x 5.825 |
| 25   | 634-04629   | Wheel Assembly, 13 x 5 x 6      |

# Steering Column & Pedal Controls

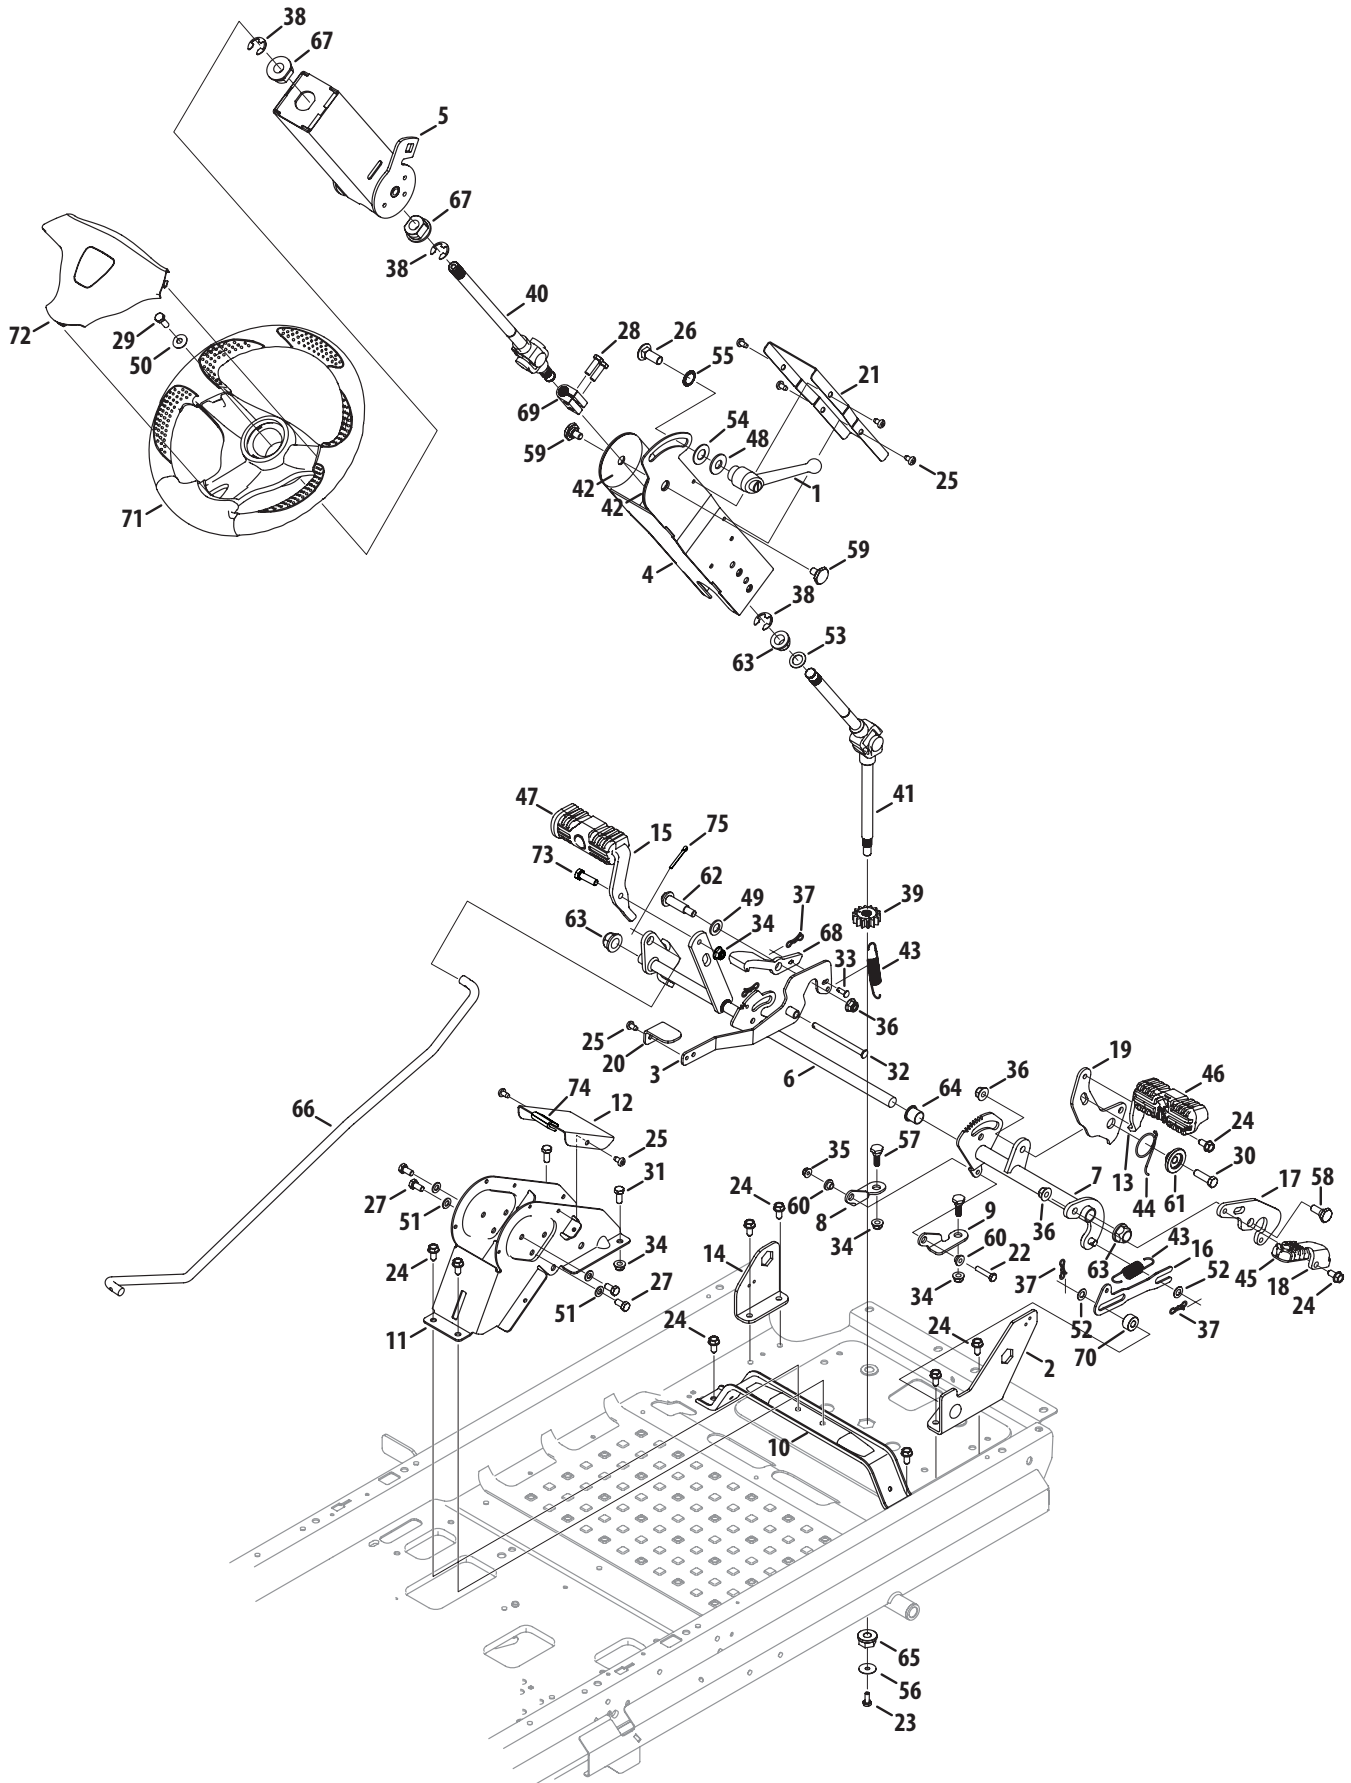


## Steering Column & Pedal Controls

| Ref. | Part Number | Description                      |
|------|-------------|----------------------------------|
| 1    | 02005058    | Steering Column Adjustment Lever |
| 2    | 603-04931A  | Support Bracket Assembly, RH     |
| 3    | 603-05040   | Brake Pedal Assembly             |
| 4    | 603-05076   | Lower Column Assembly            |
| 5    | 603-05128   | Upper Column Assembly            |
| 6    | 647-05042   | Brake Pedal Assembly             |
| 7    | 647-04270A  | Drive Pedal Assembly             |
| 8    | 703-08604   | Speed Bracket, LH                |
| 9    | 703-08606   | Speed Bracket, RH                |
| 10   | 703-08620A  | Steering Support Bracket         |
| 11   | 703-08621A  | Lower Steering Wheel Column      |
| 12   | 703-08622   | Lower Column Cover               |
| 13   | 703-08646A  | Drive Pedal                      |
| 14   | 703-08656   | Support Bracket, LH              |
| 15   | 703-08675   | Brake Pedal                      |
| 16   | 703-08678B  | Return to Neutral Link           |
| 17   | 703-08690   | Reverse Pedal Bracket            |
| 18   | 703-08694A  | Reverse Pedal                    |
| 19   | 703-08754A  | Forward pedal Bracket            |
| 20   | 703-09147   | Tilt Steering Pedal              |
| 21   | 703-09279   | Steering Column Cover            |
| 22   | 710-0106    | Hex Head Screw, 1/4-20 x 1.25    |
| 23   | 710-0433    | Hex Head Screw, 1/4-20 x .625    |
| 24   | 710-04484   | Hex Washer Screw, 5/16-18 x .750 |
| 25   | 710-05070A  | Screw, 1/4-20 x .5               |
| 26   | 710-05375   | Carriage Bolt, 1/2-13 x 1.25     |
| 27   | 710-0538    | Hex Screw, 5/16-18 x .625        |
| 28   | 710-0643    | Hex Cap Screw, 5/16-18 x 1.00    |
| 29   | 710-1245B   | Hex Screw, 5/16-24 x .875        |
| 30   | 710-3005    | Hex Screw, 3/8-16 x 1.25         |
| 31   | 710-3008    | Hex Screw, 5/16-18 x .75         |
| 32   | 711-05068A  | Clevis Pin, 5/16 x 4.135         |
| 33   | 711-05670   | Clevis Pin, .224 Dia. x .625     |
| 34   | 712-04063   | Flange Lock Nut, 5/16-18         |
| 35   | 712-04064   | Flange Lock Nut, 1/4-20          |
| 36   | 712-04065   | Flange Lock Nut, 3/8-16          |
| 37   | 714-04040   | Bow-Tie Cotter Pin, 72           |
| 38   | 916-0231    | E-Ring, .750                     |


| Ref. | Part Number | Description                            |
|------|-------------|----------------------------------------|
| 39   | 717-04960   | 14-Tooth Spur Gear                     |
| 40   | 717-05247   | Upper Steering Shaft                   |
| 41   | 717-05248   | Lower Steering Shaft                   |
| 42   | 731-09831   | Column Wear Plate                      |
| 43   | 732-04748   | Extension Spring, .70 OD x 3.035 LG    |
| 44   | 732-04949   | Torsion Spring, 1.00 ID x .22          |
| 45   | 735-04117   | Reverse Pedal Pad                      |
| 46   | 735-04118A  | Forward Pedal Pad                      |
| 47   | 735-04136   | Brake Pedal Pad                        |
| 48   | 936-0179    | Washer, Flat, .531 x 1.25 x .100       |
| 49   | 936-0192    | Flat Washer, .535 x .930 x .090        |
| 50   | 736-0242    | Bell Washer, .340 x .872 x .060        |
| 51   | 936-0264    | Flat Washer, .330 x .630 x .064        |
| 52   | 936-0314    | Thrust Washer, .375 x .700 x .030      |
| 53   | 936-0337    | Flat Washer, .634 x 1.00 x .040        |
| 54   | 736-04602   | Washer, .640 x 1.25 x .050             |
| 55   | 936-0760    | Lock Washer, 17 x 23.8 x 1.95          |
| 56   | 736-3092    | Flat Washer, .265 x 1.00 x .030        |
| 57   | 938-0296    | Shoulder Screw, 5/16-18 x .437 x .268  |
| 58   | 938-0380    | Shoulder Bolt, 3/8-16 x .500 x .270    |
| 59   | 738-04130A  | Shoulder Screw, 3/8-16 x .625 x .175   |
| 60   | 738-04483   | Shoulder Spacer, .375 x .625 x .20     |
| 61   | 738-04552A  | Shoulder Spacer, 1.50 x .38 x .38      |
| 62   | 738-0929    | Shoulder Screw, 3/8-16 x .496 x 1.445  |
| 63   | 941-0225    | Hex Flange Bearing                     |
| 64   | 741-0495    | Flange Bearing, .63 ID x .695 OD x .06 |
| 65   | 741-05052   | Hex Flange Bearing, 7/16               |
| 66   | 747-05654A  | Front Brake Rod                        |
| 67   | 948-0209    | Flange Bearing, .63 ID x 1.50          |
| 68   | 748-04203   | Cruise Latch                           |
| 69   | 748-05045   | Steering Shaft Coupling                |
| 70   | 750-05635   | Spacer, .385 ID x .875 OD x .458       |
| 71   | 631-04008B  | Steering Wheel Assembly                |
| 72   | 731-04532B  | Steering Wheel Cover                   |
| 73   | 710-0376    | Hex Cap Screw, 5/16-18 x 1.00          |
| 74   | 731-0511    | Trim Strip                             |
| 75   | 714-0162    | Cotter Pin, 5/32 x 1.25                |

# Steering Linkage

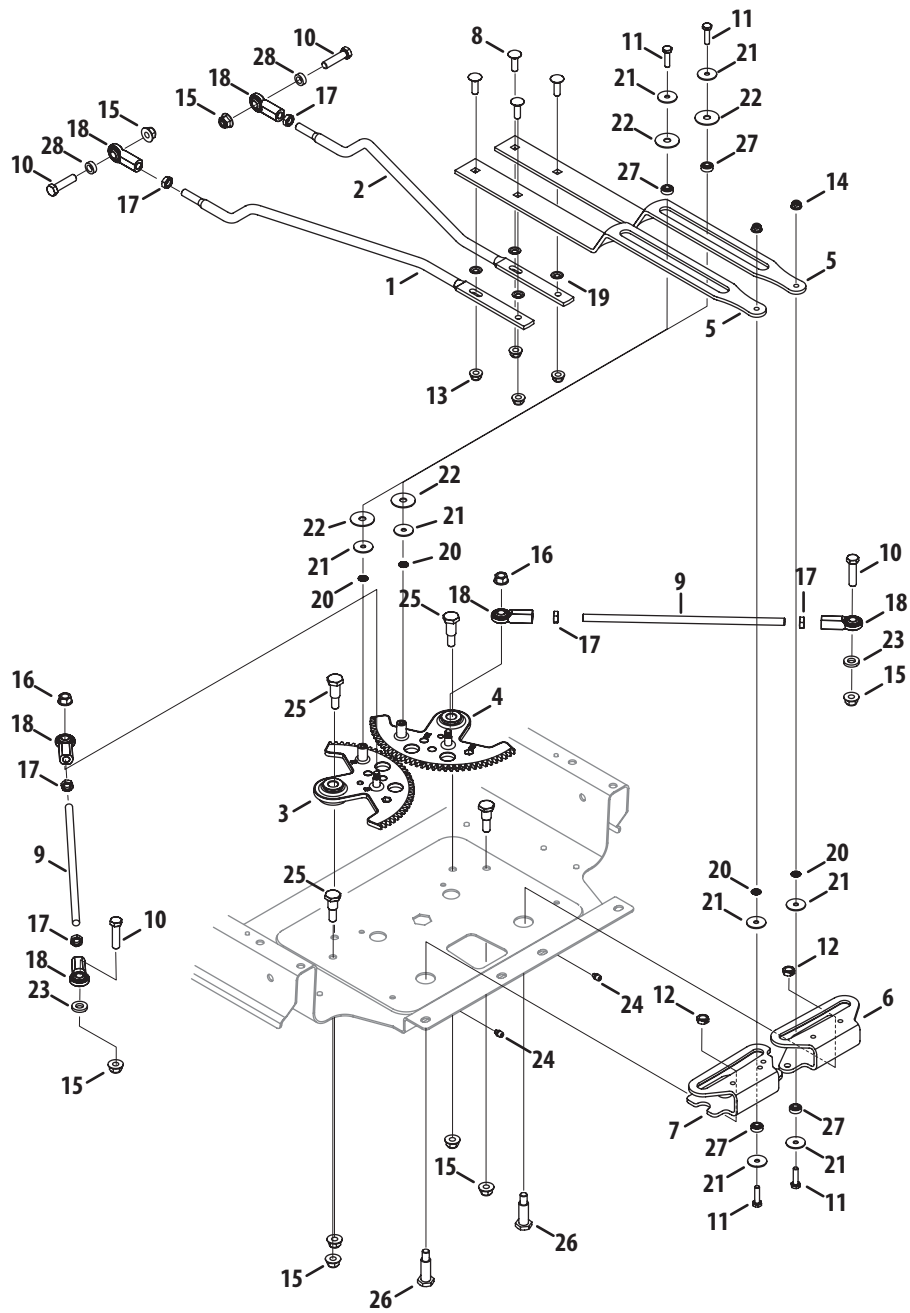

| Ref. | Part Number | Description                          |
|------|-------------|--------------------------------------|
| 1    | 747-05591A  | Hydro Link, RH                       |
| 2    | 747-05606A  | Hydro Link, LH                       |
| 3    | 617-05018P  | Steering Gear Assembly, RH           |
| 4    | 617-05017P  | Steering Gear Assembly, LH           |
| 5    | 703-08600   | Control Link                         |
| 6    | 703-08882   | Speed Cam Plate, LH                  |
| 7    | 703-08883   | Speed Cam Plate, RH                  |
| 8    | 710-0276    | Carriage Screw, 5/16-18 x 1.00       |
| 9    | 747-06130   | Drag Link, .375 Dia.                 |
| 10   | 710-0520    | Hex Screw, 3/8-16 x 1.50             |
| 11   | 710-3220    | Hex Screw, 1/4-20 x 1.00             |
| 12   | 712-0266A   | Nut, Jamlock, 3/8-16                 |
| 13   | 712-04063   | Flange Lock Nut, 5/16-18             |
| 14   | 712-04064   | Flange Lock Nut, 1/4-20              |
| 15   | 712-04065   | Flange Lock Nut, 3/8-16              |
| 16   | 712-04339   | Nut, 5/16-18, Centerlock             |
| 17   | 712-0711    | Jam Nut, 3/8-24                      |
| 18   | 723-04080   | Female Ball-Joint                    |
| 19   | 726-0201    | Speed Nut, .3125 ID                  |
| 20   | 726-0233    | Push Nut, .25 ID x .50 OD            |
| 21   | 936-0211    | Flat Washer, .285 x 1.25 x .060      |
| 22   | 736-04639   | Washer, .355 x 1.25 x .048           |
| 23   | 736-3010    | Flat Washer, .407 x .812 x .135      |
| 24   | 937-3000    | Grease Fitting, 3/16                 |
| 25   | 738-05046   | Shoulder Screw, 3/8-16 x .625 x .875 |
| 26   | 738-1014    | Shoulder Screw, .500 x 1.25 x 3/8-16 |
| 27   | 741-04425   | Ball Bearing, .25 x .625             |
| 28   | 950-0535    | Spacer, .380 ID x .625 OD x .21      |

# 54" Deck

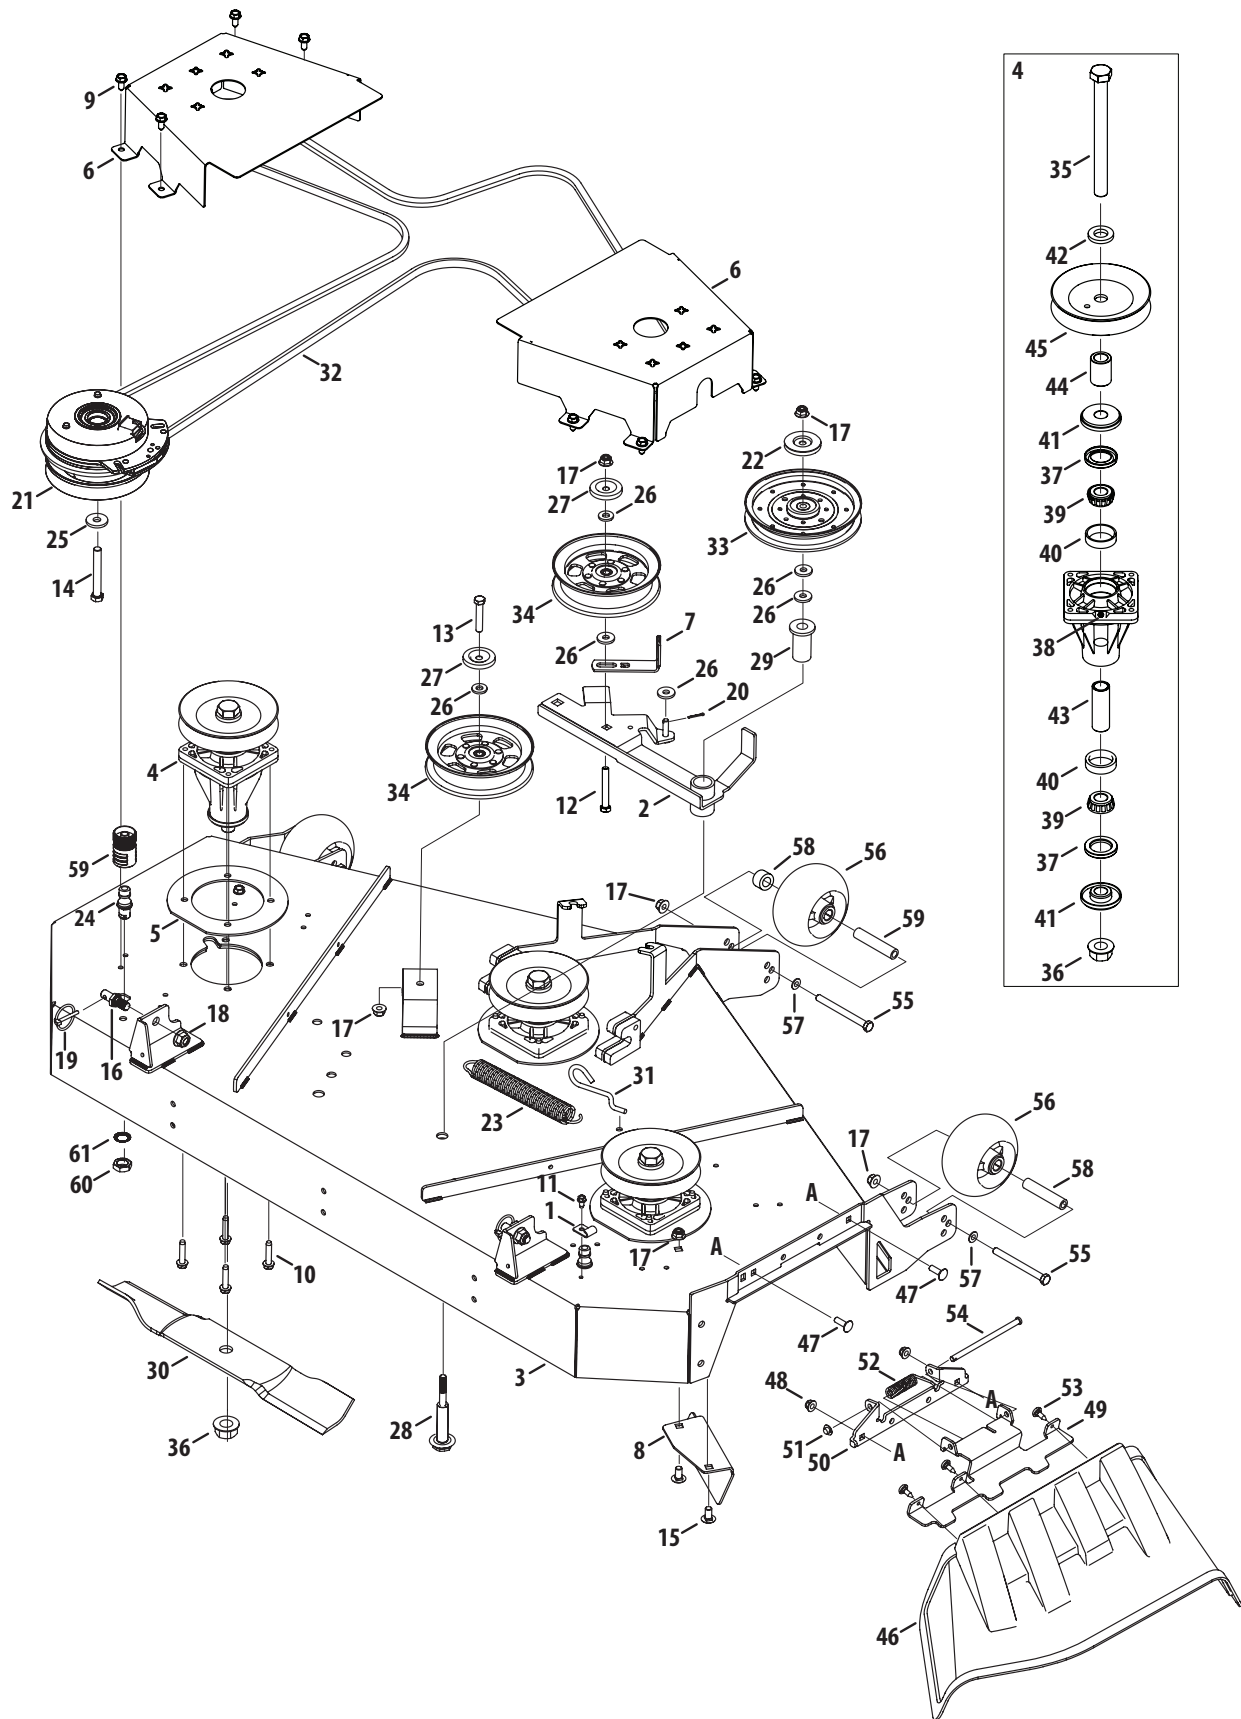





| Ref. | Part Number | Description                           |
|------|-------------|---------------------------------------|
| 1    | 96606       | Bracket, Hook Retainer                |
| 2    | 903-05081A  | Deck Idler Assembly                   |
| 3    | 903-05096   | 54" Deck Assembly                     |
| 4    | 918-06993   | Spindle Assembly                      |
| 5    | 703-07787   | Spindle Reinforcement Plate           |
| 6    | 703-09352A  | Belt Cover                            |
| 7    | 703-09583   | Bracket, Deck Keeper                  |
| 8    | 703-09593   | Chute Baffle                          |
| 9    | 710-04484   | Hex Washer Screw, 5/16-18 x .750      |
| 10   | 710-04605A  | Hex Washer Screw, 5/16-18 x 1.50      |
| 11   | 710-0599    | Hex Washer Screw, 1/4-20 x .500       |
| 12   | 710-0859    | Hex Cap Screw, 3/8-16 x 2.50          |
| 13   | 710-3144    | Hex Cap Screw, 3/8-16 x 2.00          |
| 14   | 710-3157A   | Screw, 7/16-20 x 3.25                 |
| 15   | 710-3178    | Carriage Screw, 3/8-16 x .75          |
| 16   | 711-06200   | Pin, Shoulder Lock, .500              |
| 17   | 712-04065   | Flange Lock Nut, 3/8-16               |
| 18   | 712-04150   | Flange Lock Nut, 1/2-13               |
| 19   | 753-04070   | Pin, Lynch x .1875                    |
| 20   | 914-0507    | Cotter Pin 3/32" Dia. x .75 Lg.       |
| 21   | 917-05192   | Electric PTO Clutch                   |
| 22   | 721-04516   | Pulley Cap                            |
| 23   | 732-04927   | Extension Spring, 1.25 OD x 1.751     |
| 24   | 737-04003D  | Deck Water Nozzle                     |
| 25   | 736-0322    | Flat Washer, .450 x 1.25 x .164       |
| 26   | 936-3004    | Flat Washer, .406 x .875 x .105       |
| 27   | 783-08389   | Pulley Cap                            |
| 28   | 738-05049A  | Shoulder Bolt, .625 x 2.12, 3/8-16    |
| 29   | 741-05056   | Shoulder Spacer, 1.055 x .627 x 2.292 |
| 30   | 942-04416   | Blade, 19.00                          |
| 31   | 747-05608   | Deck Spring Rod                       |

| Ref. | Part Number | Description                     |
|------|-------------|---------------------------------|
| 32   | 954-05013   | V-Belt                          |
| 33   | 756-04487   | Idler Pulley, 6.00 Dia          |
| 34   | 756-05053   | Idler Pulley, 5.00 Dia.         |
| 35   | 710-06120   | Hex Cap Screw, 3/4-16 x 8.25    |
| 36   | 712-3078    | Nut, 3/4-16, Flangelock         |
| 37   | 921-3018A   | Oil Seal                        |
| 38   | 937-3000    | Grease Fitting                  |
| 39   | 941-04089   | Cone Bearing                    |
| 40   | 941-04091   | Cup Bearing                     |
| 41   | 748-3065A   | Spindle Spacer                  |
| 42   | 750-05553   | Spacer, .812 ID x .218 LG       |
| 43   | 750-06139   | Spacer, .78 x 1.00 x 2.895      |
| 44   | 750-06145   | Spacer, .792 x 1.20 x 1.628     |
| 45   | 756-04459A  | V-Type Pulley                   |
| 46   | 631-05176   | Discharge Chute Assembly        |
| 47   | 710-0276    | Carriage Bolt, 5/16-18 x 1.00   |
| 48   | 712-04063   | Flange Lock Nut, 5/16-18        |
| 49   | 703-09625A  | Chute Bracket                   |
| 50   | 703-09626   | Chute Bracket                   |
| 51   | 726-04009   | Push Cap                        |
| 52   | 732-05128A  | Torsion Spring                  |
| 53   | 738-04549A  | Shoulder Screw, 1/4-20          |
| 54   | 747-06318   | Chute Rod                       |
| 55   | 710-0411    | Hex Cap Screw, 3/8-16 x 4.0     |
| 56   | 634-3159    | Deck Ball Wheel, 5.0            |
| 57   | 936-0300    | Flat Washer, .406 x .875 x .059 |
| 58   | 750-3193    | Wheel Spacer                    |
| 59   | 921-04041   | Water Nozzle Adapter            |
| 60   | 912-0641    | Hex Nut, M-16 x 1.5             |
| 61   | 936-0760    | Lock Washer, 17 x 23.8 x 1.95   |

# Wiring Harness Schematic - 725-06074A

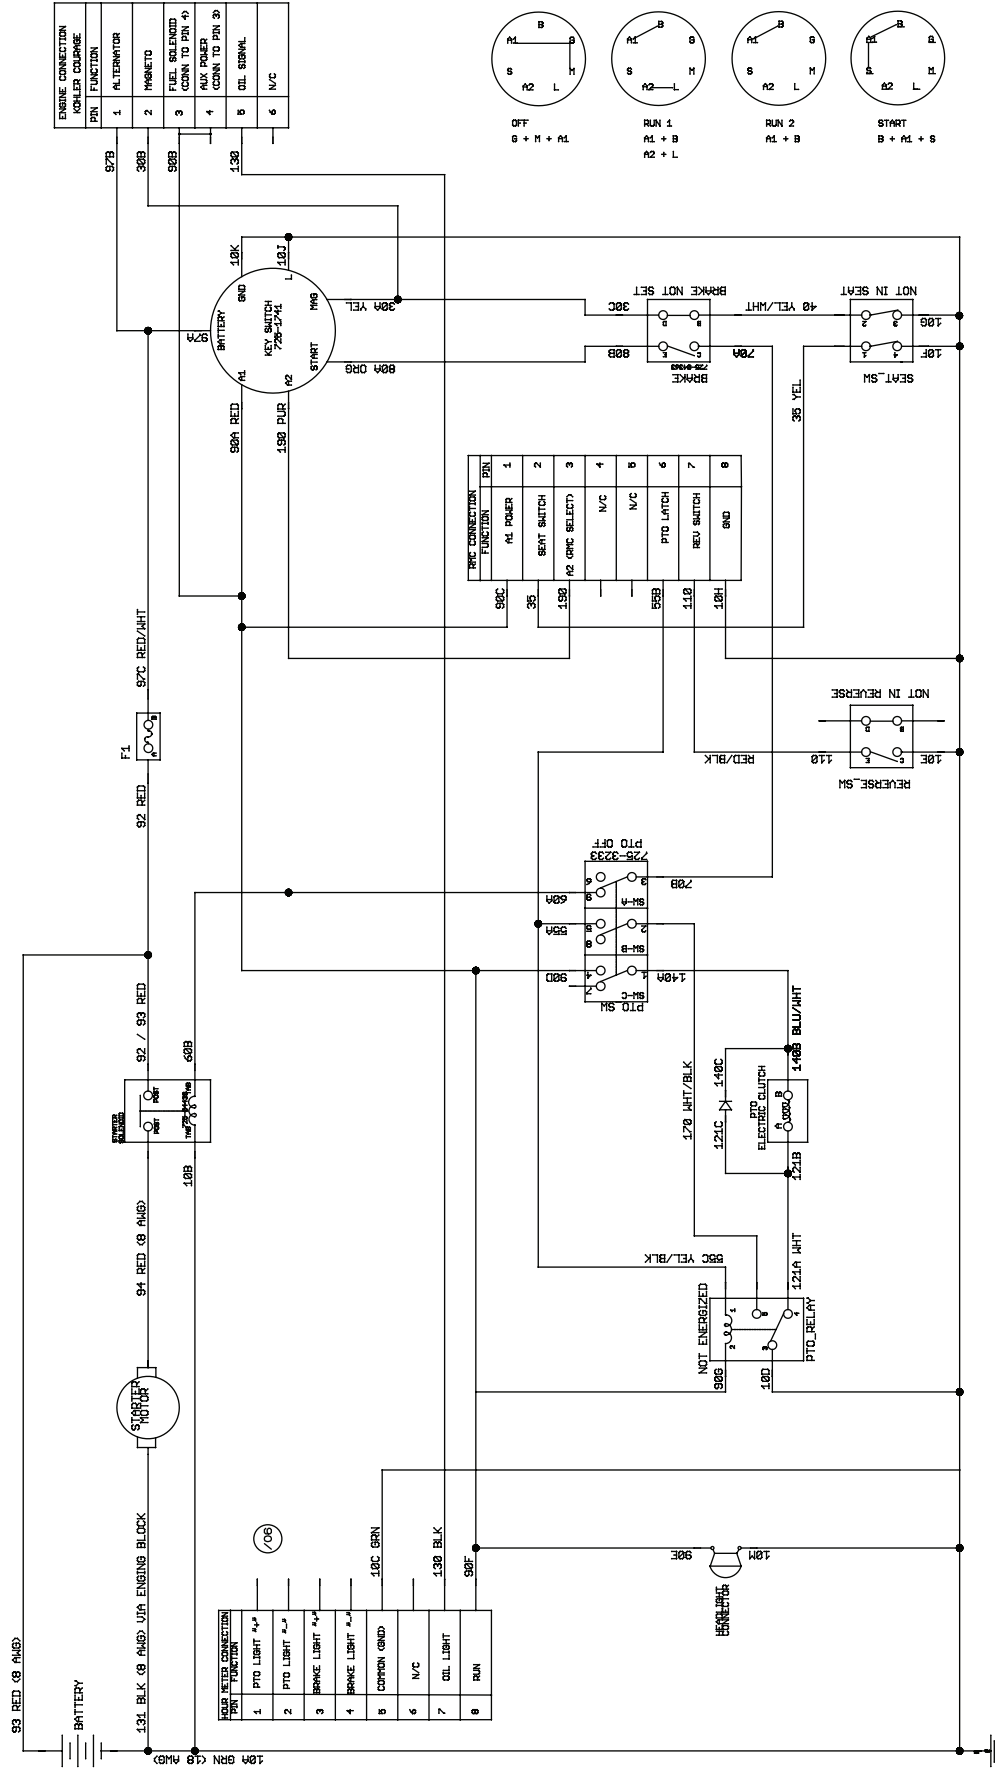


777S35396

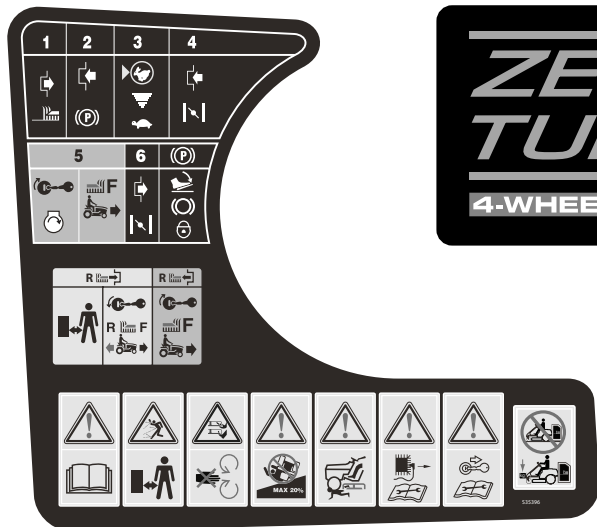

777D17033




777S35397

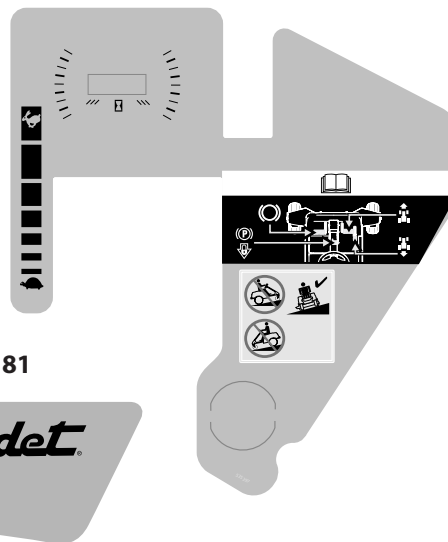

777D19181



777I25290

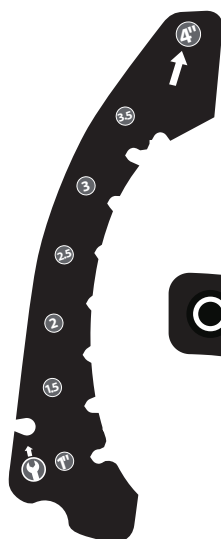


777D19213



777I25178




777I25016

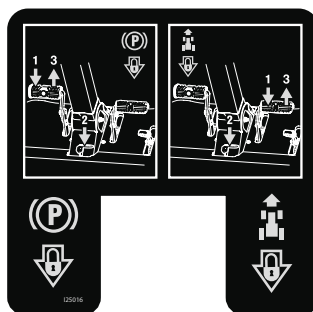

777I25177



777I25013

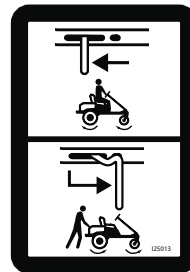

777D20156



777I25203



## Labels


777X45654




777X40182



777D19180

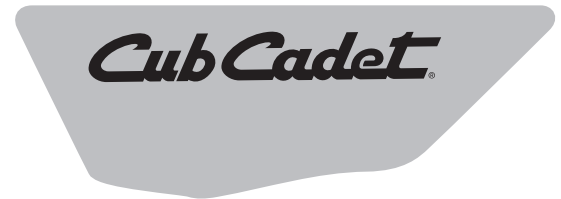

777S35375

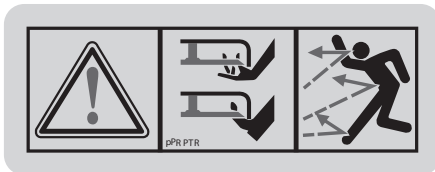

777S35502




777D20341



777X40180




777S34026

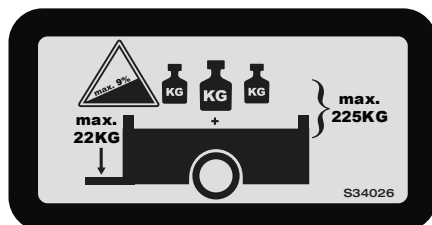


777D16533



**This page left intentionally blank.**

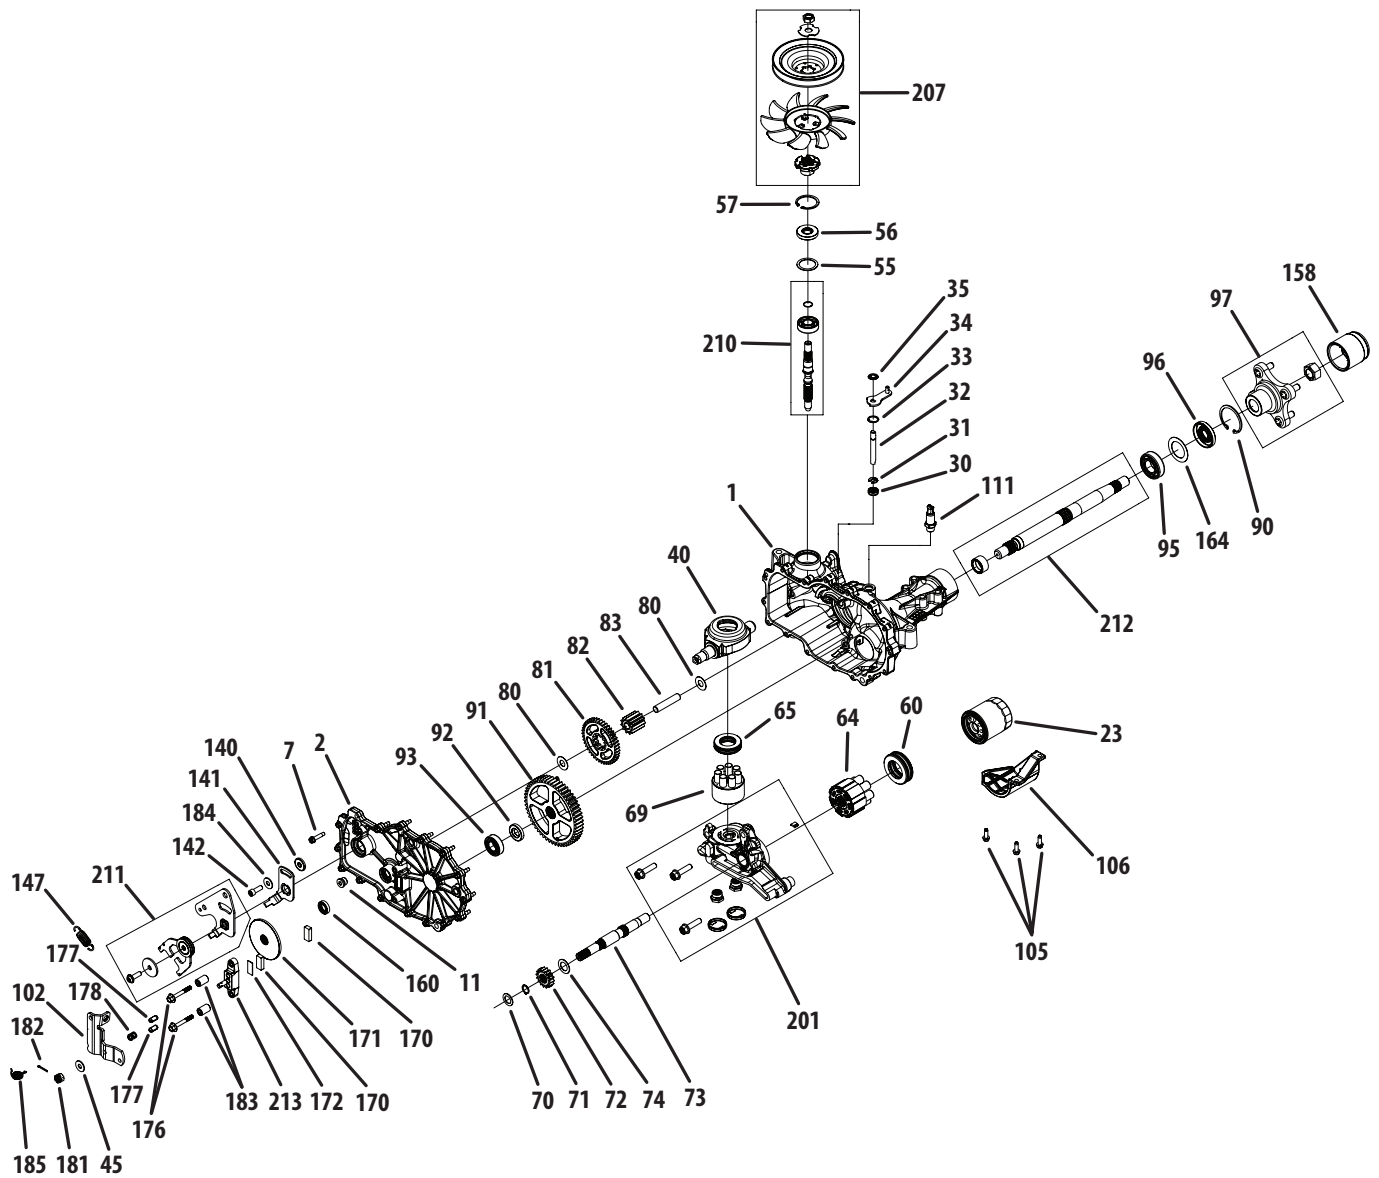

| Ref. | Part Number     | Description                       | Ref. | Part Number | Description                      |
|------|-----------------|-----------------------------------|------|-------------|----------------------------------|
| 1    | HG-72491        | Kit, Housing, Main, RH            | 96   | HG-53699    | Seal, Lip, 1.0 x 2.06 x .38      |
| 2    | HG-72375        | Kit, Cover Side RH Control        | 97   | HG-71404    | Kit, Hub 4-Bolt                  |
| 7    | HG-53246        | Screw, Hex Washer                 | 102  | HG-54326    | Arm, Brake                       |
| 11   | HG-9005110-5600 | Plug, 9/16-18                     | 105  | HG-50752    | Screw, Hex Washer 1/4-20 x .75   |
| 23   | HG-52114P       | Filter, Spin-On 2.6 x 3.0         | 106  | HG-53655    | Guard, Filter, RH                |
| 30   | HG-51626        | Seal, Lip, .375 x .75 x .25       | 111  | HG-71393    | Kit, Fitting 1/2 Beaded 9/16 SAE |
| 31   | HG-51628        | Ring, Retaining .375 External     | 140  | HG-52527    | Spacer, .320 x 1.005 x .150      |
| 32   | HG-52136        | Rod, Bypass                       | 141  | HG-51946    | Arm, Return Left                 |
| 33   | HG-51627        | Ring Retaining .750 Internal      | 142  | HG-71341    | Socket Cap Screw, 5/16-24 x 7/8  |
| 34   | HG-52370        | Arm, Bypass                       | 147  | HG-51605    | Spring, Extension                |
| 35   | HG-51630        | Ring, Ret .375 External           | 158  | HG-53501    | Cap, Axle                        |
| 40   | HG-51048        | Trunnion, Swashplate              | 160  | HG-70719    | Seal, Lip .625 x 1.00 x .250     |
| 45   | 736-0371        | Washer, .34 x .88 x .06           | 164  | HG-53514    | Spacer, 1.355 x 2.035 x .021     |
| 55   | HG-50951        | Washer, 1.23 x 1.57 x .04         | 170  | 917-0678    | Puck, Brake                      |
| 56   | HG-51161        | Seal, Lip 17 x 40 x 7             | 171  | HG-53989    | Rotor, Brake                     |
| 57   | HG-50329        | Ring Retaining Internal           | 172  | 917-0682    | Puck, Plate                      |
| 60   | HG-51462        | Bearing, Thrust 35 x 62 x 18      | 176  | HG-51146    | Screw, .250-20 x 2.0 HFS Patch   |
| 64   | HG-71579        | Kit, 16cc Cylinder Block Assembly | 177  | 941-0343    | Pin, Brake Actuating             |
| 65   | HG-50551P       | Thrust Bearing, 30 x 52 x 13      | 178  | HG-50919    | Compression Spring               |
| 69   | HG-70723        | Kit, Block, 7 Piston              | 181  | 912-0273    | Nut, Castle 5/16-24              |
| 70   | HG-44371        | Washer, .63 x 1.00 x .05          | 182  | 914-0507    | Pin, Cotter 3/32 x 3/4           |
| 71   | HG-44145        | Ring, Reatining, Motor Shaft      | 183  | HG-23711    | Spacer                           |
| 72   | HG-52149        | Gear, 16T                         | 184  | 736-0371    | Washer, .34 x .88 x .06          |
| 73   | HG-54325        | Shaft, Motor                      | 185  | HG-50884    | Spring, Brake Arm Bias           |
| 74   | HG-51069        | Washer, .71 x 1.16 x .04          | 201  | HG-71580    | Kit, Center Section RH           |
| 80   | HG-50132        | Washer                            | 207  | HG-72135    | Kit, Fan Pulley                  |
| 81   | HG-52148        | Gear, 43T                         |      | HG-53994    | Fan Only                         |
| 82   | HG-52583        | Gear, 11T                         |      | HG-53812    | Pulley Hub                       |
| 83   | HG-51083        | Pin, Jackshaft                    |      | HG-51523    | Washer                           |
| 90   | HG-50859        | Ring, Retaining 2.25 Internal     |      | HG-44133    | Nut                              |
| 91   | HG-52108        | Gear, 54T                         | 210  | HG-71443    | Kit, Input Shaft                 |
| 92   | HG-53336        | Spacer, .750 x 1.00 x .257        | 211  | HG-71592    | Kit, RTN Bidirectional           |
| 93   | HG-53071        | Bearing, Ball 3/4 x 40mm x 12mm   | 212  | HG-71570    | Kit, Shaft Axle                  |
| 95   | HG-53656        | Bearing, Ball 25.4 x 52 x 15      | 213  | HG-70633    | Kit, Brake Yoke                  |

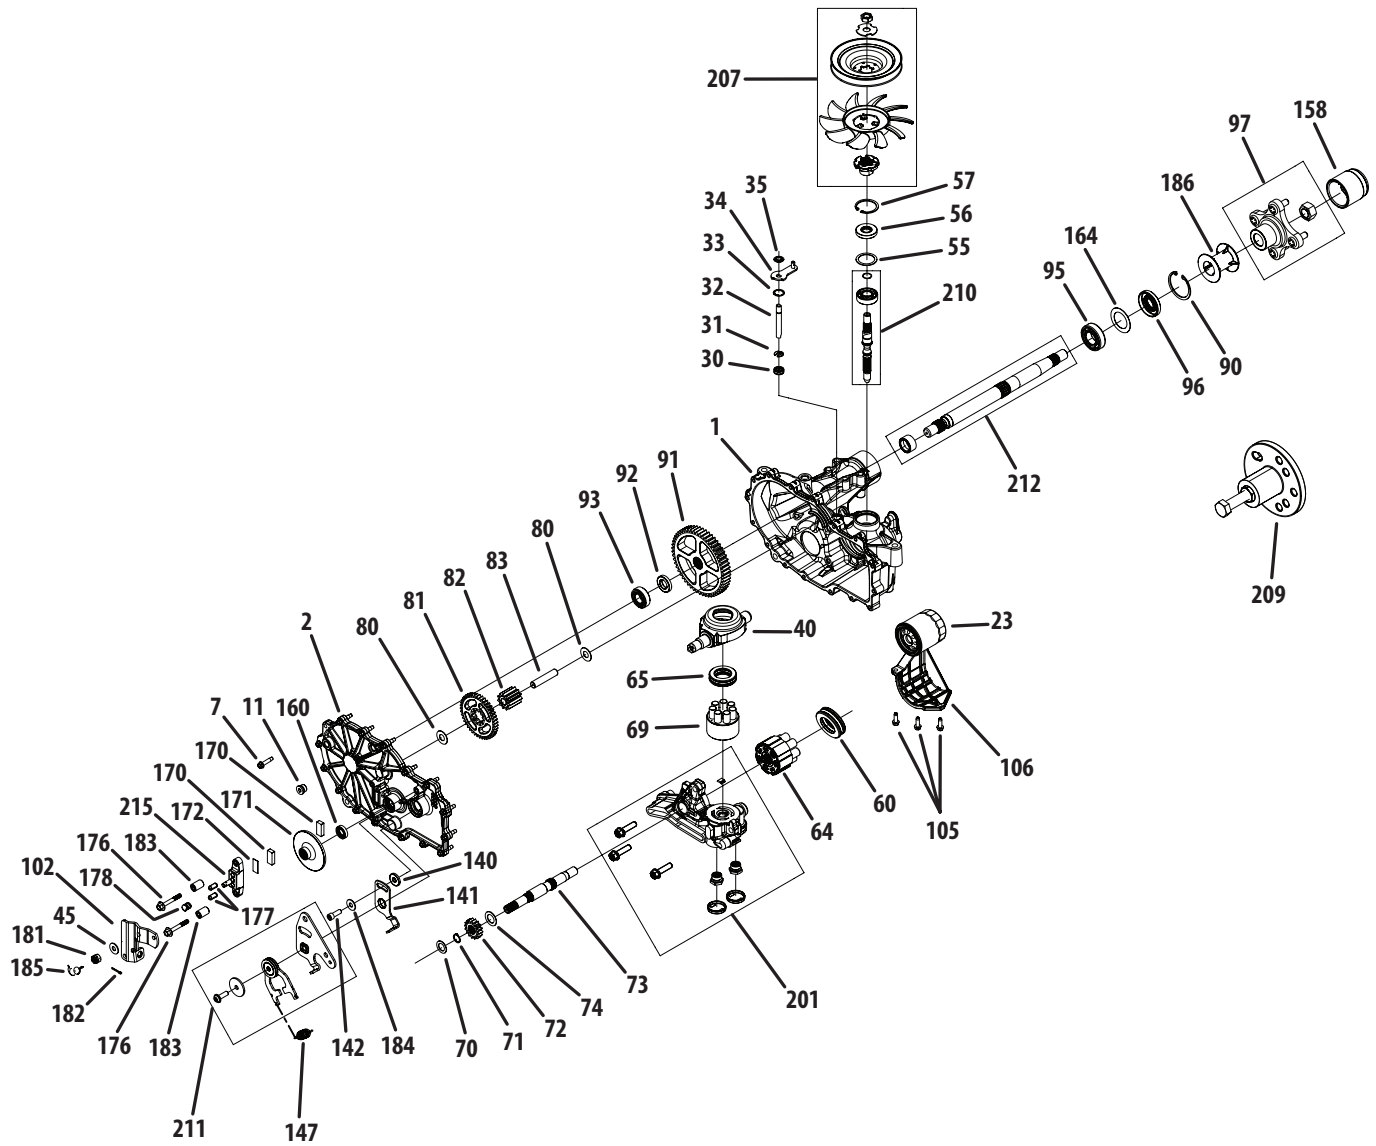




| Ref. | Part Number     | Description                       |
|------|-----------------|-----------------------------------|
| 1    | HG-72490        | Kit, Housing, Main, LH            |
| 2    | HG-72376        | Kit, Cover Side LH Control        |
| 7    | HG-53246        | Screw, Hex Washer                 |
| 11   | HG-9005110-5600 | Plug, 9/16-18                     |
| 23   | HG-52114P       | Filter, Spin-On 2.6 x 3.0         |
| 30   | HG-51626        | Seal, Lip, .375 x .75 x .25       |
| 31   | HG-51628        | Ring, Retaining .375 External     |
| 32   | HG-52136        | Rod, Bypass                       |
| 33   | HG-51627        | Ring Retaining .750 Internal      |
| 34   | HG-51910        | Arm, Bypass                       |
| 35   | HG-51630        | Ring, Ret .375 External           |
| 40   | HG-51048        | Trunnion, Swashplate              |
| 45   | 736-0371        | Washer, .34 x .88 x .06           |
| 55   | HG-50951        | Washer, 1.23 x 1.57 x .04         |
| 56   | HG-51161        | Seal, Lip 17 x 40 x 7             |
| 57   | HG-50329        | Ring Retaining Internal           |
| 60   | HG-51462        | Bearing, Thrust 35 x 62 x 18      |
| 64   | HG-71579        | Kit, 16cc Cylinder Block Assembly |
| 65   | HG-50551P       | Thrust Bearing, 30 x 52 x 13      |
| 69   | HG-70723        | Kit, Block, 7 Piston              |
| 70   | HG-44371        | Washer, .63 x 1.00 x .05          |
| 71   | HG-44145        | Ring, Reatining, Motor Shaft      |
| 72   | HG-52149        | Gear, 16T                         |
| 73   | HG-54325        | Shaft, Motor                      |
| 74   | HG-51069        | Washer, .71 x 1.16 x .04          |
| 80   | HG-50132        | Washer                            |
| 81   | HG-52148        | Gear, 43T                         |
| 82   | HG-52583        | Gear, 11T                         |
| 83   | HG-51083        | Pin, Jackshaft                    |
| 90   | HG-50859        | Ring, Retaining 2.25 Internal     |
| 91   | HG-52108        | Gear, 54T                         |
| 92   | HG-53336        | Spacer, .750 x 1.00 x .257        |
| 93   | HG-53071        | Bearing, Ball 3/4 x 40mm x 12mm   |
| 95   | HG-53656        | Bearing, Ball 25.4 x 52 x 15      |
| 96   | HG-53699        | Seal, Lip, 1.0 x 2.06 x .38       |


| Ref. | Part Number | Description                     |
|------|-------------|---------------------------------|
| 97   | HG-71404    | Kit, Hub 4-Bolt                 |
| 102  | HG-54440    | Arm, Brake                      |
| 105  | HG-50752    | Screw, Hex Washer 1/4-20 x .75  |
| 106  | HG-53644    | Guard, Filter, LH               |
| 140  | HG-52527    | Spacer, .320 x 1.005 x .150     |
| 141  | HG-51945    | Arm, Neutral Right              |
| 142  | HG-71341    | Socket Cap Screw, 5/16-24 x 7/8 |
| 147  | HG-51605    | Spring, Extension               |
| 158  | HG-53501    | Cap, Axle                       |
| 160  | HG-70719    | Seal, Lip .625 x 1.00 x .250    |
| 164  | HG-53514    | Spacer, 1.355 x 2.035 x .021    |
| 170  | 917-0678    | Puck, Brake                     |
| 171  | HG-53989    | Rotor, Brake                    |
| 172  | 917-0682    | Puck, Plate                     |
| 176  | HG-51146    | Screw, .250-20 x 2.0 HFS Patch  |
| 177  | 941-0343    | Pin, Brake Actuating            |
| 178  | HG-50919    | Compression Spring              |
| 181  | 912-0273    | Nut, Castle 5/16-24             |
| 182  | 914-0507    | Pin, Cotter 3/32 x 3/4          |
| 183  | HG-23711    | Spacer                          |
| 184  | 736-0371    | Washer, .34 x .88 x .06         |
| 185  | HG-50884    | Spring, Brake Arm Bias          |
| 186  | HG-53496    | Tube, Axle 2.03                 |
| 200  | HG-71410    | Kit, Seal, ZT-2800              |
| 201  | HG-71580    | Kit, Center Section RH          |
| 207  | HG-72135    | Kit, Fan Pulley                 |
|      | HG-53994    | Fan Only                        |
|      | HG-53812    | Pulley Hub                      |
|      | HG-51523    | Washer                          |
|      | HG-44133    | Nut                             |
| 209  | HG-72320    | Kit, Hub Puller                 |
| 210  | HG-71443    | Kit, Input Shaft                |
| 211  | HG-71588    | Kit, RTN Bidirectional          |
| 212  | HG-71570    | Kit, Shaft Axle                 |
| 215  | HG-70633    | Kit, Brake Yoke                 |

## Kohler KT740-3017 Crankcase

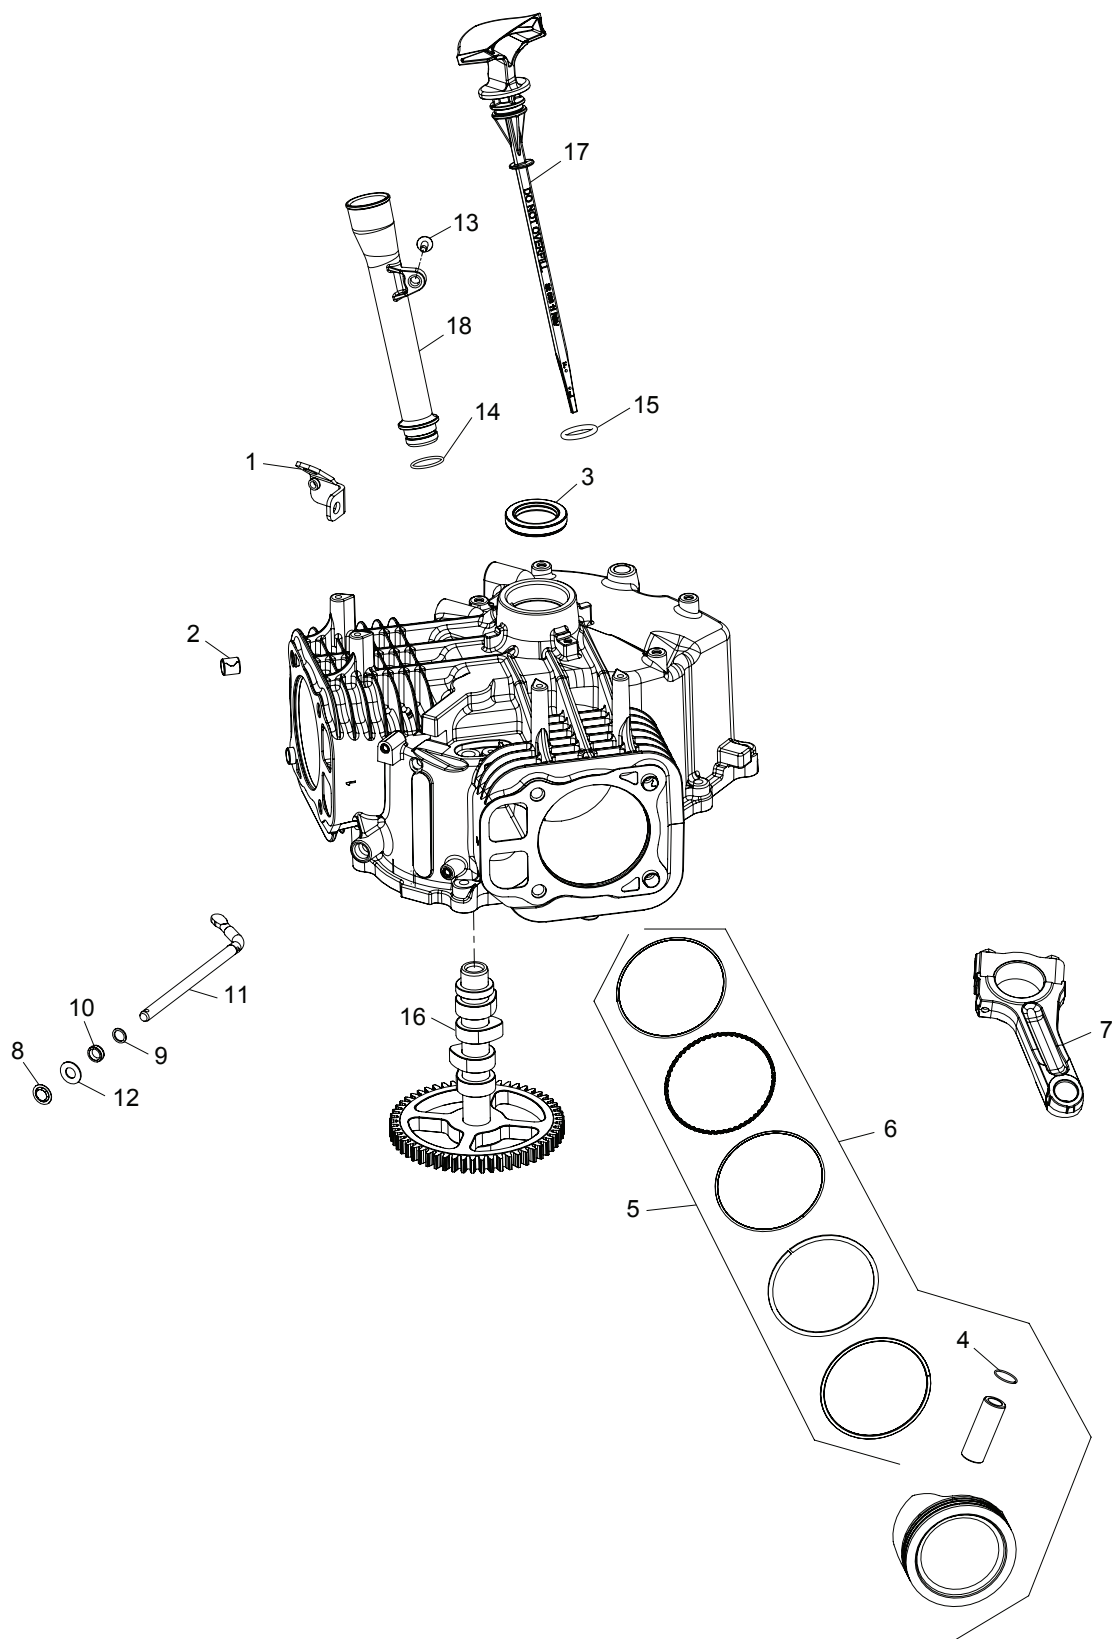

| Ref. | Part Number     | Description                           |
|------|-----------------|---------------------------------------|
| 1    | KH-24-126-243-S | Lifting Strap                         |
| 2    | KH-24-380-16-S  | Locating Pin                          |
| 3    | KH-24-032-19-S  | Oil Seal, 1.78 x 1.26                 |
| 4    | KH-24-018-01-S  | Piston Pin Retainer                   |
| 5    | KH-25-108-01-S  | Piston Ring Set (STD)                 |
| —    | KH-25-108-02-S  | Piston Ring Set (.08)                 |
| —    | KH-25-108-03-S  | Piston Ring Set (.25)                 |
| —    | KH-25-108-04-S  | Piston Ring Set (.50)                 |
| 6    | KH-25-874-13-S  | Piston Kit w/ Ring (STD) (Inc. 4 & 5) |
| —    | KH-25-874-15-S  | Piston Kit w/ Ring (.08)              |
| —    | KH-25-874-16-S  | Piston Kit w/ Ring (.25)              |
| —    | KH-25-874-17-S  | Piston Kit w/ Ring (.50)              |
| 7    | KH-24-067-30-S  | Connecting Rod (STD)                  |
| —    | KH-24-067-31-S  | Connecting Rod (U/S .010) (25mm)      |
| 8    | KH-24-018-09-S  | Ring Retainer                         |
| 9    | KH-24-468-15-S  | Flat Washer, 11/32"                   |
| 10   | KH-28-032-09-S  | Governor Cross Shaft Seal             |
| 11   | KH-24-144-38-S  | Governor Cross Shaft                  |
| 12   | KH-M-931010-S   | Flat Washer, 9 mm                     |
| 13   | KH-25-086-398-S | Thread Forming Screw                  |
| 14   | KH-12-153-07    | O-Ring                                |
| 15   | KH-25-153-09-S  | O-Ring                                |
| 16   | KH-32-010-07-S  | Camshaft Assembly                     |
| 17   | KH-32-038-12-S  | Dipstick Assembly                     |
| 18   | KH-32-123-14-S  | Oil Fill Tube Assembly                |


# Kohler KT740-3017 Head/Valve/Breather

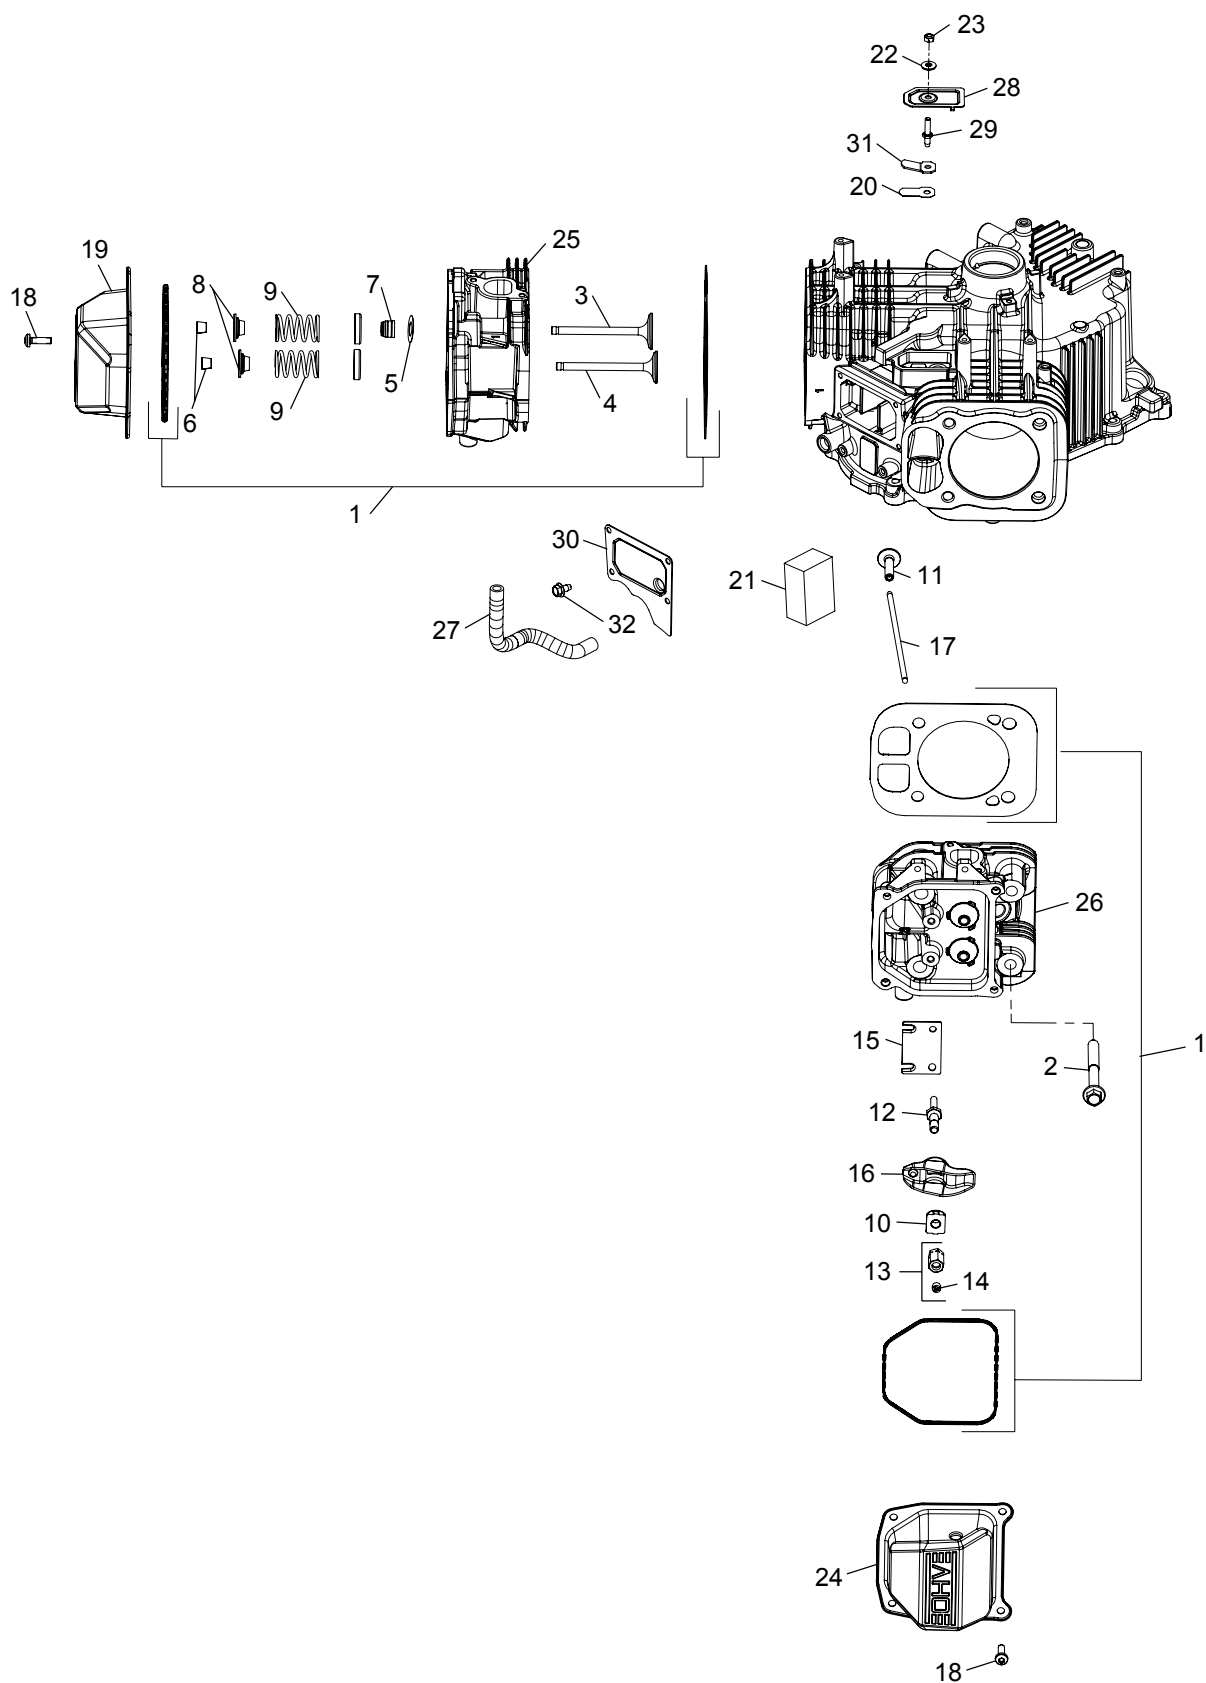


## Kohler KT740-3017 Head/Valve/Breather

| Ref. | Part Number     | Description                                                     |
|------|-----------------|-----------------------------------------------------------------|
| 1    | KH-32-841-02-S  | Cylinder Head Gasket Kit (Inc. Head Mounting Hardware)          |
| 2    | KH-62-086-08-S  | Flange Screw, M10 x 1.5 x 90                                    |
| 3    | KH-32-017-01-S  | Intake Valve                                                    |
| 4    | KH-32-016-01-S  | Exhaust Valve                                                   |
| 5    | KH-275067       | Spacer (.010")                                                  |
| 6    | KH-12-755-03    | Retainer Kit                                                    |
| 7    | KH-25-032-14-S  | Valve Band Seal                                                 |
| 8    | KH-25-173-28-S  | Valve Spring Cap                                                |
| 9    | KH-32-089-05-S  | Valve Spring                                                    |
| 10   | KH-25-599-01-S  | Rocker Arm Pivot                                                |
| 11   | KH-32-019-02-S  | Tappet                                                          |
| 12   | KH-32-072-04-S  | Rocker Stud                                                     |
| 13   | KH-32-100-05-S  | Hex Nut Assembly (Inc. #14)                                     |
| 14   | KH-25-086-168-S | Set Screw                                                       |
| 15   | KH-32-146-09-S  | Guide Plate                                                     |
| 16   | KH-32-186-03-S  | Rocker Arm                                                      |
| 17   | KH-32-411-04-S  | Push Rod                                                        |
| 18   | KH-25-086-374-S | Pan Head Screw                                                  |
| 19   | KH-25-096-09-S  | Rocker Cover                                                    |
| 20   | KH-12-402-02    | Breather Reed                                                   |
| 21   | KH-32-050-06-S  | Breather Filter                                                 |
| 22   | KH-32-468-01-S  | Sealing Washer                                                  |
| 23   | KH-M-547050-S   | Lock Nut, M5 x 8                                                |
| 24   | KH-25-096-11-S  | Rocker Cover                                                    |
| 25   | KH-32-318-21-S  | Cylinder Head Assembly Kit, #1 (Inc. Exhaust Mounting Hardware) |
| 26   | KH-32-318-22-S  | Cylinder Head Assembly Kit, #2 (Inc. Exhaust Mounting Hardware) |
| 27   | KH-25-326-62-S  | Breather Hose                                                   |
| 28   | KH-32-096-16-S  | Breather Cover                                                  |
| 29   | KH-32-072-05-S  | Stud                                                            |
| 30   | KH-16-096-02-S  | Breather Media Cover                                            |
| 31   | KH-66-018-04-S  | Reed Retainer                                                   |
| 32   | KH-25-086-400-S | Thread Forming Screw                                            |

## Kohler KT740-3017 Oil Pan/Lubrication

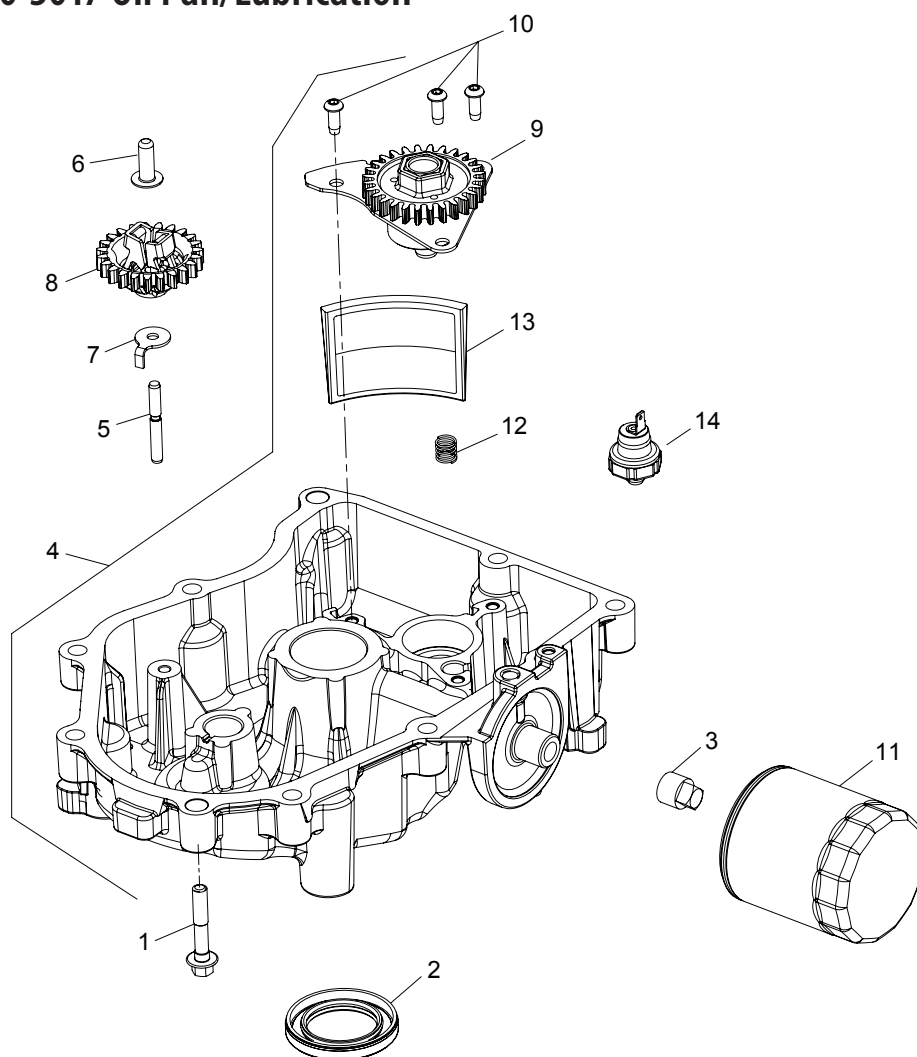


| Ref. | Part Number     | Description                  |
|------|-----------------|------------------------------|
| 1    | KH-24-086-17-S  | Flange Screw, M8 x 1.25 x 45 |
| 2    | KH-25-032-06-S  | Oil Seal, 2.38 x 1.45        |
| 3    | KH-25-139-57-S  | Square Head Pipe Plug, 3/8   |
| 4    | KH-32-199-17-S  | Oil Pan Assembly             |
| 5    | KH-12-144-02    | Governor Gear Shaft          |
| 6    | KH-12-380-01    | Governor Regulating Pin      |
| 7    | KH-24-448-02-S  | Locking Tab                  |
| 8    | KH-32-310-02-S  | Governor Gear Kit            |
| 9    | KH-32-393-18-S  | Oil Pump Assembly            |
| 10   | KH-25-086-414-S | Button Head Screw            |
| 11   | KH-52-050-02-S  | Oil Filter                   |
| 12   | KH-32-089-06-S  | Compression Spring           |
| 13   | KH-32-162-06-S  | Oil Screen                   |
| 14   | KH-25-099-27-S  | Oil Pressure Switch          |

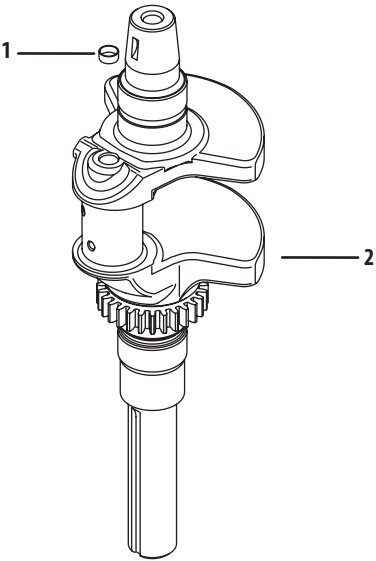

| Ref. | Part Number     | Description |
|------|-----------------|-------------|
| 1    | KH-52-139-09-S  | Cup Plug    |
| 2    | KH-32-014-327-S | Crankshaft  |


## Kohler KT740-3017 Ignition/Electrical

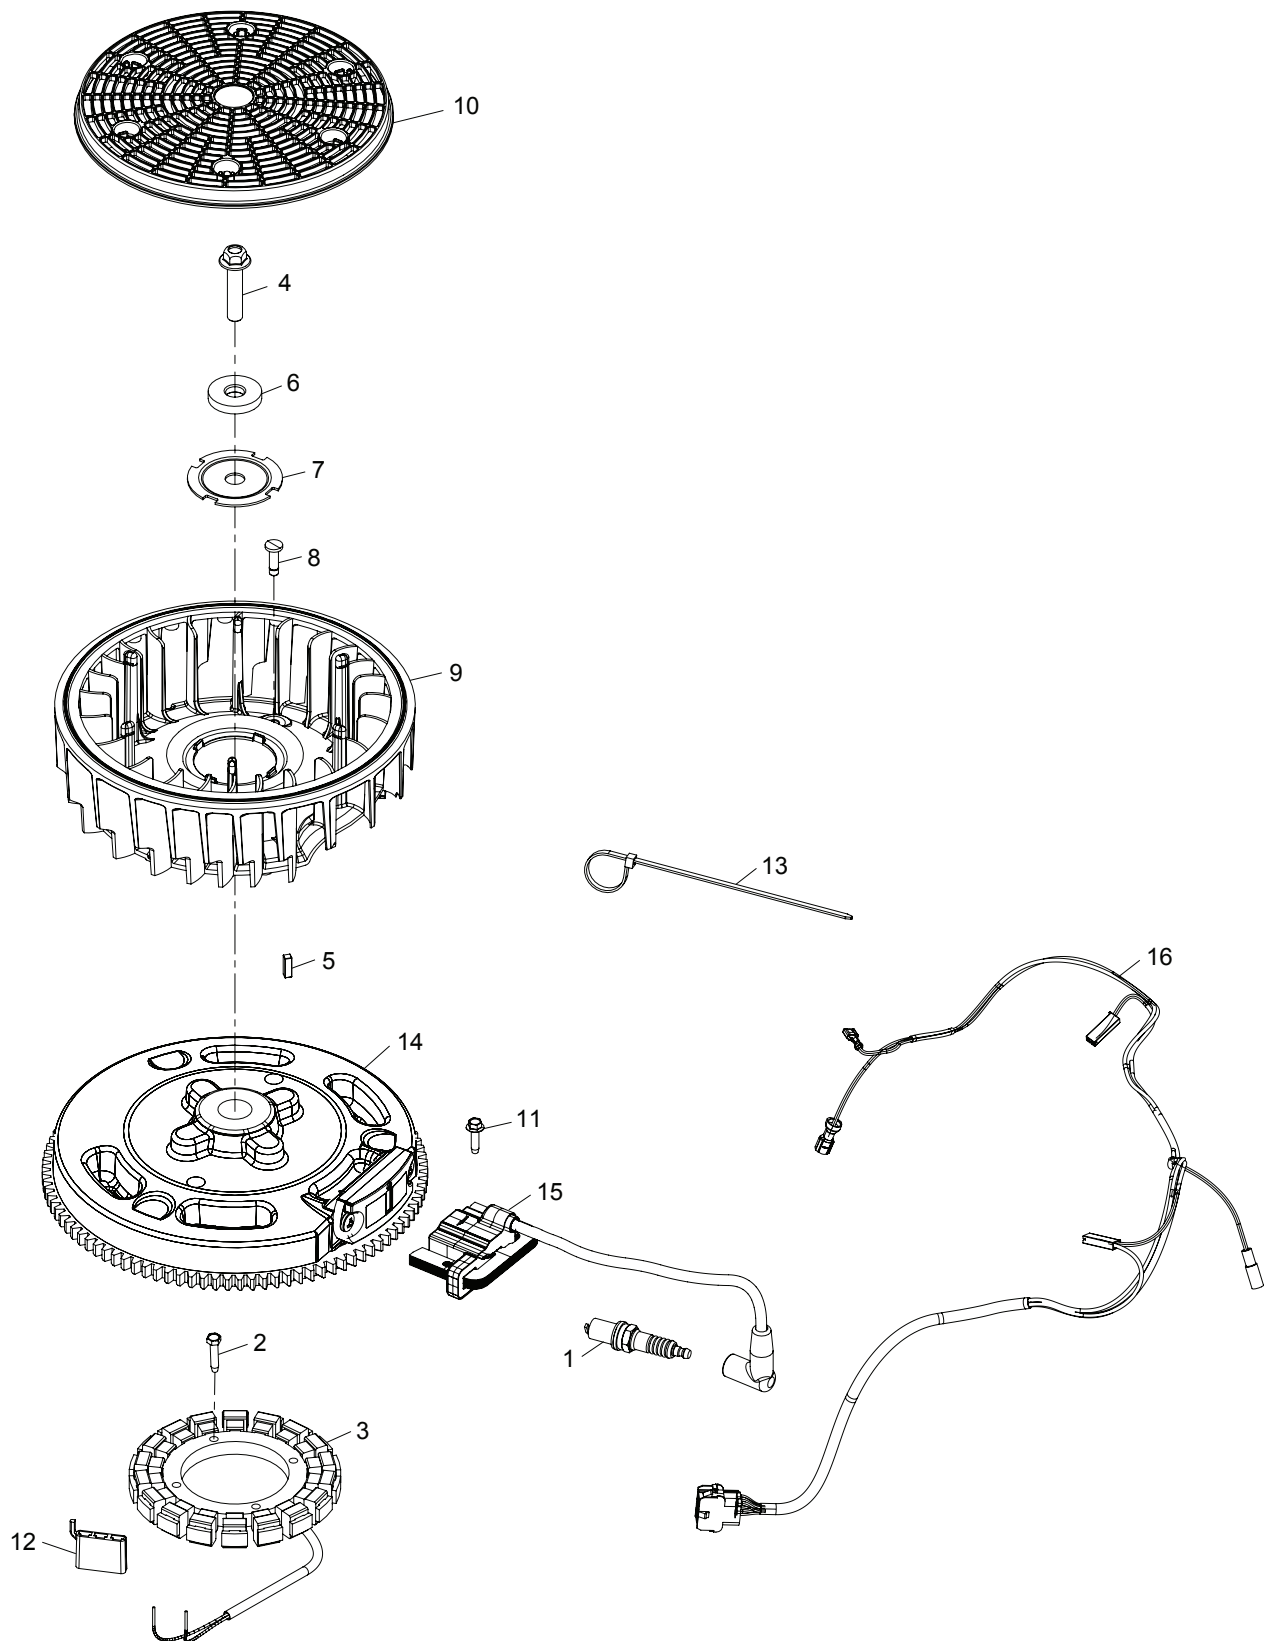



| Ref. | Part Number     | Description           |
|------|-----------------|-----------------------|
| 1    | KH-25-132-16-S  | Spark Plug            |
| 2    | KH-25-086-402-S | Thread Forming Screw  |
| 3    | KH-237878       | 15 Amp Stator Kit     |
| 4    | KH-25-086-361-S | Hex Flange Screw      |
| 5    | KH-25-340-04-S  | Square Key            |
| 6    | KH-25-468-09-S  | Flat Washer           |
| 7    | KH-20-146-05-S  | Fan Mounting Plate    |
| 8    | KH-32-018-03-S  | Flywheel Fan Retainer |
| 9    | KH-32-157-04-S  | Fan                   |
| 10   | KH-32-162-03-S  | Grass Screen          |
| 11   | KH-25-086-473-S | Thread Forming Screw  |
| 12   | KH-25-155-41-S  | Connector             |
| 13   | KH-25-454-03-S  | Wire Tie              |
| 14   | KH-32-025-21-S  | Flywheel Assembly     |
| 15   | KH-32-584-07-S  | Ignition Module       |
| 16   | KH-32-176-34-S  | Wiring Harness        |


## Kohler KT740-3017 Blower Housing & Baffles

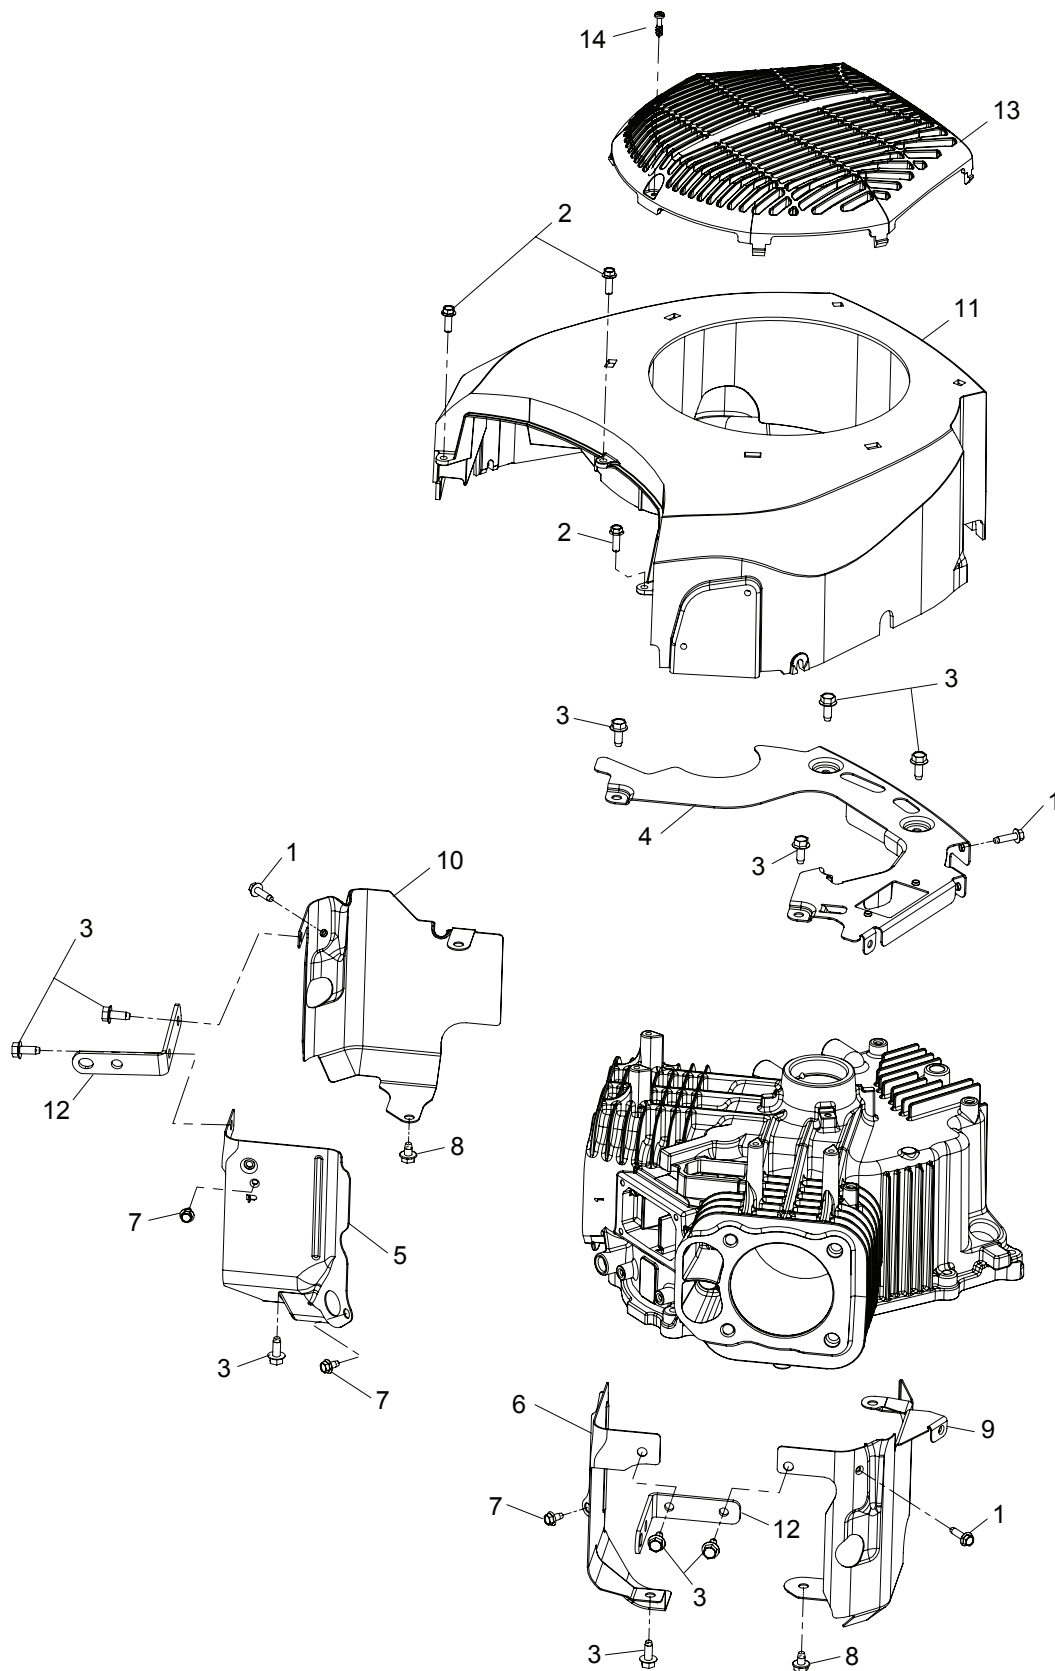

## Kohler KT740-3017 Blower Housing & Baffles


| Ref. | Part Number     | Description                |
|------|-----------------|----------------------------|
| 1    | KH-25-086-473-S | Thread Forming Screw       |
| 2    | KH-25-086-450-S | Hi-Low Screw               |
| 3    | KH-25-086-397-S | Thread Forming Screw       |
| 4    | KH-32-146-15-S  | Backing Plate              |
| 5    | KH-32-063-19-S  | Valley Baffle, #1 Cylinder |
| 6    | KH-32-063-20-S  | Valley Baffle, #2 Cylinder |
| 7    | KH-25-086-400-S | Thread Forming Screw       |
| 8    | KH-25-086-406-S | Thread Forming Screw       |
| 9    | KH-32-063-17-S  | Left Barrel Baffle         |
| 10   | KH-32-063-18-S  | Right Barrel Baffle        |
| 11   | KH-32-027-17-S  | Blower Housing             |
| 12   | KH-32-445-01-S  | Lift Strap                 |
| 13   | KH-32-314-06-S  | Fixed Guard                |
| 14   | KH-25-086-449-S | Thread Screw, M5-2.42      |

## Kohler KT740-3017 Engine Controls

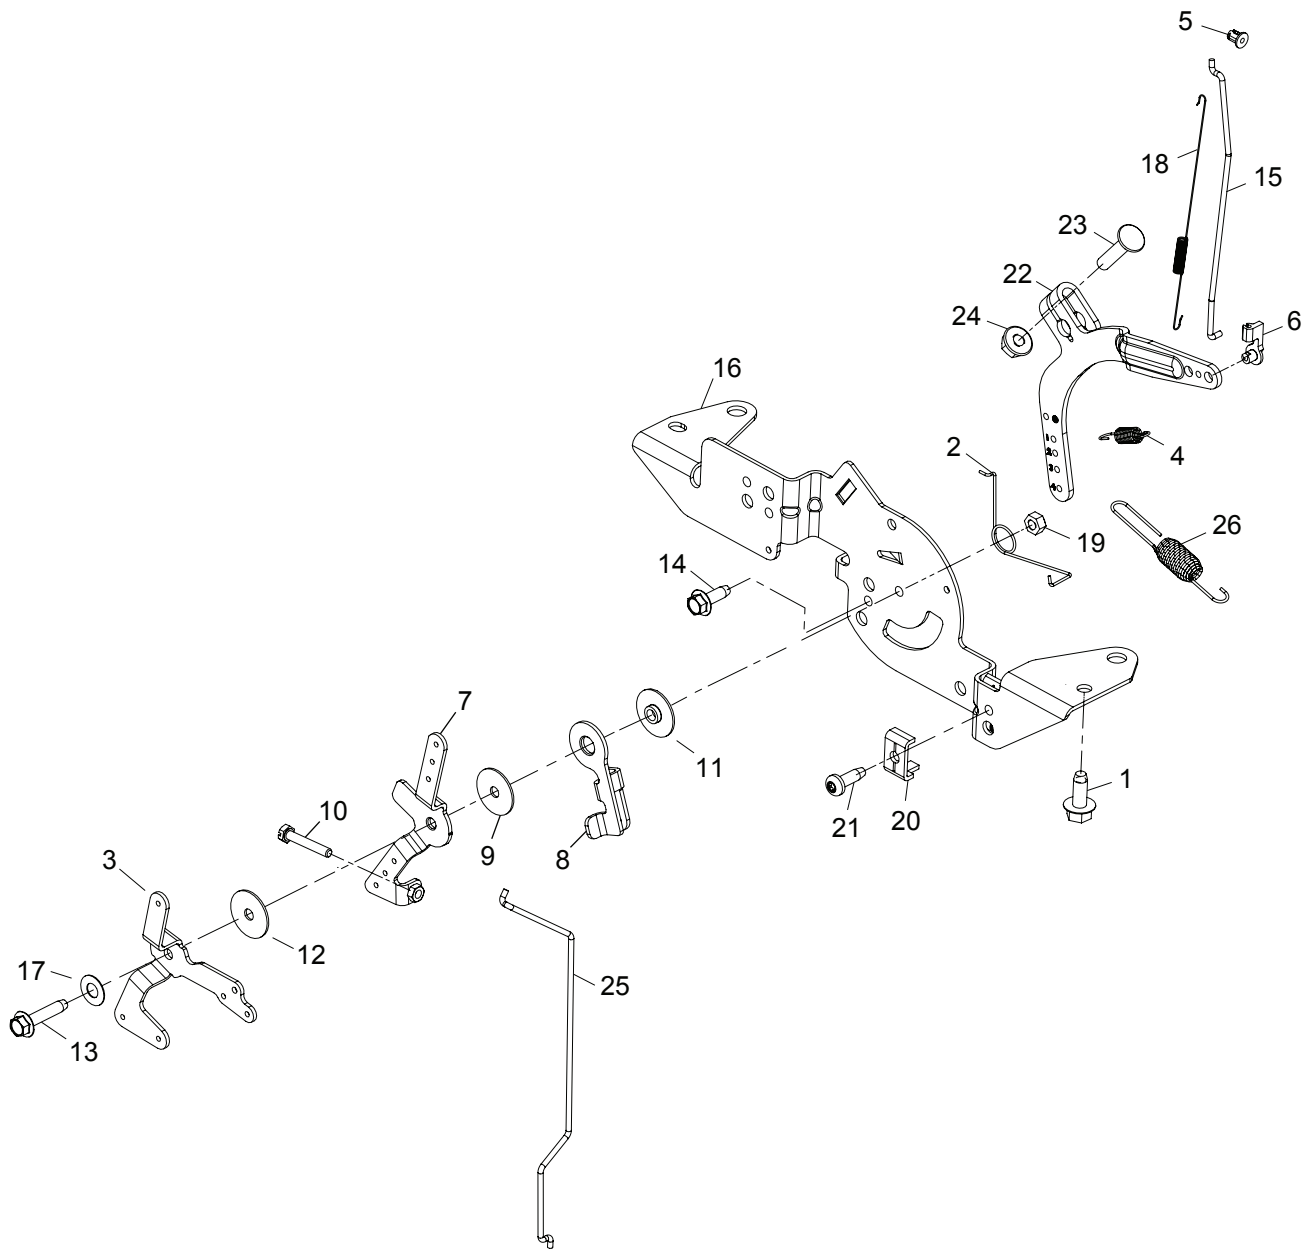


| Ref. | Part-Number     | Description               |
|------|-----------------|---------------------------|
| 1    | KH-25-086-397-S | Thread Forming Screw      |
| 2    | KH-24-089-03    | Choke Return Spring       |
| 3    | KH-24-090-05    | Choke Lever               |
| 4    | KH-24-089-55-S  | Governor Spring           |
| 5    | KH-25-158-08    | Linkage Retaining Bushing |
| 6    | KH-25-158-11    | Throttle Linkage Bushing  |
| 7    | KH-24-090-13    | Throttle Control Lever    |
| 8    | KH-24-090-47-S  | Throttle Actuator Lever   |
| 9    | KH-24-468-20-S  | Flat Washer, 5mm          |
| 10   | KH-M-403025     | Screw, M4 x 0.7 x 25      |
| 11   | KH-24-112-27-S  | Control Assembly Spacer   |
| 12   | KH-24-468-01    | Flat Washer, 5.5mm        |
| 13   | KH-25-086-473-S | Thread Forming Screw      |
| 14   | KH-25-086-398-S | Thread Forming Screw      |
| 15   | KH-32-079-01-S  | Throttle Linkage          |
| 16   | KH-32-126-04-S  | Control Bracket           |
| 17   | KH-41-468-03    | Spring Washer, 1/4        |
| 18   | KH-32-089-07-S  | Linkage Spring            |
| 19   | KH-M-547050-S   | Lock Nut, M5 x .8         |
| 20   | KH-12-237-01    | Cable Clamp               |
| 21   | KH-25-086-405-S | Thread Forming Screw      |
| 22   | KH-24-090-69-S  | Governor Lever            |
| 23   | KH-24-211-03-S  | Bolt, M6 x 1.0 x 25       |
| 24   | KH-M-641060-S   | Flange Nut, M6 x 1.0      |
| 25   | KH-24-079-22-S  | Choke Linkage             |
| 26   | KH-24-089-18    | Governor Spring           |

## Kohler KT740-3017 Air Intake/Filtration

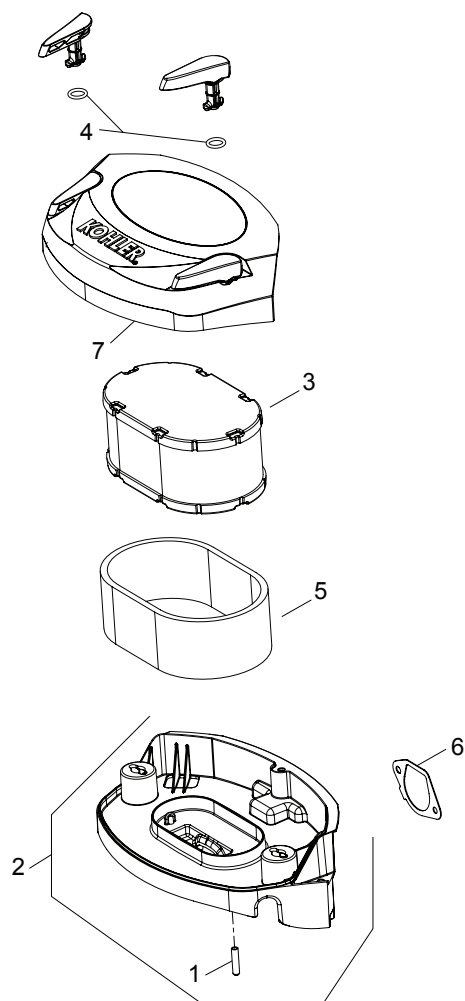


| Ref. | Part Number     | Description                |
|------|-----------------|----------------------------|
| 1    | KH-25-173-09-S  | Masking Cap                |
| 2    | KH-32-094-13-S  | Air Cleaner Base Assembly  |
| 3    | KH-16-883-04-S1 | Air Filter Element         |
| 4    | KH-25-153-15-S  | O-Ring                     |
| 5    | KH-16-083-05-S  | Pre-Cleaner Element        |
| 6    | KH-32-041-04-S  | Air Cleaner Base Gasket    |
| 7    | KH-32-096-22-S  | Air Cleaner Cover Assembly |

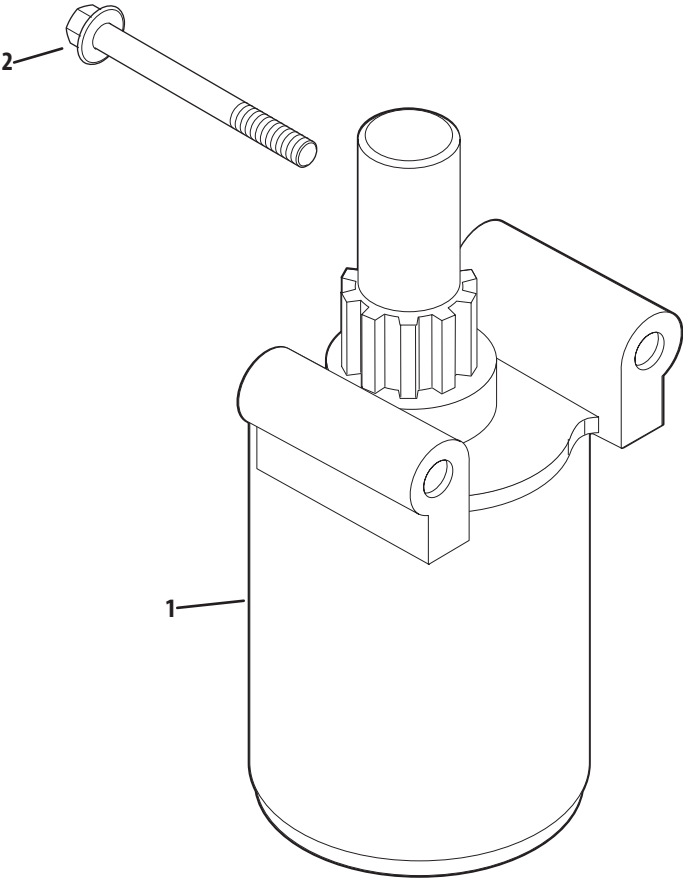

| Ref. | Part Number    | Description                  |
|------|----------------|------------------------------|
| 1    | KH-32-098-04-S | Starter Assembly             |
| 2    | KH-M-851080-S  | Flange Screw, M8 x 1.25 x 80 |

## Kohler KT740-3017 Fuel System

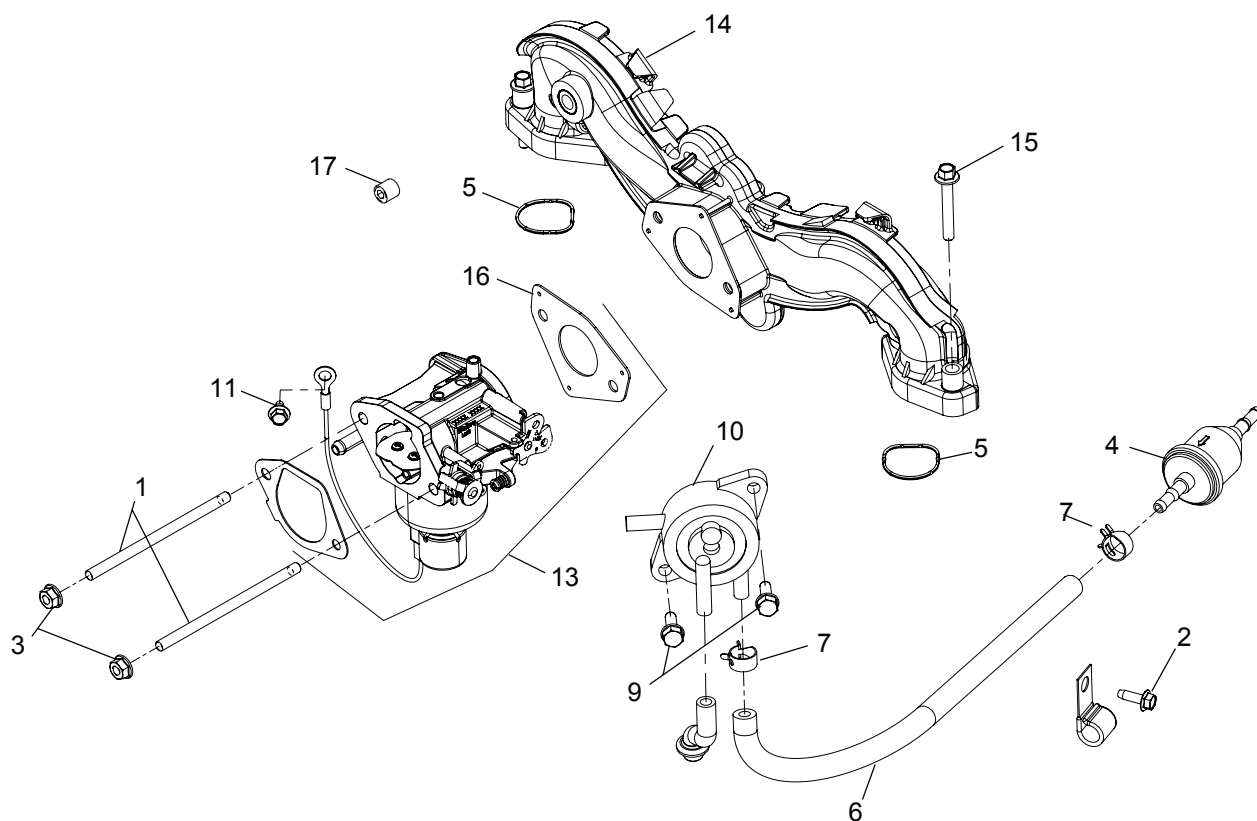


| Ref. | Part Number     | Description              |
|------|-----------------|--------------------------|
| 1    | KH-25-072-25-S  | Stud                     |
| 2    | KH-25-086-398-S | Thread Forming Screw     |
| 3    | KH-M-641060-S   | Flange Nut, M6 x 1.0     |
| 4    | KH-25-050-22-S1 | Fuel Filter              |
| 5    | KH-24-153-27-S  | Intake Port O-Ring       |
| 6    | KH-25-111-81-S  | Fuel Line, 24"           |
| 7    | KH-25-237-37-S  | Spring Hose Clamp        |
| 9    | KH-24-086-12    | Tap Screw, M6 x 1.7 x 18 |

| Ref. | Part Number     | Description                 |
|------|-----------------|-----------------------------|
| 10   | KH-24-393-16    | Fuel Pump                   |
| 11   | KH-25-086-400-S | Thread Forming Screw        |
| 13   | KH-32-853-34-S  | Carburetor Kit              |
| 14   | KH-24-164-91-S  | Intake Manifold Kit         |
| 15   | KH-M-651040-S   | Flange Screw, M6 x 1.0 x 40 |
| 16   | KH-24-041-52-S  | Carburetor Gasket           |
| 17   | KH-25-139-60-S  | Pipe Plug, 1/8              |



Kohler KT740-3017 Labels

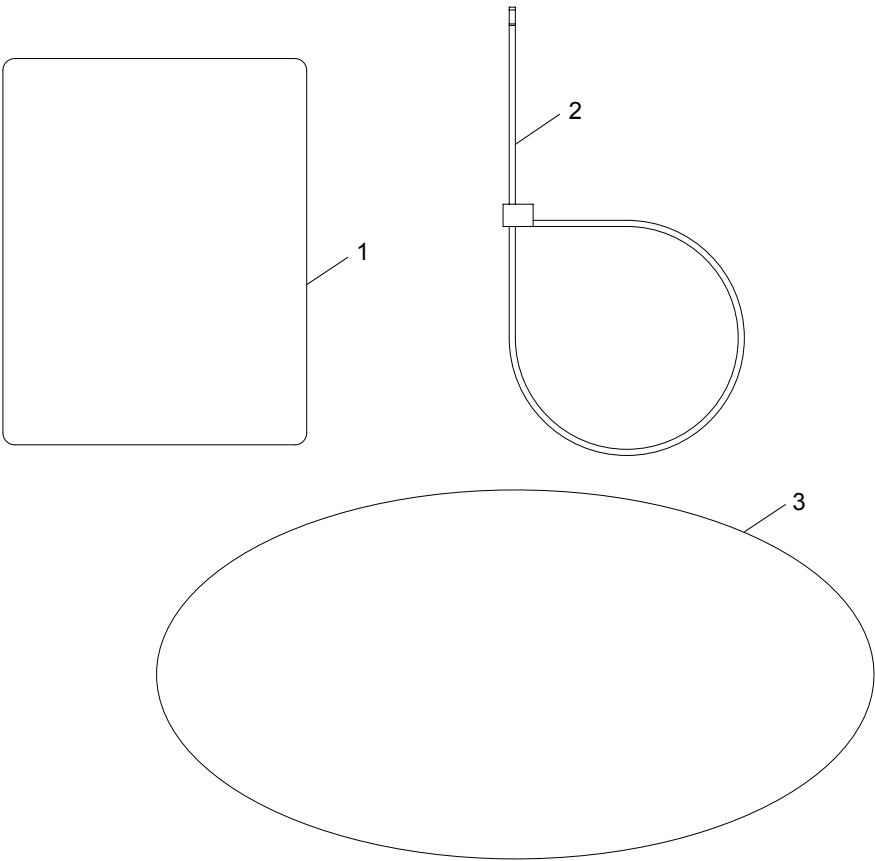

Artwork is representative.  
Actual labels may differ depending on model and specification number.

| Ref. | Part Number     | Description          |
|------|-----------------|----------------------|
| 1    | KH-25-113-70-S  | Clear Laminate Decal |
| 2    | KH-25-454-05-S  | Tie                  |
| 3    | KH-32-113-114-S | Decal, 25 HP         |

[illegible]

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.  
Locate your nearest Cub Cadet dealer at (877) 282-8684  
or visit [www.cubcadet.com](http://www.cubcadet.com) to find the nearest Cub Cadet dealer in your area.

---

**CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019**

---