

Cub Cadet.

ILLUSTRATED PARTS MANUAL

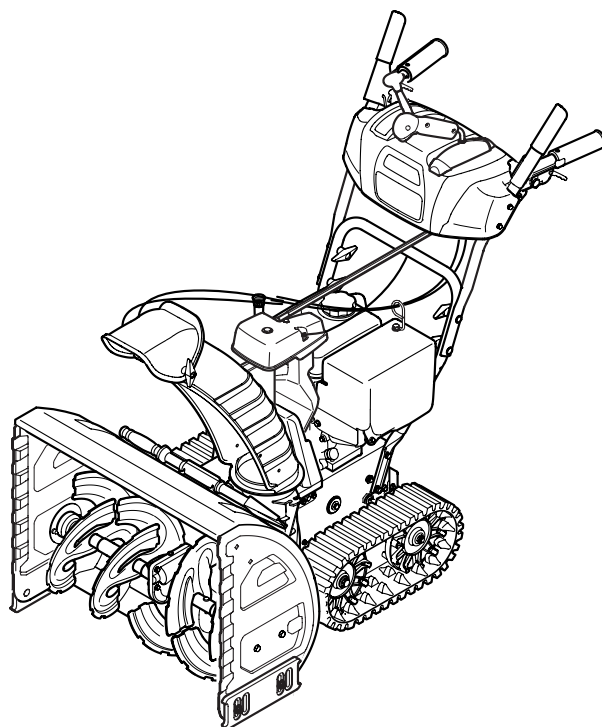

Track Drive Snow Thrower — 728 TDE

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Snow Thrower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Augers Housing & Assembly	8	Labels	14
Drive System	12	S/T Style Panel	4
Engine Model 478-SUB.....	16	Transmission & Track Drive System	10
4 Way Extended Chute.....	6		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

SERIAL NUMBER

----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)


This page left intentionally blank.

S/T Style Panel

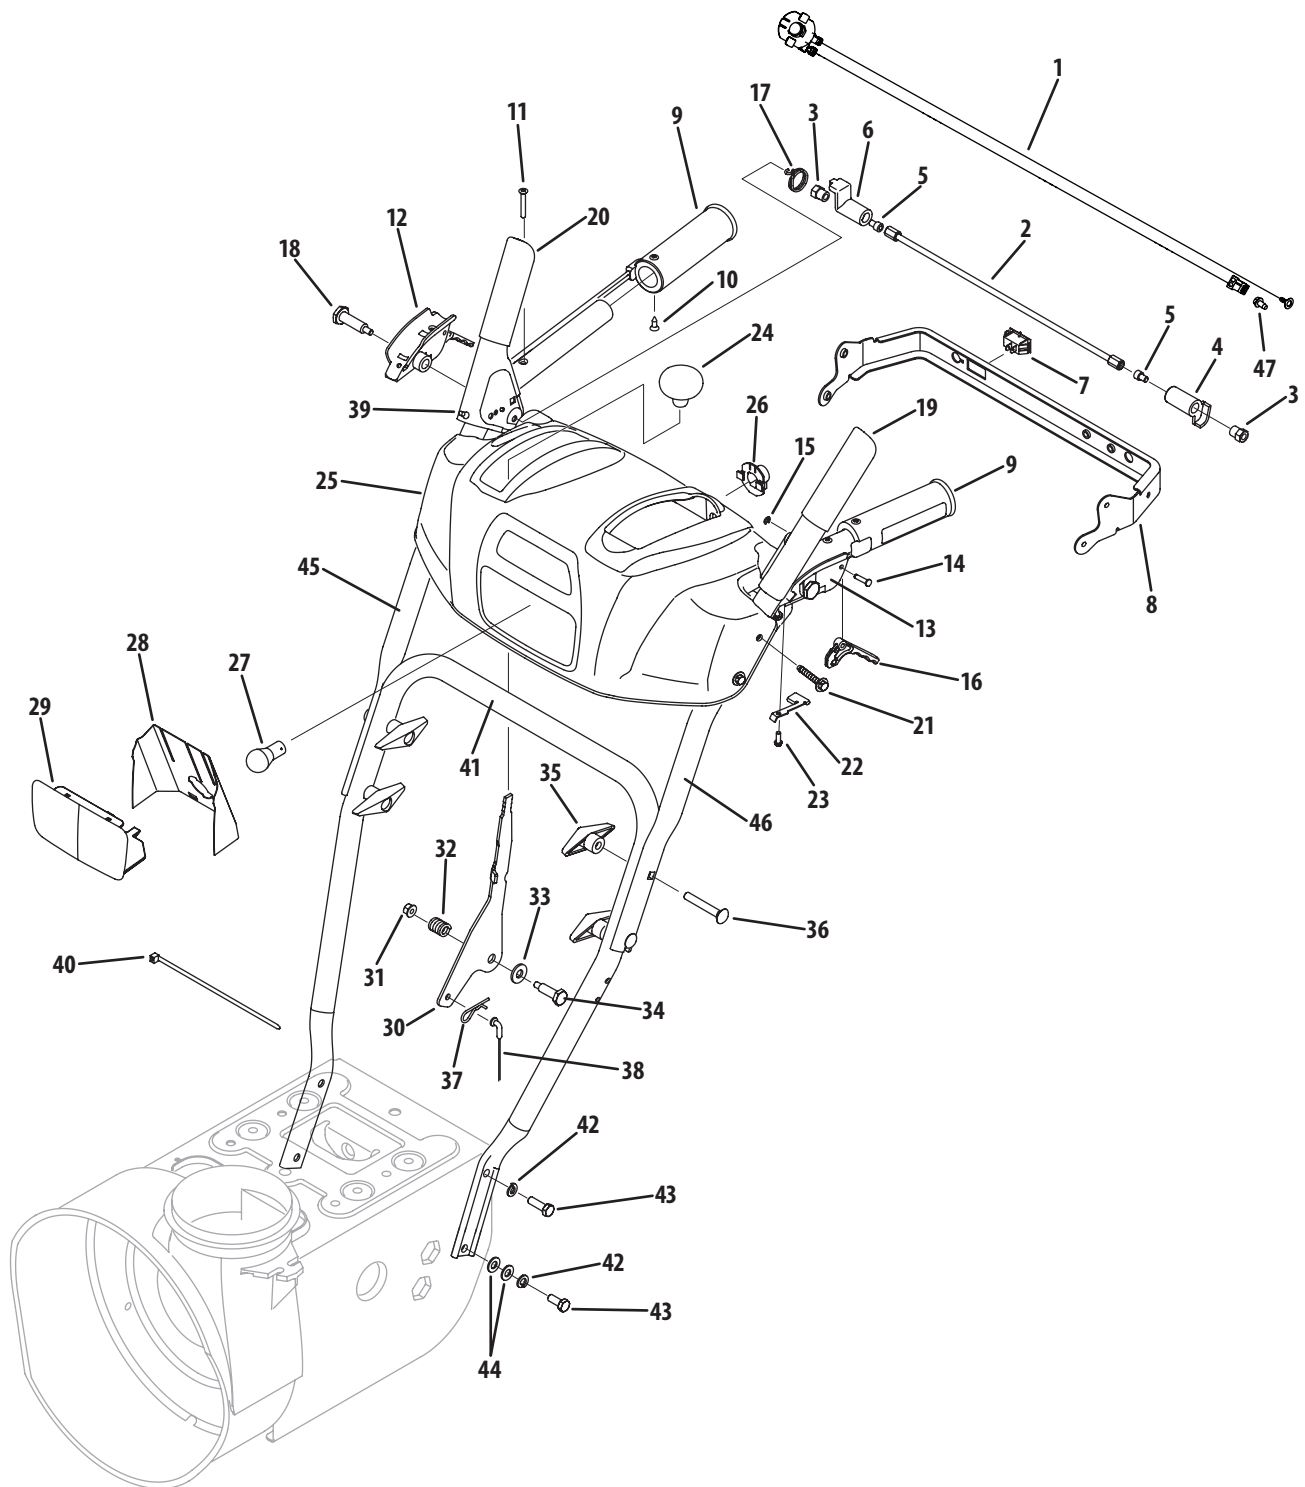

Ref.	Part Number	Description	Ref.	Part Number	Description
1.	725-05148	Wire Harness	25.	931-04187A	Handle Panel
2.	684-04250	Clutch Lock Rod Assembly	26.	925-1649	Light Socket
3.	712-04081A	Hex Shoulder Nut, ¼-20	27.	925-1629	Lamp
4.	731-04896B	Clutch Lock Cam	28.	777X41804	Lens Label
5.	710-3069	Socket Cap Screw ¼-20 x .50	29.	731-05324	Lens
6.	731-04894D	Lock Plate	30.	790-00281B	Shift Lever
7.	725-04393	Heated Grip Switch	31.	712-04064	Flange Lock Nut, ¼-20
8.	790-00248C	Panel Bracket	32.	732-0193	Compression Spring, .39 x .60 x .88
9.	725-05149	Heated Grip	33.	936-0267	Flat Washer, .385 x .87 x .06
10.	710-0837	AB Screw, #10-16 x .625	34.	738-04125	Shoulder Screw, .374 x 1.05
11.	710-1233	Machine Screw, #10-24 x 1.375	35.	920-0284	Wing Knob
12.	631-04134B	Clutch Lock Handle Assembly, RH	36.	710-0572	Carriage Screw, ⅝-18 x 2.25
13.	631-04133A	Clutch Lock Handle Assembly, LH	37.	914-0145	Click Pin, .092 x 1.64
14.	738-04126	Pin, 3/16	38.	946-04518	Speed Selector Cable
15.	716-04036	E-Type Ring, .375	39.	935-0199A	Rubber Bumper, .62 x .22
16.	731-04954	Clutch Trigger Lock	40.	725-0157	Cable Tie, ⅜ x .05 x 7.43
17.	732-04238	Torsion Spring, .8156 ID x .3038	41.	749-0951A	Lower Handle
18.	738-04348	Shoulder Screw, .437 x 1.345 x ¼-20	42.	936-0119	Lock Washer, ⅝
19.	684-04105B	Engagement Handle Assembly, LH	43.	710-1880	Hex Bolt, ⅝-18 x .75
20.	684-04106C	Engagement Handle Assembly, RH	44.	936-0275	Flat Washer, .344 x .688 x .065
21.	710-04586	Hex Washer Screw, ¼-20 x 1.625	45.	749-04310	Upper Handle, RH
22.	732-04219C	Clutch Lock Spring	46.	749-04309	Upper Handle, LH
23.	710-04326	Hex Washer Screw, #8-16 x .50	47.	710-0599	Screw, 1/4-20 x .500
24.	720-04039	Shift Knob			

4-Way Extended Chute

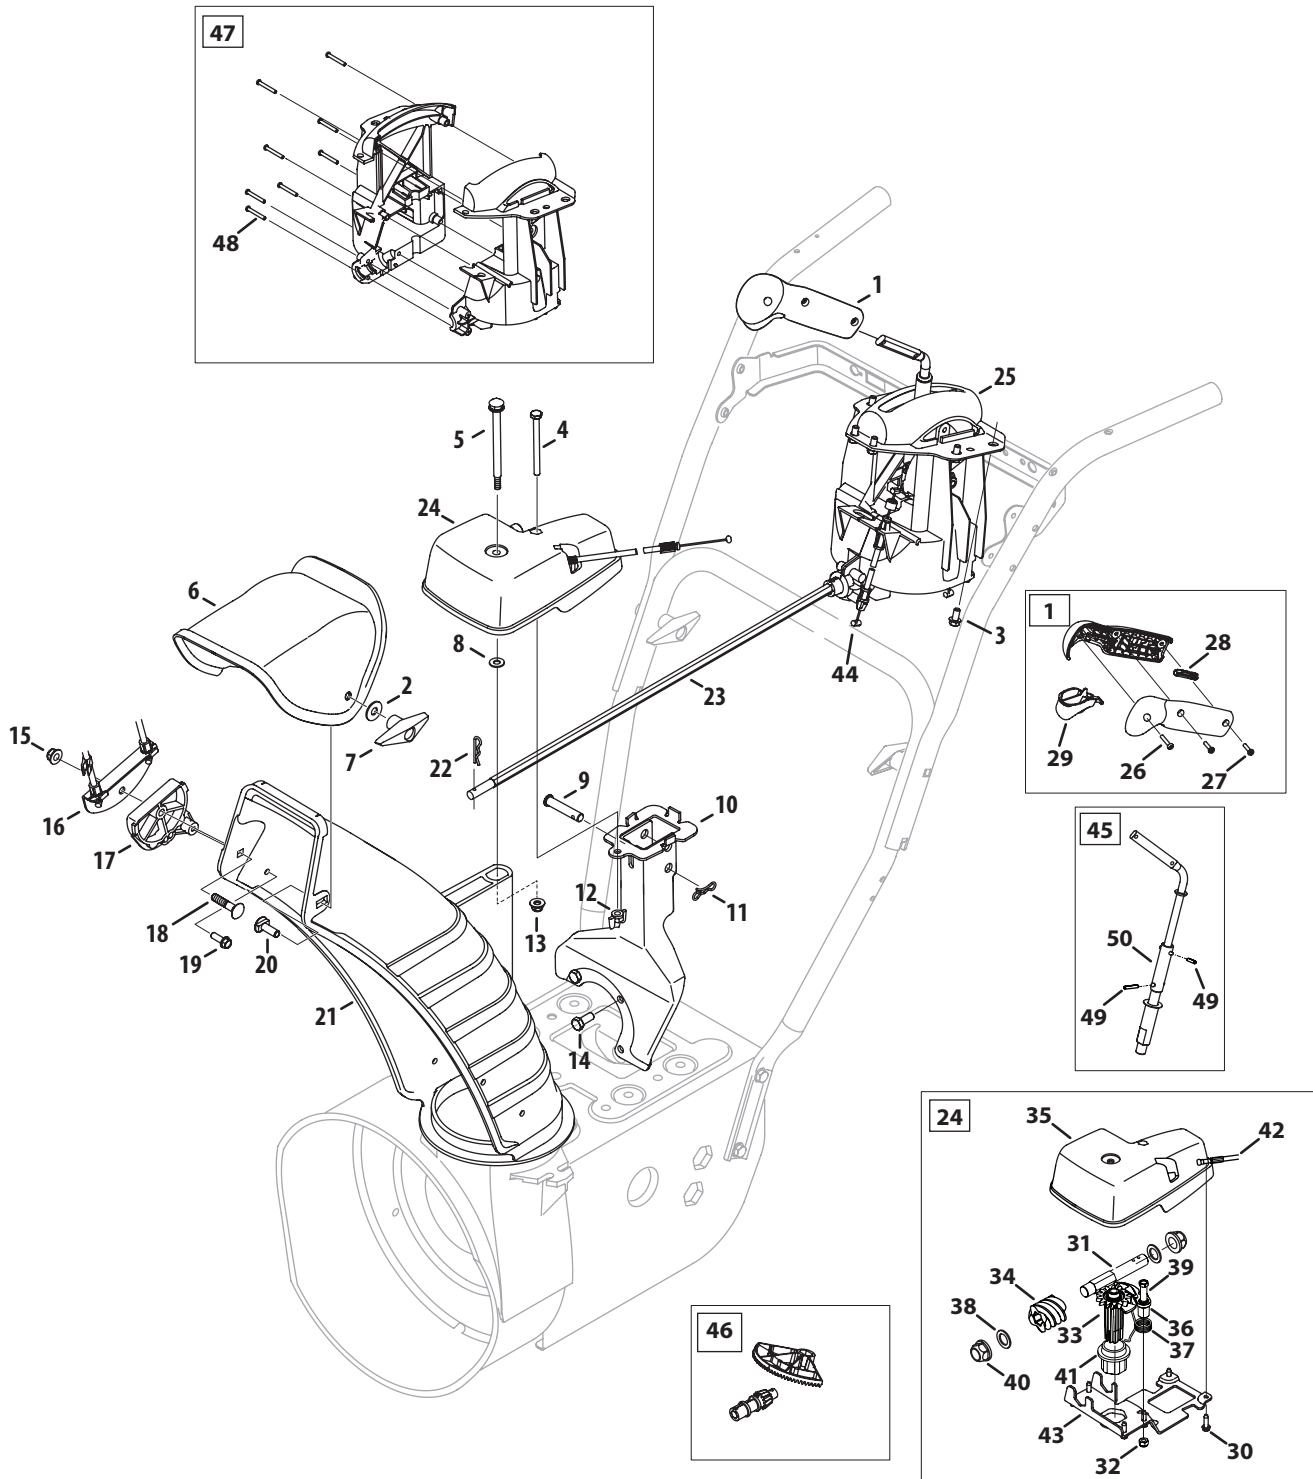


4-Way Extended Chute

Ref.	Part Number	Description
1.	753-06151	Chute Control Assembly
2.	936-0159	Washer, Flat, .349 x .879
3.	710-04187	Hex Washer Screw, 1/4-15 x .50
4.	710-04370	Hex Head Screw, 1/4-20 x 3.00
5.	738-04367	Screw, Shoulder, .312 x 3.5 x 1/4-20
6.	731-04427A	Upper Chute
7.	920-0284	Wing Knob
8.	736-04446	Washer, Flat, .25 x .630
9.	711-04469A	Clevis Pin, 3/8 x 1.87
10.	684-04310A	Chute Support Bracket
11.	714-04040	Bow-Tie Cotter Pin
12.	712-3087	Wing Nut, 1/4-20
13.	712-04064	Flange Lock Nut, 1/4-20
14.	710-0627	Hex Lock Screw, 5/16-24 x .750
15.	712-04063	Flange Lock Nut, 5/16-18
16.	784-5594	Cable Bracket
17.	731-06451	Chute Tilt Cable Guide
18.	710-0262	Carriage Bolt, 5/16-18 x 1.50
19.	710-0895	Hex Washer Screw, 1/4-15 x .750
20.	710-04071	Carriage Bolt, 5/16-18 x 1.00
21.	731-06440A	Lower Chute, 5.0
22.	914-0101	Internal Cotter Pin
23.	747-05116	Chute Rod, 3/8 Hex
24.	918-04801A	Gearbox Assembly, Chute Rotation
25.	984-04338A	4-Way Chute Control
26.	710-04353	Screw, #8 x 1.00

Ref.	Part Number	Description
27.	710-04879	Screw, 8-32 x .750
28.	731-04893A	Joystick Plug
29.	731-07031	Joystick Trigger
30.	710-04373A	Screw, 12-16 x .75
31.	711-05186	Hex Shaft
32.	712-0896	Hexlock Nut, 1/4-28
33.	717-04667	Gear, 14 T
34.	717-04672	Worm
35.	731-06906	Gear Cover
36.	731-06943A	Pawl Lock
37.	732-04638C	Torsion Spring, .721 ID x .474
38.	736-0290	Washer, Flat, .625 x 1.0 x .067
39.	738-04391	Screw, Shoulder, .340 x .950 x 1/4-28
40.	941-0225	Hex Bearing
41.	741-04388A	Flange Bearing
42.	946-04619B	Cable Lock
43.	790-00342B	Gear Bracket
44.	946-04528A	4-Way Cable
	946-04477†	4-Way Cable w/Clip
45.	984-04324A	Shift Assembly
46.	753-06152	Gear Set Assembly
47.	753-06153	Handle Housing Assembly
48.	710-1256	Screw, #8-18 x 1.250
49.	715-04095	Pin, Roll
50.	684-04350	Block, Asm Joint

† Not Shown

Auger Housing & Assembly

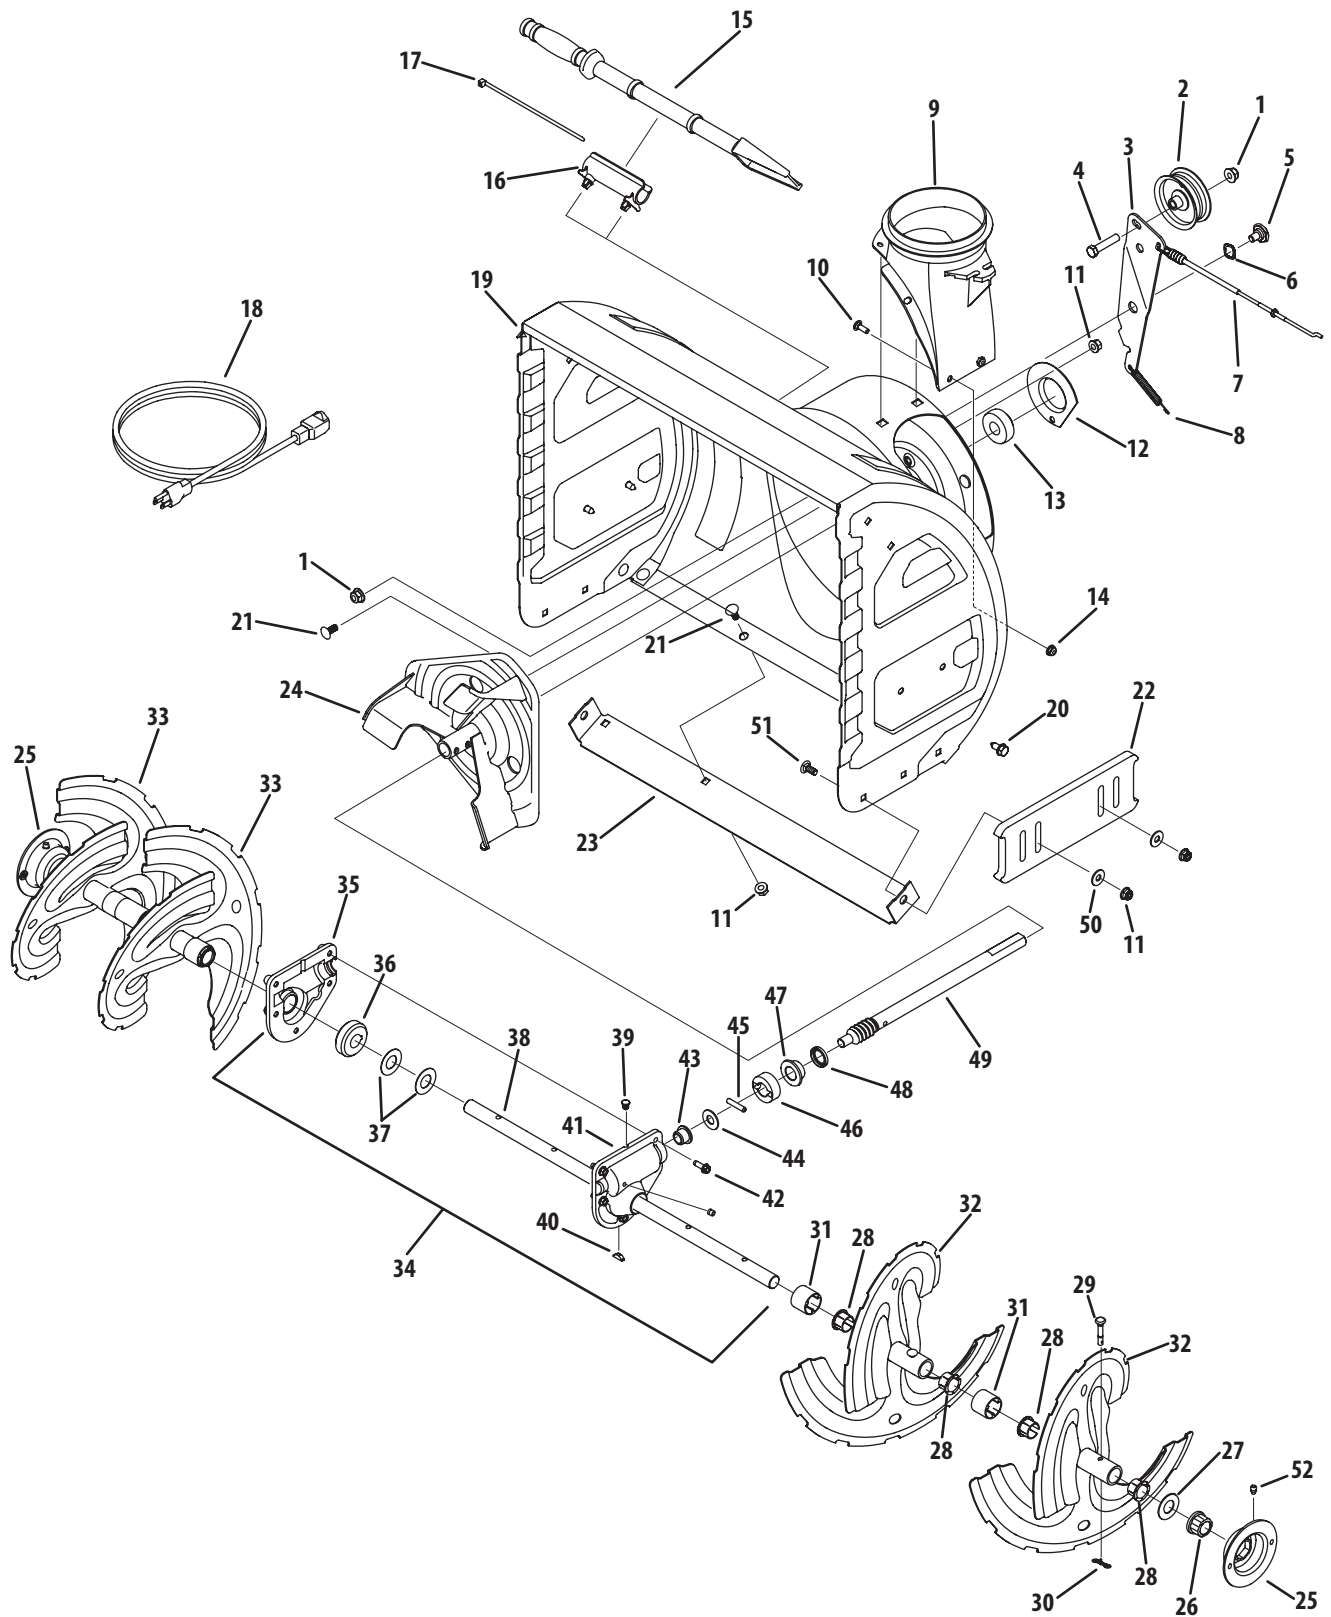


Auger Housing & Assembly

Ref.	Part Number	Description
1.	712-04065	Flange Lock Nut, 3/8-16
2.	756-04224	Idler Pulley
3.	790-00080B	Auger Idler Bracket w/ Brake
4.	710-0347	Hex Bolt, 3/8-16 x 1.75
5.	938-0281	Shoulder Screw, .625 x .17 x 3/8-16
6.	736-0174	Wave Washer, .625 x .885 x .015
7.	946-0897	Clutch Cable
8.	932-0611	Extension Spring, .38 OD x 3.6
9.	731-07525	Chute Adapter, 5.0
10.	710-0703	Carriage Screw, 1/4-20 x .75
11.	712-04063	Flange Lock Nut, 5/16-18
12.	05931A	Bearing Housing
13.	941-0309	Ball Bearing, .75 ID x 1.85 OD
14.	712-04064	Flange Lock Nut, 1/4-20
15.	931-2643	Cleanout Tool
16.	731-2635	Cleanout Tool Mount
17.	725-0157	Cable Tie, 3/16 x .05 x 7.4
18.	929-0071A	Extension Cord, 3-Prong
19.	684-04317A	Auger Housing, 28"
20.	710-04484	Hex Washer Screw, 5/16-18 x .750
21.	710-0451	Carriage Bolt, 5/16-18 x .750
22.	731-06931	Deluxe Polymer Skid Shoe
23.	790-00118	Shave Plate, 28"
24.	684-04057A	Impeler Assembly
25.	790-00138A	Bearing Housing
26.	941-0245	Hex Flange Bearing

Ref.	Part Number	Description
27.	736-0188	Flat Washer, .76 x 1.49 x .06
28.	741-0493A	Flange Bushing .800 ID x .910 OD
29.	738-04124A	Shear Pin
30.	714-04040	Bow-Tie Cotter Pin
31.	731-04870	Spacer, 1.25 OD x .75 ID x 1.00
32.	684-04107	Spiral Assembly, LH
33.	684-04108	Spiral Assembly, RH
34.	918-04193A	Gearbox Assembly, 28"
35.	918-0123A	Housing Assembly, RH
36.	917-04861	Worm Gear, 20T
37.	936-0351	Flat Washer, .760 ID x 1.50 OD
38.	711-04283	Auger Axle, 28"
39.	721-0325	Plug, 1/4 x .437
40.	914-0161	Hi-Pro Key, 3/16 x 5/8
41.	918-0418A	Housing Assembly, LH
42.	710-0642	Hex Washer Screw, 1/4-20 x .750
43.	741-0663	Flng. Bearing, .50 ID x .75 OD x .59
44.	736-3084	Flat Washer, .51 x 1.12 x .06
45.	715-04021	Dowel Pin, .25 OD x 1.25
46.	718-04071	Thrust Collar, .756 ID x .600
47.	741-0662	Flng. Bearing, .75 ID x 1.0 OD x .59
48.	721-0327	Oil Seal, .75 x 1.131 x .188
49.	917-04126	Worm Shaft, .75 OD
50.	936-0159	Flat Washer, .349 x .879 x .063
51.	710-0276	Carriage Screw, 5/16-18 x 1.00
52.	937-3000	Grease Fitting, 3/16


Transmission & Track Drive System

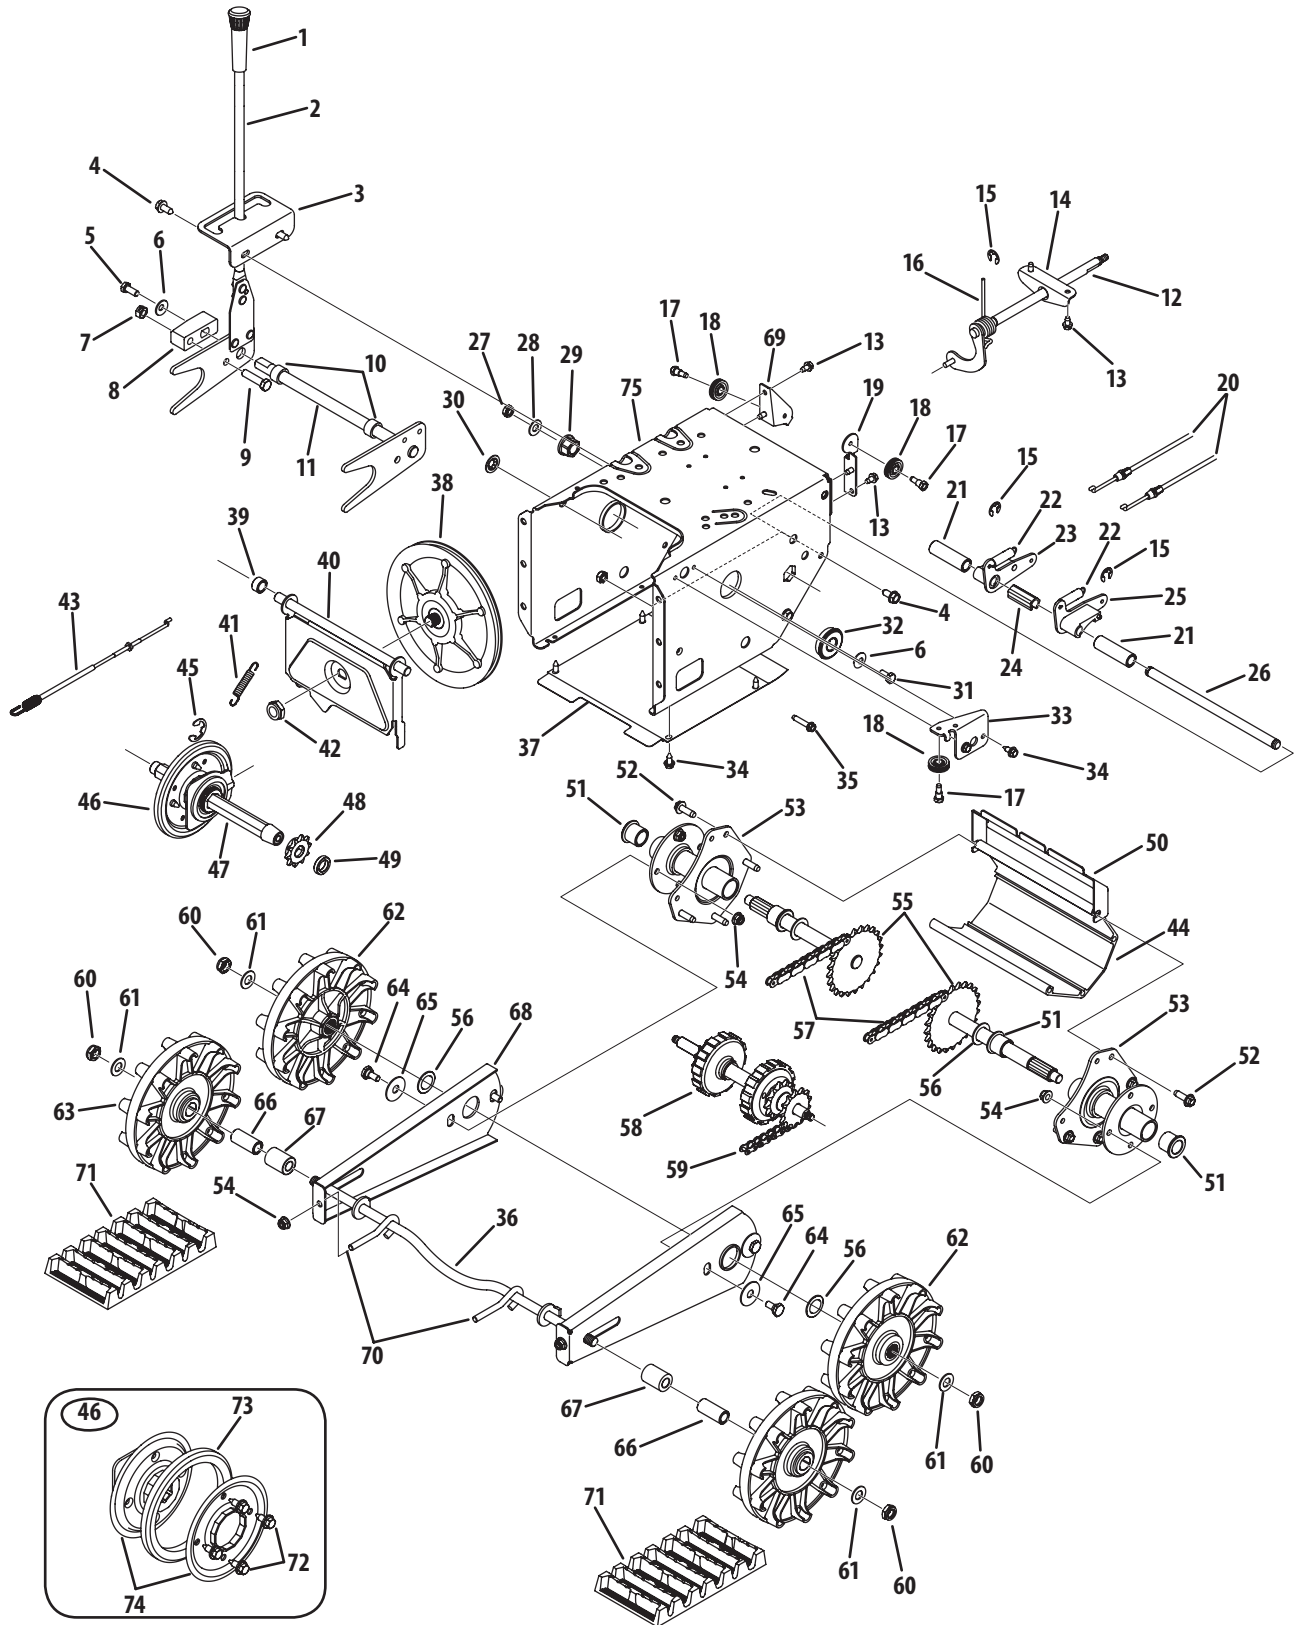

Transmission & Track Drive System

Ref.	Part Number	Description
1.	720-0223	Grip, .5 ID x 3.45
2.	684-0038	Track Lock Handle Assembly
3.	784-5642	Lockout Track Bracket Plate
4.	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
5.	710-0157	Hex Screw, $\frac{5}{16}$ -24 x .75
6.	736-0242	Bell Washer, .340 x .872 x .060
7.	912-3000	Hex Lock Nut, $\frac{3}{8}$ -16
8.	748-0353A	Lift Shaft Drive
9.	710-0344	Hex Screw, $\frac{3}{8}$ -16 x 1.50
10.	750-0547	Spacer, .828 ID x .875 OD x .500
11.	684-0009A	Pivot Rod Assembly
12.	684-04307	Shift Rod Assembly
13.	710-0599	Hex Washer Screw, $\frac{1}{4}$ -20 x .500
14.	784-5590	Shift Frame Bracket
15.	916-0104	E-Ring
16.	732-04514	Torsion Spring, .750 ID x .968
17.	738-0924A	Shoulder Screw, .34 x .335 x $\frac{1}{4}$ -28
18.	756-0625	Cable Roller
19.	784-5687A	Auger Cable Guide Bracket
20.	946-0948A	Track Steering Cable
21.	750-0903B	Spacer, .515 x .735 x 2.44
22.	932-0209	Extension Spring, .48 OD x 2.03
23.	618-0043	Dogg Assembly, RH
24.	750-05021	Spacer, .491 ID x 1.87
25.	618-0044	Dogg Assembly, LH
26.	911-04927	Shift Actuator
27.	912-0116	Jam Lock Nut, $\frac{3}{8}$ -24
28.	936-0300	Flat Washer, .406 x .875 x .059
29.	741-1111	Hex Flange Bearing
30.	726-0221	Speed Nut, .500
31.	710-0538	Hex Lock Screw, $\frac{5}{16}$ -18 x .625
32.	941-0563	Ball Bearing
33.	790-00287	Auger Cable Support Guide
34.	710-1652	Hex Washer Screw, $\frac{1}{4}$ -20 x .625
35.	710-0788	Hex Washer Screw, $\frac{1}{4}$ -20 x 1.000
36.	684-04240	Axle Assembly
37.	784-5648A	Track Frame Cover
38.	656-04055	Friction Wheel Disc Assembly


Ref.	Part Number	Description
39.	750-04748	Spacer, .525 ID x .750 x .42
40.	684-04241A	Friction Wheel Support Bracket
41.	932-0264	Extension Spring
42.	712-0417A	Flange Nut, $\frac{5}{16}$ -18
43.	946-0898	Drive Clutch Cable
44.	719-0295A	Housing
45.	716-0136	E-Ring
46.	684-04159	Friction Wheel Assembly
47.	911-04928	Hex Track Shaft
48.	913-04015	Sprocket, 10T
49.	950-0997	Spacer, .675 ID x 1.00 OD x .23
50.	784-5609	Steering Cable Bracket
51.	941-0339	Flange Bearing
52.	710-0602	Hex Washer Screw, $\frac{5}{16}$ -18 x 1.0
53.	683-0024	Track Hub Assembly
54.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
55.	611-0053	Track Axle Assembly
56.	936-0287	Flat Washer, .793 x 1.24 x .06
57.	713-0437	Chain
58.	918-0169B	Drive Track Shift Assembly
59.	713-0233	Chain
60.	912-0346	Jam Lock Nut, $\frac{1}{2}$ -20
61.	936-0272	Flat Washer, .510 x 1.00 x .060
62.	731-1538A	Track Drive Wheel
63.	631-0032A	Track Idler Wheel
64.	938-0140	Shoulder Screw, .43 x .56 5/16-18
65.	936-0406	Flat Washer, .442 x 1.38 x .060
66.	750-0995	Spacer, .51 ID x .75 OD x 1.67
67.	750-0909	Spacer, .510 ID x 1.0 OD x 1.34
68.	784-5639	Side Plate
69.	784-5688	Drive Cable Guide Bracket
70.	710-1231	Eye Bolt, $\frac{5}{16}$ -18 x 3.0
71.	731-1292	Snow Trac
72.	710-0896	Hex Washer Screw, $\frac{1}{4}$ -14 x .625
73.	935-04054	Friction Wheel
74.	790-00174	Friction Plate
75.	684-04302B	Frame Assembly

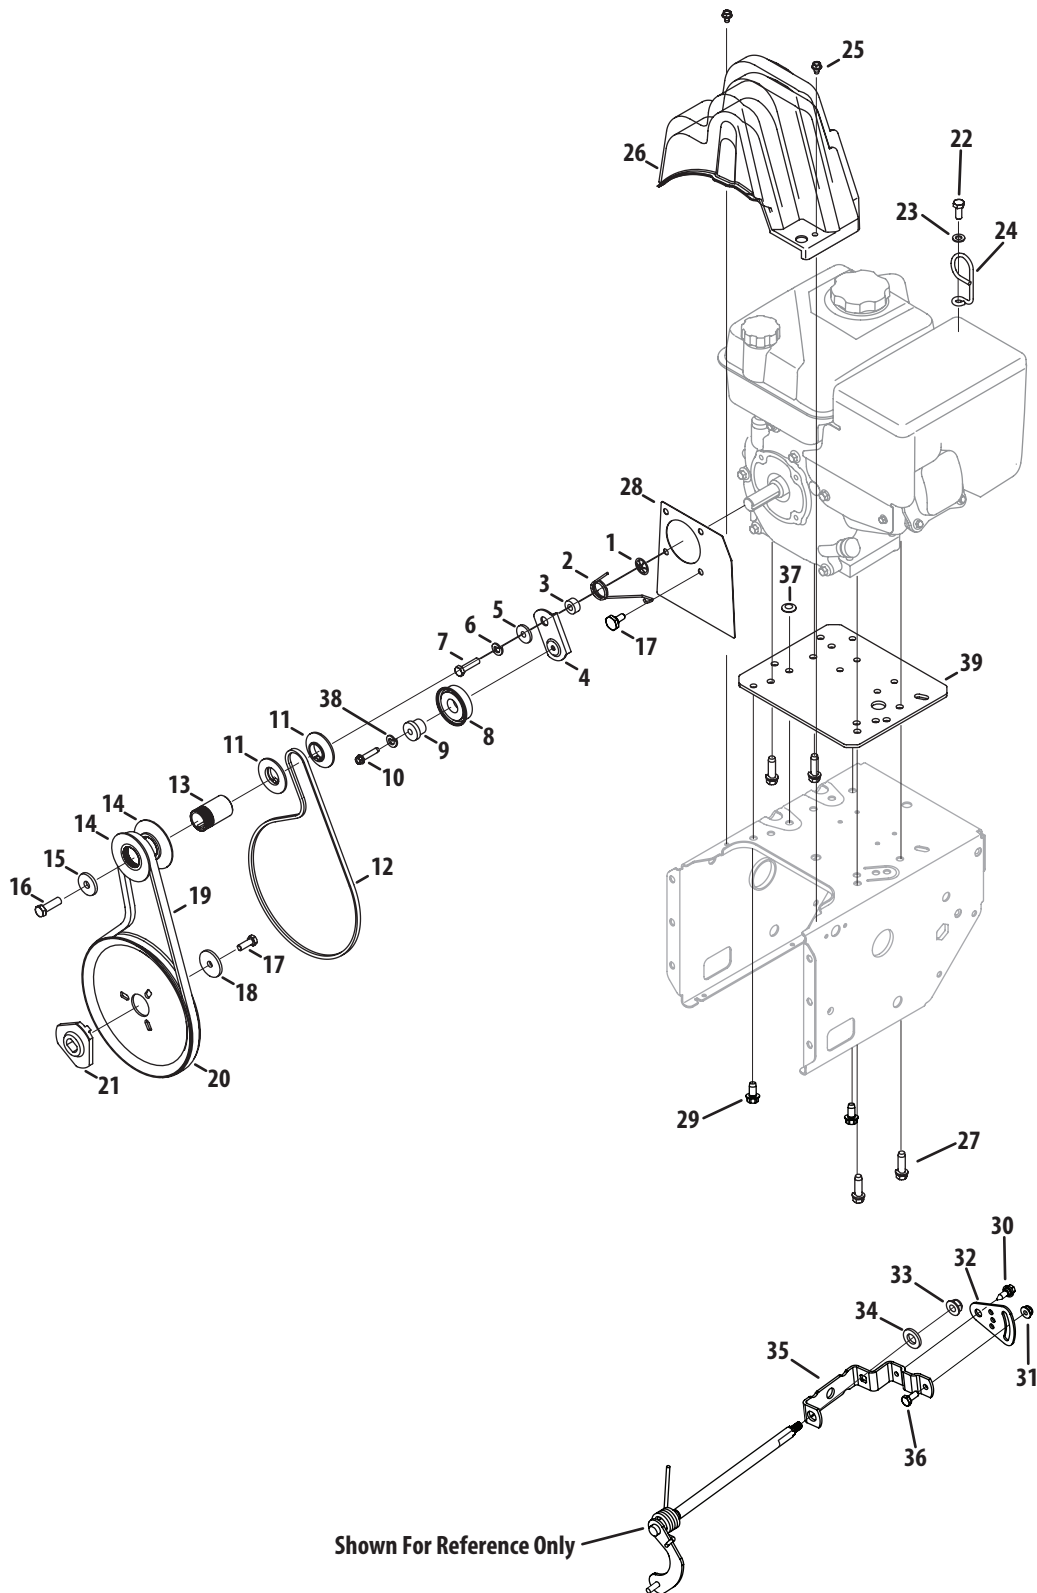

Shown For Reference Only

Ref.	Part Number	Description
1.	926-04012	Push-On Nut
2.	732-04308A	Torsion Spring, .850 ID x .333
3.	750-04477A	Spacer, .340 x .750 x .330
4.	790-00208C	Idler Bracket
5.	748-04112B	Shldr. Spacer, .3175 ID x .500 x .0975
6.	936-0119	Lock Washer, $\frac{5}{16}$
7.	710-0672	Hex Screw, $\frac{5}{16}$ -24 x 1.25
8.	684-04169	Idler Pulley
9.	750-04571	Shoulder Spacer, .260 x .785 x .538
10.	710-0809	Hex Washer Screw, $\frac{1}{4}$ -20 x 1.250
11.	756-04252	Pulley Half, $\frac{3}{8}$ -V x 1.7160 OD
12.	954-04201A	V-Belt
13.	750-04303	Spacer, .875 ID x 1.185 OD
14.	756-04113	Pulley Half, 4L-V x 2.600 OD
15.	736-0247	Flat Washer, .406 x 1.25 x .157
16.	710-0191	Hex Screw, $\frac{3}{8}$ -24 x 1.25
17.	738-04439	Shoulder Screw, .500 x .145
18.	736-0505	Flat Washer, .34 x 1.50 x .150
19.	954-04195	Belt
20.	756-04109	Auger Pulley
21.	748-04053A	Adapter Pulley
22.	710-04022	Hex Screw, M8-1.25 x 20
23.	936-0264	Flat Washer, .330 x .630 x .0635
24.	732-04677	Cable Control Wire
25.	710-0653	Hex Washer Screw, $\frac{1}{4}$ -20 x .375
26.	731-06401	Belt Cover
27.	710-0502A	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
28.	790-00332	Cover Plate
29.	710-0623	Hex Washer Screw, $\frac{3}{8}$ -16 x .75
30.	738-04184A	Shoulder Screw, .368 x .113 x $\frac{1}{4}$ -20
31.	712-04064	Flange Lock Nut, $\frac{1}{4}$ -20
32.	790-00217A	Speed Selector Pivot Bracket
33.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
34.	936-3015	Flat Washer, .469 x .875 x .105
35.	790-00218A	Speed Selector Shift Bracket
36.	710-0751	Hex Screw, $\frac{1}{4}$ -20 x .620
37.	735-04099	Plug, 3/8 ID
38.	936-0329	Lock Washer, 1/4
39.	790-00322C	Engine Plate

777I22340

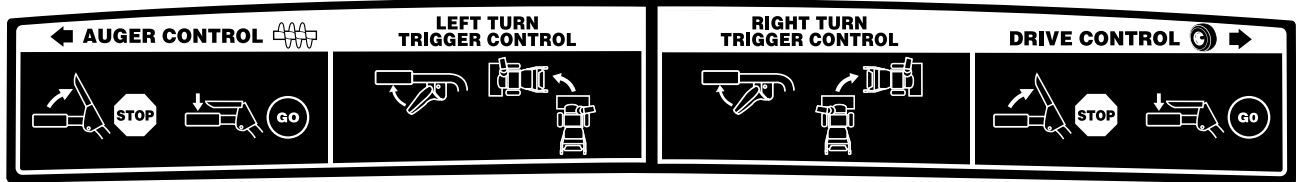

777D15042




777S32636



777D15045




777I22363

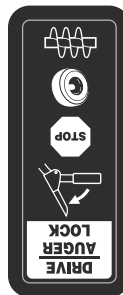

777S32236



777I22339

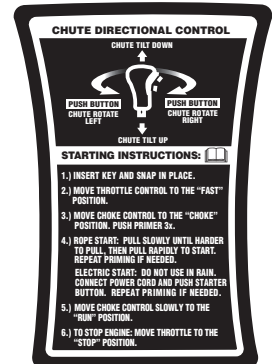

777X43688



777I20324



777D15108



777D18142



777D15112




777I23013




[illegible]

478-SUB Muffler & Controls

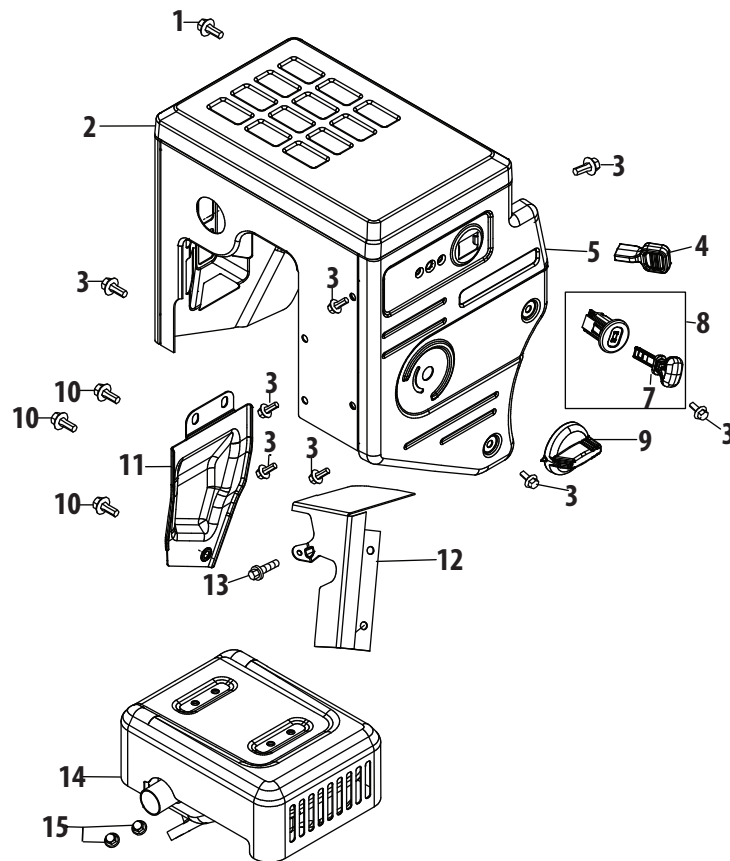

Ref.	Part Number	Description
1	710-04915	Bolt, M6x12
2	951-11194	Muffler Shield
3	710-04915	Bolt M6x12
4	951-10757	Throttle Control Knob
5	951-11594	Control Panel
7	731-05632	Key
8	951-10637	Key Switch Assembly
9	951-11302	Choke Knob
10	710-04914	Bolt M6x10
11	951-11181	Exhaust Pipe Shield
12	951-11227	Carb Isolator Bracket
13	710-04968	Bolt M6x16
14	951-11195	Muffler Assembly
15	712-05015	Nut, M8

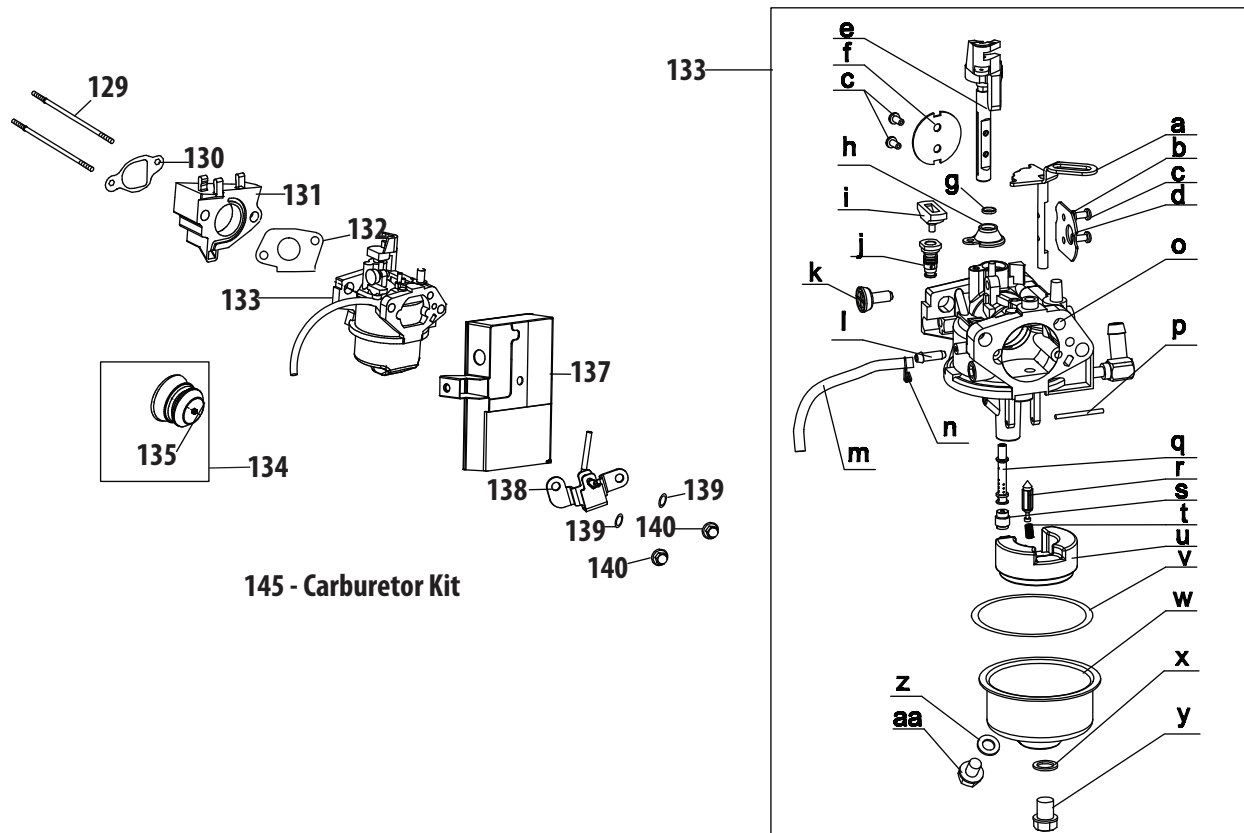


145 - Carburetor Kit

Ref.	Part Number	Description
129	710-04963	Stud M6-8×104
130	951-11225	Carburetor Insulator Gasket
131	951-11222	Carburetor Insulator
132	951-11223	Carburetor Gasket
133	951-14024A	Carburetor Assembly
134	951-10639A	Primer Assembly
135	951-11824	Primer
137	951-11190	Heater Box
138	951-11192	Choke Control
139	736-04477	Lock Washer
140	712-05015	Nut M6
145	951-12762A	Carburetor Kit (Incl. i,j,p,q,r,s,t,u,v,x,z)
a	n/a	Choke Shaft
b	736-04638	Lock Washer
c	710-05469	Screw M3×6
d	n/a	Choke Plate
e	n/a	Throttle Shaft
f	n/a	Throttle Plate
g	n/a	Gasket


Ref.	Part Number	Description
h	n/a	Throttle Shaft Cover
i	n/a	Idle Jet Rivet
j	n/a	Idle Jet Assembly
k	n/a	Idle Speed Adjusting Screw
l	n/a	Primer Pipe
m	751-11991	Primer Hose
n	951-11906	Hose Clamp
o	n/a	Carburetor Body
p	n/a	Float Pin
q	n/a	Emulsion Tube
r	n/a	Needle Valve
s	n/a	Main Jet
t	n/a	Needle Valve Spring
u	n/a	Float
v	951-11970	Fuel Bowl Gasket
w	n/a	Fuel Bowl
x	951-11348	Fuel Bowl Gasket
y	710-04945	Fuel Bowl Mounting Bolt
z	951-11349	Fuel Drain Plug Gasket
aa	710-04938	Fuel Drain Plug

478-SUB Crankcase

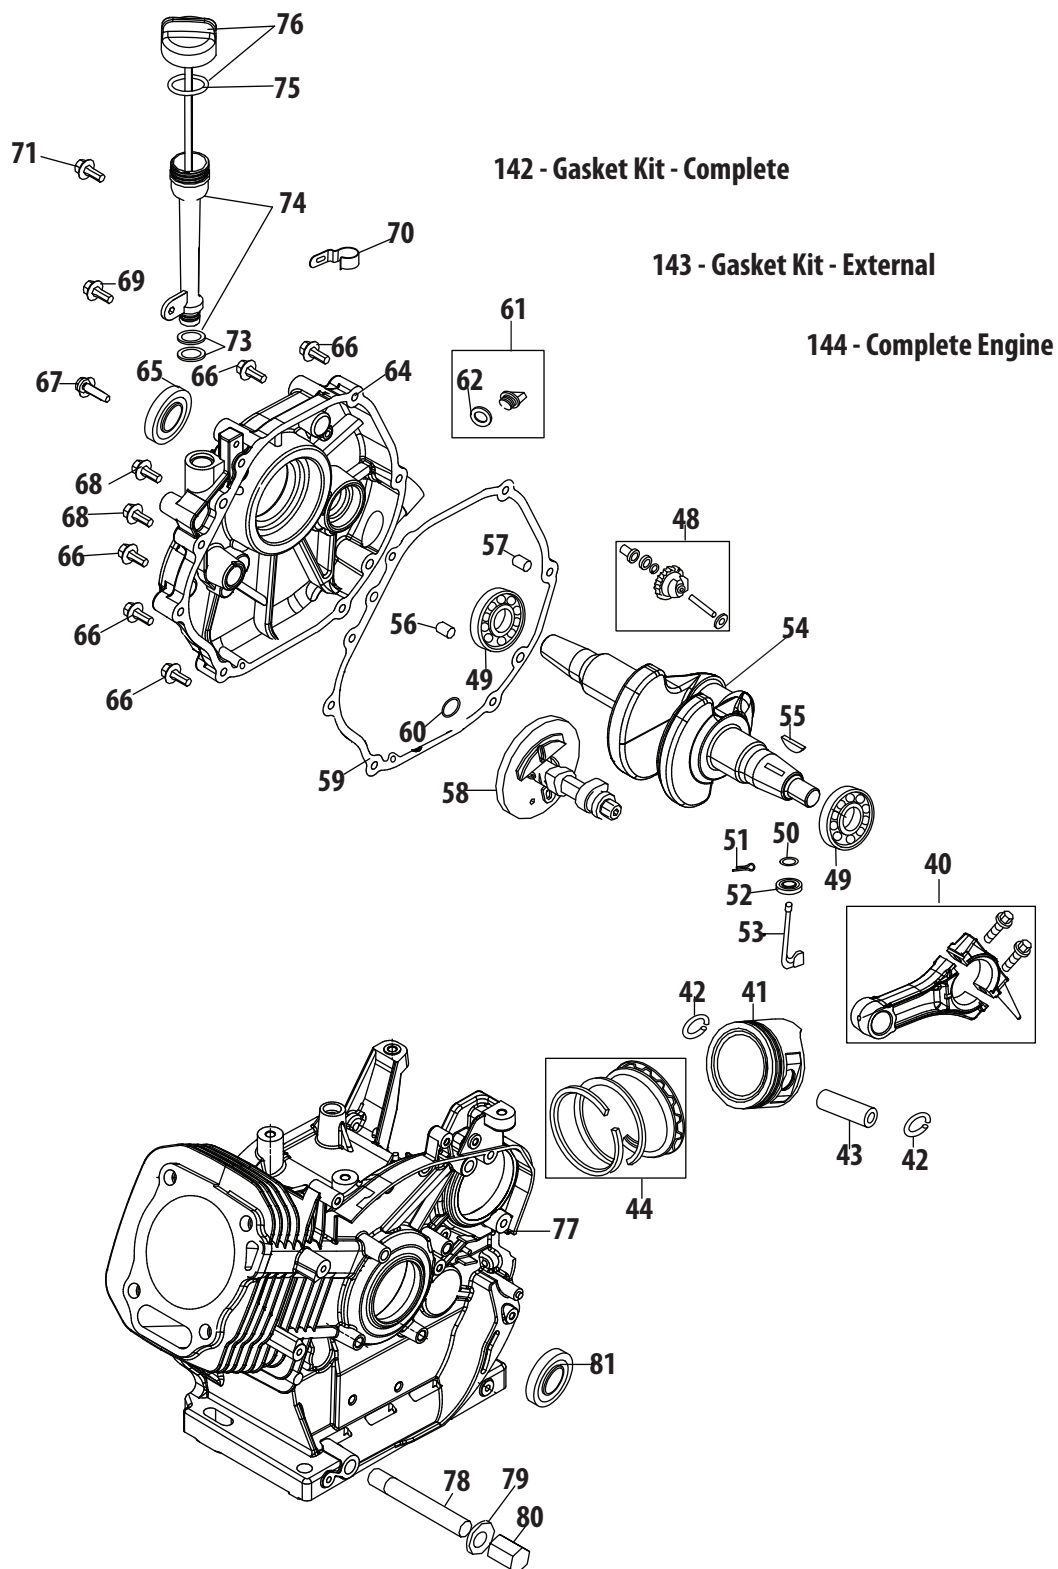

Ref.	Part Number	Description	Ref.	Part Number	Description
40	951-12066	Connecting Rod Assembly	66	710-04971	Bolt M8×38
41	951-12043	Piston	67	710-04972	Bolt M8×45
42	951-11632	Piston Pin Snap Ring	68	710-05052	Bolt M8×35
43	951-12044	Piston Pin	69	710-04968	Bolt M6×16
44	951-12387	Piston Ring Set	70	951-11320	Dipstick Clamp
48	751-12068	Governor Gear/Shaft Assembly	71	710-05349	Bolt M6×8
49	951-12069	Radial Ball Bearing	73	951-11904	Oil Fill Tube O-Ring
50	736-04453	Washer 8×20×0.8	74	951-12073	Oil Fill Tube Assembly
51	714-04077	Cotter Pin	75	951-11381	Dipstick O-Ring
52	951-11958	Governor Seal	76	951-11971A	Dipstick Assembly
53	951-12071	Governor Arm Shaft	77	951-11230	Crankcase Kit
54	951-11229	Crankshaft Kit (Incl. 49,54,55,65,81)		951-11187	Short Block Assembly (Incl. 40-44,48-68,77-81,103, 106,107,109,111,124,130-132)
55	951-10307	Woodruff Key	78	951-11350	Oil Drain Pipe
56	715-04102	Dowel Pin 9×12	79	736-04440	Washer 10×16×1.5
57	715-04092	Dowel Pin 7×14	80	710-04906	Oil Drain Plug
58	951-12072	Camshaft Assembly	81	751-11498	Oil Seal 30×46×8
59	951-11374	Crankcase Cover Gasket	142	951-11209	Gasket Kit - Complete (Incl. 52,59,65,79,81,107, 109,124,130-132)
60	736-04545	Washer 16×24×0.5	143	951-11210	Gasket Kit - External (Incl. 79,109,124,130-132)
61	951-11283	Oil Fill Plug Assembly	144	952Z478-SUB	Complete Engine
62	951-11577	O-Ring			
64	951-12395	Crankcase Cover			
64	951-11228	Crankcase Cover Kit (Incl. 49,59,50,64-68)			
65	951-11372	Oil Seal, 30×46×8			


478-SUB Fuel Tank & Mounting

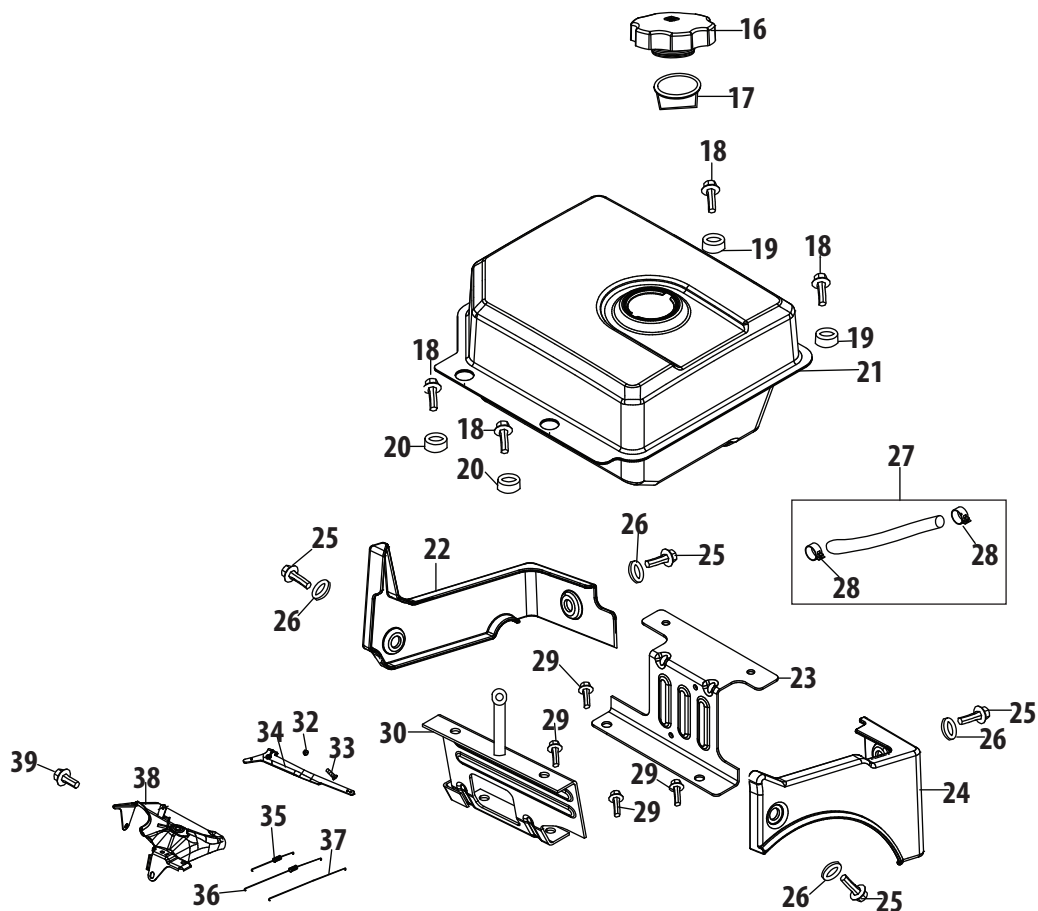

Ref.	Part Number	Description
16	951-12533	Fuel Cap Assembly
17	951-11933	Fuel Level Indicator
18	710-04970	Bolt M8×20
19	750-05312	Bushing
20	750-05313	Bushing
21	951-11201	Fuel Tank Assembly
22	951-11184	Governor Cover
23	951-11183	Rear Mainting Bracket Assy.
24	951-12385	Decorate Cover
25	710-04968	Bolt M6×16
26	736-04452	Bush
27	951-11200	Fuel Line Kit

Ref.	Part Number	Description
28	951-11700	Fuel Hose Clamp
29	710-04921	Bolt M8×14
30	951-11182	Gas Tank Support Bracket
32	712-04212	Nut M6
33	710-04908	Governor Arm Bolt
34	951-11231	Governor Arm
35	951-11202	Governor Spring
36	951-11203	Throttle Linkage Spring
37	951-11204	Throttle Linkage
38	951-11213	Primer Bracket
39	710-04915	Bolt, M6×12


478-SUB Starting System & Blower Housing

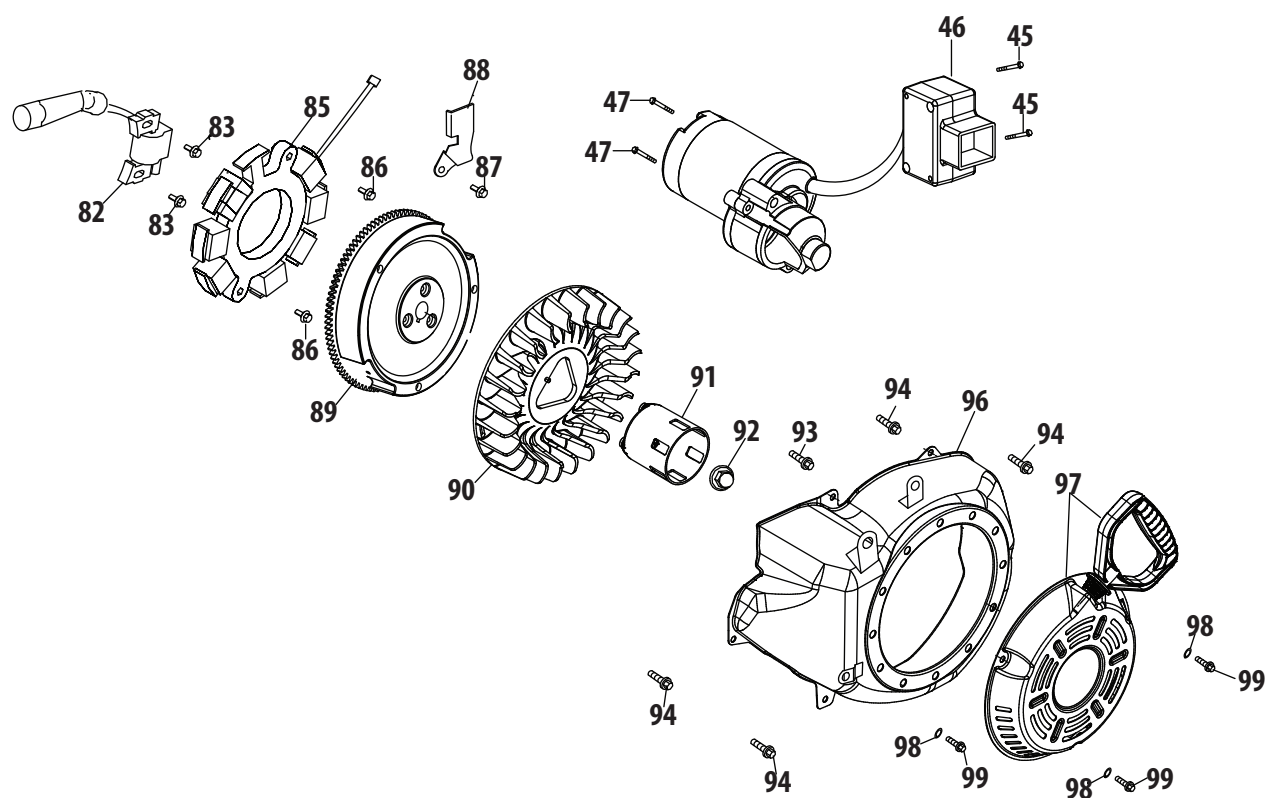

Ref.	Part Number	Description
45	710-04965	Bolt M4x55
46	951-11196	Electric Starter
47	710-04967	Bolt M8x55
82	951-11498	Ignition Coil Assembly
83	951-11197	Ignition Coil Bolt
85	951-12553	Alternator Assembly
86	710-04969	Bolt M6x30
87	710-04966	Bolt M6x8
88	951-11186	Wire Plate
89	951-12090	Flywheel

Ref.	Part Number	Description
90	951-11217	Cooling Fan
91	951-11218	Starter Cup
92	712-04220	Nut, Special, M16x1.5
93	710-04968	Bolt M6x16
94	710-04915	Bolt M6x12
96	951-11379	Blower Housing
97	951-11208	Recoil Starter
98	736-04455	Gasket 6
99	710-04974	Bolt M6x10

478-SUB Cylinder Head

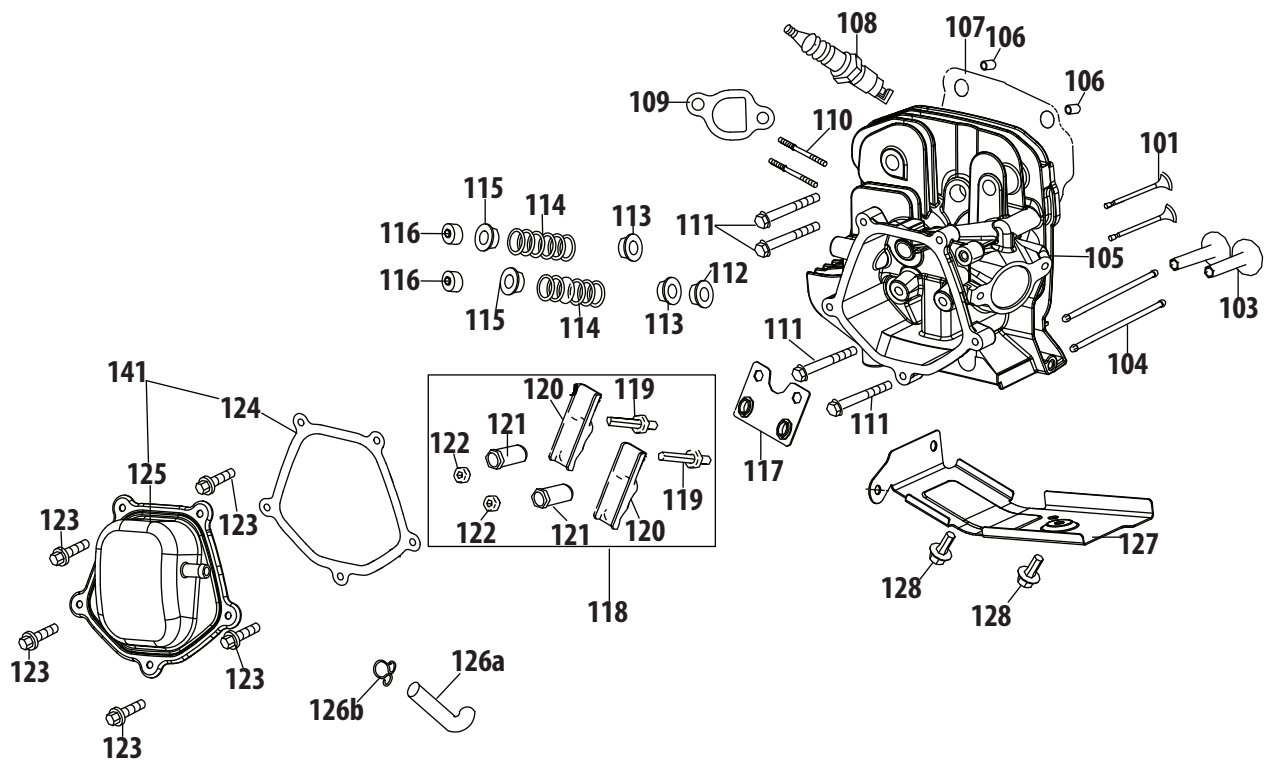

142 - Gasket Kit - Complete

143 - Gasket Kit - External

144 - Complete Engine

478-SUB Cylinder Head

Ref.	Part Number	Description	Ref.	Part Number	Description
101	951-11198	Valve Kit	117	951-11965	Push Rod Guide
103	951-11962	Tappet	118	951-11981	Rocker Arm Assembly
104	951-11199	Push Rod Kit	119	710-04962	Bolt, Pivot
105	951-11226	Cylinder Head Kit (Incl.107,111,112,125)	120	951-11966	Rocker Arm
	951-11188	Cylinder Head Assembly (Incl.101,102,105,107, 109-122,124,129-132)	121	751-11123	Adjusting Nut ,Valve
106	715-04097	Dowel Pin 12×20	122	751-11124	Nut, Pivot Locking
107	951-12076	Gasket, Cylinder Head	123	710-05054	Valve Cover Bolt
108	951-10292	Spark Plug/F6Rtc	124	951-11967	Valve Cover Gasket
109	951-11212	Exhaust Pipe Gasket	125	951-11220	Valve Cover
110	710-04964	Stud M8×48.5	126a	731-07059	Breather Hose
110	951-11207	Muffler Stud Assembly	126b	726-04101	Breather Hose Clamp
111	710-04965	Bolt M10×1.25×80	127	951-11180	Air Shield
112	951-11964	Valve Seal (Intake)	128	710-04915	Bolt M6×12
113	951-12077	Valve Spring Retainer(Intake)	141	951-11333	Valve Cover Kit
114	951-12078	Valve Spring	142	951-11209	Gasket Kit - Complete (Incl. 52,59,65,79,81,107, 109,124,130-132)
115	951-12080	Valve Spring Retainer	143	951-11210	Gasket Kit - External (Incl. 79,109,124,130-132)
116	951-12081	Exhaust Lash Cap	144	952Z478-SUB	Complete Engine



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
