

Cub Cadet®

PARTS MANUAL

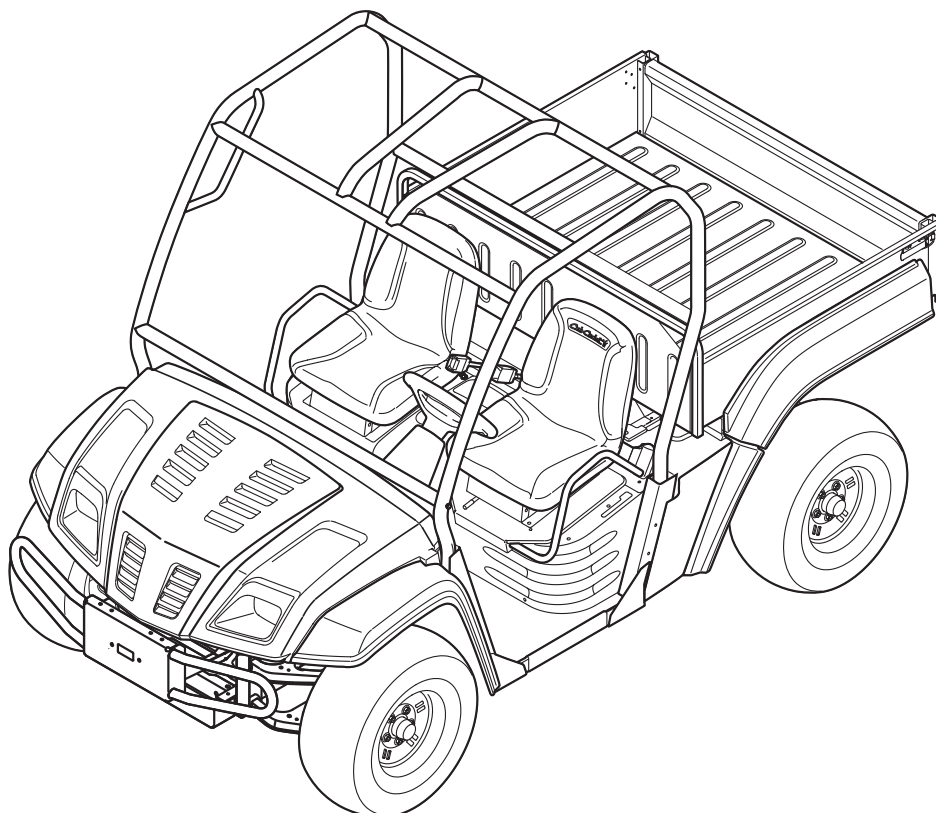

4x4 Utility Vehicle — Models 466 & 467

IMPORTANT

READ SAFETY RULES AND INSTRUCTIONS CAREFULLY BEFORE OPERATION

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.


CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Models 466 & 467

Table of Contents

DESCRIPTION	PAGE	DESCRIPTION	PAGE
Axle, Front Suspension.....	22	Fenders, Front.....	12
Axle, Rear Suspension.....	22	Fenders, Rear, Left.....	4
Battery	14	Fenders, Rear, Right.....	6
Bed.....	4	Frame.....	10
Bed Lift	4	Fuel Tank	14
Brake Lever Assembly	8	Labels (Model C/J466).....	38
Bumper	10	Labels (Model C/J467).....	39
Dash Panel	12	Operator Protective Structure	3
Diff. Lock Lever.....	8	Pedal, Brake	8
Engine, Kohler 20 H.P.		Pedal, Throttle	8
Crank Shaft	26	Radiator, Diesel.....	25
Crank Case.....	26	Schematic, Electrical	
Oil Pan & Lubrication	28	Kohler	40
Head/Valve/Breather.....	28	Cat.....	41
Ignition & Electrical	30	Diesel Engine	42
Blower Housing & Baffles.....	30	Seats	14
Starting System	32	Seat Belts	3
Fuel System	32	Shifter Lever Assembly.....	8
Engine Controls.....	34	Steering	22
Air Intake & Filtration	36	Transmission	20
Exhaust	36	Transmission Brake Assembly.....	16
Engine/ Transmission Accessories, Kohler ...	16	Wheels, Front.....	22
Engine/ Transmission Accessories, Cat.....	18	Wheels, Rear	22

OPERATOR PROTECTIVE STRUCTURE AND SEAT BELTS

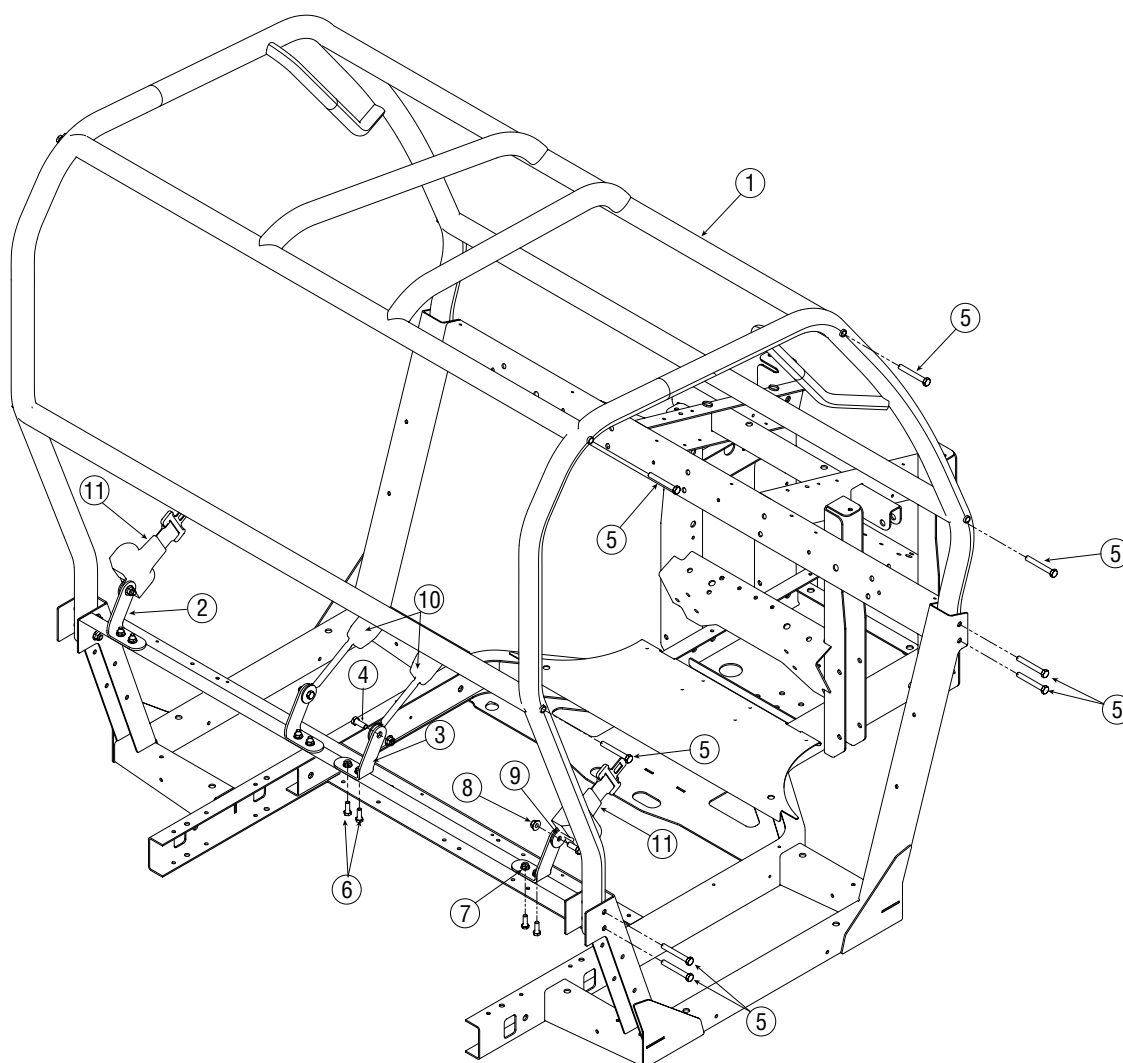


To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

Ref. No.	Part No.	Description
1	607-04200	Frm Assembly, OPS, UV
2	707-04790	Brkt., Seat Belt, LH
3	707-04863	Brkt., Seat Belt, RH
4	710-0514	Screw, 3/8-16 x 1.00
5	710-3022	Screw, 3/8-16 x 2.75
6	710-3038	ScREW, 5/16-18 x .875

Ref. No.	Part No.	Description
7	712-04063	Nut, Flgk, 5/16-18
8	712-04065	Nut, Flgk, 3/8-16
9	736-3039	Wash, Flat, .406 x 1.5 x .105
10	757-04048	Belt, Seat
11	757-04049	Belt, Seat

REAR LEFT FENDER AND CARGO BED

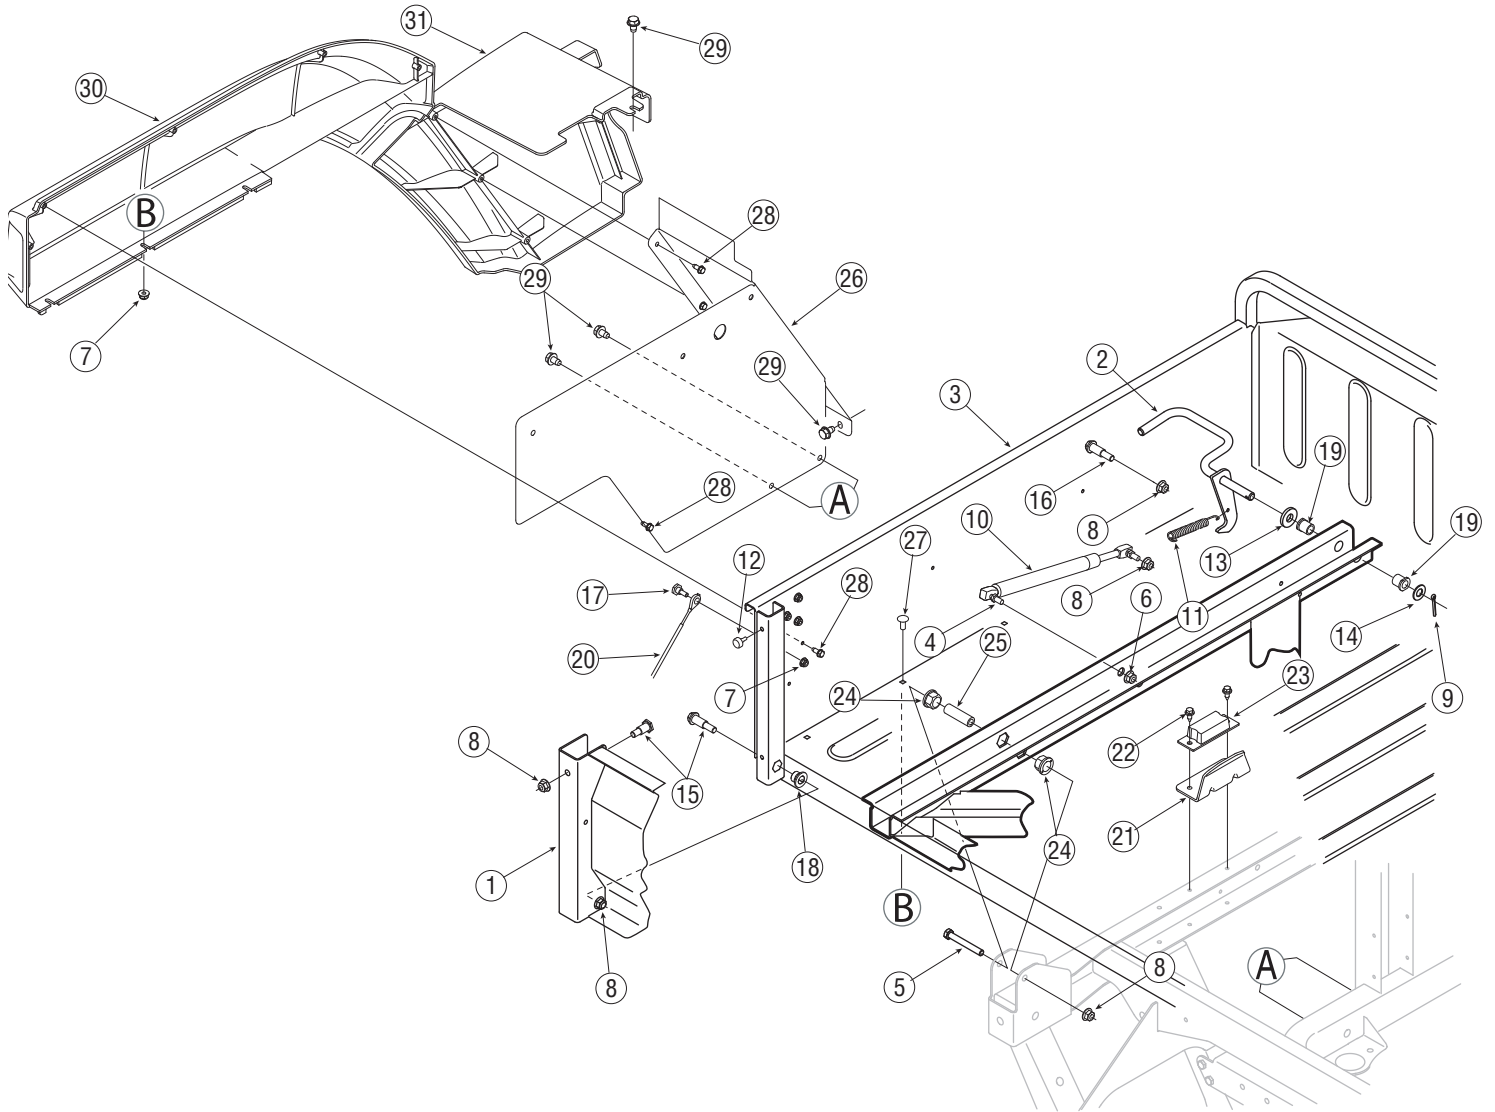

Ref. No.	Part No.	Description
1	607-04159	Tgt Asm
2	607-04180	Lvr Asm, bed, latch
3	607-04191	Box Asm, bed
4	710-04166	Stud, ball, 5/16-18
5	710-3022	Screw, 3/8-16, 2.75, gr5, std
6	712-04063	Nut, flglk, 5/16-18, grf, nylon
7	712-04064	Nut, flglk, 1/4-20, grf, nylon
8	712-04065	Nut, flglk, 3/8-16, grf, nylon
9	714-0162	Pin, cot, 5/32, 1.25
10	732-04109	Spr, gas, 6.91 Stroke
11	732-0428A	Spr, extn, .50 Od X 4.35 Lg
12	735-0271	Bmpr, .62 Dia. x .3
13	736-04019	Wash, flat, .531 X 1.25 X .181
14	736-0572	Wash, flat, .510 X 1.00 X .060
15	738-0430	Scr, shldr, .50 X .685, 3/8-16
16	738-0966A	Scr, shldr, .50x.925, 3/8-16
17	738-1023	Scr, shldr, .375x.280, 1/4-20


Ref. No.	Part No.	Description
18	741-0324	Brg, flg, hex, .506 Id X .590 Lg
19	741-0673	Brg, flg, .503 X .689 X .792
20	746-04245	Cbl, lanyard
21	707-04786	Brkt, Bed Guide
22	710-1652	Scr, tt, 1/4-20x.625, hxindwsh, ca
23	731-04016	Bmpr, suspn, extn
24	748-0229	Brg, hex Flng .629 Id
25	750-04634	Spcr, .390 Id X.625 Od X2.03 Lg
26	707-04728	Brkt, Lh, Shld
27	710-0134†	Scr, Crg, 1/4-20, .62, Gr2
28	710-04261	Scr, #12-16, .50, Hxindwsh
29	710-0607	Scr, Tt, 5/16-18, 0.500
30	731-05280	Fdr, Lh Rr
	731-05450	Fdr, Lh Rr, Camo
31	731-05282	Fdr, Lwr Lh Rr
	731-05452	Fdr, Lwr Lh Rr, Camo

† Not on Camo Units



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

REAR RIGHT FENDER AND CARGO BED

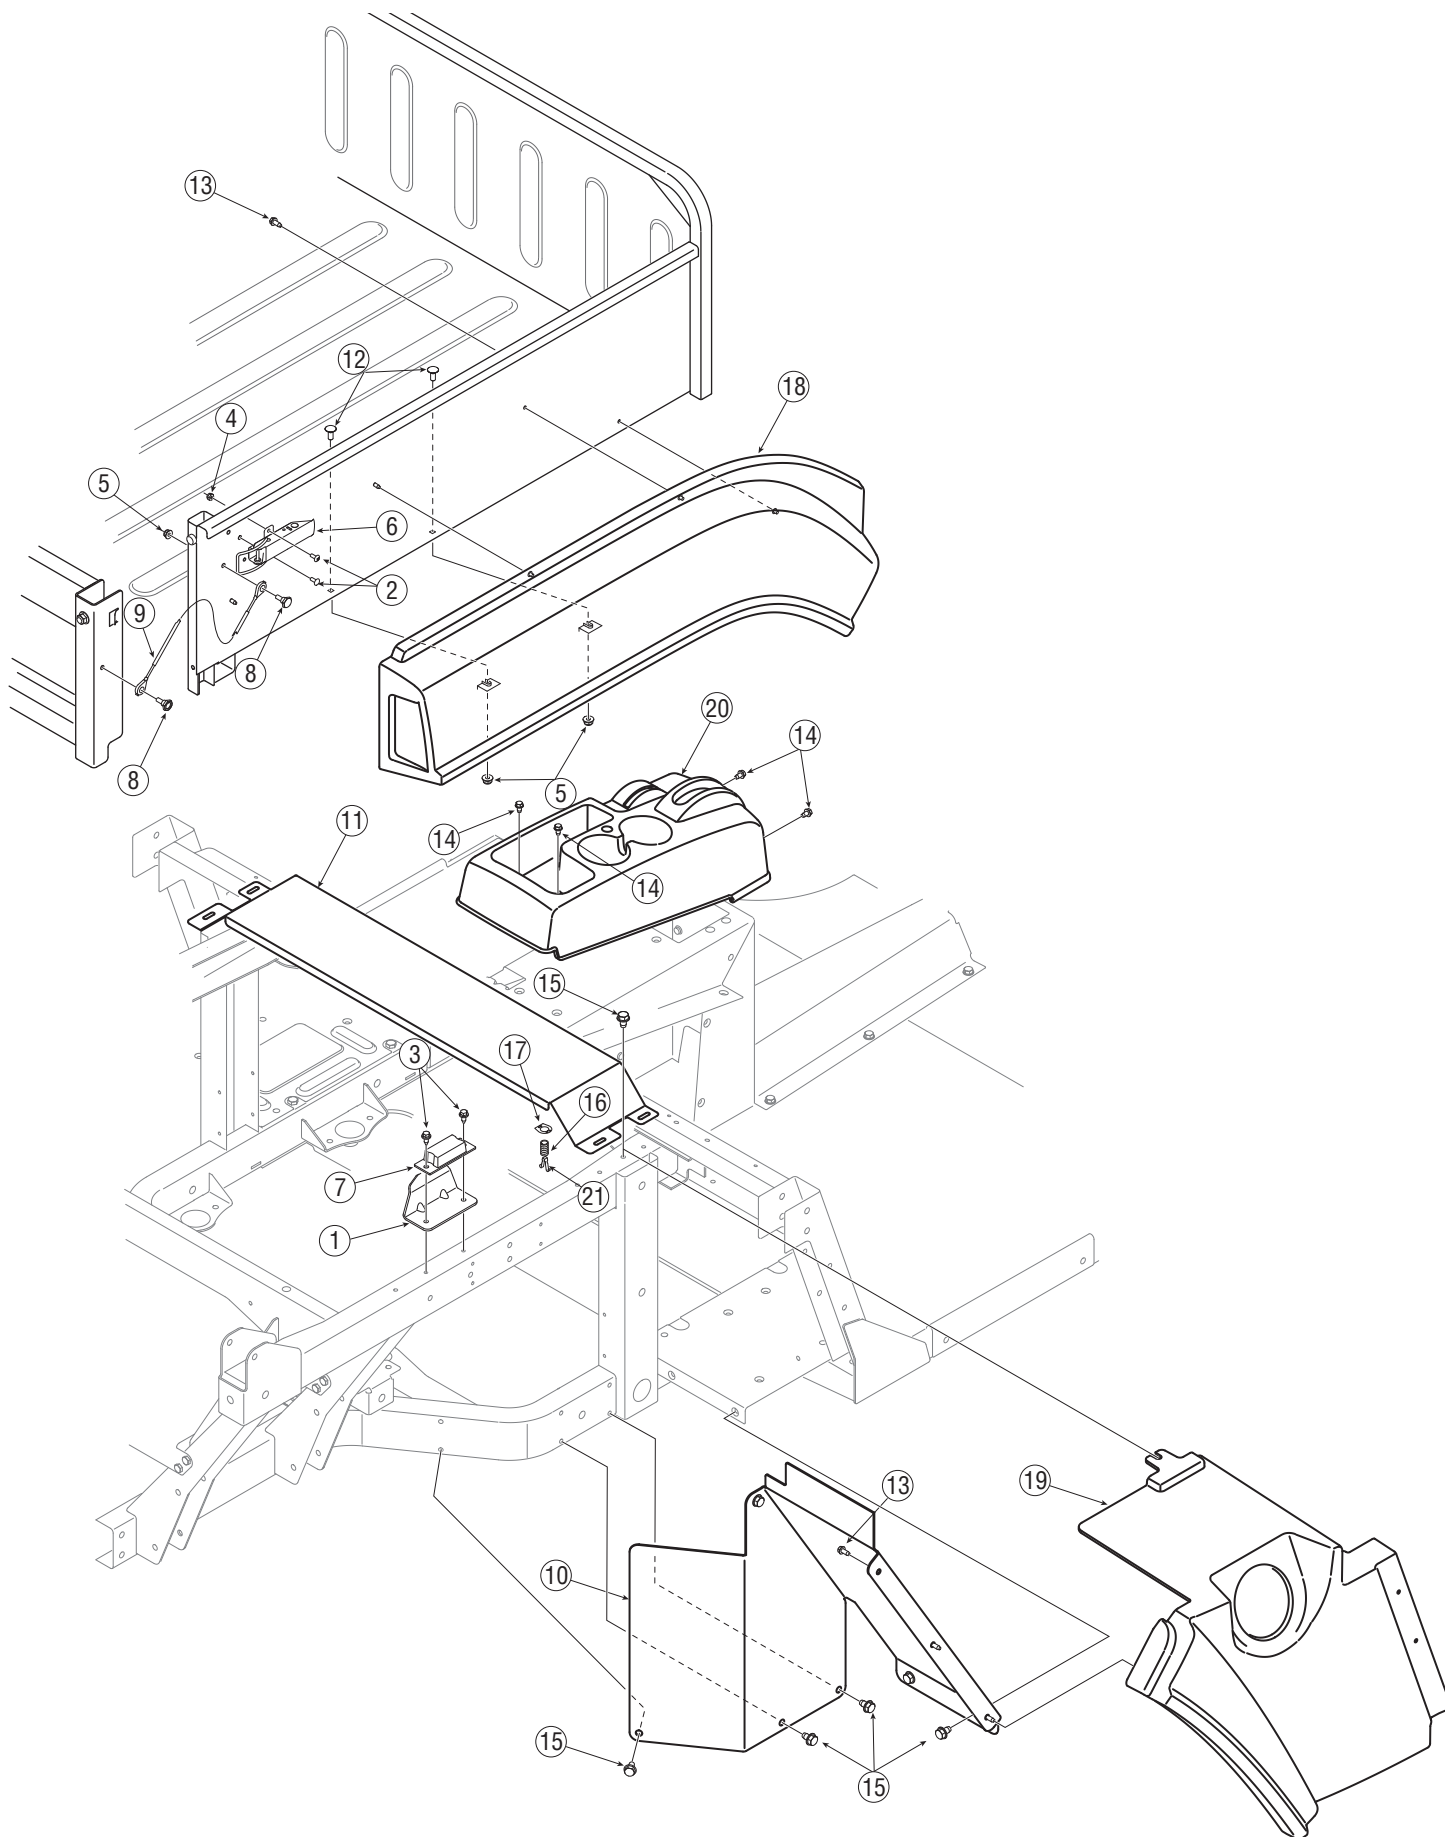

Ref. No.	Part No.	Description
1	707-04786	Brkt, Bed Guide
2	710-0473	Scr, mach, #10-24, 0.500, trusphi
3	710-1652	Scr, tt, 1/4-20x.625, hxindwsh, ca
4	712-0161	Nut, hexlk, #10-24, gr2, nylon
5	712-04064	Nut, flglk, 1/4-20, grf, nylon
6	726-04058	Latch, draw, over Center
7	731-04016	Bmpr, suspn, extn
8	738-1023	Scr, shldr, .375x.280, 1/4-20
9	746-04245	Cbl, lanyard
10	707-04729	Brkt, Rh, Shld
11	707-04748	Cvr, Uv
12	710-0134†	Scr, Crg, 1/4-20, .62, Gr2


Ref. No.	Part No.	Description
13	710-04261	Scr, #12-16, .50, Hxindwsh
14	710-0599	Scr, Tt, 1/4-20, 0.500
15	710-0607	Scr, Tt, 5/16-18, 0.500
16	732-0937	Spr, Compr, .40 OD X .040 Dia.
17	726-3056	Latch, Pnl, 1/4 Turn
18	731-05281	Fdr, Rh Rr
	731-05451	Fdr, Rh Rr, Camo
19	731-05283	Fdr, Lwr Rh Rr
	731-05453	Fdr, Lwr Rh Rr Camo
20	731-05436	Cnsol, Seat
21	732-0936	Spr, Clip

† Not on Camo Units



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

PEDALS AND LEVERS

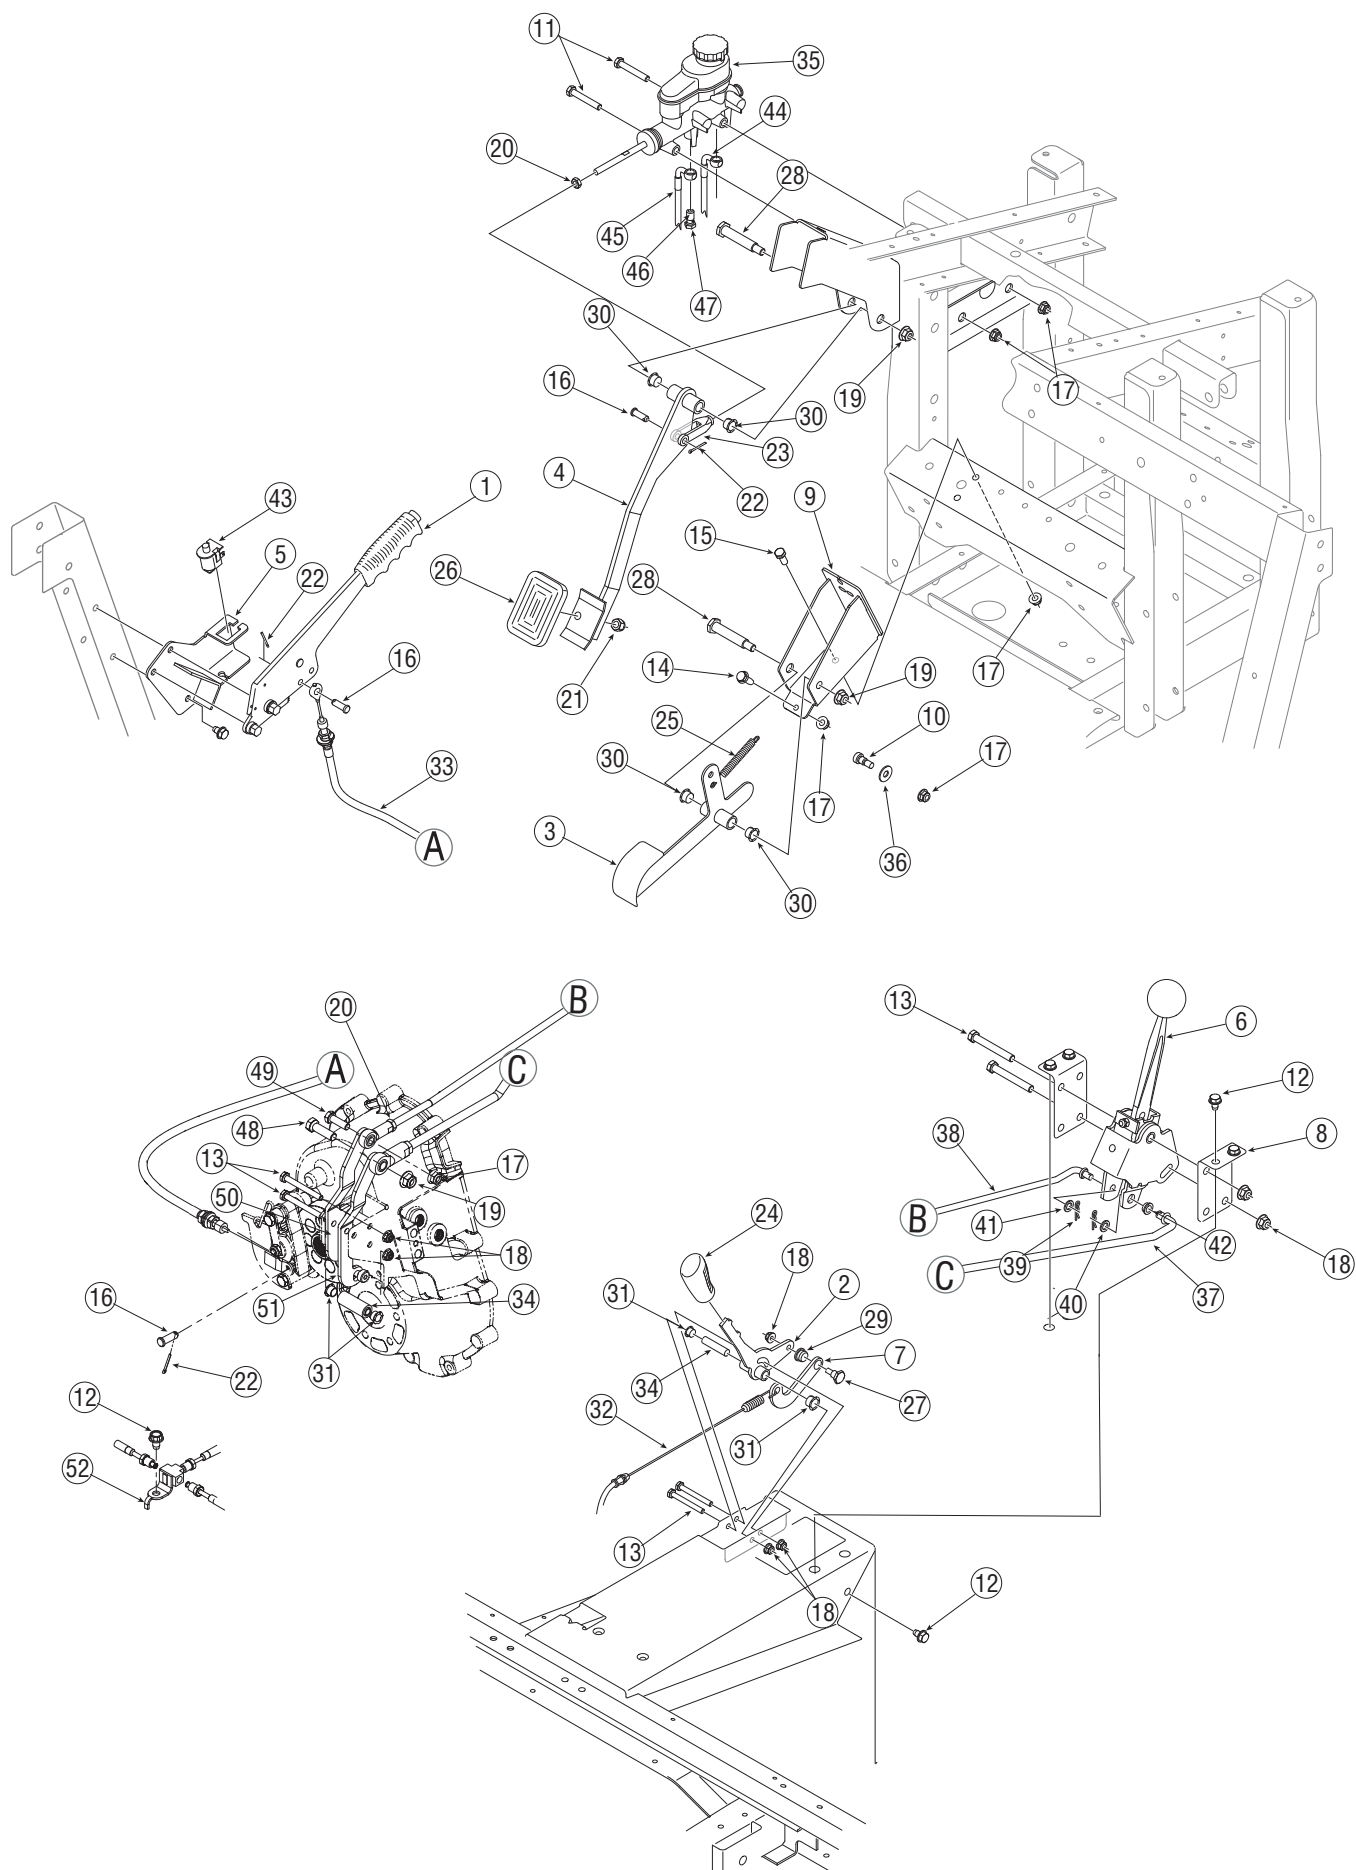


Ref. No.	Part No.	Description
1	603-04089	Lvr Assembly, Brake
2	607-04181	Lvr Assembly, Diff Lock
3	607-04188	Ped Assembly, Accel
4	607-04193	Ped Assembly, Brake
5	607-04208	Brkt Assembly, Mt, Park Brake
6	607-04212	Shft Assembly, Hurst
7	707-04642	Plt, Pawl, Over Center
8	707-04805	Mt, Shft, Cnsol
9	707-04823	Brkt, Mt, Accel Pedal
10	710-04027	Scr, Shldr, .372 X .375, 5/16-18
11	710-04039	Screw, 5/16-18, 2.00, Gr5, Patch
12	710-0607	Scr, Tt, 5/16-18, 0.500
13	710-0641	Screw, 1/4-20, 2.25, Gr5, Std
14	710-0650	Scr, Tt, 5/16-18, 0.875
15	710-3008	Screw, 5/16-18, .75, Gr5, Std
16	711-0653	Pin, Clevis, 312 Od X 1.0"
17	712-04063	Nut, Flglk, 5/16-18
18	712-04064	Nut, Flglk, 1/4-20, Grf, Nylon
19	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
20	712-3025	Nut, Jam, 5/16-24, Gr5
21	712-3061	Nut, Hexlk, 3/8-24, Gr2, Nylon
22	714-0111	Pin, Cot, 3/32, 1.0
23	719-3018	Yoke, 5/16-24
24	731-3321	Hndl, Selct
25	732-0611	Spr, Extn, .38 Od X 3.6
26	735-04000	Pad, Brake, Ped

Ref. No.	Part No.	Description
27	738-0974	Scr, Shldr, .375x.380, 1/4-20
28	738-1011A	Scr, Shldr, .500 X 2.230, 3/8-16
29	741-0475	Plastic Bushing .380 Id
30	741-0491	Brg, Flg, Nyliner, .500idx.34lg
31	741-3073	Brg, Flg, .375 X .580 X .250
32	746-04248	Cbl, Cont, Diff, Lock
33	746-04254	Cbl, Cont, Park, Brake, 4x4
34	750-04500	Spcr, Pivot, Diff Lock
35	761-04023	Cyl, Master, Tandem, Hayes
36	736-0159	Wash, Flat, .349 X .879 X .063
37	747-04528	Link, Shft, F N R
38	747-04529	Link, Shft, Hi Lo
39	714-0104	Pin, Cotter, .072 Dia. x 1.13 Lg.
40	736-0140	Wash, Flat, .385 X .62 X .063
41	736-0264	Wash, Flat, .330 X .630 X .0635
42	741-04199	Brg, Flg, .377 Id
43	725-3166	Switch
44	727-04132	Hose, Brake, Master Cyl, Front
45	727-04138	Hose, Brake, Master Cyl, Rear
46	737-04129	Ftg, Banjo Ftg Bolt, M10 x 1.00
47	737-04130	Ftg, Banjo Ftg Crush Wash, 10mm
48	710-3005	Screw, 3/8-16 x 1.25
49	710-0376	Screw, 5/16-18 x 1.00
50	607-04210	Lvr., Assembly, Shift, Hi-Lo
51	607-04211	Lvr., Assembly, Shift, F N R
52	737-04128	Ftg., Tee, -3, 45 Deg Flare



To order replacement parts, call the Customer Dealer Referral Line at **1-877-282-8684**, or visit **www.cubcadet.com** to find the nearest Cub Cadet service dealer in your area.

FRAME AND BUMPER

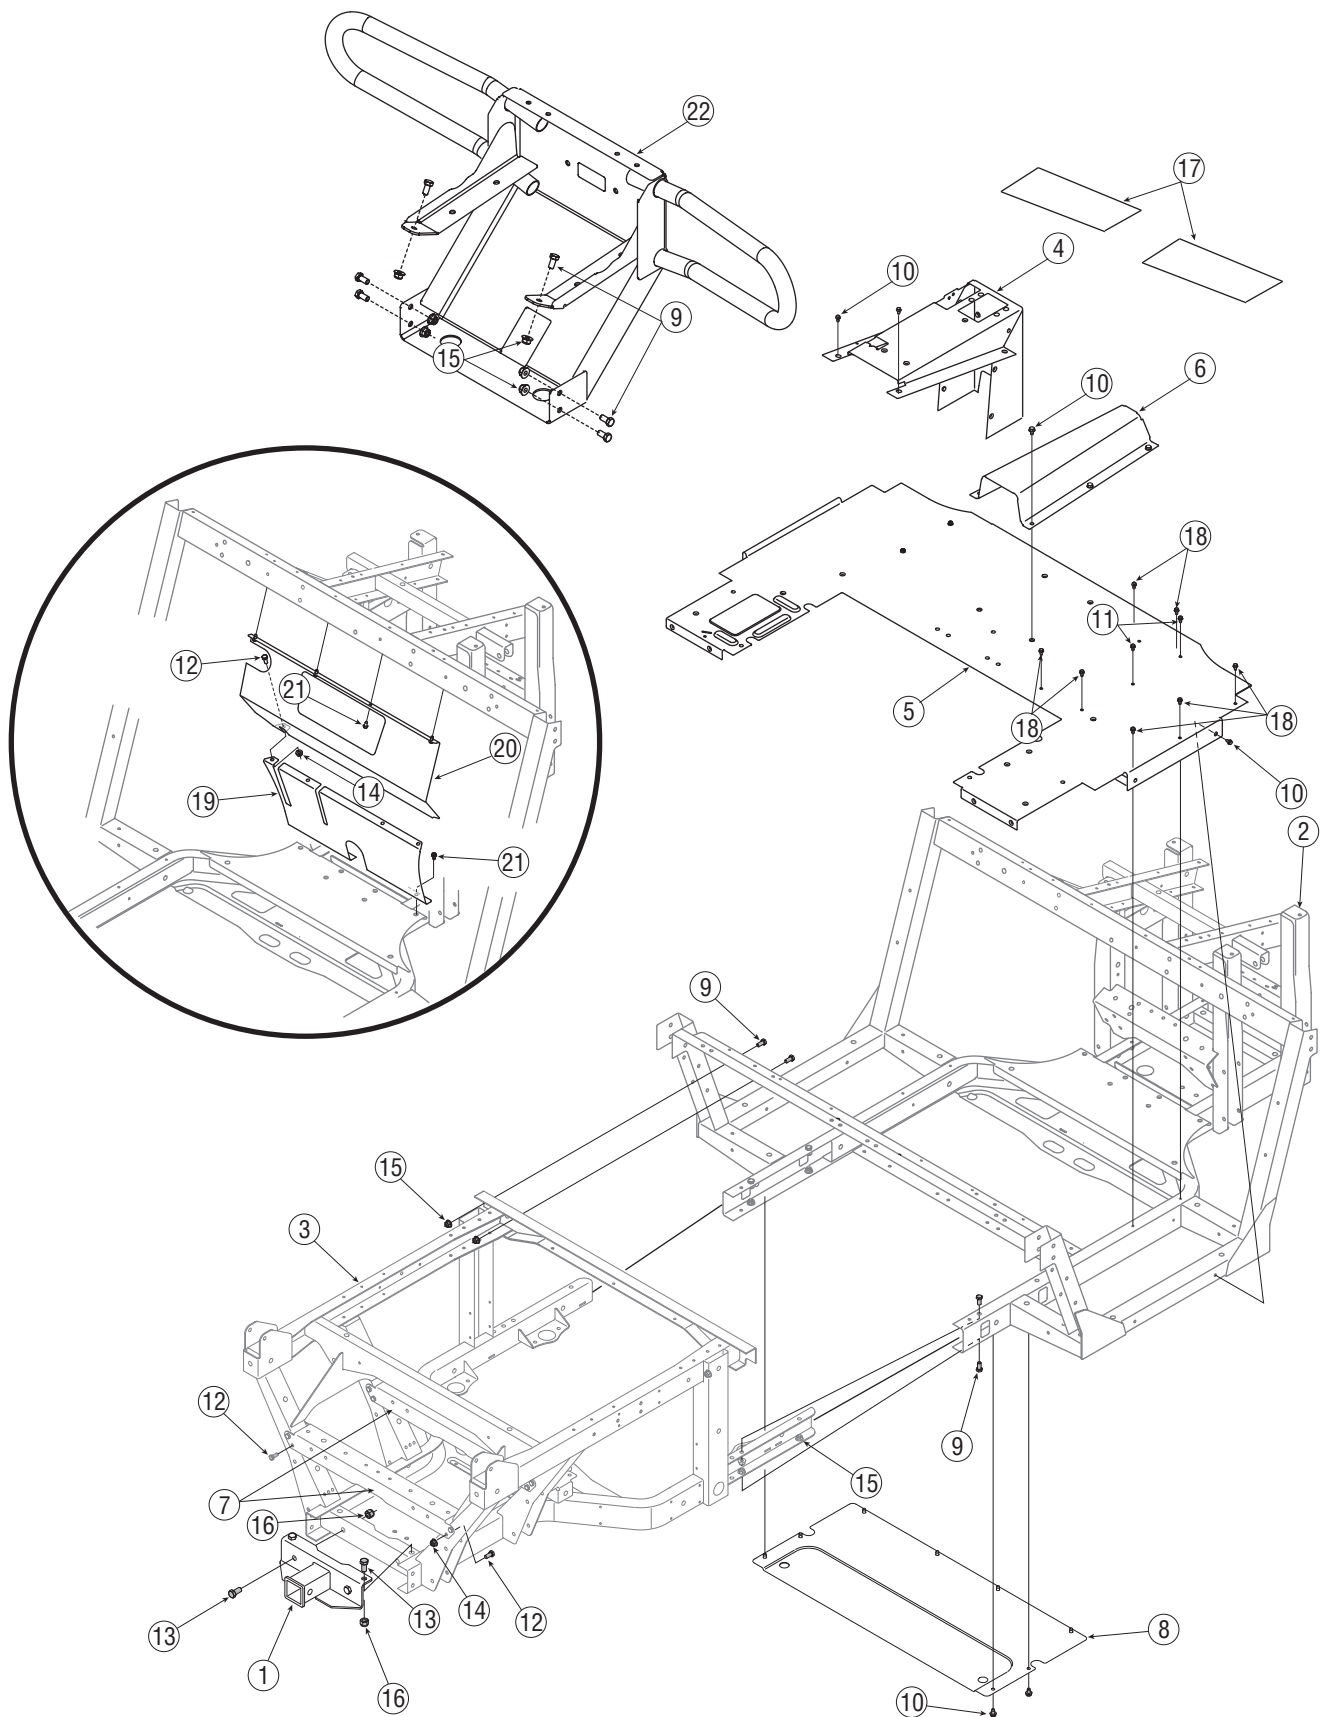


Ref. No.	Part No.	Description
1	607-04142	Hitch Assembly, receiver Rr
2	607-04182	Frm Assembly, front, uv
3	607-04184	Frm Assembly, rear, uv, 4x4
4	707-04554	Plt, cnsol
5	707-04563	Plt, floor
6	707-04684	Cvr, shf, dr, front
7	707-04770	Chan, support, rear
8	707-04861	Plt, belly Pan
9	710-0216	Screw, 3/8-16, .75, gr5, std
10	710-0607	Scr, tt, 5/16-18, 0.500, hxindwsh
11	710-1017	Scr, ab, 1/4-14, 0.625, trustxi
12	710-3008	Screw, 5/16-18, .75, gr5, std
13	710-3131	Screw, 1/2-13, 1.00, gr5, std
14	712-04063	Nut, flglk, 5/16-18, grf, nylon
15	712-04065	Nut, flglk, 3/8-16, grf, nylon
16	712-3083	Nut, hexlk, 1/2-13, grb, nylon
17	723-04021	Pad, abrasive, toe Plate
18	726-0465	Clip, pnl, ret,
19	707-04712	Pnl, Dash, Lower, 4x4
20	707-04711	Pnl, Dash, Upper
21	710-0599	Scr, tt, 1/4-20 x .500
22	607-04131	Bmpr Assembly, frt.



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

FRONT FENDERS AND DASH

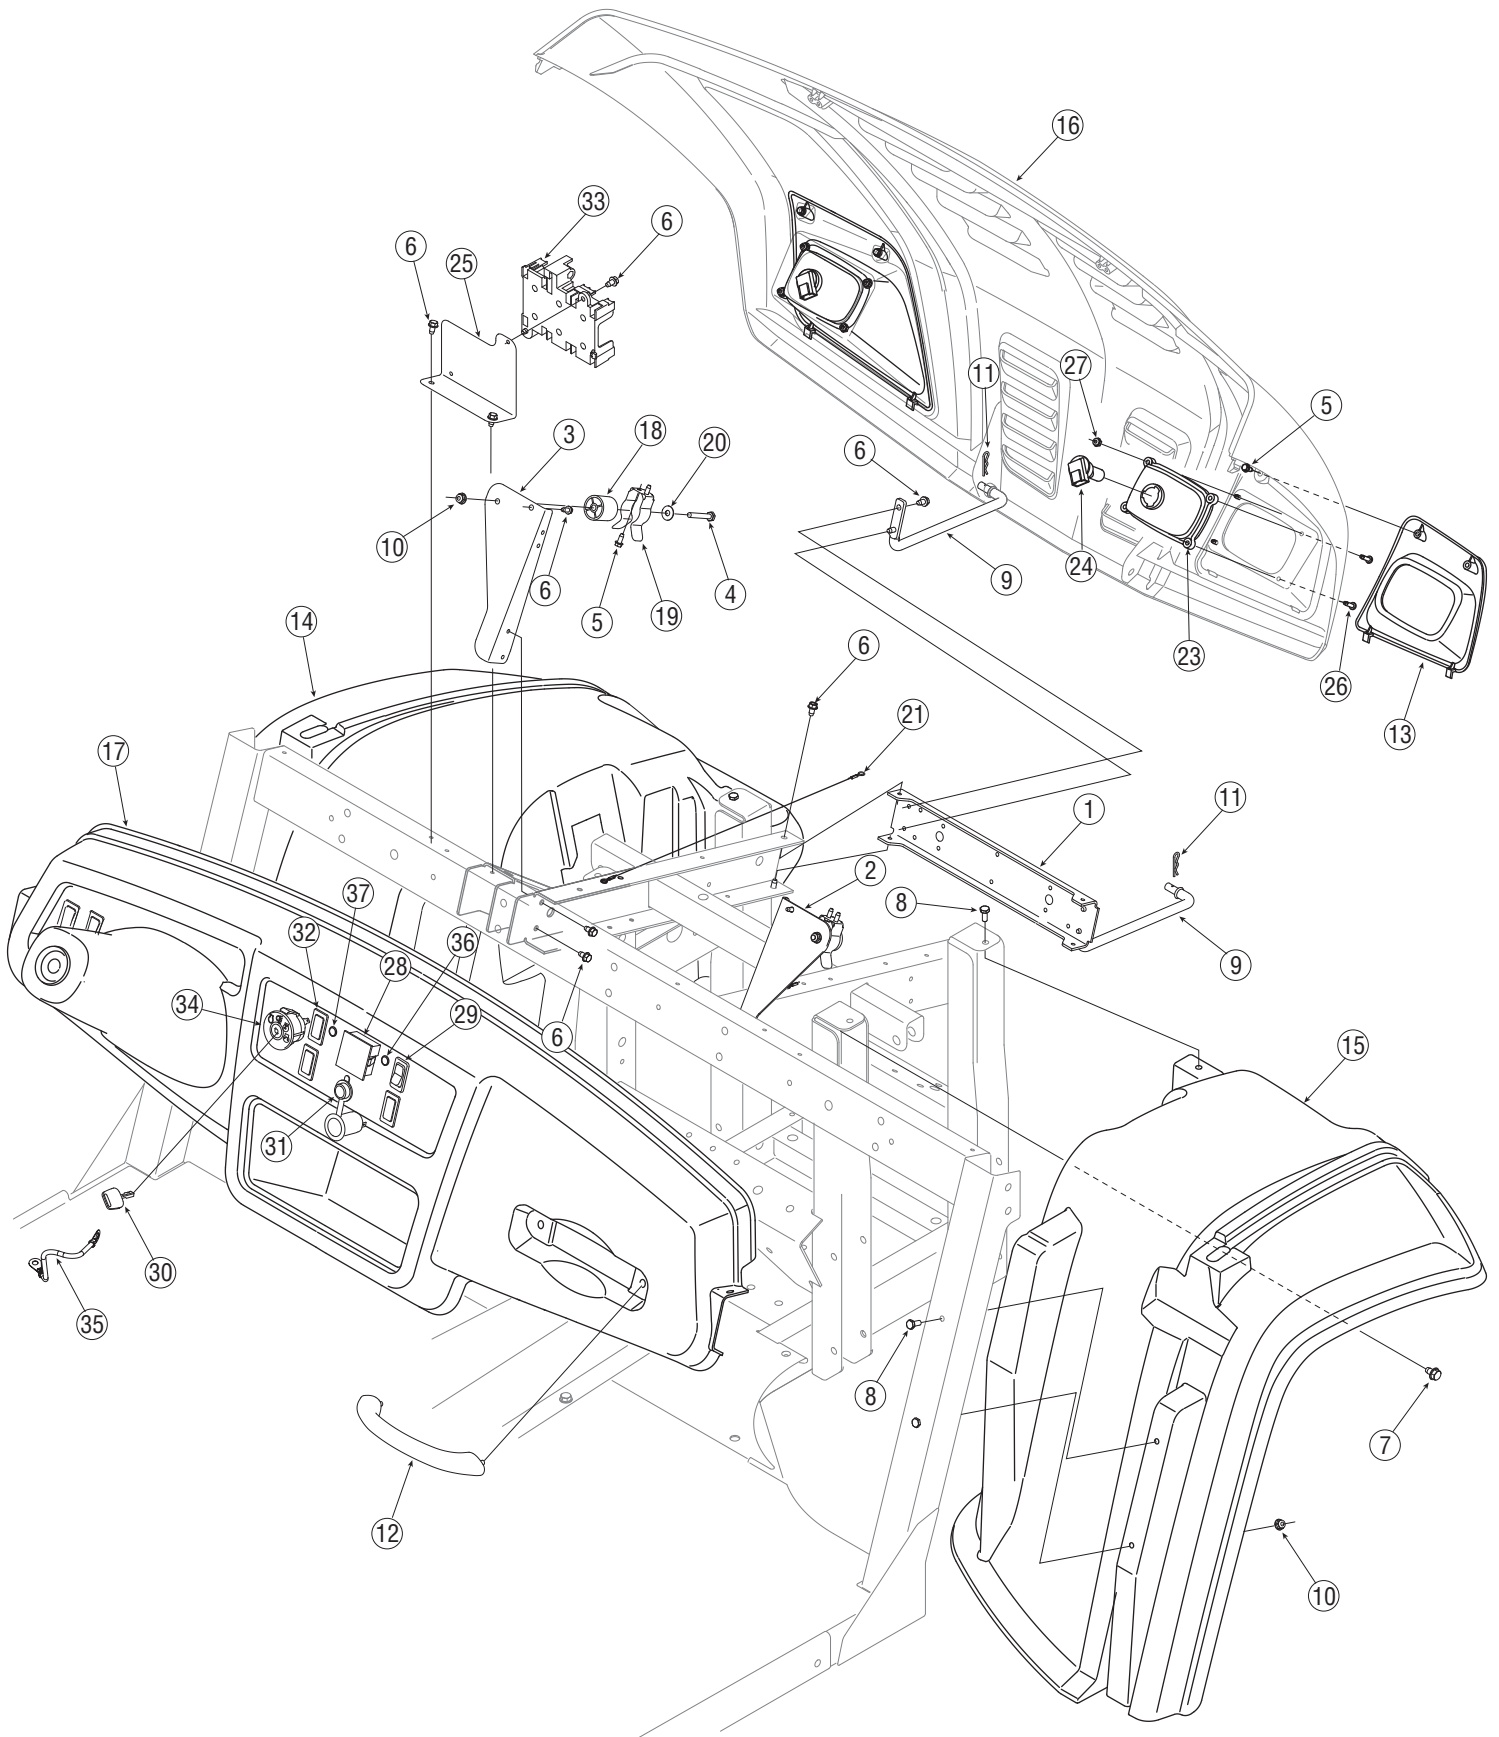

Ref. No.	Part No.	Description
1	707-04484	Chan, Frm, Cross
2	707-04779	Brkt, Hood/dash, Mount, Rh
3	707-04782	Brkt, Hood/dash, Mount, Lh
4	710-0136	Screw, 1/4-20, 1.75, Gr5, Std
5	710-04261	Screw, #12-16 x .50
6	710-0599	Screw, TT, 1/4-20 x .500
7	710-0607	Screw, TT, 5/16-18 x .500
8	710-0751	Screw, 1/4-20, .620, Gr5, Std
9	711-04491	Rod, Mt, Hood
10	712-04064	Nut, Flange Lock Nut, 1/4-20
11	714-0101	Pin, Cot, Int .08 X 1.42
12	731-04174	Hndl, Bag, W/scr 400/500 S
13	731-05285	Bzl, Hdlt RH
	731-05284	Bzl, Hdlt LH
14	731-05286	Fdr, Lh 4x4
	731-05454	Fdr, Lh 4x4, Camo
15	731-05287	Fdr, Rh 4x4
	731-05455	Fdr, Rh 4x4, Camo
16	731-05289	Hood, 4x4
	731-05456	Hood, 4x4, Camo
17	731-05322	Dash, Uv 4x4
18	731-3232	Rlr, Latch, Hood
19	732-1178	Spr, Latch, Hood

Ref. No.	Part No.	Description
20	736-0342	Wash, Fl, .283 X .75 X .030
21	746-04328	Cbl, Hood
22	735-04069†‡	Floor Mat, RH
	735-04068†‡	Floor Mat, LH
23	625-04004	Headlight Assembly
24	725-04084	Headlamp Bulb
25	707-04811	Brkt, Mt, Fuse
26	710-3009	Screw, TT, #10-24 x .750
27	712-0161	Nut, Hex Lock, #10-24
28	725-04022	Meter, Ind., Hour Flat Face
29	725-04352	Switch, 4x4, Rocker
30	725-1745	Key, Delta, Plastic
31	725-2003	Recptl, Pwr, 12v
32	731-04010	Pnl, Plug, Switch
33	731-05490	Relay, Hldr, 3-Way
34	725-1741	Switch, Key, 4 Pos. Delta
35	725-3283*	Diesel Engine Ground Wire
36	725-04285*	Lgt., Ind., Red, LED
37	725-04288*	Lgt., Ind., Yellow, LED
—	725-04365†	Harness, Jumper, Neutral Switch
—	725-04351†	Harness, Wire, Kohler
—	725-04327†*	Harness, Wire, Caterpillar
—	725-04341†*	Harness, Engine, Diesel, Cat

† Not Shown


‡ If Equipped

* Diesel Unit Only



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

SEATS/ BATTERY/ FUEL TANK

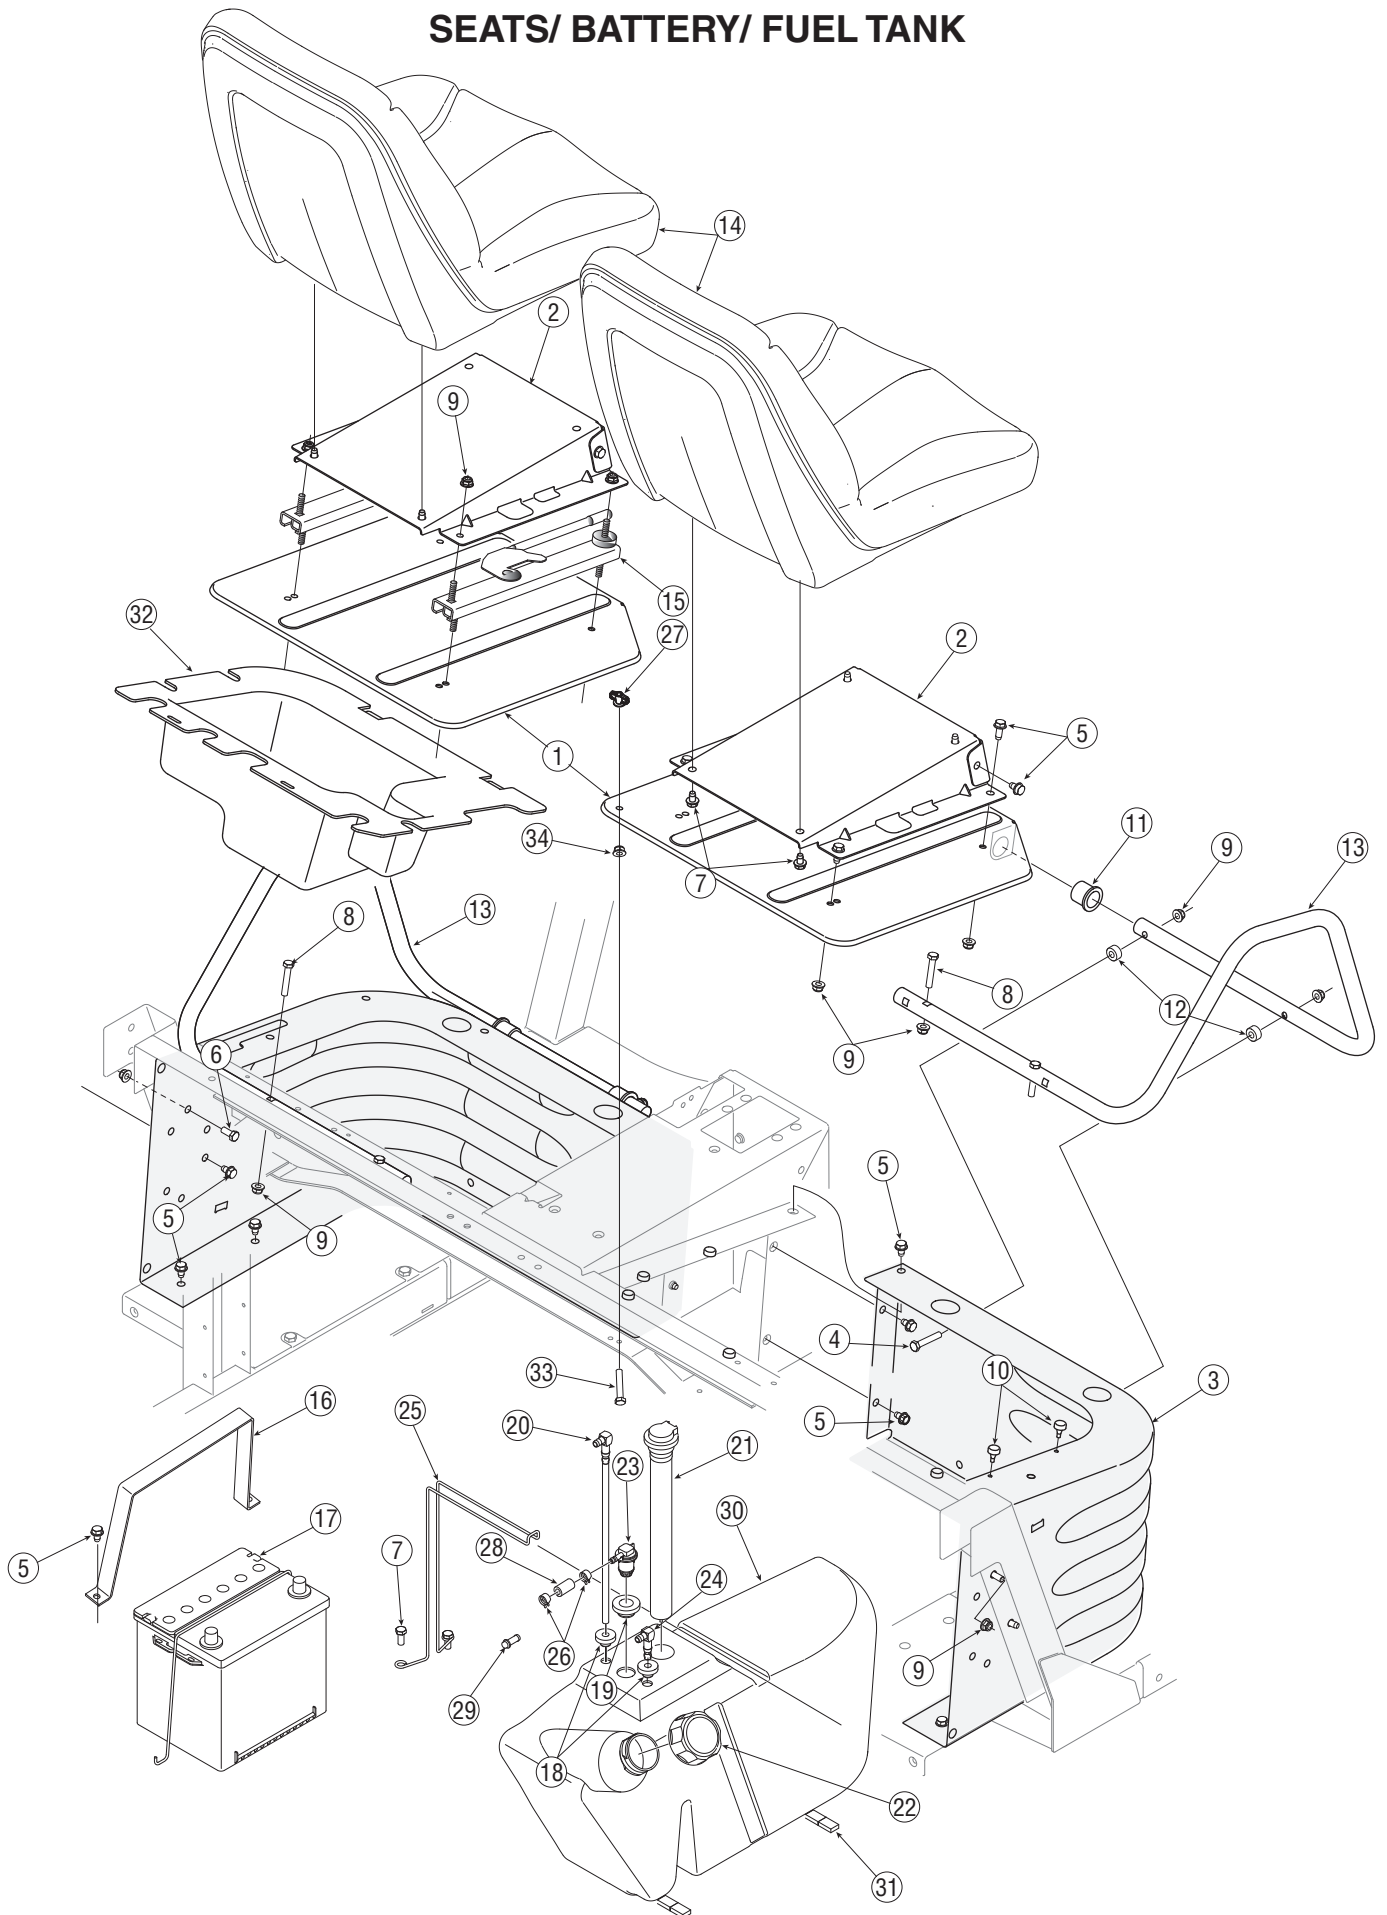

Ref. No.	Part No.	Description
1	707-04546A	Plt, Seat
2	707-04654	Brkt., Mt., Seat
3	607-04223	Box, Seat
4	710-0260A	Bolt, Crg., 5/16-18 x .62
5	710-0607	Scr., TT, 5/16-18 x .500
6	710-1260A	Screw, LD, 5/16-18 x .750
7	710-0607	Screw, 5/16-18 x .500
8	710-3180	Screw, 5/16-18 x 1.75
9	712-04063	Nut, Flglk, 5/16-18
10	735-0271	Bmpr, .62 Dia. x .3
11	741-0227	Brg, Flg, .879ID x 1.1315 OD
12	750-0258	Spcr, .315 x .750 x .375 Lg.
13	750-04424	Hndl, Grab
14	757-04008A	Seat
15	757-04033	Track, Seat
16	707-04870	Brkt., Mt., Battery
17	725-3267	Battery, 540 CCA Wet
18	735-04065	Bush, Tank, Gas
19	735-04067	Bush, Tank, Vent
20	751-10288	Ftg, Fuel, Pickup, 4x4
21	751-10361	Sensor, Fuel, Low
22	751-10374‡	Cap, Fuel
	751-10373†	Cap, Fuel
23	751-10375	Ftg, Fuel, Vent
24	751-3174†	Ftg, Fuel, Pickup
25	732-04357	Wire, tank, fuel
26	726-0205	Clamp, Hose, .490 Dia.
27	712-0397	Nut, Wing, 1/4-20
28	751-3130‡	Fuel Line, 5/16 Id X .56 Od
	751-0535†	Hose, Fuel Line
29	737-0296†	Vent, 3/8 Dia.
30	651-04159‡	Tank assembly, Fuel
	651-04158†	Tank assembly, Fuel
31	722-3022	Tape, .625 Wide X.25 Thk Foam
32	731-05622	Tray, Seat box
33	710-0597	Screw, 1/4-20 x 1.00
34	712-04064	Nut, Flange Lock, 1/4-20


‡ Kohler Engine

† Diesel Engine



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

KOHLER ENGINE/TRANSMISSION ACCESSORIES

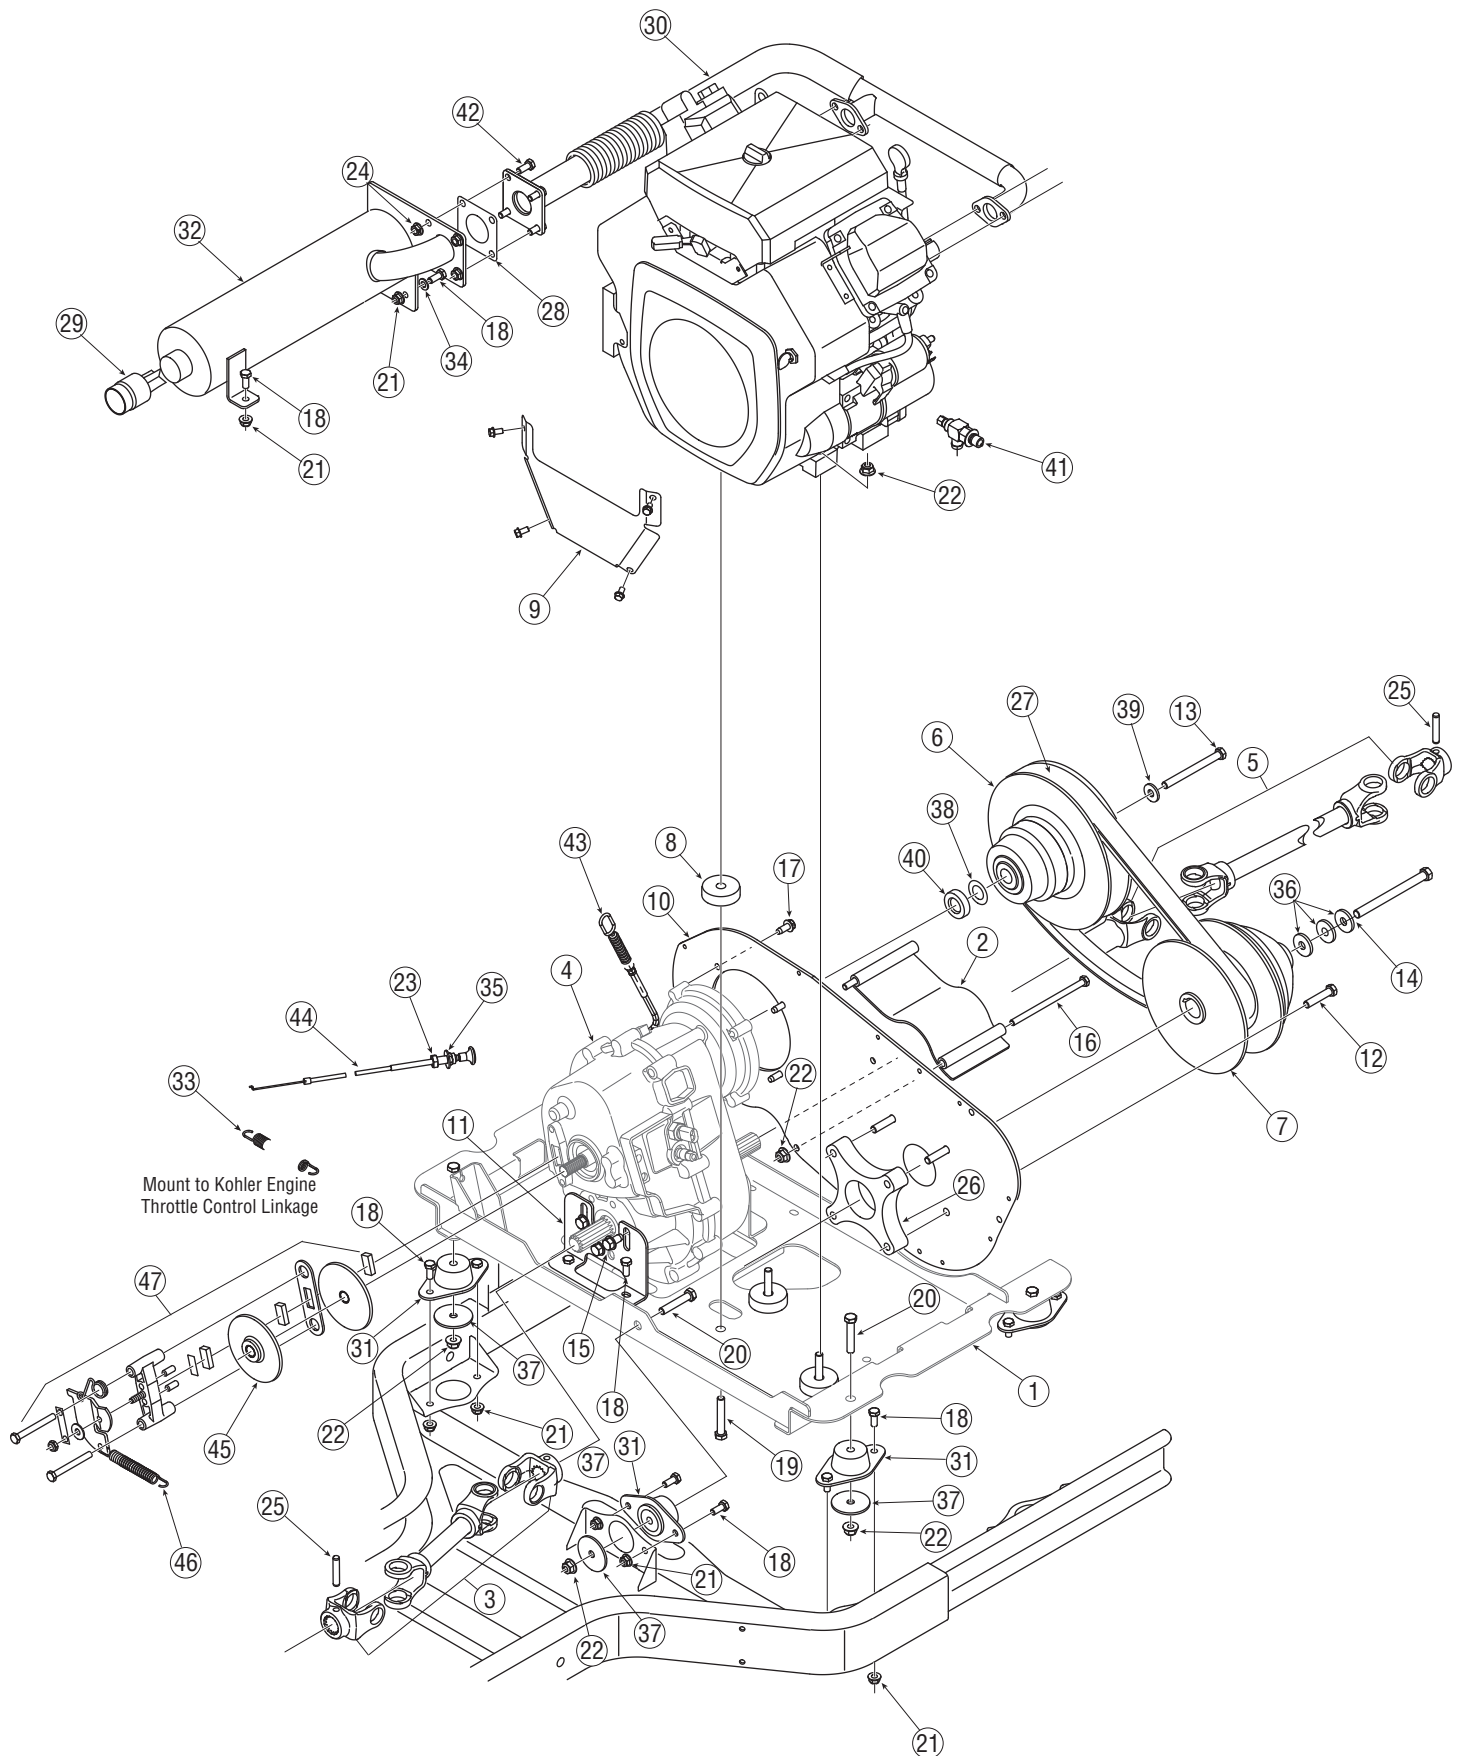


Ref. No.	Part No.	Description
1	607-04177	Tray Assembly, eng, 4x4, Kohler
2	607-04205	Cvr, plt, cvt
3	618-04306	Shf Assembly, rr/prop
4	618-04308	Case Assembly, transfer
5	618-04314	Shf Assembly, frt/prop, Hilliard
6	618-04390	Clu Assembly, cvt, driven
7	618-04391	Clu Assembly, cvt, driver, Kohler
8	750-04619	Spcr, engine, kohl, 4x4
9	707-04610	Brkt, engine Shield
10	707-04631A	Plt, eng/trans, Kohler 20
11	707-04724	Brkt, trans, mount
12	710-0347	Screw, 3/8-16, 1.75, gr5, std
13	710-0411	Screw, 3/8-16, 4.00, gr5, std
14	710-04575	Screw, 7/16-20, 5.00, gr5, std
15	710-0623	Scr, tt, 3/8-16, 0.750, hxindwsh
16	710-0833	Screw, 5/16-18, 5.25, gr5, std
17	710-1260A	Scr, ld, 5/16-18, 0.750, hxindwsh
18	710-3008	Screw, 5/16-18, .75, gr5, std
19	710-3011	Screw, 3/8-16, 2.25, gr5, std
20	710-3144	Screw, 3/8-16, 2.00, gr5, std
21	712-04063	Nut, flglk, 5/16-18, grf, nylon
22	712-04065	Nut, flglk, 3/8-16, grf, nylon
23	712-0711	Nut, jam, 3/8-24, gr5
24	712-3004A	Nut, flglk, 5/16-18, gr5, sd Lk

Ref. No.	Part No.	Description
25	715-0118	Pin, spirol, 5/16, 1.75
26	719-04201	Spcr, eng/trans Plt, mount, kohl
27	754-04125	Belt, cvt, 4x4
28	721-04167	Gskt, eng, 4x4
29	751-10378	Arstr, scrn, spark
30	751-10247	Pipe, exh, kohl 4x4
31	731-04667	Mt, comprs, eng, hd
32	751-10152	Mflr, 4x4, cat/khlr
33	732-3002	Spring .50 Od X 4.5
34	736-0264	Wash, flat, .330 X .630 X .0635
35	736-0300	Wash, flat, .406 X .875 X .059
36	736-0322	Wash, flat, .450x1.250x.164, ht
37	736-04018	Wash, flat, .38 X 2.00 X .12
38	736-0566	Wash, fl, .793x1.368 X.025, ht
39	736-3052	Wash, flat, .406 X 1.00 X .105
40	750-04626B	Spcr, 20mm X 1.50 X .37
41	710-3038	Screw, 5/16-18 x .875
42	738-04211A	Spcr, shldr, .433x.800x.390
43	746-04253A	Cbl, cont, throt, kohler
44	746-04292	Cbl, cont, choke, 4x4 Kohl
45	717-1177A	Disc, Brake, UV
46	732-04248	Spr., Ext., .38OD x 3.9 Lg.
47	661-04019	Brake Assembly, Transfer Case
—	959-04116	Brake Pad Set



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

DIESEL CAT ENGINE/TRANSMISSION ACCESSORIES

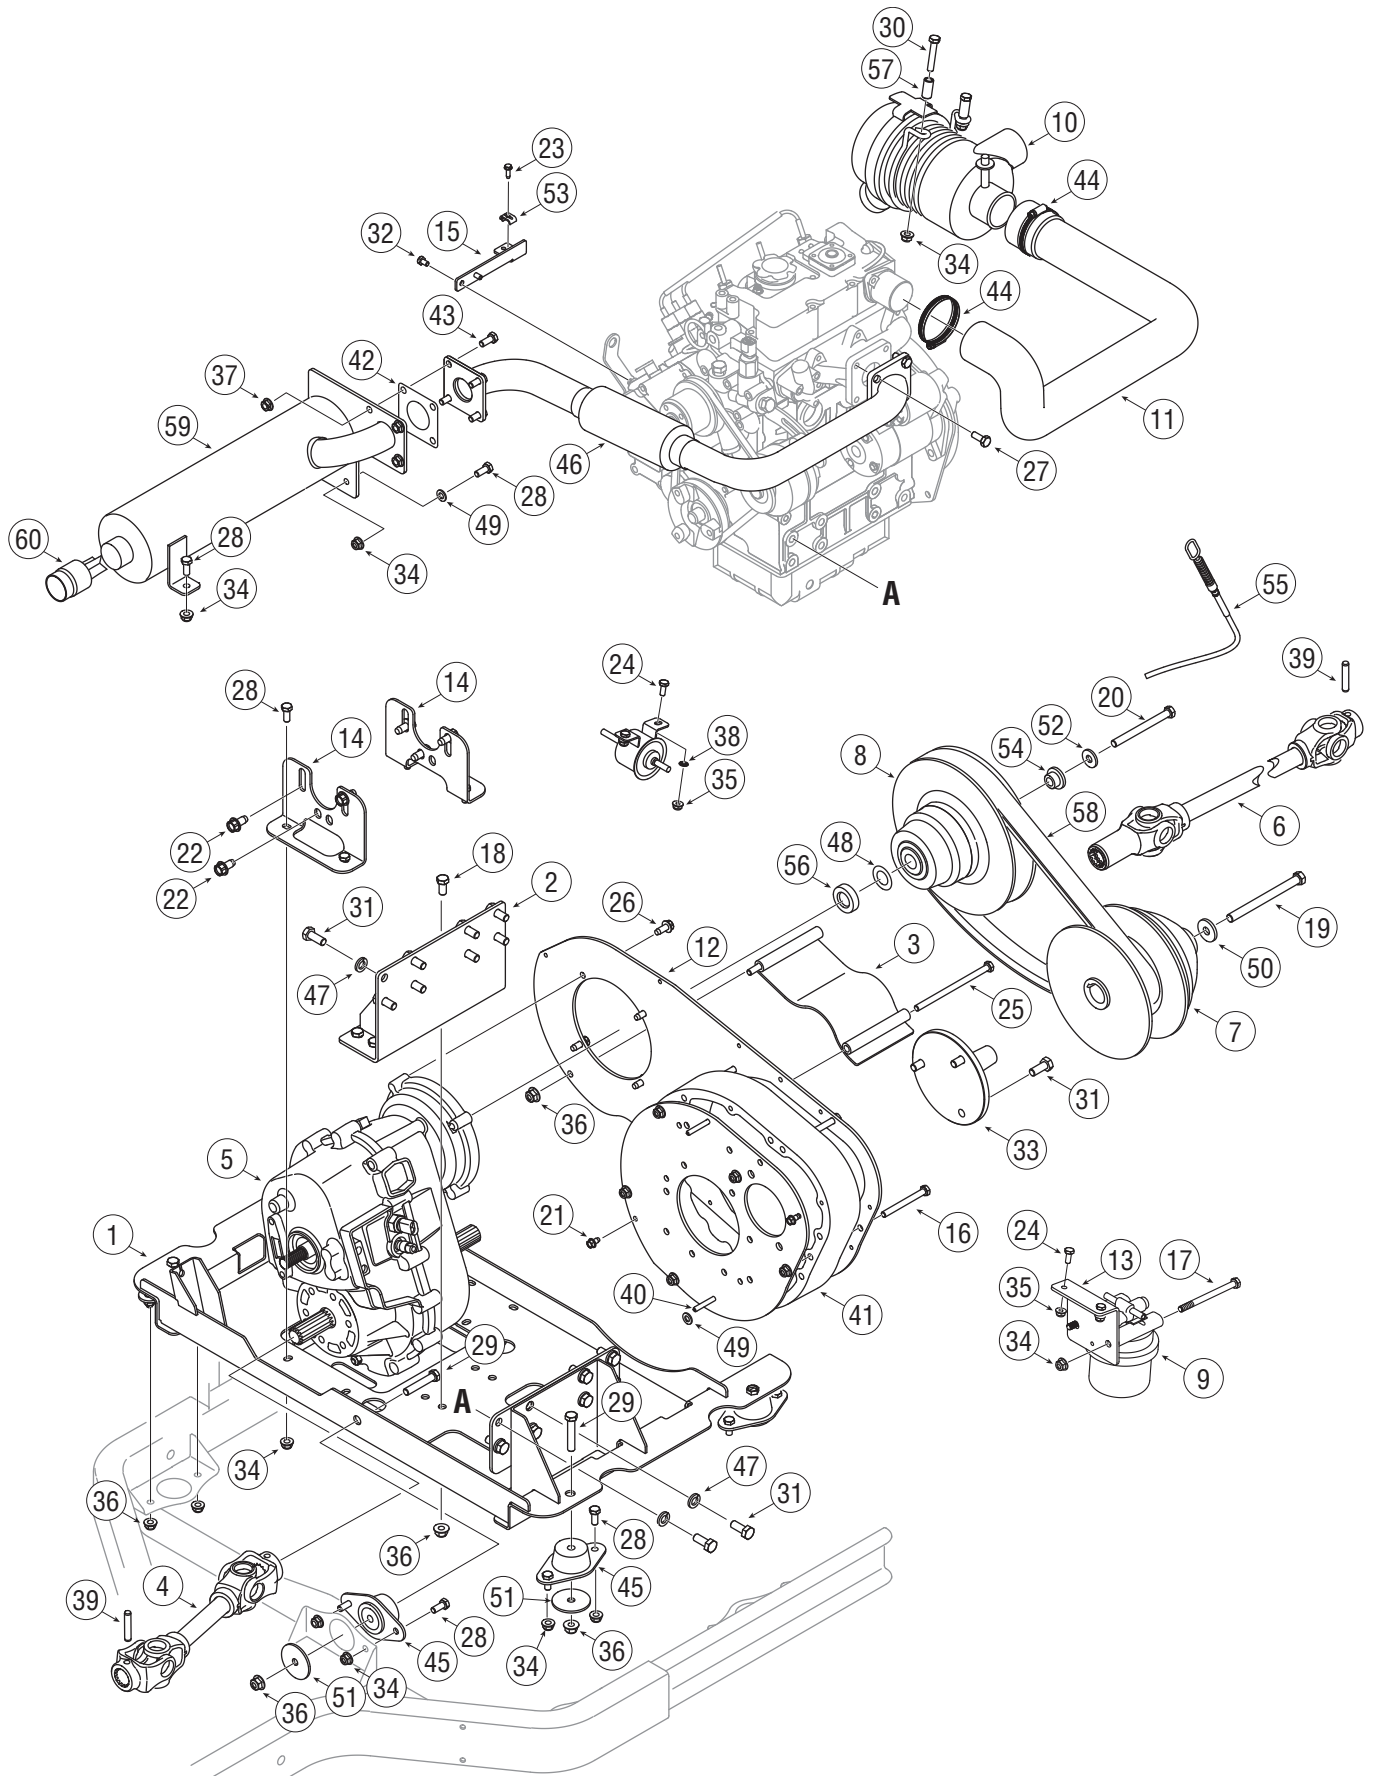


Ref. No.	Part No.	Description
1	607-04175	Tray Assembly, eng, 4x4, Cat
2	607-04178	Supt, Assembly, L/Cat
3	607-04205	Cvr, plt, cvt
4	618-04306	Shf Assembly, rr/prop
5	618-04308	Case Assembly, transfer
6	618-04314	Shf Assembly, frt/prop, Hilliard
7	618-04389	Clu Assembly, Cvt, Driver, Cat
8	618-04390	Clu Assembly, cvt, driven
9	651-04044	Filter, Assembly, Diesel
10	651-04156	Filter, Assembly, Aircl, 4x4, Cat
11	751-10277	Hose, Air inlet, Cat 4x4
12	707-04626	Plt, eng/trans, Cat
13	707-04714	Brkt, Fltr, Fuel, Cat 4x4
14	707-04724	Brkt, trans, mount
15	707-04798	Mt, Cbl, Throt, Cat
16	710-0189	Screw, 5/16-18, 3.00, gr5, std
17	710-0190	Screw, 5/16-18, 4.00, gr5, std
18	710-0216	Screw, 3/8-16, .75
19	710-04575A	Screw, 7/16-20, 5.00, gr5, std
20	710-0411	Screw, 3/8-16, 4.00
21	710-0599	Screw, TT, 1/4-20, .500
22	710-0623	Scr, tt, 3/8-16, 0.750, hxindwsh
23	710-0651	Screw, SF, #10-24, .625
24	710-0751	Screw, 1/4-20, .620
25	710-0833	Screw, 5/16-18, 5.25, gr5, std
26	710-1260A	Scr, ld, 5/16-18, 0.750, hxindwsh
27	710-1681	Screw, MB-1.25, 20.00
28	710-3008	Screw, 5/16-18, .75, gr5, std
29	710-3144	Screw, 3/8-16, 2.00, gr5, std
30	710-3180	Screw, 5/16-18, 1.75

Ref. No.	Part No.	Description
31	710-3208	Screw, M10-1.5, 25mm
32	710-3209	Screw, M6-1.0, 10mm
33	711-04589	Shaft, Output, Cat, Tapered
34	712-04063	Nut, flglk, 5/16-18, grf, nylon
35	712-04064	Nut, flglk, 1/4-20, grf, nylon
36	712-04065	Nut, flglk, 3/8-16, grf, nylon
37	712-3004A	Nut, flglk, 5/16-18, gr5, sd Lk
38	736-0498	Washer, Lock, 1/4
39	715-0118	Pin, spirol, 5/16, 1.75
40	715-04020	Spring, Pin, .25 Dia. x 2.50 Spiral
41	719-04199	Spcr, eng/trans Plt, mount
42	721-04167	Gskt, eng, 4x4
43	710-3038	Screw, 5/16-18 x .875
44	726-0476	Clamp, Hose, Adj. 2-3"
45	731-04667	Mt, compsr, eng, hd
46	751-10246	Pipe, Exh, Cat, 4x4
47	736-0171	Wash, Lock, 7/16, Regular Duty
48	736-0566	Wash, Flat, .793 x 1.368 x .025
49	736-0264	Wash, flat, .330 X .630 X .0635
50	736-0322	Wash, flat, .450x1.250x.164, ht
51	736-04018	Wash, flat, .38 X 2.00 X .12
52	736-3052	Wash, flat, .406 X 1.00 X .105
53	751B221535	Clamp, Casing
54	738-04211	Spcr, shldr, .433x.800x.390
55	746-04291A	Cbl, cont, throt, Cat
56	750-04626B	Spcr, 20mm X 1.50 X .37
57	750-0661	Spcr, 5/16 ID x .49 x 1.015 Lg
58	754-04125	Belt, cvt, 4x4
59	751-10152	Mflr, 4x4, Cat/Khlr
60	751-10378	Arstr, spark



To order replacement parts, call the Customer Dealer Referral Line at **1-877-282-8684**, or visit **www.cubcadet.com** to find the nearest Cub Cadet service dealer in your area.

TRANSMISSION

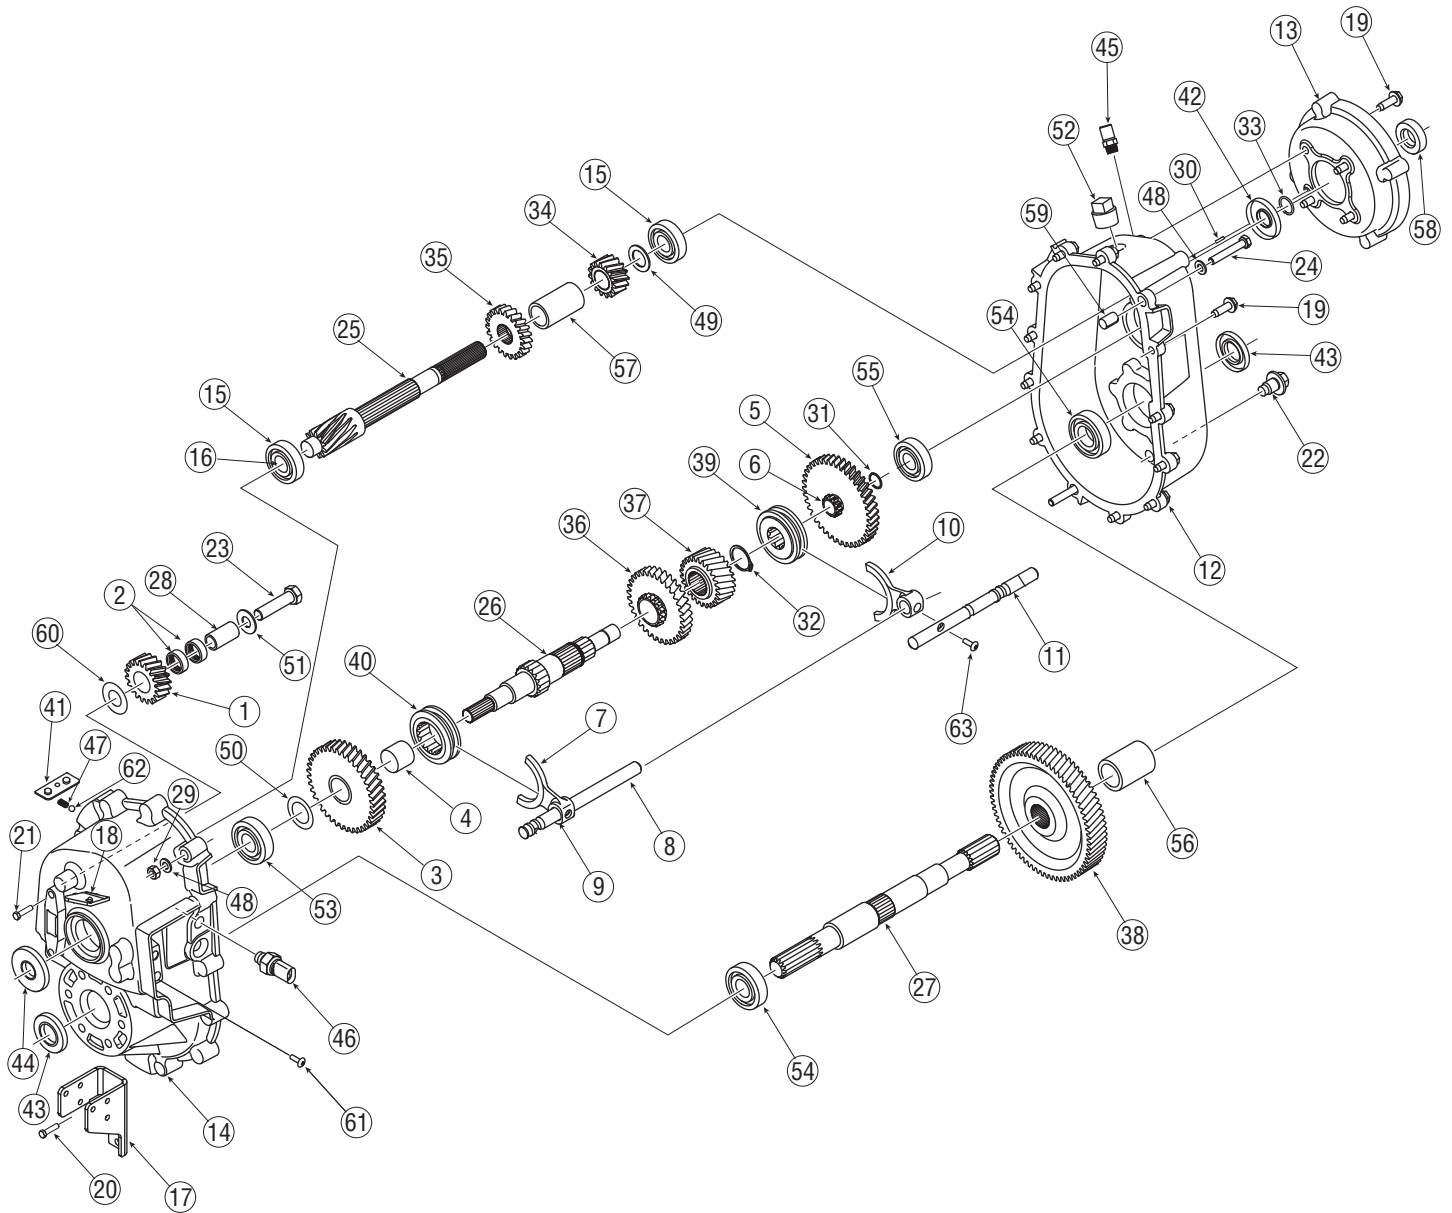


Ref. No.	Part No.	Description
1	717-04233	Gear, Rev Idler, 19T
2	741-04169	Brg., Needle, .7500 x 1.0 x .375
3	717-04237	Gear, Rev, 39T
4	741-3118	Brg, Slv, 25mm x 28mm x 25mm
5	717-04234	Gear, Lo, 40T
6	741-04208	Brg, Slv, 16 x 18 x 10
7	718-04176	Yoke, Actr.
8	711-04454	Shf, Actr, Fwd, Rev
9	716-0194	Ring, Ret, .56 Dia.
10	718-04079A	Yoke, Actr, 4WD
11	711-04453	Shf, Actr, Lo
12	619-04132	Hsg, lh, 4x4 Uv
13	619-04133	Hsg, cvt
14	619-04131	Hsg Assembly, rh, uv, 4x4
15	741-3057	Brg, ball, 20x47x14, 6204, open
16	750-04681	Spcr, Flg, .630 x .787 x .662
17	707-04803	Brkt, shft, trans
18	707-04879	Brkt, mnt, brake, transfer Case
19	710-0602	Scr, tt, 5/16-18, 1.000, hxindwsh
20	710-1260A	Scr, Id, 5/16-18, 0.750, hxindwsh
21	710-1314A	Scr, soc Hd, 5/16-18, .750
22	710-1633	Scr, plug, m14x1.5 X .827
23	710-3071	Hhcs, 1/2-13, 2.00, gr8, std
24	710-3103	Hhcs, 5/16-18, 2.00, gr5, std
25	711-04444	Shf, input, 4x4 Transfer Case
26	711-04445	Shf, mid, 4x4 Transfer Case
27	711-04446	Shf, output, 4x4 Transfer Case
28	711-04447	Shf, rev Idler
29	712-0158	Nut, hexlk, 5/16-18, gra, ctrlk
30	715-0138	Pin, roll, 1/8 Od, .63
31	716-0234	Ring, ret, .669 Dia Shaft
32	716-04059	Ring, ret, 1.125 Dia Shaft

Ref. No.	Part No.	Description
33	716-04062	Ring, wire, 20mm Shaft
34	717-04231	Gear, low Pinion, 4x4, 15t
35	717-04232	Gear, high Pinion, 4x4, 22t
36	717-04236	Gear, high, 4x4, 33t
37	717-04235	Gear, final Pinion, 4x4, 26t
38	717-04278	Gear, final, 4x4, 69t
39	718-04163	Colr, lo
40	718-04226A	Colr, hi-rev, 4x4
41	718-04240	Plt, detent Spring
42	721-04094	Seal, oil, 20 X 47 X 7
43	721-04146	Seal, oil, 25x46x7
44	721-04161	Seal, oil, 20x52x7
45	723-3021	Creeper Drive Housing Breather
46	725-04049	Sw, neut, saf
47	732-0424	Spr, 3/8 Od X 1 1/4 Lg
48	736-0264	Wash, flat, .330 X .630 X .0635
49	736-0287	Wash, flat, .793 X 1.24 X .06, ht
50	736-0615	Wash, flat, 1.007x1.542x.03, ht
51	736-3084	Wash, flat, .51 X 1.12 X .06, ht
52	737-04148	Plug, pipe, 3/4 Nptf
53	741-04044	Brg, ball, .79 Id X 2.05 Od X .6
54	741-3037	Brg, ball, 25x52x15, 6205, open
55	741-04068	Brg, Ball, 17mm x 47mm x 14mm
56	750-04496	Spcr, output Shaft, 4x4
57	750-04502	Spcr, mid Shaft, 4x4
58	750-04626	Spcr, 20mm x 1.50 x .37
59	715-3045	Bushing, Dowel
60	736-3047	Wash, thrust, .757 X 1.38 X .062
61	710-1652	Scr, tt, 1/4-20x.625, hxindwsh, ca
62	741-04209	Ball, detent, .375
63	710-0425	Screw, Truss, Mach, #10-24



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

AXLES AND STEERING

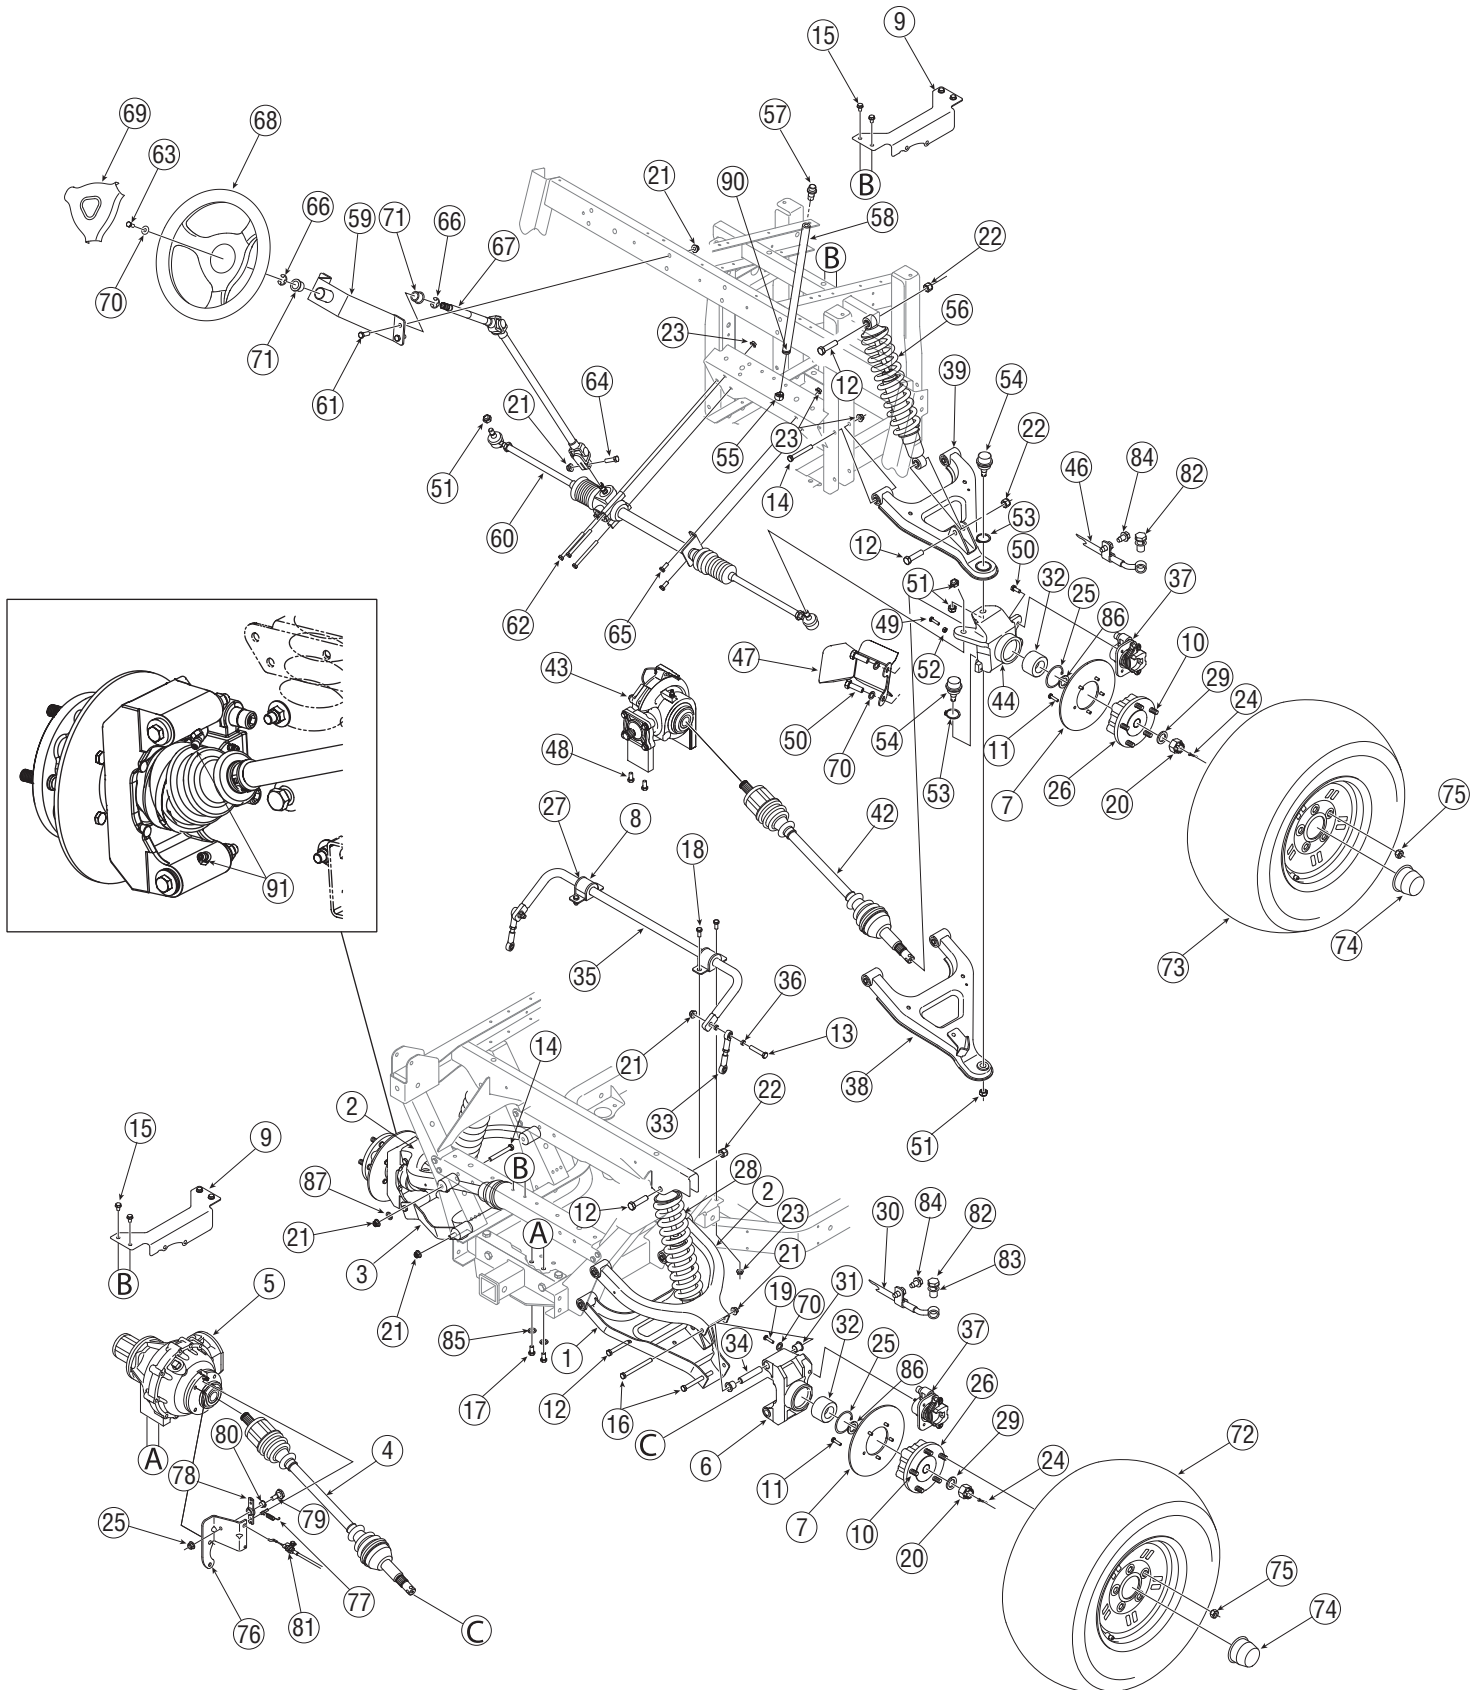

Ref. No.	Part No.	Description
1	607-04163	Cont Assembly, lwr, r/rr
2	607-04162	Cont Assembly, rr Up
3	607-04169	Cont Assembly, lwr, l/rr
4	611-04063A	Axle Assembly, cv Joint, 4x4
5	618-04236	Diff Assembly, 4x4 Uv, complete
6	619-04125A	Hsg, rr 4x4, mach
7	707-04436	Disc, brake, 8.00x.188
8	707-04655	Mt, sway Bar
9	707-04603A	Mt, rear/diff, 4x4
	707-04604	Mt,front/diff,4x4
10	710-0852	Stud, rib Neck, 7/16-14 X 1.6
11	710-0433	Screw, 1/4-20, .625, gr5, lock
12	710-0489	Screw, 1/2-13, 2.00, gr5, std
13	710-3144	Screw, 3/8-16, 2.00, gr5, std
14	710-0521	Screw, 3/8-16, 3.00, gr8, std
15	710-0607	Scr, tt, 5/16-18, 0.500, hxindwsh
16	710-0411	Screw, 3/8-16, 4.00, gr5, std
17	710-0216	Screw, 3/8-16, .75, gr5, std
18	710-0157	Screw, 5/16-24, .75, gr5, std
19	710-3206A	Screw, m8-1.25, 25.00, std
20	712-04109	Nut, slotted, 22x1.5
21	712-04065	Nut, flglk, 3/8-16, grf, nylon
22	712-3083	Nut, hexlk, 1/2-13, grb, nylon
23	712-04063	Nut, flglk, 5/16-18, grf, nylon
24	714-0162	Pin, cot, 5/32, 1.25
25	716-04055	Ring, ret, dho-60
26	718-04188	Hub, whl, 4x4
27	731-05352	Bush, sway Bar
28	732-04221	Shabs, 5.12 Stroke, rr, 4x4
29	736-0291	Wash, flat, .88 X 1.38 X .125, ht
30	727-04137	Hose, brake, rear, right
	727-04136†	Hose, brake, rear, left
31	741-1142	Brg, flg, .625 X .750 X .750 Lg
32	741-04166	Brg, dble Row, 60x30x37
33	747-04514	Rod, cont, .375x3.886
34	750-04358A	Tube, pivot, rr/cont Arm
35	750-04487	Bar, sway, rr, 4x4
36	750-04633A	Spcr, .50x.38x.188
37	761-04019	Brake, hyd, caliper, frt
38	607-04145	Cont Assembly,r/frt,lwr
39	607-04148	Arm Assembly,r/frt,upr
40	607-04152†	Cont Assembly,l/frt,lwr

Ref. No.	Part No.	Description
41	607-04153†	Cont Assembly,l/frt,upr
42	611-04071A	Axle Assembly,cv Joint,4x4
43	618-04316	Diff Assembly,cfd,4x4
44	619-04137	Hsg,knuckle,r/frt,mach
45	619-04142†	Hsg,knuckle,l/frt,mach
46	727-04134	Hose, brake, front, right
	727-04133†	Hose, brake, front, left
47	707-04833	Brkt,shld,strg,RH
	707-04832†	Brkt,shld,strg,LH
48	710-0216	Screw,3/8-16,.75,gr5,std
49	710-0597	Screw,1/4-20,1.00,gr5,spec
50	710-3206A	Screw,m8-1.25,25.0,gr8.8,std
51	712-04086	Nut,nylock,m12x1.25
52	712-3006	Nut,hex,1/4-20,gr5
53	716-04039	Ring,ret,34x1.6
54	723-04024	B/jnt,bj14d-6201
55	726-0205	Clamp,hose,.490 Dia.
56	732-04254	Shabs,5.12 Stroke,frt,4x4
57	737-0296	Vent,3/8 Dia
58	751-3130	Hose,fuel Line
59	607-04124	Supt Assembly,strg,whl
60	617-04023	Strg Assembly,gr,4x4
61	710-0514	Screw,3/8-16,1.00,gr5,std
62	710-1266	Screw,5/16-18,3.50,gr5,std
63	710-1880	Screw,5/16-18,.75,gr5,patch
64	710-3005	Screw,3/8-16,1.25,gr5,std
65	710-3008	Screw,5/16-18,.75,gr5,std
66	716-0231	Ring,e Type,.750
67	717-04200	Shft,strg
68	731-04514	Whl,strg,soft Grip 3 Spoke 5/8
69	731-3210	Cvr,whl,steering Soft Grip
70	736-0242	Wash,bell,.340 X .872 X .060
71	741-0339	Brg,flg,.754id X 1.00odx.925
72	634-04214A	Whl Assembly, r/compl,25x11-12
	634-04244A‡	Whl Assembly, r/compl,25x11-12
	634-04215A†	Whl Assembly, l/compl,25x11-12
	634-04245A†‡	Whl Assembly, l/compl,25x11-12
	734-04156	Rear Tire Only, 25x11-12
73	634-04216A	Whl Ass'y, r/compl,25x10-12
	634-04246A‡	Whl Ass'y, r/compl,25x10-12
	634-04217A†	Whl Ass'y, l/compl,25x10-12
	634-04247A†‡	Whl Ass'y, l/compl,25x10-12

† Not Shown
‡ Camo Units

Continued on next page



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.




To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

Ref. No.	Part No.	Description
	734-04157	Front Tire Only, 25x10-12
74	707-04740	Cap, Whl UV
75	712-3050	Nut, lug, 7/16-14
76	707-04693	Brkt, diff, cbl, mnt
77	732-0418	Spr, ext, .38od x 2.10
78	707-04554	Plt, cnsol
79	738-0507B	Scr, shldr, .500 dia x .434
80	741-0491	Brg, flg, nyliner, .500id x .34lg
81	746-04248	Cbl, cont, diff, lock
82	737-04129	Ftg, banjo ftg bolt, M10x1.00
83	737-04130	Ftg, banjo ftg crush wash, 10mm
84	710-0599	Screw, tt, 1/4-20x.500
85	736-0262	Washer, Flat, .385 x .870 x .092
86	736-0748	Wash, Flat, 1.250 x 1.938 x .063
87	736-0272	Wash, Flat, .510 x 1.00 x .060
88	723-3021†	Creeper Drive Housing Breather
89	737-04149†	Adap, Diff, Breather
90	726-04041	Clamp, Hose, Adj.
91	737-04091	Ftg, Grs

† Not Shown

DIESEL RADIATOR

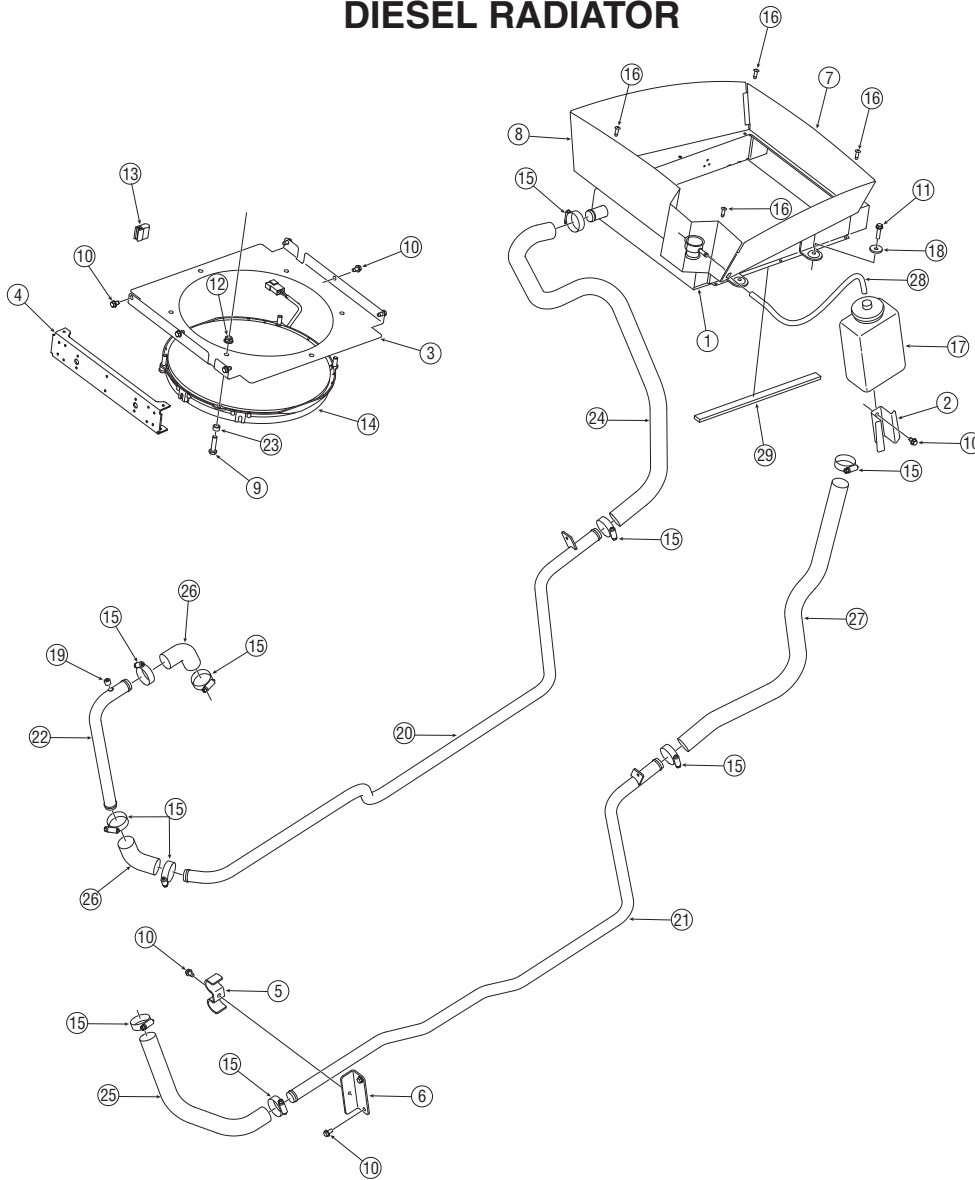

To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

Ref. No.	Part No.	Description
1	651-04148	Rdtr Asm, zin Core
2	703-05461A	Brkt, over Flow, bottle
3	707-04453	Mt, fan, 4x4
4	707-04484	Chan, frm, cross
5	707-04659	Brkt, tube, uv
6	707-04697	Brkt, rdtr Hose
7	707-04785	Shrd, rdtr, cat
8	707-04797	Shrd, rdtr, cat
9	710-0528	Hhcs, 5/16-18, 1.25, gr5, std
10	710-0599	Scr, tt, 1/4-20, 0.500, hxindwsh
11	710-0788	Scr, tt, 1/4-20, 1.000, hxindwsh
12	712-04063	Nut, flglk, 5/16-18, grf, nylon
13	723-3061	Heat Baffle Seal
14	725-04224	Fan, electric, 12v
15	726-0174	Clamp, hose, adj

Ref. No.	Part No.	Description
16	728-0123	Pop Rivet 3/16 Dia X .450, sty1
17	731-04731	Cntnr, over Flow, coolant
18	736-0176	Wash, flat, .265 X .938 X .120
19	737-04145	Plug, pipe, 1/8-27 Npt, soc
20	750-04557	Tube, rdtr 4x4
21	750-04558	Tube, rdtr 4x4
22	750-04608	Tube, rdtr, 4x4 Rr
23	750-1393	Spcr, .50 Od X .33 Id X .28
24	751-10256	Hose, rdtr, frt 4x4
25	751-10258A	Hose, rdtr, rr 4x4
26	751-10260	Hose, rdtr, rr 4x4
27	751-10261	Hose, rdtr, frt 4x4
28	751-10377	Tube, overflow, rdtr
29	722-3022	Tape, .625 Wide x .25 Thk Foam

Crank Shaft

Ref. No.	Part No.	Description
1.	KH-24-014-154-S	Crankshaft (Includes 2)

Crankcase

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	(Use Miniblock)	Crankcase		KH-12-422-13-S	Shim, camshaft (A.R.) black
2.	KH-25-139-57-S	Plug, sq. head 3/8" (2)		KH-12-422-07-S	Shim, camshaft (A.R.) white
3.	KH-24-032-01-S	Seal, front oil		KH-12-422-08-S	Shim, camshaft (A.R.) blue
4.	KH-24-380-16-S	Pin, locating (6)		KH-12-422-10-S	Shim, camshaft - yellow
5.	KH-24-067-16-S	Connecting Rod (Std.) (2)		KH-12-422-11-S	Shim, camshaft (A.R.) green
	KH-24-067-14-S	Connecting Rod (.25) (2)		KH-12-422-12-S	Shim, camshaft (A.R.) gray
6.	KH-24-874-17-S	Piston w/Ring Set (Std.) (2)	10.	KH-24-012-10-S	Camshaft
		(Includes 7,8)	11.	KH-24-018-09-S	Retainer, ring
	KH-24-874-14-S	Piston w/Ring Set (.08) (2)	12.	KH-M-931010-S	Washer, plain 9 mm
	KH-24-874-18-S	Piston w/Ring Set (.25) (2)	13.	KH-28-032-09-S	Seal, governor cross shaft
	KH-24-874-19-S	Piston w/Ring Set (.50) (2)	14.	KH-24-468-15-S	Washer, plain 1/4"
7.	KH-24-018-01-S	Retainer, piston pin (4)	15.	KH-24-144-38-S	Shaft, governor cross
8.	KH-24-108-11-S	Ring Set (Std. & .08) (2)	16.	KH-52-139-09-S	Plug, cup
	KH-24-108-12-S	Ring Set (.25) (2)	17.	KH-25 462-12-S	Valve, oil drain (goes in the 2
	KH-24-108-13-S	Ring Set (.50) (2)			o'clock position)
9.	KH-12-422-09-S	Shim, camshaft (A.R.) red			




To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

KOHLER ENGINE — OIL PAN/LUBRICATION & HEAD/VALVE/BREATHER

Oil Pan/Lubrication

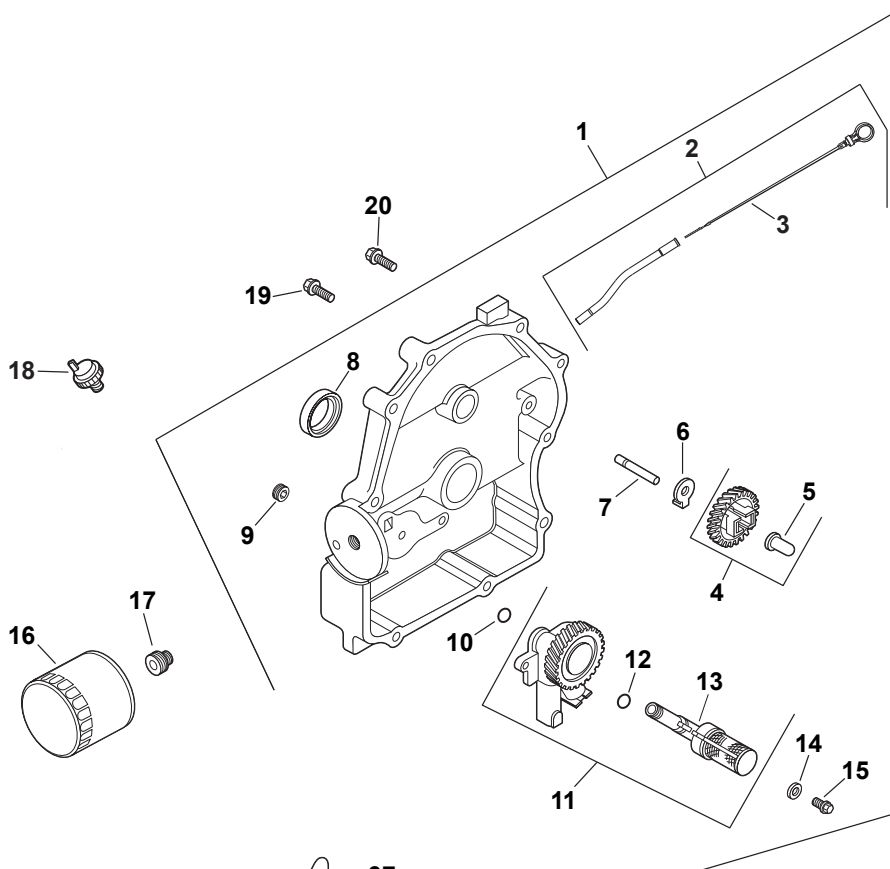

Head/Valve/Breather

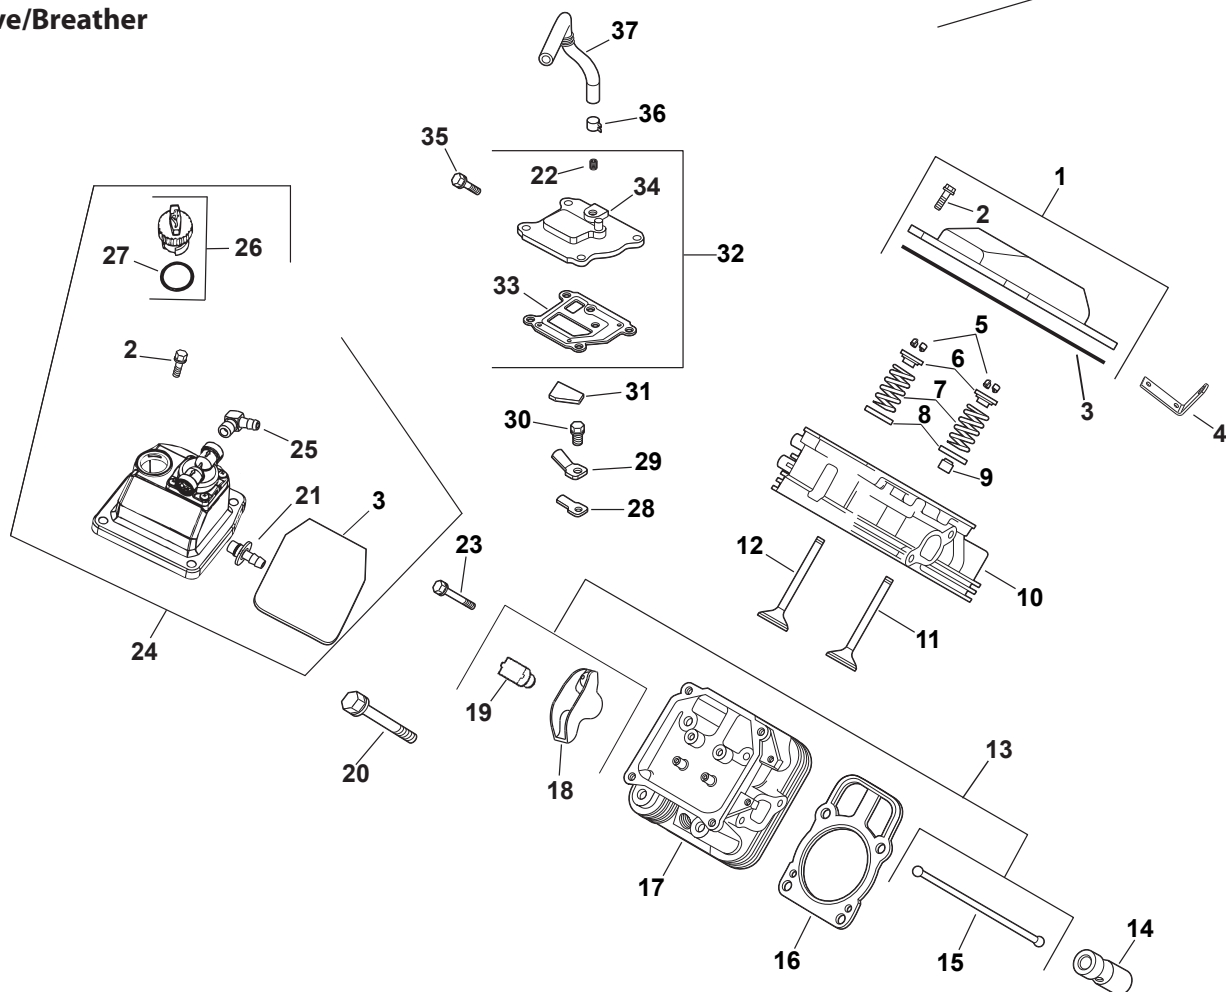

Oil Pan/ Lubrication

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	KH-24-009-167-S	Plate, closure assembly (Includes 2-15)	12.	KH-24-153-01-S	O-Ring, oil pick-up
2.	KH-24-755-121-S	Kit, tube w/dipstick (Includes 3)	13.	KH-24-381-04-S	Pick-up, oil
3.	KH-24-038-10-S	Dipstick	14.	KH-M-631005-S	Washer, plain 6 mm (2)
4.	KH-24-043-12-S	Kit, governor gear (Includes 5)	15.	KH-M-645025-S	Screw, hex. flange M6x1.0x25 (2)
5.	KH-12-380-01-S	Pin, governor regulating	16.	KH-12-050-01-S	Filter, oil
6.	KH-24-448-02-S	Tab, locking	17.	KH-24-136-01-S	Nipple, oil filter
7.	KH-12-144-02-S	Shaft, governor gear	18.	KH-25-099-27-S	Switch, pressure
8.	KH-52-032-08-S	Seal, oil (PTO end)	19.	KH-24-086-16-S	Screw, hex. flange M8x1.25x45 (9)
9.	KH-25-139-60-S	Plug, pipe 1/8" (2)	20.	KH-24-086-17-S	Screw, hex. flange M8x1.25x45
10.	KH-24-153-08-S	O-Ring	—	KH-25-113-05-S†	Decal, oil sentry
11.	KH-24-393-51-S	Oil pump assembly (Includes 12,13)	—	KH-24-113-08-S†	Decal, 20 HP
			—	KH-25-113-39-S†	Decal, clear laminate

Head/ Valve/ Breather

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	KH-24-755-140-S	Kit, oil fill rocker cover (Includes 2,3)	20.	KH-12-086-16-S	Screw, Flg, M10x1.5x90 (8)
2.	KH-M-651030-S	Screw, hex. flange M6x1.0x30 (4)	21.	KH-25-294-10-S	Fitting, 45°
3.	KH-24-153-28-S	O-Ring, valve cover	22.	KH-25-139-60-S	Plug, ctsk pipe 1/8"
4.	KH-24-445-01-S	Strap, lifting (2)	23.	KH-M-640034-S	Screw, hex. flange M6x1.0x34 (2)
5.	KH-12-755-03-S	Kit, retainer (2)	24.	KH-24-559-12-S	Kit, fuel pump (Includes 2,3,25)
6.	KH-12-173-01-S	Cap, valve spring (2)	25.	KH-25-294-11-S	Fitting, 90° (2)
7.	KH-24-089-02-S	Spring, valve (2)	26.	KH-755-46-S	Cap assembly, oil fill (Includes 27)
8.	KH-235011-S	Retainer, spring (2)	27.	KH-24-153-02-S	O-Ring, dipstick
9.	KH-66-032-05-S	Seal, valve stem	28.	KH-24-402-03-S	Reed, breather
10.	KH-24-318-68-S	Head assembly, #1 cylinder	29.	KH-66-018-04-S	Retainer, reed
11.	KH-24-017-01-S	Valve, intake (Std.)	30.	KH-M-545010-S	Screw, hex. flange M5x0.8x10
	KH-24-017-02-S	Valve, intake (.25)	31.	KH-24-050-01-S	Filter, breather
12.	KH-24-016-01-S	Valve, exhaust (Std.)	32.	KH-24-033-01-S	Kit, breathe (Includes 33,34)
	KH-24-016-02-S	Valve, exhaust (.25)	33.	KH-24-041-51-S	Gasket, breather
13.	KH-24-755-66-S	Kit, valve train (Includes 15,18,19)	34.	KH-24-096-86-S	Cover, breather
14.	KH-25-351-04-S	Lifter, valve (4)	35.	KH-M-645020-S	Screw, hex. flange M6x1.0x20 (4)
15.	KH-24-411-05-S	Rod, push (2)	36.	KH-25-237-14-S	Clamp, hose
16.	KH-24-841-01-S	Kit, cylinder head gasket (Includes 21,22) (2)	37.	KH-24-326-76-S	Hose, breather
17.	KH-24-318-71-S	Head assembly, #2 cylinder	—	KH-24-755-147-S†	Kit, cylnd head hardware (Includes 5-9,11,12,15,18,19,23)
18.	KH-25-186-01-S	Arm, rocker (2)			
19.	KH-24-599-02-S	Pivot, rocker arm (2)			

† Not Shown




To order replacement parts, call the Customer Dealer Referral Line at **1-877-282-8684**, or visit **www.cubcadet.com** to find the nearest Cub Cadet service dealer in your area.


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

KOHLER ENGINE — IGNITION/ELECTRICAL & BLOWER HOUSING/BAFFLES

Ignition/Electrical

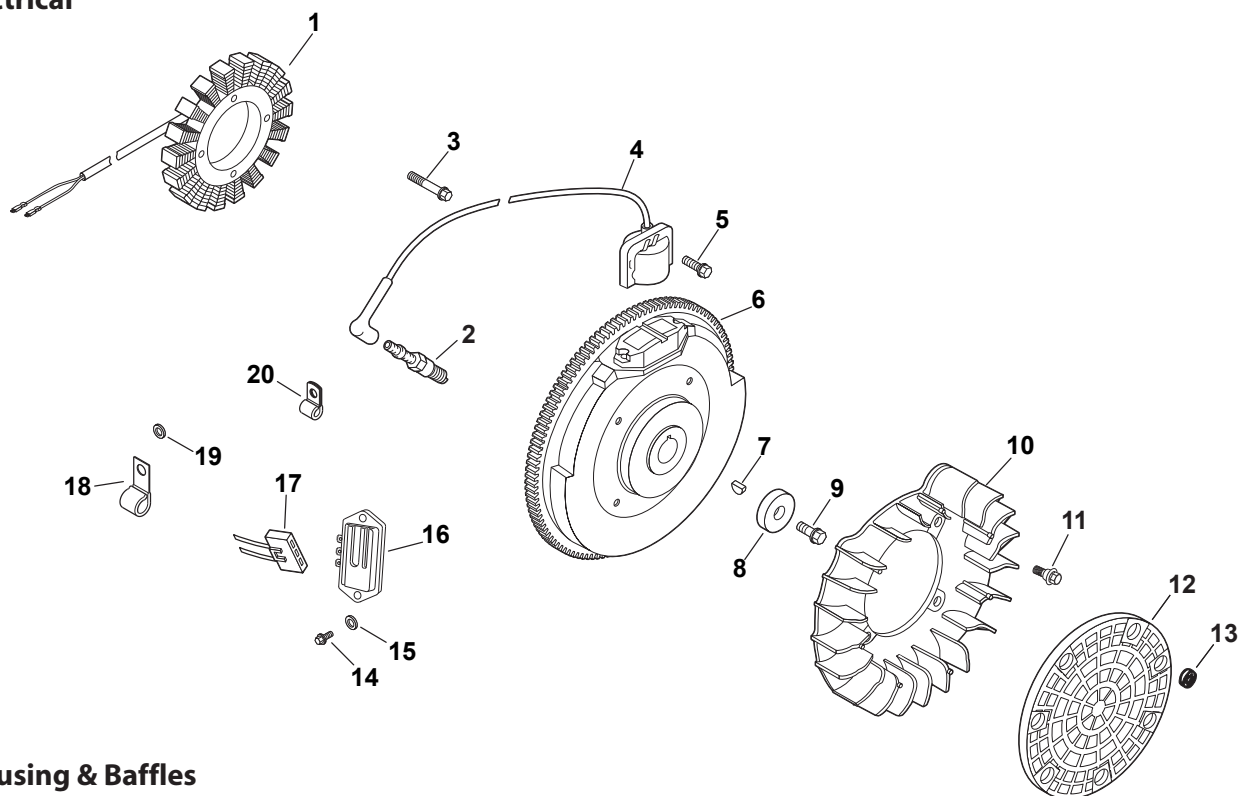

Blower Housing & Baffles

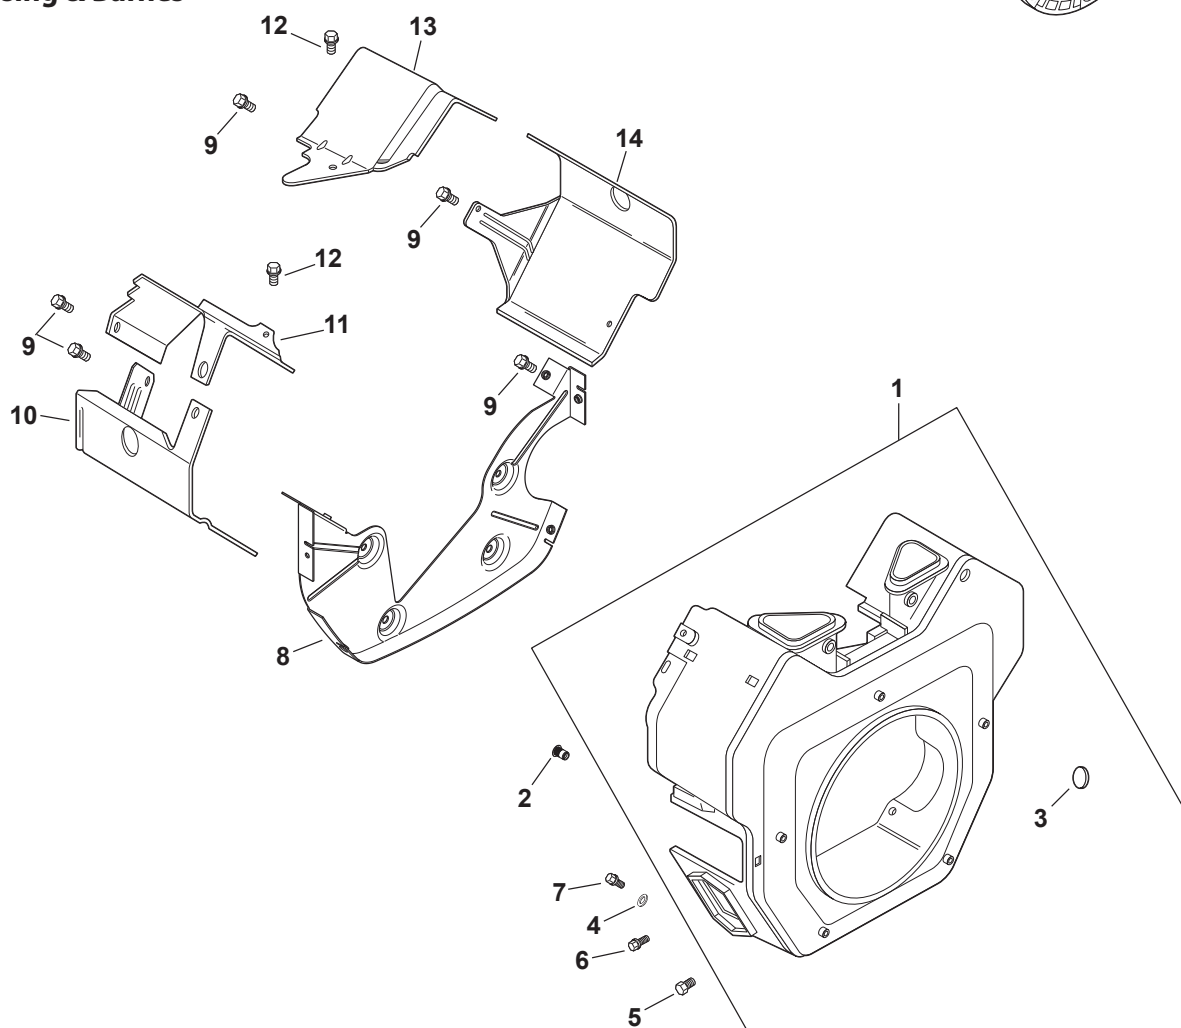

Ignition/ Electrical

Ref. No.	Part No.	Description
1.	KH-54-755-09-S	Kit, 15 amp stator
2.	KH-25-132-12-S	Spark Plug (2)
3.	KH-M-548025-S	Screw, hex. cap M5x0.8x25
		(2)
4.	KH-24-584-01-S	Module, ignition (2)
5.	KH-M-545020-S	Screw, hex. flange
		M5x0.8x20 (4)
6.	KH-24-025-04-S	Flywheel
7.	KH-X-42-15-S	Key, 3/16" x 5/8"
8.	KH-12-468-03-S	Washer, flat 13/32"
9.	KH-12-086-14-S	Screw, hex. flange
		M10x1.5x46
10.	KH-24-157-01-S	Fan
11.	KH-25-086-47-S	Bolt, shoulder (4)
12.	KH-24-162-03-S	Screen, grass

Ref. No.	Part No.	Description
13.	KH-24-018-03-S	Retainer, (3)
14.	KH-24-086-18-S	Screw, phillips hd. 11-16x7/8" (2)
15.	KH-X-25-92-S	Washer, plain 3/16" (2)
16.	KH-41-403-09-S	Rectifier-regulator
17.	KH-236602-S	Connector (3 contact)
18.	KH-235173-S	Clip, cable
19.	KH-X-25-63-S	Washer, plain 1/4"
20.	KH-12-154-01-S	Clamp, insulated
—	KH-25-086-91-S†	Screw, tapping (2)
—	KH-24-126-137-S†	Bracket, ground strap
—	KH-25-468-07-S†	Washer, flat
—	KH-24-176-08-S†	Harness, wiring
—	KH-25-454-03-S†	Tie, wire (2)

† Not Shown

Blower Housing & Baffles

Ref. No.	Part No.	Description
1.	KH-24-027-163-S	Housing, blower (Includes 2, KH-41-037-10-S)
2.	KH-24-332-01-S	Insert, threaded (5)
3.	KH-25-313-06-S	Grommet
4.	KH-25-468-07-S	Washer, flat, 7/32" (2)
5.	KH-M-561016-S	Screw, hex. flange
		M5x0.8x16
6.	KH-M-545016-S	Screw, hex. flange
		M5x0.8x16 (3)
7.	KH-M-545020-S	Screw, hex. flange
		M5x0.8x20 (4)
8.	KH-24-146-50-S	Plate, backing (Includes KH-25-154-11-S)
9.	KH-M-645016-S	Screw, hex. flange (6)

Ref. No.	Part No.	Description
		M6x1.0x16 (6)
10.	KH-24-063-39-S	Baffle, cyl barrel #2 side
11.	KH-24-063-70-S	Baffle, valley - #2 side
12.	KH-M-545010-S	Screw, hex. flange
		M5x0.8x10 (2)
13.	KH-24-063-59-S	Baffle, valley - #1 side
14.	KH-24-063-58-S	Baffle, cylinder barrel - #1 side
—	KH-41-037-10-S†	Nameplate, service
—	KH-25-154-11-S†	Clip, repair (speed nut)
—	KH-24-086-35-S†	Screw, lbd sckt pan M5 x 0.8 x 10 (5)
—	KH-24-468-10-S†	Washer, flat, 7/32" (5)

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.




To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

KOHLER ENGINE — STARTING & FUEL SYSTEMS

Starting System

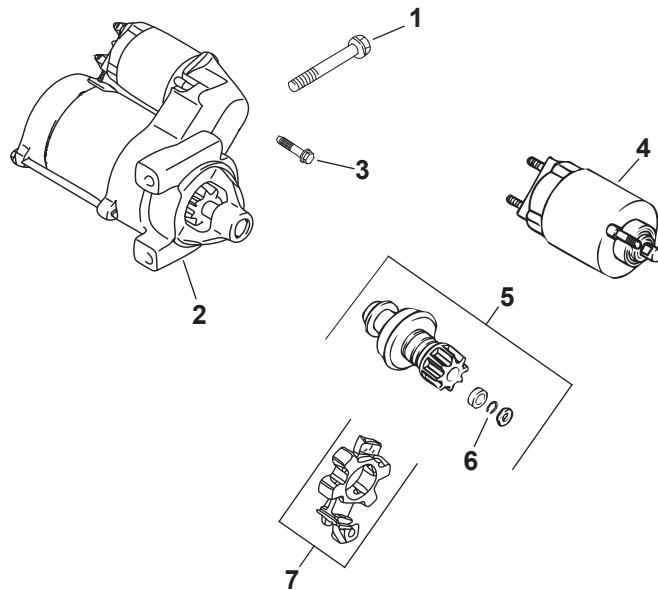

Fuel System

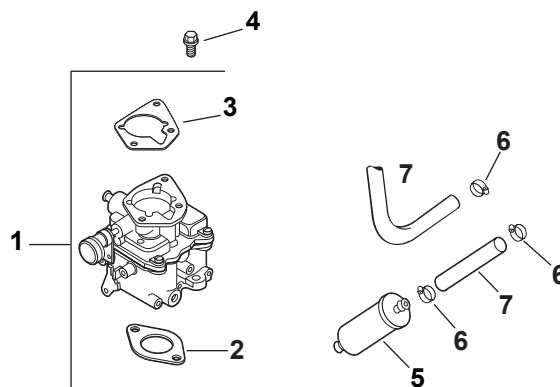

Starting System

Ref. No.	Part No.	Description
1.	KH-M-839080-S	Screw, hex. flange
		M8x1.25x80 (2)
2.	KH-25-098-09-S	Starter, solenoid assembly
		(Includes 3-7)
3.	KH-25-086-113-S	Screw, external torx hd. (3)
4.	KH-25-435-06-S	Kit, solenoid (Includes 3)
5.	KH-25-755-33-S	Kit, starter pinion (Includes
		6)
6.	KH-25-141-05-S	Ring
7.	KH-25-221-01-S	Brush, holder

Fuel System

Ref. No.	Part No.	Description
1.	KH-24-853-143-S	Kit, carburetor w/gasket
		(Includes 2,3)
2.	KH-24-041-06-S	Gasket, air cleaner base
3.	KH-24-041-53-S	Gasket, carburetor
4.	KH-M-651025-S	Screw, hex. flange
		M6x1.0x25 (2)
5.	KH-24-050-09-S	Filter, fuel
6.	KH-25-237-14-S	Clamp, hose (4)
7.	KH-25-111-34-S	Line, fuel 24" - cut to length (2)
—	KH-24-518-24-S†	Lead, ground (solenoid to
		carb mounting screw)
—	KH-24-755-125-S†	Kit, high altitude
—	KH-24-757-01-S†	Kit, solenoid
—	KH-24-757-02-S†	Kit, float
—	KH-24-757-03-S†	Kit, carburetor repair
—	KH-24-757-07-S†	Kit, choke repair


† Not Shown



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Engine Controls

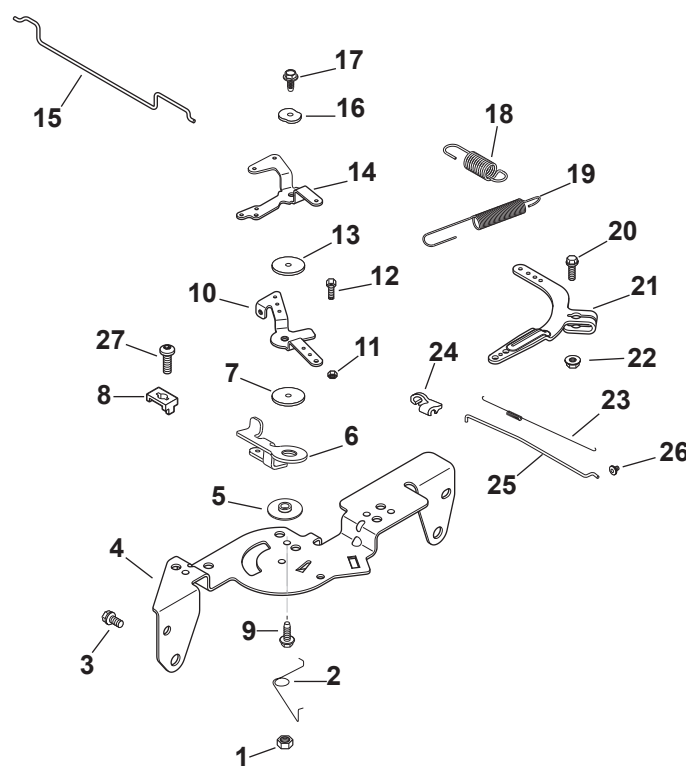

Engine Controls

Ref. No.	Part No.	Description
1.	KH-M-547050-S	Nut, hex. lock M5x0.8
2.	KH-24 089 03-S	Spring, choke return
3.	KH-M-645016-S	Screw, hex. flange M6x1.0x16 (4)
4.	KH-24 126 161-S	Bracket, control
5.	KH-24 112 27-S	Spacer, control assembly
6.	KH-24 090 47-S	Lever, throttle actuator
7.	KH-24 468 20-S	Washer, flat, 5mm
8.	KH-12 237 01-S	Clamp, cable (2)
9.	KH-M-545016-S	Screw, hex. flange M5x0.8x16
10.	KH-24 090 48-S	Lever, throttle control
11.	KH-M-446030-S	Nut, M4x0.7
12.	KH-M-401030-S	Screw, cap M4x0.7x30
13.	KH-24 468 01-S	Washer, flat, 5.5 mm
14.	KH-24 090 05-S	Lever, choke
15.	KH-24 079 21-S	Linkage, choke
16.	KH-41 468 03-S	Washer, spring 1/4"
17.	KH-M-545020-S	Screw, hex. flange M5x0.8x20
18.	KH-24 089 55-S	Spring, governor
19.	KH-24 089 45-S	Spring, governor
20.	KH-24 211 03-S	Bolt, rd hd sq neck, M6x1.0x25
21.	KH-24 090 33-S	Lever, governor
22.	KH-M-641060-S	Nut, flange M6x1.0
23.	KH-24 089 01-S	Spring, linkage
24.	KH-25 158 11-S	Bushing, linkage retaining
25.	KH-24 079 01-S	Linkage, throttle
26.	KH-25 158 08-S	Bushing, throttle linkage
27.	KH-24 086 43-S	Screw, lbd thd frm, M5 x 0.8 x 16




To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

KOHLER ENGINE — AIR INTAKE/FILTRATION & EXHAUST

Air Intake/Filtration

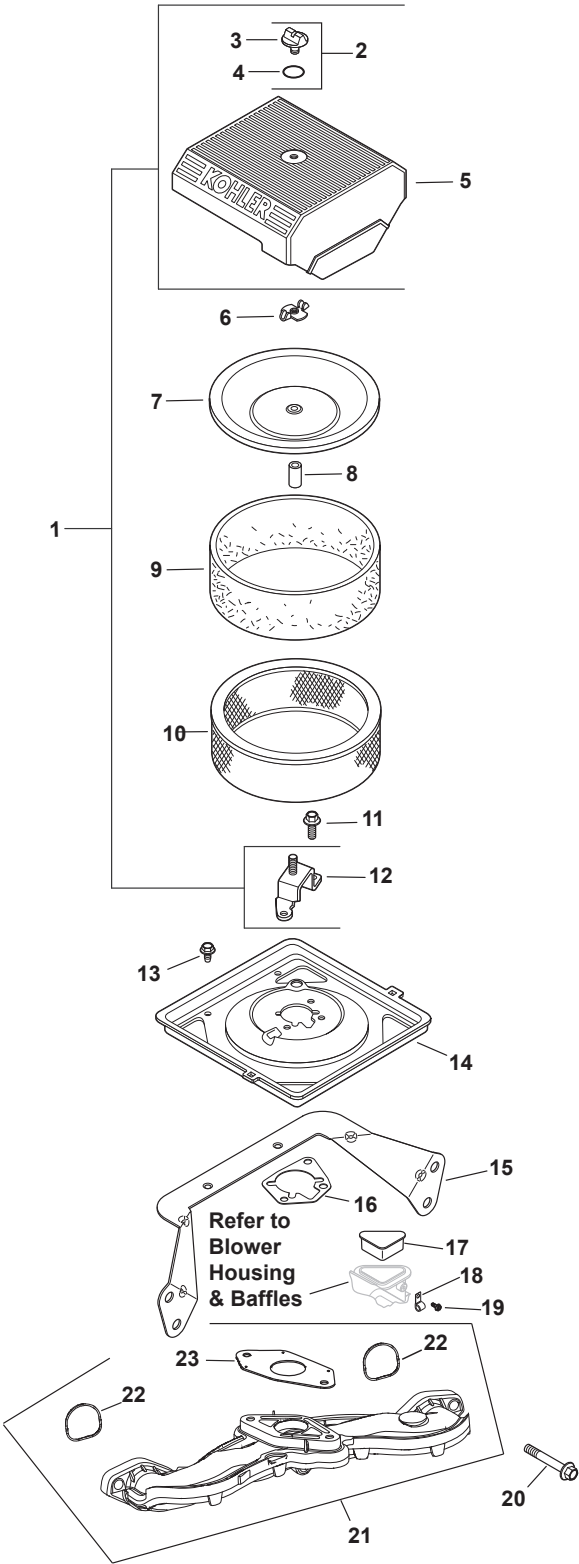

Exhaust

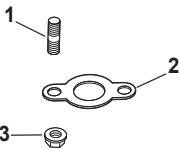

Air Intake/ Filtration

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	KH-24 743 08-S	Kit, air cleaner cover (Includes 2 5,12)	13.	KH-M-545010-S	Screw, flg thd frm M5x0.8x10
2.	KH-54 755 01-S	Kit, knob w/seal (Includes 3,4)	14.	KH-24 094 39-S	Base, air cleaner
3.	KH-25 341 04-S	Knob, cover	15.	KH-24 126 130-S	Bracket, air cleaner base
4.	KH-24 153 20-S	O-Ring	16.	KH-24 041 06-S	Gasket, air cleaner base
5.	KH-24 096 69-S	Cover, air cleaner	17.	KH-24 096 17-S	Cover, blower housing
6.	KH-12 100 01-S	Nut, wing	18.	KH-25 154 04-S	Clip, cable
7.	KH-24 096 01-S	Cover, inner air cleaner	19.	KH-25 086 91-S	Screw, wsh hd tap #8-18x1/2"
8.	KH-24 032 03-S	Seal, inner air cleaner	20.	KH-M-651040-S	Screw, flg M6x1.0x40
9.	KH-24 083 02-S	Element, precleaner	21.	KH-24 164 54-S	Manifold, intake - plastic (Includes 21,22)
10.	KH-47 083 03-S	Element, air cleaner	22.	KH-24 153 27-S	O-Ring, intake port
11.	KH-24 086 53-S	Screw, flg thd frm M6x1.0x16	23.	KH-24 041 53-S	Gasket, carburetor
12.	KH-24 126 21-S	Bracket, air cleaner			



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

Exhaust

Ref. No.	Part No.	Description
1.	KH-25-072-04-S	Stud M8x1.25x33 (4)
2.	KH-24-041-49-S	Gasket, exhaust manifold (2)
3.	KH-M-841080-S	Nut, hex. flange M8x1.25 (5)
—	KH-24-782-15†	Miniblock
—	KH-24-755-107-S†	Gasket Set
—	CH20S-64751†	Replacement Engine

† Not Shown

NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Curb Cadet®

777122641
Aligned Next
Gear Shift

<i>Cub Cadet</i>	
Operating Weight	Gross Vehicle Weight
1500 Lb. / 680 KG Includes Battery and Fluids.	2800 Lb. / 1270 KG Includes Operating Wt. and Total Load Capacity.
Total Load Capacity = MAX. 1,300 Lb. / 590 KG (Includes 200 Lb. / 91 KG Operator, 200 Lb. / 91 KG passenger and 900 Lb. / 408 KG cargo box capacity.)	

<i>Cub Cadet</i>	Operating Weight	Gross Vehicle Weight
1600 Lb. / 726 KG Includes Battery and Fluids.	2900 Lb. / 1315 KG Includes Operating Wt. and Total Load Capacity.	
Total Load Capacity = MAX. 1,300 Lb. / 590 KG (Includes 200 Lb. / 91 KG operator, 200 Lb. / 91 KG passenger and 900 Lb. / 408 KG cargo box capacity).		

WARNING
CARGO BOX

- Always tie-in both cargo box latch uppoints reasonably close to the vehicle's front end.
- Do not operate or load vehicle with cargo box latch uppoints.

NO IDLE/IDLE WHEN
USING CARGO BOX LIFT

- Never start and run the generator for more than 10 minutes at a time.
- Always use proper tie-down technique and use proper tie-down technique.
- Always use proper tie-down technique and use proper tie-down technique.
- Always use proper tie-down technique and use proper tie-down technique.

TO PULL UP LATCH

- Pull lever up to release latch.
- Lift to open.
- Always check to see that the latch is fully open before loading or unloading.
- Always check to see that the latch is fully open before loading or unloading.
- Always check to see that the latch is fully open before loading or unloading.

[illegible]

POWERED BY
KOHLER



A WARNING

To Avoid An Accident and Injury

- Do not tow more than 1500 lb. towing weight (i.e., trailer plus cargo).
- Spread load evenly. Never exceed 150 lb. tongue weight.
- Go slow and use extra care when towing. Allow for increased braking distance.
- Do not tow heavy loads on slopes over a 5° incline.




1974-1975 CHEVROLET CAMARO

WIRING DIAGRAM

Legend:

- 10 CIRCUIT GRN
- 32 CIRCUIT VEL
- 104 CIRCUIT RED/WT
- 90 CIRCUIT ORG
- 126 CIRCUIT WHT
- 94 CIRCUIT RED
- 96 CIRCUIT ORG
- 111 CIRCUIT RED/BLK
- 141 CIRCUIT BLU/WT
- 145 CIRCUIT PUR
- 146 CIRCUIT GRN
- 147 CIRCUIT VEL
- 148 CIRCUIT GRN
- 149 CIRCUIT GRN
- 150 CIRCUIT BLK
- 151 CIRCUIT PUR
- 152 CIRCUIT RED
- 153 CIRCUIT BLK
- 154 CIRCUIT PUR
- 155 CIRCUIT RED
- 156 CIRCUIT BLK
- 157 CIRCUIT PUR
- 158 CIRCUIT RED
- 159 CIRCUIT BLK
- 160 CIRCUIT PUR
- 161 CIRCUIT RED
- 162 CIRCUIT BLK
- 163 CIRCUIT PUR
- 164 CIRCUIT RED
- 165 CIRCUIT BLK
- 166 CIRCUIT PUR
- 167 CIRCUIT RED
- 168 CIRCUIT BLK
- 169 CIRCUIT PUR
- 170 CIRCUIT RED
- 171 CIRCUIT BLK
- 172 CIRCUIT PUR
- 173 CIRCUIT RED
- 174 CIRCUIT BLK
- 175 CIRCUIT PUR
- 176 CIRCUIT RED
- 177 CIRCUIT BLK
- 178 CIRCUIT PUR
- 179 CIRCUIT RED
- 180 CIRCUIT BLK
- 181 CIRCUIT PUR
- 182 CIRCUIT RED
- 183 CIRCUIT BLK
- 184 CIRCUIT PUR
- 185 CIRCUIT RED
- 186 CIRCUIT BLK
- 187 CIRCUIT PUR
- 188 CIRCUIT RED
- 189 CIRCUIT BLK
- 190 CIRCUIT PUR
- 191 CIRCUIT RED
- 192 CIRCUIT BLK
- 193 CIRCUIT PUR
- 194 CIRCUIT RED
- 195 CIRCUIT BLK
- 196 CIRCUIT PUR
- 197 CIRCUIT RED
- 198 CIRCUIT BLK
- 199 CIRCUIT PUR
- 200 CIRCUIT RED
- 201 CIRCUIT BLK
- 202 CIRCUIT PUR
- 203 CIRCUIT RED
- 204 CIRCUIT BLK
- 205 CIRCUIT PUR
- 206 CIRCUIT RED
- 207 CIRCUIT BLK
- 208 CIRCUIT PUR
- 209 CIRCUIT RED
- 210 CIRCUIT BLK
- 211 CIRCUIT PUR
- 212 CIRCUIT RED
- 213 CIRCUIT BLK
- 214 CIRCUIT PUR
- 215 CIRCUIT RED
- 216 CIRCUIT BLK
- 217 CIRCUIT PUR
- 218 CIRCUIT RED
- 219 CIRCUIT BLK
- 220 CIRCUIT PUR
- 221 CIRCUIT RED
- 222 CIRCUIT BLK
- 223 CIRCUIT PUR
- 224 CIRCUIT RED
- 225 CIRCUIT BLK
- 226 CIRCUIT PUR
- 227 CIRCUIT RED
- 228 CIRCUIT BLK
- 229 CIRCUIT PUR
- 230 CIRCUIT RED
- 231 CIRCUIT BLK
- 232 CIRCUIT PUR
- 233 CIRCUIT RED
- 234 CIRCUIT BLK
- 235 CIRCUIT PUR
- 236 CIRCUIT RED
- 237 CIRCUIT BLK
- 238 CIRCUIT PUR
- 239 CIRCUIT RED
- 240 CIRCUIT BLK
- 241 CIRCUIT PUR
- 242 CIRCUIT RED
- 243 CIRCUIT BLK
- 244 CIRCUIT PUR
- 245 CIRCUIT RED
- 246 CIRCUIT BLK
- 247 CIRCUIT PUR
- 248 CIRCUIT RED
- 249 CIRCUIT BLK
- 250 CIRCUIT PUR
- 251 CIRCUIT RED
- 252 CIRCUIT BLK
- 253 CIRCUIT PUR
- 254 CIRCUIT RED
- 255 CIRCUIT BLK
- 256 CIRCUIT PUR
- 257 CIRCUIT RED
- 258 CIRCUIT BLK
- 259 CIRCUIT PUR
- 260 CIRCUIT RED
- 261 CIRCUIT BLK
- 262 CIRCUIT PUR
- 263 CIRCUIT RED
- 264 CIRCUIT BLK
- 265 CIRCUIT PUR
- 266 CIRCUIT RED
- 267 CIRCUIT BLK
- 268 CIRCUIT PUR
- 269 CIRCUIT RED
- 270 CIRCUIT BLK
- 271 CIRCUIT PUR
- 272 CIRCUIT RED
- 273 CIRCUIT BLK
- 274 CIRCUIT PUR
- 275 CIRCUIT RED
- 276 CIRCUIT BLK
- 277 CIRCUIT PUR
- 278 CIRCUIT RED
- 279 CIRCUIT BLK
- 280 CIRCUIT PUR
- 281 CIRCUIT RED
- 282 CIRCUIT BLK
- 283 CIRCUIT PUR
- 284 CIRCUIT RED
- 285 CIRCUIT BLK
- 286 CIRCUIT PUR
- 287 CIRCUIT RED
- 288 CIRCUIT BLK
- 289 CIRCUIT PUR
- 290 CIRCUIT RED
- 291 CIRCUIT BLK
- 292 CIRCUIT PUR
- 293 CIRCUIT RED
- 294 CIRCUIT BLK
- 295 CIRCUIT PUR
- 296 CIRCUIT RED
- 297 CIRCUIT BLK
- 298 CIRCUIT PUR
- 299 CIRCUIT RED
- 300 CIRCUIT BLK
- 301 CIRCUIT PUR
- 302 CIRCUIT RED
- 303 CIRCUIT BLK
- 304 CIRCUIT PUR
- 305 CIRCUIT RED
- 306 CIRCUIT BLK
- 307 CIRCUIT PUR
- 308 CIRCUIT RED
- 309 CIRCUIT BLK
- 310 CIRCUIT PUR
- 311 CIRCUIT RED
- 312 CIRCUIT BLK
- 313 CIRCUIT PUR
- 314 CIRCUIT RED
- 315 CIRCUIT BLK
- 316 CIRCUIT PUR
- 317 CIRCUIT RED
- 318 CIRCUIT BLK
- 319 CIRCUIT PUR
- 320 CIRCUIT RED
- 321 CIRCUIT BLK
- 322 CIRCUIT PUR
- 323 CIRCUIT RED
- 324 CIRCUIT BLK
- 325 CIRCUIT PUR
- 326 CIRCUIT RED
- 327 CIRCUIT BLK
- 328 CIRCUIT PUR
- 329 CIRCUIT RED
- 330 CIRCUIT BLK
- 331 CIRCUIT PUR
- 332 CIRCUIT RED
- 333 CIRCUIT BLK
- 334 CIRCUIT PUR
- 335 CIRCUIT RED
- 336 CIRCUIT BLK
- 337 CIRCUIT PUR
- 338 CIRCUIT RED
- 339 CIRCUIT BLK
- 340 CIRCUIT PUR
- 341 CIRCUIT RED
- 342 CIRCUIT BLK
- 343 CIRCUIT PUR
- 344 CIRCUIT RED
- 345 CIRCUIT BLK
- 346 CIRCUIT PUR
- 347 CIRCUIT RED
- 348 CIRCUIT BLK
- 349 CIRCUIT PUR
- 350 CIRCUIT RED
- 351 CIRCUIT BLK
- 352 CIRCUIT PUR
- 353 CIRCUIT RED
- 354 CIRCUIT BLK
- 355 CIRCUIT PUR
- 356 CIRCUIT RED
- 357 CIRCUIT BLK
- 358 CIRCUIT PUR
- 359 CIRCUIT RED
- 360 CIRCUIT BLK
- 361 CIRCUIT PUR
- 362 CIRCUIT RED
- 363 CIRCUIT BLK
- 364 CIRCUIT PUR
- 365 CIRCUIT RED
- 366 CIRCUIT BLK
- 367 CIRCUIT PUR
- 368 CIRCUIT RED
- 369 CIRCUIT BLK
- 370 CIRCUIT PUR
- 371 CIRCUIT RED
- 372 CIRCUIT BLK
- 373 CIRCUIT PUR
- 374 CIRCUIT RED
- 375 CIRCUIT BLK
- 376 CIRCUIT PUR
- 377 CIRCUIT RED
- 378 CIRCUIT BLK
- 379 CIRCUIT PUR
- 380 CIRCUIT RED
- 381 CIRCUIT BLK
- 382 CIRCUIT PUR
- 383 CIRCUIT RED
- 384 CIRCUIT BLK
- 385 CIRCUIT PUR
- 386 CIRCUIT RED
- 387 CIRCUIT BLK
- 388 CIRCUIT PUR
- 389 CIRCUIT RED
- 390 CIRCUIT BLK
- 391 CIRCUIT PUR
- 392 CIRCUIT RED
- 393 CIRCUIT BLK
- 394 CIRCUIT PUR
- 395 CIRCUIT RED
- 396 CIRCUIT BLK
- 397 CIRCUIT PUR
- 398 CIRCUIT RED
- 399 CIRCUIT BLK
- 400 CIRCUIT PUR
- 401 CIRCUIT RED
- 402 CIRCUIT BLK
- 403 CIRCUIT PUR
- 404 CIRCUIT RED
- 405 CIRCUIT BLK
- 406 CIRCUIT PUR
- 407 CIRCUIT RED
- 408 CIRCUIT BLK
- 409 CIRCUIT PUR
- 410 CIRCUIT RED
- 411 CIRCUIT BLK
- 412 CIRCUIT PUR
- 413 CIRCUIT RED
- 414 CIRCUIT BLK
- 415 CIRCUIT PUR
- 416 CIRCUIT RED
- 417 CIRCUIT BLK
- 418 CIRCUIT PUR
- 419 CIRCUIT RED
- 420 CIRCUIT BLK
- 421 CIRCUIT PUR
- 422 CIRCUIT RED
- 423 CIRCUIT BLK
- 424 CIRCUIT PUR
- 425 CIRCUIT RED
- 426 CIRCUIT BLK
- 427 CIRCUIT PUR
- 428 CIRCUIT RED
- 429 CIRCUIT BLK
- 430 CIRCUIT PUR
- 431 CIRCUIT RED
- 432 CIRCUIT BLK

ELECTRICAL SCHEMATIC (CAT)

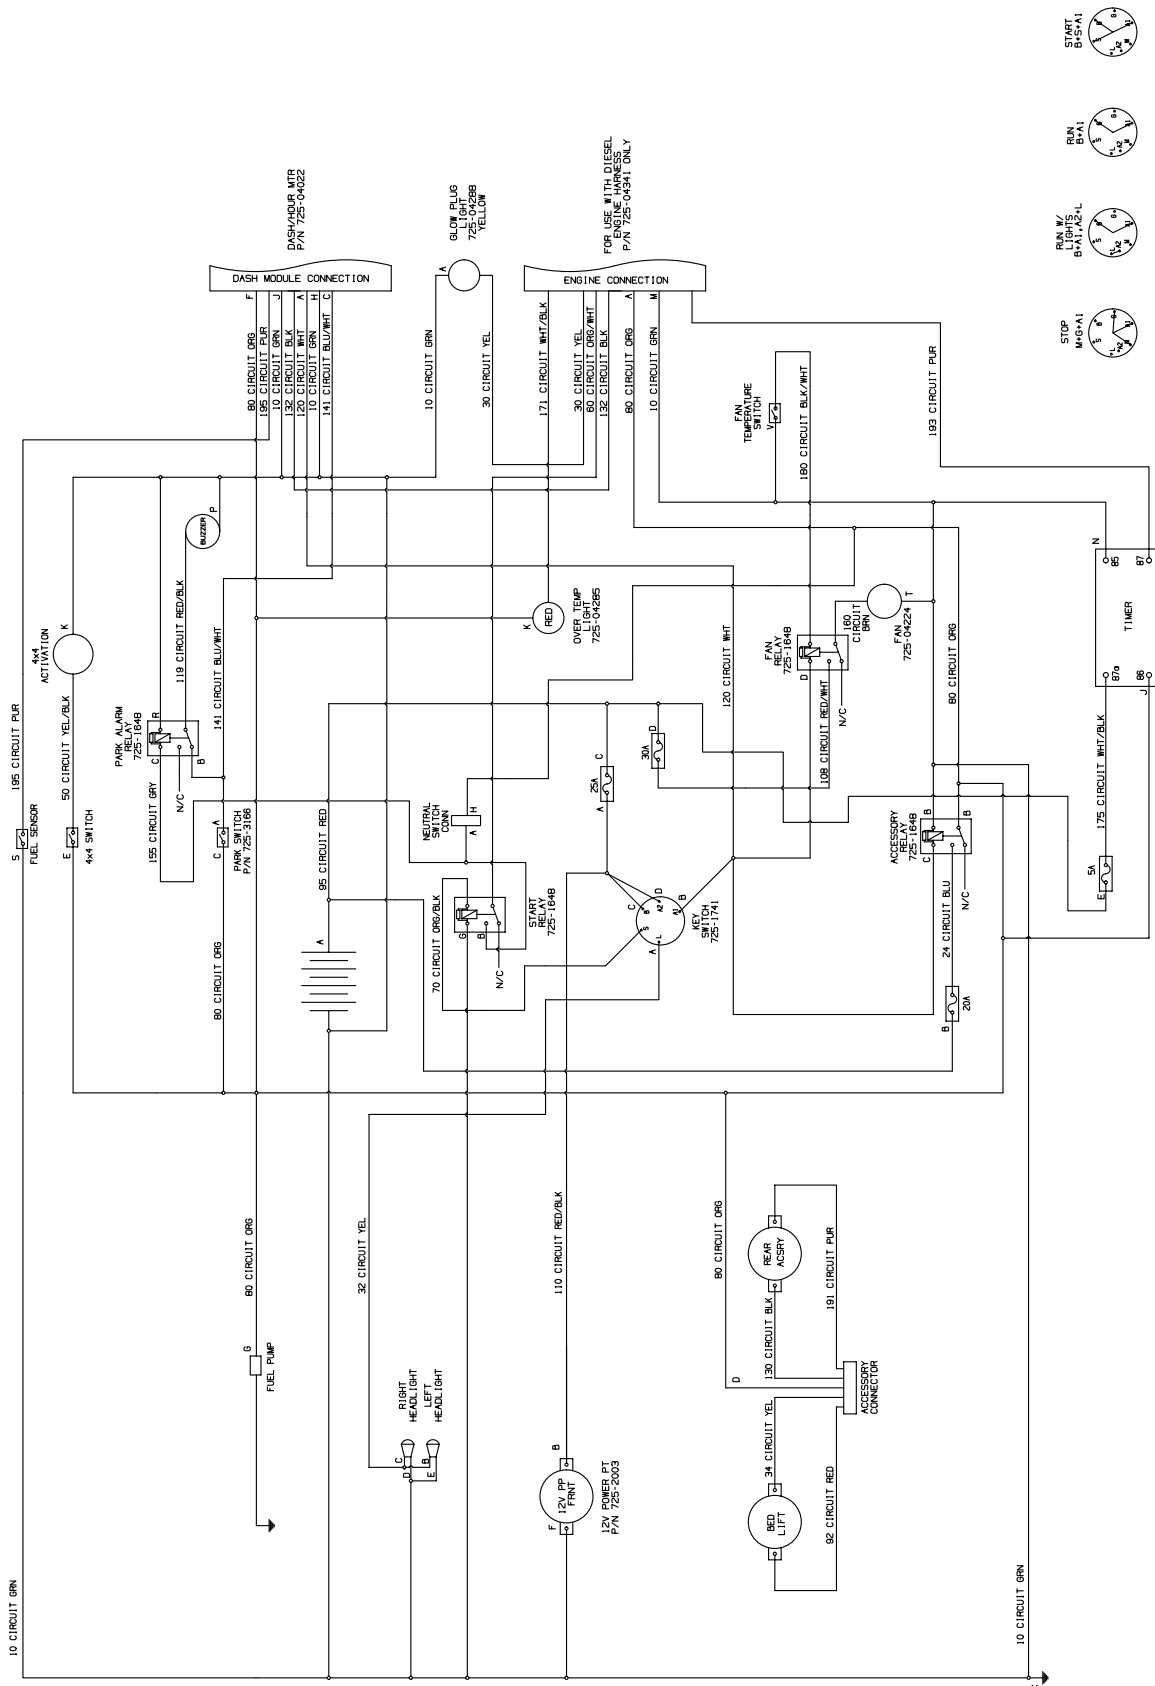


To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

DIESEL ENGINE ELECTRICAL SCHEMATIC



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684, or visit www.cubcadet.com to find the nearest Cub Cadet service dealer in your area.

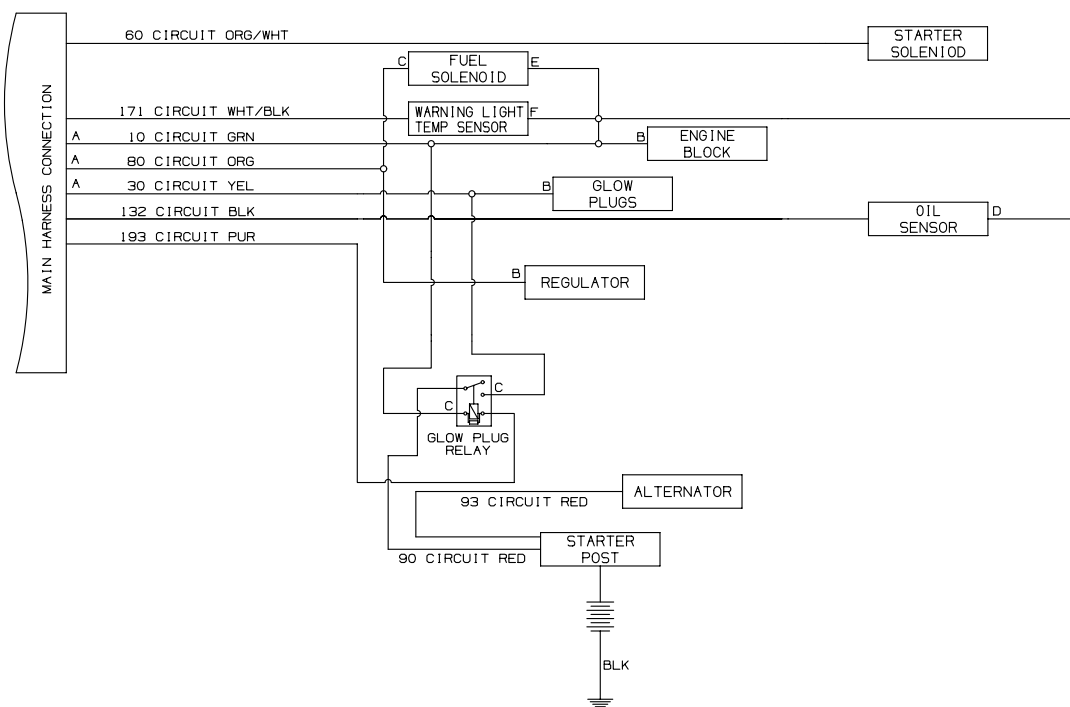

NOTES:

*Use this page to make
notes and write down
important information.*



*For parts and/or
accessories
please call
1-800-800-7310, or
1-330-220-4683.
www.mtdproducts.com*

