

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

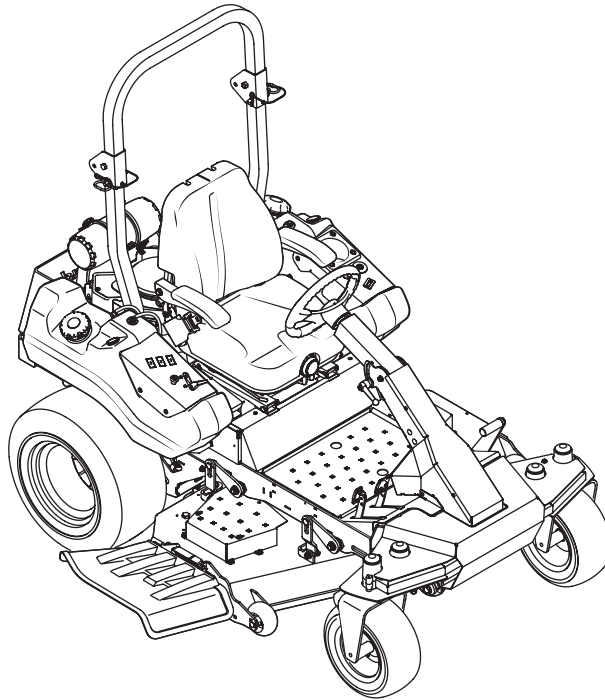

TANK SZ

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Zero-Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Seat Assembly.....	4	Engine Accessories (Kohler).....	22
Hydro Controls.....	6	Engine Accessories (Kawasaki).....	24
Control Group.....	8	54" Deck.....	26
Fuel Tank Assembly.....	10	60" Deck.....	28
Frame.....	11	Electrical.....	32
Control Assembly.....	12	Electrical Schematic.....	33
Front Axle Assembly.....	14	TANK SZ Labels.....	34
Steering Column.....	16	Kawasaki FX850V.....	36
Pedal Controls.....	18	Kohler CV742-3016.....	50
Deck Lift Assembly.....	20		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

SERIAL NUMBER

----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)


This page left intentionally blank.

Seat Assembly

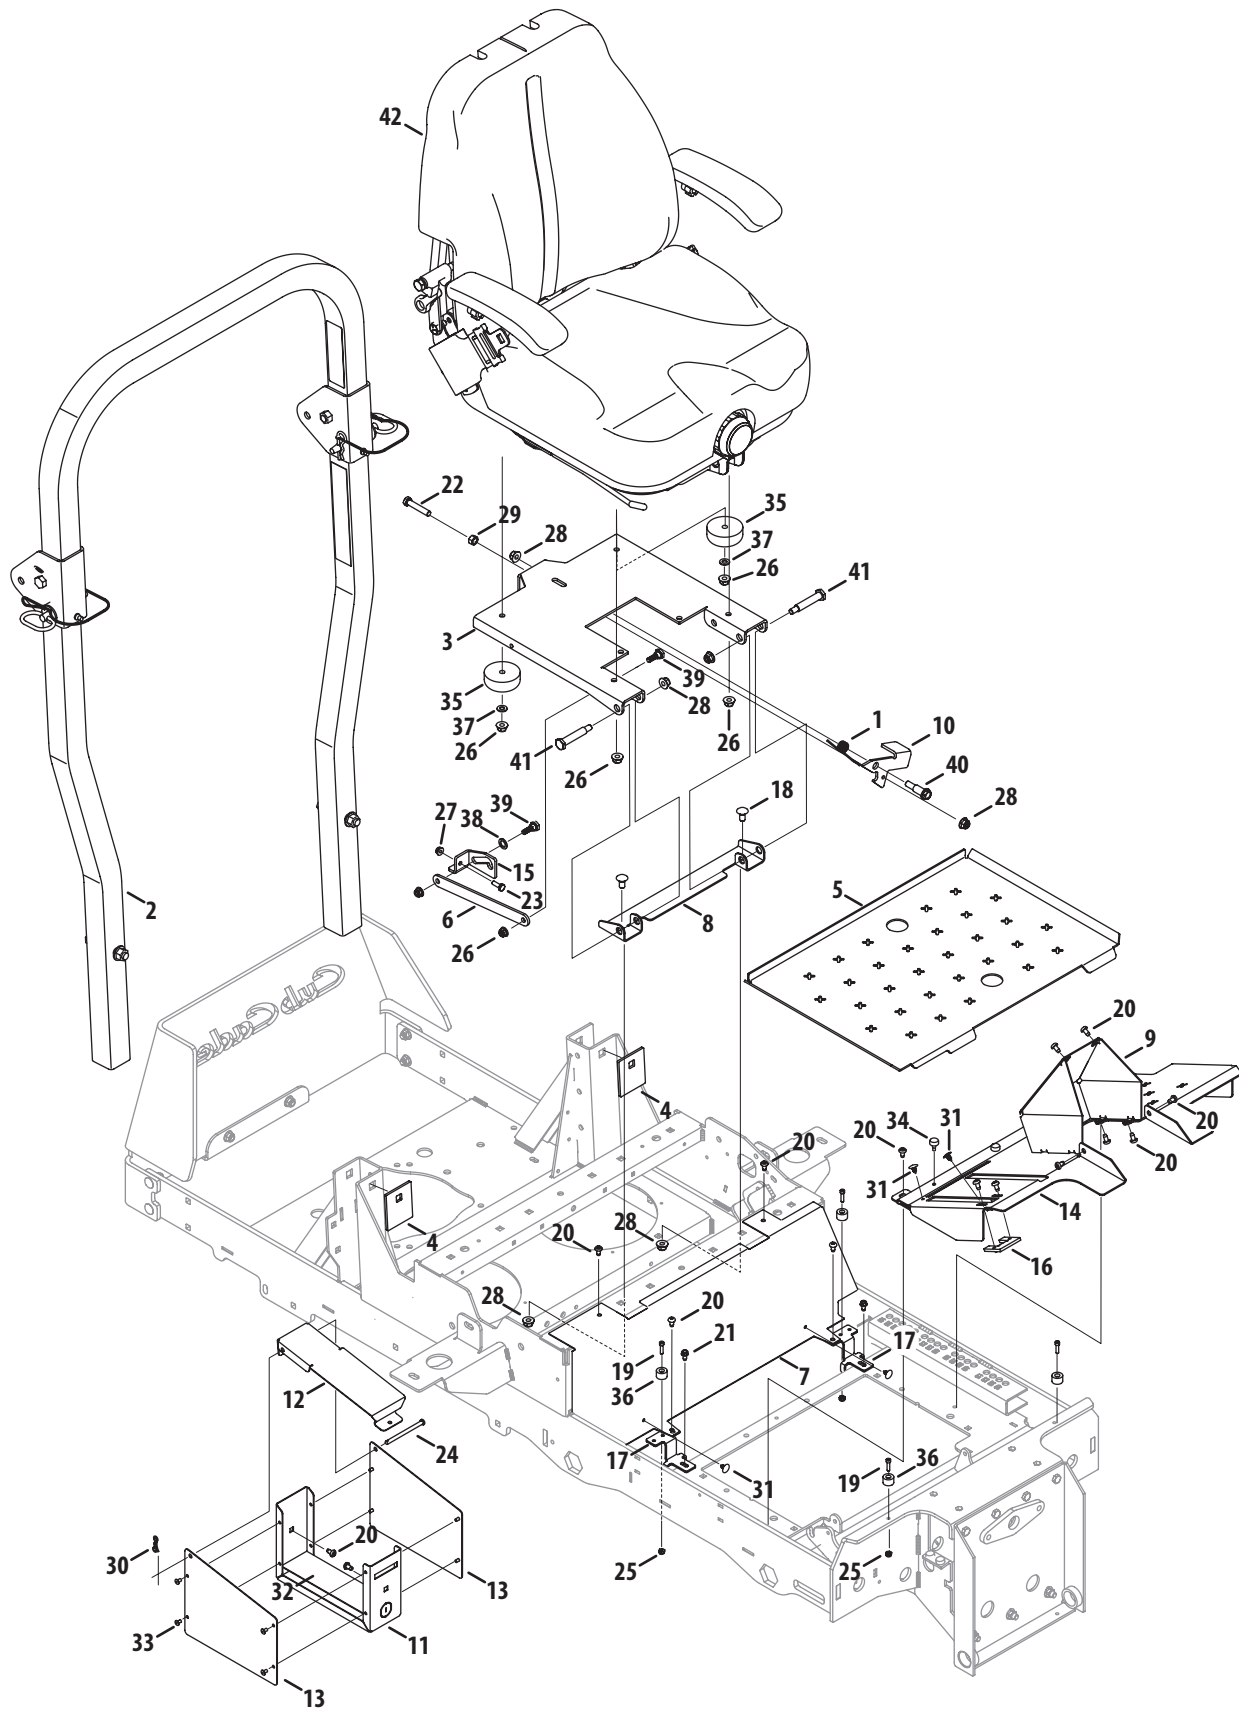


Ref.	Part Number	Description
1	01008140P	Torsion Spring, .725 x 1.0 x .09
2	680-00175	Folding ROPS Assembly
3	703-07814	Seat Mounting Bracket
4	703-07880	Deck Reinforcement Plate
5	703-08016	Floor Panel
6	703-08198	Seat Lockout Bracket
7	703-08223	Floor Panel Tray
8	703-08241	Seat Mounting Bracket
9	703-08323	Column Cover
10	703-08480	Seat Lever Latch
11	703-08511	Storage Box
12	703-08513	Storage Box Lid
13	703-08519	Storage Box Side Panel
14	703-08596	Pedal Cover
15	703-08758A	Seat Lockout Mount
16	703-08857	Stop Pedal Bracket
17	703-09723	Frame Bracket, LH
18	710-0389	Carriage Bolt, 3/8-16 x .75
19	710-04868	Socket Head Screw, 10-24 x .75
20	710-05070	Screw, 1/4-20 x .5
21	710-0599	Hex Flange Screw, 1/4-20 x .500

Ref.	Part Number	Description
22	710-0859	Hex Cap Screw, 3/8-16 x 2.50
23	710-3015	Hex Cap Screw, 1/4-20 x .75
24	711-05607A	Clevis Pin, .25 x 3.5
25	712-0161	Nut, #10-24, Hexlock
26	712-04063	Nut, 5/16-18, Flangelock
27	712-04064	Nut, 1/4-20, Flangelock
28	712-04065	Nut, 3/8-16, Flangelock
29	912-3017	Nut, 3/8-16, Hex
30	714-04040	Cotter Pin, Bow Tie
31	726-04072A	Clip, .250 Dia. x .500
32	727-04385	Adhesive Pad
33	728-04016	Rivet, 3/16 x .325
34	735-0271A	Bumper, .62 Dia. x .3
35	735-04286	Rubber Bumper, 2.5 x 1.0
36	735-04287	Rubber Bumper, .75 x .500
37	936-0275	Washer, .344 x .688 x .065
38	736-3024	Washer, .469 x .750 x .06
39	938-0296	Shoulder Screw, .437 x .268, 5/16-18
40	738-0966A	Shoulder Bolt, .50 x .925, 3/8-16
41	738-1011A	Shoulder Bolt, .500 x 2.23, 3/8-16
42	757-05011	Seat

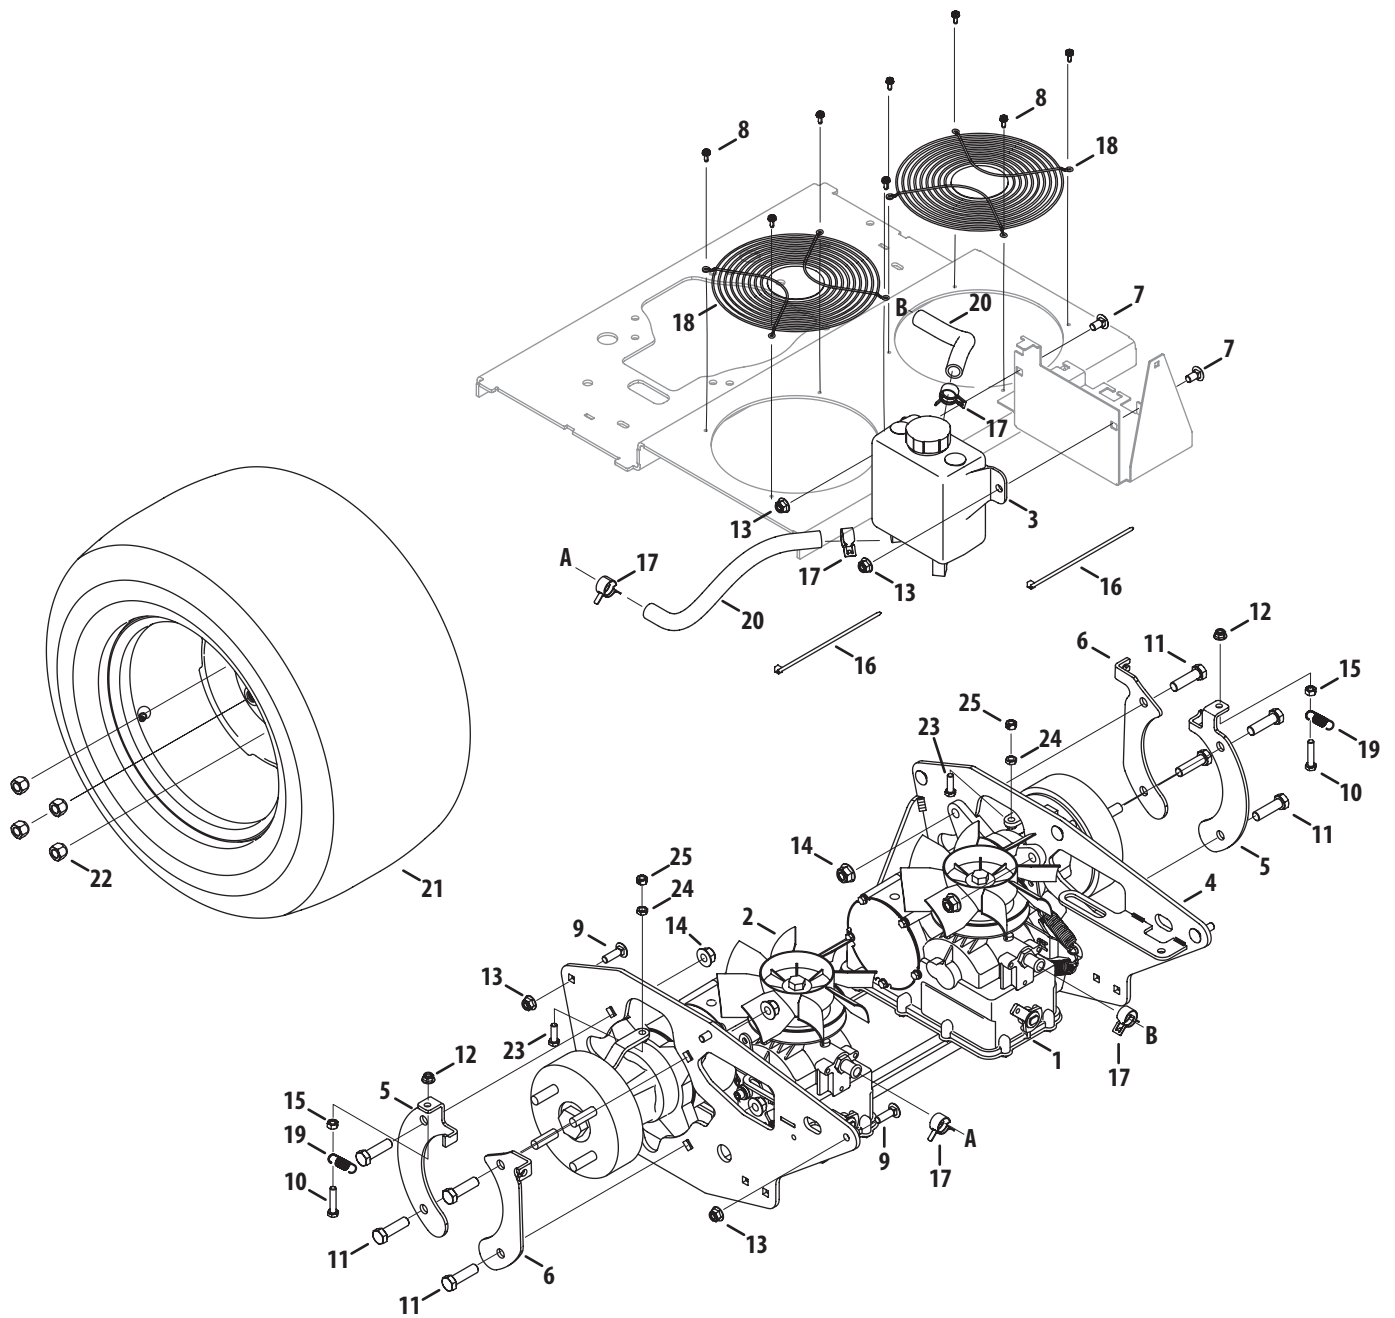

Ref.	Part Number	Description
1	918-07021	Transmission, LH
2	918-07022	Transmission, RH
3	931-04566	Hydro Tank Assembly
4	680-00336	Transmission Bracket Assembly
5	703-09657	Spring Brake Mounting Bracket
6	703-09658	Brake Cable Mounting Bracket
7	710-0389	Carriage Bolt, 3/8-16 x .75
8	1767754	Screw, 10-24 x .500
9	710-05408	Carriage Bolt, 3/8-16 x 1.25
10	710-0805	Hex Cap Screw, 5/16-18 x 1.50
11	710-3067	Hex Cap Screw, 1/2-13 x 1.75
12	712-04063	Nut, 5/16-18, Flangelock
13	712-04065	Nut, 3/8-16, Flangelock
14	712-04150	Nut, 1/2-13, Flangelock
15	912-3010	Nut, 5/16-18, Hex
16	725-0157	Cable Tie
17	726-05017	Hose Clamp, .9375
18	732-04833	Fan Cover
19	732-05147	Extension Spring, .50 OD x 1.71
20	751-12281	Hose, 5/8 ID x 12.00 LG
21	634-05088	Wheel Assembly, 24 x 12-12
22	712-04311	Lug Nut, 1/2-13
23	710-0376	Hex Cap Screw, 5/16-18 x 1.00
24	712-3007	Jam Nut, 5/16-18
25	912-3009	Nut, Hexlock 5/16-18


Control Group

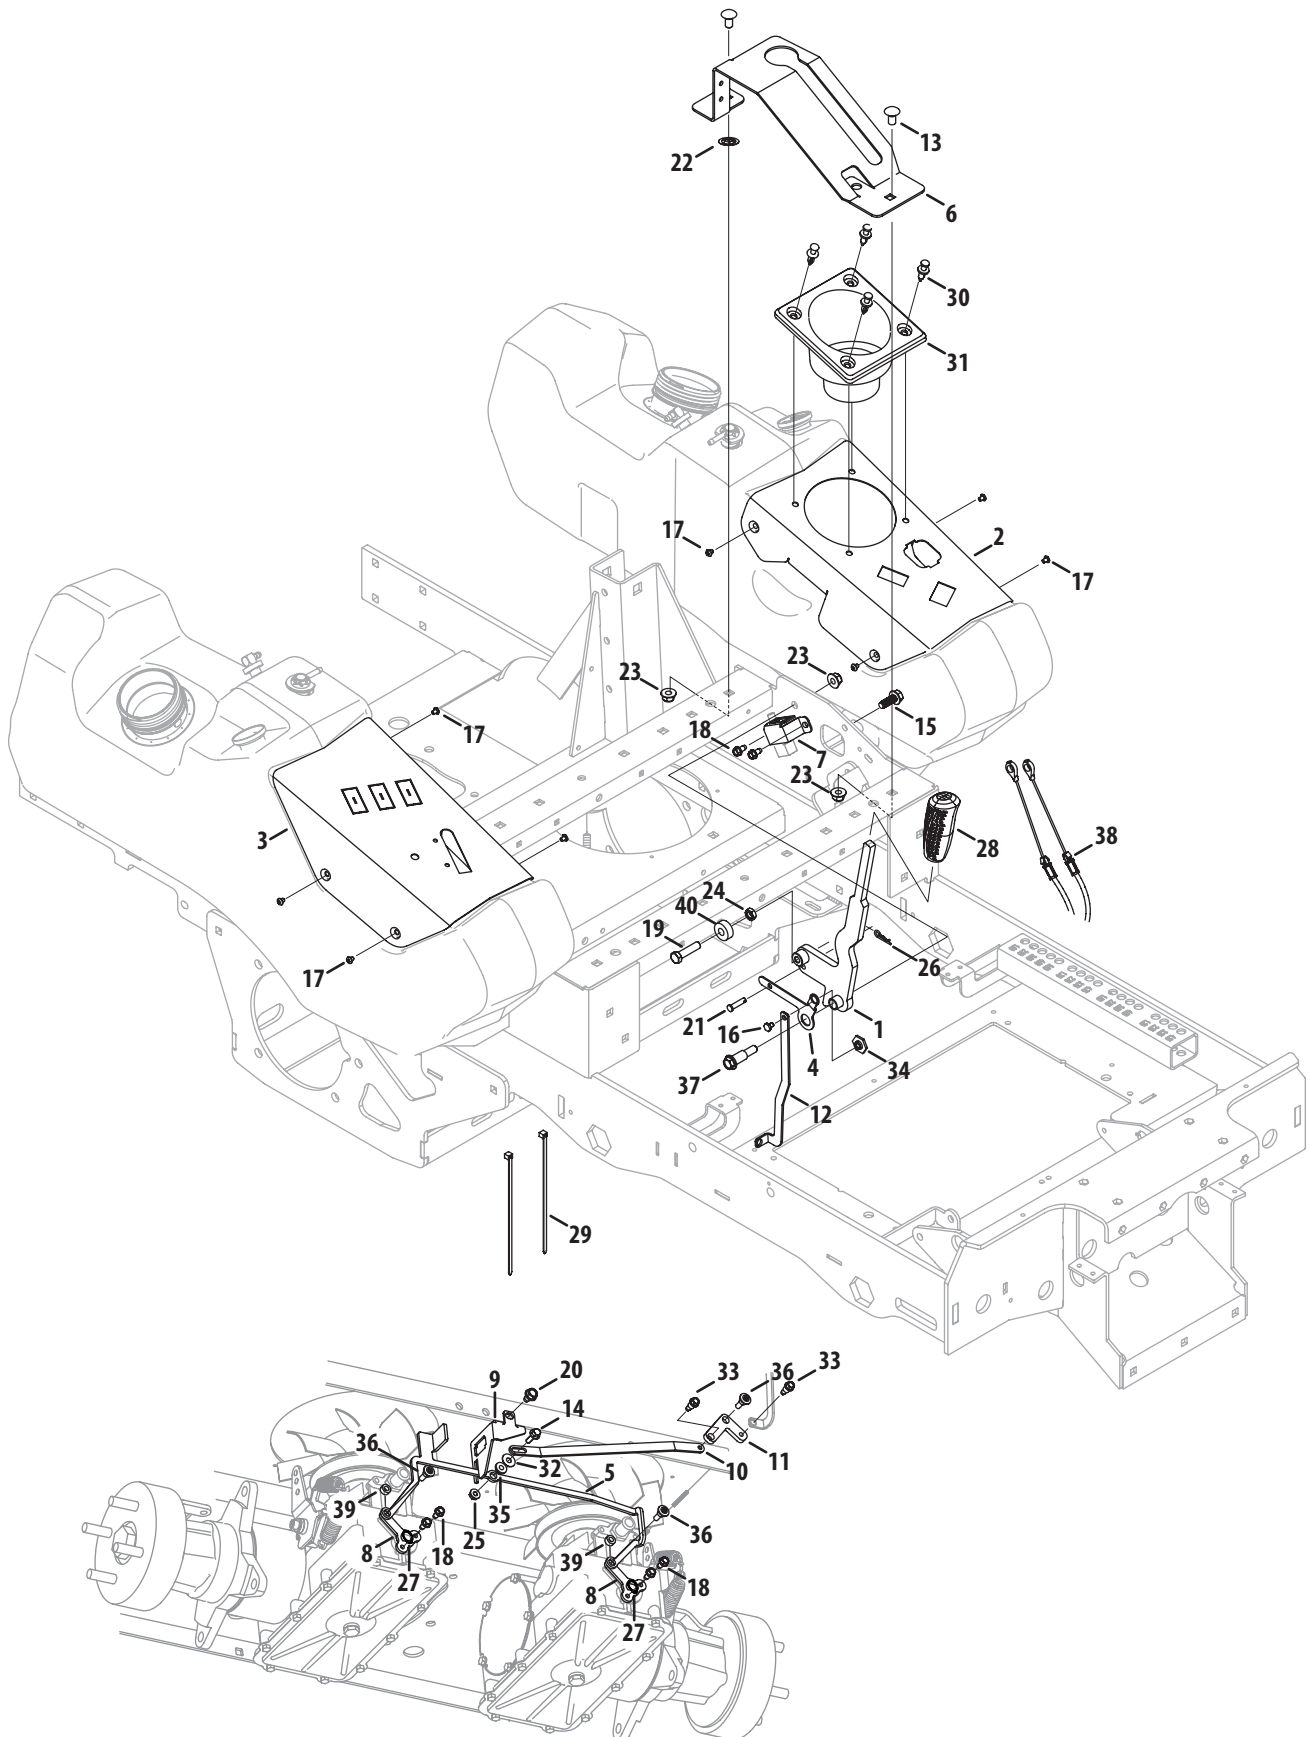

Ref.	Part Number	Description
1	680-00339	Brake Handle Assembly
2	703-08123	LH Control Panel
3	703-08482	RH Control Panel
4	703-09416A	Dump Valve Release Lever
5	703-09587A	Dump Valve Actuator Bracket
6	703-09592	Boot Brake Bracket
7	703-09604	Brake Switch Mount
8	703-09665	Transmission Bypass Lever
9	703-09701	Neutral Switch Bracket
10	703-09703	Transmission Actuator Arm
11	703-09731	Neutral Pivot Control Lever
12	703-09739	Neutral Arm
13	710-0389	Carriage Bolt, 3/8-16 x .75
14	710-04666	Hex Flange Screw, 1/4-20 x .75
15	710-04683A	Screw, 3/8-16 x 1.00
16	710-05132	Screw, M6 x 8mm
17	710-05421	Machine Screw, #10-32 x .25
18	710-0599	Hex Flange Screw, 1/4-20 x .500
19	710-06021	Hex Cap Screw, 3/8-16 x 1.50
20	710-0607	Screw, 5/16-18 x .50


Ref.	Part Number	Description
21	711-04585	Clevis Pin, .25 x 1.00
22	712-0299	Push Nut, 3/8
23	712-04065	Nut, 3/8-16, Flangelock
24	912-3008	Jam Nut, 3/8-16
25	912-3027	Nut, 1/4-20, Hexflange
26	714-04024	Hair Pin
27	916-0114	Retainer Ring
28	720-04139B	Grip, .50 ID
29	725-0157	Cable Tie
30	728-0199	Rivet, .3125
31	731-08438	Cup Holder
32	736-0342	Flat Washer, .283 x .750 x .030
33	738-04425	Shoulder Screw, .342 x .335, 1/4-28
34	738-04446	Shoulder Spacer, M6
35	738-04483	Shoulder Spacer, .375 x .625 x .20
36	738-0706C	Shoulder Screw, .375 x .280, 1/4-14
37	738-0966A	Shoulder Bolt, .50 x .925, 3/8-16
38	946-05103	Brake Cable
39	750-05297	Spacer, .256 x .500 x .240
40	750-3119	Spacer, .406 x 1.00 x .38

Fuel Tank Assembly

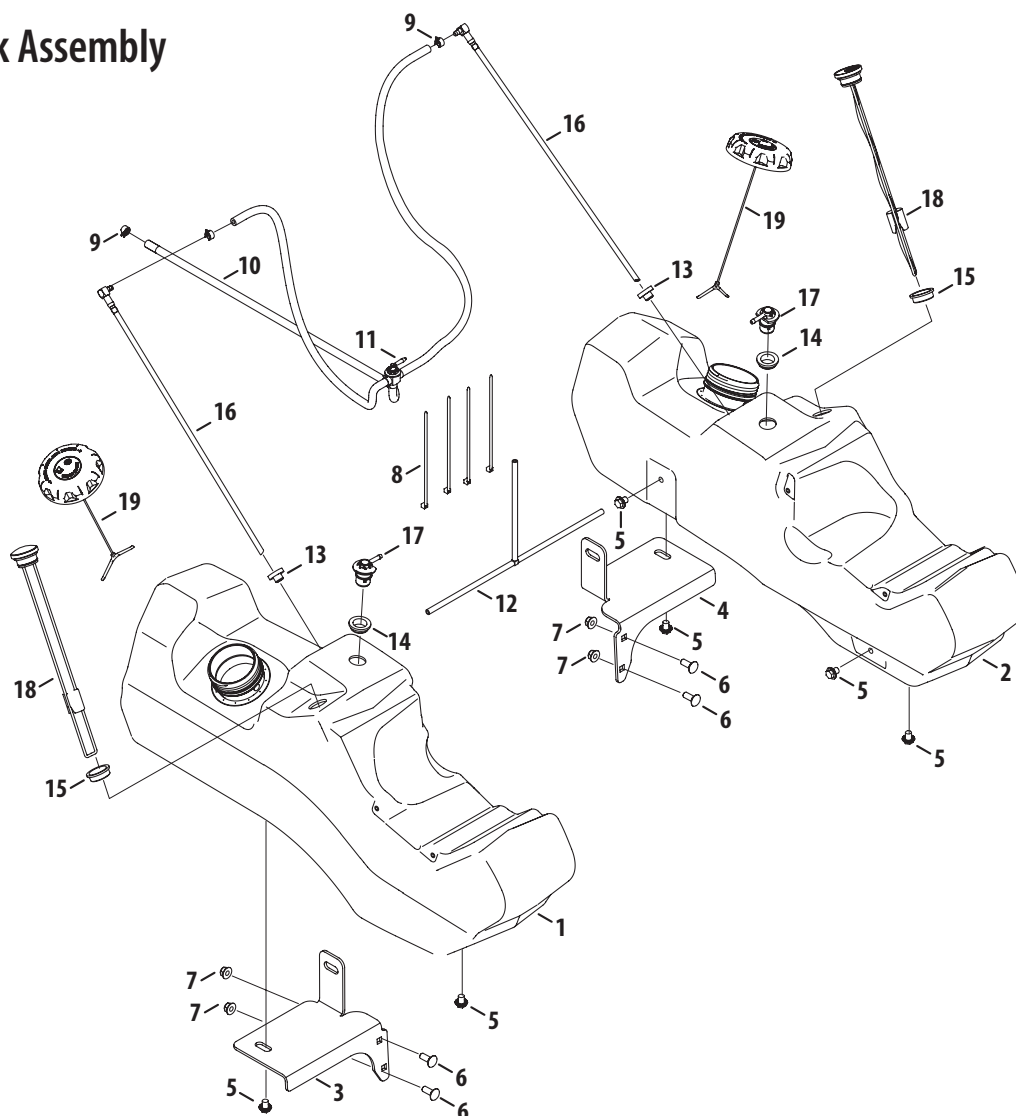


Ref.	Part Number	Description
1	651-04319A	Fuel Tank Assembly, RH
2	651-04320A	Fuel Tank Assembly, LH
3	703-08484	Rear Fuel Bracket, RH
4	703-08495	Rear Fuel Bracket, LH
5	710-05412	Hex Cap Screw, 3/8-16 x .500
6	710-3168	Carriage Bolt, 3/8-16 x .500
7	712-04065	Nut, 3/8-16, Flangelock
8	725-0157	Cable Tie
9	726-04123A	Hose Clamp, .500 Dia.
10	751-10349-84	Fuel Hose., 1/4
11	751-12484	Fuel Switch

Ref.	Part Number	Description
12	751-12282	Fuel Hose Assembly includes:
	--	Hose, 3/16" Fuel Line (in inches)
	737-04341	Tee Fitting, Fuel
13	02002253	Grommet, Fuel Tank
14	735-04081	Rubber Grommet
15	735-0699	Grommet, 1.58 OD x 1.21 ID x .5
16	951-12117	Fuel Pickup Valve
17	751-12118	Fuel Rollover Valve
18	951-12366	Fuel Gauge
19	951-12754	Fuel Cap

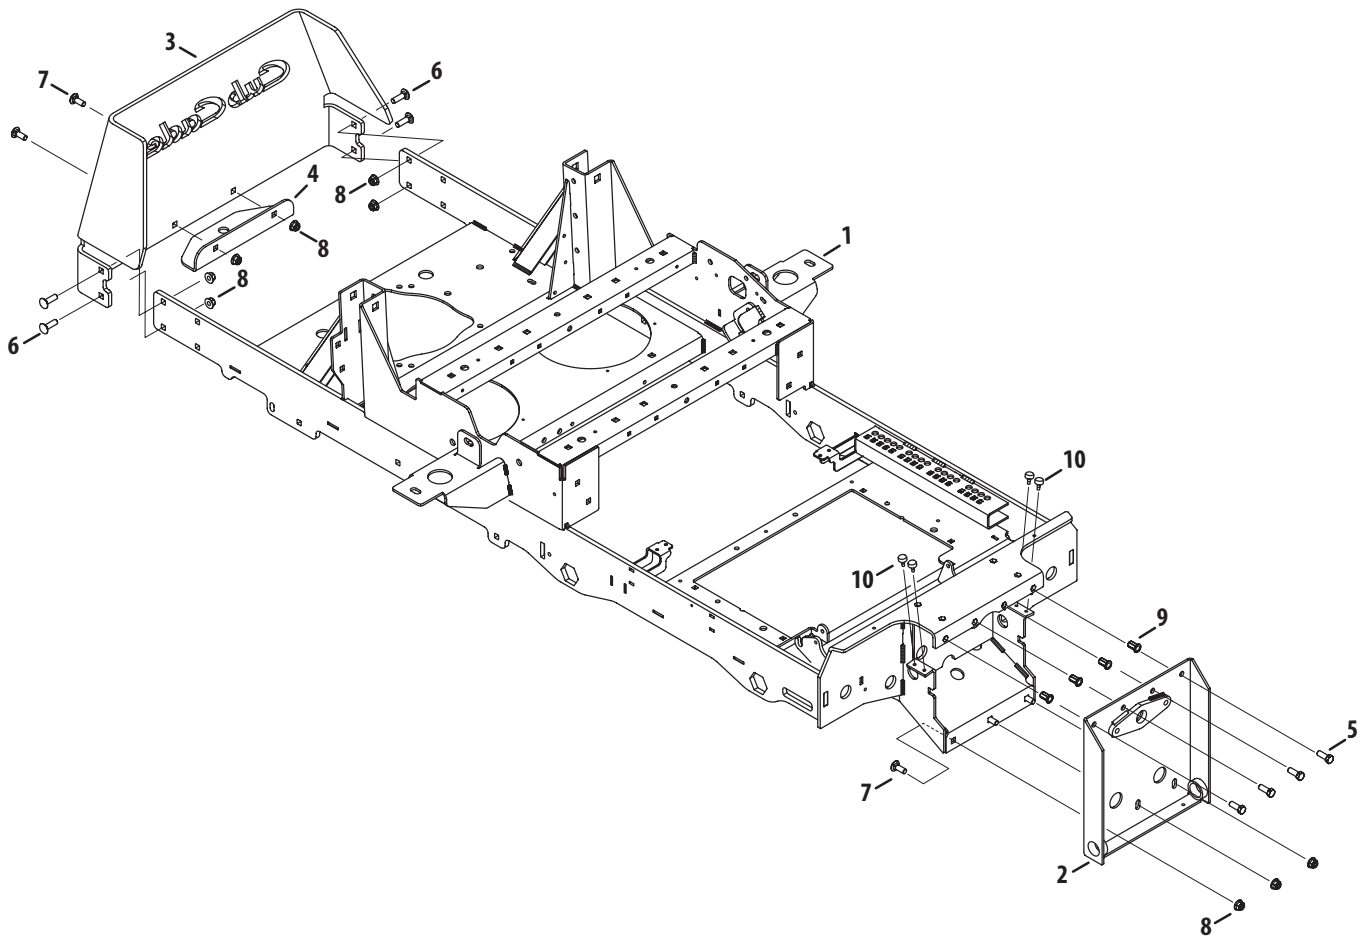

Ref	Part Number	Description
1	680-00184F	Frame Assembly
2	680-00341	Front Axle Bracket Assembly
3	703-09461	Rear Bumper
4	703-09543	Hitch Bracket
5	710-0514	Hex Cap Screw, 3/8-16 x 1.00
6	710-05408	Carriage Bolt, 3/8-16 x 1.25
7	710-3168	Carriage Bolt, 3/8-16 x 1.00
8	712-04065	Nylock Nut, 3/8-16
9	728-04062	Rivet Nut, 3/8-16
10	735-0271A	Bumper, .62 Dia. x .3

Control Assembly

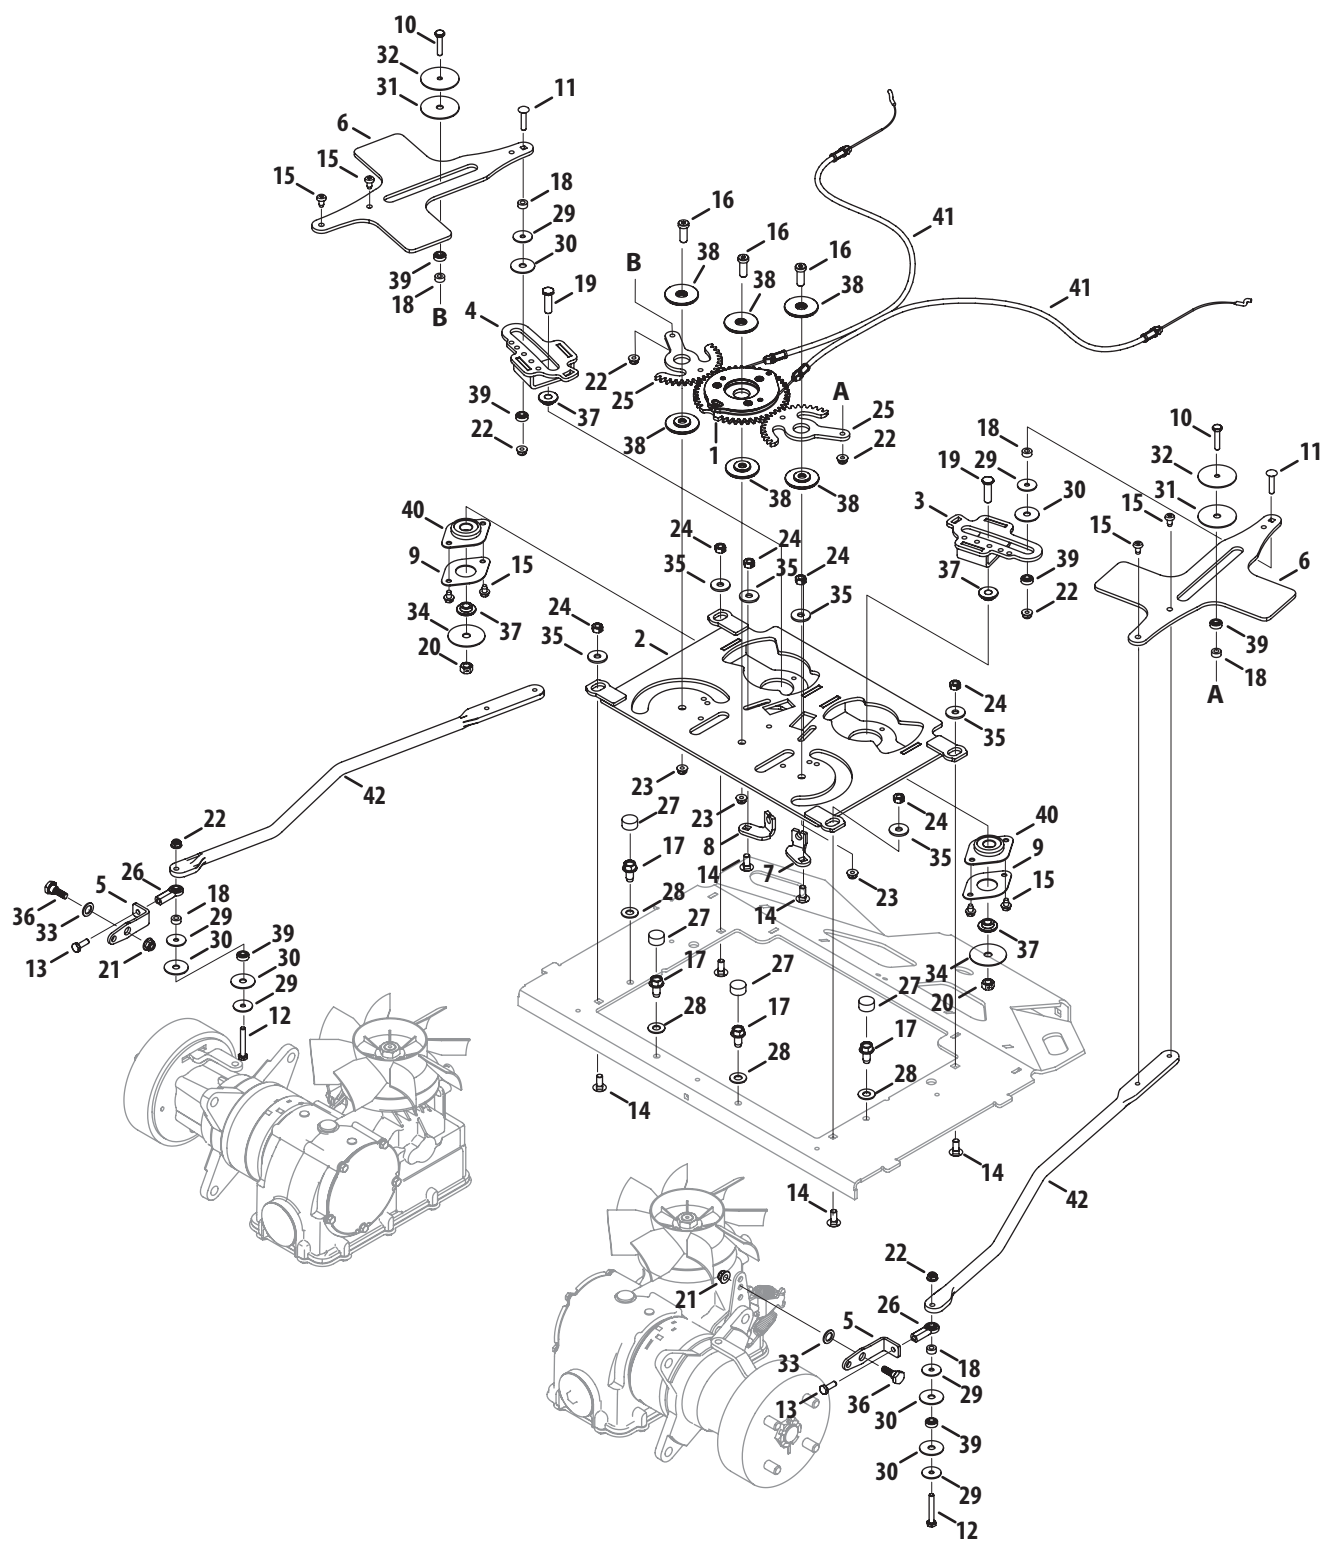


Control Assembly

Ref.	Part Number	Description
1	680-00144	Pump Control Gear
2	680-00226A	Pump Control Mounting Plate
3	680-00240	Pump Control Cam Assembly, RH
4	680-00241	Pump Control Cam Assembly, LH
5	703-07439	Pump Control Bracket
6	703-07803	Pump Steering Arm Actuator
7	703-08559	Steering Cable Bracket
8	703-08561	Steering Cable Bracket
9	703-08814	Retainer Bearing Plate
10	710-0106	Hex Cap Screw, 1/4-20 x 1.25
11	710-0111	Carriage Screw, 1/4-20 x 1.25
12	710-0136	Hex Cap Screw, 1/4-20 x 1.75
13	710-0412	Hex Cap Screw, 1/4-28 x .75
14	710-0451	Carriage Bolt, 5/16-18 x .75
15	710-0599	Hex Flange Screw, 1/4-20 x .500
16	710-05340	Socket Head Screw, 3/8-16 x 1.00
17	710-0623	Screw, 3/8-16 x .75
18	750-05297	Spacer, .256 x .500 x .240
19	710-0723	Hex Cap Screw, 3/8-16 x 1.25
20	712-0375	Nut, 3/8-16, Hexlock
21	712-04063	Nut, 5/16-18, Flangelock

Ref.	Part Number	Description
22	712-04064	Nut, 1/4-20, Flangelock
23	712-04065	Nut, 3/8-16, Flangelock
24	912-3009	Nut, 5/16-18, Hexlock
25	917-04825	Yoke Steering Gear
26	723-04077	Rod End, 1/4-28
27	731-1490	Slide Cap
28	936-0300	Washer, .406 x .875 x .059
29	736-04511	Washer, .255 x 1.00 x .060
30	736-04596	Washer, .355 x 1.25 x .060
31	736-04630	Washer, .356 x 2.00 x .060
32	736-04631	Washer, .260 x 2.00 x .060
33	736-3024	Washer, .469 x .75 x .060
34	736-3040	Washer, .406 x 1.92 x .060
35	736-3089	Washer, .345 x 1.00 x .100
36	938-0296	Shoulder Screw, .437 x .268, 5/16-18
37	738-04154	Shoulder Spacer, .38 x 1.00 x .31
38	738-04453	Shoulder Spacer, .853 x .385 x .100
39	741-04425	Ball Bearing, .250 x .625
40	741-04566	Ball Bearing, .625
41	946-04739A	Transmission Link Control Cable
42	747-05649	Pump Control Rod

Front Axle Assembly

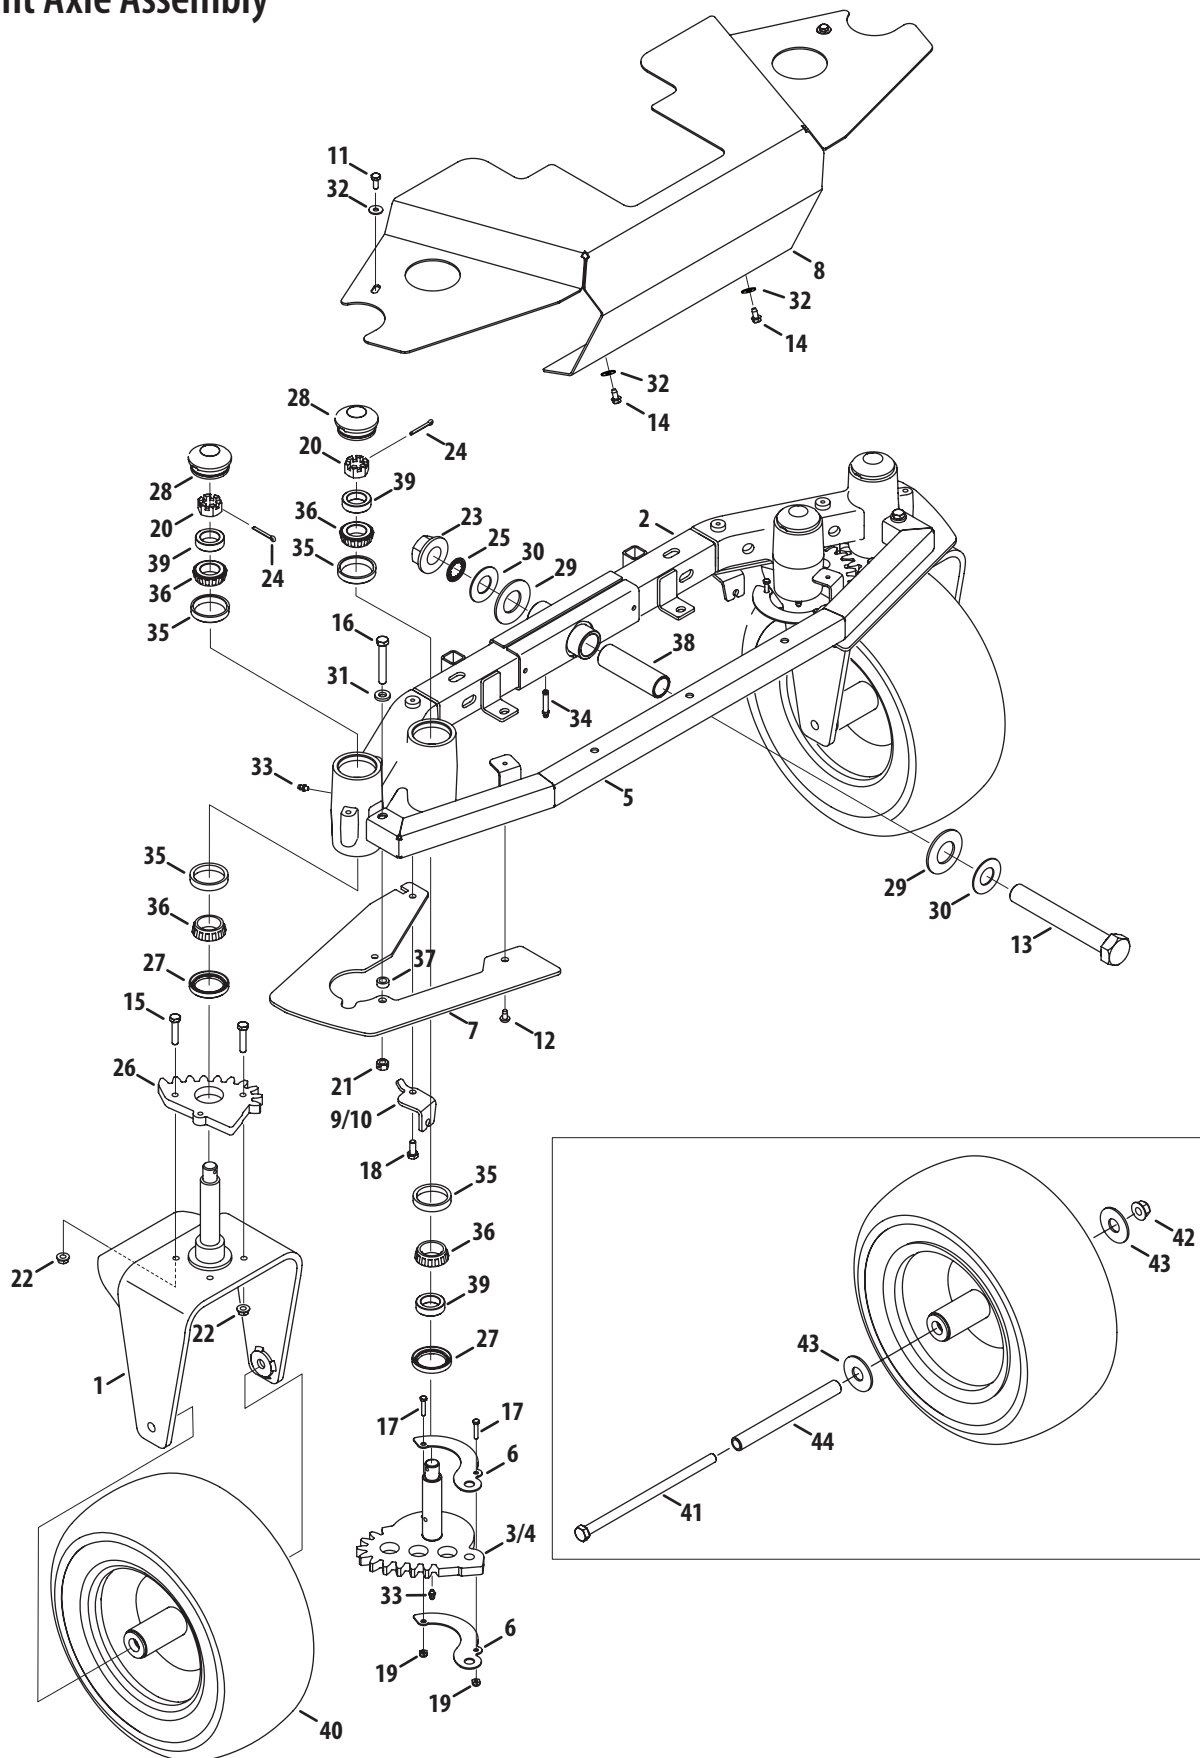


Front Axle Assembly

Ref.	Part Number	Description
1	680-00138	Yoke Assembly
2	680-00153	Axle Assembly
3	680-00154	LH Steering Gear
4	680-00155	RH Steering Gear
5	680-00165	Front Bumper
6	703-07931A	Gear Cable Mounting Bracket
7	703-08383	Gear Panel Cover
8	703-08396	Axle Cover
9	703-08800	RH Steering Cable Bracket
10	703-08801	LH Steering Cable Bracket
11	710-0433	Hex Cap Screw, 1/4-20 x .625
12	710-05070	Screw, 1/4-20 x .5
13	710-05189	Hex Cap Screw, 1-14 x 7.0
14	710-0599	Hex Flange Screw, 1/4-20 x .500
15	710-0805	Hex Cap Screw, 5/16-18 x 1.50
16	710-0859	Hex Cap Screw, 3/8-16 x 2.50
17	710-1194	Machine Screw, #10-24 x 1.00
18	710-1880	Hex Cap Screw, 5/16-18 x .75
19	712-0161	Nut, #10-24, Hexlock
20	712-0359	Nut, 3/4-16, Slotted
21	712-0375	Nut, 3/8-16, Hexlock
22	712-04054	Nut, 5/16-18, Flangelock

Ref.	Part Number	Description
23	712-04310	Nut, 1.0-14, Flangelock
24	714-0162	Cotter Pin, 5/32 x 1.25
25	716-04191	Retainer Ring
26	917-04822	Steering Gear
27	721-04462	Seal, 14858
28	731-07348	Axle Grease Cap
29	736-04604	Bell Washer, 1.25 x 2.50 x .180
30	736-04605	Washer, 1.00 x 2.00 x .075
31	736-3010	Washer, .407 x .812 x .135
32	736-3090	Washer, .260 x .720 x .060
33	737-04345	Grease Fitting, 1/4-28
34	737-04352	Grease Fitting, 1 39/64
35	741-04548	Cup Bearing
36	741-04549	Cone Bearing
37	750-04776	Spacer, .380 x .625 x .265
38	750-05438	Spacer, 1.005 x 1.247 x 4.1
39	750-05600	Spacer, 1.00 x 1.50 x .437
40	634-04704-0931	Wheel Assembly, 15 x 6.5-8
41	710-05374	Hex Cap Screw, 1/2-13 x 9.5
42	712-04150	Nut, 1/2-13, Flangelock
43	736-3014	Washer, .781 x 2.00 x .105
44	750-05595	Spacer, .51 x .750 x 7.38


Steering Column

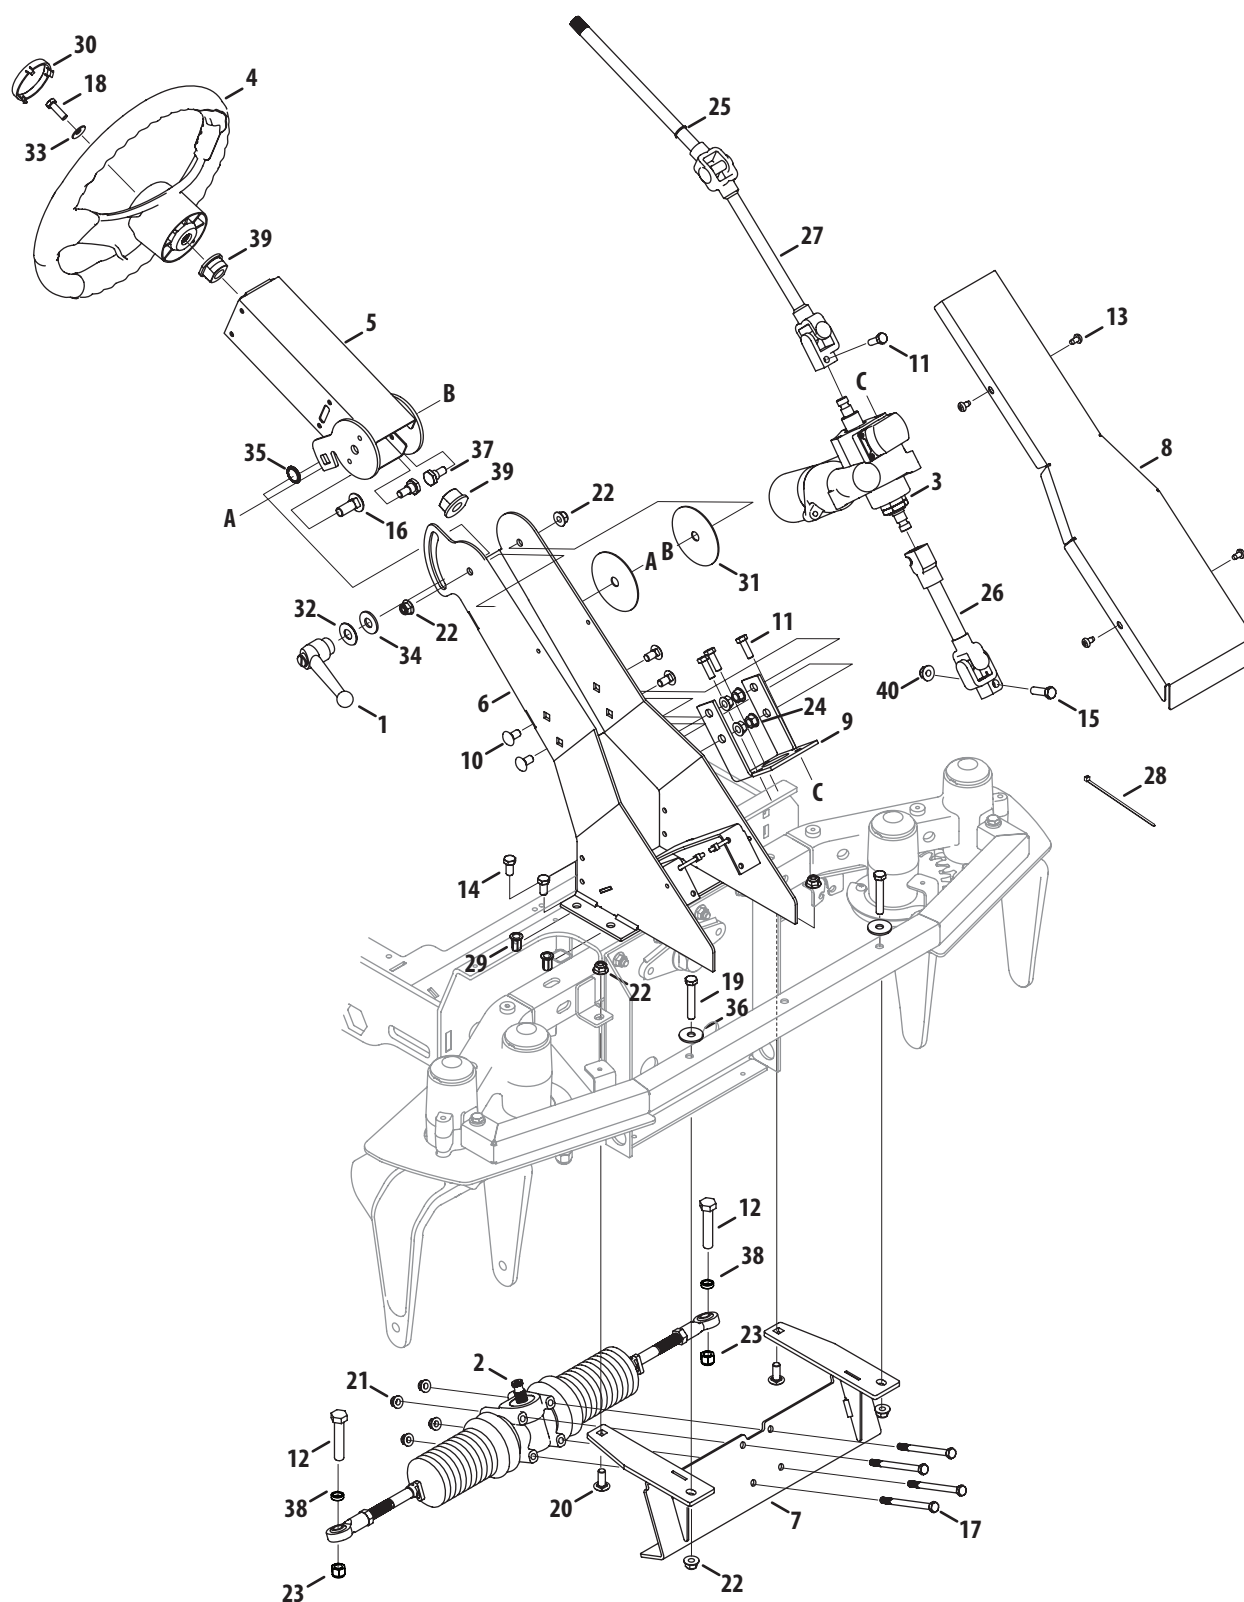

Steering Column

Ref.	Part Number	Description	Ref.	Part Number	Description
1	02005058	Steering Column Adjustment Lever	21	712-04063	Nut, 5/16-18, Flangelock
2	917-04088	Steering Gearbox	22	712-04065	Nut, 3/8-16, Flangelock
3	918-04994	Power Steering Arm	23	712-05022	Nut, 1/2-20, Hexlock
4	631-04556A	Steering Wheel	24	912-0431	Nut, 3/8-16, Flangelock
5	680-00195	Upper Column	25	916-0171	Retainer Ring, .625
6	680-00203	Base Column	26	917-04872	Steering Shaft, Bottom
7	680-00207	Steering Rack Mount	27	917-04905	Steering Shaft, Top
8	703-08320	Front Column Cover	28	725-0157	Cable Tie
9	703-08626	Power Steering Mount	29	728-04062A	Rivet, 3/8-16
10	710-0389	Carriage Bolt, 3/8-16 x .750	30	731-04039	Cap, No Sprig
11	710-04629	Hex Cap Screw, M8-1.25 x 25.0	31	731-08236	Column Wear Plate
12	710-06059	Hex Cap Screw, 1/2-20 x 2.25	32	936-0179	Washer, .531 x 1.25 x .100
13	710-05070	Screw, 1/4-20 x .500	33	736-0242	Bevel Washer, .340 x .872 x .060
14	710-0514	Hex Cap Screw, 3/8-16 x 1.00	34	736-04602	Washer, .640 x 1.25 x .050
15	710-06021	Hex Cap Screw, 3/8-16 x 1.50	35	936-0760	Lock Washer, 17 x 23.8 x 1.95
16	710-05375	Carriage Bolt, 1/2-13 x 1.25	36	736-3052	Washer, .406 x 1.00 x .105
17	710-05410	Hex Cap Screw, 5/16-18 x 4.00	37	738-0143	Shoulder Bolt, .496 x .336, 3/8-16
18	710-0643	Hex Cap Screw, 5/16-18 x 1.00	38	750-04719	Spacer, .515 x .75 x .220
19	710-0859	Hex Cap Screw, 3/8-16 x 2.50	39	948-0209	Flange Bearing, .63 x 1.15
20	710-3168	Carriage Bolt, 3/8-16 x 1.00	40	712-0130	Nut, Hex Lock, 3/8-16

Pedal Controls

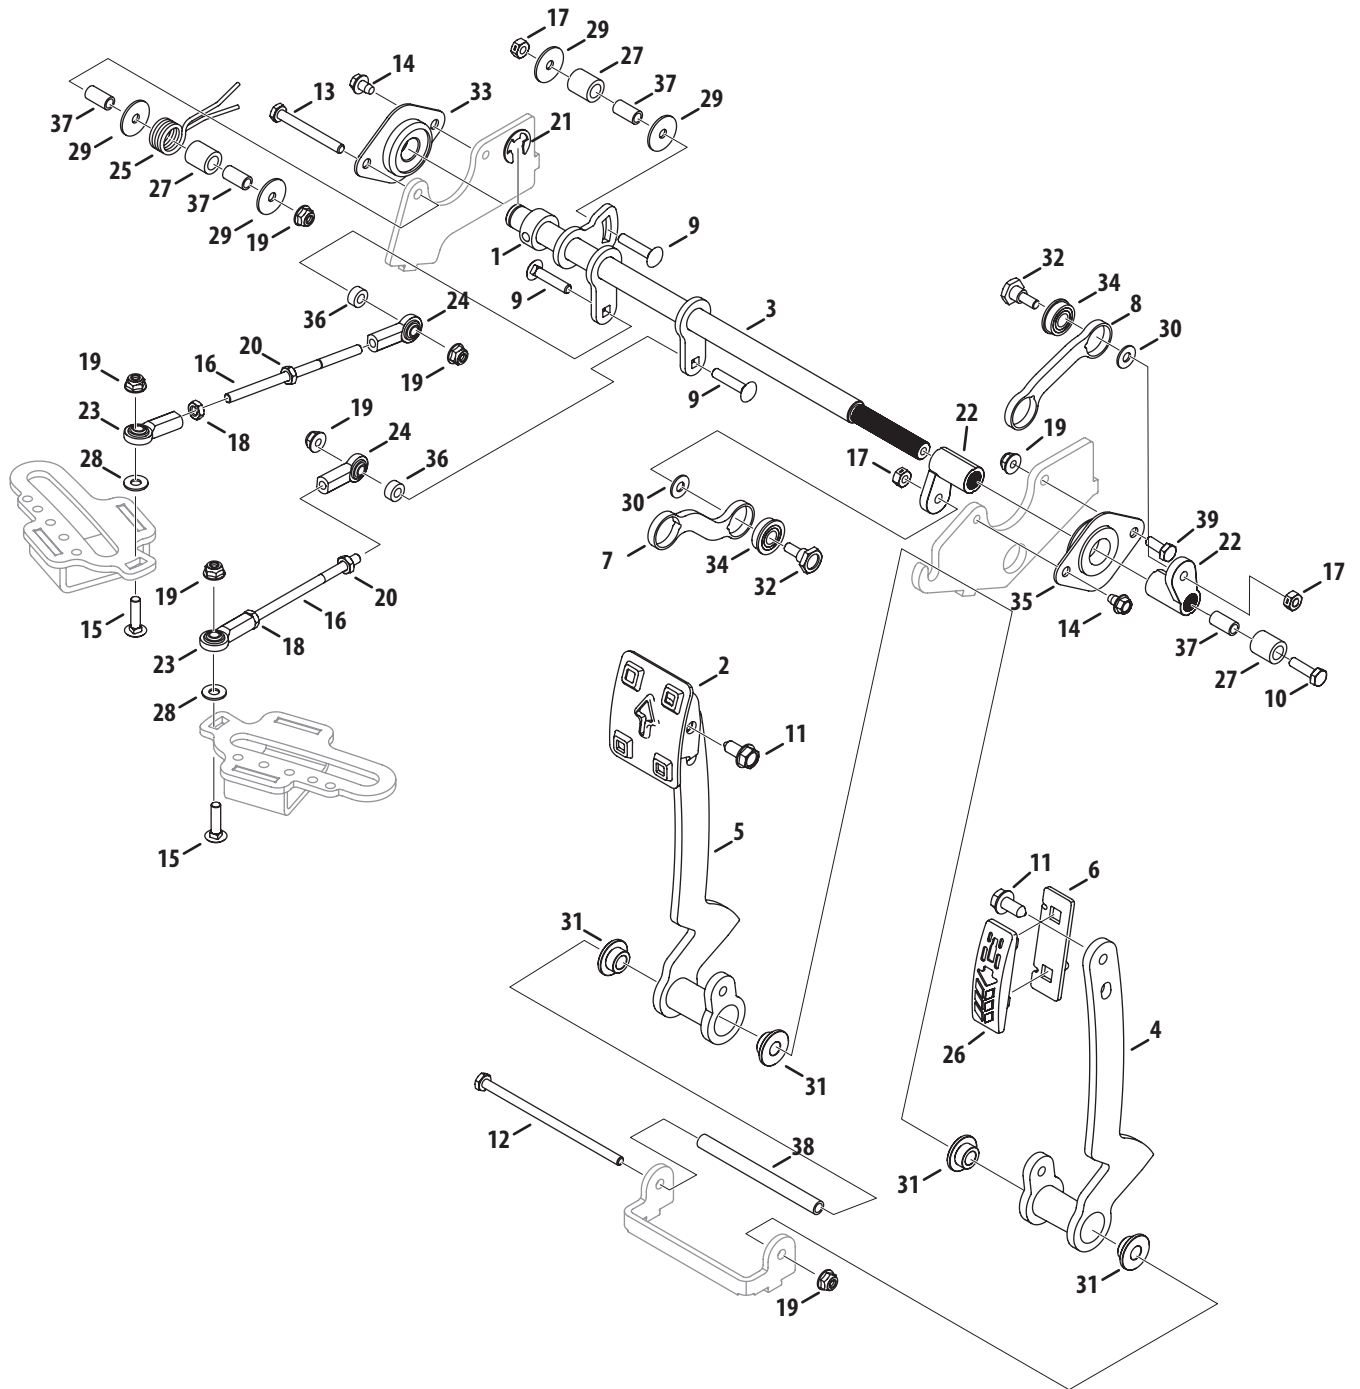


Pedal Controls

Ref.	Part Number	Description
1	01006350	Shaft Collar, .625 x 1.0 x .438
2	603-04752	Forward Pedal Assembly
3	680-00145	Speed Control Arm Assembly
4	680-00187A	Reverse Pedal Assembly
5	680-00189A	Forward Pedal Assembly
6	703-08518	Reverse Pedal Bracket
7	703-08782A	Forward Pedal Link
8	703-08783A	Reverse Pedal Link
9	710-0111	Carriage Screw, 1/4-20 x 1.25
10	710-1062	Hex Cap Screw, 1/4-20 x 1.25
11	710-04484	Screw, 5/16-18 x .750
12	710-05418	Hex Cap Screw, 1/4-20 x 5.00
13	710-0641	Hex Cap Screw, 1/4-20 x 2.25
14	710-0653	Screw, 1/4-20 x .375
15	710-0932A	Carriage Screw, 1/4-20 x 1.00
16	711-05493	Speed Control Link Rod
17	912-0291	Nut, 1/4-20, Hexlock
18	712-0314	Jam Nut, 1/4-28
19	712-04064	Nut, 1/4-20, Flangelock
20	712-04326	Jam Nut, 1/4-28, LH

Ref.	Part Number	Description
21	716-0106A	E-Ring, .625
22	718-04858	Pedal Shaft Arm
23	723-04077	Rod End, 1/4-28
24	723-04088	Rod End, 1/4-28, LH
25	732-04955	Torsion Spring, .70 ID
26	735-04113	Foot Pad
27	750-0807	Spacer, .385 x .625 x .700
28	736-04446	Washer, .250 x .630 x .052
29	736-04511	Washer, .255 x 1.00 x .060
30	936-3020	Washer, .271 x .630 x .065
31	738-04503	Shoulder Spacer, .38 x .62 x 1.00
32	738-1023A	Shoulder Screw, .375 x .280, 1/4-20
33	741-04566	Ball Bearing, .625
34	741-04568	Bearing, .375 x .875 x .281
35	741-04569	Ball Bearing, .750
36	750-05297	Spacer, .256 x .500 x .240
37	750-05369	Spacer, .260 x .375 x .75
38	750-05666	Spacer, .255 x .375 x 4.28
39	710-3015	Hex Cap Screw, 1/4-20 x .75

Deck Lift Assembly

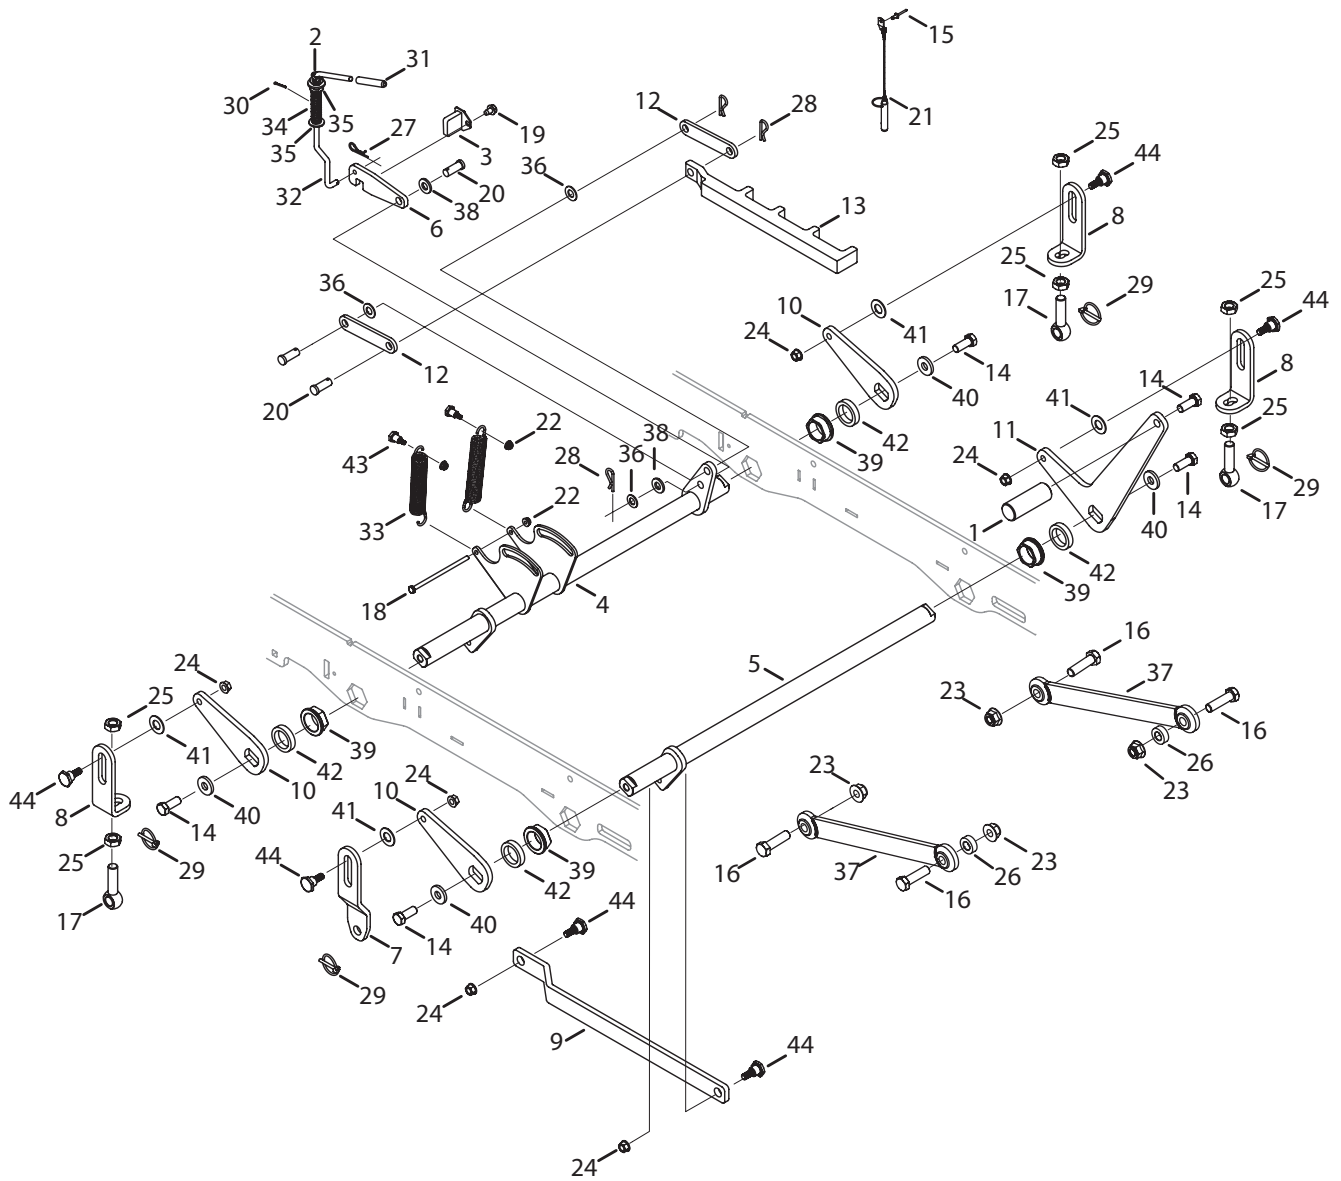


Deck Lift Assembly

Ref.	Part Number	Description
1	02002596	Deck Lift Foot Pedal
2	941-0475	Bearing, .385 ID
3	680-00158	Lift Lock Mount
4	680-00159B	Deck Lift Shaft
5	680-00160	Deck Lift Shaft, Front
6	703-08032	Latch Lock Bracket
7	703-08060	Lift Link Arm
8	703-08062	Deck Adjustment Lift Link Arm
9	703-08063	Deck Lift Bar, Front
10	703-08070	Deck Lift Bellcrank
11	703-08252	Deck Lift Foot Pedal
12	703-08384	Deck Index Link Arm
13	703-08388A	Lift Index Slider Arm
14	710-04186	Hex Cap Screw, 1/2-13 x 1.25
15	728-04016	Rivet, 3/16 x .325
16	710-06047	Hex Cap Screw, 5/8-11 x 2.25
17	710-05355	Eye Bolt, 5/8-18 x 2.63
18	710-05418	Hex Cap Screw, 1/4-20 x 5.00
19	710-0607	Screw, 5/16-18 x .500
20	711-04061	Clevis Pin, .500 x 1.25
21	711-05629	Clevis Pin, .438 x 1.5
22	712-04064	Nut, 1/4-20, Flangelock

Ref.	Part Number	Description
23	712-04151	Nut, 5/8-11, Flangelock
24	712-05007	Nut, 3/8-16, Flange Centerlock
25	912-3015	Jam Nut, 5/8-11
26	950-0960A	Spacer, .635 x 1.25 x .445
27	914-0145	Click Pin, .092 x 1.64
28	914-0149B	Internal Cotter Pin
29	753-04070	Lynch Pin, .1875
30	914-0507	Cotter Pin, 3/32 x .750
31	720-04183	Lift Handle Grip
32	747-05465A	Lift Lock Rod
33	732-04929	Extension Spring, .969 OD x 6.180
34	732-0992	Compression Spring, .656 OD x 2.445
35	736-0242	Bevel Washer, .340 x .872 x .060
36	936-0272	Washer, .510 x 1.00 x .125
37	680-00322	Deck Rod Assembly
38	936-0326	Washer, .510 x 1.00 x .125
39	948-3051	Hex Flange Bearing
40	703-09695	Flat Washer, .531 x 2.125 x .250
41	736-04602	Washer, .640 x 1.25 x .050
42	750-05468	Spacer, 1.27 x 1.75 x .375
43	738-04222	Shoulder Screw, .437 x .50, 1/4-20
44	738-1127	Shoulder Screw, .625 x .442, 3/8-16


Engine Accessories (Kohler)

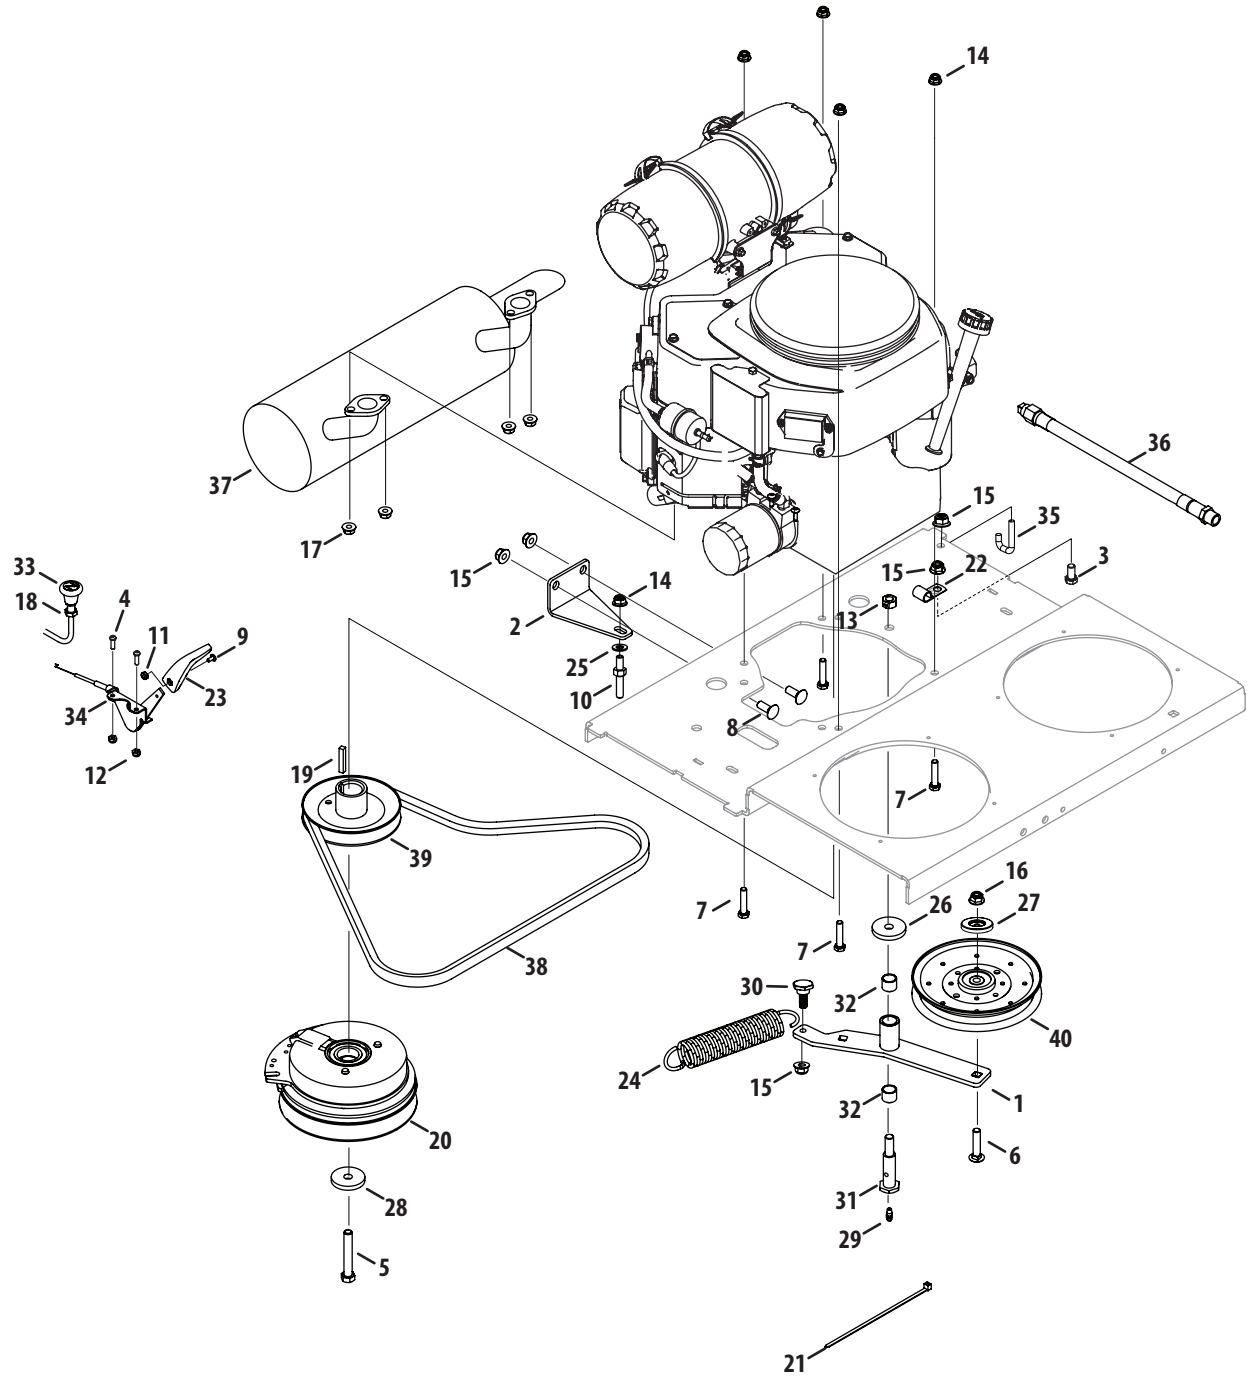

Engine Accessories (Kohler)


Ref.	Part Number	Description
1	680-00227A	Idler Bracket
2	703-08607	Clutch Retainer Bracket
3	710-0216	Hex Cap Screw, 3/8-16 x .75
4	710-0425	Screw, #10-24 x .625
5	710-04377	Hex Cap Screw, 7/16-20 x 2.75
6	710-05376	Carriage Bolt, 3/8-16 x 1.00
7	710-0805	Hex Cap Screw, 5/16-18 x 1.50
8	710-3168	Carriage Bolt, 3/8-16 x 1.00
9	710-3217	Screw, #8-32 x .375
10	711-1637	Stud, Pivot Ball Joint
11	712-0142	Nut, #8-32, Hex
12	712-0161	Nut, #10-24, Hexlock
13	712-0290	Nut, 7/16-14, Hexlock
14	712-04063	Nut, 5/16-18, Flangelock
15	712-04065	Nut, 3/8-16, Flangelock
16	912-0431	Nut, 3/8-16, Flangelock
17	712-04312	Nut, M8-1.25, Hexlock
18	712-0711	Jam Nut, 3/8-24
19	714-0118	Key, 1/4 x 1.50
20	917-04967	Electric PTO Clutch
21	725-0157	Cable Tie
22	726-04124	Clip, .407 x 1.80
23	731-04914	Throttle Control Knob
24	732-04915A	Extension Spring, 1.5 x 7.5
25	936-0275	Washer, .344 x .688 x .065
26	736-3017	Washer, .471 x 1.50 x .225
27	721-04516	Pulley Cap
28	736-3082A	Washer, .471 x 1.50 x .225
29	937-0146	Grease Fitting
30	738-1126	Shoulder Screw, .625 x .302, 3/8-16
31	738-3102	Shoulder Bolt, .625 x 1.947, 7/16-14
32	741-04555	bearing, .638 x .753 x .615
33	946-04812	Choke Control Cable
34	946-04840	Throttle Cable
35	747-05707	Transmission Spring Hook
36	751-10291A	Oil Drain Hose
37	751-12519	Muffler
38	954-04320	Belt
39	756-04480A	Drive Pulley
40	756-04487	Idler Pulley

Engine Accessories (Kawasaki)

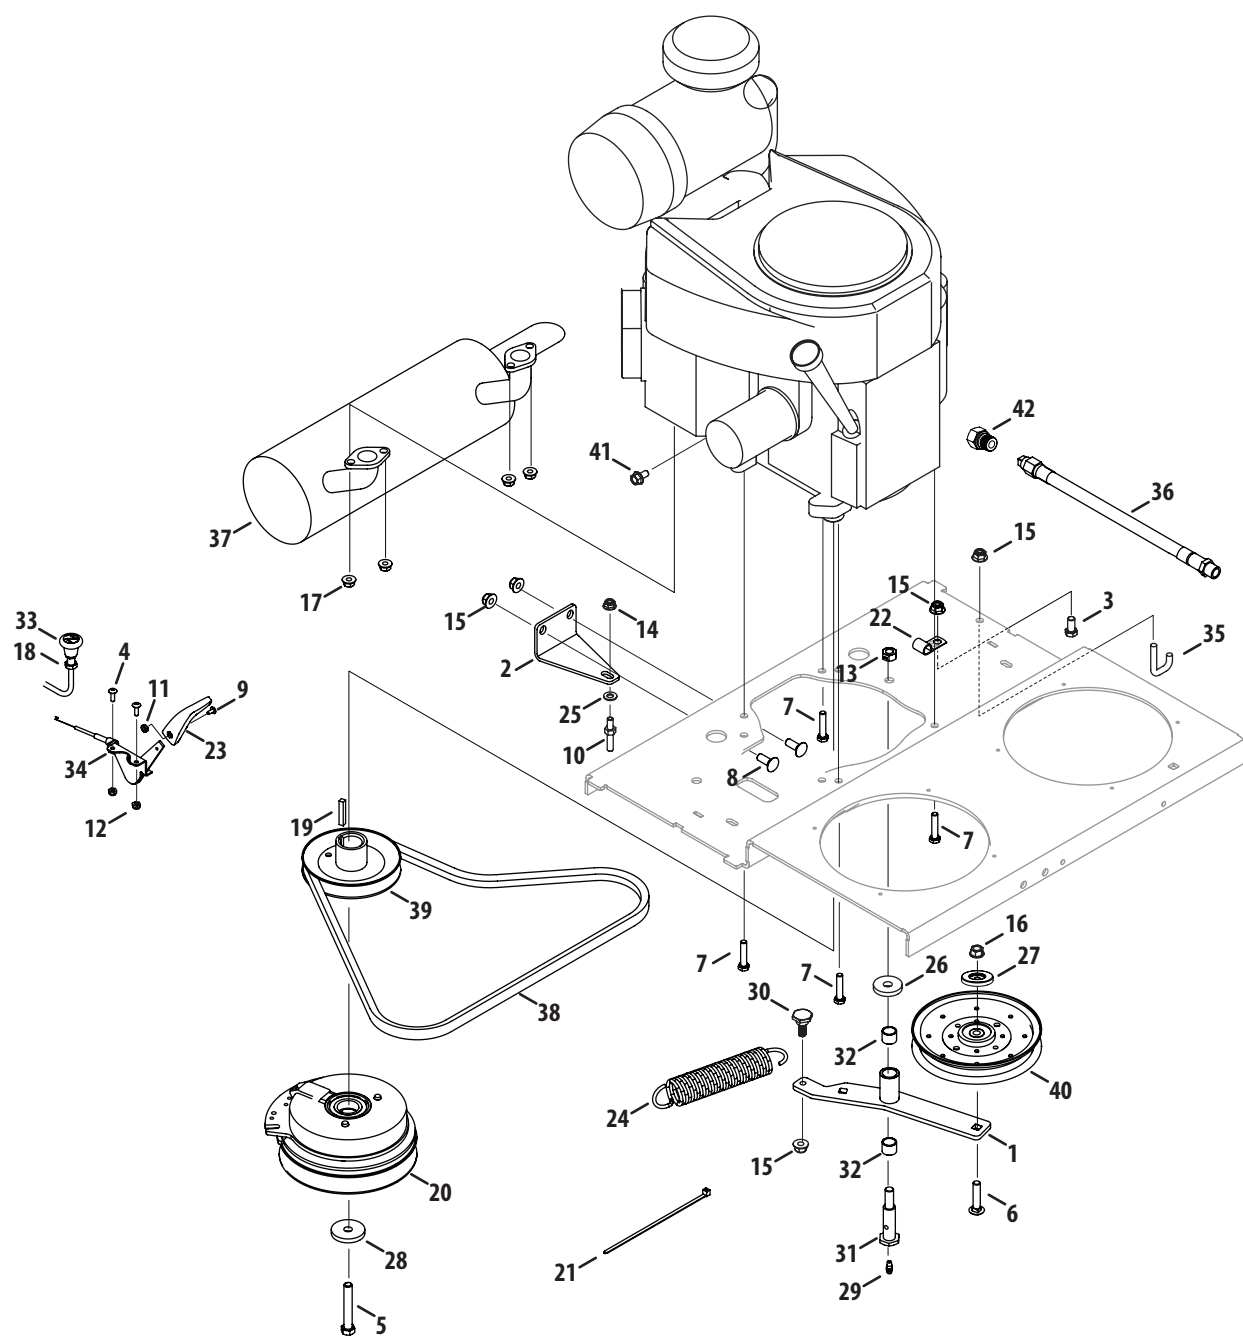

Ref.	Part Number	Description
1	680-00227A	Idler Bracket
2	703-08607	Clutch Retainer Bracket
3	710-0216	Hex Cap Screw, 3/8-16 x .75
4	710-0425	Screw, #10-24 x .625
5	710-04377	Hex Cap Screw, 7/16-20 x 2.75
6	710-05376	Carriage Bolt, 3/8-16 x 1.00
7	710-06012	Hex Cap Screw, 3/8-16 x 1.25
8	710-3168	Carriage Bolt, 3/8-16 x 1.00
9	710-3217	Screw, #8-32 x .375
10	711-1637	Stud, Pivot Ball Joint
11	712-0142	Nut, #8-32, Hex
12	712-0161	Nut, #10-24, Hexlock
13	712-0290	Nut, 7/16-14, Hexlock
14	712-04063	Nut, 5/16-18, Flangelock
15	712-04065	Nut, 3/8-16, Flangelock
16	912-0431	Nut, 3/8-16, Flangelock
17	712-04312	Nut, M8-1.25, Hexlock
18	712-0711	Jam Nut, 3/8-24
19	714-0118	Key, 1/4 x 1.50
20	917-04967	Electric PTO Clutch
21	725-0157	Cable Tie
22	726-04124	Clip, .407 x 1.80
23	731-04914	Throttle Control Knob
24	732-04915A	Extension Spring, 1.5 x 7.5
25	936-0275	Washer, .344 x .688 x .065
26	736-3017	Washer, .471 x 1.50 x .225
27	721-04516	Pulley Cap
28	736-3082A	Washer, .471 x 1.50 x .225
29	937-0146	Grease Fitting
30	738-1126	Shoulder Screw, .625 x .302, 3/8-16
31	738-3102	Shoulder Bolt, .625 x 1.947, 7/16-14
32	741-04555	bearing, .638 x .753 x .615
33	946-04812	Choke Control Cable
34	946-04840	Throttle Cable
35	747-05707	Transmission Spring Hook
36	751-10291A	Oil Drain Hose
37	751-12520A	Muffler
38	954-04320	Belt
39	756-04382	Drive Pulley
40	756-04487	Idler Pulley
41	710-04748	Hex Cap Screw, M8 x 1.25 x 16MM
42	737-04138	Hex Fitting, 1.0


54" Deck

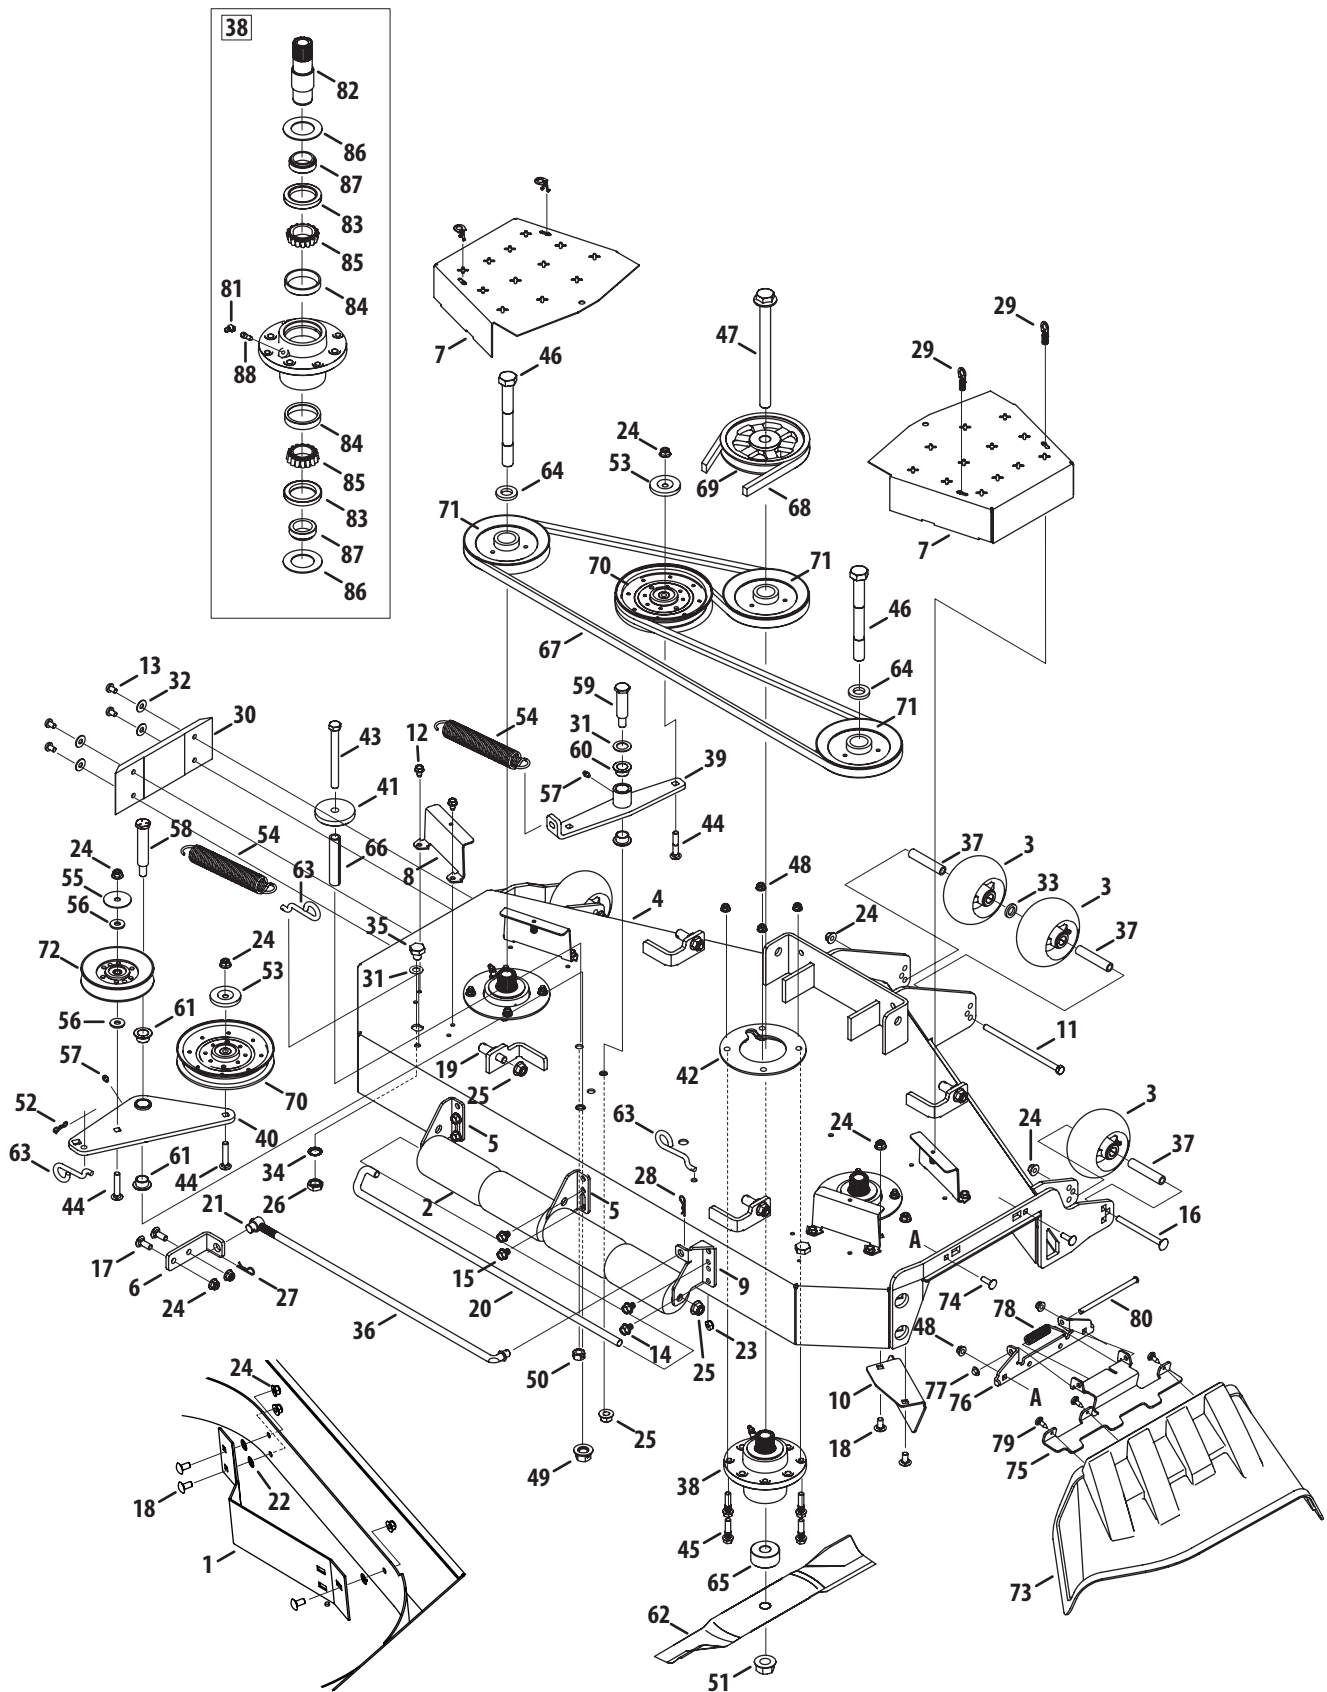

Ref.	Part Number	Description
1	02005693	Baffle, 54" Adjustment
2	631-05115	Anti-Scalp Roller Assembly
3	634-3159	Complete Wheel, 5.00 Dia.
4	680-00334	54" Deck Assembly
5	703-09137	Rear Roller Mount Bracket
6	703-09380	Deck Stabilizer Mount Bracket
7	703-09401A	Deck Belt Cover
8	703-09499A	Beck Belt Cover Bracket
9	703-09579	Rear Roller Bracket, RH
10	703-09593	Chute Baffle
11	710-04692	Hex Cap Screw, 3/8-16 x 7.25
12	710-0607	Screw, 5/16-18 x .500
13	710-06156	Screw, 5/16-18 x .500
14	710-0623	Screw, 3/8-16 x .750
15	710-0773	Screw, 3/8-16 x .500
16	710-1649	Carriage Screw, 3/8-16 x 4.50
17	710-3168	Carriage Bolt, 3/8-16 x 1.00
18	710-3178	Carriage Bolt, 3/8-16 x .750
19	711-05604	Pin, 1/2-13 x .625 x 1.2
20	711-05664	J-Hook w/ Threaded Roller
21	911-0770	Ferrule
22	712-0229	Push Nut, 3/8
23	712-0266A	Jam Lock Nut, 3/8-16
24	712-04065	Nut, 3/8-16, Flangelock
25	712-04150	Nut, 1/2-13, Flangelock
26	912-0641	Hex Nut, M16-1.5
27	914-0145	Click Pin, .092 x 1.64
28	914-04023	Internal Cotter Pin
29	726-05033	Folding Latch Panel
30	731-10336	Skid Guard Plate
31	936-0287	Washer, .793 x 1.24 x .06
32	736-0371	Flat Washer, .343 x .880 x .062
33	736-04296	Flat Washer, .632 x 1.00 x .160
34	936-0760	Lock Washer, 17 x 23.8 x 1.95
35	738-04146	Plug, Screw, M16-1.5
36	747-06273	Deck Support Rod, 1/2" Dia.
37	750-3193	Wheel Spacer
38	918-05132	Spindle Assembly
39	680-00167A	Deck Idler Arm
40	680-00319	Idler Assembly
41	703-08855	Spacer, .5375 x 2.75 x .375
42	703-09434	Spindle Support Plate
43	710-0382	Hex Cap Screw, 1/2-13 x 5.00
44	710-04157	Screw, 3/8-16 x 2.00

Ref.	Part Number	Description
45	710-04831A	Bolt, 5/16-18 x 1.25
46	710-05387	Hex Cap Screw, 3/4-16 x 7.00
47	710-05388	Hex Cap Screw, 3/4-16 x 9.00
48	712-04063	Nut, 5/16-18, Flangelock
49	712-04327	Nut, 5/8-18, Flangelock
50	712-3022	Nut, 1/2-13, Hexlock
51	712-3078	Nut, 3/4-16, Flangelock
52	714-04040	Bow Tie Cotter Pin
53	721-04516	Pulley Cap
54	732-04911	Extension Spring, 1.248 x 8.5
55	736-3040	Washer, .406 x 1.92 x .060
56	736-3052	Washer, .406 x 1.00 x .105
57	937-0146	Grease Fitting
58	738-05030	Shoulder Bolt, 1.0 x 3.15, 5/8-18
59	938-3110	Shoulder Bolt, .750 x 2.23, 1/2-13
60	741-0338	Flange Bearing, .75 x .52
61	741-04552	Flange Bearing, 1.00 x .75
62	942-04416	Hi-Lift Blade, 19.0
63	747-05658	Spring Rod Hook
64	750-05553	Spacer, .812 x .218
65	750-05617	Spacer, .760 x 2.00 x .925
66	750-3213	Spacer, .405 x .75 x 3.875
67	954-04327	Deck Belt
68	954-04328	V-Belt
69	756-04485	Pulley, 6.96 OD x .750 ID
70	756-04487	Idler Pulley
71	756-04500	Spindle Pulley
72	756-04522	Idler Pulley
73	631-05176	Discharge Chute Assembly
74	710-0276	Carriage Bolt, 5/16-18 x 1.00
75	703-09625A	Chute Bracket
76	703-09626	Chute Bracket
77	726-04009	Push Cap
78	732-05128A	Torsion Spring
79	738-04549A	Shoulder Screw, 1/4-20
80	747-06318	Chute Rod
81	737-3001	Grease Fitting, 45 degree, 1/4-28
82	911-05758	Spindle Shaft
83	921-0385	Seal, Oil
84	941-3050	Cup Bearing
85	941-3051	Cone Bearing
86	736-04642	Washer, 1.50 x 2.52 x .075
87	750-05695	Ring, Seal
88	737-04373	Straight Adapter Fitting

60" Deck

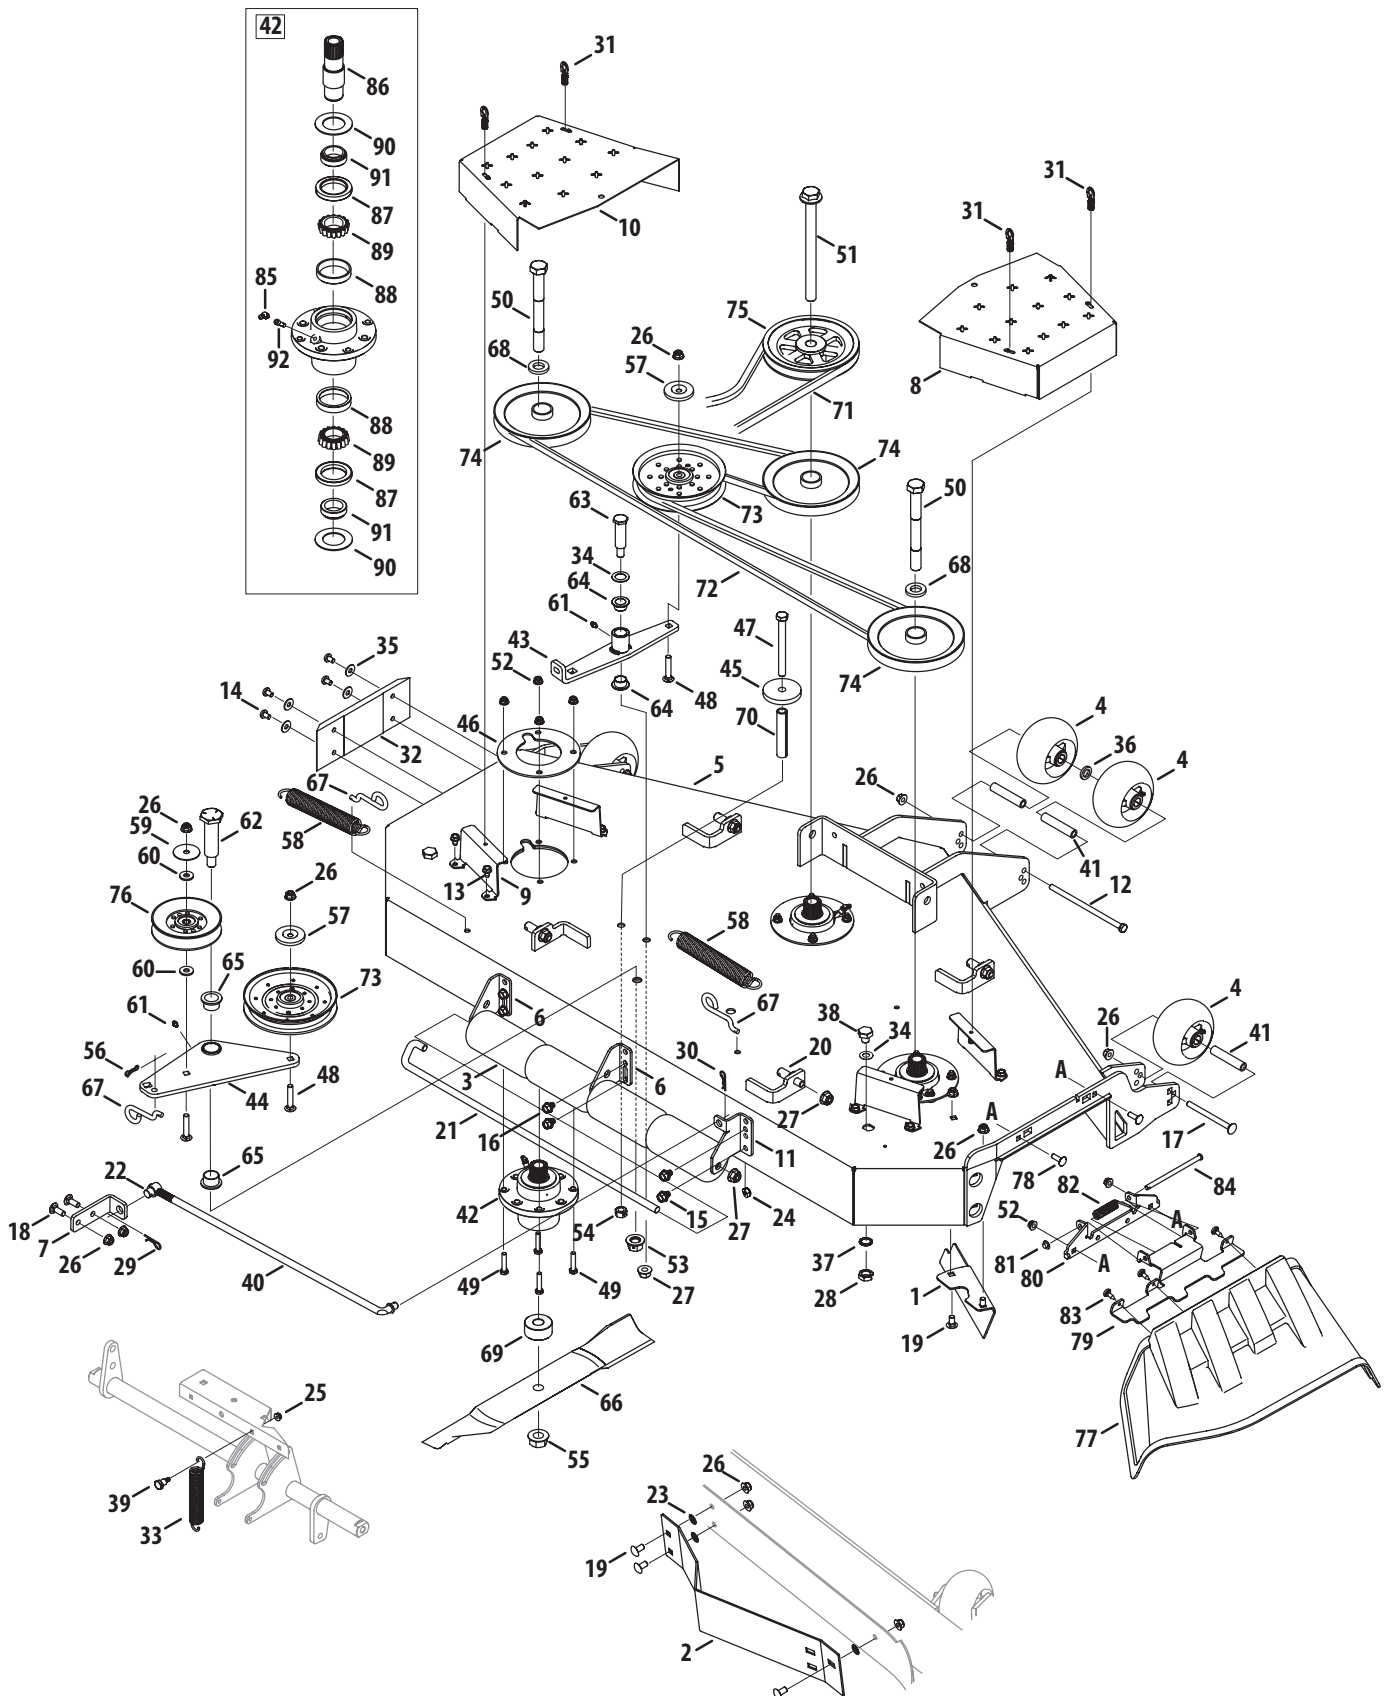


Ref.	Part Number	Description	Ref.	Part Number	Description
1	02005195	Chute Baffle	41	750-3193	Wheel Spacer
2	02005694	Baffle, 60" Adjustment	42	918-05132	Spindle Assembly
3	631-05115	Anti-Scalp Roller Assembly	43	680-00167A	Deck Idler Arm
4	634-3159	Complete Wheel, 5.00 Dia.	44	680-00319	Idler Assembly
5	680-00329	60" Deck Assembly	45	703-08855	Spacer, .5375 x 2.75 x .375
6	703-09137	Rear Roller Mount Bracket	46	703-09434	Spindle Support Plate
7	703-09380	Deck Stabilizer Mount Bracket	47	710-0382	Hex Cap Screw, 1/2-13 x 5.00
8	703-09401A	Deck Belt Cover, RH	48	710-04157	Screw, 3/8-16 x 2.00
9	703-09499A	Beck Belt Cover Bracket	49	710-04831A	Bolt, 5/16-18 x 1.25
10	703-09502A	Deck Belt Cover, LH	50	710-05387	Hex Cap Screw, 3/4-16 x 7.00
11	703-09579	Rear Roller Bracket, RH	51	710-05388	Hex Cap Screw, 3/4-16 x 9.00
12	710-04692	Hex Cap Screw, 3/8-16 x 7.25	52	712-04063	Nut, 5/16-18, Flangelock
13	710-0607	Screw, 5/16-18 x .500	53	712-04327	Nut, 5/8-18, Flangelock
14	710-06156	Screw, 5/16-18 x .500	54	712-3022	Nut, 1/2-13, Hexlock
15	710-0623	Screw, 3/8-16 x .750	55	712-3078	Nut, 3/4-16, Flangelock
16	710-0773	Screw, 3/8-16 x .500	56	714-04040	Bow Tie Cotter Pin
17	710-1649	Carriage Screw, 3/8-16 x 4.50	57	721-04516	Pulley Cap
18	710-3168	Carriage Bolt, 3/8-16 x 1.00	58	732-04911	Extension Spring, 1.248 x 8.5
19	710-3178	Carriage Bolt, 3/8-16 x .750	59	736-3040	Washer, .406 x 1.92 x .060
20	711-05604	Pin, 1/2-13 x .625 x 1.2	60	736-3052	Washer, .406 x 1.00 x .105
21	711-05664	J-Hook w/ Threaded Roller	61	937-0146	Grease Fitting
22	911-0770	Ferrule	62	738-05030	Shoulder Bolt, 1.0 x 3.15, 5/8-18
23	712-0229	Push Nut, 3/8	63	938-3110	Shoulder Bolt, .750 x 2.23, 1/2-13
24	712-0266A	Jam Lock Nut, 3/8-16	64	741-0338	Flange Bearing, .75 x .52
25	712-04064	Nut, 1/4-20, Flangelock	65	741-04552	Flange Bearing, 1.00 x .75
26	712-04065	Nut, 3/8-16, Flangelock	66	942-04415	Hi-Lift Blade, 21.0
27	712-04150	Nut, 1/2-13, Flangelock	67	747-05658	Spring Rod Hook
28	912-0641	Hex Nut, M16-1.5	68	750-05553	Spacer, .812 x .218
29	914-0145	Click Pin, .092 x 1.64	69	750-05617	Spacer, .760 x 2.00 x .925
30	914-04023	Internal Cotter Pin	70	750-3213	Spacer, .405 x .75 x 3.875
31	726-05033	Folding Latch Panel	71	954-04296	V-Belt
32	731-10336	Skid Guard Plate	72	954-04319	Deck Belt
33	732-04929	Extension Spring, .969 x 6.180	73	756-04487	Idler Pulley
34	936-0287	Washer, .793 x 1.24 x .06	74	756-04489	Spindle Pulley
35	736-0371	Flat Washer, .343 x .880 x .062	75	756-04496A	Drive Pulley
36	736-04296	Flat Washer, .632 x 1.00 x .160	76	756-04522	Idler Pulley
37	936-0760	Lock Washer, 17 x 23.8 x 1.95	77	631-05176	Discharge Chute Assembly
38	738-04146	Plug, Screw, M16-1.5	78	710-0276	Carriage Bolt, 5/16-18 x 1.00
39	738-04222	Shoulder Bolt, .437 x .50, 1/4-20	79	703-09625A	Chute Bracket
40	747-06273	Deck Support Rod, 1/2" Dia.	80	703-09626	Chute Bracket

Continued on next page

60" Deck

Ref.	Part Number	Description
81	726-04009	Push Cap
82	732-05128A	Torsion Spring
83	738-04549A	Shoulder Screw, 1/4-20
84	747-06318	Chute Rod
85	737-3001	Grease Fitting, 45 degree, 1/4-28
86	911-05758	Spindle Shaft
87	921-0385	Seal, Oil
88	941-3050	Cup Bearing
89	941-3051	Cone Bearing
90	736-04642	Washer, 1.50 x 2.52 x .075
91	750-05695	Ring, Seal
92	737-04373	Straight Adapter Fitting


This page left intentionally blank.

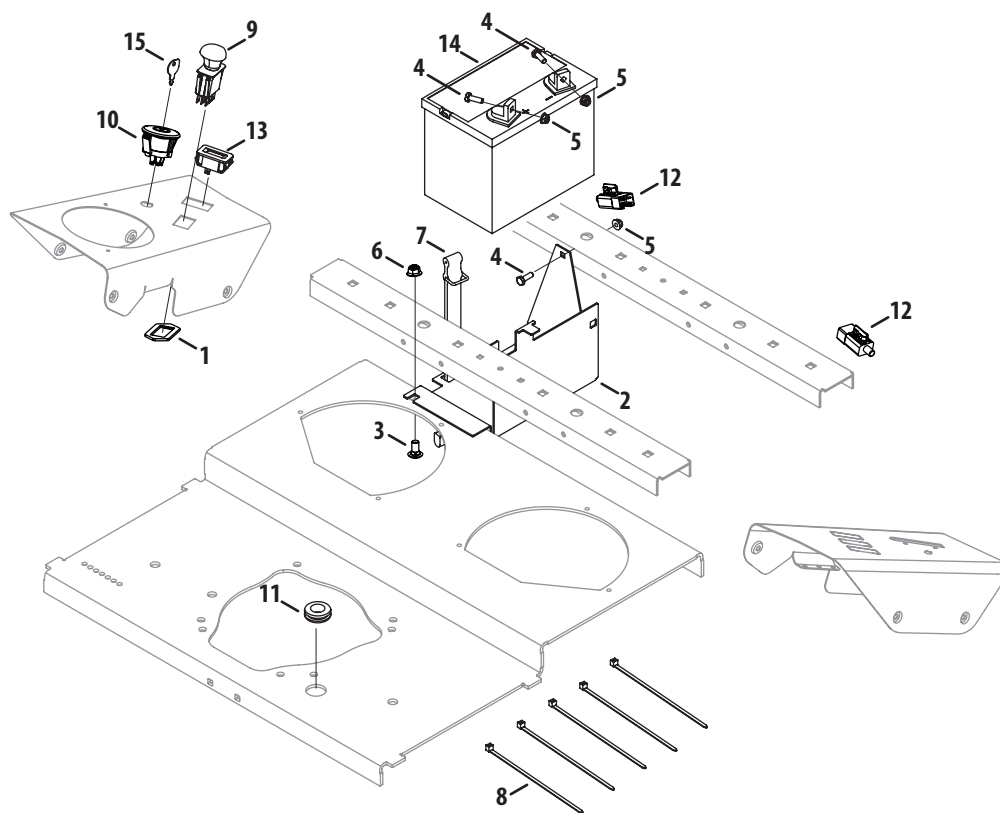


Ref.	Part Number	Description
1	01009905	PTO Switch Bracket
2	703-07855	Battery Bracket
3	710-0389	Carriage Bolt, 3/8-16 x .750
4	710-3015	Hex Cap Screw, 1/4-20 x .75
5	712-04064	Nut, 1/4-20, Flangelock
6	712-04065	Nut, 3/8-16, Flangelock
7	723-3064	Battery Strap
8	725-0157	Cable Tie
9	925-04174	Electric PTO Switch

Ref.	Part Number	Description
10	925-04228	Key Switch
11	735-04285	Rubber Grommet, .75 x 1.062 x .50
12	925-3164A	Plunger Switch, NO/NC
13	725-05438	Hour Meter
14	925-1707D	Battery
15	625-05000	Key, Assembly
NS	725-06155	Wire Harness
NS	929-04195	Hour Meter Harness
NS	02002822	Wire Harness Adaptor, (Kaw. only)

Electrical Schematic

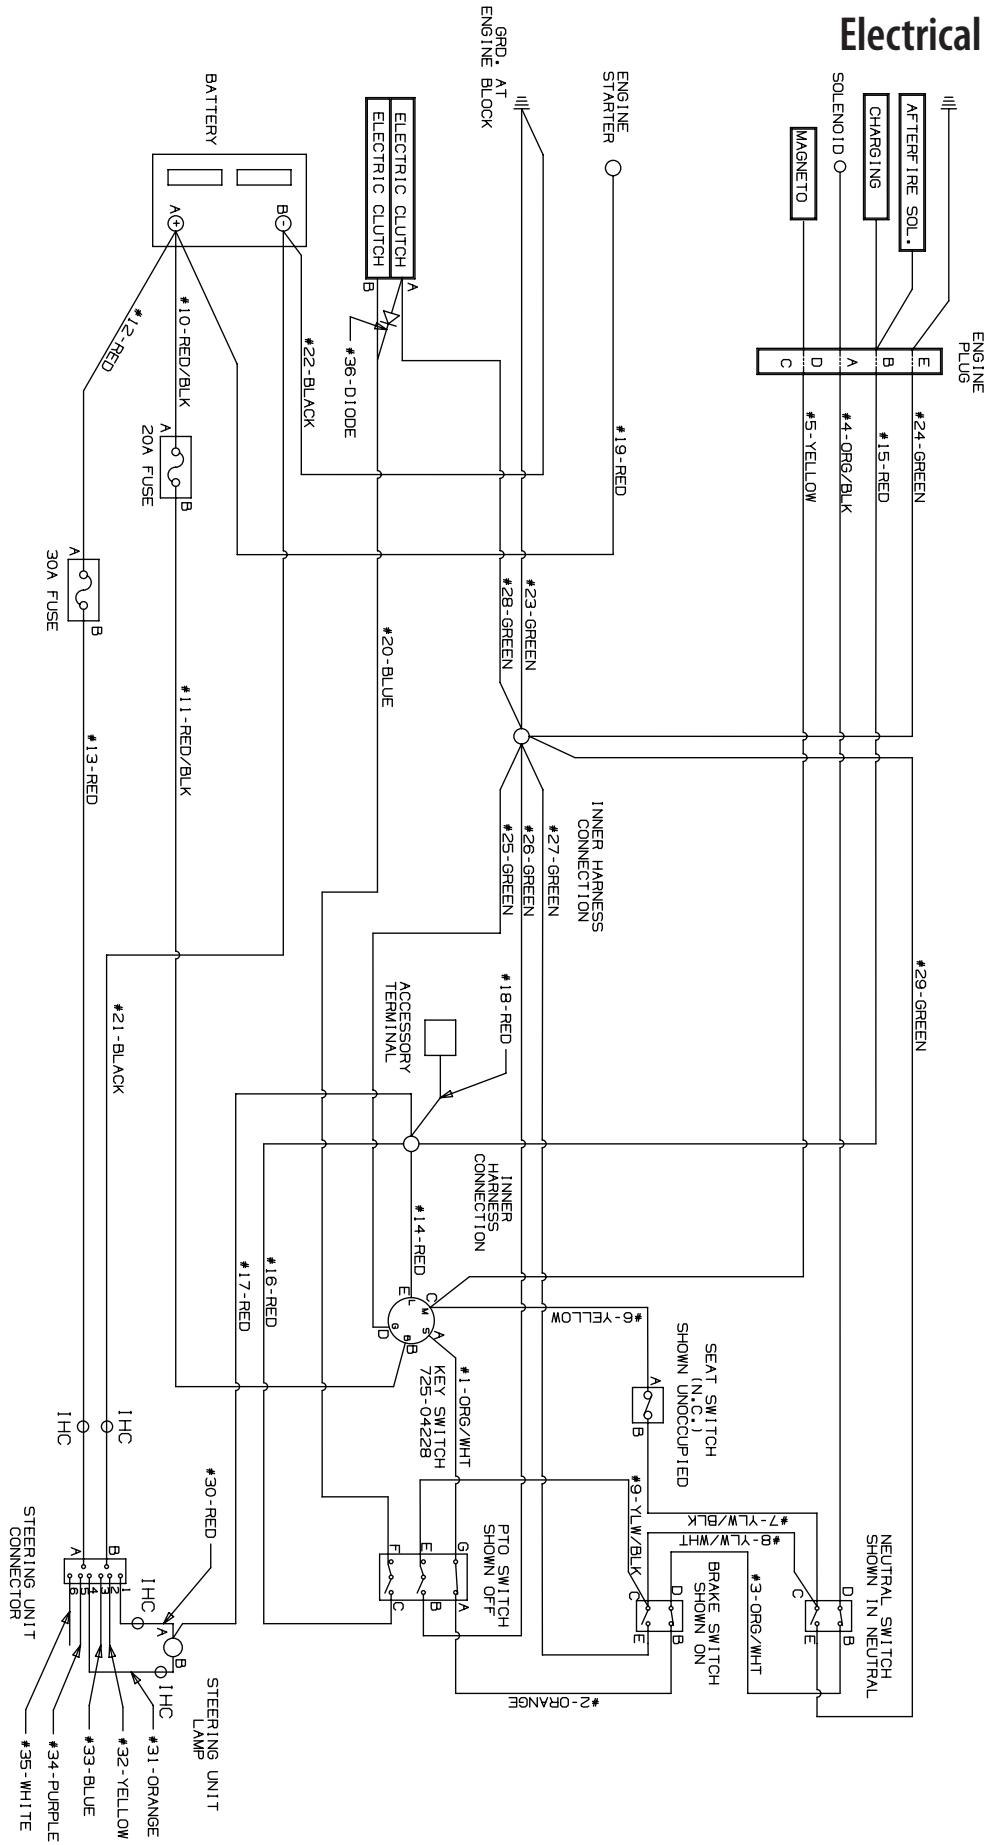


TANK SZ Labels

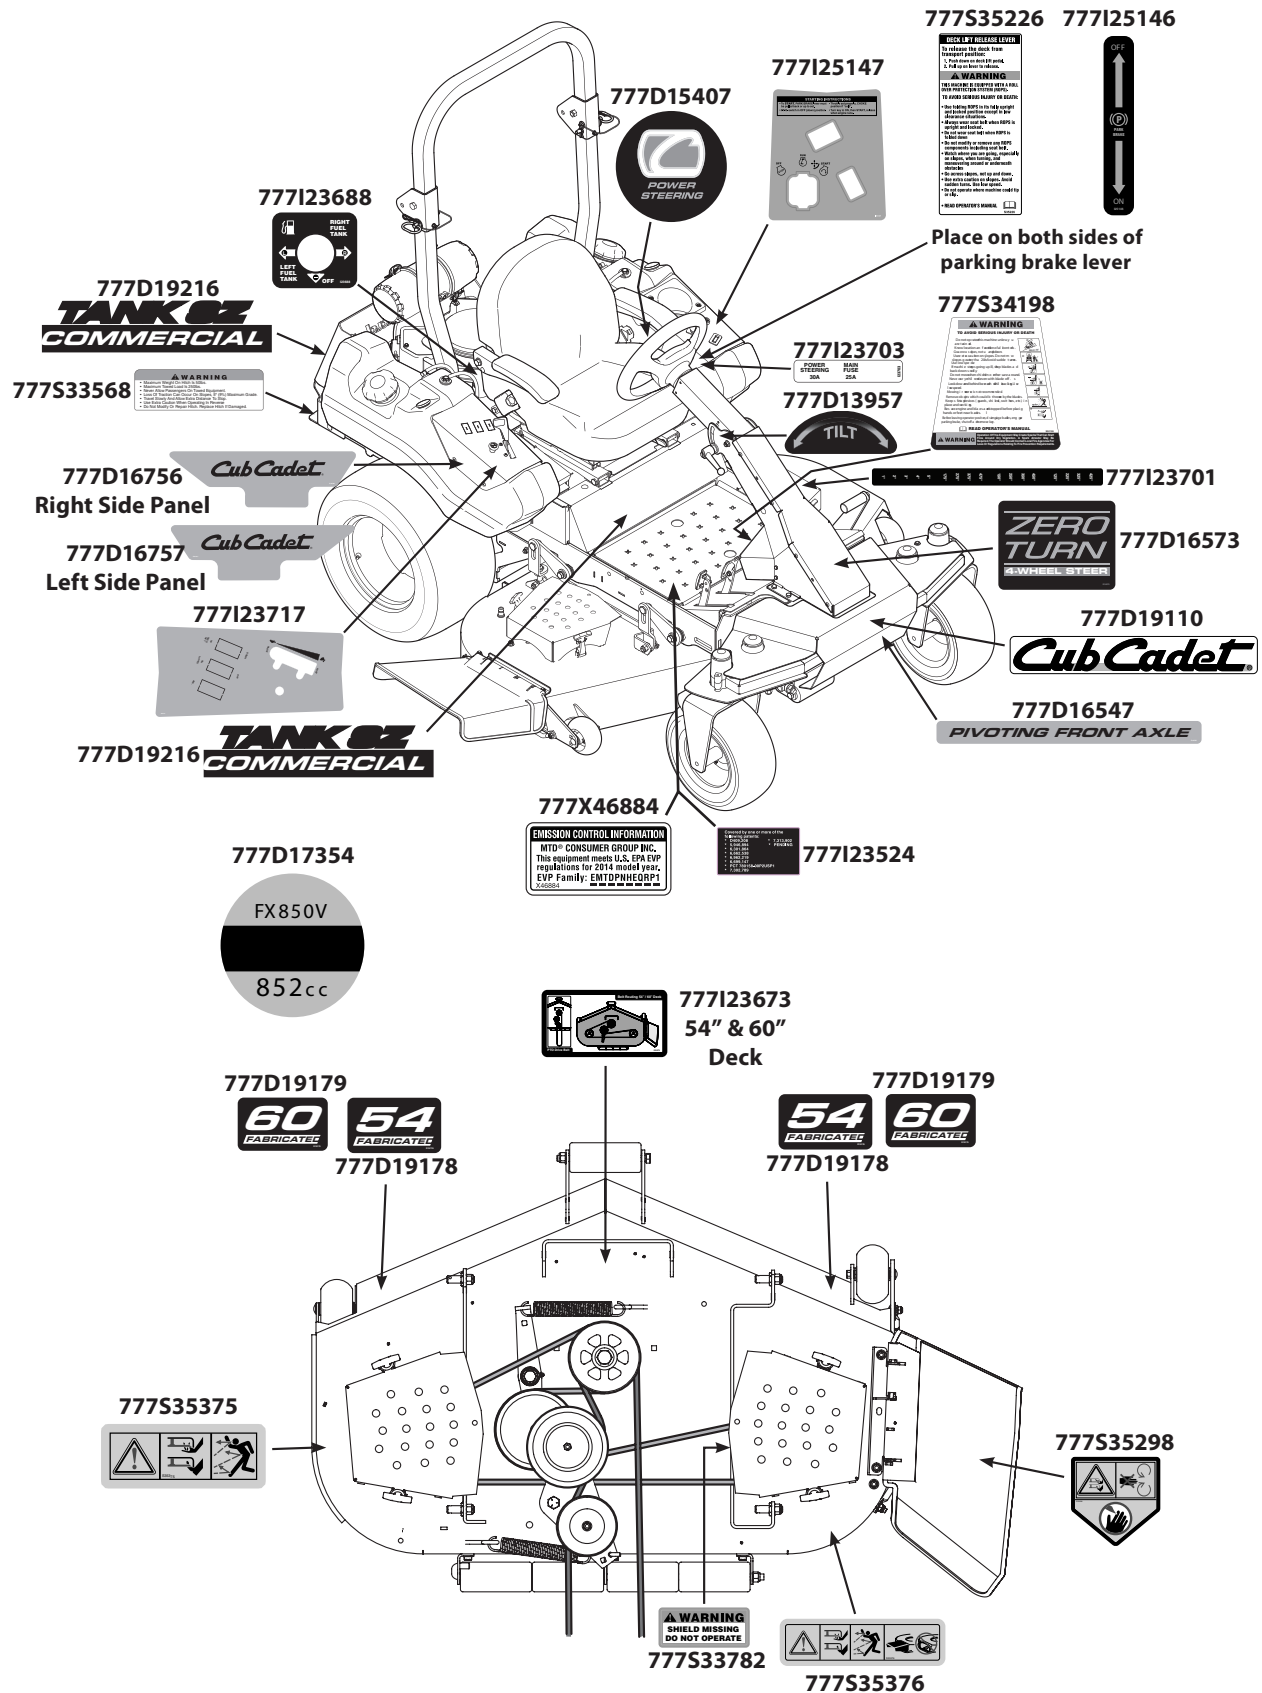

[illegible]


Kawasaki FX850V Cylinder/Crankcase

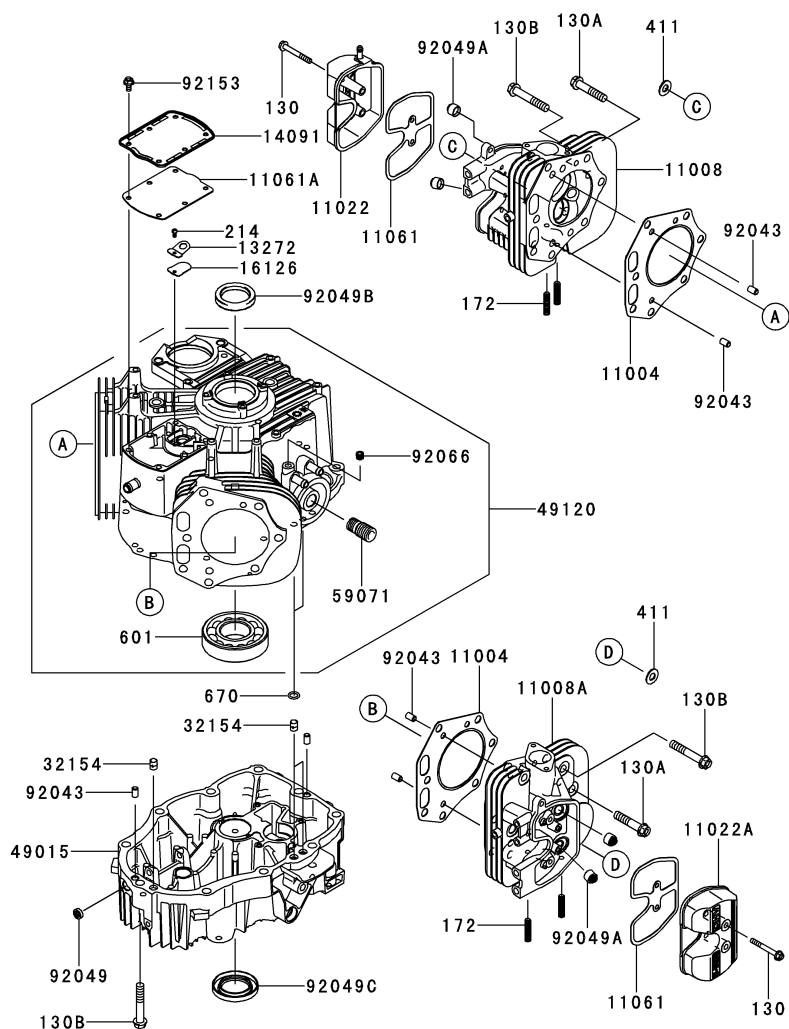

Ref.	Part Number	Description
11004	KM-11004-7025	Gasket-Head
11008	KM-11008-7036	Head-Comp-Cylinder
11008A	KM-11008-7037	Head-Comp-Cylinder
11022	KM-11022-6008	Case-Rocker
11022A	KM-11022-7025	Case Rocker
11061	KM-11061-0899	Gasket, Case Rocker
11061A	KM-11061-7081	Gasket, Breather
13272	KM-13272-7004	Plate, Breather
14091	KM-14091-7060	Cover, Breather
16126	KM-16126-7020	Valve, Breather
32154	KM-32154-7019	Pipe
49015	KM-49015-7088	Cover-Crankcase
49120	KM-49120-0724	Crankcase-Comp
59071	KM-59071-2079	Joint
92043	KM-92043-7024	Pin


Ref.	Part Number	Description
92049	KM-92049-7019	Seal-Oil,So 8x14x5 HS
92049A	KM-92049-7020	Seal, Oil, 7x15x13
92049B	KM-92049-7024	Seal-Oil,SD 40x54x9 R HS
92049C	KM-92049-7026	Seal-Oil,SD 40x62x8 L VS
92066	KM-92066-7026	Plug
92153	KM-92153-7043	Bolt, 6x12
130	KM-130BA0650	Bolt-Flanged, 6x50
130A	KM-130CA1050	Bolt-Flanged, 10x50
130B	KM-130CA1060	Bolt-Flanged, 10x60
172	KM-172BA0818	Bolt-Stud, 8x18
214	KM-214AA0408	Screw-Pan+-,4x8
411	KM-411AA1000	Washer, 10MM
601	KM-601A6308	Bearing-Ball
670	KM-670B2011	O Ring, 11MM

Kawasaki FX850V Piston/Crankshaft

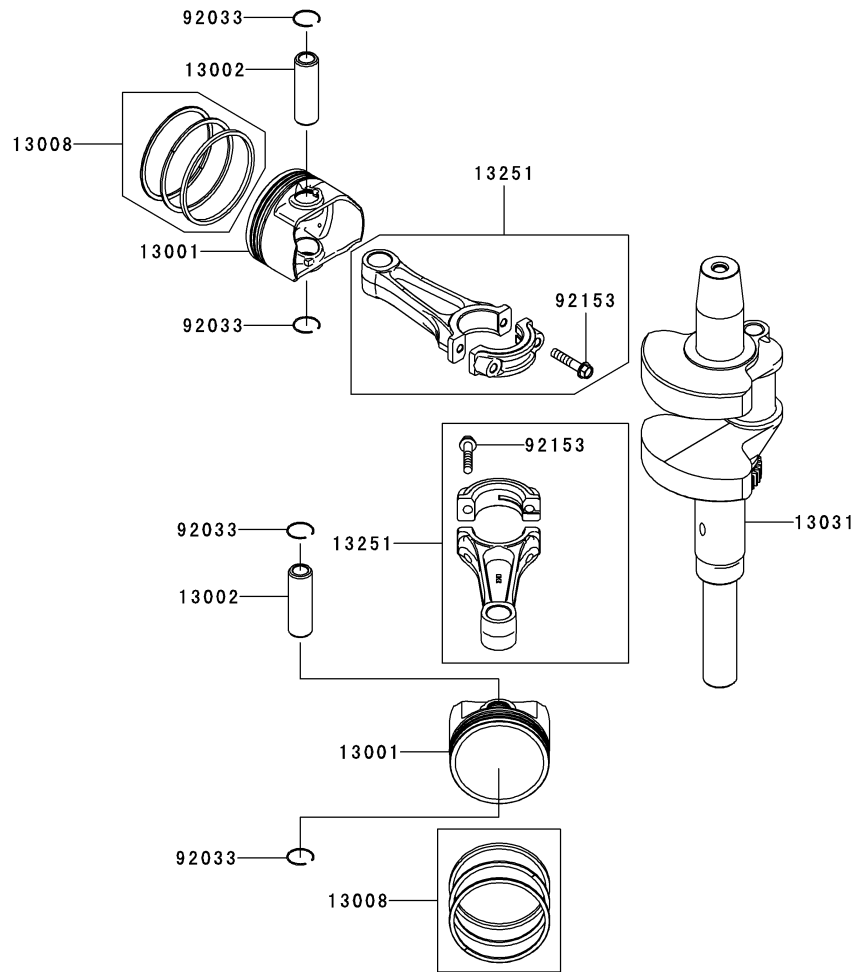


Ref.	Part Number	Description
13001	KM-13001-7025	Piston-Engine
13002	KM-13002-7005	Pin-Piston
13008	KM-13008-6069	Ring-Set-Piston
13031	KM-13031-7079	Crankshaft-Comp
13251	KM-13251-7031	Rod-Assy-Connecting
92033	KM-92033-7017	Ring-Snap
92153	KM-92153-2054	Bolt, 7x35.2

Kawasaki FX850V Valve/Camshaft

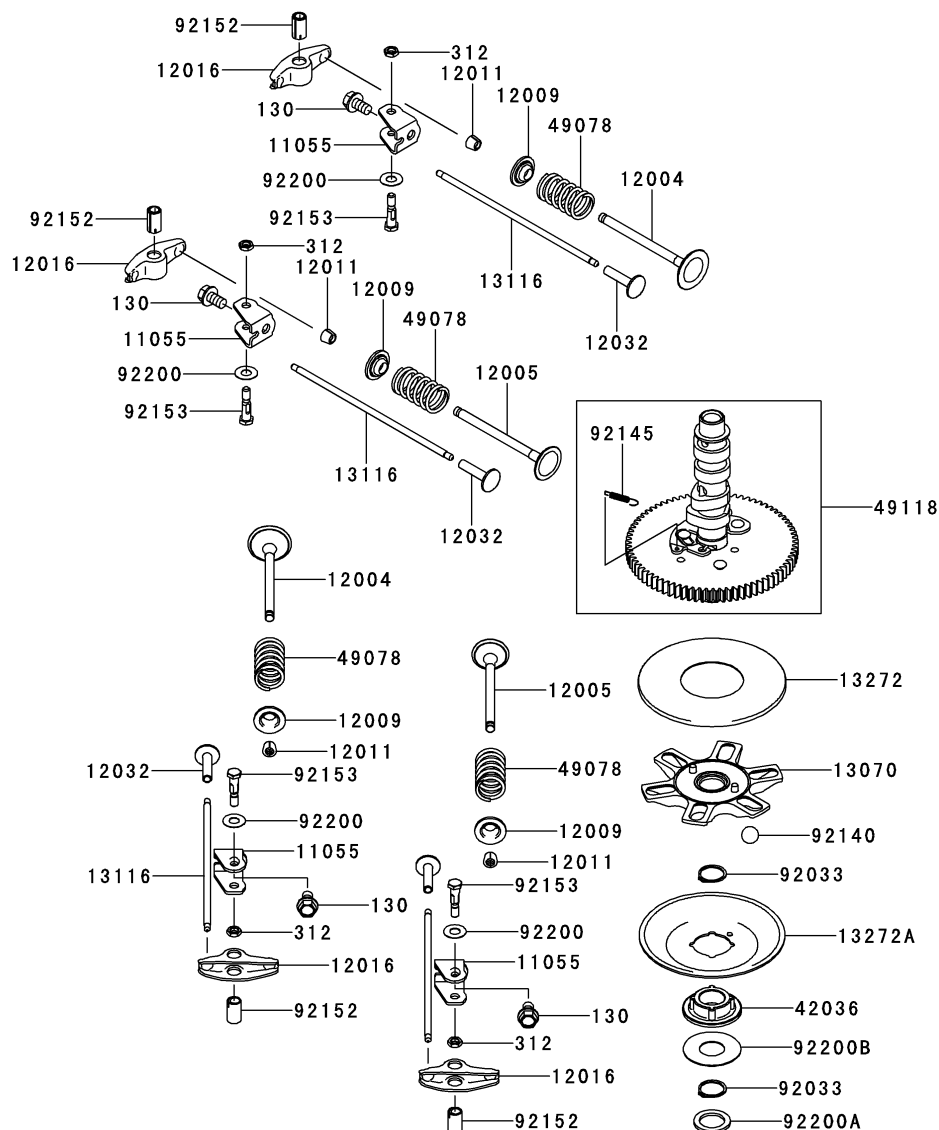

Ref.	Part Number	Description
11055	KM-11055-7009	Bracket
12004	KM-12004-7010	Valve-Intake
12005	KM-12005-0711	Valve-Exhaust
12009	KM-12009-7004	Retainer-Valve Spring
12011	KM-12011-2052	Collet
12016	KM-12016-7016	Arm-Rocker
12032	KM-12032-7001	Tappet
13070	KM-13070-7016	Guide
13116	KM-13116-7006	Rod-Push
13272	KM-13272-7002	Plate
13272A	KM-13272-7003	Plate,Governor
42036	KM-42036-7019	Sleeve


Ref.	Part Number	Description
49078	KM-49078-7008	Spring-Engine Valve
49118	KM-49118-7026	Camshaft-Comp
92033	KM-92033-7012	Ring-Snap
92140	KM-92140-7005	Ball
92145	KM-92145-7001	Spring
92152	KM-92152-1689	Collar
92153	KM-92153-7100	Bolt, 6x29.5
92200	KM-92200-2151	Washer, 8.1x18x0.5
92200A	KM-92200-7044	Washer, 20.3x29x2.28
92200B	KM-92200-7045	Washer, 20x46x0.91
130	KM-130AA0814	Bolt-Flanged, 8x14
312	KM-312AA0600	Nut-Hex, 6MM

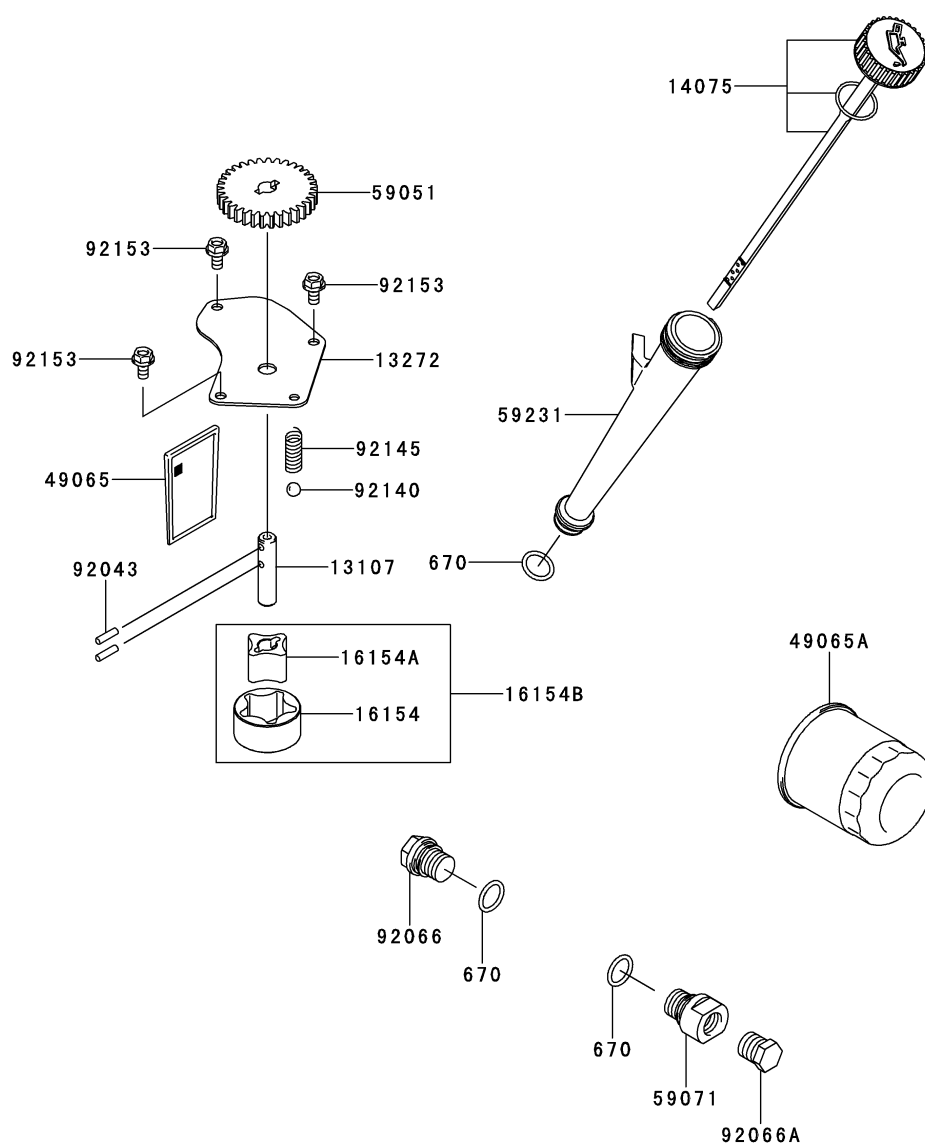

Ref.	Part Number	Description
13107	KM-13107-7009	Shaft
13272	KM-13272-7005	Plate
14075	KM-14075-7012	Cap-Assy
16154	KM-16154-1075	Rotor-Pump,Outer
16154A	KM-16154-1076	Rotor-Pump,Inner
16154B	KM-16154-1079	Rotor-Pump
49065	KM-49065-7004	Filter Oil
49065A	KM-49065-7010	Filter Oil
59051	KM-59051-7011	Gear-Spur


Ref.	Part Number	Description
59071	KM-59071-7004	Joint
59231	KM-59231-7014	Filler
92043	KM-92043-7003	Pin
92066	KM-92066-7003	Plug
92066A	KM-92066-7006	Plug
92140	KM-92140-7003	Ball
92145	KM-92145-7002	Spring
92153	KM-92153-7043	Bolt, 6x12
670	KM-670D2016	O-Ring, 16MM

Kawasaki FX850V Cooling Equipment

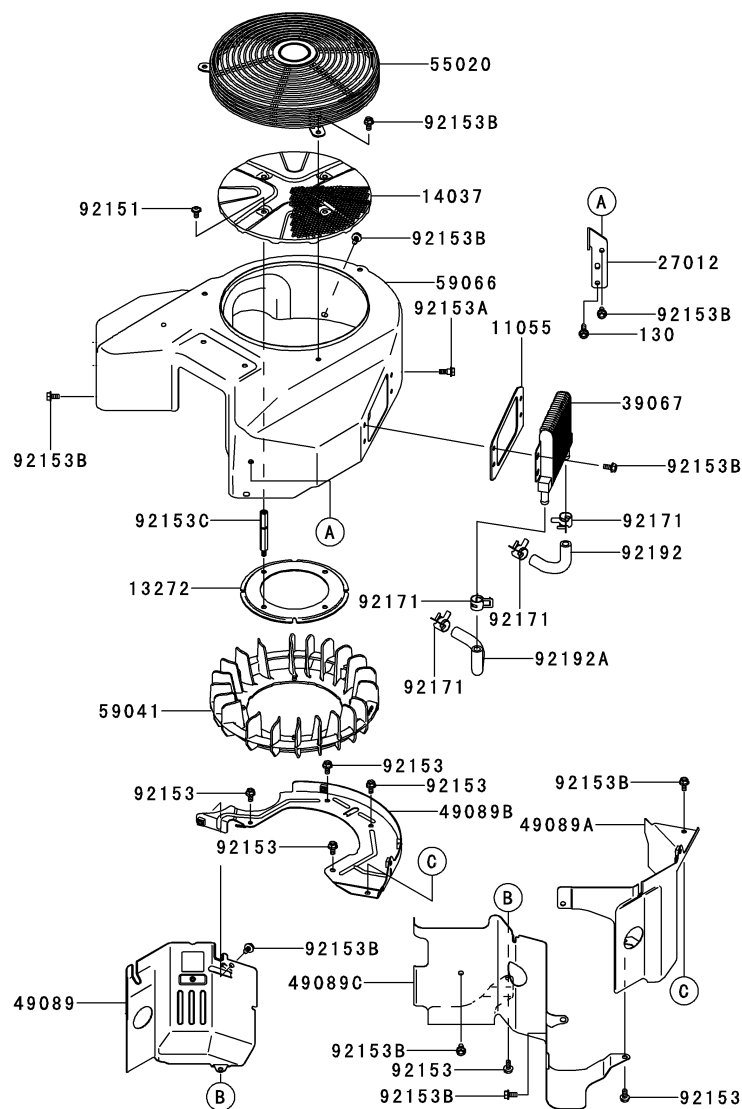

Ref.	Part Number	Description
11055	KM-11055-7005	Bracket
13272	KM-13272-7006	Plate, Fan
14037	KM-14037-70299H	Screen
27012	KM-27012-7009	Hook, Lift
39067	KM-39067-7007	Cooler-Oil
49089	KM-490897064753	Shroud-Engine
49089A	KM-490897065753	Shroud-Engine
49089B	KM-49089-7066	Shroud-Engine, Rear
49089C	KM-490897067753	Shroud-Engine, V-Bank
55020	KM-55020-70169H	Guard
59041	KM-59041-7019	Fan



Ref.	Part Number	Description
59066	KM-590667042753	Housing-Fan
92151	KM-92151-7012	Bolt, 6x12
92153	KM-92153-0010	Bolt
92153A	KM-92153-7007	Bolt
92153B	KM-92153-7043	Bolt, 6x12
92153C	KM-92153-7101	Bolt
92171	KM-92171-7015	Clamp
92192	KM-92192-7089	Tube
92192A	KM-92192-7090	Tube
130	KM-130AA0620	Bolt-Flanged, 6x20

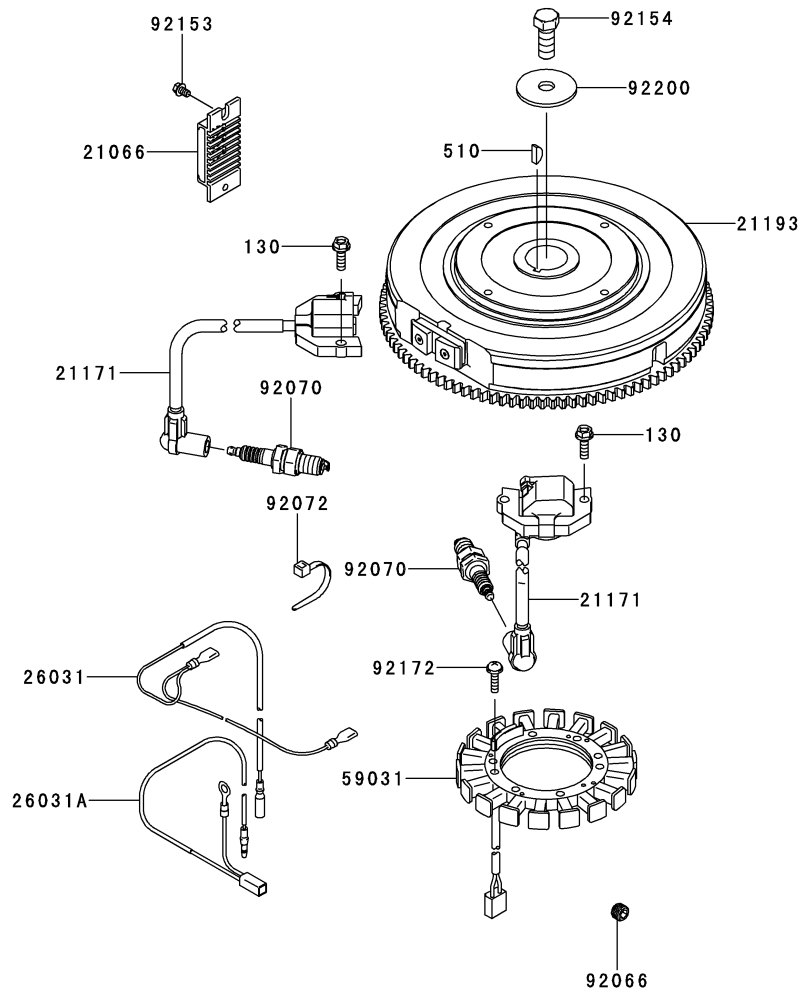

Ref.	Part Number	Description
21066	KM-21066-7011	Regulator-Voltage
21171	KM-21171-0711	Coil-Assy-Ignition
21193	KM-21193-7049	Flywheel-Assy
26031	KM-26031-7033	Harness
26031A	KM-26031-7034	Harness
59031	KM-59031-7015	Coil-Charging
92066	KM-92066-7026	Plug
92070	KM-BPR4ES	Plug-Spark, RCJ8Y, Solid

Ref.	Part Number	Description
92072	KM-92072-7003	Band
92153	KM-92153-7029	Bolt
92154	KM-92154-7003	Bolt, 12x30
92172	KM-92172-7018	Screw, 5x20
92200	KM-92200-7040	Washer, 12.2x46x3
130	KM-130AA0620	Bolt-Flanged, 6x20
510	KM-510A5100	Key-Woodruff


Kawasaki FX850V Carburetor

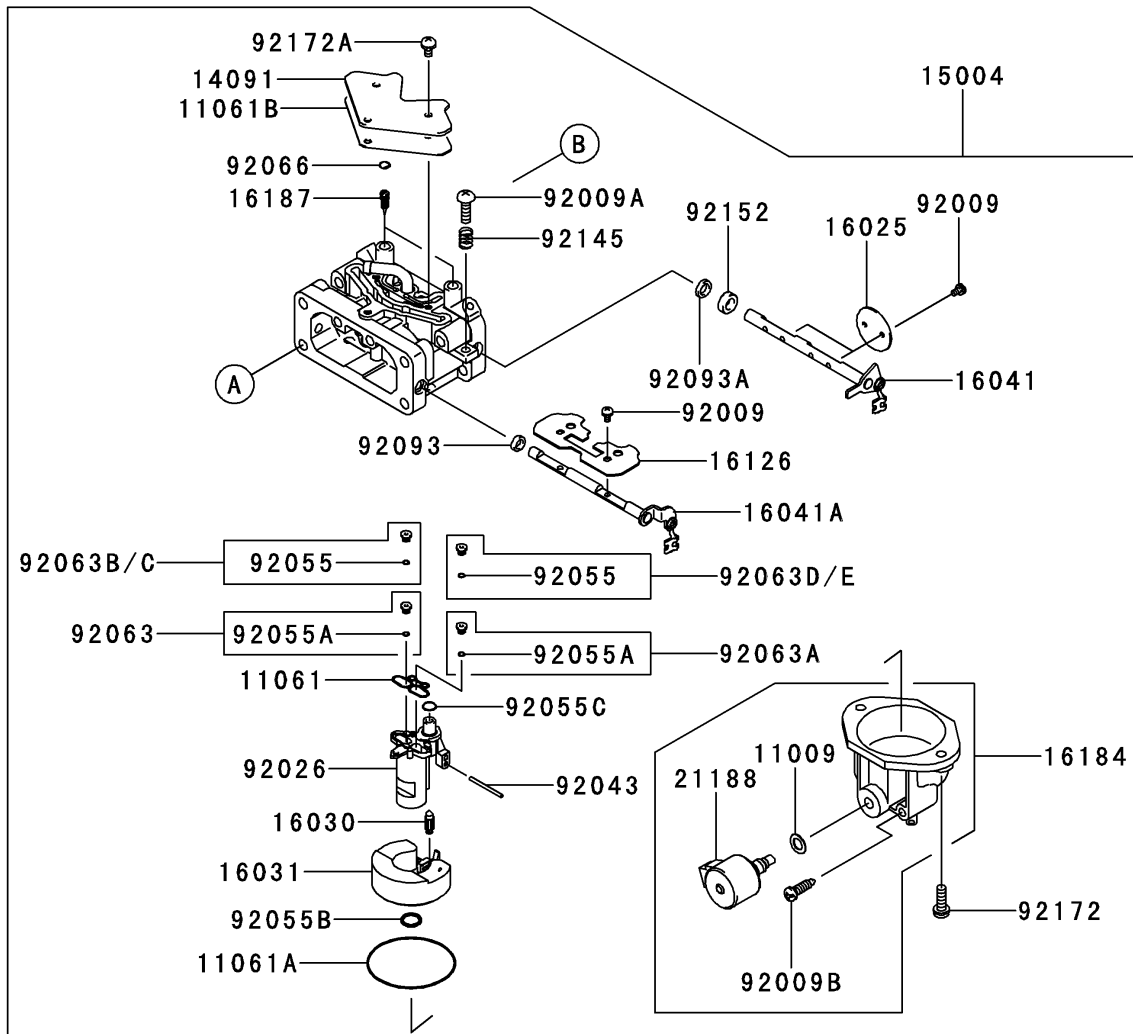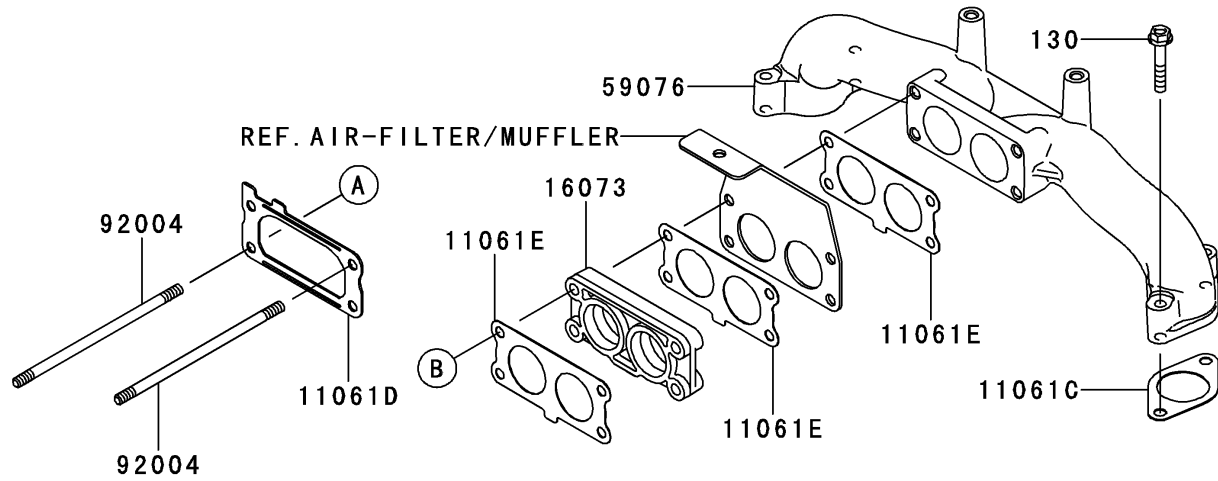

Ref.	Part Number	Description
11009	KM-11009-2056	Gasket
11061	KM-11061-7037	Gasket
11061A	KM-11061-7038	Gasket
11061B	KM-11061-7039	Gasket
11061C	KM-11061-7070	Gasket, Head/Manifold
11061D	KM-11061-7091	Gasket, Carburetor/Pipe
11061E	KM-11061-7092	Gasket, Carburetor/Manifold
14091	KM-14091-7031	Cover
15004	KM-15004-0749	Carburetor - Assy
16025	KM-16025-7010	Valve-Throttle
16030	KM-16030-7004	Valve-Float
16031	KM-16031-7003	Float
16041	KM-16041-7025	Shaft-Carburetor
16041A	KM-16041-7039	Shaft-Carburetor
16073	KM-16073-7011	Insulator
16126	KM-16126-7021	Valve
16184	KM-16184-7023	Chamber - Assy - Float
16187	KM-16187-7005	Needle-Jet
21188	KM-21188-7003	Solenoid
59076	KM-59076-7013	Manifold-Intake
92004	KM-92004-7028	Stud, 6x120
92009	KM-92009-7003	Screw
92009A	KM-92009-7004	Screw

Ref.	Part Number	Description
92009B	KM-92009-7006	Screw, Drain
92026	KM-92026-7024	Spacer
92043	KM-92043-7014	Pin
92055	KM-92055-7013	Ring-O
92055A	KM-92055-7013	Ring-O
92055B	KM-92055-7016	Ring-O
92055C	KM-92055-7024	Ring-O
92063	KM-92063-7110	Jet-Main, #118
92063A	KM-92063-7111	Jet-Main, #120
92063B	KM-92063-7135	Jet-Main, #115
92063C	KM-92063-7136	Jet-Main, #112
92063D	KM-92063-7137	Jet-Main, #117
92063E	KM-92063-7138	Jet-Main, #114
92066	KM-92066-7009	Plug, Expansion
92093	KM-92093-7001	Seal
92093A	KM-92093-7002	Seal
92145	KM-92145-7010	Spring
92145A	KM-92145-7011	Spring
92152	KM-92152-7005	Collar
92172	KM-92172-7005	Screw
92172A	KM-92172-7006	Screw
130	KM-130AA0635	Bolt-Flanged, 6x35


Kawasaki FX850V Control Equipment

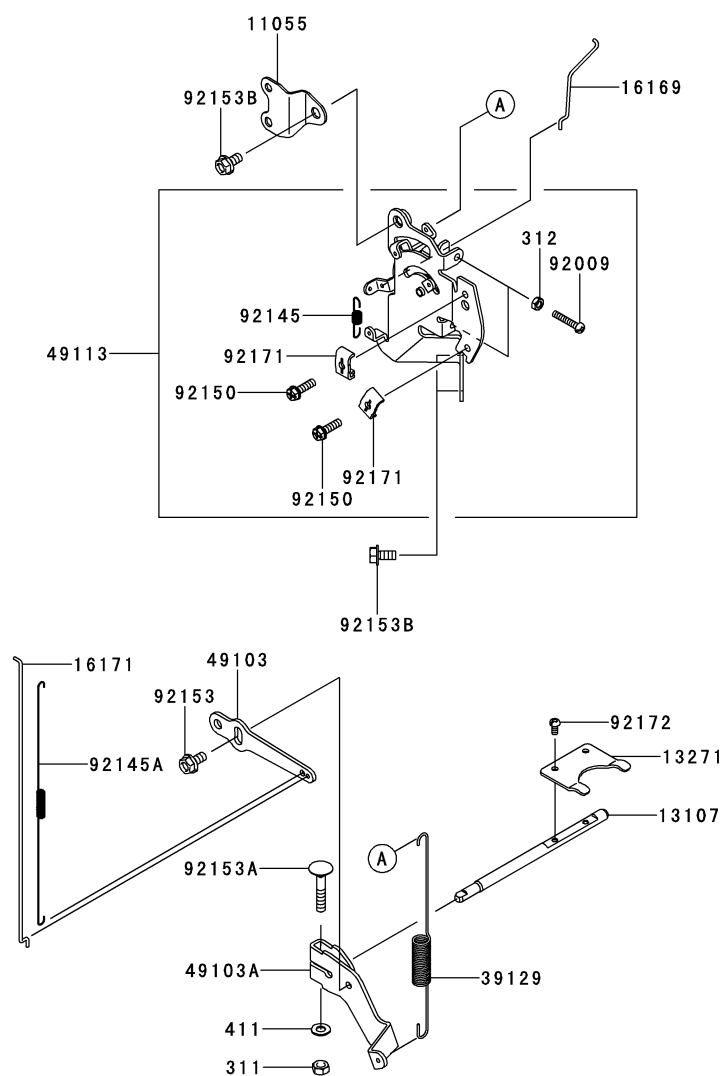

Ref.	Part Number	Description
11055	KM-11055-7001	Bracket
13107	KM-13107-7047	Shaft, Governor
13271	KM-13271-7038	Plate
16169	KM-16169-7020	Link-Choke
16171	KM-16171-7020	Link
39129	KM-39129-7020	Spring-Governor
49103	KM-49103-7012	Arm-Governor
49103A	KM-49103-7018	Arm-Governor
49113	KM-49113-7060	Panel-Comp-Control
92009	KM-92009-2381	Screw,5x30
92145	KM-92145-7044	Spring

Ref.	Part Number	Description
92145A	KM-92145-7055	Spring
92150	KM-92150-2182	Bolt,5x18
92153	KM-92153-0009	Bolt,6x12
92153A	KM-92153-7033	Bolt,6x35
92153B	KM-92153-7043	Bolt,6x12
92171	KM-92171-7018	Clamp
92172	KM-92172-7033	Screw, 4x8
311	KM-311AA0600	Nut-Hex, 6MM
312	KM-312AA0500	Nut-Hex, 5MM
411	KM-411AA0600	Washer-Plain


Kawasaki FX850V Air Filter/Muffler

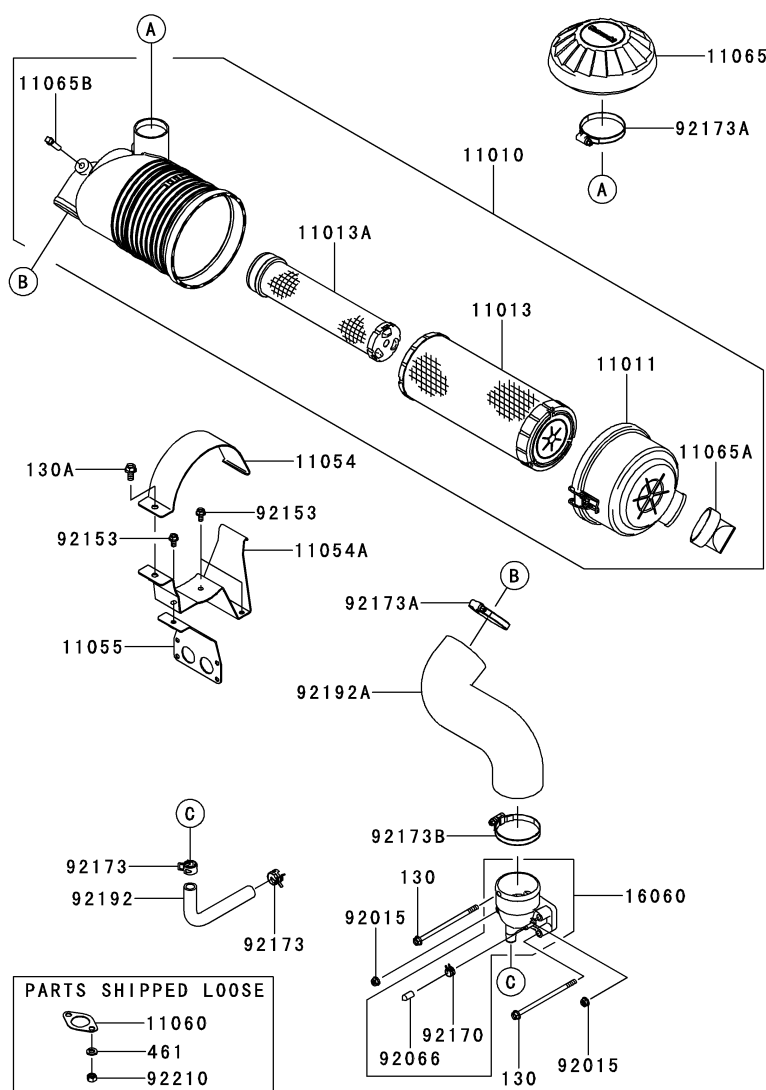


Ref.	Part Number	Description
11010	KM-11010-7028	Filter-Assy-Air
11011	KM-11011-7056	Case-Air Filter
11013	KM-11013-7044	Element-Air Filter
11013A	KM-11013-7045	Element-Air Filter
11054	KM-11054-70139X	Bracket
11054A	KM-11054-70169X	Bracket
11055	KM-11055-70079X	Bracket
11060	KM-11060-7016	Gasket-Muffler
11065	KM-11065-7025	Cap
11065A	KM-11065-7031	Cap
11065B	KM-11065-7032	Cap
16060	KM-16060-0723	Pipe-Intake
92015	KM-92015-1367	Nut

Ref.	Part Number	Description
92066	KM-92066-0095	Plug
92153	KM-92153-7043	Bolt, 6x12
92170	KM-92170-2042	Clamp
92173	KM-92173-7003	Clamp
92173A	KM-92173-1001	Clamp
92173B	KM-92173-7011	Clamp
92192	KM-92192-7086	Tube
92192A	KM-92192-7166	Tube
92210	KM-92210-7027	Nut, M8
130	KM-130AA06120	Bolt, Flanged, 6x120
130A	KM-130AA0816	Bolt, Flanged, 8x16
461	KM-461DA0800	Washer-Spring, 8MM

Kawasaki FX850V Fuel Tank/Valve

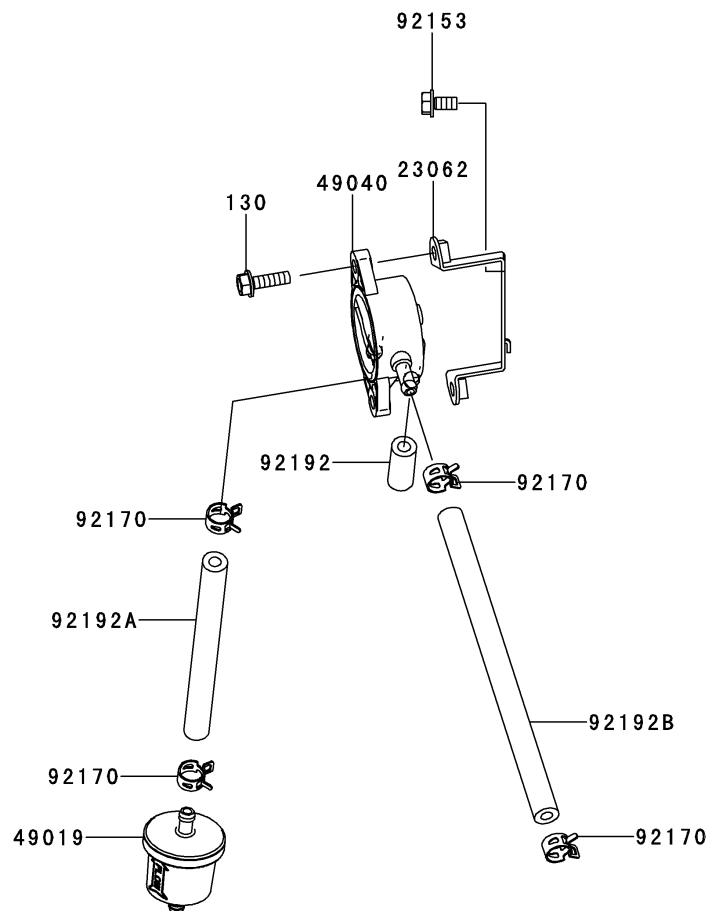

Ref.	Part Number	Description
23062	KM-23062-7018	Bracket-Comp
49019	KM-49019-0014	Filter-Fuel
49040	KM-49040-7001	Pump-Fuel
92153	KM-92153-7043	Bolt, 6x12
92170	KM-92170-2009	Clamp
92192	KM-92192-7088	Tube, 6.4 x 12.7x28.5
92192A	KM-92192-7169	Tube, 6.35x12.7x140
92192B	KM-92192-7173	Tube, 6.35x12.7x195
130	KM-130AA0620	Bolt-Flanged, 6x20

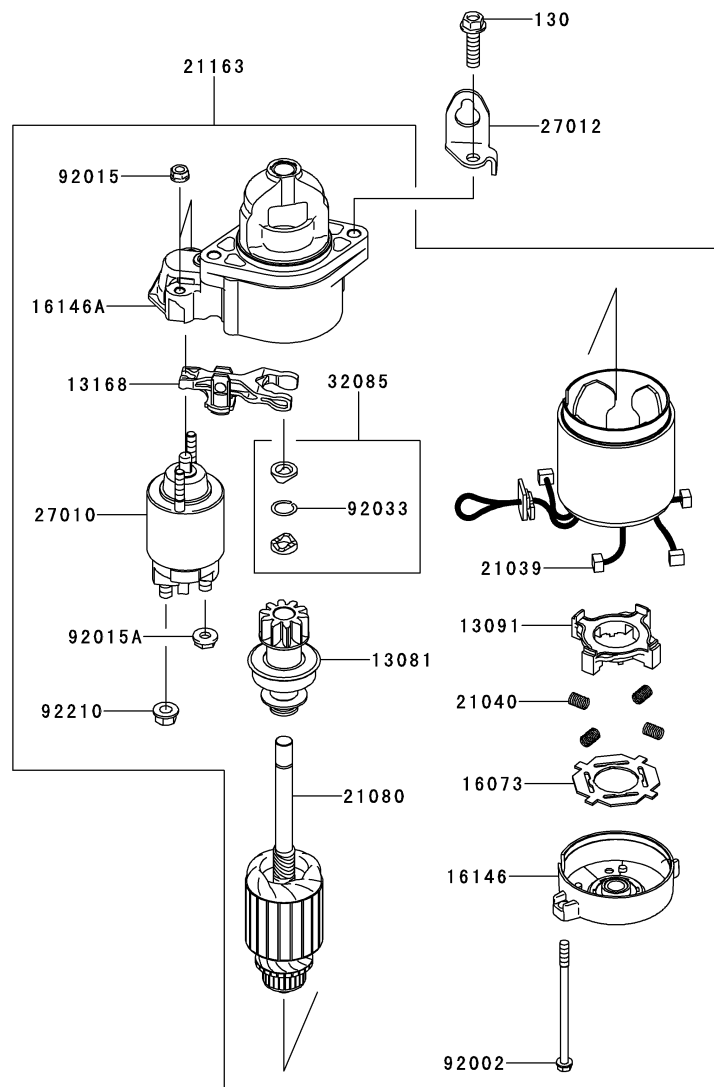

Ref.	Part Number	Description
13081	KM-13081-7001	Clutch-Assy
13091	KM-13091-2068	Holder, Brush
13168	KM-13168-2148	Lever, Shift
16073	KM-16073-2098	Insulator
16146	KM-16146-2077	Coaver-Assy
16146A	KM-16146-7029	Cover-Assy
21039	KM-21039-2059	Brush
21040	KM-21040-2052	Spring-Brush
21080	KM-21080-2058	Armature
21163	KM-21163-7025	Starter-Electric


Ref.	Part Number	Description
27010	KM-27010-7005	Switch
27012	KM-27012-7005	Hook, Lift
32085	KM-32085-2097	Stopper
92002	KM-92002-2277	Bolt
92015	KM-92015-2146	Nut
92015A	KM-92015-2147	Nut
92033	KM-92033-2081	Ring-Snap
92210	KM-92210-2085	Nut
130	KM-130AA0830	Bolt-Flanged, 8x30

Kawasaki FX850V Labels

56014



56033




56070



Ref.	Part Number	Description
56014	KM-56014-0706	Emblem
56033	KM-56033-7001	Label-Manual
56070	KM-56070-7001	Label-Warning


[illegible]

Kohler CV742-3016 Crankcase

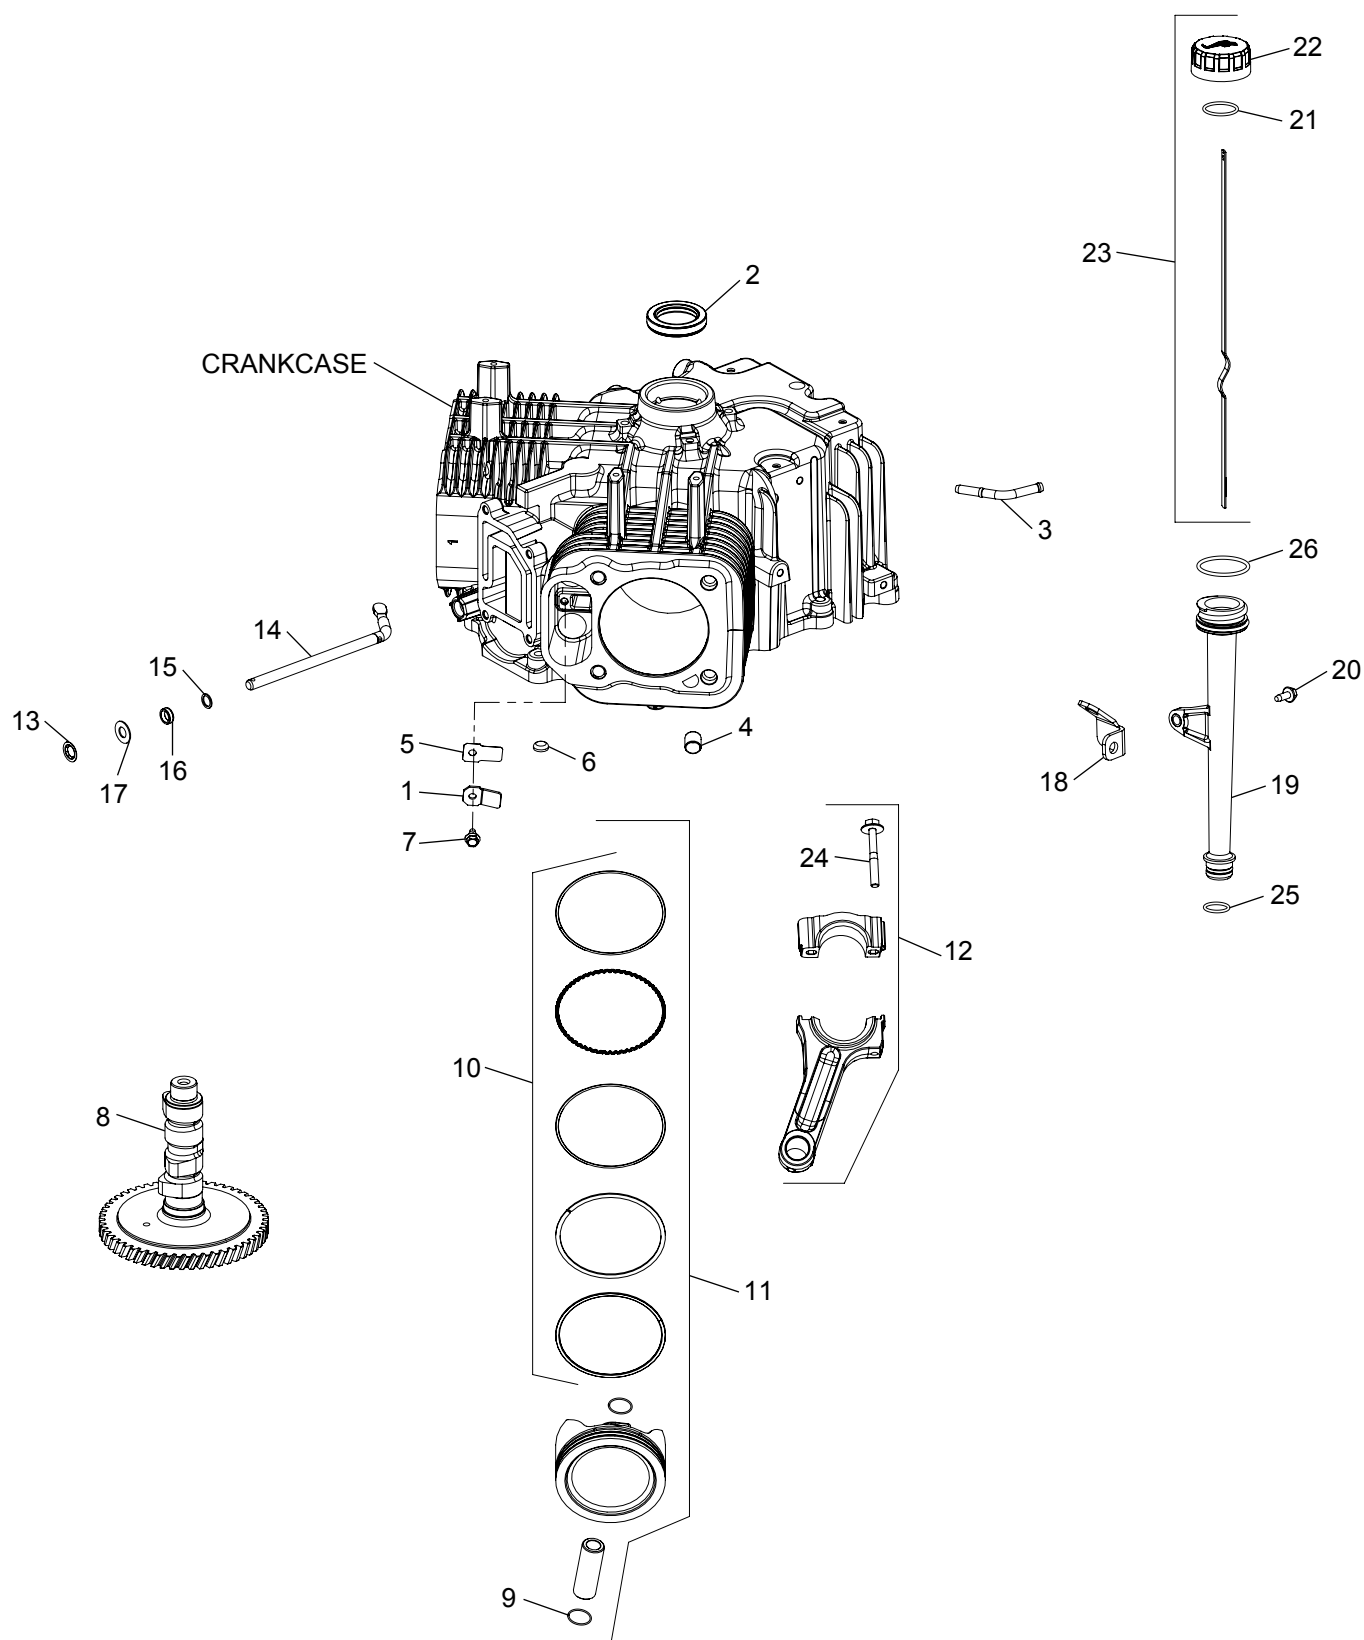


Ref.	Part Number	Description
1	KH-24-018-04-S	Breather Reed Retainer
2	KH-24-032-19-S	Oil Seal
3	KH-24-294-13	Fitting
4	KH-24-380-16-S	Locating Pin
5	KH-24-402-05-S	Breather Reed
6	KH-52-139-09-S	Cup Plug
7	KH-M-0545010	Flange Screw, M5 x 0.8 x 10
8	KH-24-012-29-S	Camshaft Kit
9	KH-24-018-01-S	Piston Pin Retainer
10	KH-25-108-01-S	Piston Ring Set (STD)
—	KH-25-108-02-S	Piston Ring Set (.08)
—	KH-25-108-03-S	Piston Ring Set (.25)
—	KH-25-108-04-S	Piston Ring Set (.50)
11	KH-25-874-14-S	Piston Kit w/ Ring (STD) (Inc. 9 & 10)
—	KH-25-874-18-S	Piston Kit w/ Ring (.08)
—	KH-25-874-19-S	Piston Kit w/ Ring (.25)
—	KH-25-874-20-S	Piston Kit w/ Ring (.50)
12	KH-24-067-34-S	Connecting Rod Kit (Inc. 24)
13	KH-24-018-09-S	Ring Retainer
14	KH-24-144-38-S	Governor Cross Shaft
15	KH-24-468-15-S	Flat Washer, 11/32"
16	KH-28-032-09-S	Governor Cross Shaft Seal
17	KH-M-931010-S	Flat Washer, 9 mm
18	KH-24-126-243-S	Oil Fill Tube Bracket
19	KH-32-755-04-S	Oil Fill Assembly Tube
20	KH-M-545013-S	Flange Screw, M5 x 0.8 x 13
21	KH-25-153-02-S	Dipstick O-Ring
22	KH-24-755-46	Oil Fill Cap Kit (Yellow)
23	KH-24-038-04-S	Dipstick, Assembly (Inc. 21 & 22)
24	KH-25-086-452-S	Connecting Rod Bolts Kit
25	KH-12-153-01-S	Lower Oil Fill Tube O-Ring
26	KH-12-153-02-S	Upper Oil Fill Tube O-Ring

Kohler CV742-3016 Crankshaft

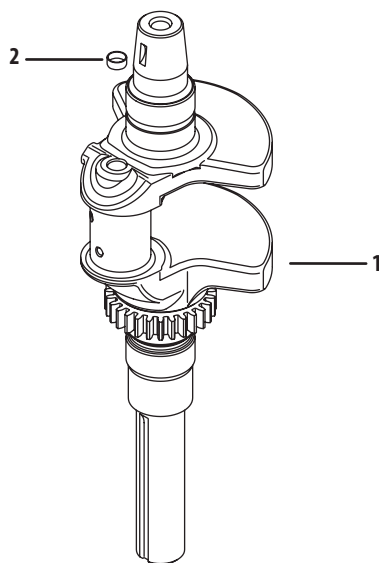

Ref.	Part Number	Description
1	KH-24-014-203-S	Crankshaft
2	KH-52-139-09-S	Cup Plug


Kohler CV742-3016 Oil Pan/Lubrication

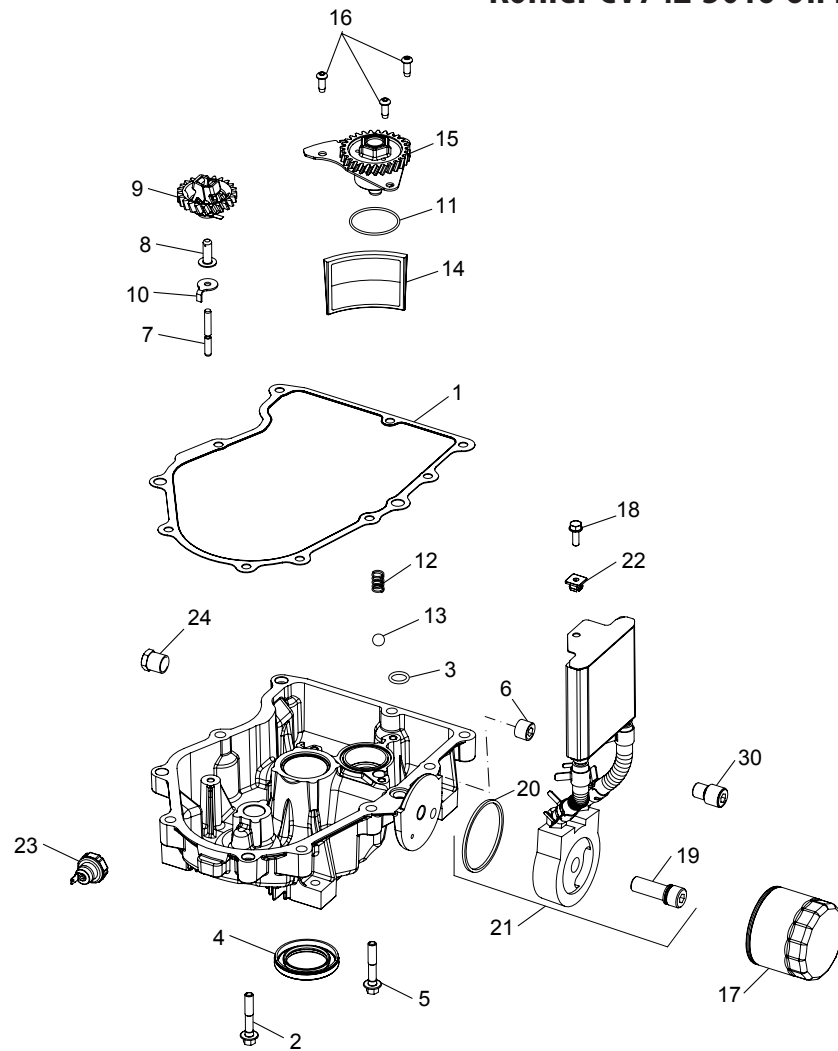

Ref.	Part Number	Description
1	KH-24-041-66-S	Oil Pan Gasket
2	KH-24-086-17-S	Flange Screw, M8 x 1.25 x .45
3	KH-24-153-08-S	O-Ring
4	KH-25-032-06-S	Oil Seal
5	KH-25-086-17-S	Screw
6	KH-25-139-62-S	Countersink Pipe Plug, 3/8
7	KH-12-144-02	Governor Gear Shaft
8	KH-12-380-01	Governor Regulating Pin
9	KH-24-043-12	Governor Gear Kit w/Pin
10	KH-24-448-02-S	Locking Tab
11	KH-12-153-01-S	O-Ring (1.78" Dia.)
12	KH-24-089-74-S	Compression Spring
13	KH-25-194-03-S	Pressure Relief Ball

Ref.	Part Number	Description
14	KH-32-162-06-S	Oil Screen
15	KH-24-393-71-S	Oil Pump Assembly
16	KH-25-086-414-S	Button Head Screw
17	KH-12-050-01-S	Oil Filter
18	KH-24-086-12	Tap Screw, M6 x 1.7 x 18
19	KH-24-136-05-S	Oil Filter Nipple
20	KH-24-153-21-S	Oil Cooler O-Ring
21	KH-54-755-21-S	Oil Cooler Kit (Inc. 19 & 20)
22	KH-25-100-37-S	Plastic Nut (Black)
23	KH-25-099-27-S	Oil Pressure Switch
24	KH-52-139-02	Pipe Plug, 3/8
N/A	KH-24-199-35-S	Oil Pan Assembly Kit (Not Shown)


Kohler CV742-3016 Head/Valve/Breather

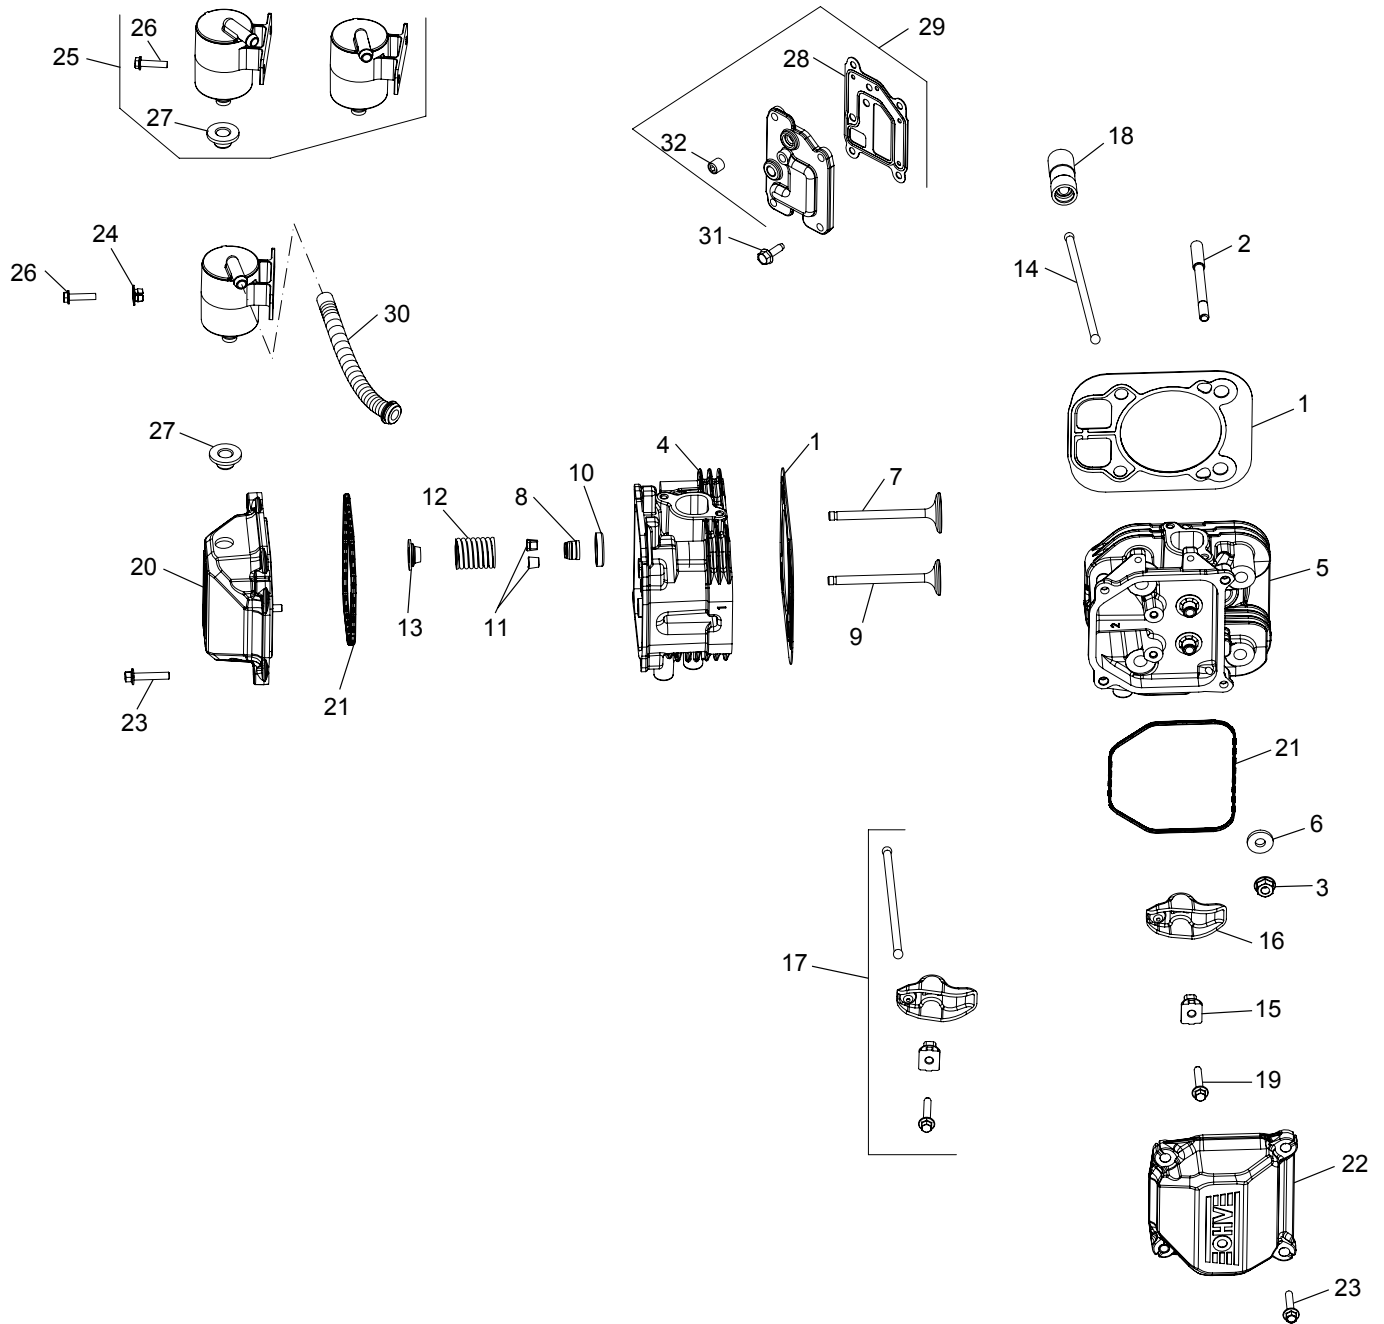

Kohler CV742-3016 Head/Valve/Breather


Ref.	Part Number	Description
1	KH-24-841-04-S	Cylinder Head Gasket Kit (Inc. Head Mounting Hardware)
2	KH-24-072-09-S	Stud, M8 x 1.25
3	KH-24-100-10-S	Flange Nut, M8 x 1.25
4	KH-24-318-155-S	#1 Cylinder Head Assembly Kit
5	KH-24-318-156-S	#2 Cylinder Head Assembly Kit
6	KH-24-468-16-S	Flat Washer, 8.6 mm
7	KH-24-017-01	Intake Valve (STD)
—	KH-24-017-02	Intake Valve (.25)
8	KH-25-032-14-S	Valve Band Seal
9	KH-24-016-01	Exhaust Valve (STD)
—	KH-24-016-02	Exhaust Valve (.25)
10	KH-235011-S	Spring Retainer
11	KH-12-755-03	Retainer Kit
12	KH-24-089-02	Valve Spring
13	KH-25-173-28-S	Valve Spring Cap
14	KH-24-411-05	Push Rod
15	KH-24-599-02-S	Rocker Arm Pivot
16	KH-25-186-01	Rocker Arm
17	KH-24-755-66	Valve Train Kit
18	KH-25-351-11-S	Hydraulic Valve Lifter Kit
19	KH-M-640034-S	Flange Screw, M6 x 1.0 x 34
20	KH-24-755-142-S	Valve Cover Kit
21	KH-24-153-30-S	Valve Cover O-Ring
22	KH-24-755-141-S	Plain Rocker Cover Kit
23	KH-M-651030-S	Flange Screw, M6 x 1.0 x 30
24	KH-24-100-02-S	Plastic Nut
25	KH-24-755-241-S	Breather Separator Kit (Inc. 26-27)
26	KH-25-086-157-S	Hi-Lo Hex Flange Screw
27	KH-25-313-05-S	Rubber Grommet
28	KH-24-041-67-S	Breather Gasket
29	KH-24-033-03	Breather Cover Kit w/ Gskt. (Inc. 28 & 32)
30	KH-24-326-124-S	Breather Hose
31	KH-25-086-396-S	Flange Screw, M6 x 1.0 x 20
32	KH-25-139-60-S	Pipe Plug, 1/8

Kohler CV742-3016 Ignition/Electrical

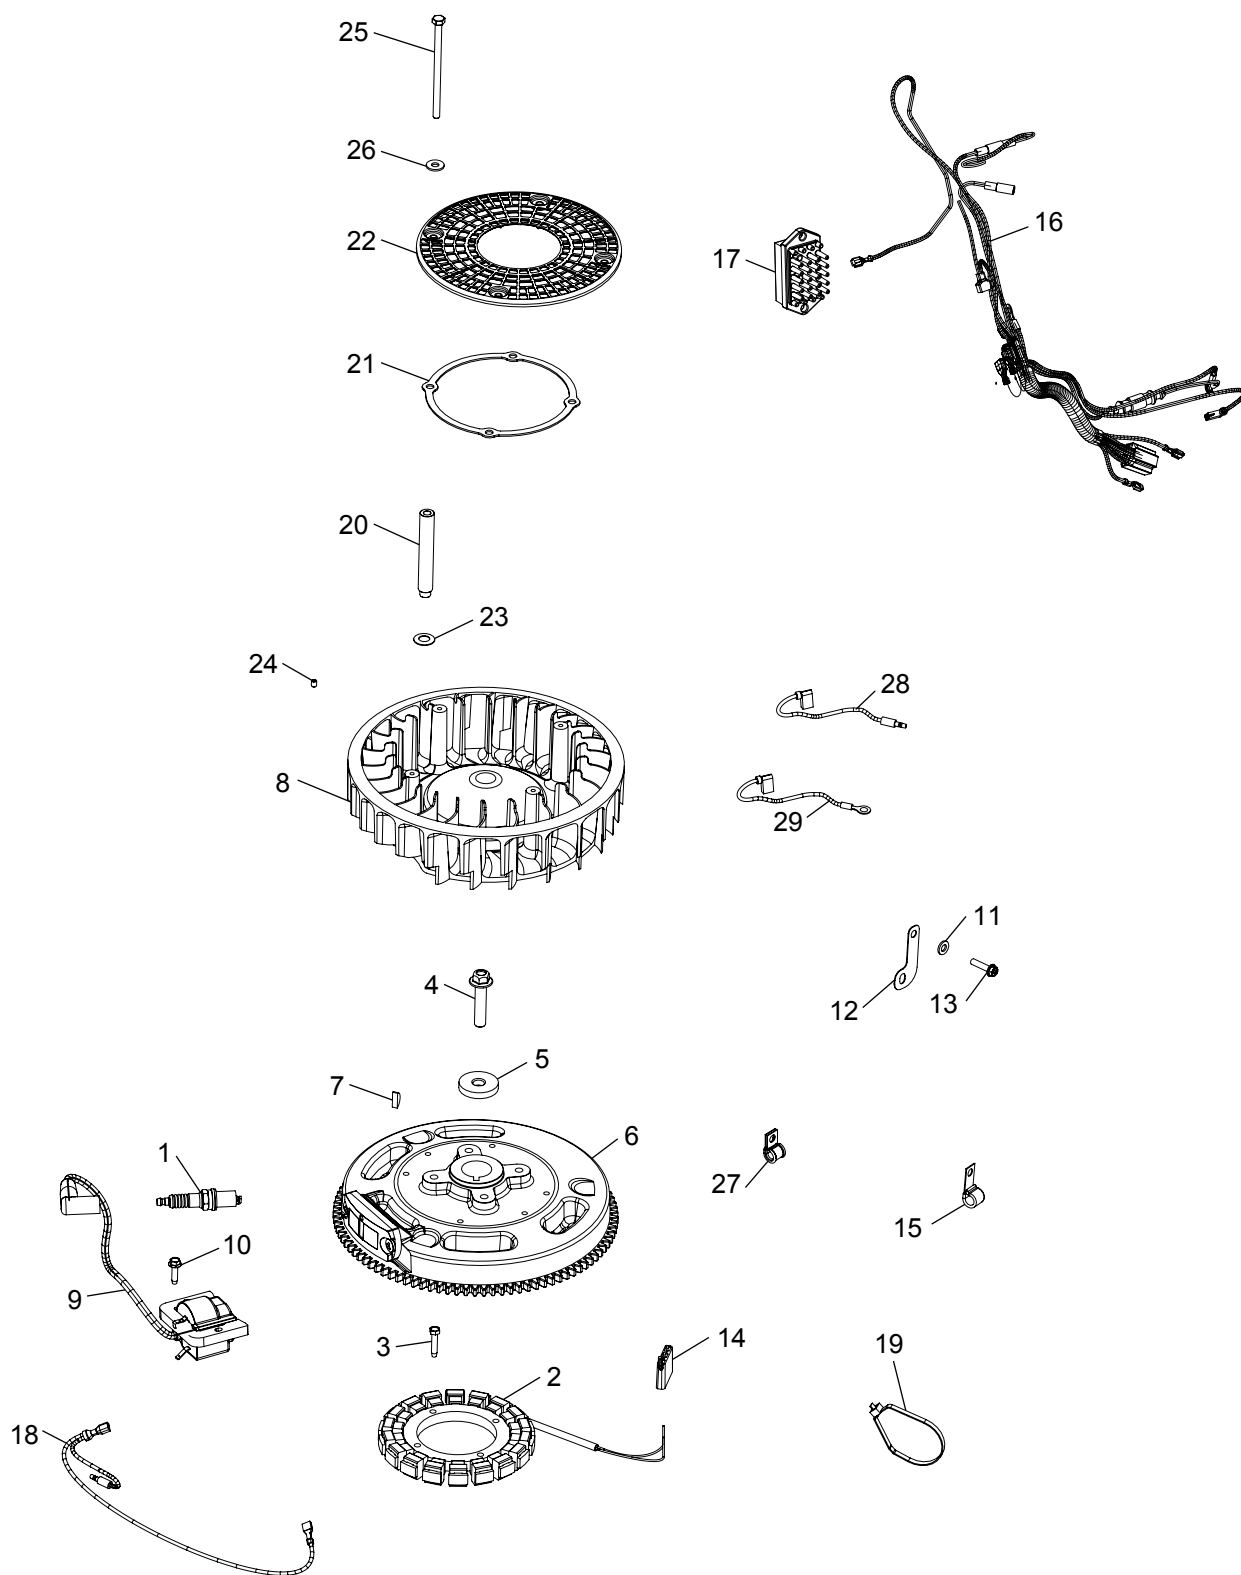

Ref.	Part Number	Description
1	KH-12-132-02-S	Spark Plug
2	KH-237878	15 Amp Stator Kit
3	KH-25-086-402-S	Thread Forming Screw
4	KH-25-086-361-S	Flange Screw, M10 x 1.5 x 45
5	KH-12-468-03	Flat Washer, 13/32"
6	KH-24-025-58-S	Flywheel
7	KH-X-42-15	Key, 3/16 x 5/8
8	KH-24-157-12-S	Fan
9	KH-24-584-92-S	Ignition Module
10	KH-25-086-473-S	Thread Forming Screw
11	KH-X-25-63	Flat Washer, 1/4
12	KH-24-126-137-S	Ground Strap Bracket
13	KH-25-086-157-S	Hi-Lo Hex Flange Screw
14	KH-25-155-41-S	Connector
15	KH-235173	Cable Clip
16	KH-24-176-150-S	Wiring Harness
17	KH-25-403-21-S	Rectifier Regulator
18	KH-24-176-41-S	Duplex Lead
19	KH-25-454-07-S	Tie
20	KH-24-112-14	Spacer
21	N/A	Support Ring
22	KH-24-162-41-S	Grass Screen
23	KH-24-468-11	Spring Washer, 10 mm
24	KH-25-086-43	Set Screw, #10-24 x 1/4
25	KH-M-603100	Cap Screw, M6 x 1.0 x 99.5
26	KH-X-25-53	Flat Washer, 1/4
27	KH-210281-S	Clip
28	N/A	Oil Sentry Lead
29	KH-25-518-34-S	Lead


Kohler CV742-3016 Blower Housing & Baffles

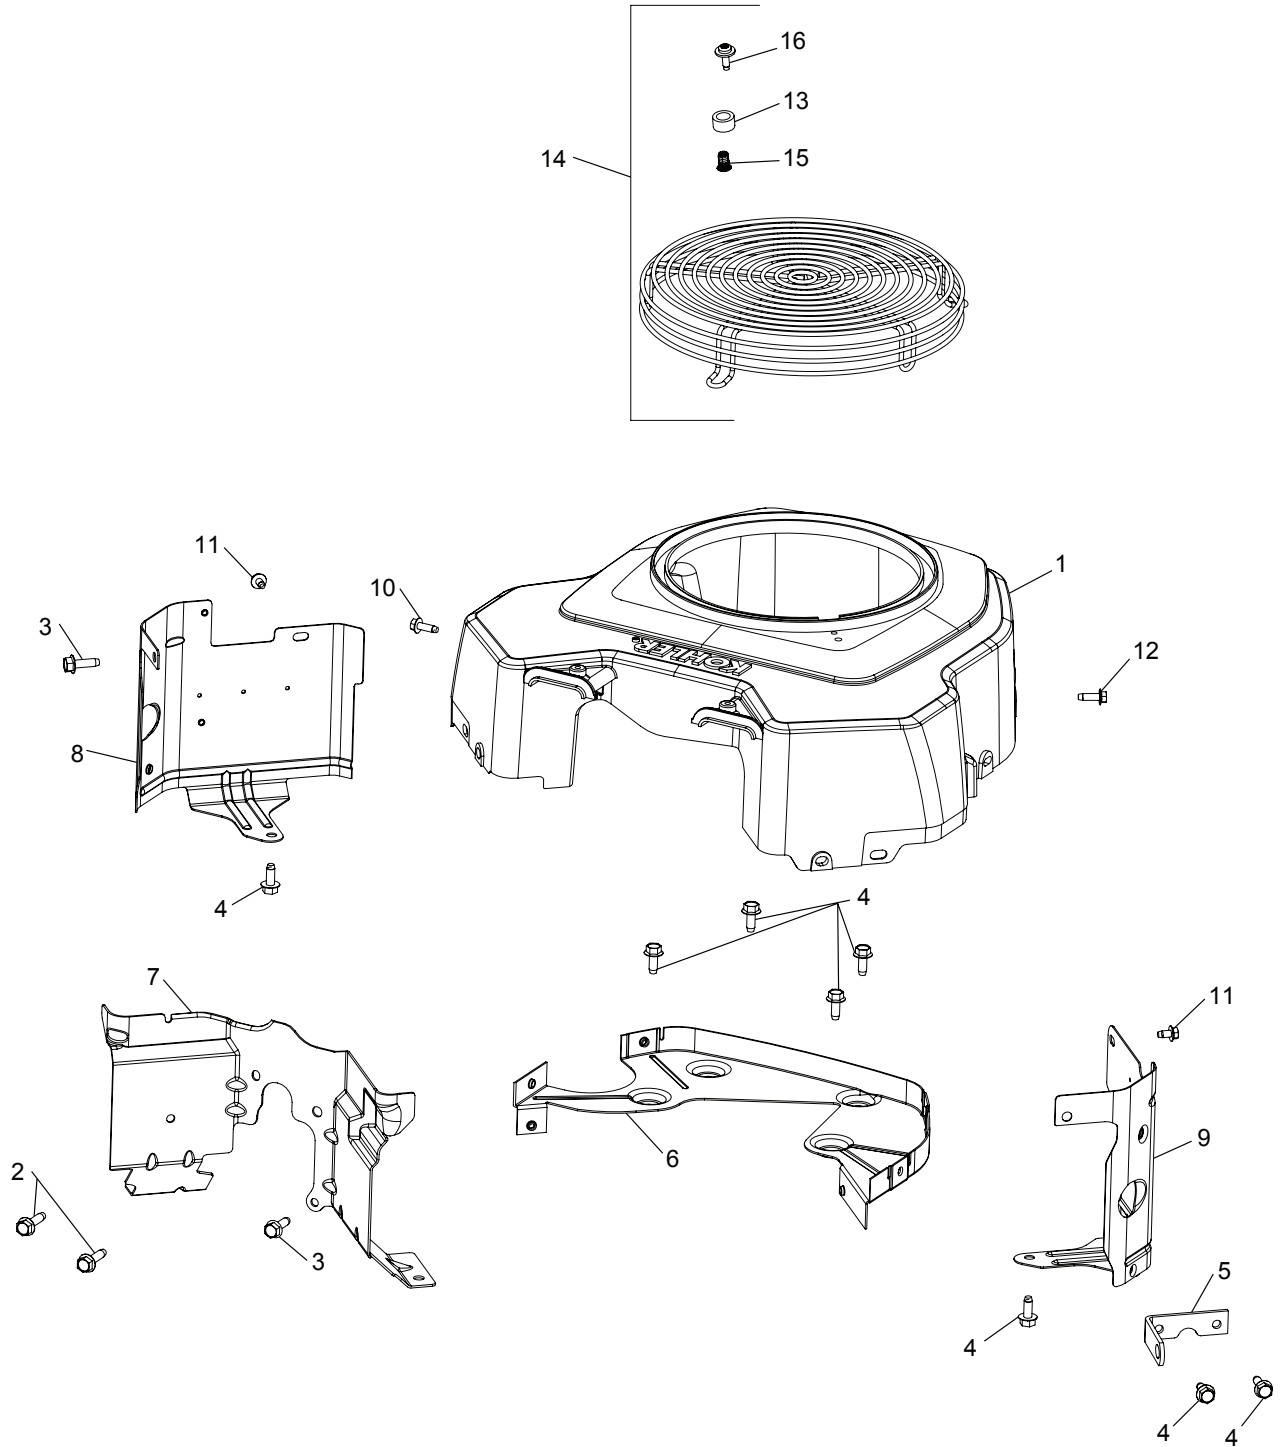


Kohler CV742-3016 Blower Housing & Baffles

Ref.	Part Number	Description
1	KH-24-027-428-S	Blower Housing
2	KH-25-086-395-S	Thread Forming Screw
3	KH-25-086-396-S	Thread Forming Screw
4	KH-25-086-397-S	Thread Forming Screw
5	KH-25-445-03-S	Lift Strap
6	KH-24-146-59-S	Backing Plate Kit
7	KH-24-063-108-S	Baffle
8	KH-24-063-85-S	Cylinder Barrel Kit, #1 Side
9	KH-24-063-88-S	Cylinder Baffle Kit, #2 Side
10	KH-25-086-398-S	Thread Forming Screw
11	KH-25-086-400-S	Thread Forming Screw
12	KH-25-086-426-S	Thread Forming Screw
13	KH-24-112-12	Spacer
14	KH-24-755-94-S	Guard Kit (Inc. 13, 15-16)
15	KH-24-332-01-S	Threaded Insert
16	KH-25-086-160-S	Sems Screw

Kohler CV742-3016 Starting System

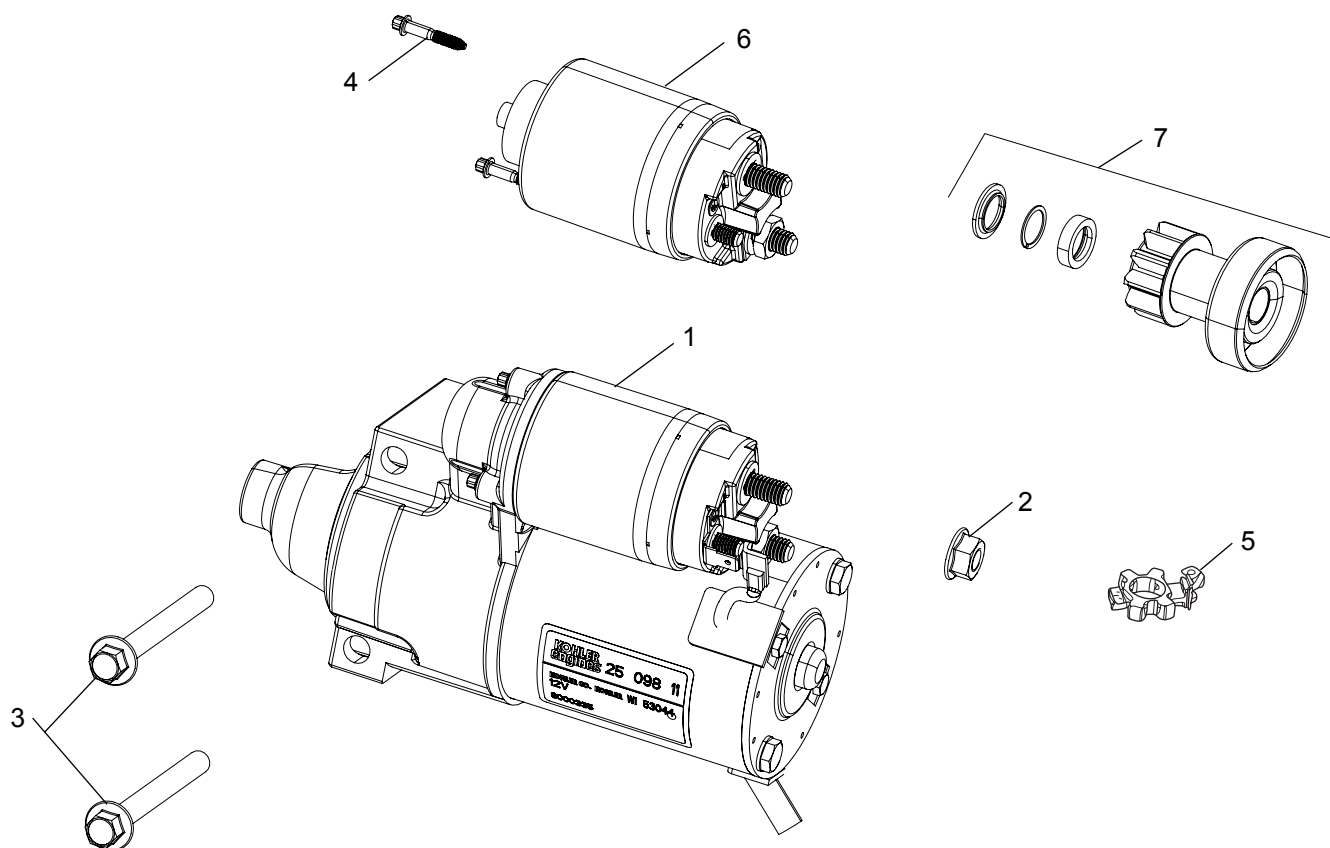


Ref.	Part Number	Description
1	KH-25-098-11-S	Solenoid Shift Starter Assembly
2	712-3086	Flange Nut, M8x1.25
3	KH-M-851080-S	Flange Screw, M8 x 1.25 x 80
4	KH-25-086-113-S	Torx Head Screw
5	KH-25-221-01-S	Brush Holder Kit
6	KH-25-435-06-S	Solenoid Kit (Inc. 4)
7	KH-25-755-33-S	Starter Pinion Kit

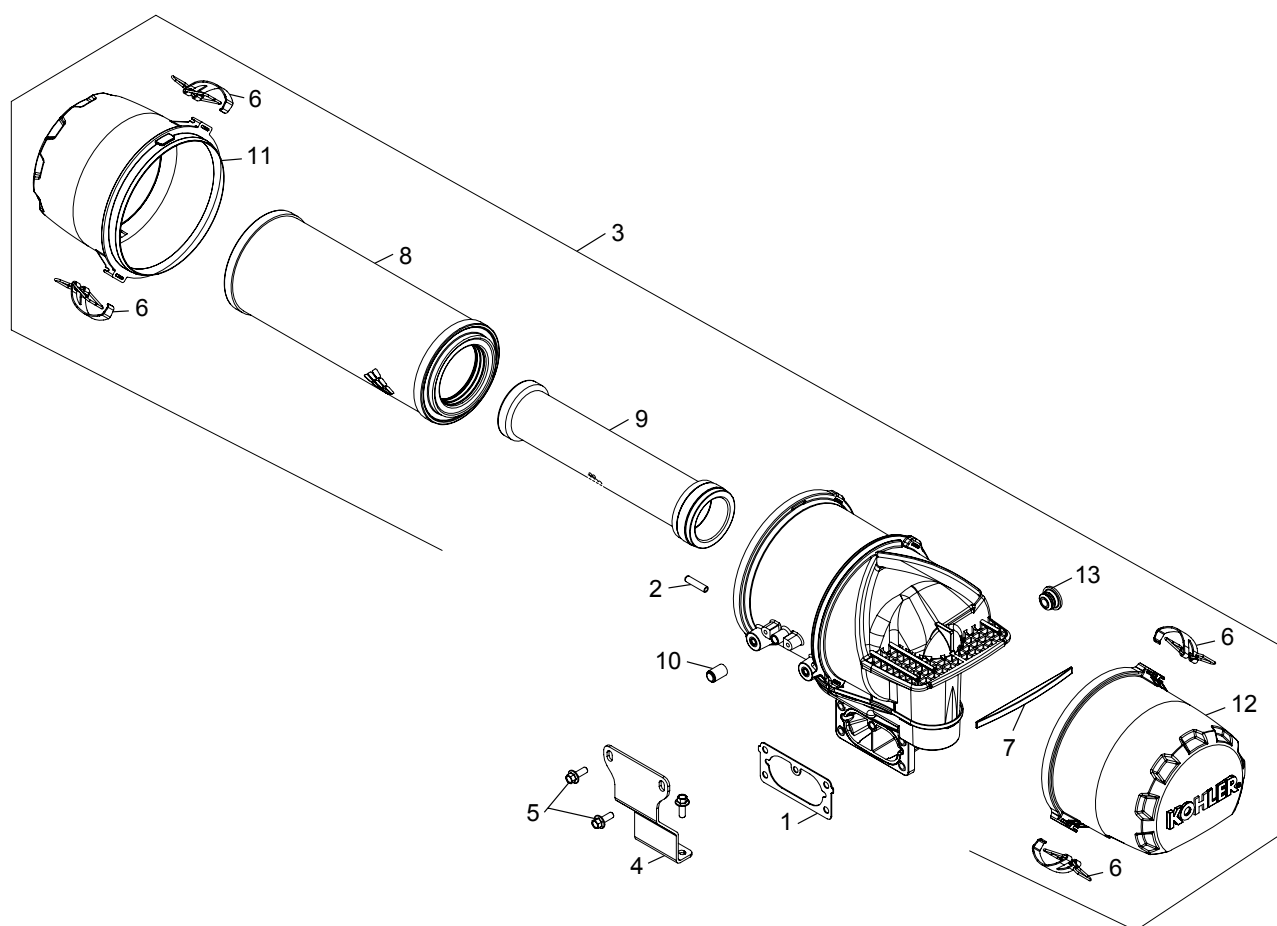


Ref.	Part Number	Description
1	KH-24-041-70-S	Air Cleaner Gasket
2	KH-25-173-34-S	Masking Cap
3	KH-24-048-51-S	Air Cleaner Kit
4	KH-24-126-218-S	Support Bracket
5	KH-M-639016-S	Flange Screw, M6 x 1.0 x 16
6	KH-62-154-07-S	Assembly Clip
7	KH-62-263-03-S	Foam Insert Damper
8	KH-25-083-01-S	Element, Air Filter - PRIMARY
9	KH-25-083-04-S	Element, Air Filter - SAFETY
10	KH-25-173-37-S	Masking Cap
11	KH-62-096-22-S	Air Filter Cover
12	KH-62-096-25-S	Rain Cap Cover
13	KH-62-139-02-S	Hole Plug

Kohler CV742-3016 Engine Controls

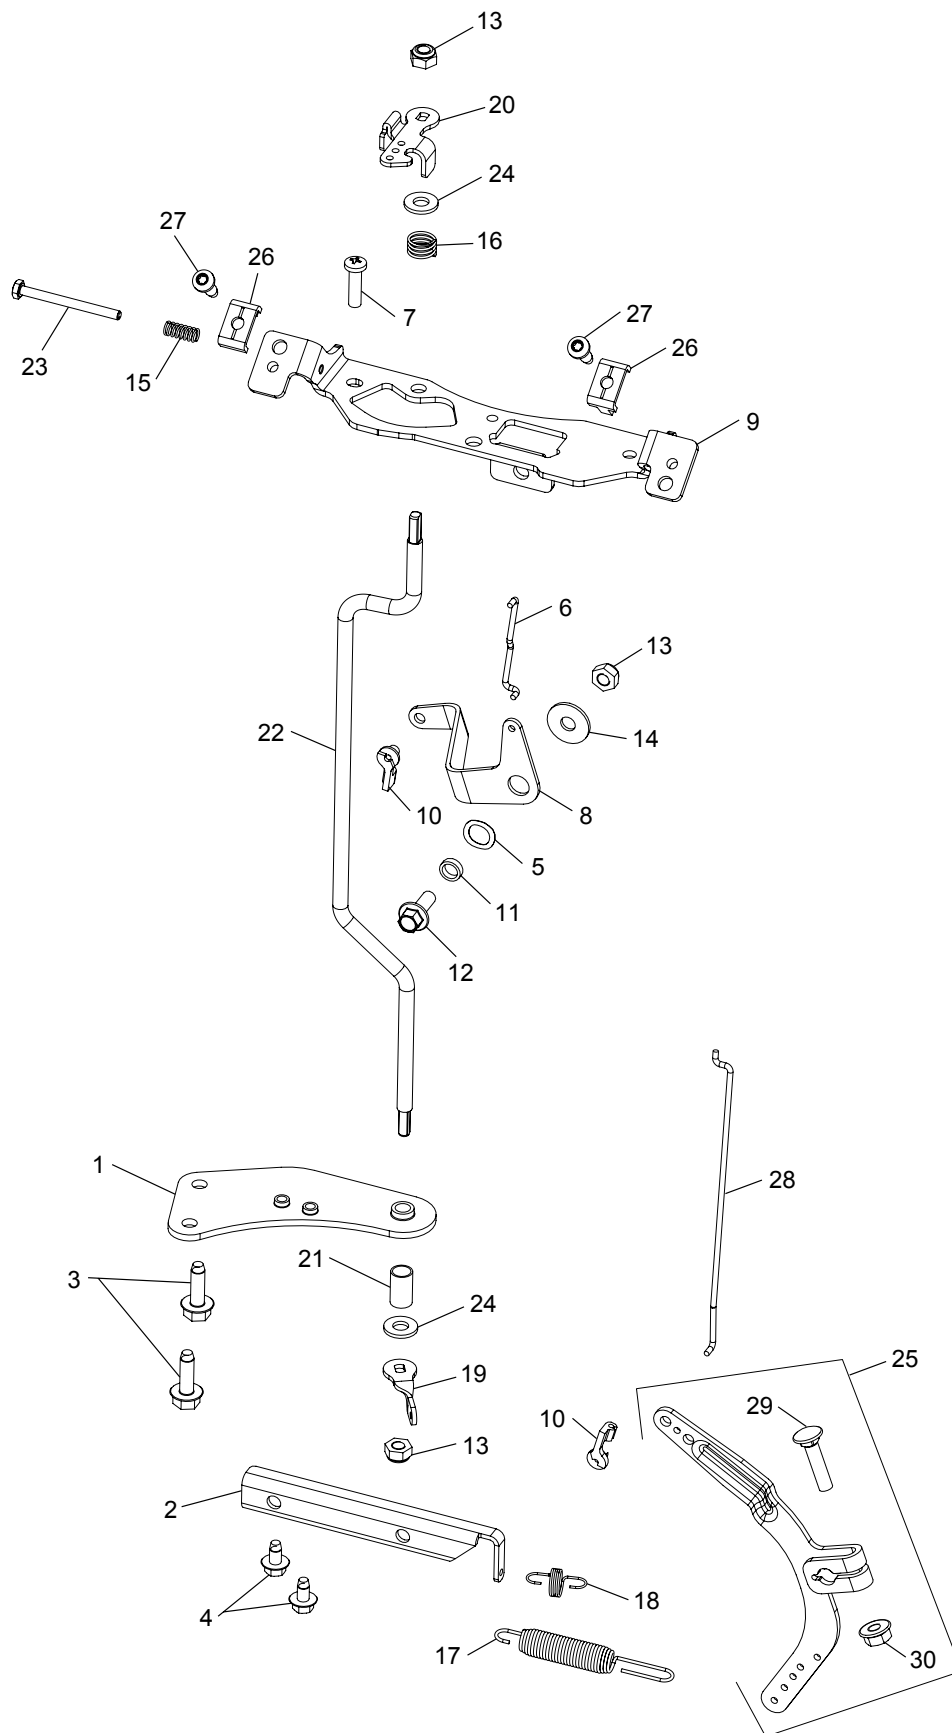




Ref.	Part Number	Description
1	KH-24-126-162-S	Throttle Shaft Bracket
2	KH-24-126-163-S	Governed Idle Bracket
3	KH-25-086-396-S	Thread Forming Screw
4	KH-25-086-400-S	Thread Forming Screw
5	KH-277341	Spring Washer, 3/8
6	KH-24-079-53-S	Choke Linkage
7	KH-24-086-06	Screw, 11-16 x 3/4
8	KH-24-090-50-S	Choke Lever
9	KH-24-126-231-S	Control Bracket
10	KH-25-158-11	Throttle Linkage Bushing
11	KH-25-431-01-S	Spacer
12	KH-M-639016-S	Flange Screw, M6 x 1.0 x 16
13	N/A	Lock Nut, M6 x 1.0
14	736-0173	Flat Washer, 1/4
15	KH-20-089-13-S	Speed Control Spring
16	KH-24-089-20	Throttle Shaft Spring
17	KH-24-089-47-S	Governor Spring
18	KH-24-089-68-S	Governed Idle Spring
19	KH-24-090-12	Throttle Control Lever
20	KH-24-090-71-S	Throttle Control Lever
21	KH-24-112-10	Spacer
22	KH-24-144-37-S	Control Shaft
23	KH-25-086-428-S	Hex Head Screw
24	KH-X-25-72	Flat Washer, 1/4
25	KH-24-090-69-S	Governor Lever
26	KH-25-237-41-S	Cable Clamp
27	KH-25-086-405-S	Thread Forming Screw
28	KH-24-079-72-S	Throttle Linkage
29	KH-24-211-03-S	Bolt, M6 x 1.0 x 25
30	KH-M-641060-S	Flange Nut, M6 x 1.0

Kohler CV742-3016 Fuel System

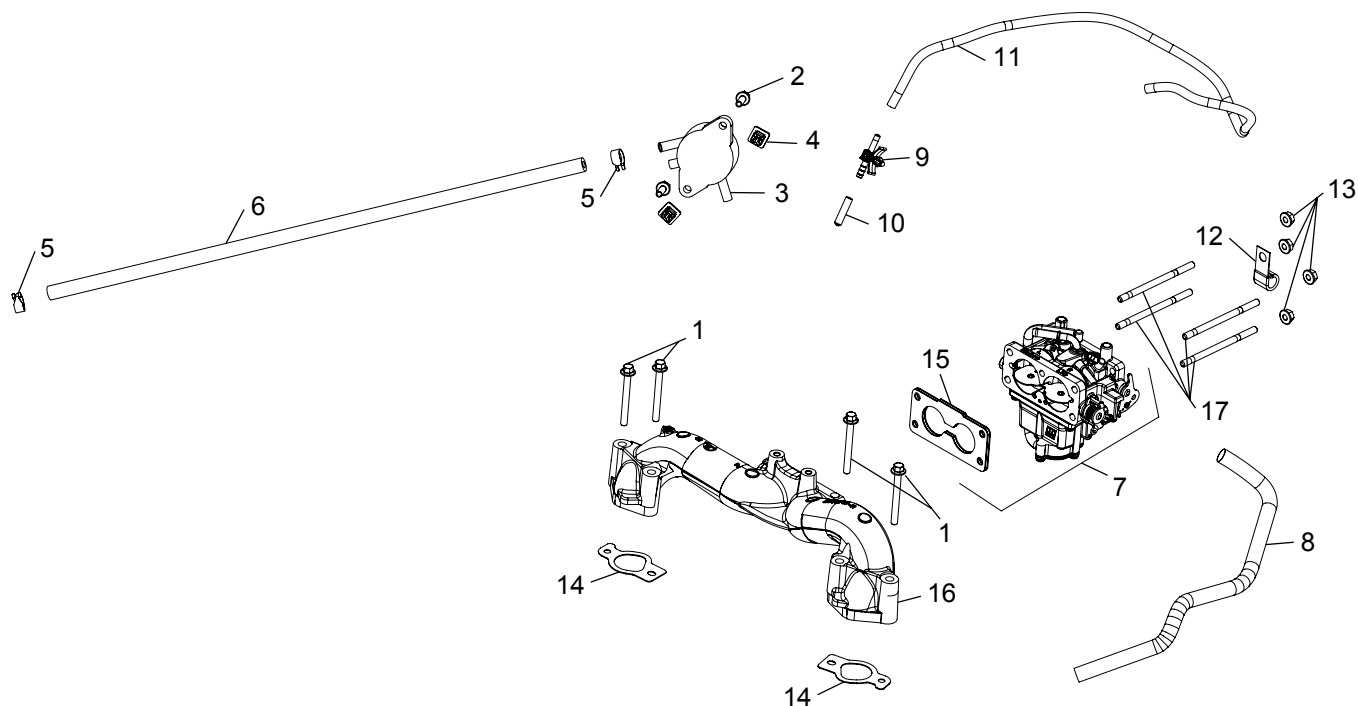

Ref.	Part Number	Description
1	KH-25-086-84-S	Flange Screw, M6 x 1.0 x 55
2	KH-24-086-12	Tap Screw, M6 x 1.7 x 18
3	KH-24-393-16	Fuel Pump
4	KH-25-100-37-S	Plastic Nut
5	KH-25-237-31-S	Hose Clamp
6	KH-25-111-81-S	Fuel Line, 24"
7	KH-24-853-227-S	Carburetor Kit
8	KH-25-431-22-S	Anti-Abrasion Sleeve
9	KH-25-155-51-S	Evaporative Connector

Ref.	Part Number	Description
10	KH-25-173-33-S	Masking Cap
11	KH-25-326-28-S	Evaporative Hose
12	KH-47-154-01-S	Cable Clip
13	KH-M-641060-S	Flange Nut, M6 x 1.0
14	KH-24-041-79-S	Intake Manifold Gasket
15	KH-24-041-83-S	Carburetor Gasket
16	KH-24-164-138-S	Intake Manifold
17	KH-M-629095-S	Stud, M6 x 1.0 x 96
N/A	KH-25-050-22-S1	Fuel Filter

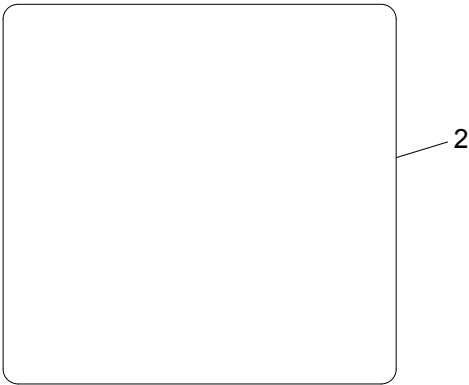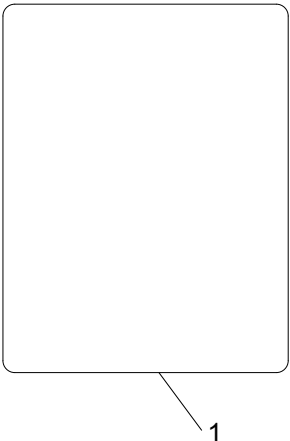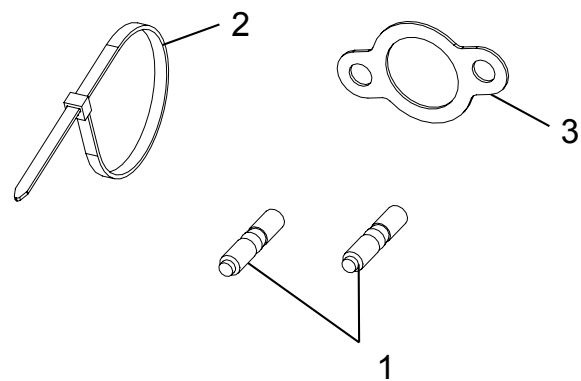

Ref.	Part Number	Description
1	KH-25-072-24-S	Stud, M8 X 1.25 X 33
2	KH-25-454-05-S	Tie
3	KH-24-041-49-S	Exhaust Gasket

Ref.	Part Number	Description
1	KH-25-113-70-S	Clear Laminate Decal
2	KH-24-113-360-S	HDAC 747cc/CV-CH742 Decal

[illegible]

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
