


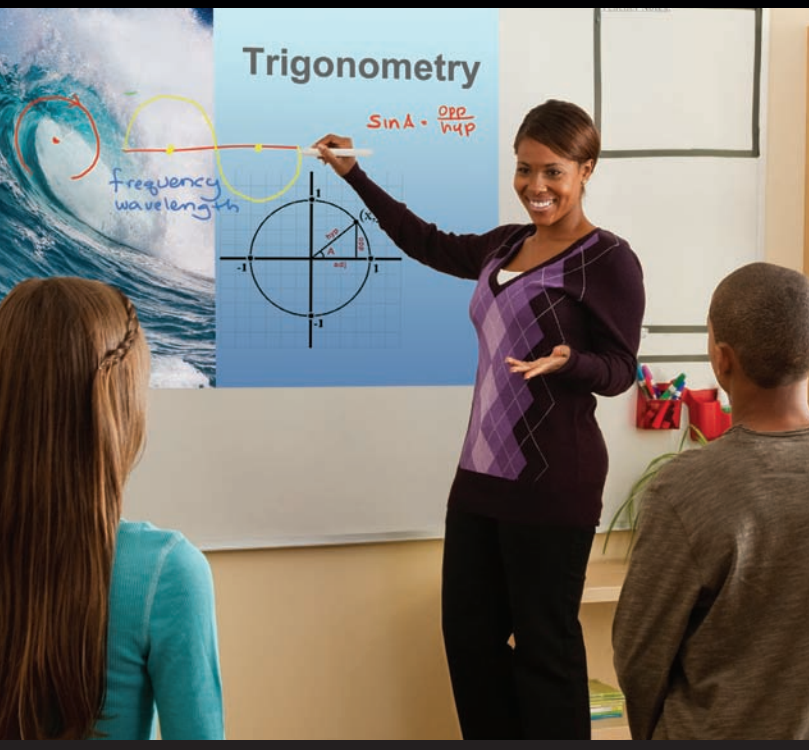

Start Here

Follow the steps on this card to get started with your BrightLink:

- ① Make sure the software is installed
- ② Connect your computer and turn on the projector
 - Using the remote control
- ③ Launch Easy Interactive Driver
 - Using the pens
- ④ Calibrate your system
- ⑤ Explore additional software options

Need More Help?

BrightLink software, manuals, FAQs, and more are available at epson.com/brightlinkdownloads (U.S.) or epson.ca/brightlinkdownloads (Canada).



DVD containing BrightLink training videos in this Welcome Kit.



Tips sheets for Easy Interactive Tools and TeamBoard Draw in this Welcome Kit.



BrightLink *User's Guide*, available on the BrightLink CD or at the BrightLink websites listed above.



PrivateLine® technical support card, with your individual PIN.

Call (800) 637-7661. You can also call (562) 276-4394 (U.S.) or (905) 709-3839 (Canada).

Ready to Learn More?

- Sign up for complimentary webinars
- Watch helpful how-to videos
- Find out about cool, free interactive sites



Click the **BrightLink Training Resources** link on your desktop or go to www.epson.com/eduresources


1 Make Sure the Software Is Installed

You need Easy Interactive Driver (EID) to make the pen work as a mouse with your projected computer image.

Here's how to find out if Easy Interactive Driver is already installed on your computer:

If you are using Windows®:

Select  or **Start > All Programs or Programs > EPSON Projector > Easy Interactive Driver**. If you see Easy Interactive Driver, the software is installed.

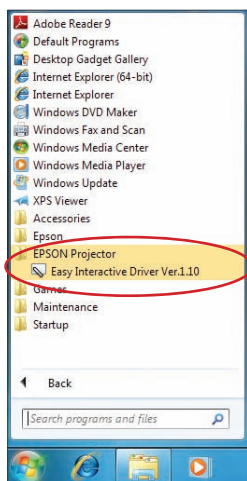

If you are using Mac OS® X:

Look for the **Easy Interactive Driver** folder in the **Applications** folder on your hard drive. If you see the Easy Interactive Driver folder, the software is installed.




If Easy Interactive Driver is not installed, follow the steps in the next column to install it.

If you need to install Easy Interactive Driver


Do one of the following:

- Use the CD that came with the projector, labeled “EPSON Projector Software for Easy Interactive Function”

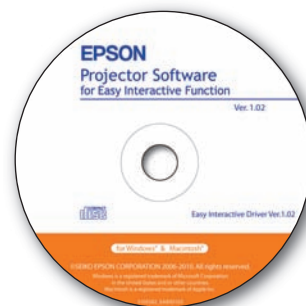

- Download the most up-to-date version from:
epson.com/brightlinkdownloads (U.S.)
epson.ca/brightlinkdownloads (Canada)


You will need internet access.

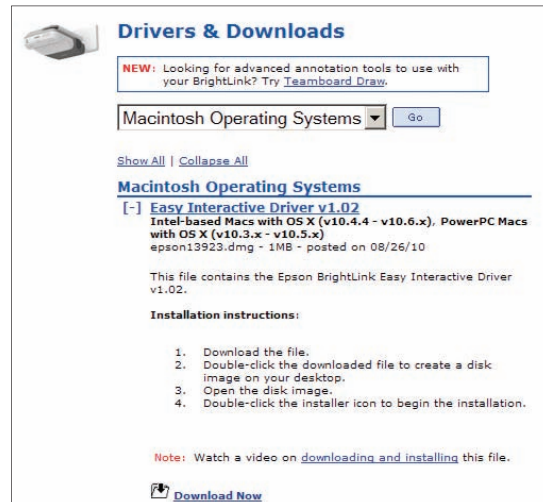

For detailed installation instructions, see the BrightLink *User's Guide* on your computer or on the CD in the Welcome Kit, or watch the video on your DVD.

② Connect Your Computer and Turn on the Projector


- 1 Connect the USB cable from the interactive module to any available USB port on your computer.

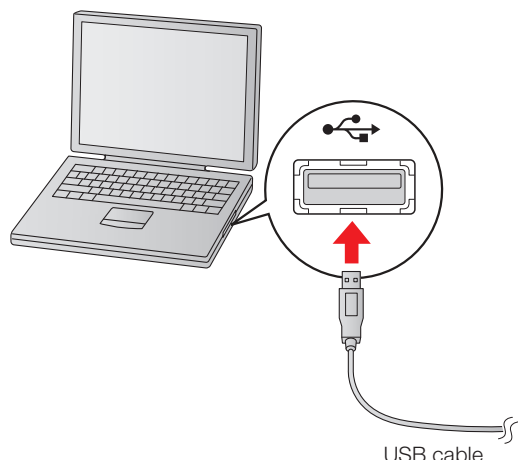

- 2 Connect another cable (USB, HDMI, or VGA cable) from the projector to your computer.
- 3 Turn on the projector by pressing the red  power button on the remote control.
- 4 Display an image from your computer. If the image doesn't appear, try one of the following:

- On some PC laptops, you may need to hold down the **F_n** key on the keyboard and press **F7** or the function key that lets you display on an external monitor. It may have an icon such as , or it may be labelled **CRT/LCD**.
- On a Mac, you may need to open **System Preferences** and select **Displays**. Select the **VGA Display** or **Color LCD** option if necessary, then click the **Arrange** or **Arrangement** tab, and select the **Mirror Displays** check box.
- Try pressing the **Source Search** button on the remote control.

Using the Remote Control

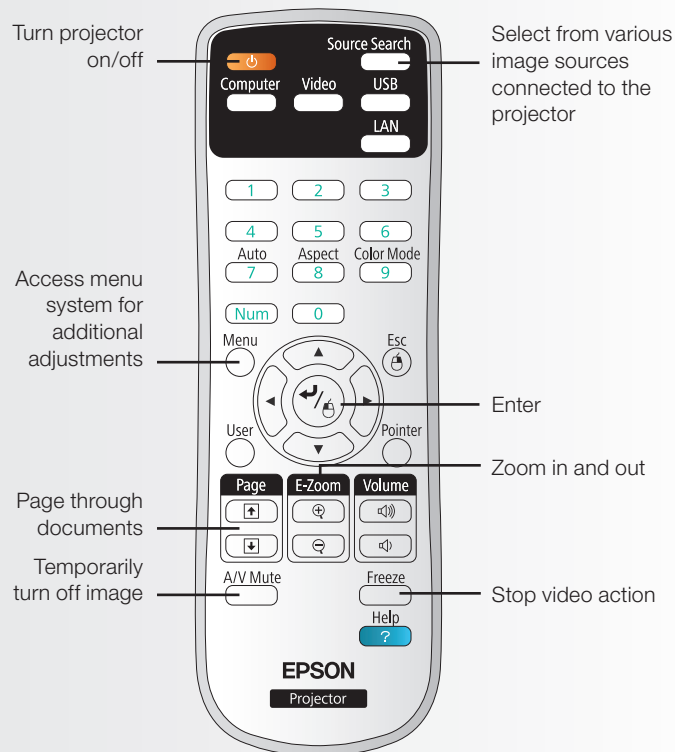

For more information about using the remote control and cool time-saving buttons:

- See the *BrightLink User's Guide* on your computer or on the CD in this Welcome Kit.
- Go to the training section and watch a video or two at epson.com/brightlink (U.S.), epson.ca/brightlink (Canada), or atomiclearning.com.

Note: For BrightLink Solo™, the remote control for your projector will be different.

③ Launch Easy Interactive Driver

1 Look for the  pen icon in the lower right corner of your screen (Windows) or in the Dock (Mac OS X).

- If you don't see the icon in Windows, you may need to click the arrow(s) to show hidden icons.


Click if necessary



- If a red X appears on the icon , the computer and interactive module may not be connected correctly. Make sure the projector is powered on and the USB cable from the interactive module is securely connected to your computer.

2 If you don't see the icon, make sure Easy Interactive Driver is installed on your computer (see above for instructions if necessary), then do one of the following to launch the driver:

- Windows: select  or **Start > All Programs** or **Programs > EPSON Projector > Easy Interactive Driver**.

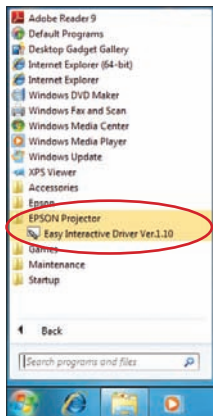


- Mac OS X: open the **Applications** folder, then open the **Easy Interactive Driver** folder and select the **Easy Interactive Driver** icon.



Using the Pens

Make sure the batteries are installed in the interactive pens.

- Press the button on the pen. If the light turns green, the batteries are installed and charged.

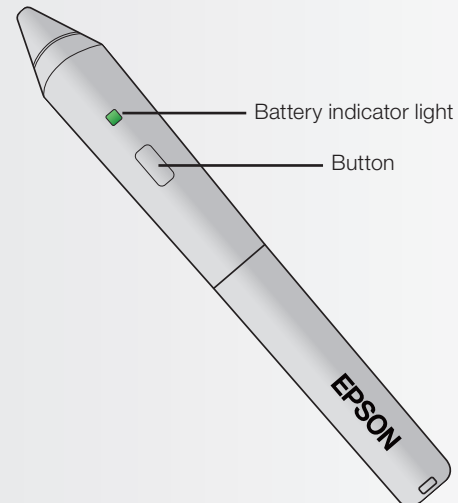

- Hold the pen at an angle, rather than perpendicular to the board.
- To left-click, tap on the board.
- To double-click, tap twice.
- To right-click, press and hold the button on the pen, then tap the board.
- To click and drag, tap and drag with the pen.

If you use the pens for several hours every day, you may have to recharge the batteries once a week. If you use them less often, you may only have to recharge once a month.


Tip: You can only write with one pen at a time, but you can use both pens and trade off. To learn more about EID and the BrightLink pen, watch the videos we made just for you on the included DVD. Or, sign up for a free webinar at www.epson.com/eduresources.

④ Calibrate Your System

Calibration coordinates the positioning of the pen with the location of your cursor. You can use either pen, and you only have to calibrate once.*

1 Do one of the following:

- Windows: click the  pen icon in the system tray on your taskbar (lower right corner of your screen), then select **Calibrate (Normal)**.

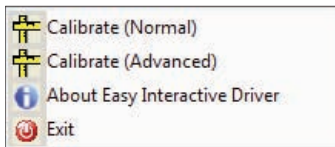


- Mac OS X: click the  pen icon in the Dock, select **Calibration** from the menu bar at the top of the screen, then select **Calibrate (Normal)**.




Note: If a red X  appears on the icon, you won't be able to calibrate. Make sure the projector is powered on and the USB cable from the interactive module is securely connected to your computer.

2 After you read the following message, click **OK**.

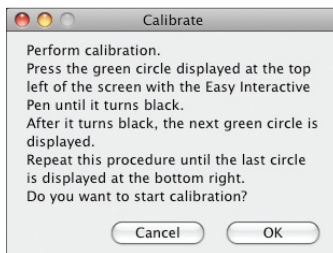

Note: Advanced calibration is recommended only if you are projecting highly detailed images.

- ## 3
- Wait a few moments for the flashing green circle to appear. Use the interactive pen to touch each flashing green circle as it appears. Continue until all the circles stop flashing and turn black.

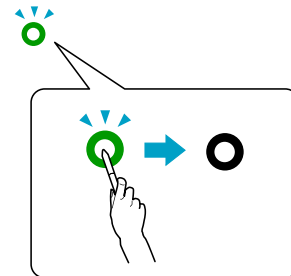

- Touch the center of each circle, and make sure you are not casting a shadow on the pen.
- Make sure you are not blocking the signal between the pen and the interactive module.
- Do not press the button on the pen while calibrating.
- If you make a mistake, or if too many circles appear at the same time, press **Esc** on your computer keyboard and restart calibration.

***Tip:** You don't have to recalibrate unless you do one of the following:

- Connect a different computer that has a different screen size
- Change the resolution of your monitor
- Notice that the pen position is no longer the same as your cursor


Congratulations! When you finish calibration, you're ready to explore your software options, as described on the next page.

5 Explore Additional Software Options


Easy Interactive Driver allows you to use the BrightLink pen as a mouse. For annotating, you need additional software. If you already have annotation software, you can use it with BrightLink.

You can also use one of the following:

- Easy Interactive Tools (EIT), free from Epson, is a basic annotation program available for download from the Epson website. Click the link on your desktop or go to **epson.com/brightlinkdownloads** (U.S.) or **epson.ca/brightlinkdownloads** (Canada).

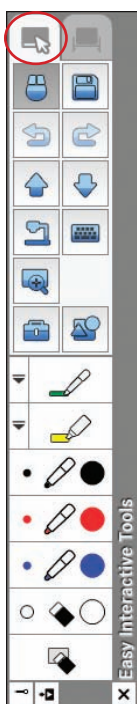

Interactive mode

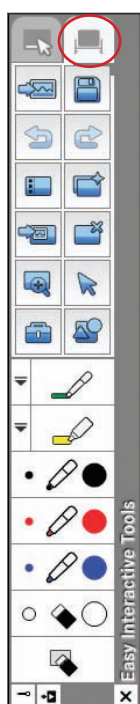


Whiteboard mode

For more information, see the Easy Interactive Tools Tips sheet in this Welcome Kit or the BrightLink *User's Guide*.

- TeamBoard Draw, a more intermediate level annotation program, is included with your projector. You can install it from the CD that came with your BrightLink, or download it from the Epson website at **epson.com/brightlinkdownloads** (U.S.) or **epson.ca/brightlinkdownloads** (Canada).

You will need Internet access and your product serial number to download TeamBoard Draw. Press the **Menu** button on the remote control and select the Info menu to see your serial number. (For BrightLink Solo, the serial number is on the arm of the interactive module.)

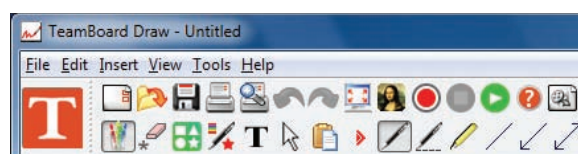

For more information, see the TeamBoard Draw Tips sheet in this Welcome Kit or the TeamBoard videos on your DVD.

EPSON and BrightLink are registered trademarks and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

BrightLink Solo is a trademark and PrivateLine is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.