




INSTACHEW
PURRCLEAN
SMART LITTER BOX

INSTRUCTION MANUAL

POWERED BY
INSTACHEW INFINITY

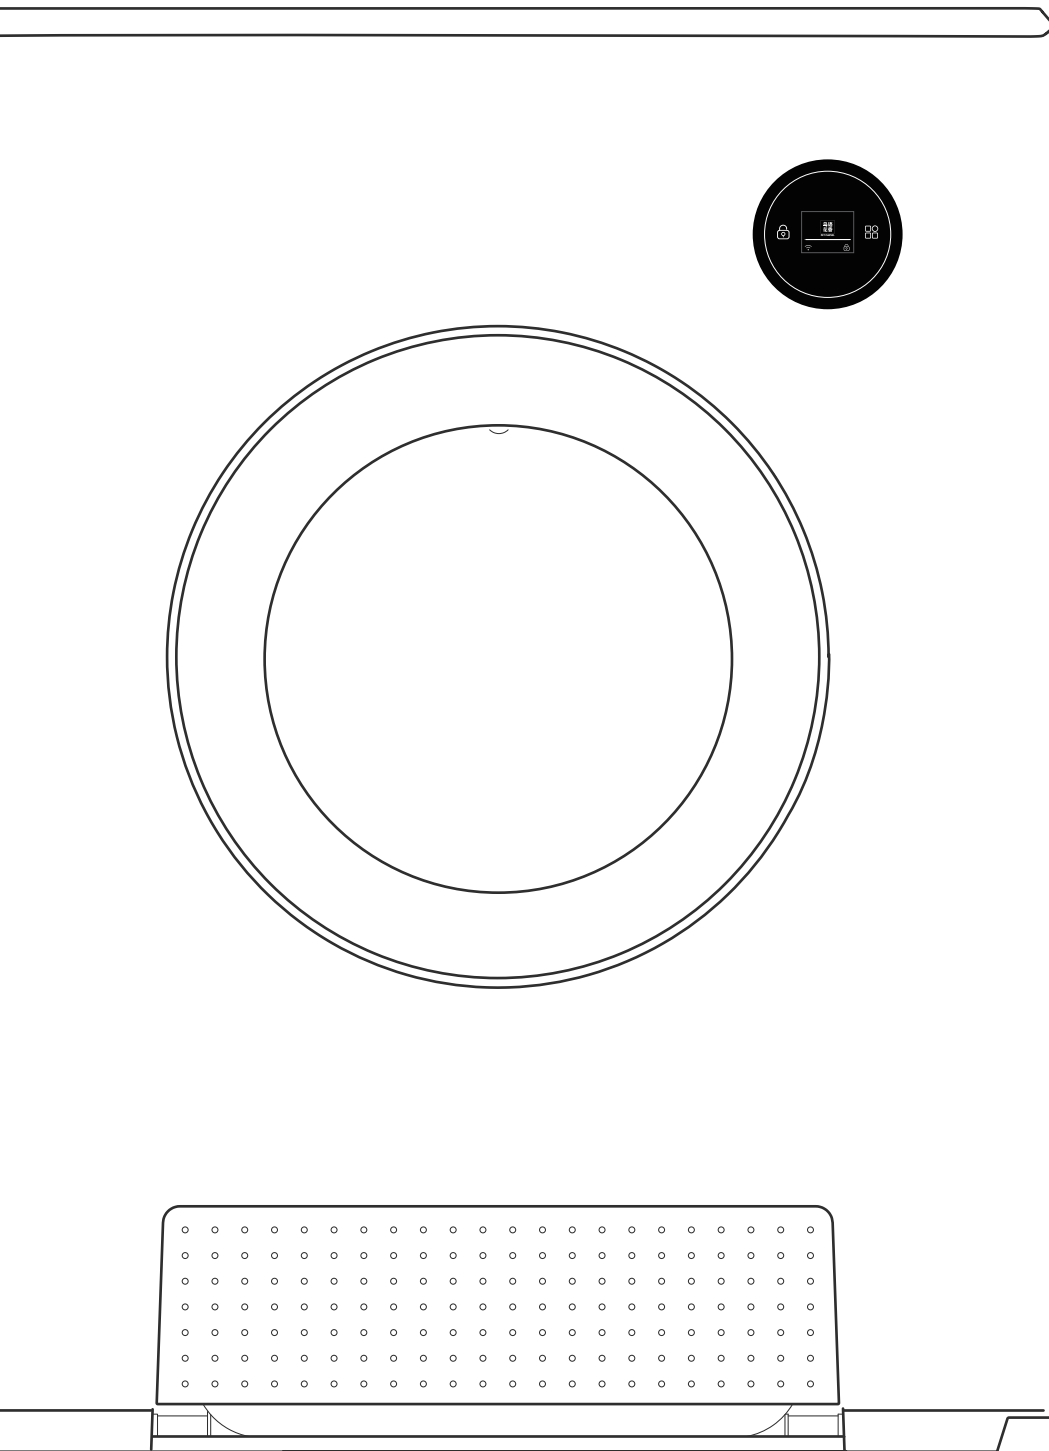


Thanks for purchasing an Instachew product!

Thank you for purchasing PurrClean Smart Litter Box. Your order made our day, we hope we make yours! Enhance your experience with INSTACHEW through the guidance of this manual. We'll walk you through our product's setup procedure and give you pointers on the tips you need while using it.

The purpose of INSTACHEW is to make pet care easy and keep pets healthy and happy! Our team is dedicated to improving the lives of pets all over the world while delivering useful and smarter insights for pet parents to live a worry-free life with their furfriends.

Enjoy your new worry-free life with pets while using your PurrClean.

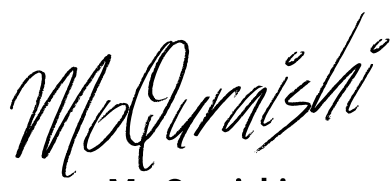

Mo Quraishi

Co-founder | CEO



Ramin Sadat

Co-founder | COO



Mo Quraishi



Ramin Sadat

TABLE OF CONTENTS

SAFETY TIPS	04
PACKING LIST & PRODUCT SPECIFICATION	05
PRODUCT INFORMATION	06
INSTRUCTION FOR THE USE OF THE PRODUCT	08
HOW TO INTRODUCE YOUR CAT TO THE PURRCLEAN	10
WEIGHTING & CALIBRATION	11
PRODUCT CLEANING	12
APP SETUP	13
DESCRIPTION OF THE DISPLAY	14
TROUBLESHOOTING TABLE	15
FREQUENTLY ASKED QUESTIONS	16
30-DAY SATISFACTION GUARANTEED RETURN POLICY	19
WARRANTY	20

SAFETY TIPS

USER GUIDE

Thank you for purchasing the PurrClean Smart Litter Box!

Before using this product, please read all the instructions and warning tips in this manual and on the product, thank you for your understanding.

2. NOTES ON USE

- This product can only be operated in accordance with the guidelines described in this instruction. Do not take any operate device until reading the instructions to avoid causing equipment abnormalities.

This appliance is not to be used by young pets under 6 months of age or pets that weigh less than 2.5kg.


- Children under the age of 8 are prohibited from operating the equipment, and children over the age of 8 should use it under the guidance of an adult.
- Please use the product indoor and do not place it in direct sunlight. Also it must be kept from fire sources.
- This product runs in low voltage, but leakage may still be caused by pets' biting on wire. So please place the power cord accordingly to avoid accidental damage.
- Please use the product indoor and do not place it in direct sunlight. Also it must be kept from fire sources.
- Inaccurate positioning can result in abnormal conditioning of the product.
- This product is forbidden to soaked, or be soaked by water.
- If you need to leave home for a long time, please make sure that there is sufficient cat litter in the PurrClean Smart Litter Box and the bin has been cleaned.
- When product failure happens, please first check the troubleshooting table in this manual. If you're unable to determine the bug, please contact customer service.
Email: service@instachew.com
- Please use the original power cord, otherwise it may cause safety hazards.
- If the power cord or plug is damaged, please stop using it immediately and contact customer service.
- Please ensure that the power cord is properly positioned so that it will not be damaged or crushed by stepping on it or tugging on it.
- Do not bend or wind the power cord to prevent overheating and damage.
- If you plan not to use the product for quite some time, please unplug the power cord.
- When unplugging the power, please hold the plug and pull it out, and please ensure you have turned off the device prior.
- Do not touch the plug or switch with wet hands to prevent electric shock.
- Do not disassemble, modify, or repair this product by yourself, otherwise it will be deemed as a waiver of all warranty and service rights.

SCAN THE QR CODE
FOR ALL PRODUCT INFORMATION




PACKING LIST & PRODUCT SPECIFICATION

After opening the product packaging, please confirm that the product is intact and that the accessories are complete by checking the picture below.

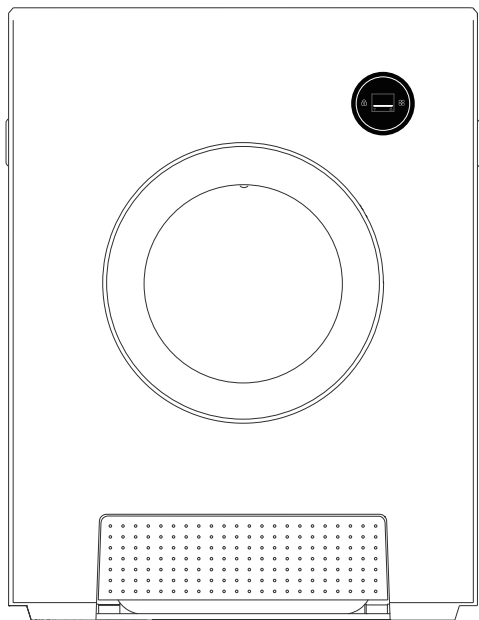


PURRCLEAN*1

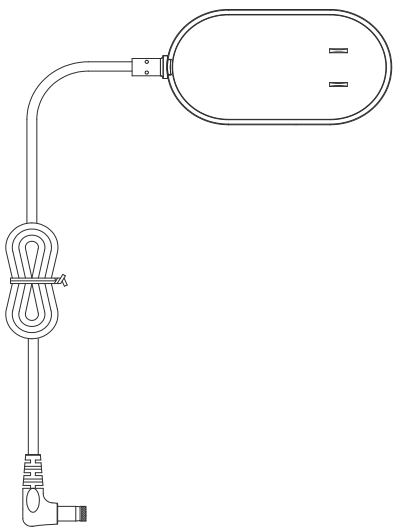

POWER CORD*1



INSTRUCTION MANUAL*1

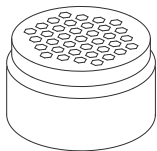

DEODORIZER*2



PURRCLEAN WASTE BAG*1

PRODUCT NAME: Purrclean Smart Litter Box

PRODUCT MODEL: IC085A

RECOMMENDED PET TYPE: Cats - over 6 months of age and weigh over 2.5kg

PRODUCT SIZE: 520*540*680 (mm)

WEIGHT: 14.5KG


RECOMMENDED CAT LITTER: Clumping litter, Tofu Titter, Bentonite Litter

RATED VOLTAGE: 12VDC

RATED POWER: 15W

CONNECTION MODE: WI-FI LINK (2.4GHZ – 5 GHZ)

PRODUCT INFORMATION

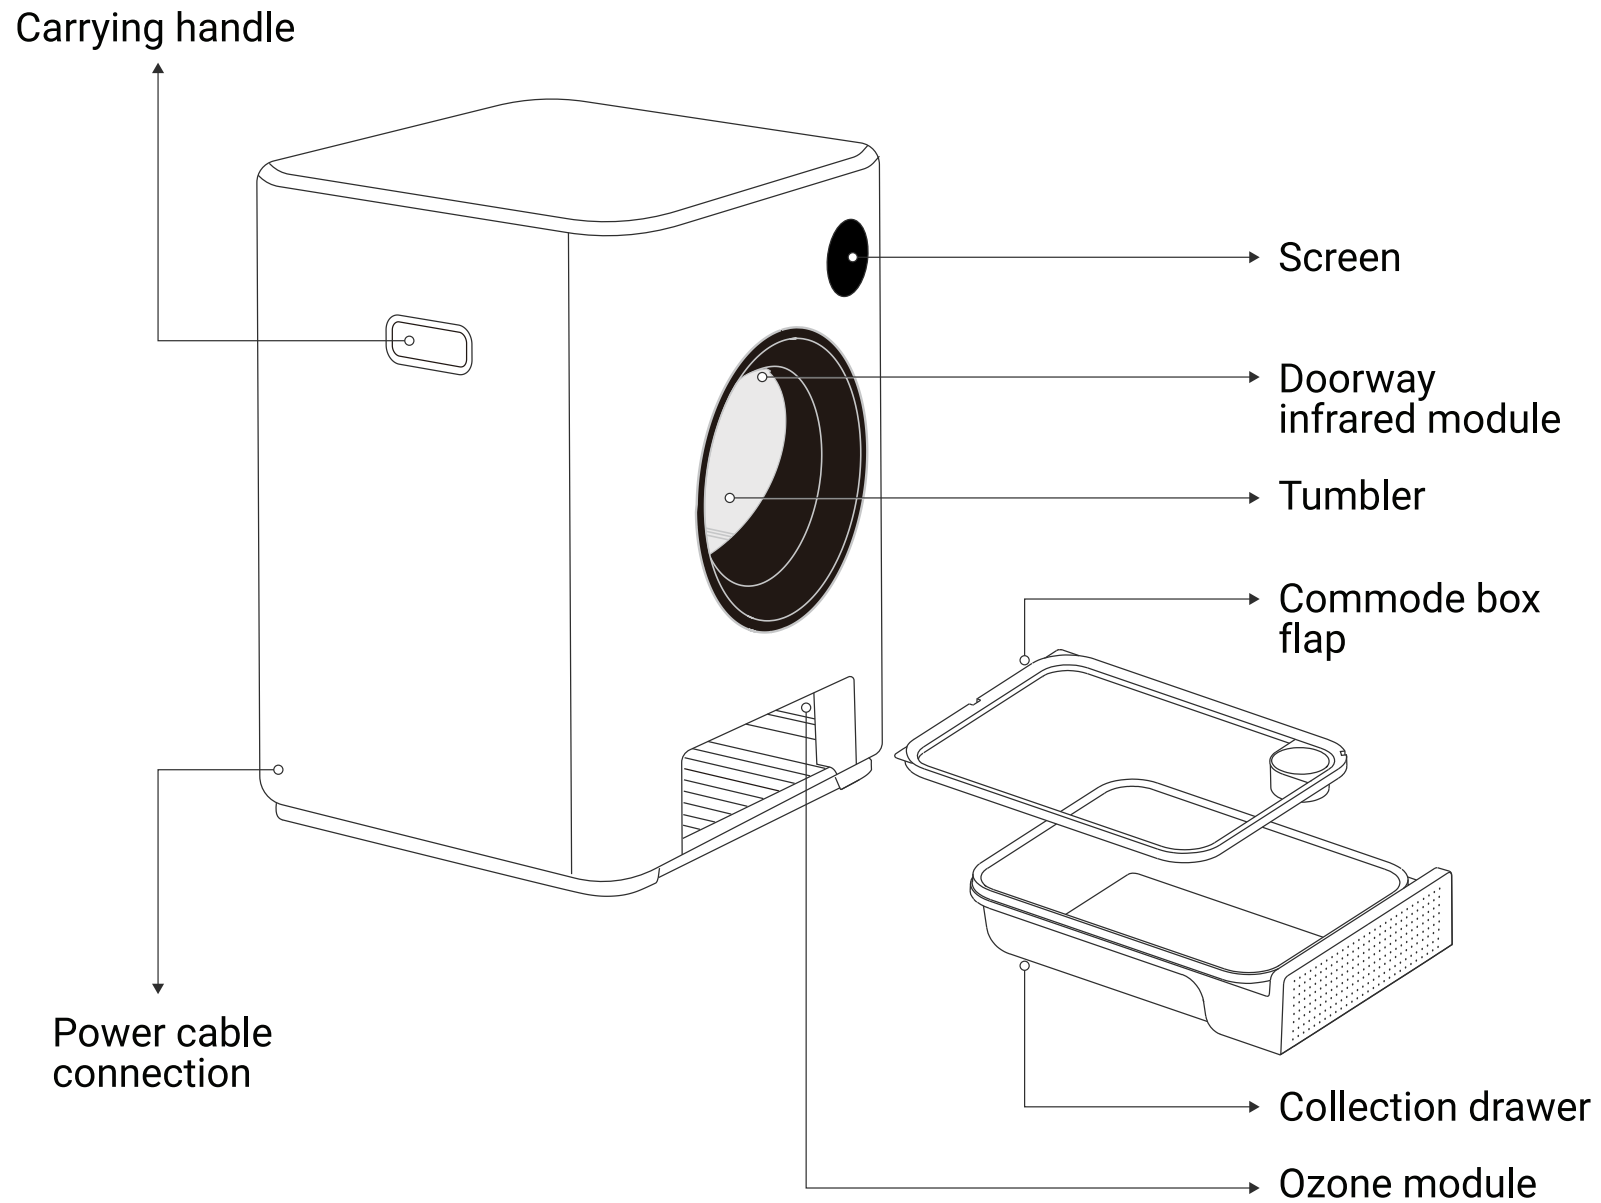


PRODUCT INFORMATION

DEVICE UNLOCK	Long press the child lock key for 3s	
MODE SELECTION	After unlocking, then click the mode key to switch modes	
DEVICE UNBINDING	After unlocking, long press the mode key for 10s and release when you hear a tick	
TERMINATE OPERATION	After unlocking, long press the child lock key for 5s	
FORCED OPERATION	After unlocking in case of fault or abnormality double click the child lock key	
DEVICE LANGUAGE	After unlocking, press and hold the child lock key and the mode key at the same time for 5s	


INSTRUCTIONS FOR THE USE OF THE PRODUCT

Instructions for unpacking


1. When you first receive the equipment, please remove the drum (when taking it out, you need to lift the barrel up slightly) and remove all the packaging materials.

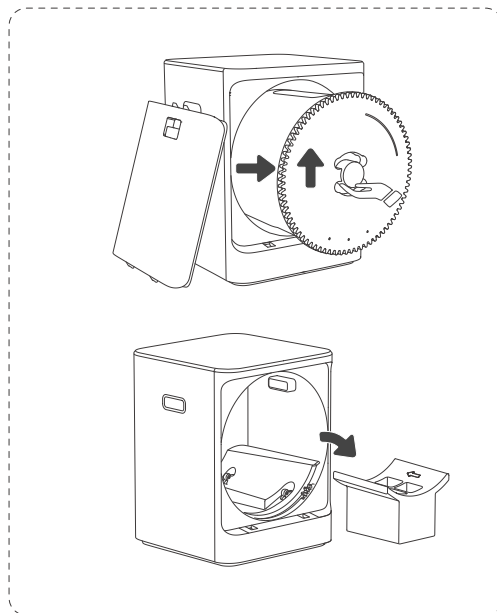


2. Open the deodorization box lid and remove the protective film before resealing it.

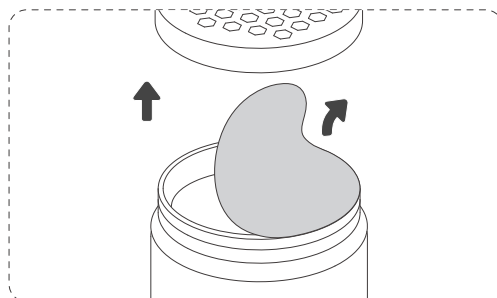


3. Remove the cover of the circular groove on the rear cover of the roller, place a deodorization box into the circular groove, and then put the cover back on.

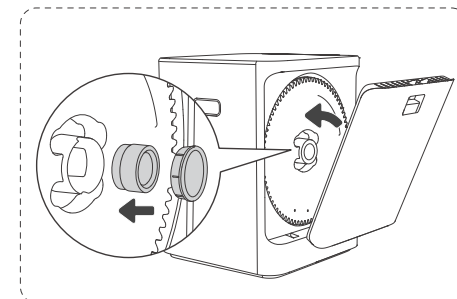

4. Pull out the waste bin and lift the waste bin cover upwards to remove it.

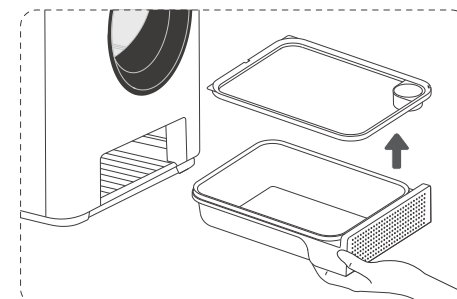

5. Turn the product upside down, place it in the bottom drawer of the circular groove.

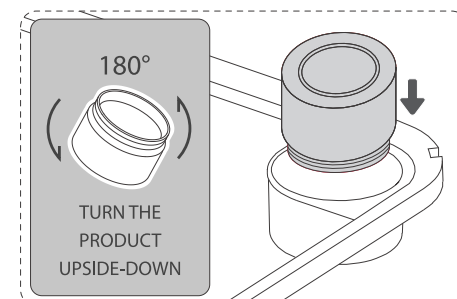




INSTRUCTIONS FOR THE USE OF THE PRODUCT

6. Close the lid from the bottom. Put the drawer in and it's ready to use.


Note: To ensure optimal performance, it is recommended to replace the deodorization box every 60 days or as needed.

7. Put on the litter bag, cover with the commode box flap and push it back into place.

8. Turn on the power and start using.

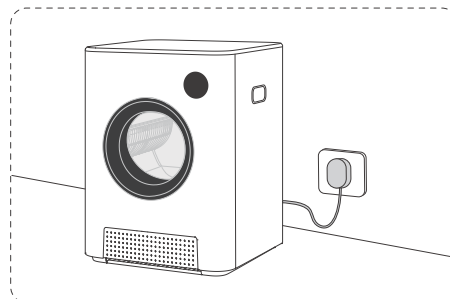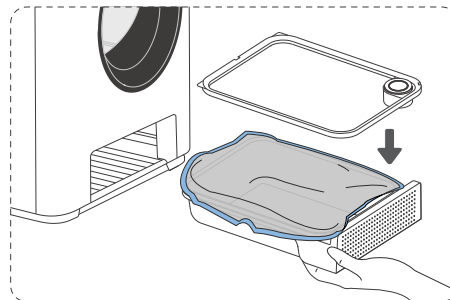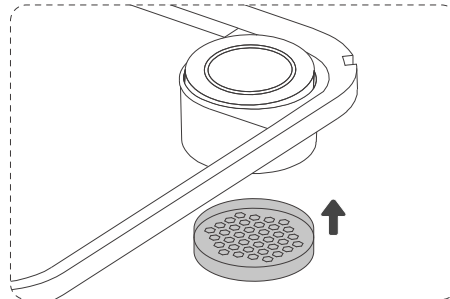

9. Add the cat litter through the doorway.

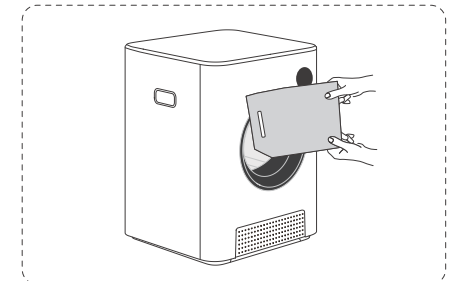


Device Networking

1. Please download the App first, then scan the code to get the tutorial. Tutorial includes device networking and product usage.



2. Scan the QR code to view tutorials on unboxing and F.A.Qs

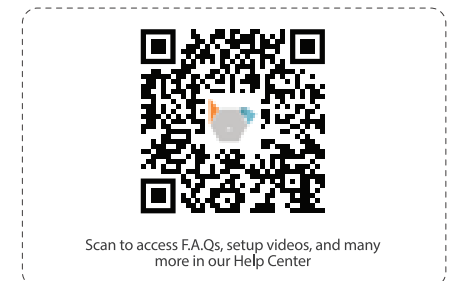

HOW TO INTRODUCE YOUR CAT TO PURRCLEAN

Introducing a new litter box to a cat can be a challenging task, as cats can be very particular about their litter boxes. Here are some tips to entice your cat to use the new litter box:

1. Consider putting the new box exactly where the old one was.
2. Use scent to entice them. Add a scoop of litter from the old litter box.
3. Make it attractive: use toys and treats.
Place treats around the Purrclean.
Scatter treats in the area with the litter box.
4. Install everything but don't plug it in right away, make sure your cat goes in without being scared of the sound and when they are used, then you leave it.
5. Encourage use: show your cat the new litter box and encourage them to use it by placing them in it after meals or when they show signs of to use the litter box.
6. Be patient: it may take some time for your cat to get used to the new litter box. If they continue to use the old box, keep it available for a few weeks until they are completely comfortable with the new one.

WEIGHTING AND CALIBRATION

Step 1: Power up the machine and wait for the reset to be completed.

Step 2: Add litter to the MAX line (please follow the standard strictly, otherwise the weighing accuracy will be affected).

Step 3: Execute the shovel forcibly, after the shovelling has finished the weighing calibration is complete.

Note: Powering the device on and off (unplugging and then plugging back in) will reset the device weight settings.

Note:

1. Power up the machine and wait for the reset to be completed.

Step 1: Power up the machine and wait for the reset to be completed.


Step 2: Execute the scoop mode and weigh and calibrate to complete after the scoop is finished.

2. To add litter when there is leftover litter, please execute the poop scooping mode directly after adding the litter, and weigh and calibrate after the scooping is finished.


PRODUCT CLEANING

Cleaning steps


Step 1: Perform a bin clean (failure to perform this operation risks damaging the equipment) and cut the power off.

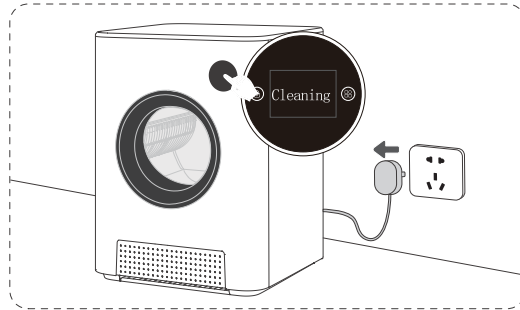


Step 2: Open the back cover and remove the drum (lift the drum slightly upwards when removing it).

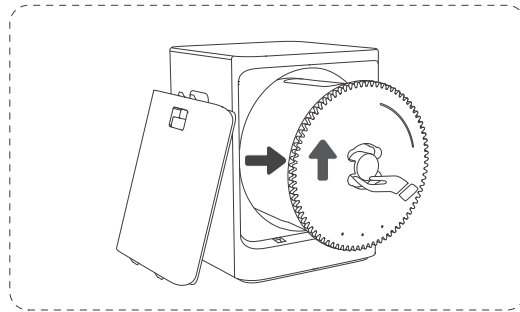


Step 3: Rinse the drum and wipe the drum until there is no residual water.

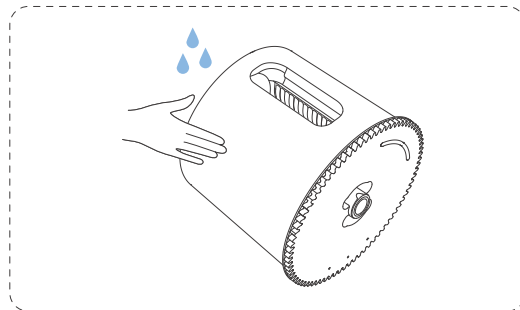

Step 4: Use a dry, soft cotton cloth to wipe the infrared lens inside the device. Clean the four indicated positions shown by the arrows, as well as the four corresponding symmetrical positions, for a total of eight locations.

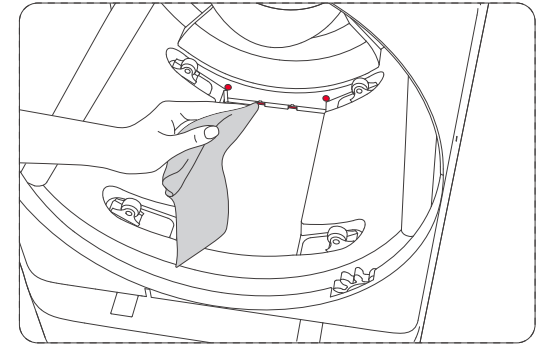

Step 5: Put the drum back on (lift the drum upwards slightly when putting it back on close the back cover,) Switch on the power and the unit will automatically reset.

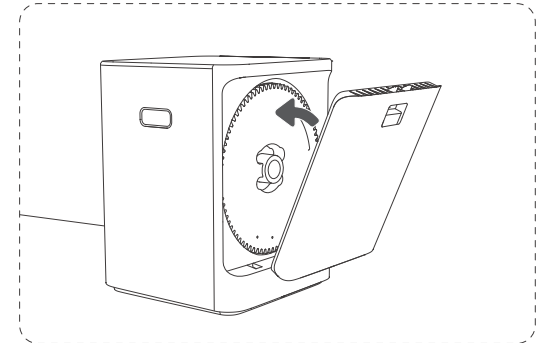


APP SETUP



1. Launch the Instachew Infinity App



2. Click "Register" to create a new account.

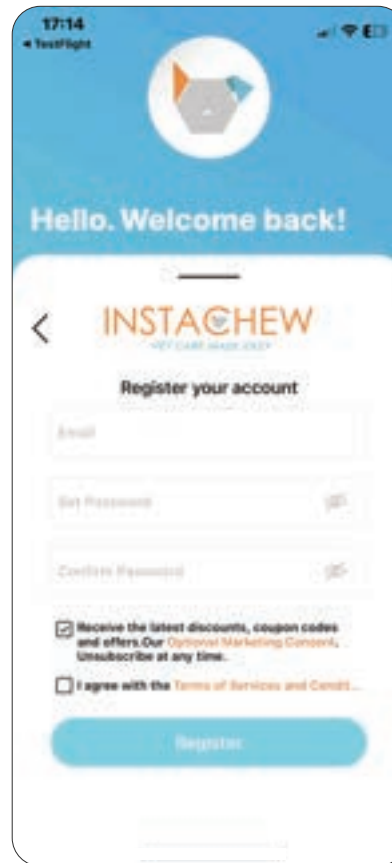

3. After registering a new email, input the received **verification code** to continue creating your new account.



4. Start setting up your profile, adding your and your pet's informations.




5. You're all set! It's now time to link your device, by clicking "Add Device" in your homepage.

DESCRIPTION OF THE DISPLAY


DEFAULT

Display: Remaining amount of cat litter and Cat weight.

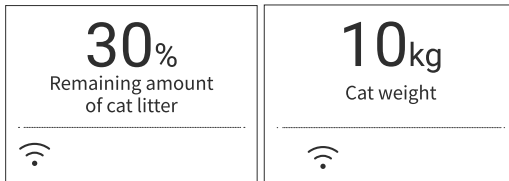


MANUAL FUNCTIONS

Display: Shovel Litter, Clean up the bin and Odor Control.




RUNNING

Display: Shovelling Litter, Cleaning up the bin, Deodorizing, Self-testing Commenced and Resetting.

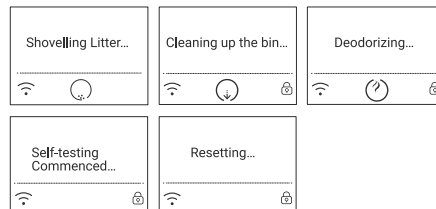


RUNNING PAUSE

Display: Stop shovelling litter, Clearance suspended, Stop deodorizing, Stop Self-testing, Stop Resetting.

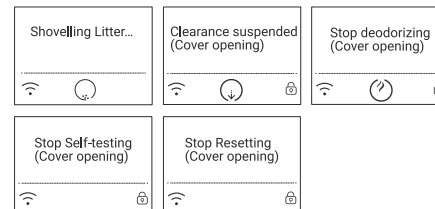

OTHER STATES OR FAULTS

Notifications: Back cover not closed, Reset countdown, Please clean the drawer, Pet near the entry and Foreign object in bin.

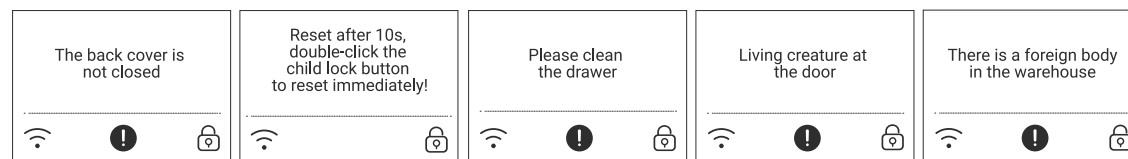

Note: Powering the device on and off (unplugging and then plugging back in) will reset the device weight settings.

TROUBLESHOOTING TABLE

CLASSIFICATION	TROUBLESHOOTING CODES	TROUBLESHOOTING NAMES
WEIGHING FUNCTION	E1	WEIGHING SENSOR ANOMALY
INFRARED FUNCTIONS	E2	INFRARED PYROELECTRIC SENSOR INTERFACE ANOMALY
	E3	INFRARED PYROELECTRIC SENSOR ANOMALY
OPHTHALMIC SENSING FUNCTION	E4	BOTTOM FULL RECEIVING OPHTHALMIC SENSING INTERFACE ANOMALY
	E5	BOTTOM RECEIVING OPHTHALMIC SENSING ANOMALY
	E6	FOREIGN BODY IN THE BOTTOM RECEIVING PHOTO EYE
SAFETY FEATURES	E9	ABNORMAL BACK COVER SAFETY SWITCH INTERFACE
OPHTHALMIC SENSING FUNCTION	E10	HALL MAGNETIC INDUCTION INTERFACE ANOMALY
	E11	ALL HALL ANOMALIES
	E12	DISCHARGE HALL ANOMALY
	E13	HALL MAGNETIC INDUCTION INTERFACE ANOMALY
	E14	MOTOR INTERFACE ABNORMALITIES / ADAPTER ABNORMALITIES
	E15	MOTOR BLOCKING

FREQUENTLY ASKED QUESTIONS

Can it be used for multi-cat households?

Yes! It can be used for a multi-cat household. The toilet area can fill up to 7L of litter at once and can be clean a minimum of once a week.

Can my cat get stuck inside?

The litter box has 12 safety sensors that initiate when a cat enters or leaves the litter box. When a cat approaches the litter box, all sensors stop and allow it to enter. You will get a notification or text message anytime there is activity.

Can we use the Purrclean without connecting it to the application?

Yes, you can use Purrclean manually, and the features on the Application are not accessible.

How often do I need to refill my cat litter?

One bag of 6L of litter can be used for 14 days. The device will also notify you to refill litter through the Instachew Infinity App notifications.

How stable is the Purrclean?

The Purrclean sits on four legs offering stability with a non-slip bump under its feet. The litterbox is 14.51 kg (about 32 lbs). It is also heavier when using litter.

How to unbind the device?

The device is not yet setup on the Instachew Application:

- Press and hold the lock icon on the digital screen's left side until you hear a prompt.
- Then press and hold the icon on the digital screen's right side until you hear a prompt.
- Once complete, open the Instachew App and start the setup process.

I'm having a hard time connecting my device to my network. I can't get the WIFI icon to blink.

Kindly consider the things below:

- Ensure that the software on your phone is up to date;
- Ensure the correct application is downloaded (Instachew Infinity App);
- Ensure that your phone is connected to a 2.4 GHz Wi-Fi connection. You can find this information from the options below:
 - at the back of your Wi-Fi router
 - Device Settings
 - Call your service provider to confirm the connectivity you have;
- The Purrclean resets itself when you plug it in;
- Please wait until that reset is complete and "0 USES TIMES" displays on the screen
- Prior to connecting press the Lock Key button on the left side of the device screen until you hear a beep
- Once you hear the beep, please hit the Menu Button (four square icon on the right) until you hear a beep sound
- Then you can start adding the device

FREQUENTLY ASKED QUESTIONS

What is the recommended size of the cat suitable for Purrclean?

The recommended size for a cat to use the Purrclean is between 2.5 kg and a maximum of 16 kg. The inner dimensions of the litter box are 46 cm wide and 42 cm deep.

What if my cat's stool is soft? Can it be cleaned?

A silicon layer inside the barrel of the litter box deforms when it rolls and separates waste. This layer solves the issue of soft stools sticking to the inside of the litter box. The layer is detachable so that you can easily clean it. To remove it, remove the litter box lid and take it out.

What are the Purrclean's dimensions from the ground to the entry hole?

It is 9 inches, and the entrance hole is also more prominent in diameter.

What types of litter do you recommend?

Any clumping litter, such as bentonite, mixed and tofu litter

Note: no need to change your cat litter habits

Where do I find the power cord?

The power cord can be found in the Styrofoam placed under the drum. You'll need to take out the drum first to be able to view it.

What should I do if I receive an E11 error?

Try removing the drum, placing it back, and making sure that everything is in the right position and the gears and clips are aligned. Most times this prevents the device from working properly. Please also ensure that you are using the provided waste bag, take out the tray, and install the pressure ring correctly.

After a few days, even if the drawer is not full, my entire house begins to smell like pee.

Schedule extra scooping five to six times per day to help with the odor problem. Additionally, the device will automatically deodorize while it is cleaning, and depending on the situation, frequent deodorization can be performed which will solve the odor issue.

Manual scooping initiated 30-35 seconds into the countdown. So there's a big delay.

Unplug and re-plug the adapter to allow it to reset itself. Now, when you press Manual scoop, it will initiate right away.

What does the error "Please Clean the Dustbin" mean?

The most common cause of the "Dust Bin Error" is that the trash bin is full and must be emptied and cleaned manually. Incorrect installation: We suggest that you try removing the drum, placing it back, and making sure that everything is in the right position and the gears and clips are aligned. Most times this prevents the device from working properly.

FREQUENTLY ASKED QUESTIONS

Why do I keep getting the error message "The Bin or drum Obstructed?"

If your Purrclean Litter box keeps saying "drum obstructed," it means that the cleaning mechanism of the litter box is having difficulty rotating or is stuck due to an obstruction. We recommend that you take the drum out and clean it once a month or more frequently if you have many cats.

FOR MORE FAQs AND INFO ABOUT
THE PRODUCT, SCAN THE QR CODE



Call us: 1-866-922-5554

Inquiries: info@instachew.com

Support: service@instachew.com

30-DAY SATISFACTION GUARANTEED RETURN POLICY

All of our products purchased directly from **Instachew.com** are returnable within 30 days upon receipt. Please email service@instachew.com with your proof of purchase and reason for return.

For larger products, The PurrClean, directly purchased from Instachew.com only, are returnable within 60 days from date of delivery.

For items purchased through Instachew's authorized resellers and distributors, all customers must adhere to those resellers and distributors' respective policies for refunds and returns.

TO BE ELIGIBLE FOR A FULL REFUND, YOUR ITEM MUST HAVE/BE:

- Gently used.
- In good physical condition without any damage.
- Clean condition (a cleaning fee will be charged if the unit is returned with litter or waste).
- Must be in the original packaging (including all the accessories).
- Receipt or proof of purchase.

ADDITIONAL TERMS AND CONDITIONS:

- You are responsible for the return shipping charges if you are reaching out for warranty coverage.
- Your purchase price will be refunded through the original payment method with 7-10 business days.
- Instachew cannot be held responsible for any lost packages during the return process.
- For items received as a gift, you will need to provide the order number or proof of purchase received by the purchaser. Instachew is only able to issue a refund to the original payment method used by the purchaser.

RETURN POLICY FREQUENTLY ASKED QUESTIONS

How do I receive a refund if I'm unhappy with my Device?

Our products come with a 30-day or 60-day trial period. If for any reason you are dissatisfied with your purchase. You must only pay for return shipping. If you bought the device from a third-party reseller, kindly get in touch with your point of purchase for further assistance. In terms of the warranty, we can help you, but not in terms of the reimbursement.

Do I need an RMA number for a return? How do I get this?

To enable us to easily identify the returned unit, it's essential to include an RMA (Return Merchandise Authorization) number and your name on the box. To acquire an RMA number, please get in touch with Instachew Customer Support.

- B. There's no need to obtain an RMA. To enable us to easily identify the returned unit, it's essential to include your full name on the box and make sure to provide us with return tracking information.

Do you offer a return shipping service?

We can provide a return shipping label and deduct the shipping cost from your refund.

Can I return or exchange after purchase?

If you are unhappy with your purchase, you have 30 days (from the date you received it) to return or exchange it. If you find any defects or need to return an item, please reach out to our customer service team at service@instachew.com.

Please note however, that our Return & Exchange Policy doesn't extend to damages caused by negligence, accidents, misuse, abuse, or product modification.

WARRANTY

The warranty for our product will be valid for a duration of one year starting from the purchase date. To be eligible for the warranty, you will need to provide a proof of purchase, such as a receipt from Instachew or one of its authorized retailers.

The warranty provided does not extend to consumable parts that undergo normal wear and tear, such as batteries. It also does not cover damages resulting from the following:

- Physical or water damage.
- Unauthorized repair, modification, disassembly, or opening of the product's chassis.
- Improper operation, maintenance, or use contrary to product instructions or connection to an improper voltage supply.
- Negligent or careless use or operation of the product.
- Use of consumables, parts, or accessories, including batteries, not produced or recommended by Instachew unless prohibited by applicable law.

Moreover, this warranty does not cover products that meet any of the following conditions:

- Used outside the country of purchase.
- Purchased from a non-authorized Instachew dealer.
- Repaired or modified by parties not affiliated with instachew.com or its authorized agents.
- Serial numbers have been tampered with or removed.
- Damaged from external sources such as transit, weather, electrical outages, or power surges, to the extent allowed by applicable law.

WARRANTY FREQUENTLY ASKED QUESTIONS

How to initiate a warranty claim

When reaching out to our customer support team regarding a warranty claim, kindly include a detailed description of the product in question, elaborate on the problem you are facing with the product, and attach a valid proof of purchase for verification purposes.

For items received as a gift

You will need to provide the order number received by the purchaser if it was directly purchased from Instachew or a copy of the proof of purchase if purchased from one of our authorized retailers.

Are there any costs associated with making a warranty claim?

You will be responsible for all return shipping charges and will bear all risk of loss or damage to the product while it is in route to us. For your protection, we recommend that you choose a traceable shipping option.

What actions will void the warranty?

Please be aware that damages resulting from negligence, accidents, misuse, abuse, or product modification are not covered by our Return & Exchange Policy.

What does the warranty cover?

To confirm your eligibility and ensure that your issue cannot be resolved through technical support, we recommend visiting the "contact us" section of our website, www.instachew.com, before filing a warranty claim. This will help to expedite the claims process and ensure that any issues are resolved as quickly as possible.

Can the warranty be extended or renewed?

Please refer to the website (instachew.com) for updates on offerings for warranty extensions.

FCC Statement

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC/IC RSS_102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.


Name: Purrclean Smart Litter Box	Wireless Type: Wi-Fi (2.4Hz)
FCC ID: 2A3CT-IC05A	Dimensions: 520*540*680 (mm)
IC: 27782-IC085A	Rated Current: 15W
Model: IC085A	Voltage: 12.0V --- 2A
Made in China	CAN ICES-3 (B)/NMB-3(B)

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



All contents in this document have been carefully checked. If there are any printing errors or misunderstandings in the contents, please consult our company. Note: If there is any technical improvement of the product, it will be included in the new manual without further notice. If there is any change in the appearance and color of the product, the real object shall prevail.

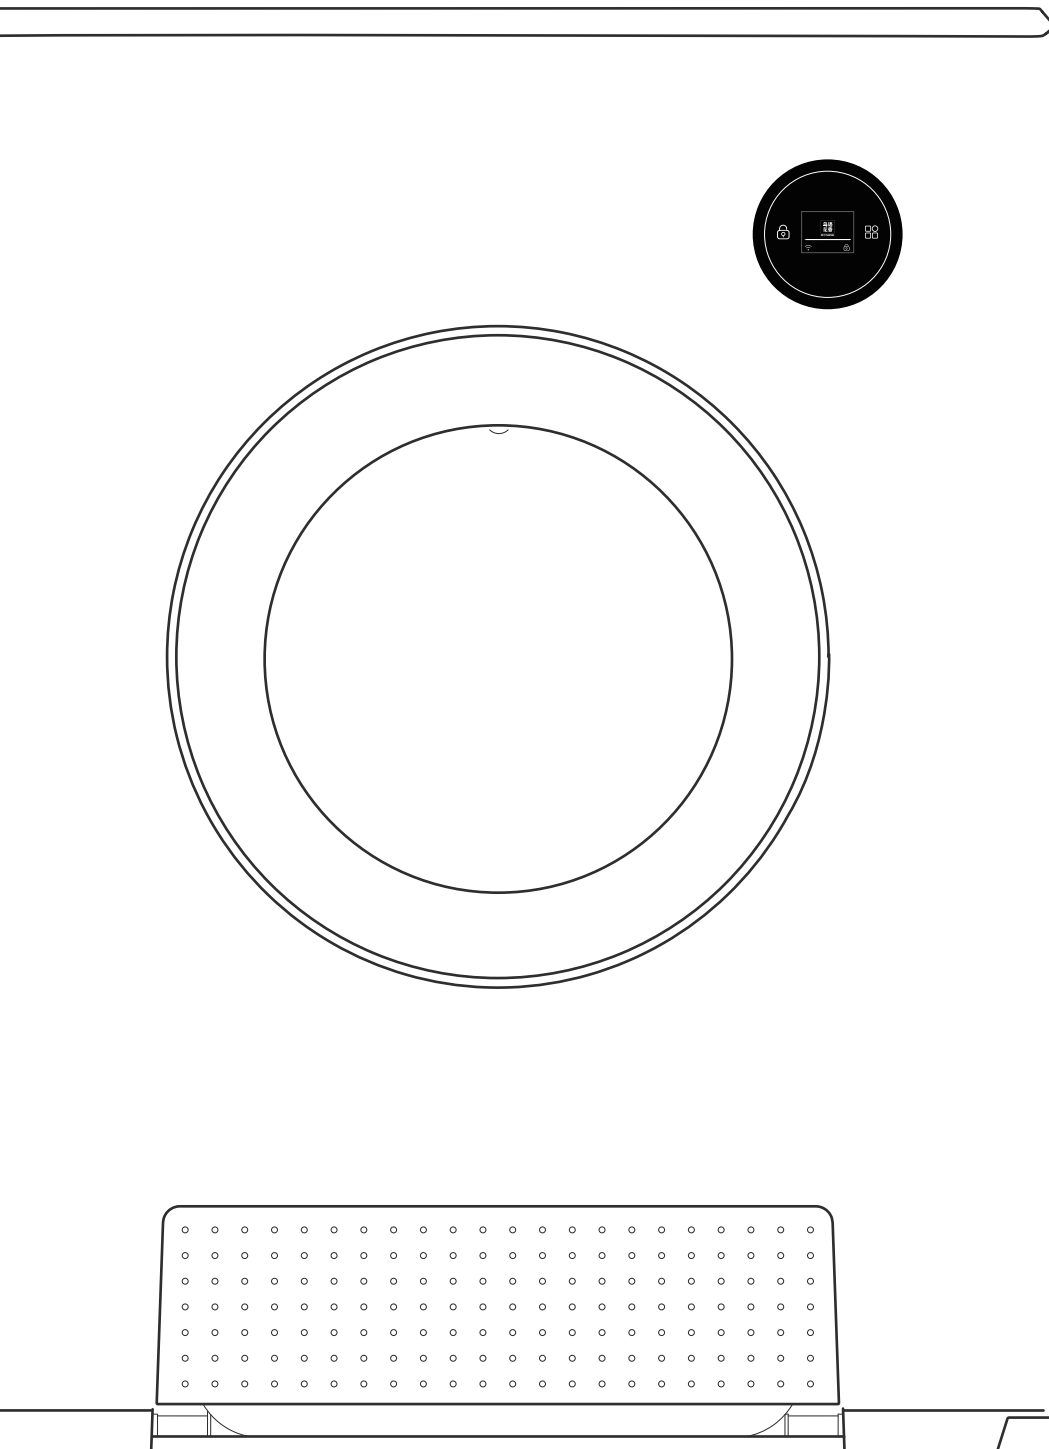

INSTACHEW
PURRCLEAN
LITIÈRE INTELLIGENTE

MANUEL D'INSTRUCTIONS

POWERED BY
INSTACHEW INFINITY



Merci d'avoir choisi un produit INSTACHEW!

Nous vous remercions d'avoir acheté la Litière intelligente Purrclean. Votre commande a illuminé notre journée, et nous espérons illuminer la vôtre !

Améliorez votre expérience avec INSTACHEW grâce à ce manuel. Nous vous guiderons à travers le processus d'installation de notre produit et vous fournirons des conseils pratiques pour son utilisation.

Chez INSTACHEW, notre mission est de simplifier le soin des animaux tout en favorisant leur santé et leur bonheur ! Notre équipe s'engage à améliorer la vie des animaux partout dans le monde en fournissant des informations utiles et intelligentes aux parents d'animaux, pour leur permettre de vivre une vie sans souci avec leurs compagnons à quatre pattes.

Profitez de votre nouvelle vie sans souci avec vos animaux grâce à votre Purrclean.



Mo Quraishi

Co-founder | CEO



Ramin Sadat

Co-founder | COO



Mo Quraishi



Ramin Sadat

TABLE DES MATIÈRES

CONSIGNES DE SÉCURITÉ	27
LISTE DE COLISAGE & SPÉCIFICATIONS DU PRODUIT	28
INFORMATIONS SUR LE PRODUIT	29
INSTRUCTIONS D'UTILISATION	30
COMMENT INTRODUIRE VOTRE CHAT AU PURRCLEAN	33
PESÉE & ÉTALONNAGE	34
NETTOYAGE DU PRODUIT	35
CONFIGURATION DE L'APPLICATION	36
DESCRIPTION DE L'AFFICHAGE	37
TABLEAU DE DÉPANNAGE	38
QUESTIONS FRÉQUEMMENT POSÉES	39
POLITIQUE DE RETOUR SATISFAIT OU REMBOURSÉ DE 30 JOURS	42
GARANTIE	43

CONSIGNES DE SÉCURITÉ

GUIDE D'UTILISATION

Merci d'avoir acheté la litière intelligente PurrClean !

Avant d'utiliser ce produit, veuillez lire attentivement toutes les instructions et consignes de sécurité présentes dans ce manuel et sur le produit.

Merci de votre compréhension.

NOTES D'UTILISATION

- Ce produit doit être utilisé conformément aux instructions de ce manuel. Ne l'utilisez pas avant d'avoir lu toutes les consignes afin d'éviter tout dysfonctionnement.

- **Cet appareil ne convient pas aux jeunes animaux de moins de 6 mois ni aux animaux pesant moins de 2,5 kg.**

- Les enfants de moins de 8 ans ne doivent pas utiliser cet appareil. Les enfants de plus de 8 ans doivent l'utiliser sous la surveillance d'un adulte.

- Utilisez ce produit uniquement en intérieur, à l'abri de la lumière directe du soleil et des sources de chaleur.

- Bien que ce produit fonctionne en basse tension, un risque de fuite électrique peut exister si l'animal mord le câble d'alimentation. Veillez à bien positionner le cordon pour éviter tout dommage accidentel.

- Un mauvais positionnement du produit peut entraîner un fonctionnement anormal.

- Ce produit ne doit en aucun cas être immergé ou exposé à l'eau.

- Si vous devez vous absenter longtemps, assurez-vous que la litière est suffisante et que le bac est propre.

- En cas de problème, consultez d'abord le tableau de dépannage de ce manuel. Si le problème persiste, contactez le service client : service@instachew.com.

- Utilisez uniquement le câble d'alimentation d'origine pour éviter tout risque de sécurité.

- Si le cordon ou la prise est endommagé(e), cessez immédiatement l'utilisation et contactez le service client.

- Veillez à ce que le cordon soit correctement positionné pour éviter qu'il ne soit écrasé, tiré ou endommagé.

- Ne pliez ni n'enroulez excessivement le câble pour éviter toute surchauffe ou détérioration.

- Si vous n'utilisez pas le produit pendant une longue période, débranchez-le.

- Débranchez toujours en tenant la prise, et assurez-vous que l'appareil est éteint avant de le faire.

- Ne touchez pas la prise ou l'interrupteur avec les mains mouillées afin d'éviter tout risque d'électrocution.


- Ne démontez, ne modifiez et ne réparez pas ce produit vous-même. Toute intervention non autorisée annulera la garantie et les services associés.

SCANEZ LE CODE QR POUR TOUTES
LES INFORMATIONS SUR LE PRODUIT




LISTE DE COLISAGE & SPÉCIFICATIONS DU PRODUIT


Après avoir ouvert l'emballage du produit, veuillez confirmer que le produit est intact et que les accessoires sont complets en vérifiant l'image ci-dessous.

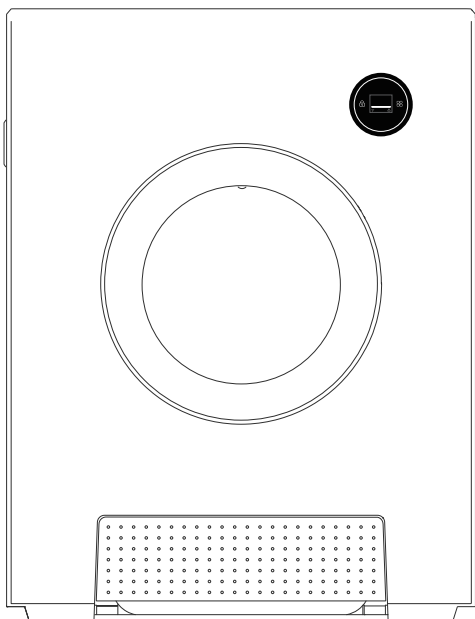


PURRCLEAN*1

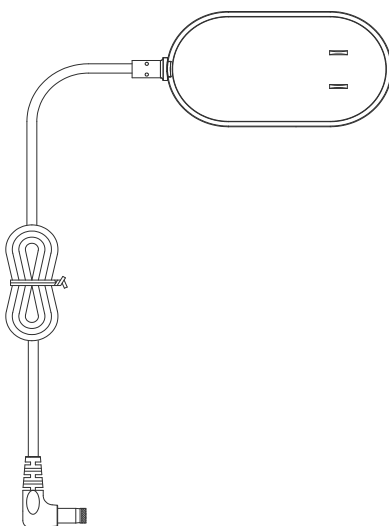

CÂBLE D'ALIMENTATION*1

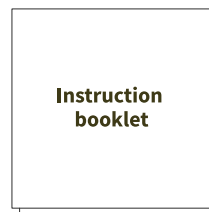

MANUEL D'INSTRUCTIONS*1

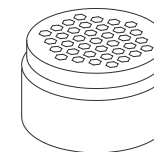

DÉODORISANT*2



SACS À DÉCHETS PURRCLEAN*1

NOM DU PRODUIT : Purrclean Smart Litter Box

MODÈLE DU PRODUIT : IC085A

TAILLE DU PRODUIT : 520*540*680 (mm)

POIDS : 14,5KG

TENSION NOMINALE : 12VDC


PUISSANCE NOMINALE : 15W

TYPE D'ANIMAL RECOMMANDÉ : Chats - âgés de plus de 6 mois et pesant plus de 2,5 kg

LITIÈRE RECOMMANDÉE : Litière agglomérante, litière de tofu, litière de bentonite

MODE DE CONNEXION : CONNEXION WI-FI (2.4GHZ - 5GHZ)

INFORMATIONS SUR LE PRODUIT

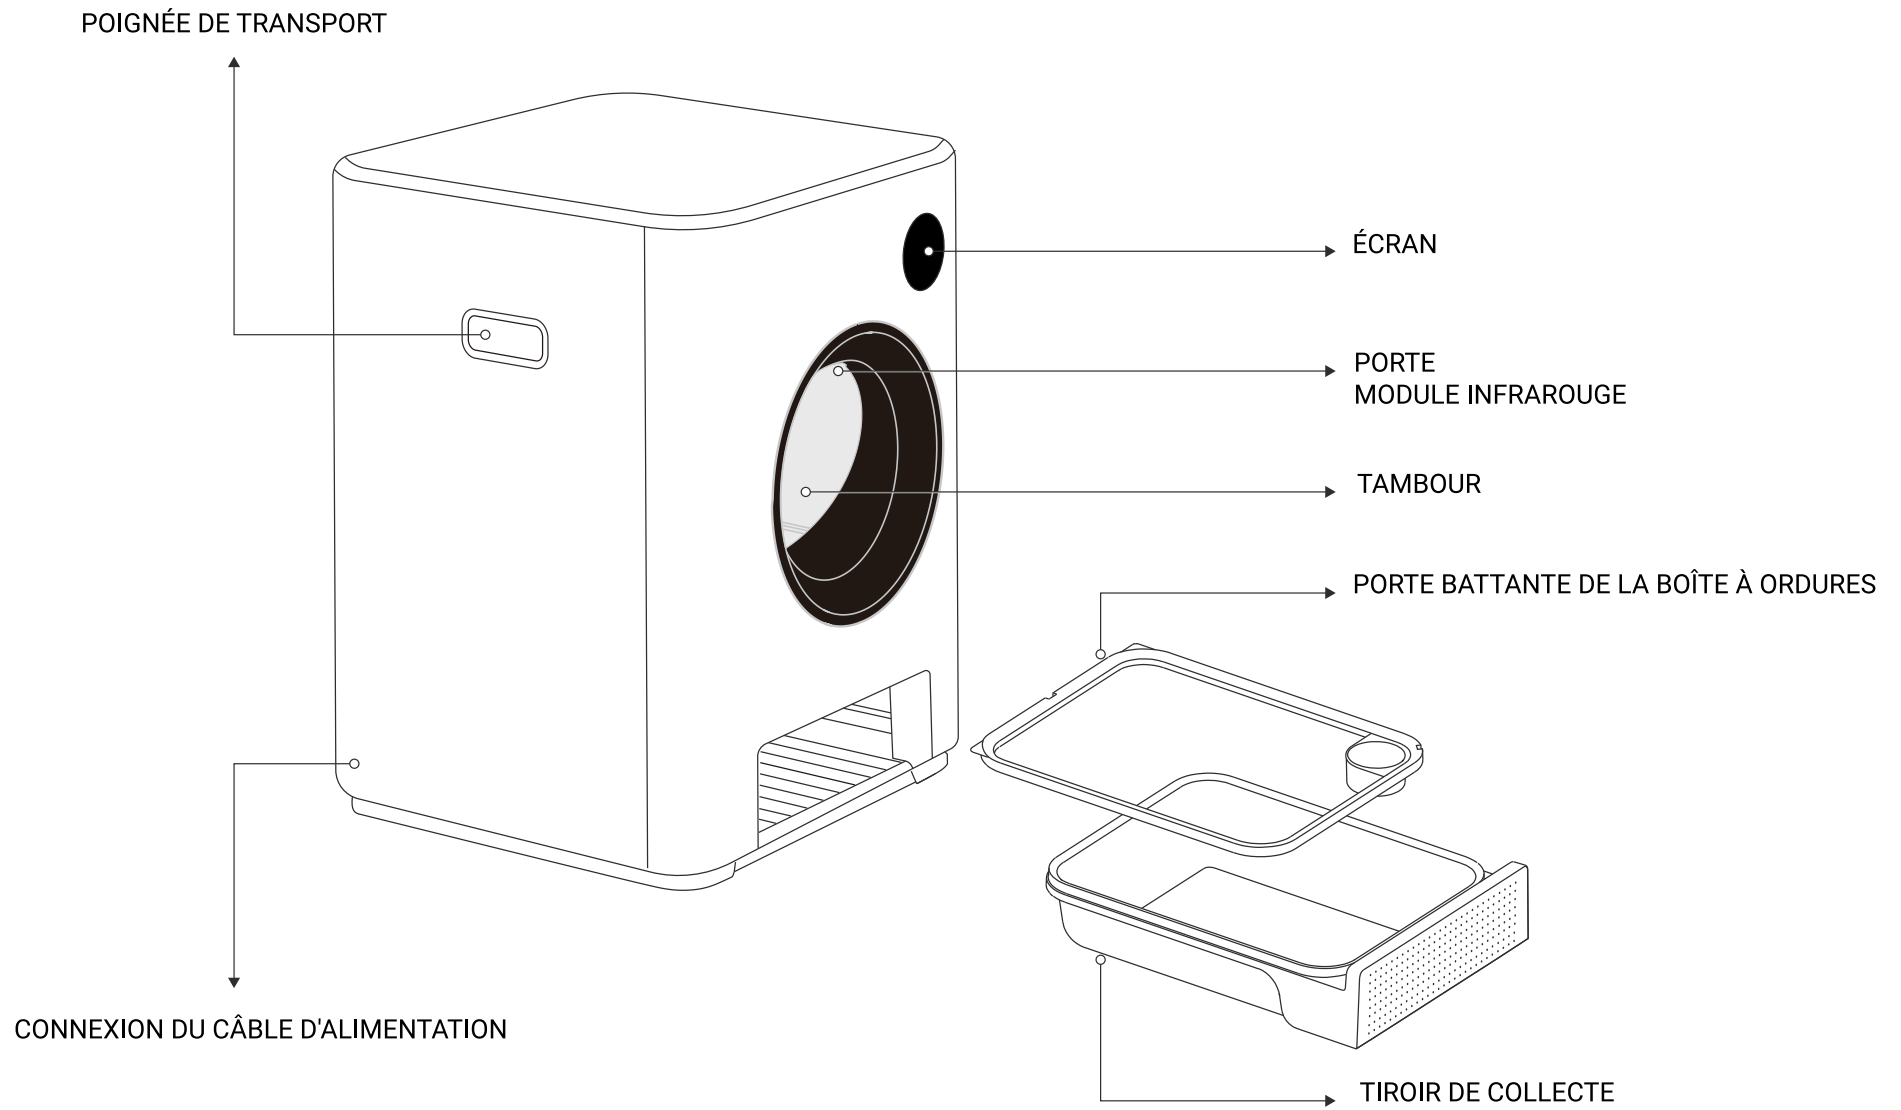


INFORMATIONS SUR LE PRODUIT

DÉVERROUILLAGE DE L'APPAREIL	Appuyez longuement sur la touche de verrouillage enfant pendant 3 secondes	
SÉLECTION DU MODE	Après déverrouillage, cliquez sur la touche du mode pour changer de mode	
DÉLIASSAGE DE L'APPAREIL	Après déverrouillage, appuyez longuement sur la touche du mode pendant 10 secondes et relâchez lorsque vous entendez un déclic	
ARRÊTER L'OPÉRATION	Après déverrouillage, appuyez longuement sur la touche de verrouillage enfant pendant 5 secondes	
OPÉRATION FORCÉE	Après déverrouillage en cas de panne ou d'anomalie, appuyez deux fois sur la touche de verrouillage enfant	
LANGUE DE L'APPAREIL	Après déverrouillage, appuyez et maintenez en même temps la touche de verrouillage enfant et la touche du mode pendant 5 secondes	


INSTRUCTIONS D'UTILISATION

Instructions de déballage


1. Lorsque vous recevez l'appareil pour la première fois, veuillez retirer le tambour (lors de son retrait, vous devez légèrement soulever le baril) et enlever tous les matériaux d'emballage.

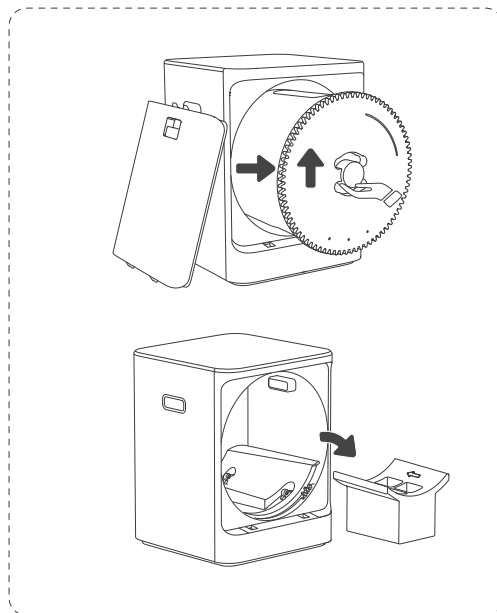


2. Ouvrez le couvercle de la boîte de déodorisation et retirez le film de protection avant de le refermer.

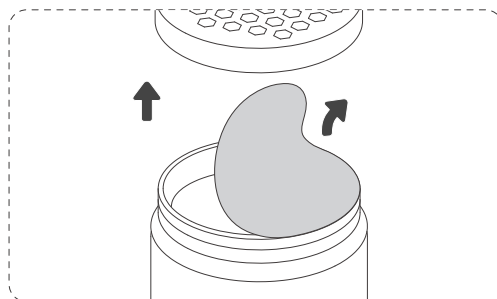


3. Retirez le couvercle de la rainure circulaire sur le couvercle arrière du rouleau, placez une boîte de déodorisation dans la rainure circulaire, puis remplacez le couvercle.

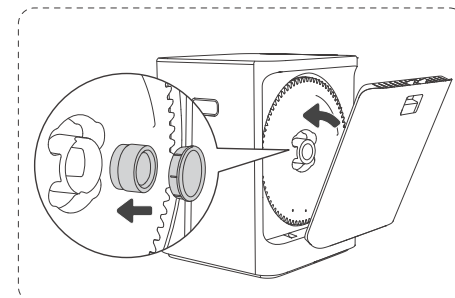

4. Tirez le bac à déchets et soulevez le couvercle du bac à déchets vers le haut pour le retirer.

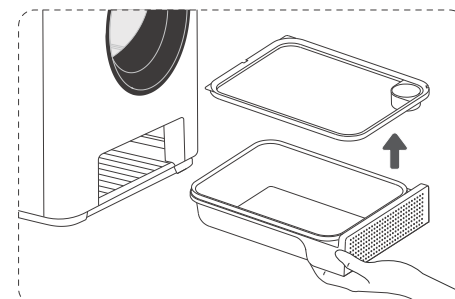


5. Retournez le produit, placez-le dans le tiroir inférieur de la rainure circulaire.

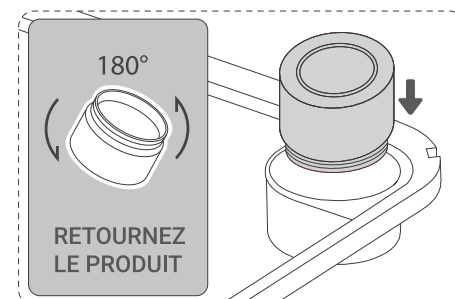


INSTRUCTIONS D'UTILISATION

6. Fermez le couvercle par le bas. Remettez le tiroir en place et le produit est prêt à l'emploi.


Note : Pour garantir des performances optimales, il est recommandé de remplacer la boîte de déodorisation tous les 60 jours ou selon les besoins.

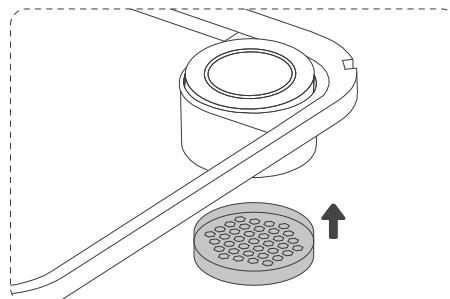


7. Mettez le sac à litière, couvrez-le avec le rabat de la boîte de toilette et poussez-le pour le remettre en place.

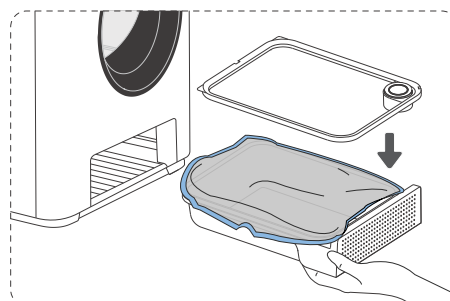

8. Allumez l'appareil et commencez à l'utiliser.

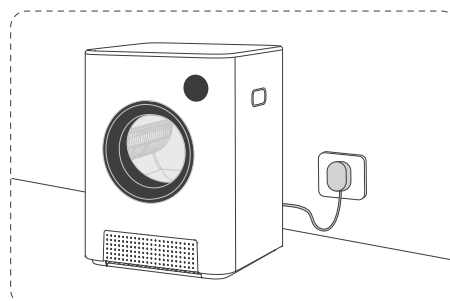

9. Ajoutez la litière pour chat par la porte d'entrée.

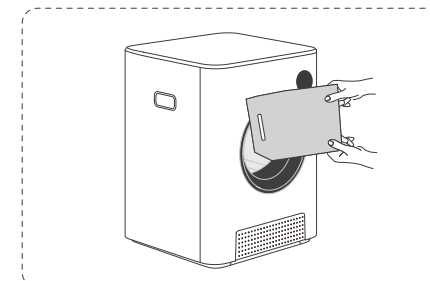

Réseautage de l'appareil

1. Veuillez d'abord télécharger l'application, puis scanner le code pour accéder au tutoriel. Le tutoriel inclut le réseautage de l'appareil et l'utilisation du produit.



Téléchargez l'application INSTACHEW Infinity pour débloquer tout le potentiel du Purrclean.

2. Scannez le code QR pour accéder aux tutoriels sur le déballage et aux questions fréquemment posées (FAQ).



Scannez pour accéder aux F.A.Qs, vidéos de configuration et bien plus dans notre Centre d'Aide.

COMMENT INTRODUIRE VOTRE CHAT AU PURRCLEAN

Here are some tips to help introduce your cat to the new Purrclean Smart Litter Box:

- 1. Location:** Place the new box in the exact spot where the old one was.
- 2. Use scent:** Add a scoop of litter from the old litter box to make the new one more familiar.
- 3. Make it attractive:** Use toys and treats. Scatter treats around the Purrclean or place them in the area with the litter box.
- 4. Gradual installation:** Set up everything but don't plug it in right away. Let your cat explore the new box without being scared by the sound. Once they're comfortable, you can start using it.
- 5. Encourage use:** Place your cat in the new litter box after meals or when they show signs of needing to use it.
- 6. Be patient:** It may take time for your cat to get used to the new box. If they continue using the old box, keep it available for a few weeks until they are comfortable with the new one.

PESÉE & ÉTALONNAGE

Étape 1 : Allumez la machine et attendez que la réinitialisation soit terminée.

Étape 2 : Ajoutez la litière jusqu'à la ligne MAX. (Veuillez respecter strictement cette norme, sinon l'exactitude de la pesée pourrait être affectée.)

Étape 3 : Exécutez le mode de pelle. Une fois le ramassage terminé, la calibration du poids sera complète.

Note : En allumant et éteignant l'appareil (en le débranchant puis en le rebranchant), les paramètres de poids de l'appareil seront réinitialisés.


Notes supplémentaires :

1. Après avoir allumé la machine, attendez que la réinitialisation soit terminée.
2. Pour ajouter de la litière lorsqu'il en reste, exécutez immédiatement le mode de pelle après avoir ajouté la litière, et la calibration du poids sera terminée une fois le ramassage effectué.


NETTOYAGE DU PRODUIT

Étapes de nettoyage


Étape 1 : Effectuez un nettoyage du bac (si cette opération n'est pas réalisée, l'équipement risque d'être endommagé) et coupez l'alimentation.

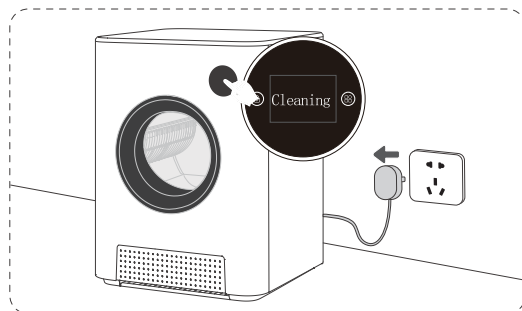


Étape 2 : Ouvrez le couvercle arrière et retirez le tambour (soulevez légèrement le tambour en le retirant).

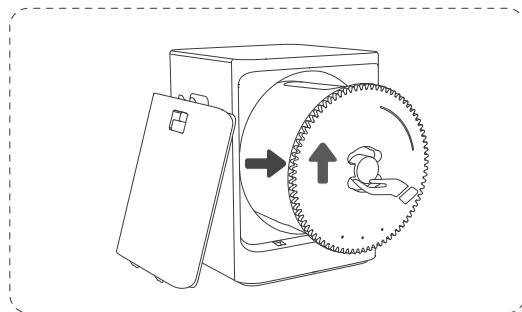


Étape 3 : Rincez le tambour et essuyez-le jusqu'à ce qu'il n'y ait plus d'eau résiduelle.

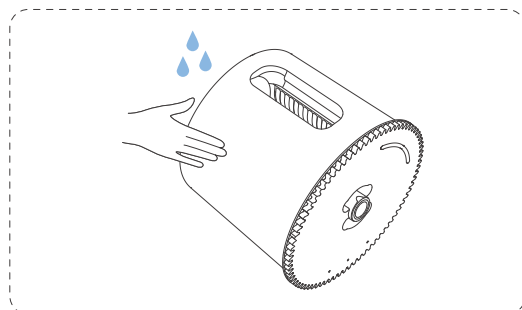

Étape 4 : Utilisez un chiffon en coton sec et doux pour essuyer la lentille infrarouge à l'intérieur de l'appareil. Nettoyez les quatre positions indiquées par les flèches, ainsi que les quatre positions symétriques correspondantes, pour un total de huit emplacements.

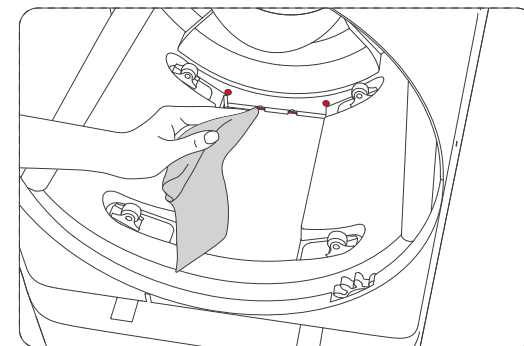

Étape 5 : Remettez le tambour en place (soulevez légèrement le tambour en le remettant). Fermez le couvercle arrière.

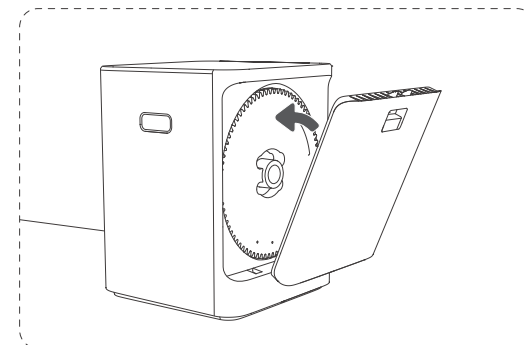

Allumez l'appareil et il se réinitialisera automatiquement.


CONFIGURATION DE L'APPLICATION



1. Lancez l'application NSTACHEW Infinity.



2. Cliquez sur **"Vous n'avez pas de compte ? Inscrivez-vous"** pour créer un nouveau compte.

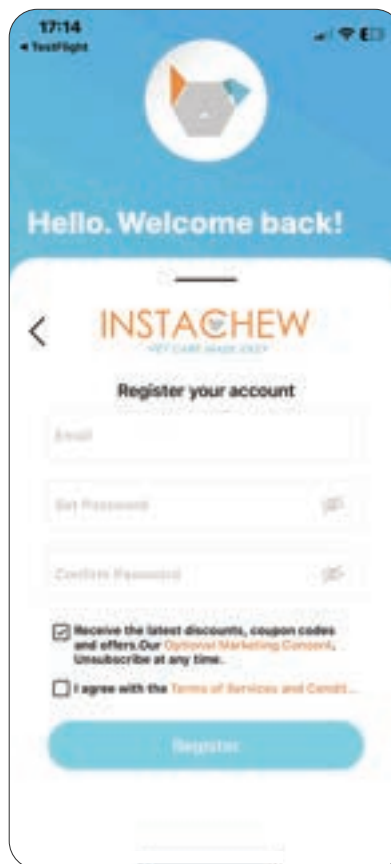

3. Après avoir enregistré une nouvelle adresse e-mail, saisissez le code de vérification reçu pour continuer la création de votre compte.



4. Configurez votre profil en ajoutant vos informations et celles de votre animal.




5. C'est terminé ! Vous pouvez maintenant connecter votre appareil en cliquant sur **"Ajouter un appareil"** depuis votre page d'accueil.

DESCRIPTION DE L’AFFICHAGE

PAR DÉFAUT

Affichage : Quantité restante de litière pour chat et poids du chat.

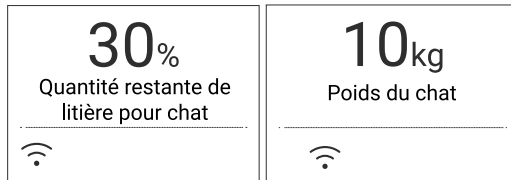

FONCTIONS MANUELLES

Affichage : Ramasser la litière, Nettoyer le bac et Contrôle des odeurs.



EN FONCTIONNEMENT

Affichage : Ramassage de la litière, nettoyage du bac, désodorisation, début du test automatique et réinitialisation.




EN PAUSE

Affichage : Arrêt du ramassage de la litière, Suspension du nettoyage, Arrêt de la désodorisation, Arrêt du test automatique, Arrêt de la réinitialisation.



AUTRES ÉTATS OU DÉFAUTS

Notifications : Couvercle arrière non fermé, Compte à rebours de réinitialisation, Veuillez nettoyer le tiroir. Animal près de l'entrée et Objet étranger dans le bac.

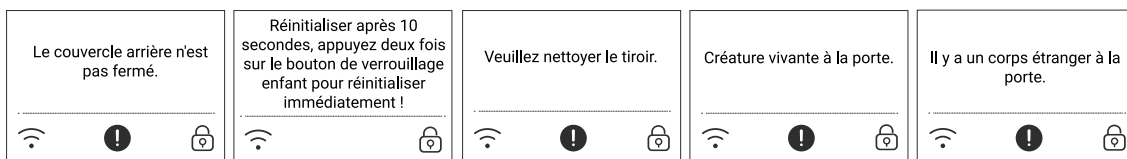

Note : Allumer et éteindre l'appareil (débrancher puis rebrancher) réinitialisera les paramètres de poids de l'appareil.



TABLEAU DE DÉPANNAGE

CLASSIFICATION	CODES DE DÉPANNAGE	NOMS DE DÉPANNAGE
FONCTION DE PESÉE	E1	ANOMALIE DU CAPTEUR DE PESÉE
FONCTIONS INFRAROUGES	E2	ANOMALIE DE L'INTERFACE DU CAPTEUR PYROÉLECTRIQUE INFRAROUGE
	E3	ANOMALIE DU CAPTEUR PYROÉLECTRIQUE INFRAROUGE
FONCTION DE DÉTECTION OPHTALMIQUE	E4	ANOMALIE DE L'INTERFACE DE DÉTECTION OPHTALMIQUE INFÉRIEURE
	E5	ANOMALIE DE DÉTECTION OPHTALMIQUE INFÉRIEURE
	E6	CORPS ÉTRANGER DANS L'ŒIL PHOTO RÉCEPTION INFÉRIEUR
CARACTÉRISTIQUES DE SÉCURITÉ	E9	ANOMALIE DE L'INTERFACE DU COMMUTATEUR DE SÉCURITÉ DE LA COUVERTURE ARRIÈRE
FONCTION DE DÉTECTION OPHTALMIQUE	E10	ANOMALIE DE L'INTERFACE DE L'INDUCTION MAGNÉTIQUE HALL
	E11	TOUTES LES ANOMALIES HALL
	E12	ANOMALIE DE DÉCHARGE HALL
	E13	ANOMALIE DE L'INTERFACE D'INDUCTION MAGNÉTIQUE HALL
	E14	ANOMALIES DE L'INTERFACE DU MOTEUR / ANOMALIES DE L'ADAPTATEUR
	E15	BLOQUAGE DU MOTEUR

QUESTIONS FRÉQUEMMENT POSÉES

Peut-il être utilisé dans les foyers avec plusieurs chats ?

Oui ! Il peut être utilisé dans un foyer avec plusieurs chats. L'aire de la litière peut contenir jusqu'à 7L de litière à la fois et peut être nettoyée au moins une fois par semaine.

Mon chat peut-il se retrouver coincé à l'intérieur ?

La boîte à litière dispose de 12 capteurs de sécurité qui s'activent lorsque le chat entre ou sort de la boîte. Lorsqu'un chat s'approche, tous les capteurs s'arrêtent pour lui permettre d'entrer. Vous recevrez une notification ou un message texte chaque fois qu'il y a une activité.

Pouvons-nous utiliser le PurrClean sans le connecter à l'application ?

Oui, vous pouvez utiliser le PurrClean manuellement, et les fonctionnalités de l'application ne sont pas accessibles.

À quelle fréquence dois-je remplir la litière de mon chat ?

Un sac de 6L de litière peut durer 14 jours. L'appareil vous avertira également de remplir la litière via les notifications de l'application Instachew Infinity.

Quelle est la stabilité du PurrClean ?

Le PurrClean repose sur quatre pieds offrant de la stabilité avec un dispositif antidérapant sous ses pieds. La boîte à litière pèse 14,51 kg (environ 32 lbs). Elle devient également plus lourde lorsqu'elle est remplie de litière.

Comment dissocier l'appareil ?

L'appareil n'est pas encore configuré sur l'application Instachew :

- Appuyez et maintenez l'icône du verrou sur le côté gauche de l'écran numérique jusqu'à ce que vous entendiez une invite.
- Ensuite, appuyez et maintenez l'icône du côté droit de l'écran numérique jusqu'à ce que vous entendiez une invite.
- Une fois terminé, ouvrez l'application Instachew et commencez le processus de configuration.

**J'ai des difficultés à connecter mon appareil à mon réseau.
Je n'arrive pas à faire clignoter l'icône Wi-Fi.**

Veillez considérer les points suivants :

- Assurez-vous que le logiciel de votre téléphone est à jour.
- Assurez-vous d'avoir téléchargé l'application correcte (Instachew Infinity App).
- Vérifiez que votre téléphone est connecté à un réseau Wi-Fi 2,4 GHz. Vous pouvez confirmer cela avec les options suivantes :
- Vérifiez l'arrière de votre routeur Wi-Fi.
- Vérifiez les paramètres de l'appareil.
- Appelez votre fournisseur de services pour confirmer le type de connexion dont vous disposez.
- Le PurrClean se réinitialise lorsqu'il est branché.
- Attendez que la réinitialisation soit terminée jusqu'à ce que "O USES TIMES" apparaisse à l'écran.
- Avant de connecter, appuyez sur le bouton de verrouillage sur le côté gauche de l'écran de l'appareil jusqu'à ce que vous entendiez un bip.
- Une fois que vous entendez le bip, appuyez sur le bouton Menu (l'icône avec les quatre carrés sur la droite) jusqu'à ce que vous entendiez un autre bip.
- Après cela, vous pouvez commencer à ajouter l'appareil à l'application.

QUESTIONS FRÉQUEMMENT POSÉES

Quelle est la taille recommandée du chat pour utiliser le Purrclean ?

La taille recommandée pour un chat utilisant le Purrclean est entre 2,5 kg et un maximum de 16 kg. Les dimensions internes de la litière sont de 46 cm de large et 42 cm de profondeur.

Que faire si les selles de mon chat sont molles ? Est-ce nettoyable ?

Une couche en silicone à l'intérieur du tambour de la litière se déforme lorsqu'elle roule et sépare les déchets. Cette couche résout le problème des selles molles qui collent à l'intérieur de la litière. Elle est amovible et facile à nettoyer. Pour l'enlever, retirez le couvercle de la litière et sortez-la.

Quelles sont les dimensions du Purrclean du sol jusqu'au trou d'entrée ?

La hauteur est de 9 pouces et le trou d'entrée a également un diamètre plus grand.

Quels types de litière recommandez-vous ?

Toutes les litières agglomérantes, comme la bentonite, la litière mélangée et la litière en tofu.
Note : il n'est pas nécessaire de changer les habitudes de litière de votre chat.

Où trouver le cordon d'alimentation ?

Le cordon d'alimentation se trouve dans le polystyrène sous le tambour. Vous devez d'abord retirer le tambour pour pouvoir le voir.

Que faire si je reçois une erreur E11 ?

Essayez de retirer le tambour, de le remettre en place, et assurez-vous que tout est bien positionné, que les engrenages et les clips sont alignés. Cela empêche généralement l'appareil de fonctionner correctement. Assurez-vous également d'utiliser le sac à déchets fourni, de retirer le plateau et d'installer correctement l'anneau de pression.

Après quelques jours, même si le tiroir n'est pas plein, toute ma maison commence à sentir l'urine.

Programmez un nettoyage supplémentaire cinq à six fois par jour pour aider à résoudre le problème d'odeur. De plus, l'appareil déodorise automatiquement pendant le nettoyage, et selon la situation, une déodorisation fréquente peut être effectuée, ce qui résoudra le problème d'odeur.

Le nettoyage manuel commence 30-35 secondes après le début du compte à rebours. Il y a donc un grand retard.

Débranchez et rebranchez l'adaptateur pour permettre à l'appareil de se réinitialiser. Maintenant, lorsque vous appuyez sur le nettoyage manuel, il commencera immédiatement.

Que signifie l'erreur "Veuillez nettoyer la poubelle" ?

La cause la plus courante de l'erreur "Poubelle pleine" est que la poubelle est pleine et doit être vidée et nettoyée manuellement. Installation incorrecte : nous vous suggérons d'essayer de retirer le tambour, de le remettre en place et de vous assurer que tout est bien positionné et que les engrenages et les clips sont alignés. Cela empêche généralement l'appareil de fonctionner correctement.

QUESTIONS FRÉQUEMMENT POSÉES

**Pourquoi est-ce que je reçois constamment le message d'erreur
"Le bac ou le tambour est obstrué" ?**

Si votre litière PurrClean affiche le message "Tambour obstrué", cela signifie que le mécanisme de nettoyage de la litière a des difficultés à tourner ou est bloqué à cause d'une obstruction. Nous vous recommandons de retirer le tambour et de le nettoyer une fois par mois ou plus fréquemment si vous avez plusieurs chats.

**POUR PLUS DE QUESTIONS FRÉQUENTES ET
D'INFORMATIONS SUR LE PRODUIT,
SCANNEZ LE CODE QR**



Call us: 1-866-922-5554

Inquiries: info@instachew.com

Support: service@instachew.com

POLITIQUE DE RETOUR SATISFAIT OU REMBOURSÉ DE 30 JOURS

Tous nos produits achetés directement sur Instachew.com peuvent être retournés dans les 30 jours suivant la réception. Veuillez envoyer un e-mail à service@instachew.com avec votre preuve d'achat et la raison du retour.

Pour les produits plus volumineux, le PurrClean, acheté directement sur Instachew.com uniquement, peut être retourné dans les 60 jours suivant la date de livraison.

Pour les articles achetés auprès des revendeurs et distributeurs autorisés d'Instachew, tous les clients doivent respecter les politiques de remboursement et de retour des revendeurs et distributeurs respectifs.

POUR ÊTRE ÉLIGIBLE À UN REMBOURSEMENT COMPLET, VOTRE ARTICLE DOIT ÊTRE :

- Doucement utilisé.
- En bon état physique, sans dommage.
- Dans un état propre (des frais de nettoyage seront facturés si l'unité est retournée avec de la litière ou des déchets).
- Dans son emballage d'origine (y compris tous les accessoires).
- Reçu ou preuve d'achat.

CONDITIONS SUPPLÉMENTAIRES :

- Vous êtes responsable des frais d'expédition de retour si vous demandez une couverture de garantie.
- Le prix d'achat vous sera remboursé par le moyen de paiement d'origine dans un délai de 7 à 10 jours ouvrables.
- Instachew ne peut être tenu responsable des colis perdus pendant le processus de retour.
- Pour les articles reçus en cadeau, vous devrez fournir le numéro de commande ou la preuve d'achat reçue par l'acheteur. Instachew ne peut rembourser que le mode de paiement d'origine utilisé par l'acheteur.

QUESTIONS FRÉQUENTES SUR LA POLITIQUE DE RETOUR

Comment puis-je recevoir un remboursement si je ne suis pas satisfait de mon appareil ?

Nos produits sont livrés avec une période d'essai de 30 jours ou de 60 jours. Si pour une raison quelconque vous n'êtes pas satisfait de votre achat, vous ne paierez que les frais d'expédition de retour. Si vous avez acheté l'appareil auprès d'un revendeur tiers, veuillez contacter votre point de vente pour toute assistance complémentaire. En termes de garantie, nous pouvons vous aider, mais pas pour le remboursement.

Ai-je besoin d'un numéro RMA pour un retour ? Comment l'obtenir ?

Pour nous permettre d'identifier facilement l'unité retournée, il est essentiel d'inclure un numéro RMA (Numéro d'Autorisation de Retour de Marchandise) et votre nom sur la boîte. Pour obtenir un numéro RMA, veuillez contacter le service clientèle d'Instachew.

Offrez-vous un service d'expédition de retour ?

Nous pouvons fournir une étiquette d'expédition de retour et déduire le coût d'expédition de votre remboursement.

Puis-je retourner ou échanger après l'achat ?

Si vous n'êtes pas satisfait de votre achat, vous disposez de 30 jours (à partir de la date de réception) pour le retourner ou l'échanger. Si vous trouvez des défauts ou si vous devez retourner un article, veuillez contacter notre équipe de service client à l'adresse service@instachew.com.

Veuillez cependant noter que notre politique de retour et d'échange ne couvre pas les dommages causés par la négligence, les accidents, l'abus, l'utilisation incorrecte ou la modification du produit.

GARANTIE

La garantie de notre produit sera valable pendant un an à partir de la date d'achat. Pour être éligible à la garantie, vous devez fournir une preuve d'achat, telle qu'un reçu d'Instachew ou d'un de ses détaillants autorisés.

La garantie fournie ne couvre pas les pièces consommables qui subissent une usure normale, comme les batteries. Elle ne couvre également pas les dommages résultant des éléments suivants :

Dommages physiques ou dus à l'eau.

Réparation, modification, démontage ou ouverture non autorisée du châssis du produit.

Mauvaise utilisation, entretien ou utilisation contraire aux instructions du produit ou connexion à une alimentation électrique inappropriée.

Utilisation ou fonctionnement négligents ou imprudents du produit.

Utilisation de consommables, pièces ou accessoires, y compris les batteries, non produits ou recommandés par Instachew, sauf si interdit par la loi applicable.

De plus, cette garantie ne couvre pas les produits répondant à l'une des conditions suivantes :

Utilisés en dehors du pays d'achat.

Acheetés auprès d'un revendeur Instachew non autorisé.

Réparés ou modifiés par des parties non affiliées à instachew.com ou à ses agents autorisés.

Les numéros de série ont été altérés ou retirés.

Endommagés par des sources externes telles que le transport, les pannes liées aux intempéries ou les surtensions électriques, dans la mesure permise par la loi applicable.

POLITIQUE DE RETOUR : QUESTIONS FRÉQUEMMENT POSÉES

Comment initier une demande de garantie ?

Lorsque vous contactez notre équipe d'assistance pour une demande de garantie, veuillez inclure une description détaillée du produit concerné, expliquer le problème que vous rencontrez avec le produit et joindre une preuve d'achat valide pour vérification.

Pour les articles reçus en cadeau

Vous devrez fournir le numéro de commande reçu par l'acheteur s'il a été directement acheté auprès d'INSTACHEW, ou une copie de la preuve d'achat s'il a été acheté chez l'un de nos revendeurs autorisés.

Y a-t-il des frais associés à une demande de garantie ?

Vous serez responsable de tous les frais d'expédition de retour et assumerez tous les risques de perte ou de dommages au produit pendant le transport. Pour votre protection, nous recommandons de choisir une option d'expédition traçable.

Quelles actions annulent la garantie ?

Les dommages résultant de négligence, d'accidents, d'une mauvaise utilisation, d'un abus ou d'une modification du produit ne sont pas couverts par notre politique de retour et d'échange.

Que couvre la garantie ?

Pour confirmer votre éligibilité et vérifier que votre problème ne peut pas être résolu par l'assistance technique, nous vous recommandons de visiter la section "Contactez-nous" de notre site Web, www.instachew.com, avant de soumettre une demande de garantie. Cela aidera à accélérer le processus et à résoudre les problèmes rapidement.

La garantie peut-elle être prolongée ou renouvelée ?

Veuillez consulter le site www.instachew.com pour connaître les mises à jour sur les offres d'extensions de garantie.

FCC Statement

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC/IC RSS_102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Name: Purrclean Smart Litter Box	Wireless Type: Wi-Fi (2.4Hz)
FCC ID: 2A3CT-IC05A	Dimensions: 520*540*680 (mm)
IC: 27782-IC085A	Rated Current: 15W
Model: IC085A	Voltage: 12.0V --- 2A
Made in China	CAN ICES-3 (B)/NMB-3(B)

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



All contents in this document have been carefully checked. If there are any printing errors or misunderstandings in the contents, please consult our company. Note: If there is any technical improvement of the product, it will be included in the new manual without further notice. If there is any change in the appearance and color of the product, the real object shall prevail.

