

—

pico

quick start guide

—

WWW.LAMARZOCCO.COM


VIA LA TORRE 14/H
50038 SCARPERIA E SAN PIERO
FLORENCE - ITALY



la marzocco
HOME


pico
overview

This Quick Start Guide is an overview of the basic steps for using your Pico. For a more in depth discussion of these topics, see the manual.

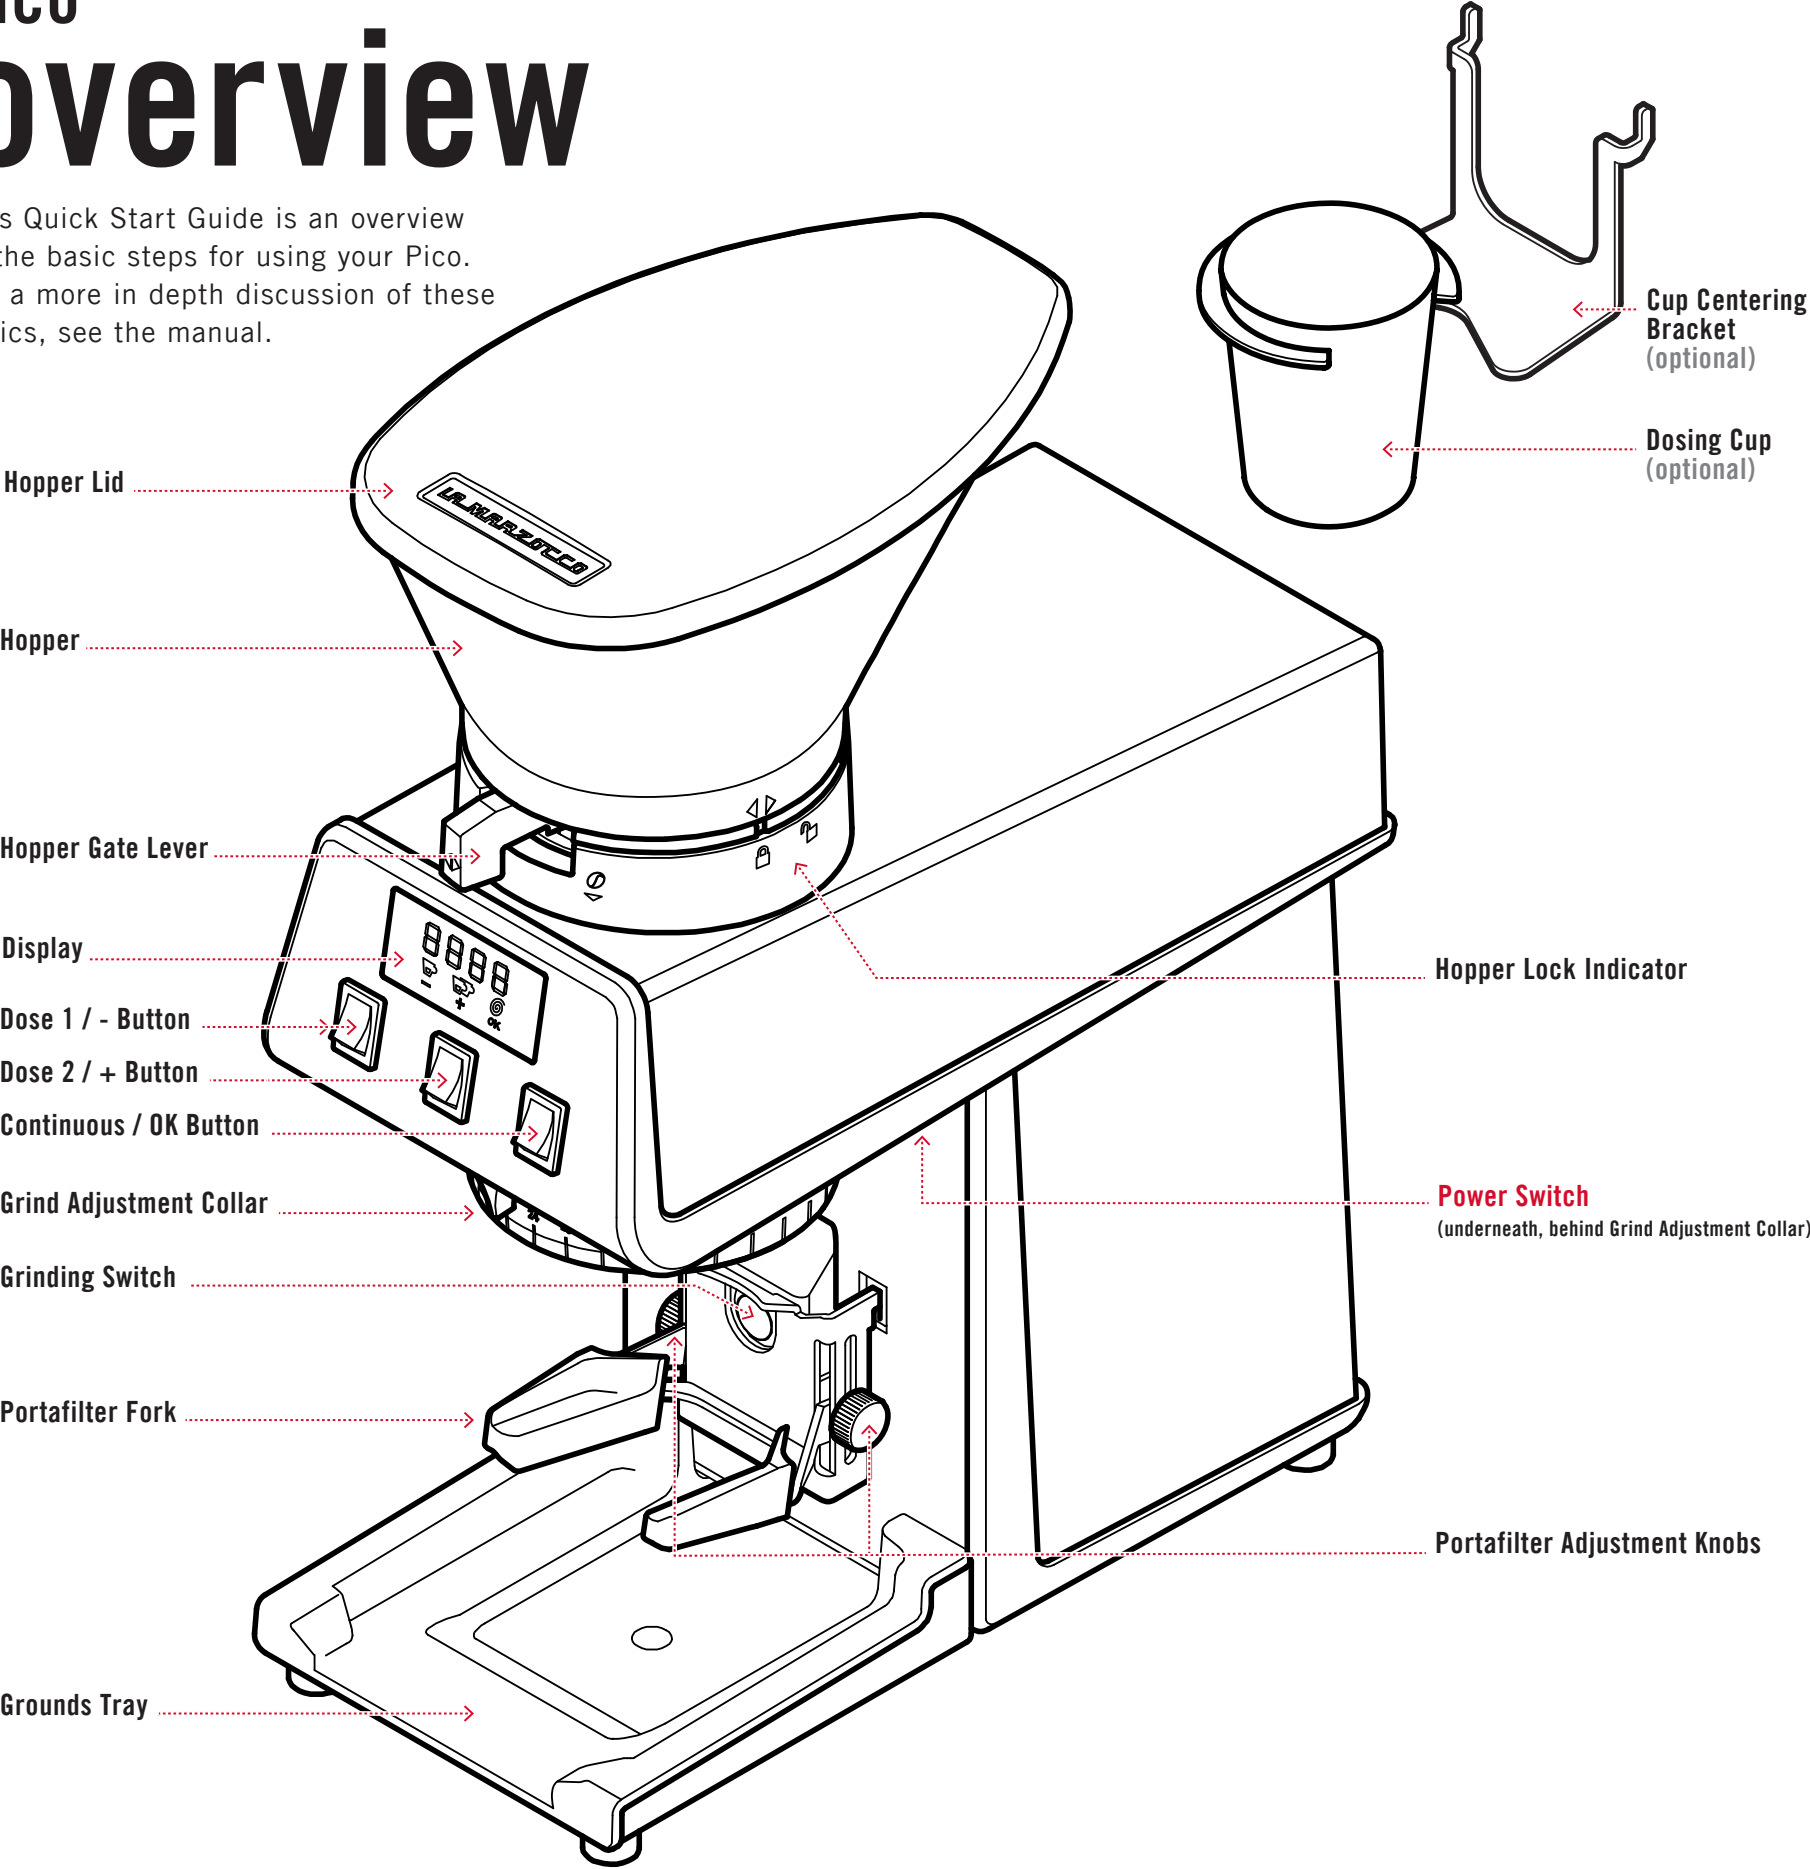


view complete instructions online at www.lamarzocco.com


unpacking & set up, loading coffee, grinding coffee
during setup refer to the manual for more detailed information

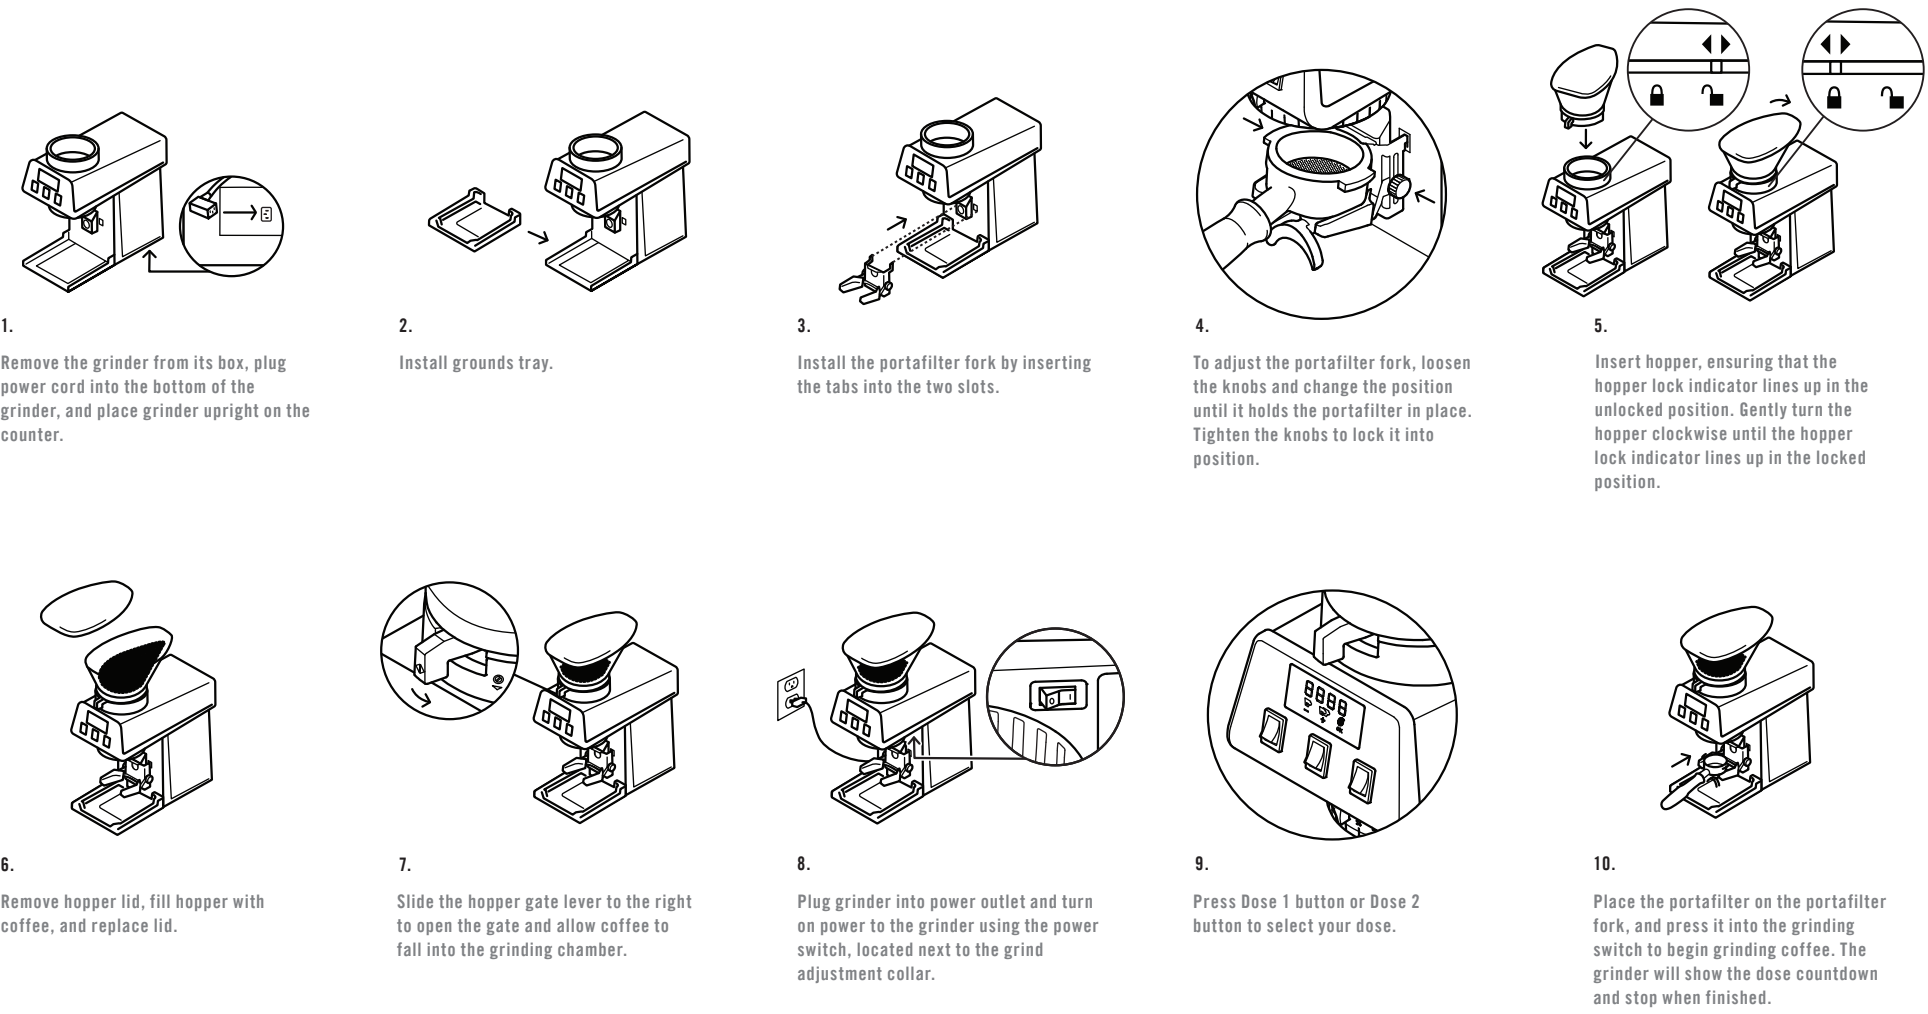


convertible bottomless portafilter configuration

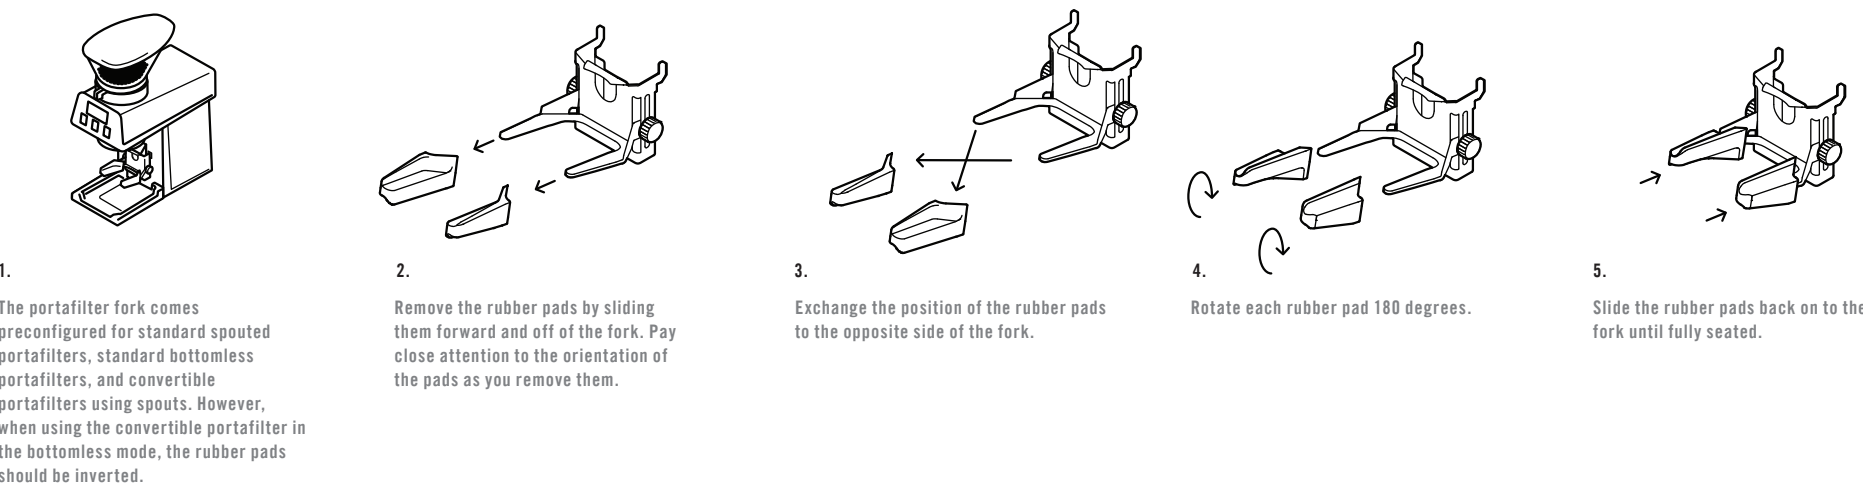

in order to use the grinder correctly, the dose and the grind must both be set
setting grind

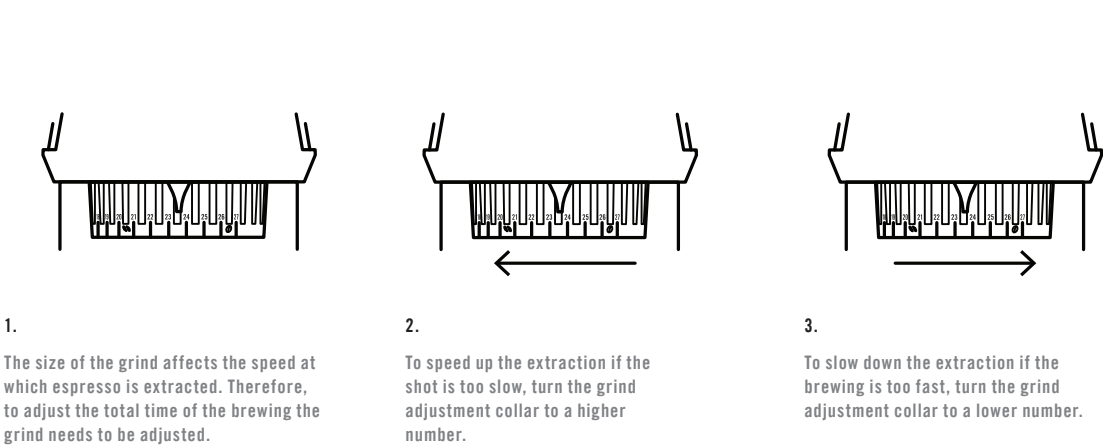

setting dose

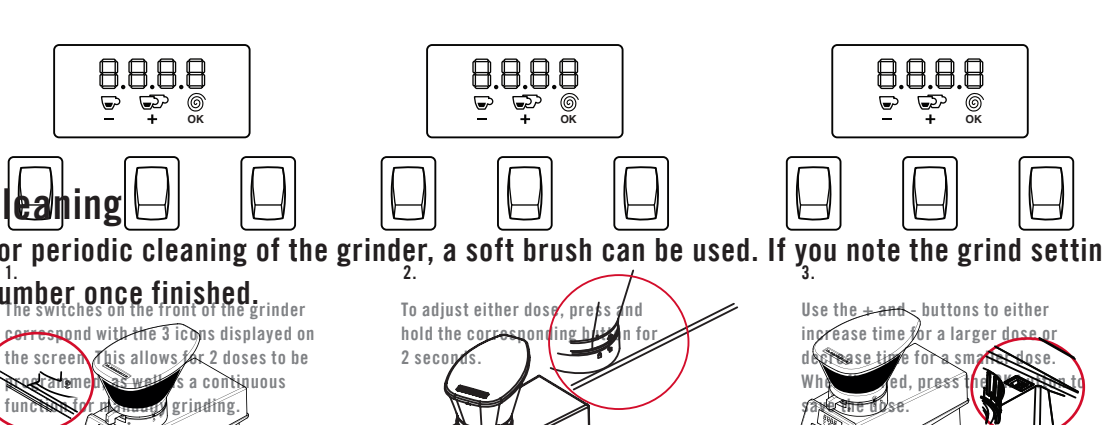

1. continuous mode

Begin by closing the hopper gate, placing the portafilter on the portafilter fork, and press it into the grinding switch to begin grinding coffee. The grinder will show the dose countdown and stop when finished.

2. single dose mode

Remove the hopper from the grinder by gently rotating counter clockwise to unlock it. Lift the hopper and set aside.

1. Turn off power to the grinder and unplug it from its power source.

2. Note the setting of the adjustment collar so that the grinder can be restored to its previous grind setting when you begin cleaning.

3. Unscrew the inner burr by turning the grind adjusting collar to the setting of 1. Turn several full turns before the burr is removed from the bottom of the grinder.

4. continuous mode

To operate in continuous mode, press and hold the OK button for 10 seconds. A dot will appear to the right of the display. The dot will disappear, indicating the grinder is in continuous mode. To return to the previous grind setting, adjust the grind adjustment collar to its previous setting. Once the collar is screwed in completely, you can adjust back to the previous grind setting from step 4.

5. single dose mode

To change from continuous mode, press and hold the OK button for 10 seconds. The dot will disappear, indicating the grinder is in single dose mode. To return to the previous grind setting, adjust the grind adjustment collar to its previous setting. Once the collar is screwed in completely, you can adjust back to the previous grind setting from step 4.



for more information
scan this QR code