



Glamping House OWNER'S MANUAL & ASSEMBLY INSTRUCTIONS

ITEM: 657511C3 Little Tikes® • 2180 Barlow Road, Hudson, Ohio 44236 • 1-800-321-0183

**THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10.
CAPACITY: 4 USERS MAXIMUM - WEIGHT LIMIT: 110 lbs. (50 kg) PER CHILD
FOR OUTDOOR USE.**




At minimum, two people are required to lift the boxes that contain the parts for this unit and to assemble this unit.



For the latest instruction manual, to register your product, or to order replacement parts, please visit:
www.littletikes.com

Before you begin

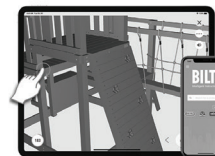

3D-GUIDED INTERACTIVE ASSEMBLY
INSTRUCTIONS CAN BE FOUND IN BILT®
DOWNLOAD THE **FREE** APP



Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company.
LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.
Printed in U.S.A. • 0421-0-C3

Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183





READ THIS ENTIRE MANUAL THOROUGHLY BEFORE ASSEMBLY AND USE.

- To reduce the risk of serious injury or death, you **MUST** read and follow these instructions before assembly and before use. Pay close attention to the important information, warnings and safety information. Keep and refer to these instructions often. Give them to any future owner of this unit.
- The boxes containing the parts for this unit are very heavy. Do not attempt to lift by yourself. To prevent possible injury, at least two people are required to lift these boxes.
- After reviewing the entire manual, decide if you will need professional assistance assembling this unit.
- Before beginning assembly, separate and identify the contents of this unit to ensure you have all parts listed in this manual.
- If you cannot find a part, check the packing materials thoroughly, as loose parts and small pieces may have shifted in transit.
- If any part is missing or damaged, contact Little Tikes Consumer Service: www.littletikes.com or 1-800-321-0183.


Please retain these instructions for future reference, and take a moment to write down this information for efficient service.

ITEM NUMBER: _____
PURCHASE LOCATION: _____
DATE OF PURCHASE: _____
INSTALLATION DATE: _____
INSTALLED BY: _____

It is recommended you attach your dated sales receipt to this page for future reference.


Step 85:

Congratulations, this completes the assembly of the Glamping House.

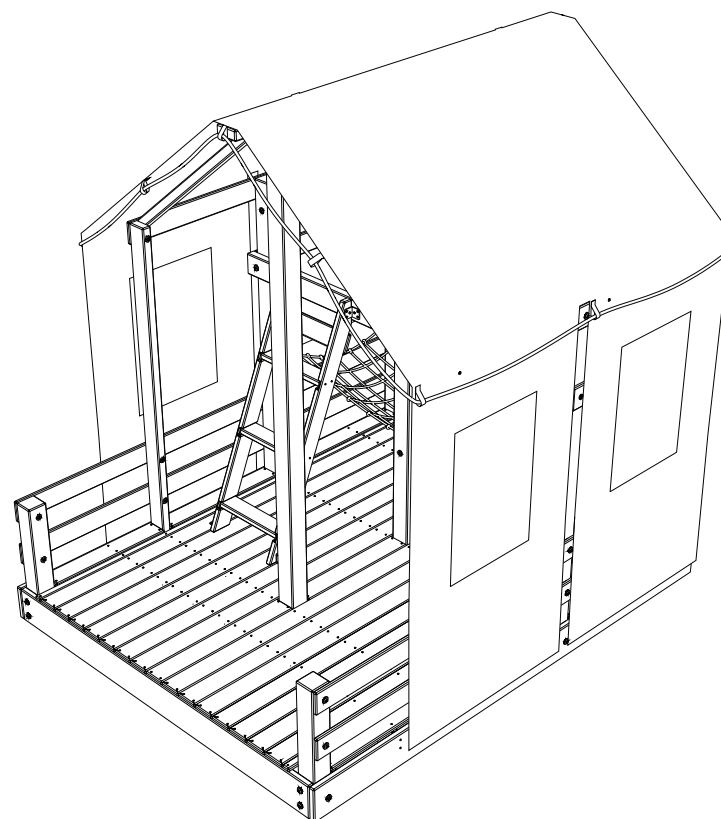


Step 83:

Attach the Light Box Strip (DL01) to the Tarp using the (9) ties attached to the Tarp.

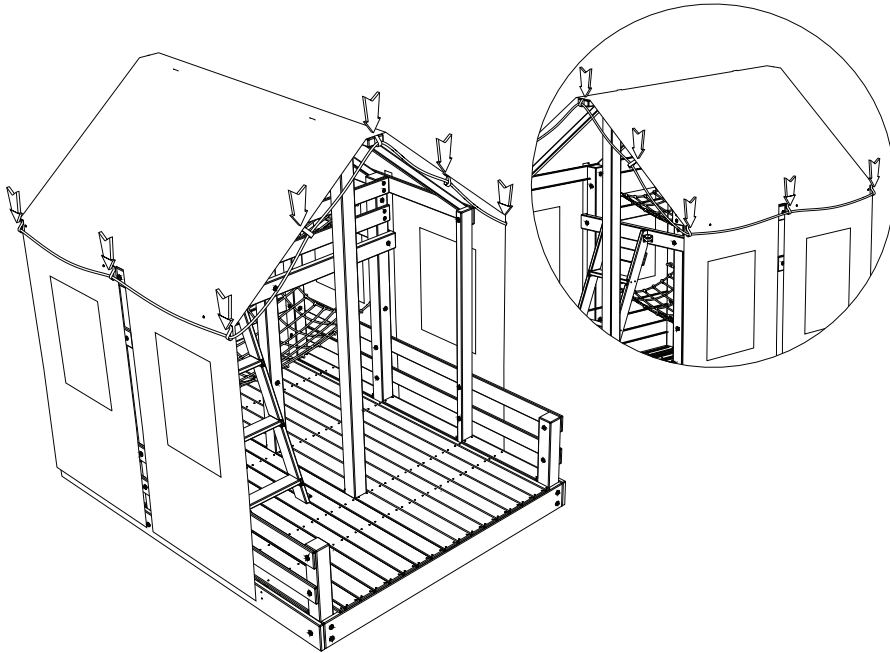

Step 84:

One week later tighten all the hardware.

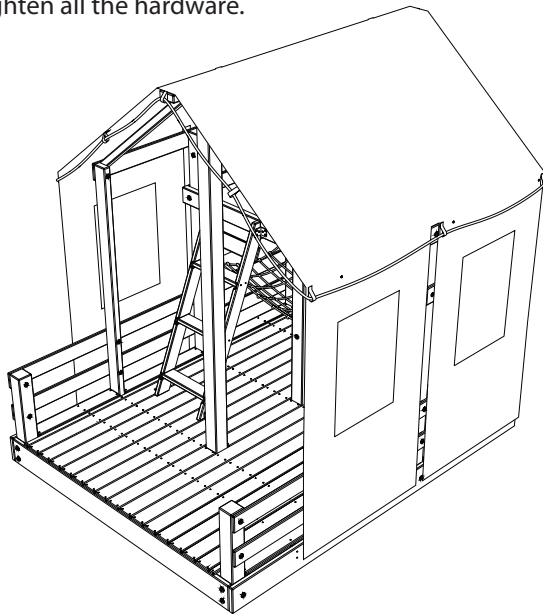

IMPORTANT SAFETY INFORMATION

⚠ WARNING:

- To reduce the risk of serious injury or death, you **MUST** read and follow these instructions before assembly and before use.
- CONTINUOUS ADULT SUPERVISION IS REQUIRED.
- This unit is recommended for use by children 3-10 years of age.
- Not suitable for children under 3 due to their inability to use safely.
- WARNING: ONLY FOR DOMESTIC USE.
- RESIDENTIAL HOME USE ONLY. This unit is not intended for public use. The manufacturer does not warranty this product if it is used for commercial purposes like daycare, schools, churches, nurseries or parks.
- Children must not use this product prior to complete assembly and inspection by a competent adult. The unit must be fully assembled, properly installed and anchored prior to use.
- WARNING! This toy produces flashes that may trigger epilepsy in sensitized individual.

SERIOUS HEAD INJURY HAZARD:

Installation over concrete, asphalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around this unit as recommended in this manual.

COLLISION HAZARD:

Place this unit on level ground at least 6 ft. (2m) from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires.

CHOKING HAZARD/ SHARP EDGES & POINTS:

ADULT ASSEMBLY REQUIRED. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

STRANGULATION HAZARD:

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains, cord-like items, or items with a cord or strap when playing on this unit. DO NOT attach these items or similar items to this unit.
- NEVER allow children to play with the LED lights other than it is intended use.
- NEVER allow children to wear loose-fitting clothing, such as, but not limited to: ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when playing on this unit. Open-toe/open-heel footwear is not permitted. Children should wear well-fitting clothing and closed-toe shoes.
- NEVER allow children to wear bike or sports helmets when playing on this unit. Instruct them to remove these items before playing on this unit.

TIP OVER HAZARD:

Choose a level surface for this equipment. This can reduce the likelihood of the unit tipping over and loose-fill materials from washing away during heavy rains. Stakes must be installed straight up and not at an angle. Ensure soil conditions are adequate to firmly hold the stakes. DO NOT allow children to play on this unit until assembly is complete and the unit is properly anchored.

WARNING LABEL:

Owners are responsible for maintaining legibility of the warning labels. Please remove the protective film on the signage and logo plate before use.

INSTRUCTIONS FOR SAFE USE

⚠ WARNING:

- User safety is our top concern. Read and understand the following statements and warnings to reduce the likelihood of serious or fatal injury. Review this information with your child and any other users.
1. ON-SITE, CONTINUOUS ADULT SUPERVISION IS REQUIRED FOR CHILDREN OF ALL AGES. Most serious injuries and deaths on playground equipment result when children are playing unsupervised. This product meets all applicable safety standards. Complying with all warnings and important information in this manual will reduce the risk of serious or fatal injury to children playing on this unit. Review all warnings and play information regularly with any child using this unit. Ensure children fully understand and follow these instructions.
 2. This unit is designed for a specific number of users whose combined weight should not exceed the capacity limitations of 110 lbs. per child with a maximum of 4 children.
 3. DO NOT allow children to use the equipment in a manner other than intended.
 4. DO NOT climb or use the unit when it is wet. Wipe dry before use.
 5. DO NOT jump from the deck or any part of the unit. Always use ladders and ramps. Standing on or jumping from elevated surfaces can be dangerous.
 6. DO NOT crawl or climb on the roof.
 7. Verify that any suspended climbing rope, chain, or cable is secured at both ends and that it cannot be looped back on itself and create an entanglement hazard.
 8. DO NOT attach items to the unit that are not specifically designed for use with the unit, such as, but not limited to: jump ropes, clotheslines, pet leashes, cables and chains, as they may cause a strangulation hazard.
 9. Any modifications made to this product must be carried out according to these instructions. Installation of included ropes, nets and other attached accessories must be fixed on all ends according to these instructions.
 10. Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging elements.

IMPORTANT SAFETY INFORMATION

RECOMMENDED SURFACING

⚠️ WARNING:

To reduce the likelihood of serious head injuries, install shock-absorbing protective surfacing under and around this unit. The protective surfacing should be applied to a depth suitable for the unit height in accordance with ASTM F1292. Follow the guidelines below for each type of surfacing:


NOTE:

- DO NOT install this unit over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock-absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing.
- Ground level equipment, such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface, does not need any protective surfacing.
- DO NOT install loose fill surfacing over hard surfaces like concrete or asphalt.
- Shredded bark mulch, wood chips, fine sand and fine gravel are added as shock-absorbing materials after assembly. If used properly, these materials can absorb some of the impact of a child's fall.
- All surface material should extend a minimum of 6 ft. (2m) in all directions around the play area.
- DO NOT apply surfacing materials until after the unit is completely assembled and anchored.

UNIT POSITIONING


- PLEASE REFER TO CRITICAL FALL HEIGHT INFORMATION.
- This unit should be installed on a level surface by an ADULT with an ADULT ASSISTANT. Place the unit on a flat area to minimize ground preparation.
- Choose a level location for this unit to reduce the likelihood of the play set tipping over and loose-fill surfacing material washing away during heavy rains.
- Place this unit no less than 6 feet (2 meters) from any structure or obstruction, such as a fence, garage, house, overhang, branches, laundry lines, or electrical wires.
- Provide enough room so that children may play on this unit safely. For example, for structures with multiple play activities, a slide should not exit in front of a swing.
- Place this unit where adults are easily able to watch children at play.
- Create a play area free of obstacles that could cause injuries - such as low-hanging tree branches, overhead wires, tree stumps or roots, large rocks, bricks, and concrete.
- Do not build this unit on top of surfacing material.

VERTICAL HEIGHT

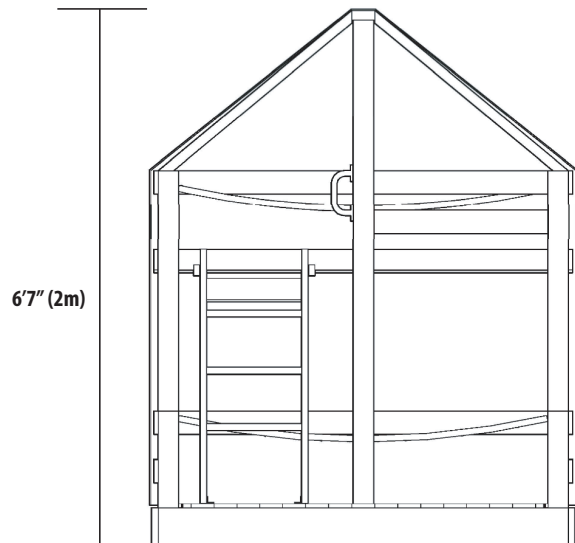


Step 81:

Remove the Light Box Screw and Light Box Cover from the Light Box (DL01). Insert (3) fresh 1.5V A A (LR6) Alkaline Batteries. Make sure the positive and the negative ends face the proper direction as indicated inside the battery compartment. Reattach the Light Box Cover and secure using the Light Box Screw.

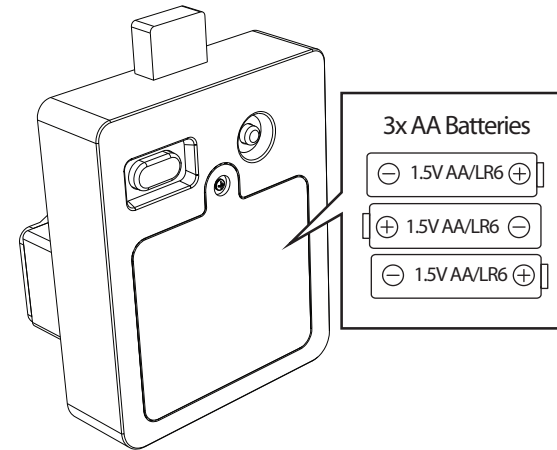


Step 82:

Place the Light Box in the pocket of the Tarp.

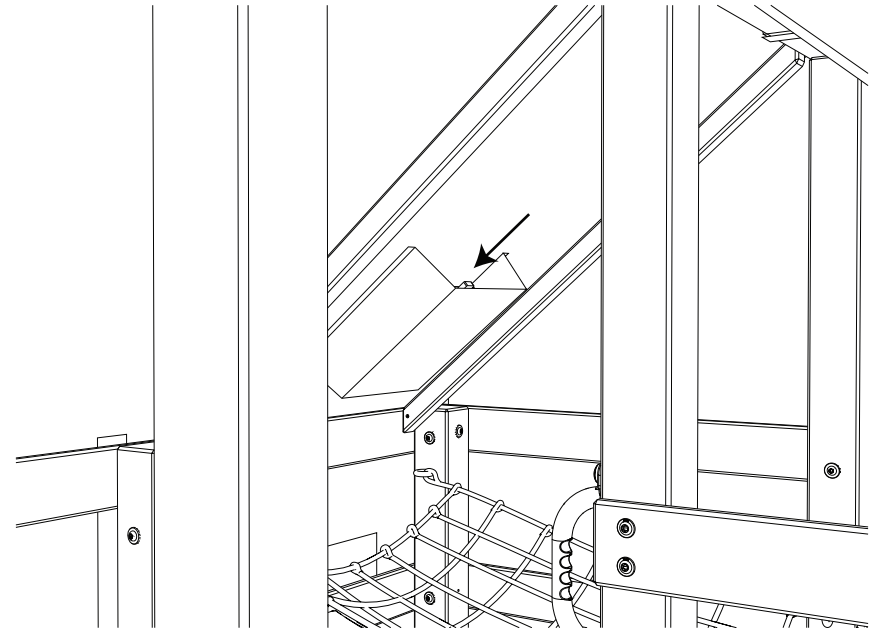


Step 79:

Secure the Tarp to the Rail Board (C06) and Roof Board (C11) using (3) Screws (C5).

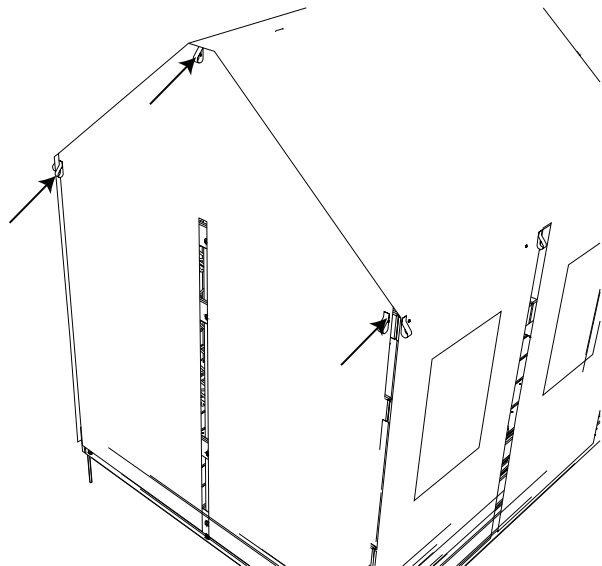

Step 80:

Secure the Tarp to the Rail Board (C07) using (3) Screws (C5).

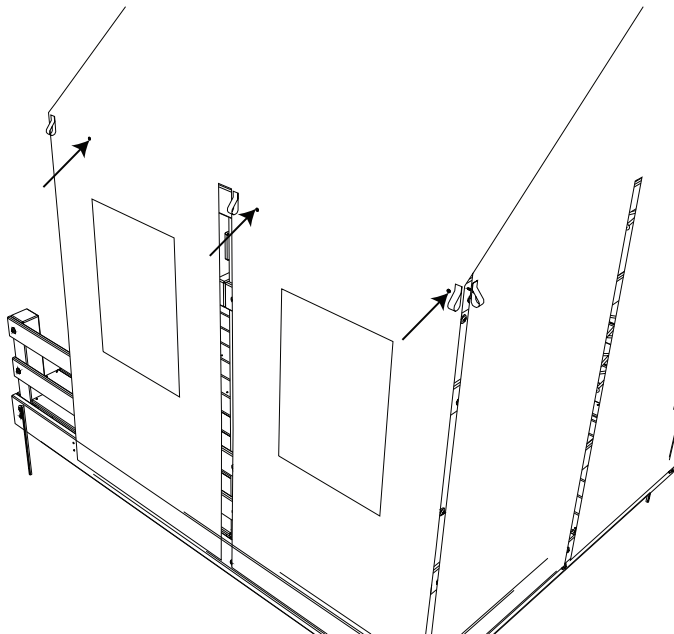

IMPORTANT SAFETY INFORMATION


CRITICAL FALL HEIGHT

Maximum critical fall height is 6 feet (2m). The obstacle-free safety zone which requires safety surfacing is a perimeter that extends 6 feet (2 meters) out from the unit and at least 12 feet (3.7 meters) in front and back of to-fro swings.

Material	Uncompressed Depth			Compressed Depth
	6" (152mm)	9" (228mm)	12" (304mm)	to 9" (228mm)
Wood Chips	7' (2.13m)	10' (3.05m)	11' (3.35m)	10' (3.05m)
Double-Shredded Bark Mulch	6' (2m)	10' (3.05m)	11' (3.35m)	7' (2.13m)
Engineered Wood Fibers (EWf)	6' (2m)	7' (2.13m)	> 12' (3.66m)	6' (2m)
Fine Sand	5' (1.52m)	5' (1.52m)	9' (2.74m)	5' (1.52m)
Coarse Sand	5' (1.52m)	5' (1.52m)	6' (2m)	4' (1.22m)
Fine Gravel	5' (1.52m)	7' (2.13m)	10' (3.05m)	6' (2m)
Medium Gravel	5' (1.52m)	5' (1.52m)	6' (2m)	5' (1.52m)
Shredded Tires*	10-12' (3.0-3.6m)	N/A	N/A	N/A

* This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

SAFETY SURFACING REQUIREMENTS

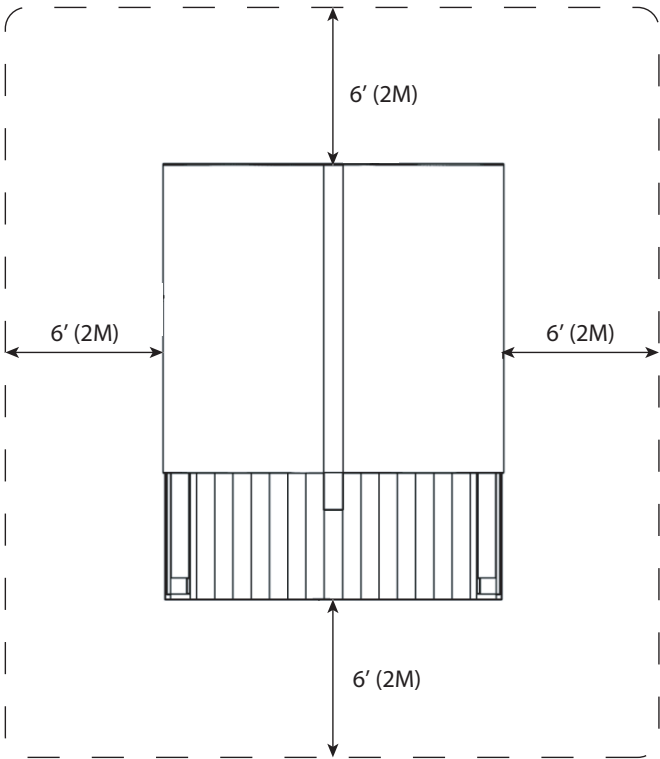

INFORMATION ON PLAYGROUND SURFACING MATERIALS

The following information is from the United States Consumer Product Safety Commission's Information Sheet for playground surfacing material. Additional information can be found here: <https://www.cpsc.gov/s3fs-public/324.pdf>

SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK⁹

Select Protective Surfacing

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface — does not need any protective surfacing.

Loose-Fill Materials:

- Maintain a **minimum** depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high.
- NOTE:** An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing overtime. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.
- Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose-fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles

You may be interested in using surfacing other than loose-fill materials — like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.
- Review surface specification before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F 1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the *fall height* — vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below — of your play equipment.
- Check the protective surfacing frequently for wear.

Placement:


Proper placement and maintenance of protective surfacing is essential. Be sure to:

- Extend surfacing at least 6 feet from the equipment in all directions.

⁹ This information has been extracted from the CPSC publications “Playground Surfacing — Technical Information Guide” and “Handbook for Public Playground Safety.” Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.


Step 77:

Place the Tarp (PB01) over the Glamping House Assembly as shown.

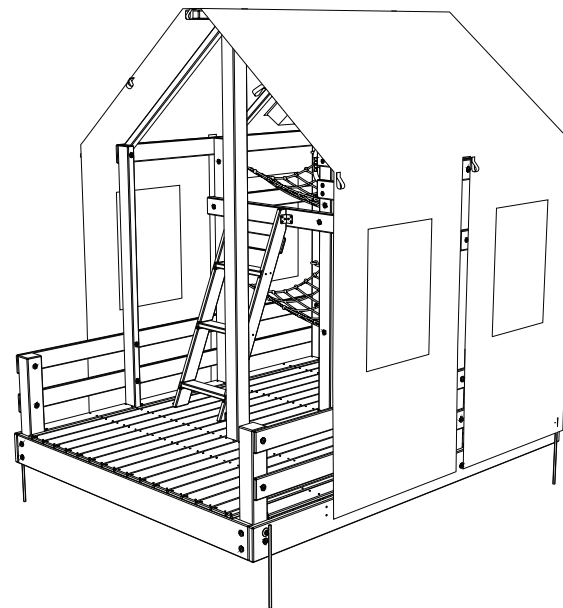


Step 78:

Secure the Tarp to the Rail Board (C07) using (3) Screws (C5).

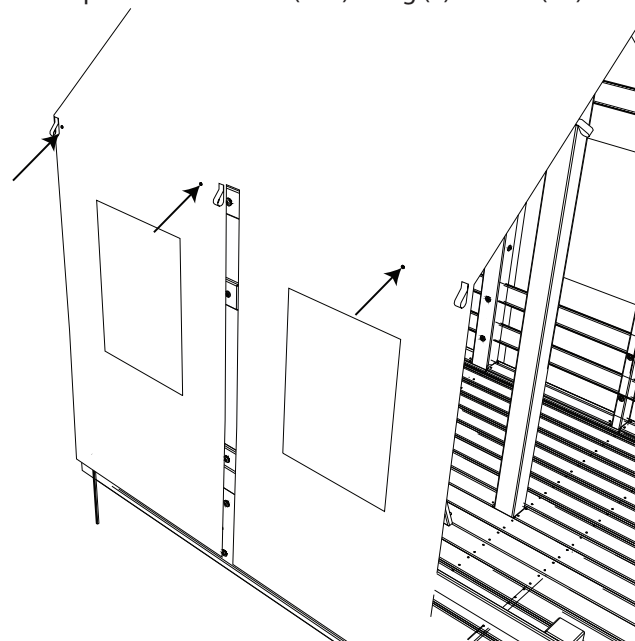


Step 75:

Hammer (2) Ground Stakes (DD01) into the ground next to the Tower Legs (L05) and (L01) as shown. Secure each Ground Stake using (1) Screw (B1).

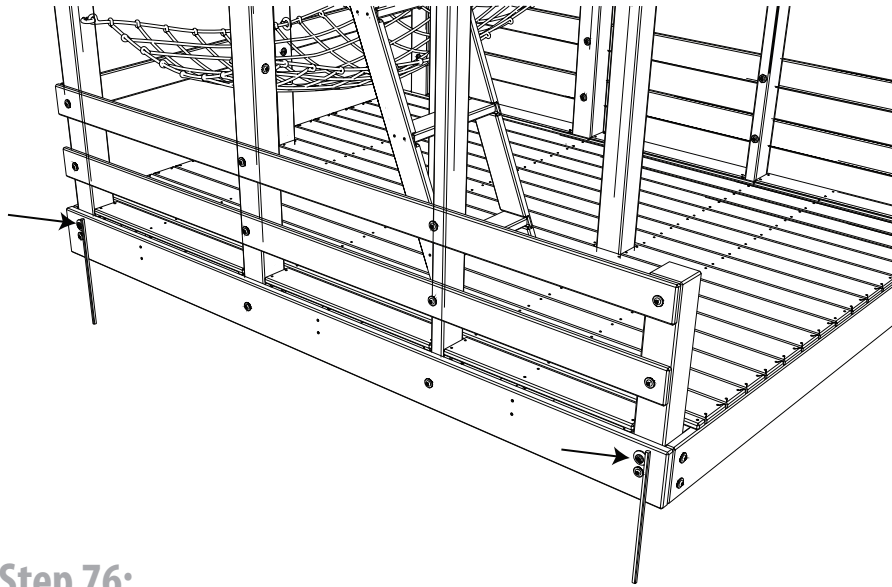

Step 76:

Hammer (2) Ground Stakes (DD01) into the ground next to the Tower Legs (L05) and (L01) as shown. Secure each Ground Stake using (1) Screw (B1).

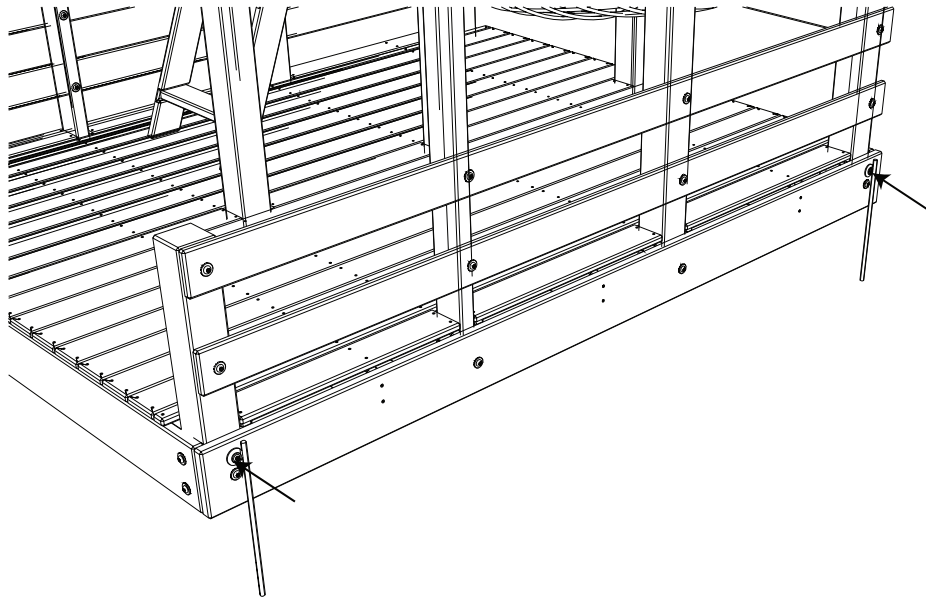


IMPORTANT SAFETY INFORMATION

ONLY REPLACE DAMAGED OR DEFECTIVE PRODUCT PARTS ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

MAINTENANCE

At the beginning of each play season:

- Tighten all hardware, but do not over-tighten to prevent splintering.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check that swing hanger bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight. Ropes should be secure at both ends so they cannot loop back and create an entrapment.
- Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.
- Check for sharp edges or protruding screw threads. Add washers if required.

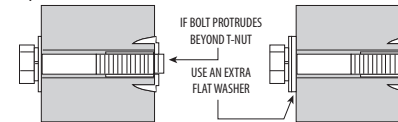

- Check ground stakes for looseness, damage or deterioration. Ensure soil conditions are adequate to firmly hold the stakes. Firmly anchor unit to the ground during use. Re-secure or replace if necessary.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a non-lead based paint which complies with 16 CFR 1303.
- Check all wood pieces for deterioration and splinters. Sand down splinters and replace deteriorating wood.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

At the end of each play season:

* Or when the temperature falls below 32° F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors. Plastic components may become more brittle in cold conditions.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Owners **MUST** maintain the legibility of the warning labels.

THIRD PARTY ASSEMBLY

Should you elect to use a third party person or service to assemble this product, the manufacturer assumes no responsibility or liability for any charge incurred for any assembly services. Please see our warranty for more information about damaged and missing part replacement coverage. Little Tikes will not reimburse the customer for the price of parts purchased.

WOOD WEATHERING

Although the manufacturer has taken great care in selecting premium lumber, wood is a product of nature and is susceptible to weathering. As the climate changes, moisture moves in and out of the wood, causing tension which can result in checking and warping.

- Checking: Surface cracks in the wood along the grain.
- Warping: Distortion from the original plane of the board. This usually happens from wetting and drying of the wood.
- Fading: A natural change in the wood color as it is exposed to sunlight. Wood may turn gray over time.

The factory-applied coating will decrease over time due to water absorption and sunlight. Apply a water repellent or stain on a yearly basis. Most weathering is a normal result of nature and will not affect safe and enjoyable play on this unit. If you have any concerns about weathering, contact consumer service.

Twice a month during play season:

- Tighten all hardware, but do not over-tighten to prevent splintering.
- Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing. Check bolt covers for sharp edges. Replace as needed.
- Check for sharp edges or protruding screw threads. Add washers if required.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust or other deterioration. Replace as needed.
- Lubricate all metallic moving parts per manufacturer's instructions.

Additional Maintenance:

- Check the swing beam and hardware every two weeks due to wood expansion and contraction. It is particularly important that this procedure be followed at the beginning of each season.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe play environment. Treat your unit with stain regularly to help prevent severe splitting and other damage.
- A waterborne transparent stain has been applied to your unit. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some protection (sealant) on your unit. Prior to the application of the sealant, lightly sand any rough spots on your unit. **Please note this is a requirement of your warranty.**
- Assembling and maintaining the unit on a level surface is very important. As your children play, your unit will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the unit is level once each year or at the beginning of each play season.

DISPOSAL



Once you no longer desire to play with or keep the unit, it should be disassembled and disposed of in such a way that no unreasonable hazards exist at the time the unit is discarded. Follow local waste ordinances.

BATTERY SAFETY INFORMATION

- Use only size "AA" (LR6) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).




'Let's care for the environment!'

The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Step 73:


Attach (1) Handle (LS01) to the Tower Leg (L03) using (2) Washers (LS01) and (2) Screws (LS01). Place (1) Cap over each Screw.

Note: You may need a Rubber Mallet.

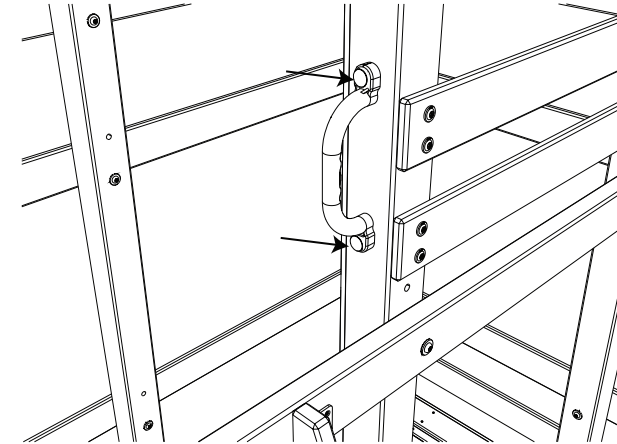


Step 74:

Attach (2) Hammocks (DW01) to the Tower Legs using (12) Eyebolts (L1) and (12) Nuts (L1).

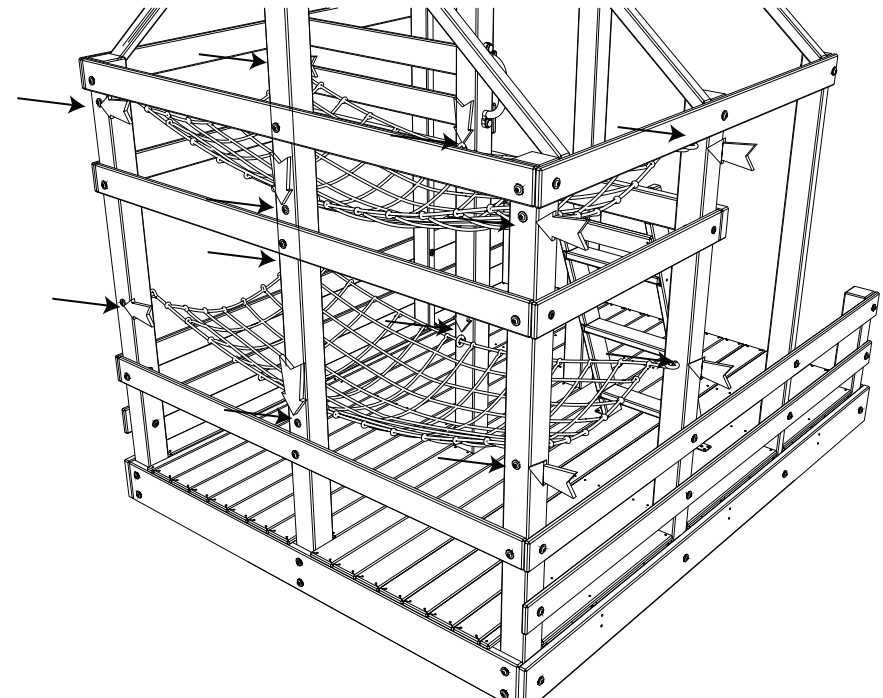


Step 71:

Attach (2) Roof Supports (J1) to the Roof Board (C11) using (2) Screws (C3). Attach the Roof Supports to Tower Legs (C01) and (L03) using (2) Screws (C4). Ensure the top edges of the Roof Supports are flush with the top edge of the Roof Board.

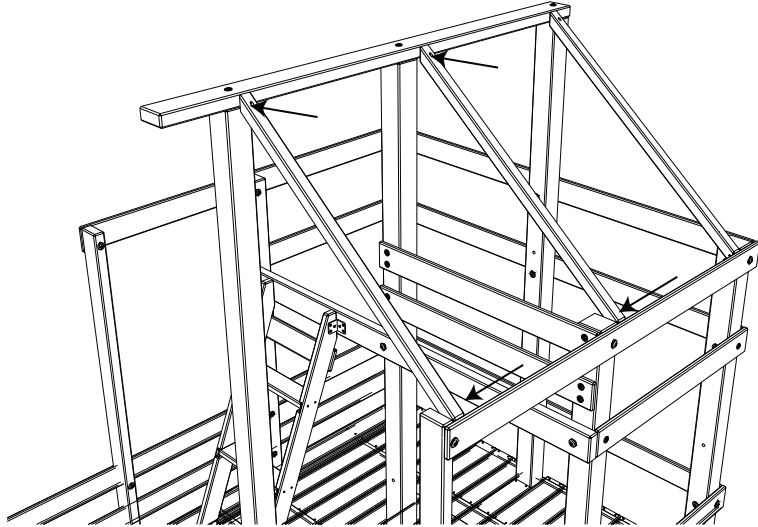

Step 72:

Attach (3) Roof Supports (J1) to the Roof Board (C11) using (3) Screws (C3). Attach the Roof Supports (J1) to the Tower Legs (L05), (L02), and (C02) using (3) Screws (C4). Ensure the top edges of the Roof Supports are flush with the top edge of the Roof Board.

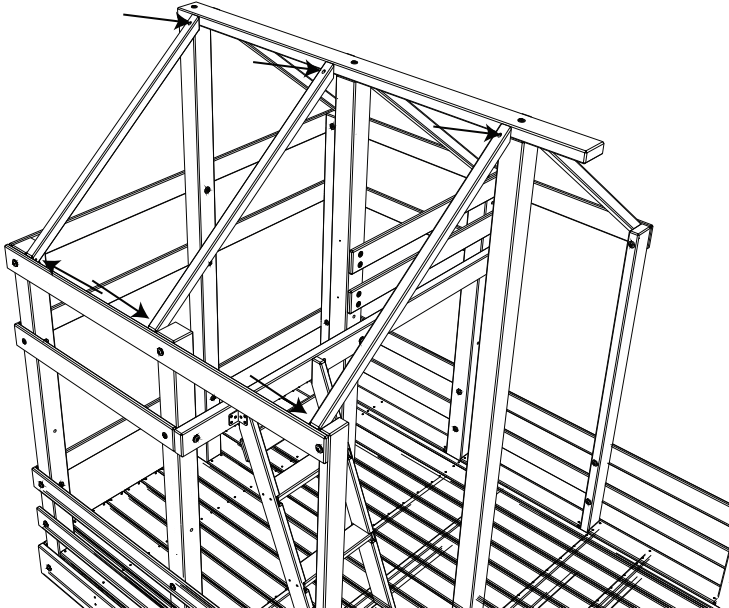

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year from the date of purchase (dated sales receipt is required for proof of purchase). In addition, all wood carries a pro-rated 5 year warranty against rot and decay. Please contact consumer service for any charges associated with replacement parts under this warranty. All other parts, such as hardware, swings, rides, accessories, and slides carry a one year warranty. The Little Tikes Company will replace any parts within the first 90 days from the date of purchase if they are found to be missing from the original packaging or damaged upon receipt.

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to assure maximum life and performance of this product, and failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in this manual.

This limited warranty does not cover:

- Labor for any inspection
- Labor for replacement of any defective item(s)
- Incidental or consequential damage
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use, failure due to loading or use beyond the capacities stated in this manual
- Acts of nature including but not limited to wind, storms, hail, floods or excessive water exposure
- Improper installation including but not limited to installation on uneven, unlevel or soft ground
- Minor twisting, warping, checking or any other natural occurring properties of wood that do not affect performance or integrity

This warranty is valid only if the product has been assembled and maintained per the instructions. Any modifications made to the original product could damage the structural integrity of the unit, leading to failure and possible injury. Making modifications to this unit voids the warranty. The Little Tikes Company disclaims all other representations and warranties of any kind, express or implied.

RESIDENTIAL HOME USE ONLY. This unit is not intended for public use. The manufacturer does not warranty this product if it is used for commercial purposes like daycare, schools, churches, nurseries or parks.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.


Outside U.S.A and Canada: Contact place of purchase for warranty service.

This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

TOOLS


TOOLS YOU WILL NEED (NOT INCLUDED)

To complete this procedure, you will need a Power Drill, a Hammer, a Rubber Mallet, a Metric Socket Wrench Set, a Level, a Square, an Adjustable Wrench, a Tape Measure, a Ladder (not pictured), and (3) AA Batteries. Optionally, you may need a Flathead Screwdriver. Optionally, you may need a Flathead Screwdriver.

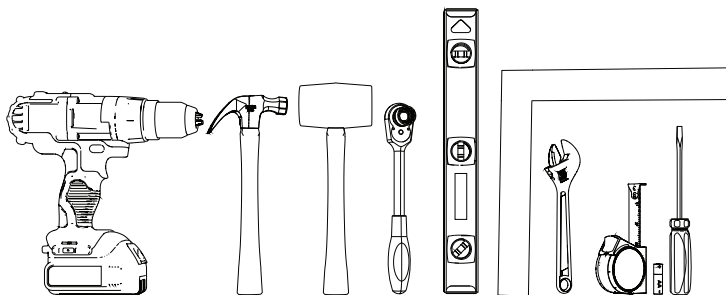


HARDWARE

Hardware listed is the quantity needed to build the unit. Extra hardware is included.

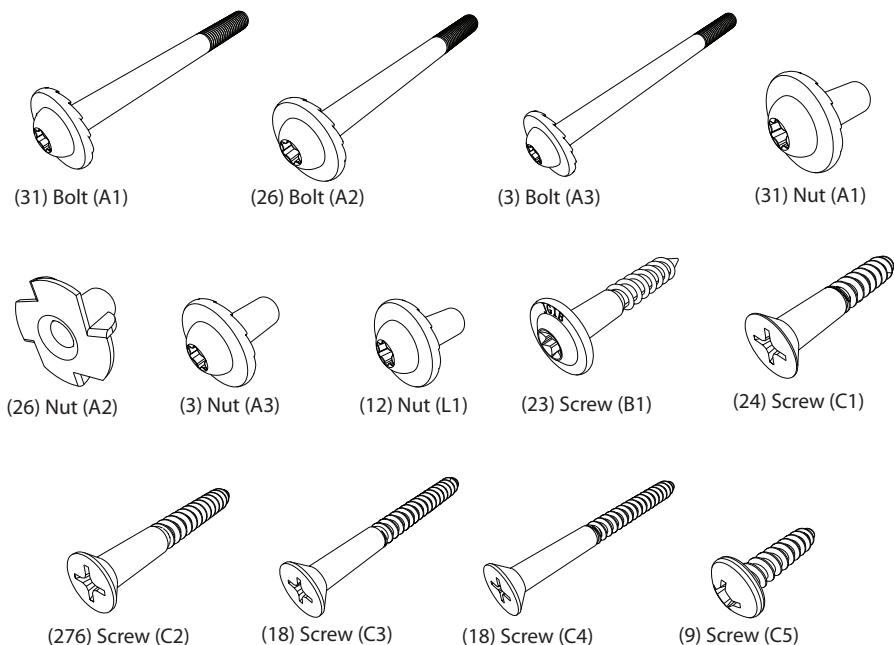


Step 69:

Attach (1) Roof Board (C11) to the Tower Legs (C01), (L03), and (L04) using (3) Screws (B1). Ensure that the end with the overhang is placed over the Tower Leg (C01).

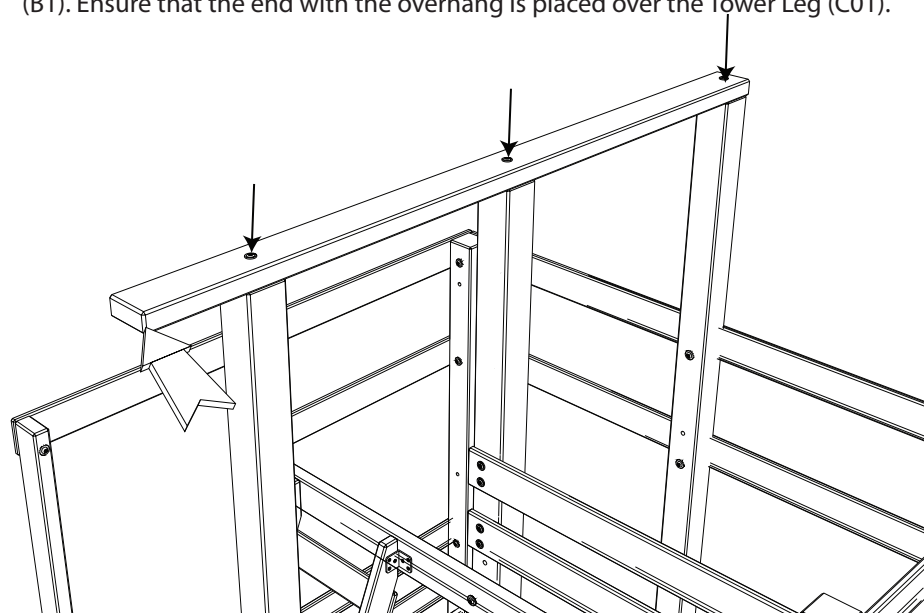


Step 70:

Attach (1) Roof Support (J1) to the Roof Board (C11) using (1) Screw (C3). Attach the Roof Support to Tower Leg (L05) using (1) Screw (C4). Ensure the top edge of the Roof Support is flush with the top edge of the Roof Board.

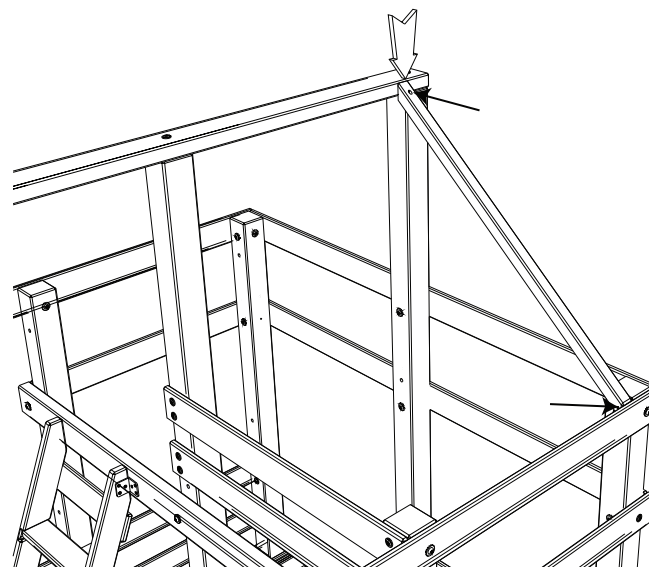


Step 67:

Stand and align the Ladder Assembly with the Rail Board (C13).

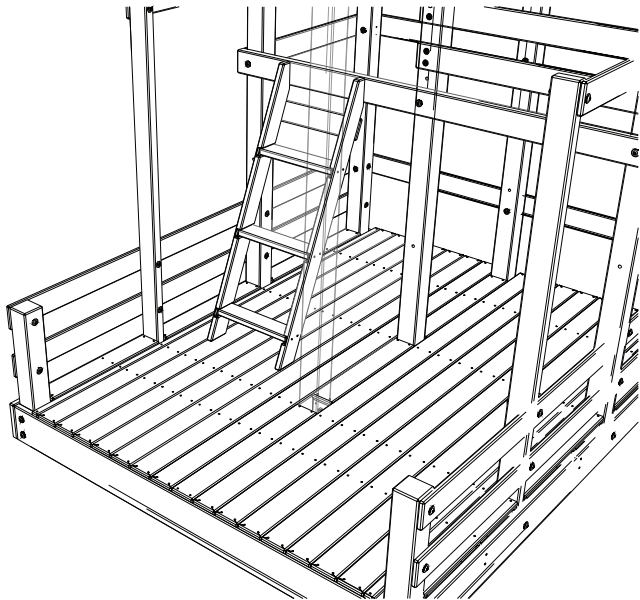

Step 68:


Secure the Ladder Assembly to the Glamping House Assembly using (4) Brackets (G1) and (24) Screws (C1).

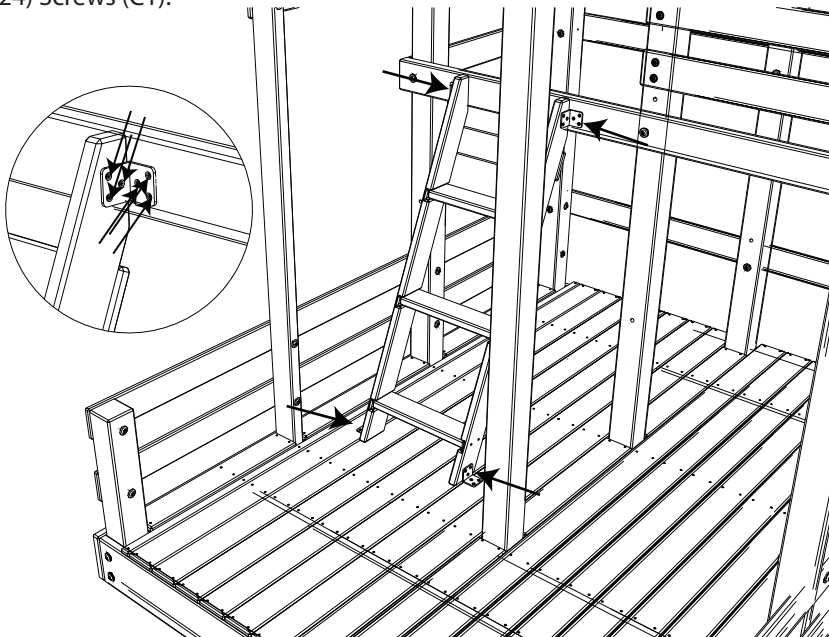


PARTS LIST




(1) Baseboard - C03

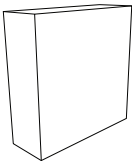


(1) Block

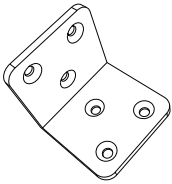


(4) Bracket - G1




(1) Baseboard - C04

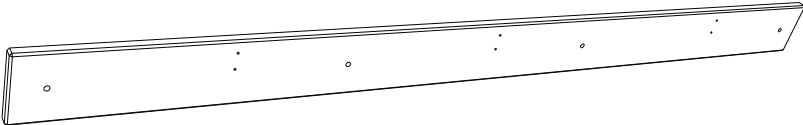


(2) Baseboard - C05

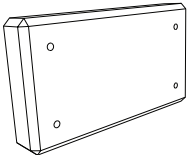


(11) Floor Support- C10

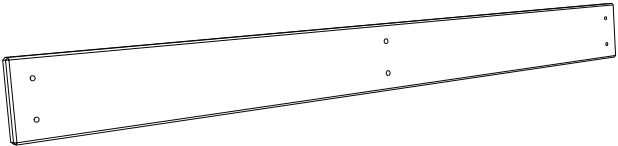


(2) Floor Support- C20

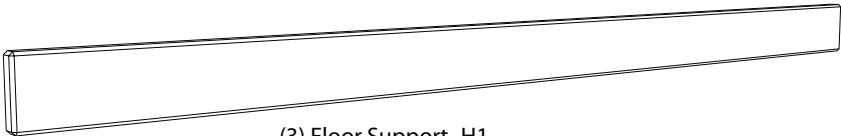

(3) Floor Support- H1

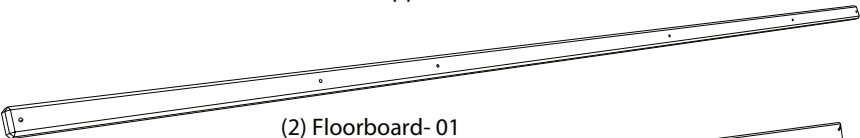


(2) Floorboard- 01

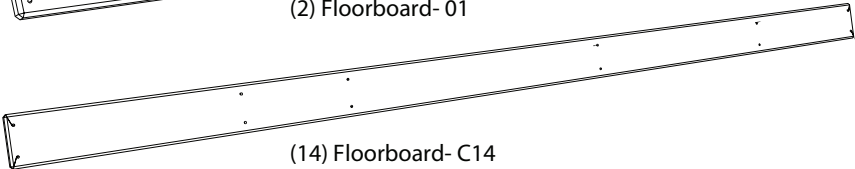

(14) Floorboard- C14




(2) Floorboard- C15




(1) Floorboard- C16-1

PARTS LIST CONTINUED



(2) Floorboard- C16




(3) Floorboard- C17




(1) Floorboard- C18




(4) Ground Stake- DD01

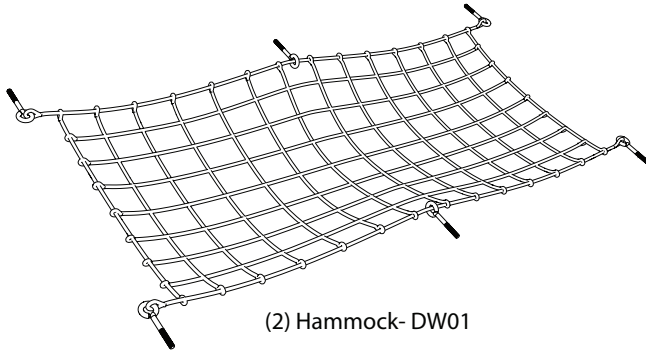


(2) Hammock- DW01

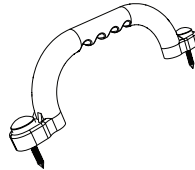


(1) Handle- LS01

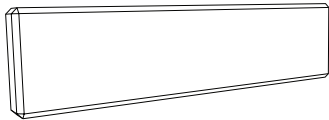

(3) Ladder Rung- H2




(1) Left Upright- H4




(1) Right Upright- H3



(3) Rail Board- C06

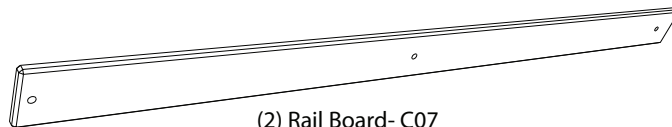


(2) Rail Board- C07

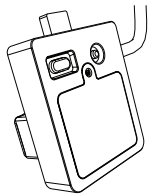

(1) Light Box- DL01


Step 65:

Attach (1) Rear Board (C19) to the Ladder Assembly using (4) Screws (C2).

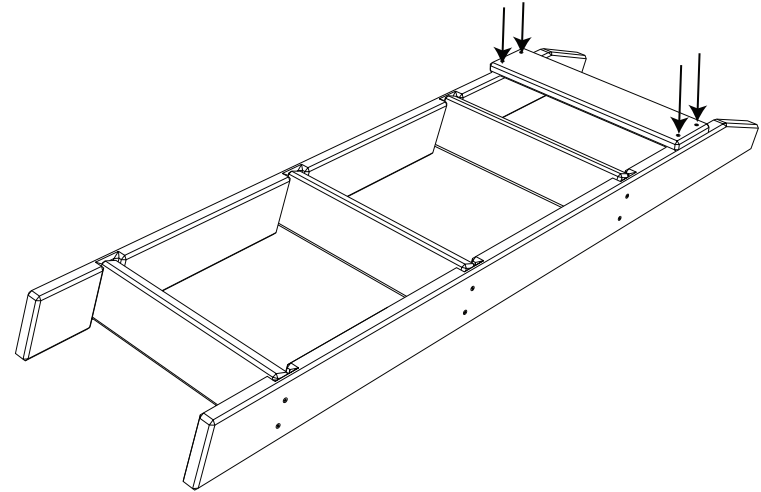


Step 66:

Turn the Ladder Assembly over.

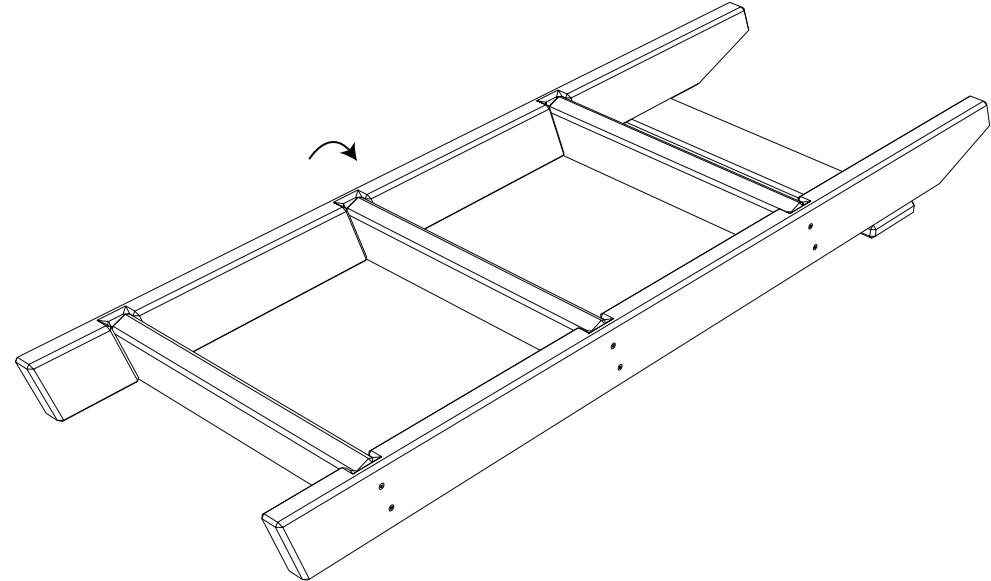


Step 63:

Align (1) Right Upright (H3) with (1) Left Upright (H4). Note the location of the angled edges.

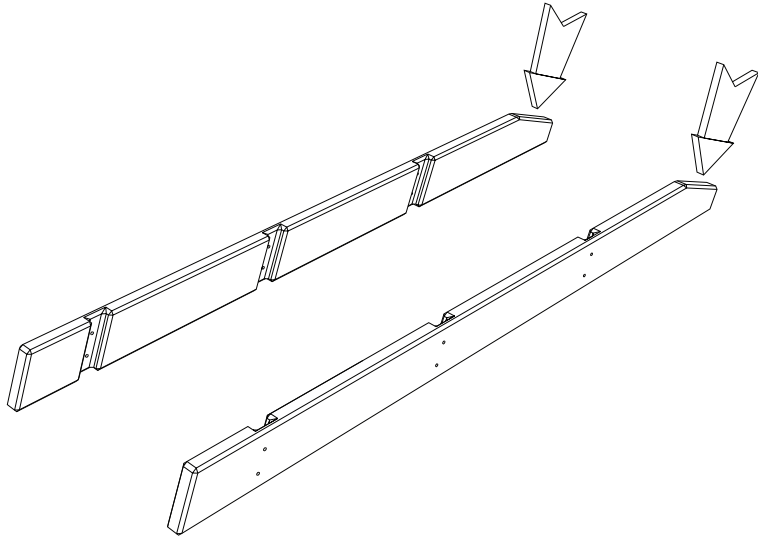


Step 64:


Insert (3) Ladder Rungs (H2) into the grooves of the Left and Right Uprights. Attach the Ladder Rungs using (12) Screws (C3).

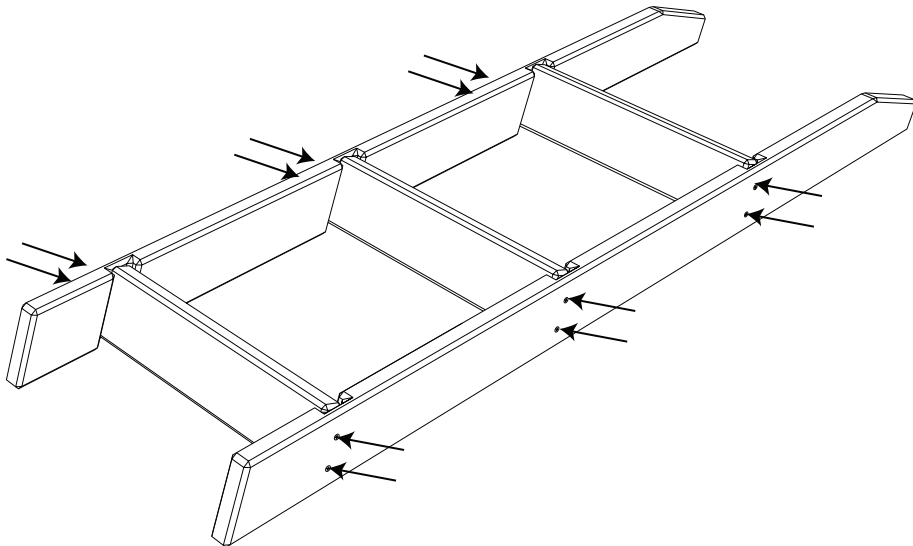


PARTS LIST CONTINUED




(4) Rail Board- C08

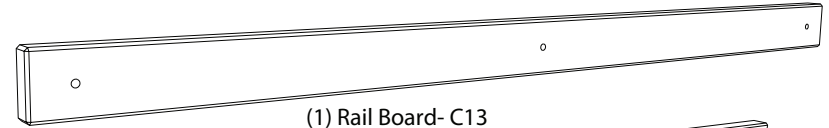


(1) Rail Board- C13

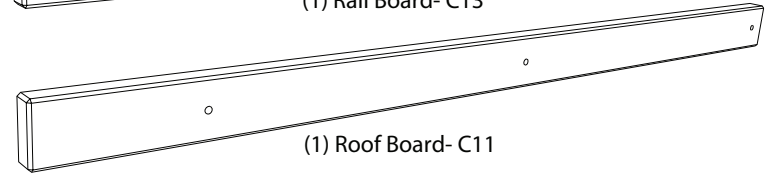


(1) Roof Board- C11

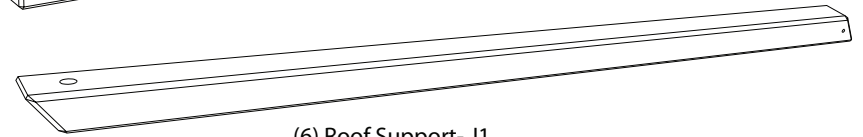


(6) Roof Support- J1

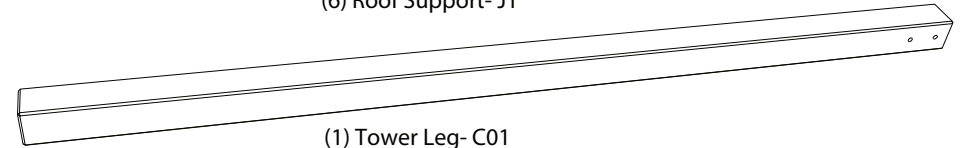


(1) Tower Leg- C01

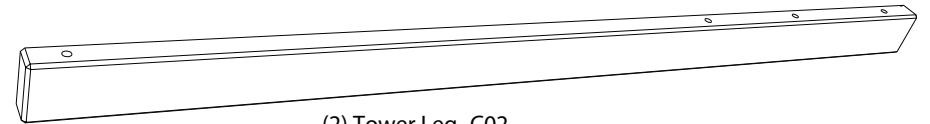

(2) Tower Leg- C02




(2) Tower Leg- L01



(1) Rear Board- C19




(1) Tower Leg- L02-1




(1) Tower Leg- L02

PARTS LIST CONTINUED



(1) Tower Leg- L03



(1) Tower Leg- L04




(2) Tower Leg- L05



(2) Wall Rail Board- C09




(2) Wall Rail Board- C12

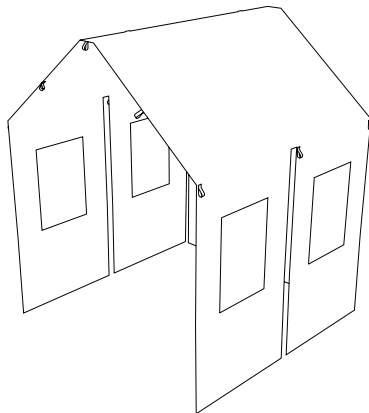

(1) Tarp - PB01


Step 61:

Lay out and evenly space (7) Floorboards (C14) as shown. Attach the Floorboards using (84) Screws (C2).

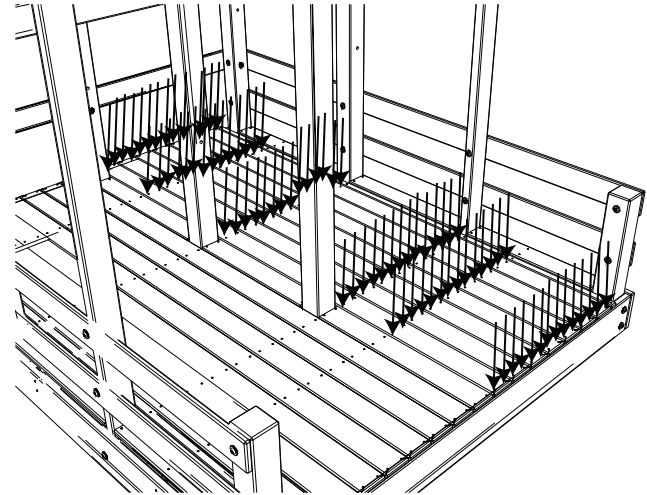


Step 62:

The following steps will guide you through the Ladder Assembly.

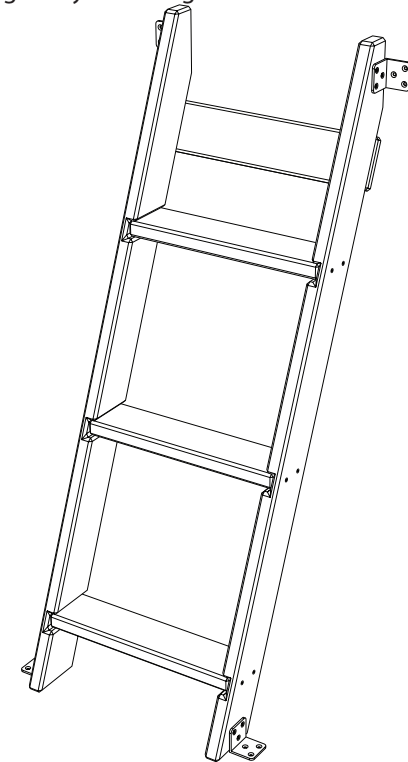


Step 59:

Attach (1) Floorboard (C15) to the Floor Supports (C20), (H1), and (C10) using (6) Screws (C2).

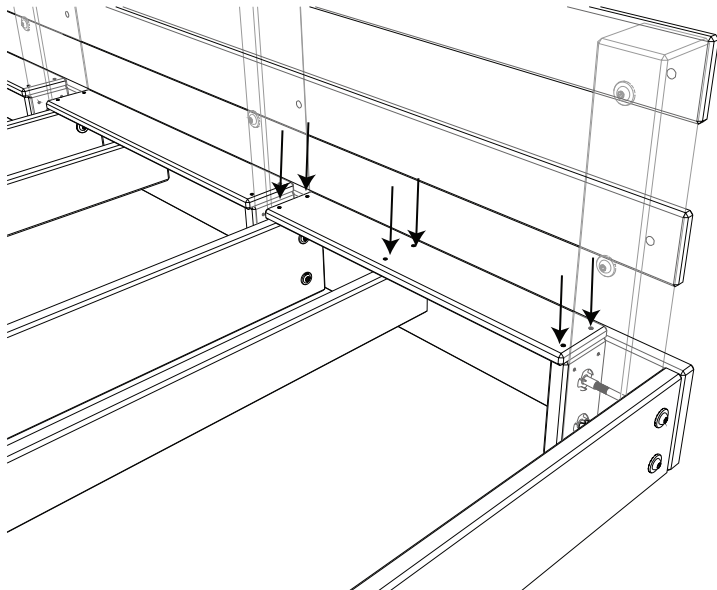


Step 60:

Attach (1) Floorboard (01) to the Baseboards (C04) and (C03) and Floor Supports (H1) and (C20) using (6) Screws (C2).

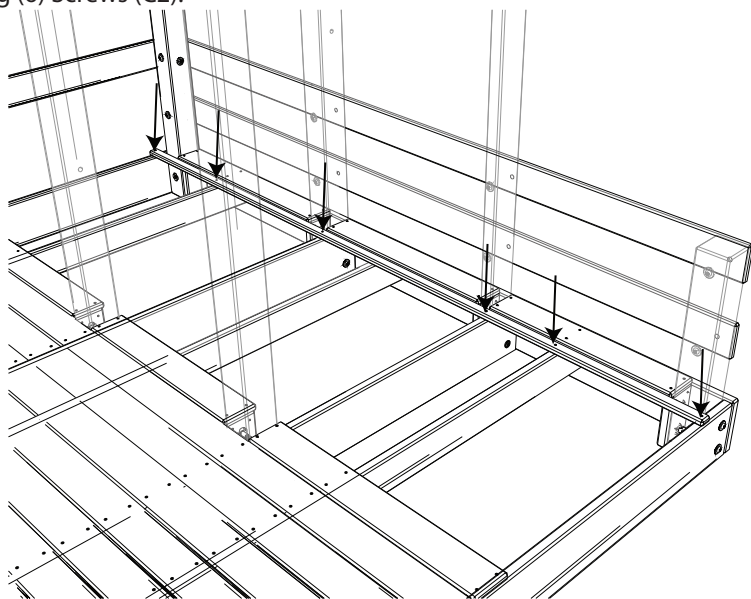

ASSEMBLY INSTRUCTIONS

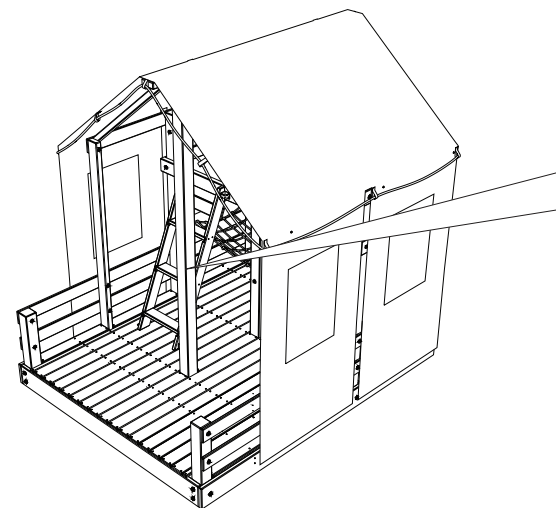

Step 1:

This procedure will assist you with assembling the Glamping House.

Step 2:

To complete this procedure, you will need a Power Drill, a Hammer, a Rubber Mallet, a Metric Socket Wrench Set, a Level, a Square, an Adjustable Wrench, a Tape Measure, a Ladder, and (3) AA Batteries. Optionally, you may need a Flathead Screwdriver.

Step 3:

This Unit is intended for children 3-10 years of age.

Maximum Weight: 110lbs. (50kg) per child.

Maximum Occupancy: 4.

Note: Prior to assembly, this package contains small parts: hardware which is a choking hazard and may contain sharp edges and sharp points. Keep away from children until assembled. Do not allow children to play on this Unit until assembly is complete and the Unit is properly anchored.

Step 4:

The obstacle-free safety zone extends 6ft or 2m out from the Unit and at least 12ft (3.7m) in front and back of to-fro swings from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. Note: Locate bare metal Platforms and Slides out of direct sunlight to reduce the likelihood of serious burns. A Slide that faces north will receive the least direct sunlight.

Step 5:

Maximum critical fall height for this Unit is 6ft (2m). Place this Unit on level ground with protective surfacing applied to a depth that is suitable for the equipment height. Check and maintain the depth of the loose-fill surfacing material by marking the correct level on play equipment support posts. This will allow you to easily see when to replenish and/or redistribute the surfacing. Refer to the Important Safety Instructions for additional information.

Note: Do not install loose-fill surfacing over hard surfaces such as concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user.

Step 6:

Lay out all Ropes in the sun or in a warm environment and allow them to become more pliable.

WARNING

CONTINUOUS ADULT SUPERVISION REQUIRED!

SERIOUS HEAD INJURY HAZARD
MAINTAIN SHOCK ABSORBING MATERIAL UNDER AND AROUND PLAY-SET AS RECOMMENDED IN THE INSTALLATION & OPERATING INSTRUCTIONS. INSTALLATION OVER CONCRETE, ASPHALT, DIRT, GRASS, CARPET AND OTHER HARD SURFACES CREATES A RISK OF SERIOUS INJURY OR DEATH FROM FALLS TO THE GROUND.

STRANGULATION HAZARDS
NEVER ALLOW CHILDREN TO PLAY WITH ROPES, CLOTHESLINES, PET LEASHES, CABLES, CHAINS OR CORD-LIKE ITEMS WHEN USING THIS PLAY-SET OR TO ATTACH THESE ITEMS TO PLAY-SET.

NEVER ALLOW CHILDREN TO WEAR LOOSE FITTING CLOTHING, PONCHOS, HOODS, SCARVES, CAPES, NECKLACES, OR ITEMS WITH DRAW-STRINGS, CORDS OR TIES WHEN USING THIS PLAY-SET.

NEVER ALLOW CHILDREN TO WEAR BIKES OR SPORT HELMETS WHEN USING THIS PLAY-SET. FAILURE TO PROHIBIT THESE ITEMS INCREASES THE RISK OF SERIOUS INJURY AND DEATH TO CHILDREN FROM ENTANGLEMENT AND STRANGULATION.


FOR CHILDREN 3 TO 10 YEARS OF AGE. MAXIMUM NUMBER OF USERS. INSTALLATION & OPERATING INSTRUCTIONS. OTHER INFORMATION IS AVAILABLE AT:

www.littletikes.com
Little Tikes Consumer Service
2180 Barlow Road,
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

Tracking Number:


Step 7:

The following steps will guide you through the Glamping House Assembly.

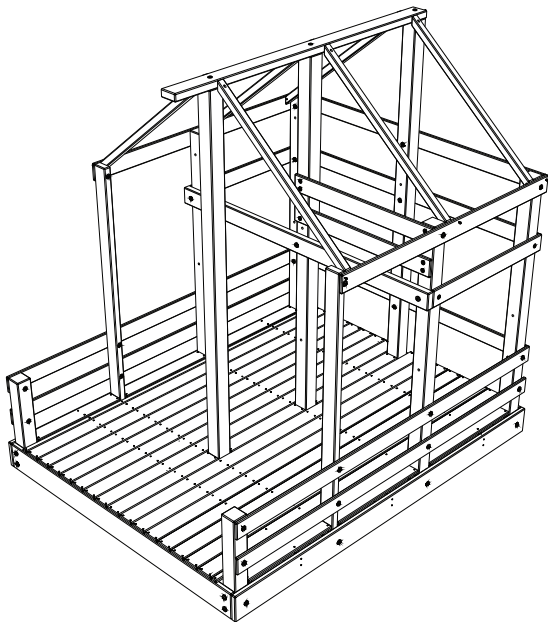


Step 8:

Insert (3) Nuts (A-2) into (1) Tower Leg (L05) as shown. Orient the Tower Leg as shown with the (7) large predrilled holes facing up.

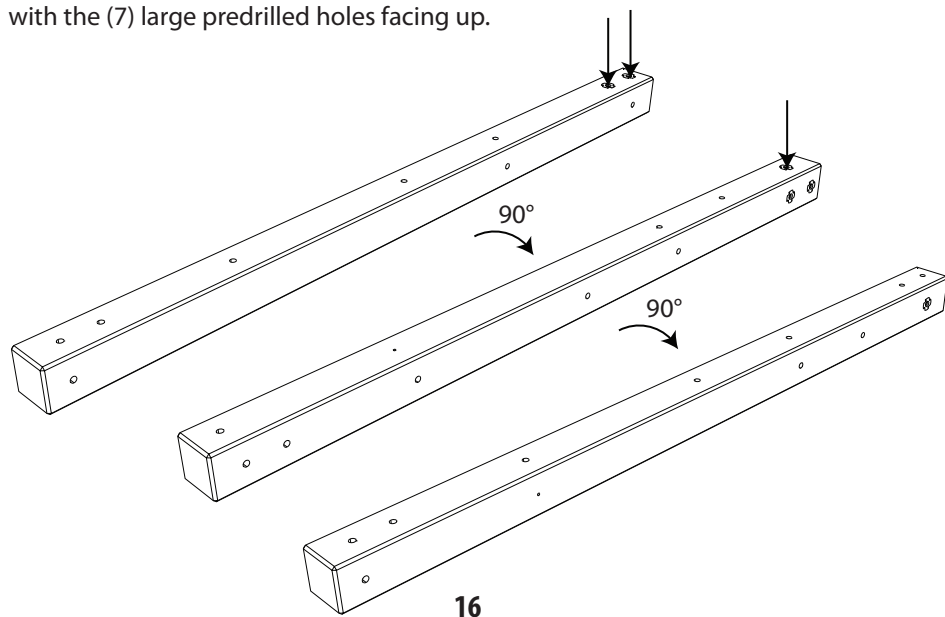


Step 57:

Attach (1) Floorboard (C17) to the Floor Supports (C10) and (H1) using (6) Screws (C2).

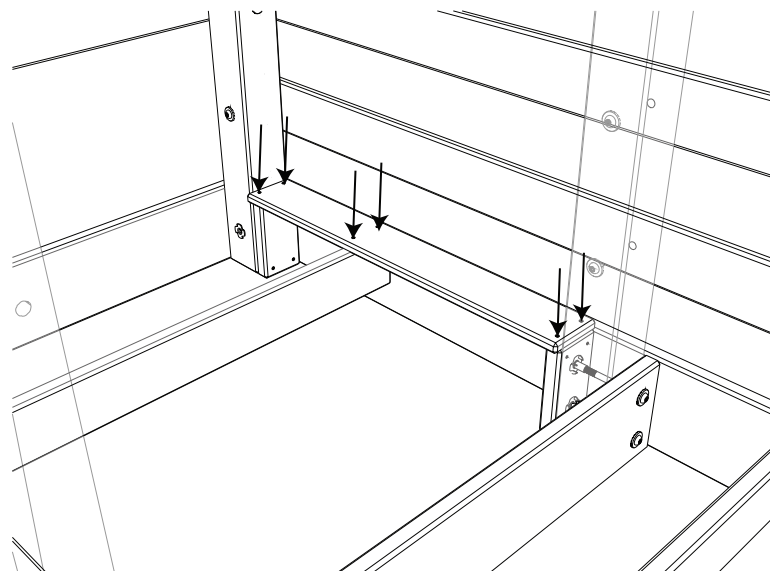


Step 58:

Attach (1) Floorboard (C16) to the Floor Supports (C20), (H1), and (C10) using (4) Screws (C2).

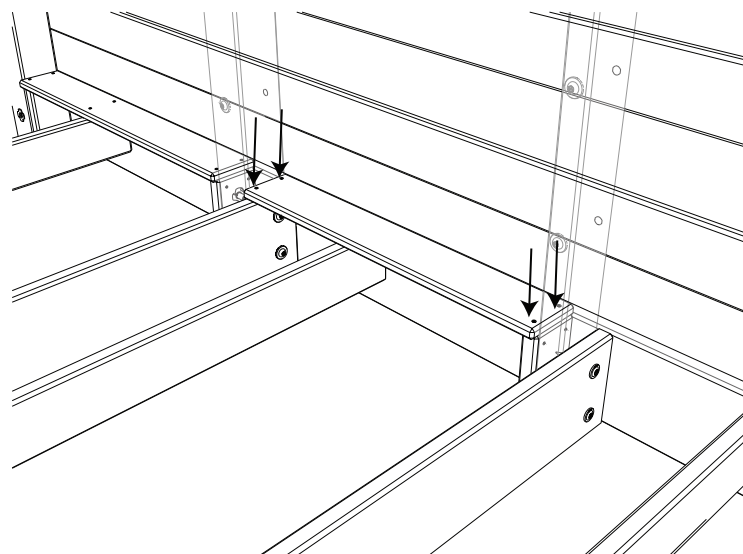


Step 55:

Attach (1) Floorboard (01) to the Baseboards (C03) and (C04) and the Floor Supports (H1) and (C20) using (6) Screws (C2).

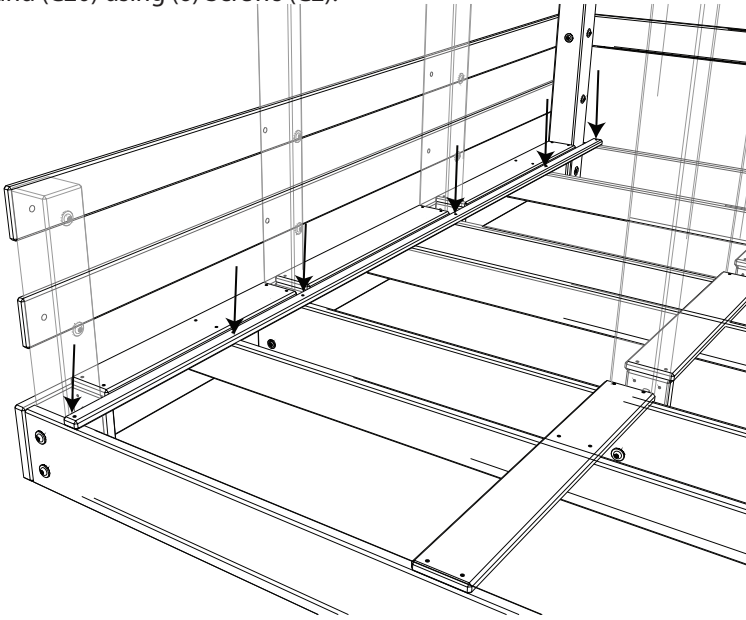

Step 56:


Lay out and evenly space (7) Floorboards (C14) as shown. Attach the Floorboards using (84) Screws (C2).

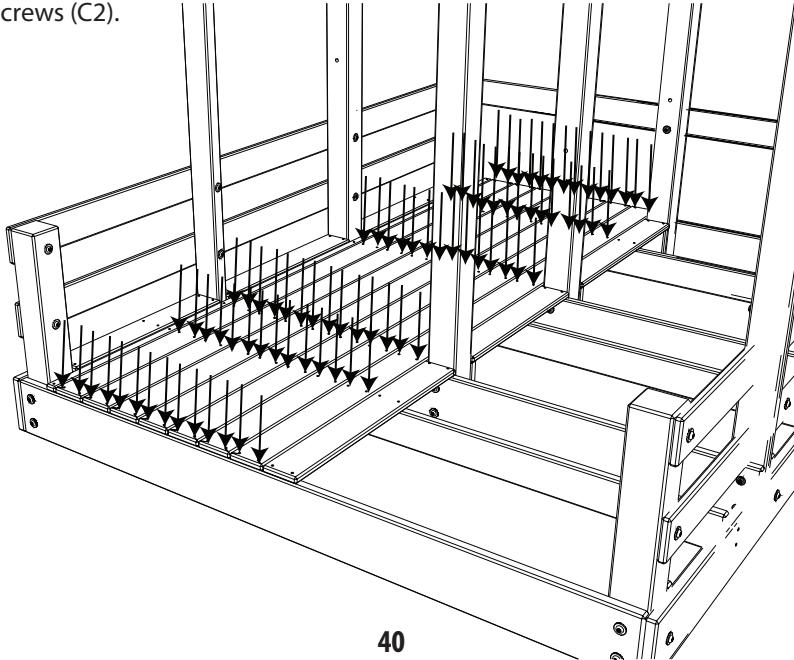

40


Step 9:

Insert (2) Nuts (A-2) into (1) Tower Leg (L04) as shown. Orient the Tower Leg as shown with the (7) large predrilled holes facing up.

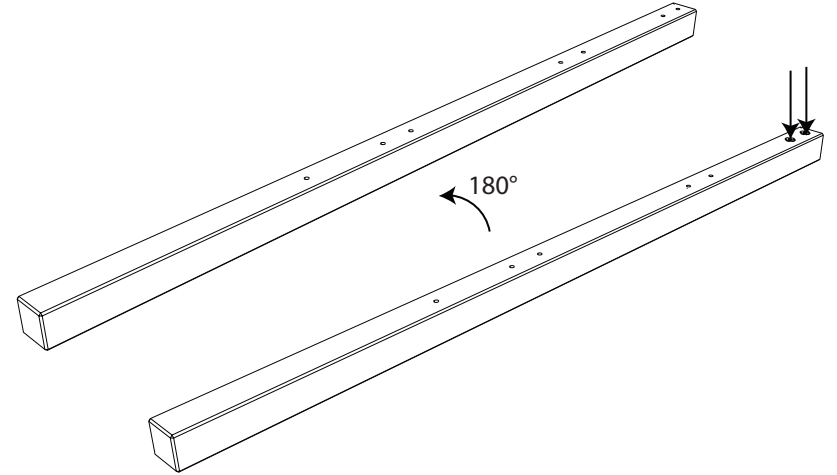

Step 10:


Insert (3) Nuts (A-2) into (1) Tower Leg (L05) as shown. Orient the Tower Leg as shown with the (7) large predrilled holes facing up.

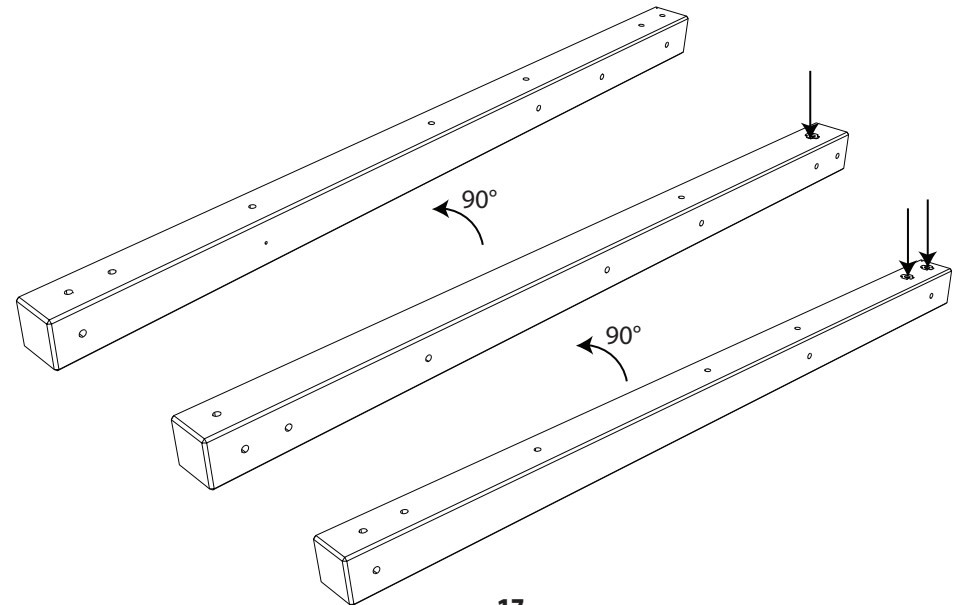

17


Step 11:

Lay out (2) Tower Legs (L05) and (1) Tower Leg (L04) as shown. Ensure the previously installed Nuts on the Tower Legs face the correct direction. Ensure that the small pilot holes on the (2) Tower Legs (L05) face the outside.

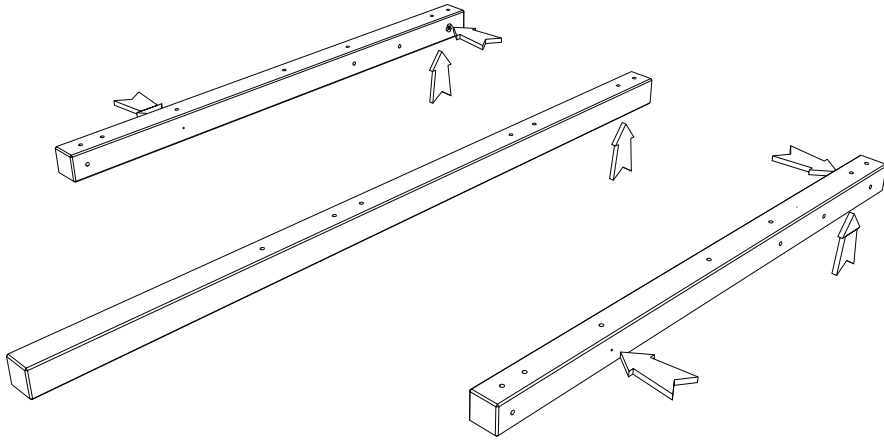


Step 12:

Attach (1) Baseboard (C04) to the Tower Legs using (6) Bolts (A-2).

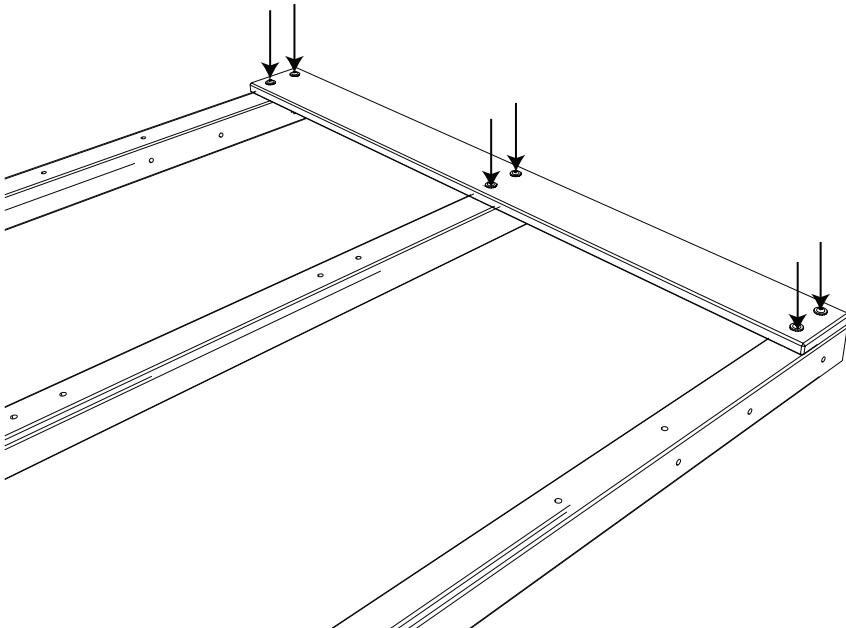


Step 53:

Attach (1) Floorboard (C16-1) to the Floor Supports (C10) using (4) Screws (C2).

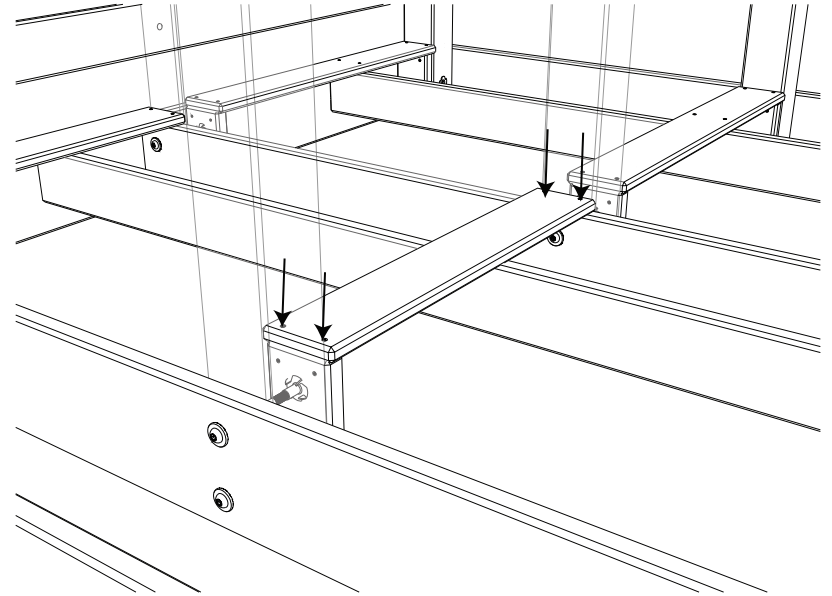


Step 54:

Attach (1) Floorboard (C18) to the Baseboard (C03) and Floor Supports (H1) and (C20) using (6) Screws (C2).

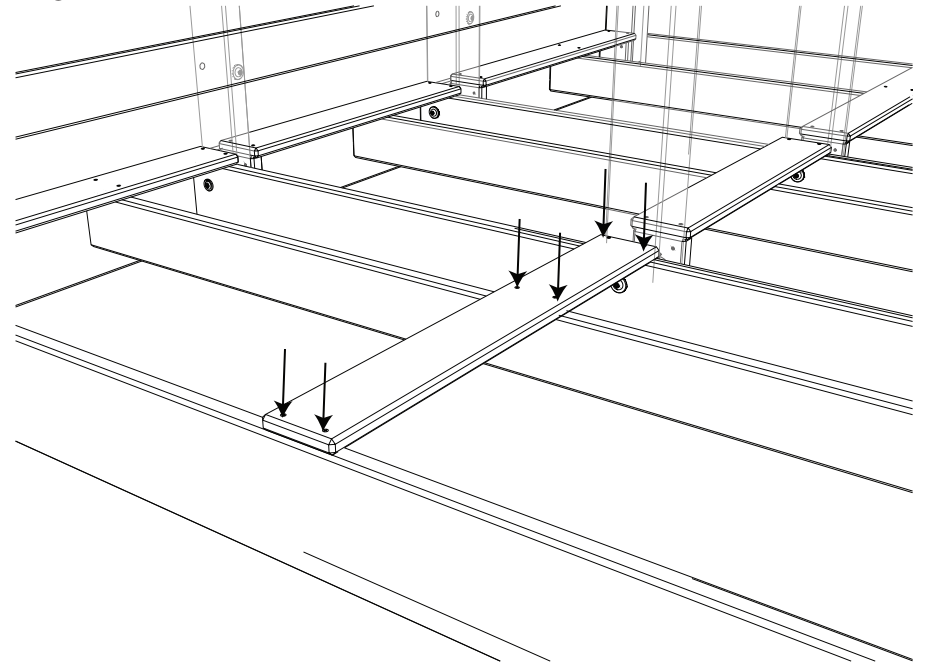


Step 51:

Attach (1) Floorboard (C16) to the Floor Supports (C10) using (4) Screws (C2).

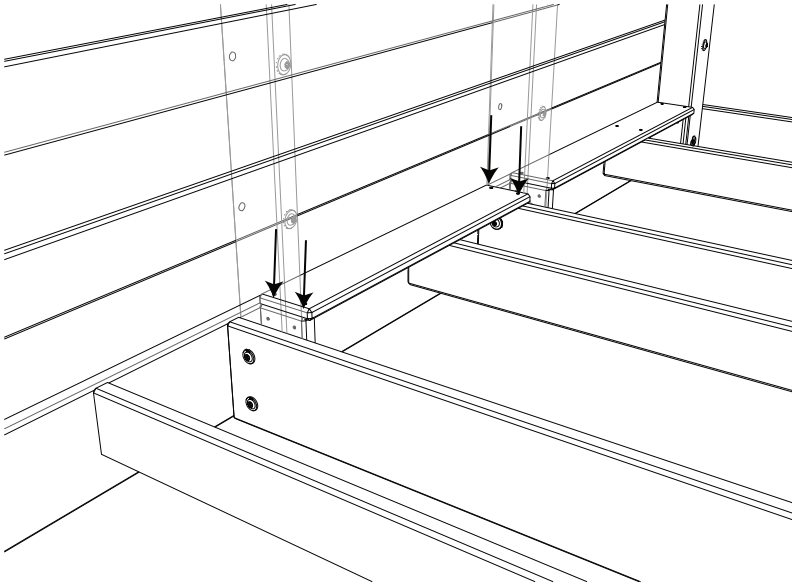


Step 52:

Attach (1) Floorboard (C15) to the Floor Supports (C10) and (H1) using (6) Screws (C2).

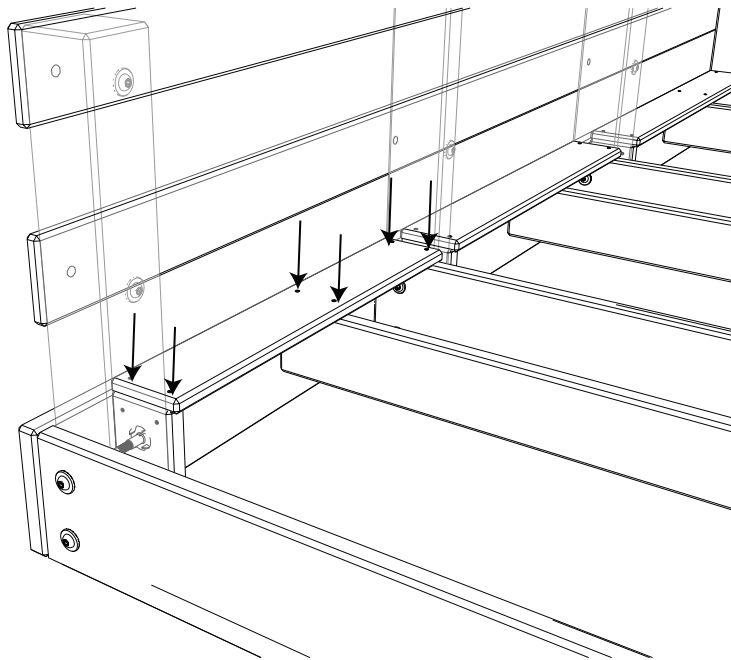


Step 13:

Attach (3) Rail Boards (C06) to the Tower Legs using (9) Nuts (A1) and (9) Bolts (A1). Ensure that the predrilled holes on the Rail Boards are closer to the Baseboard (C04).

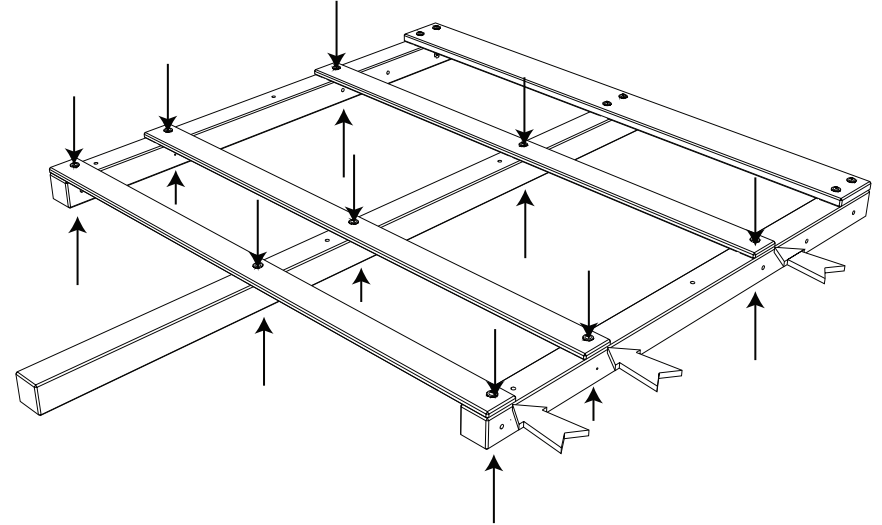


Step 14:

Stand the Tower Leg Assembly upright.

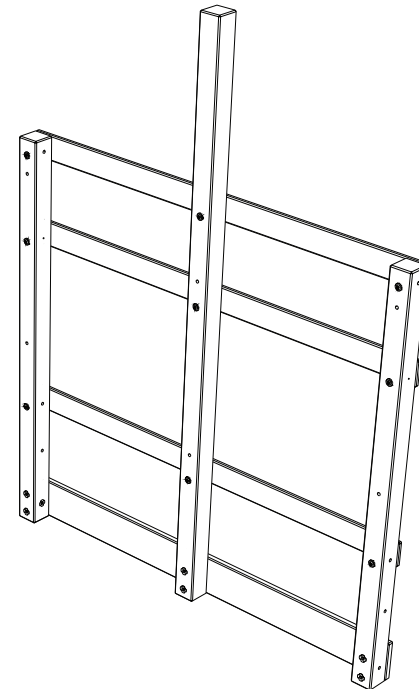


Step 15:

Attach (2) Baseboards (C05) to the Tower Legs (L05) using (2) Bolts (A-2). Ensure that the Baseboards are placed with the measurements between the bolt holes oriented as shown and that the small predrilled holes are towards the top of the Baseboards.

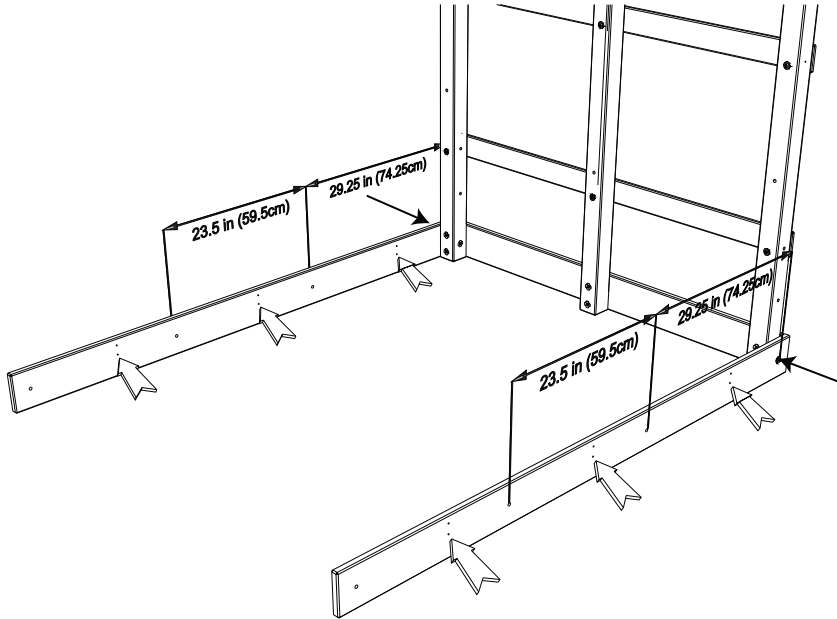


Step 16:

Insert (3) Nuts (A-2) into (1) Tower Leg (L02) as shown. Orient the Tower Leg as shown with the (5) large predrilled holes facing up.

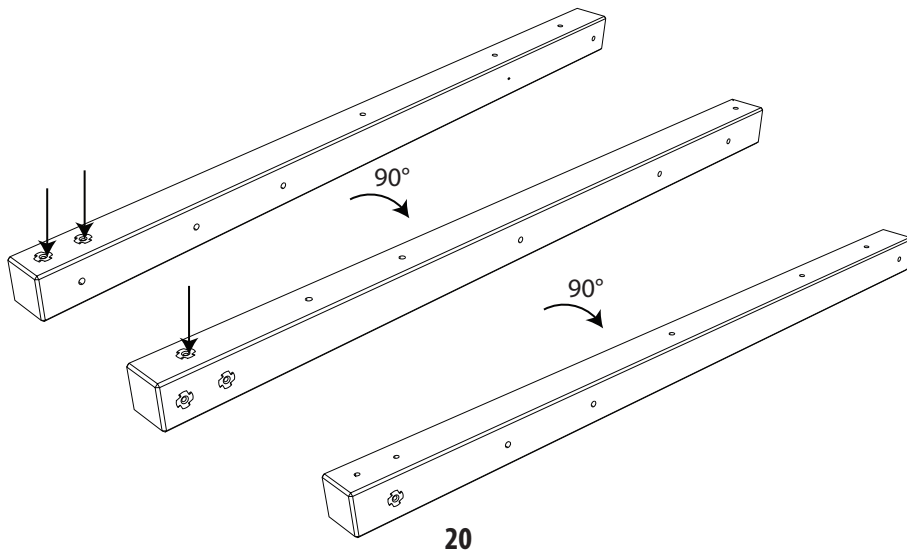


Step 49:

Attach (1) Floor Support (H1) to the Baseboards (C05) using (4) Screws (C4). Ensure that the Floor Support is aligned with the top edge of the Baseboards.

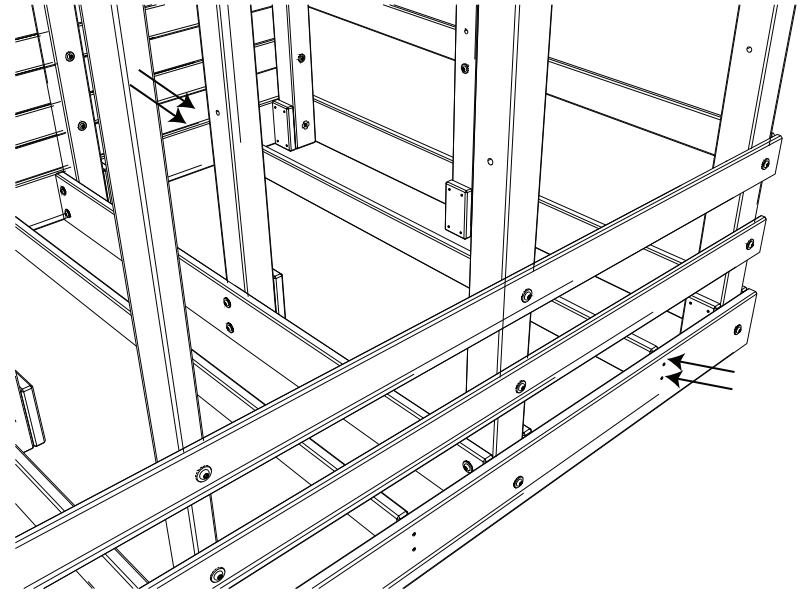


Step 50:

Attach (2) Floorboards (C17) to the Floor Supports (C10) and (H1) using (12) Screws (C2).

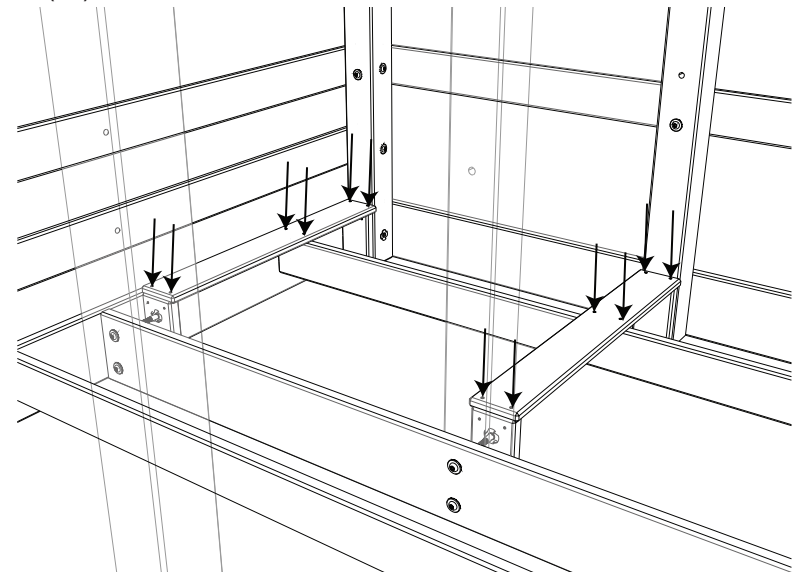


Step 47:

Attach (1) Floor Support (H1) to the Baseboards (C05) using (4) Screws (C4). Ensure that the Floor Support is aligned with the top edge of the Baseboards.

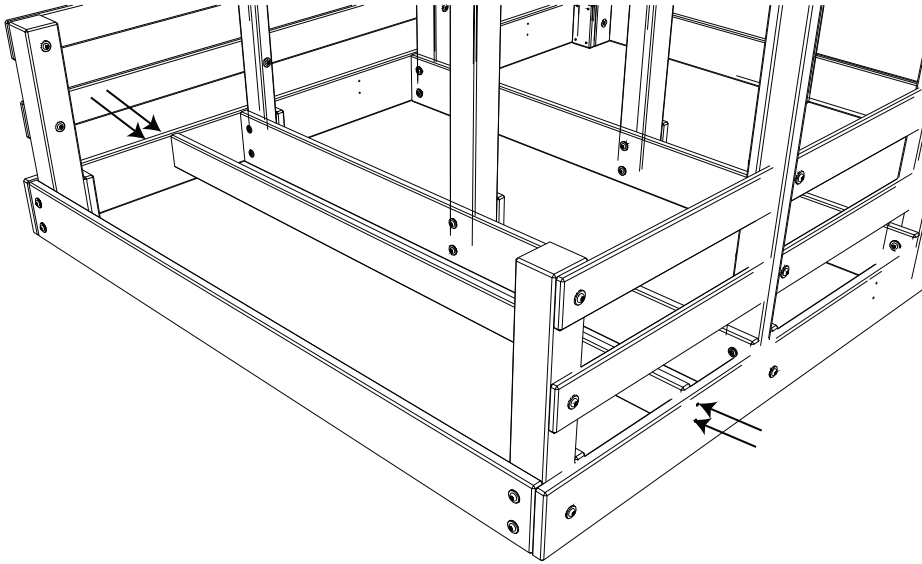


Step 48:

Attach (1) Floor Support (H1) to the Baseboards (C05) using (4) Screws (C4). Ensure that the Floor Support is aligned with the top edge of the Baseboards.

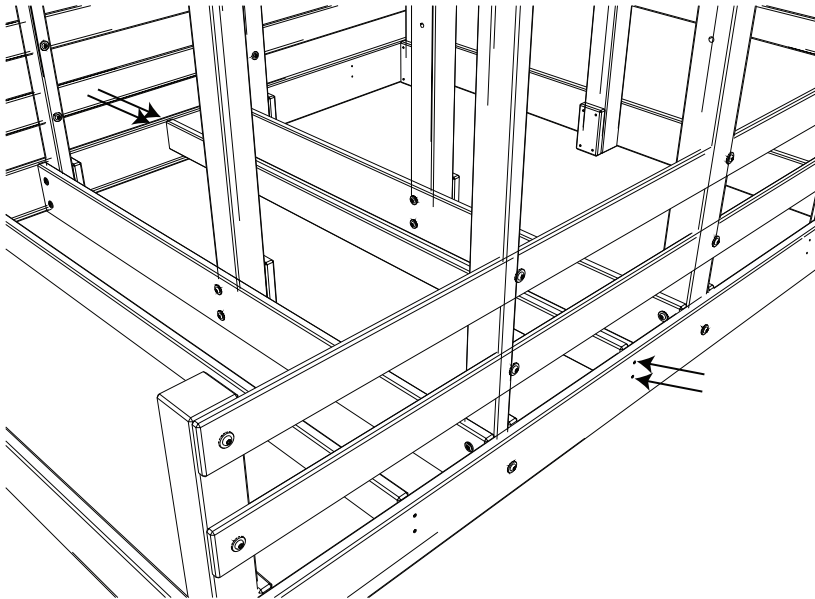


Step 17:

Insert (2) Nuts (A-2) into (1) Tower Leg (L03) as shown. Orient the Tower Leg as shown with the (4) small predrilled holes facing up.

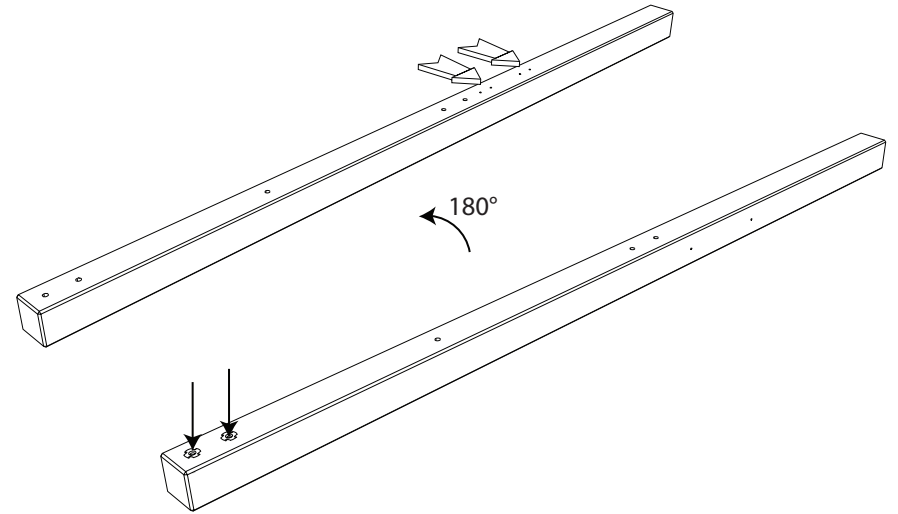


Step 18:

Insert (3) Nuts (A-2) into (1) Tower Leg (L02-1) as shown. Orient the Tower Leg as shown with the (4) small predrilled holes facing up.

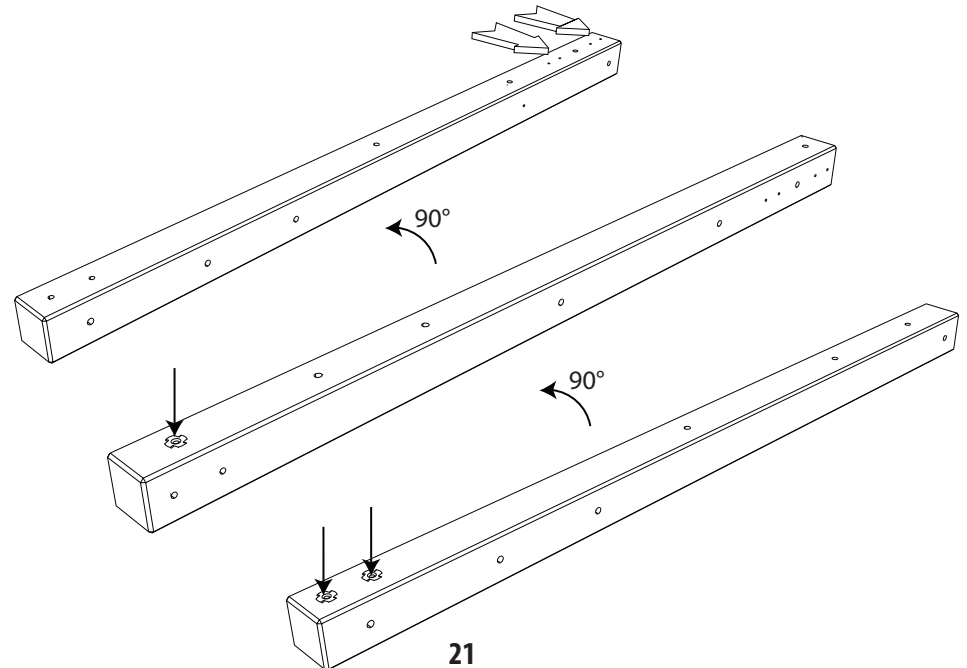


Step 19:

Lay out (1) Tower Leg (L02), (1) Tower Leg (L03), and (1) Tower Leg (L02-1) as shown. Ensure the previously installed Nuts on the Tower Legs face the correct direction and that the (4) small predrilled holes on the Tower Legs are facing up.

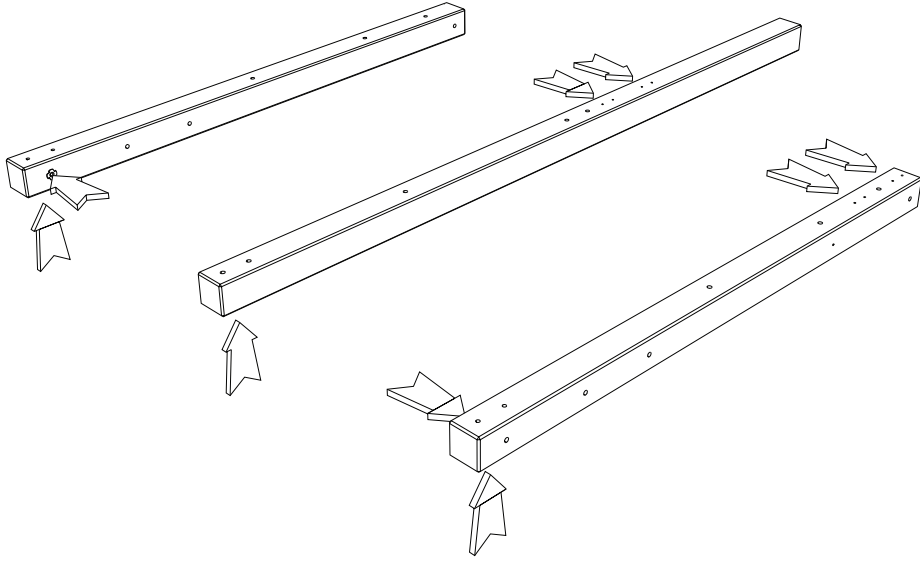


Step 20:

Attach (1) Floor Support (C20) to the Tower Legs using (6) Bolts (A-2).

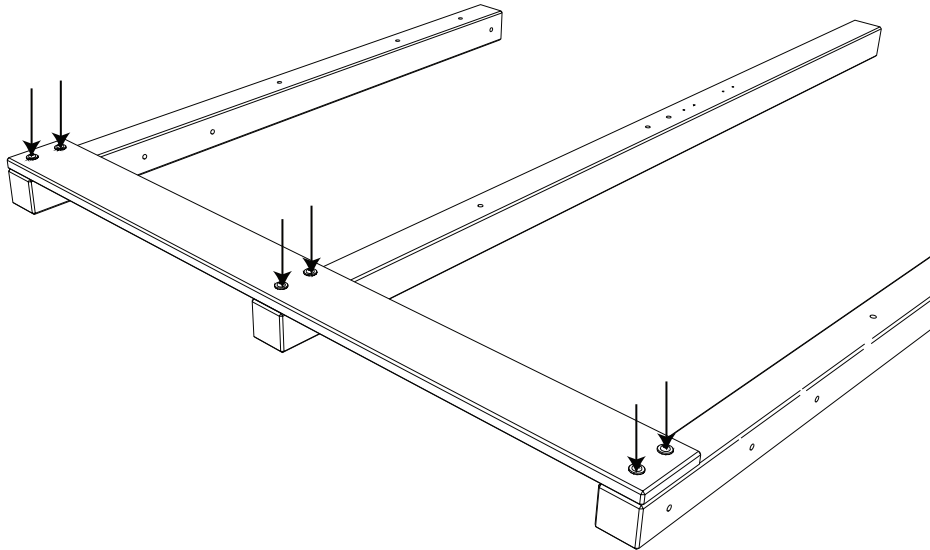


Step 45:

Attach (1) Floor Support (C10) to each Tower Leg (C02) and Tower Leg (C01) using (12) Screws (C2).

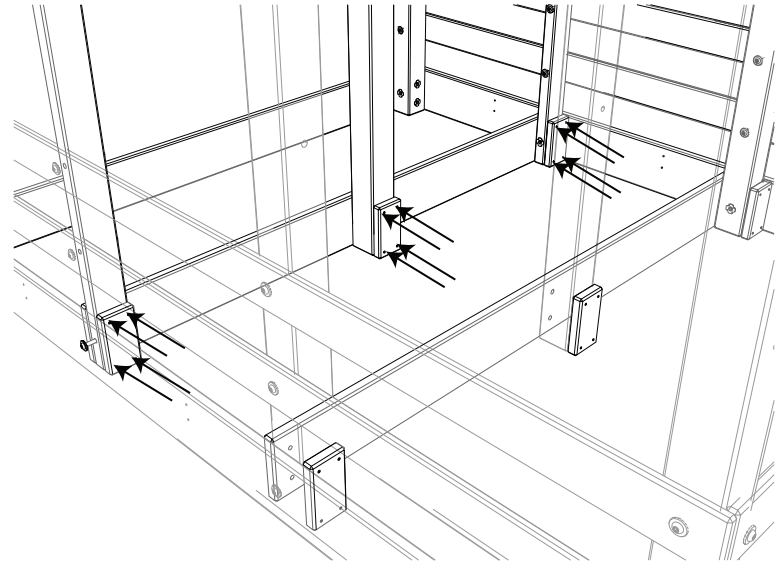


Step 46:

Attach (1) Floor Support (C10) to each Tower Leg (L01) using (8) Screws (C2).

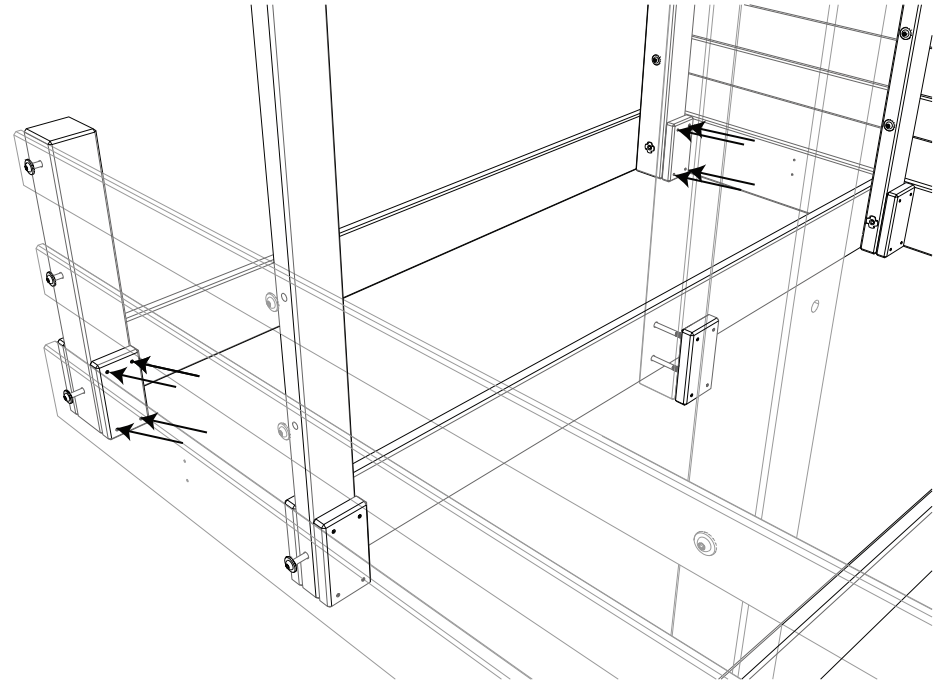


Step 43:

Attach (1) Floor Support (C10) to each Tower Leg (L05) and Tower Leg (L04) using (12) Screws (C2).

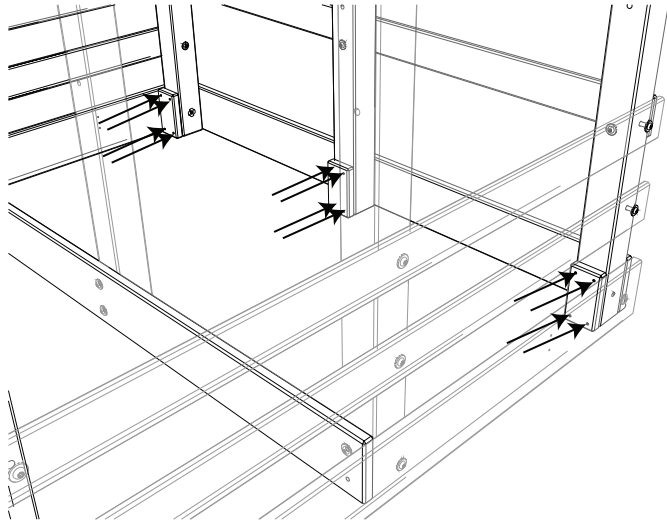

Step 44:


Attach (1) Floor Support (C10) to Tower Legs (L02-1), (L03), and (L02) using (12) Screws (C2).

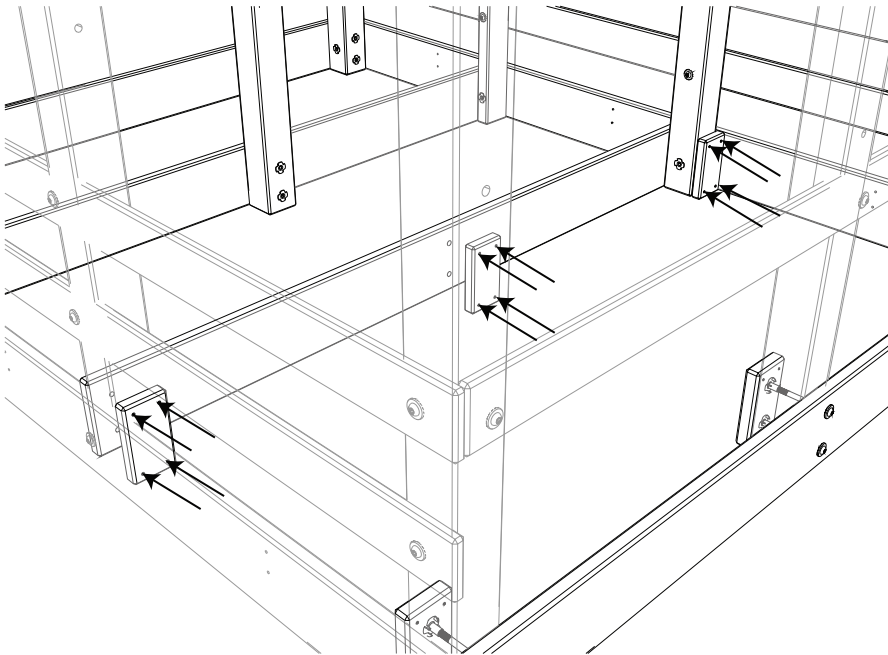

34


Step 21:

Attach (1) Rail Board (C13) to the Tower Legs using (3) Nuts (A3) and (3) Bolts (A3).

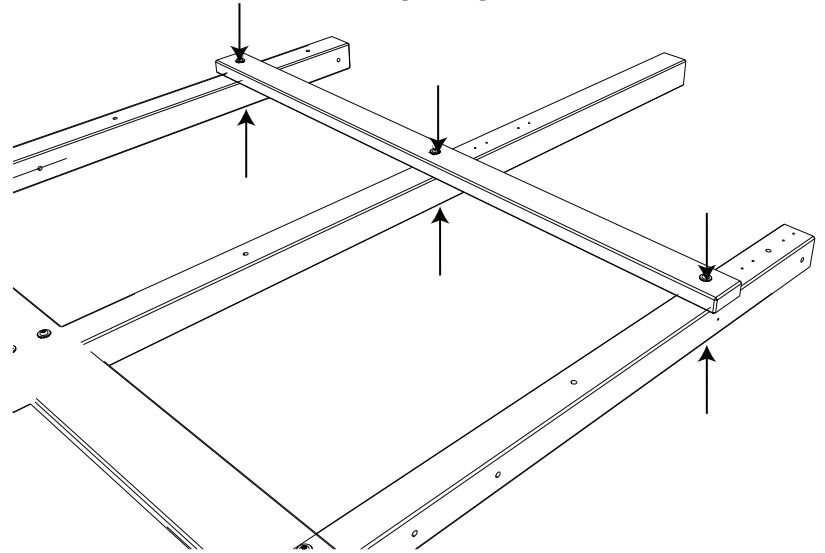

Step 22:


Stand the Tower Leg Assembly upright.

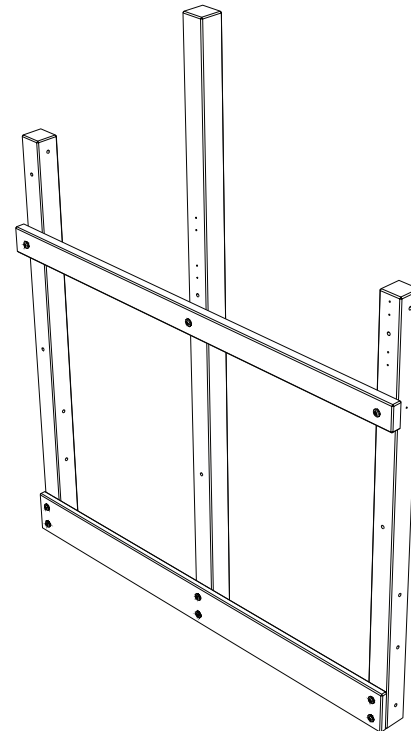

23


Step 23:

Attach the Tower Leg Assembly to the Baseboard (C05) using (1) Bolt (A-2). Ensure the Rail Board and Floor Support are oriented as shown.

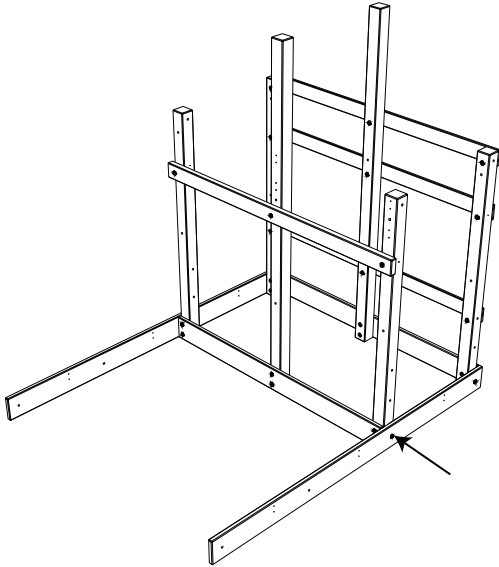


Step 24:

Attach (1) Rail Board (C08) to the Tower Legs (L02-1) and (L05) using (2) Nuts (A1) and (2) Bolts (A1).

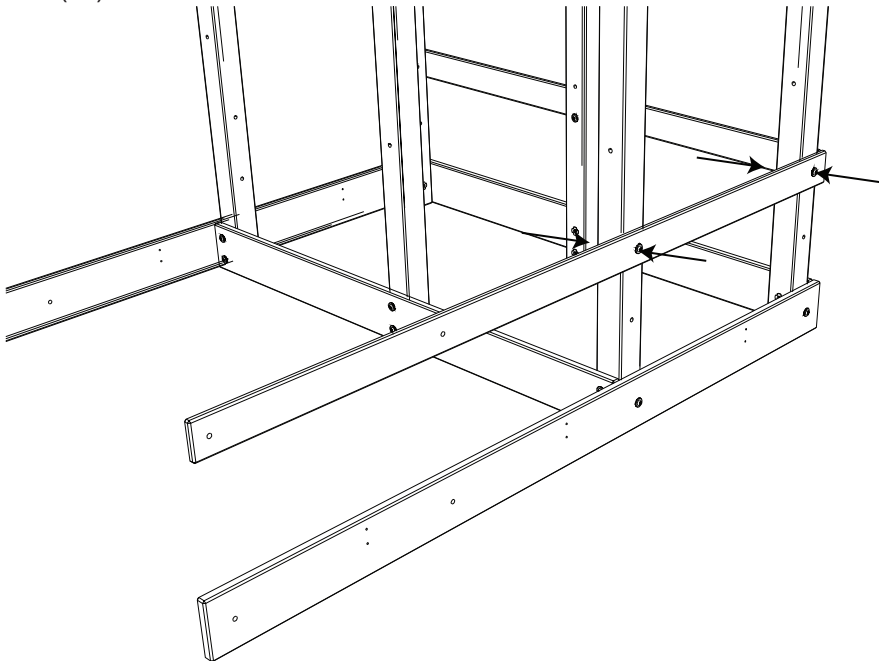


Step 41:

Attach (1) Wall Rail Board (C12) to Tower Legs (L03) and (L02-1) using (4) Screws (B1).

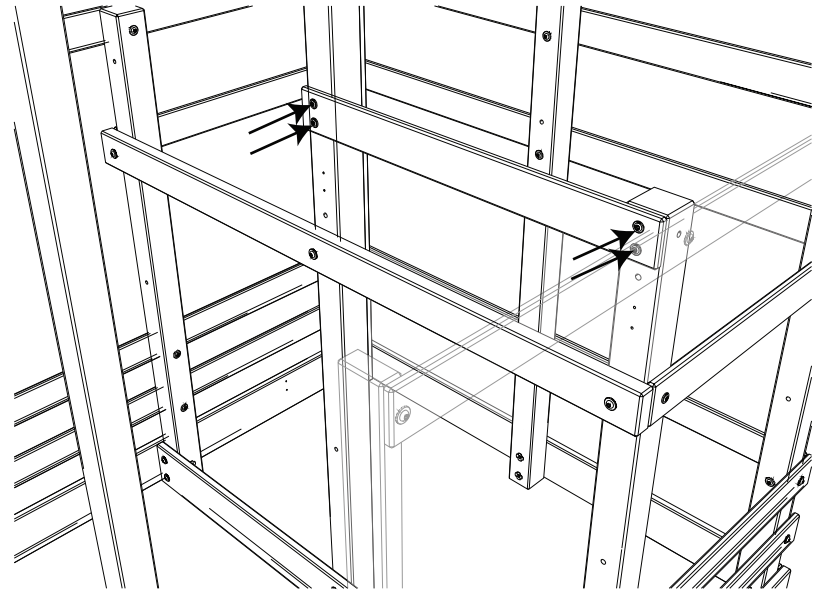


Step 42:

Attach (1) Wall Rail Board (C12) to Tower Legs (L03) and (L02-1) using (4) Screws (B1).

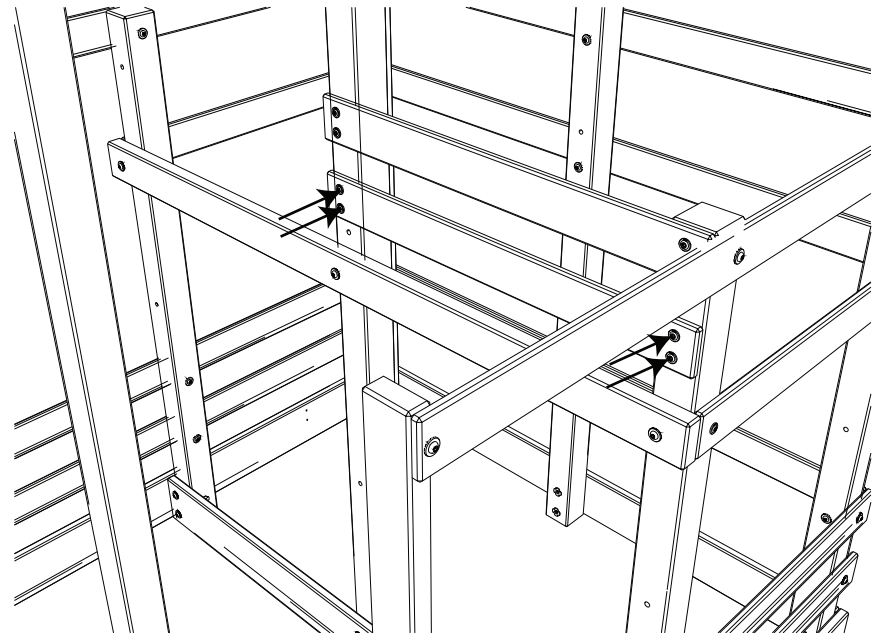


Step 39:

Attach (1) Rail Board (C07) to the Tower Legs using (3) Nuts (A1) and (3) Bolts (A1). Ensure the edges of the Rail board are flush with the edges of the Tower Legs.

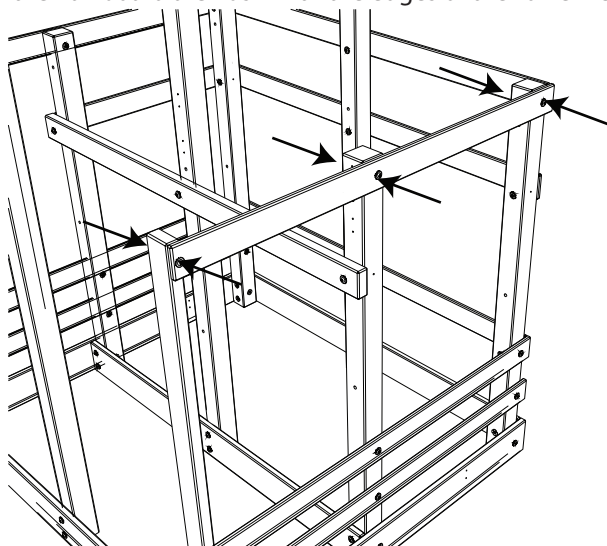

Step 40:


Attach (1) Wall Rail Board (C09) to the Tower Legs (L02-1) and (L05) using (2) Screws (B1). Ensure that the Wall Rail Board is aligned with the top edge of the Rail Board (C13).

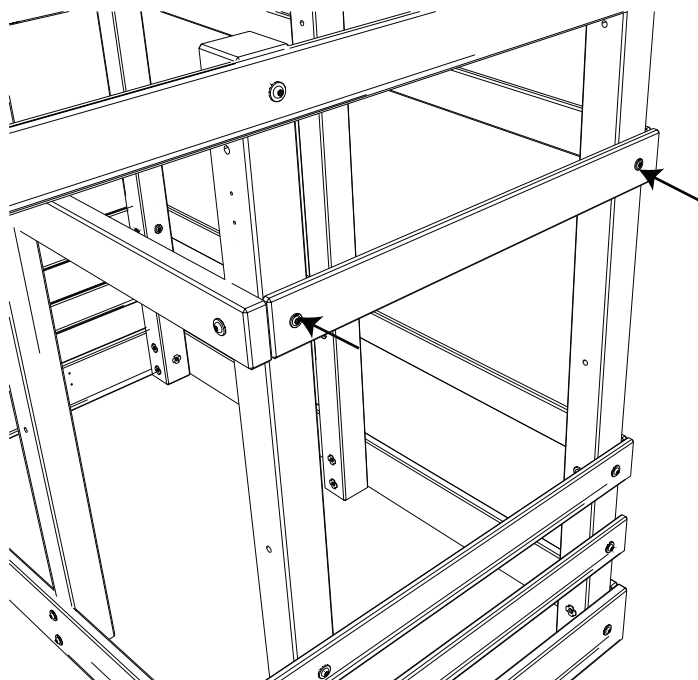

32


Step 25:

Insert (2) Nuts (A-2) into (1) Tower Leg (C01) as shown. Orient the Tower Leg as shown with the (2) large predrilled holes facing up.

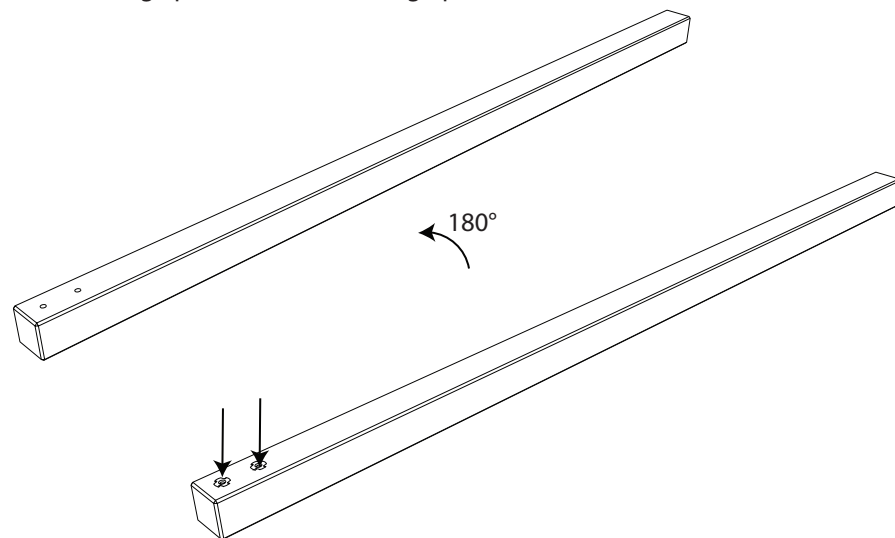

Step 26:


Insert (1) Nut (A-2) into each Tower Leg (C02). Lay out the Tower Legs as shown. Ensure the previously installed Nuts on the Tower Legs face the correct direction.

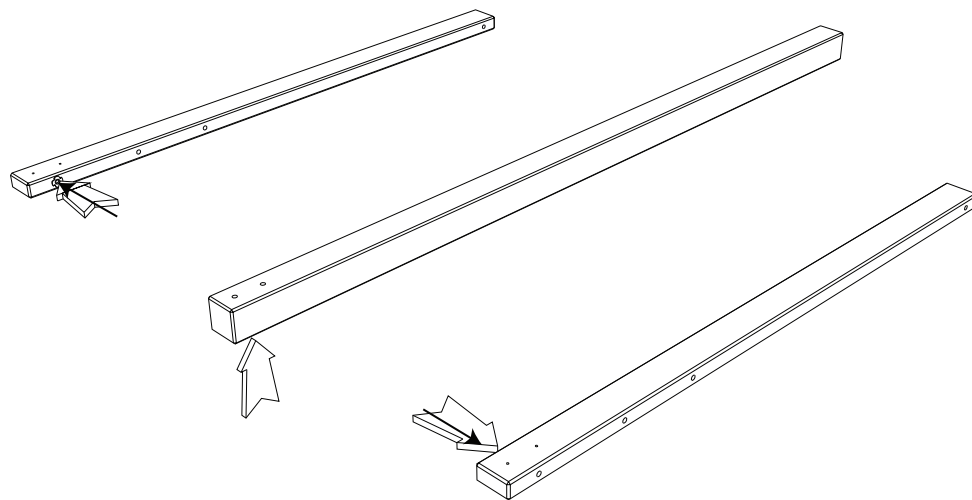

25


Step 27:

Attach (1) Floor Support (C20) to Tower Leg (C01) using (2) Bolts (A-2). Attach the Floor Support (C20) to Tower Legs (C02) using (4) Screws (B1).

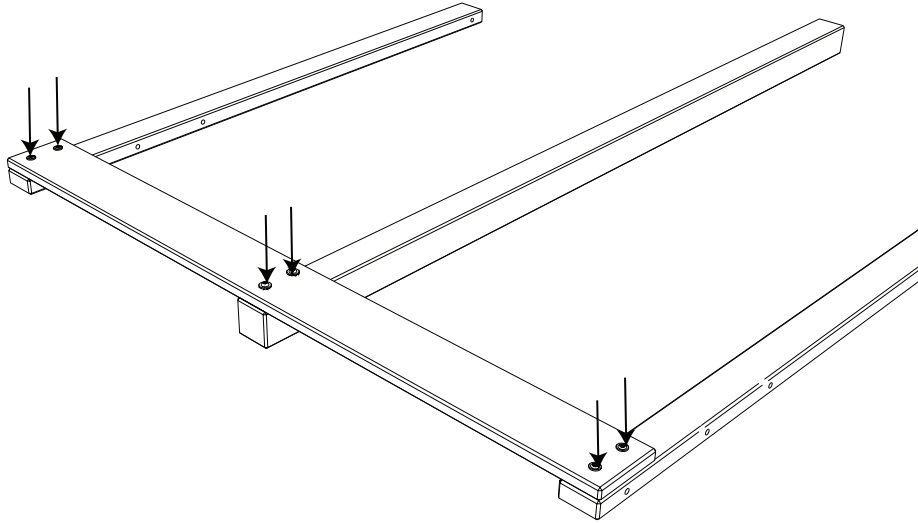

Step 28:


Stand the Tower Leg Assembly upright.

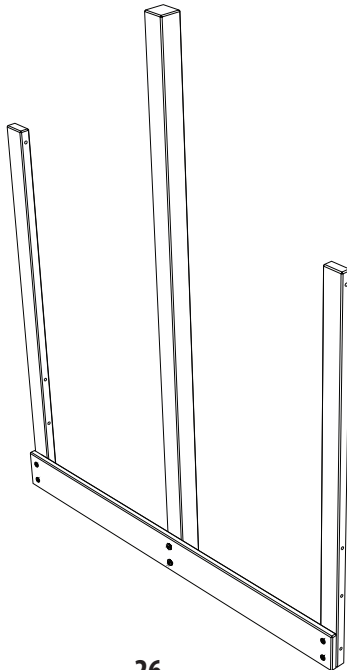

26


Step 37:

Attach (1) Rail Board (C07) to the Tower Legs using (3) Nuts (A1) and (3) Bolts (A1). Ensure the edges of the Rail board are flush with the edges of the Tower Legs.

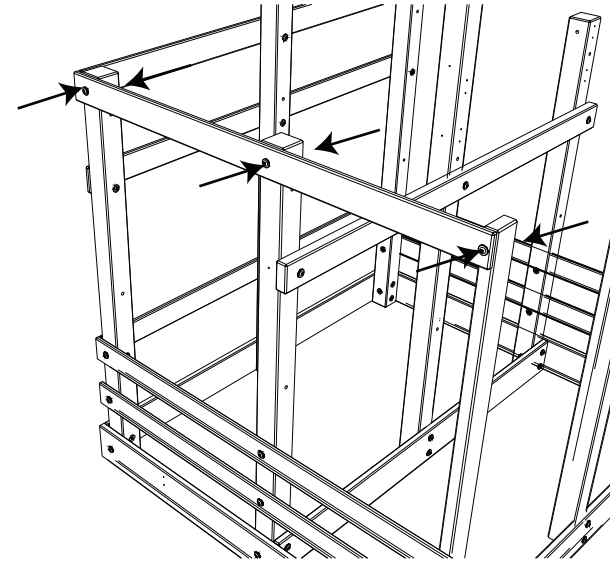

Step 38:


Attach (1) Wall Rail Board (C09) to the Tower Legs (L05) and (L02) using (2) Screws (B1). Ensure that the Wall Rail Board is aligned with the top edge of the Rail Board (C13).

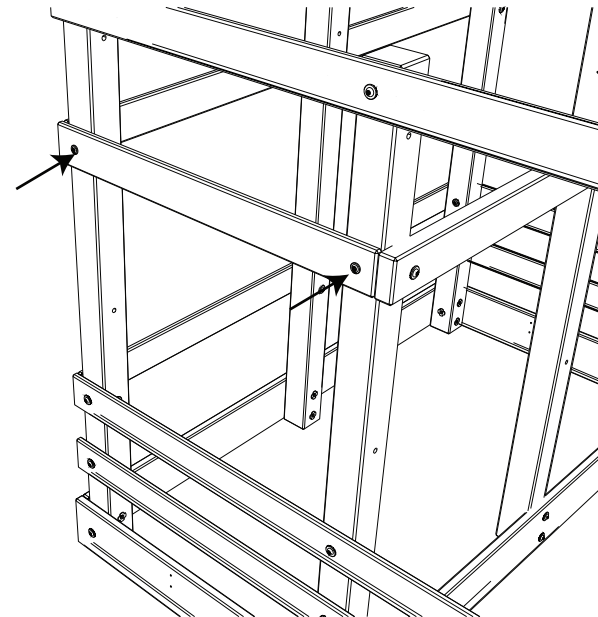

31


Step 35:

Secure the Baseboard (C05) to the Tower Legs using (3) Bolts (A-2).

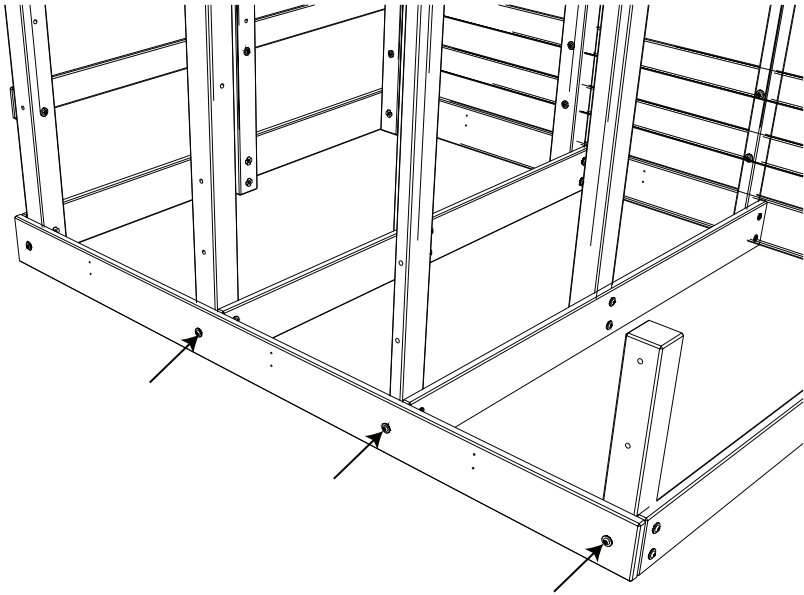

Step 36:


Attach (2) Rail Boards (C08) to the Tower Legs using (8) Nuts (A1) and (8) Bolts (A1).

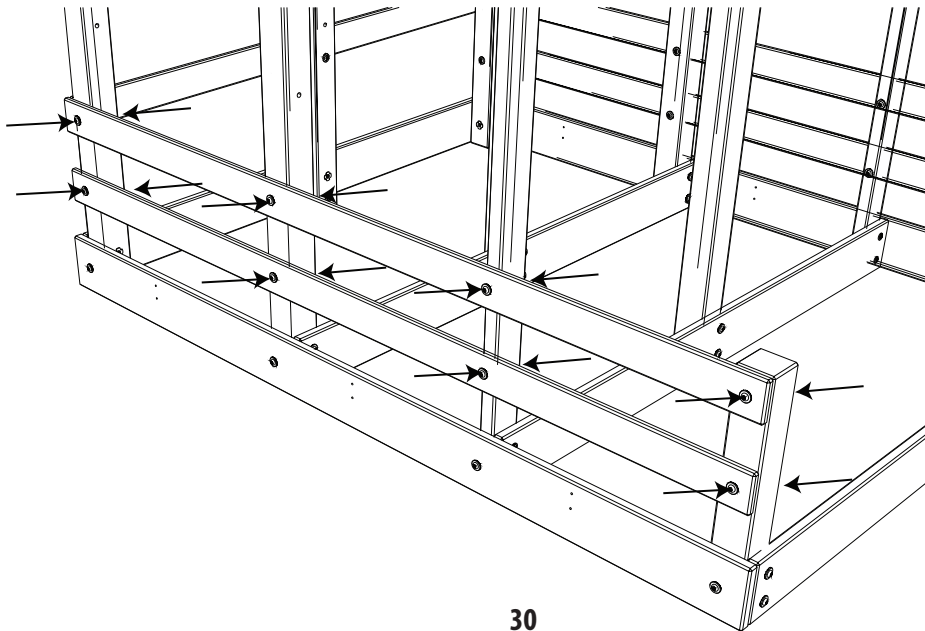

30



Step 29:

Attach the Tower Leg Assembly to the Rail Board (C08) using (1) Nut (A1) and (1) Bolt (A1). Attach the Tower Leg Assembly to the Baseboard (C05) using (1) Bolt (A-2). Ensure the Floor Support is oriented as shown.

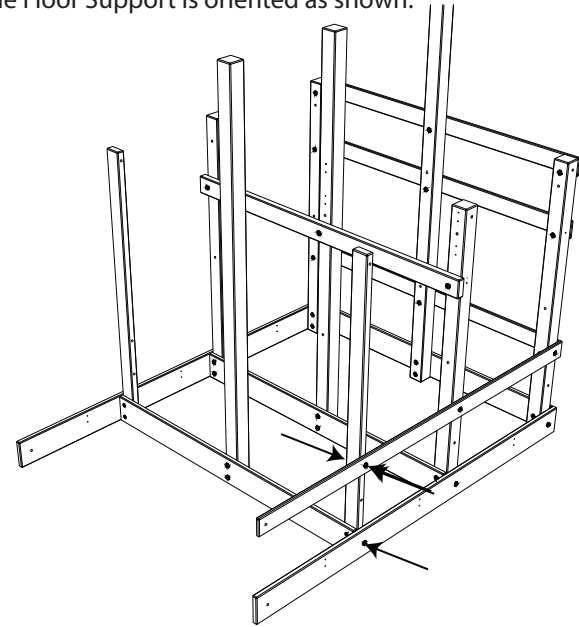

Step 30:


Insert (3) Nuts (A-2) into each Tower Leg (L01) as shown. Orient the Tower Legs as shown with the (2) large predrilled holes facing up.

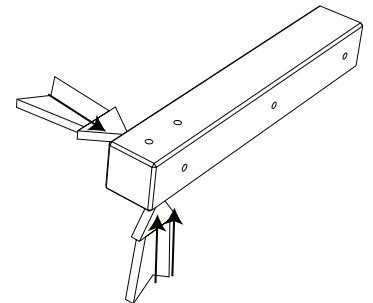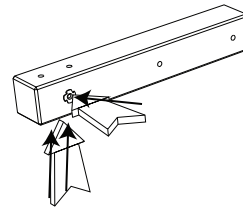

27


Step 31:

Attach (1) Baseboard (C03) to the Tower Legs (L01) using (4) Bolts (A-2).

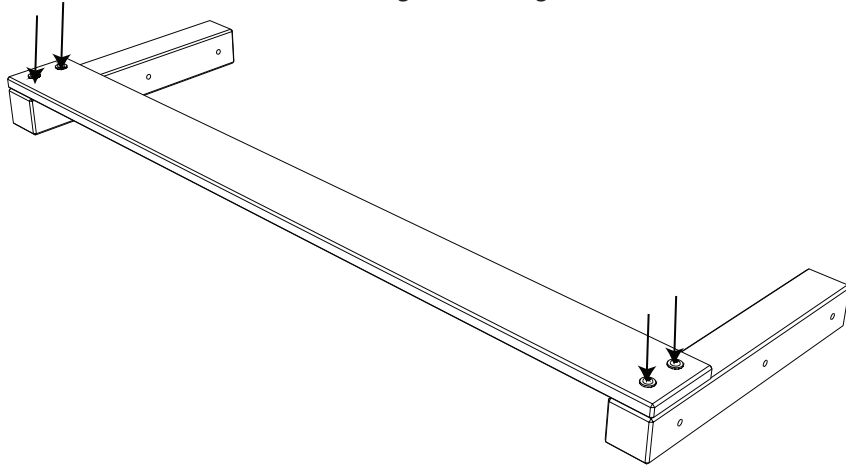


Step 32:

Stand the Tower Leg Assembly upright.

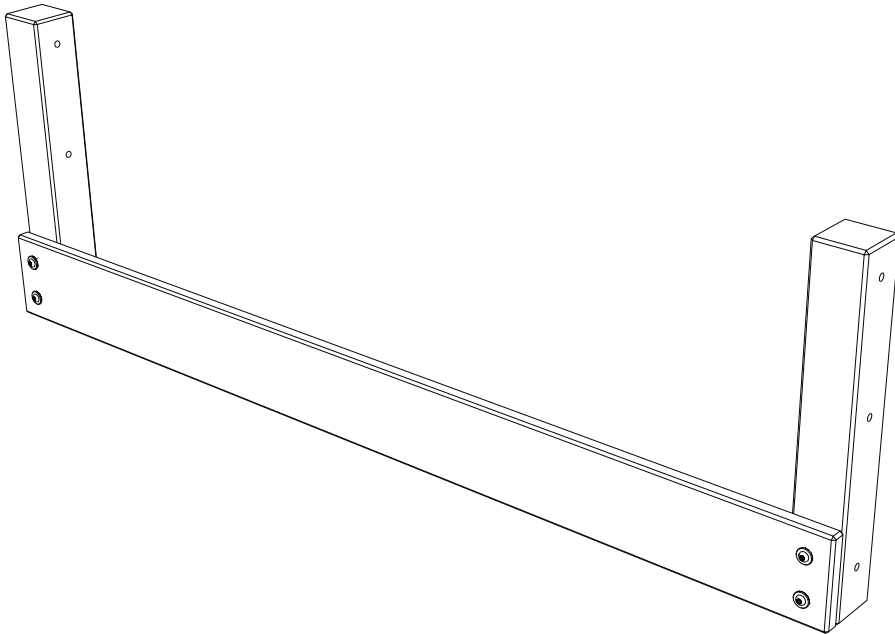

Step 33:

Attach the Tower Leg Assembly to the Rail Board (C08) using (1) Nut (A1) and (1) Bolt (A1). Attach the Tower Leg Assembly to the Baseboard (C05) using (1) Bolt (A-2).

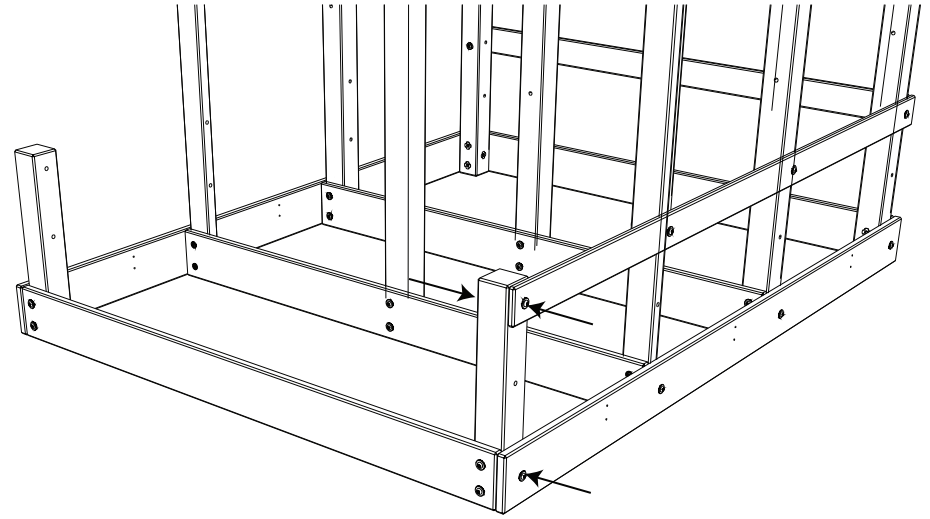

Step 34:

Attach (1) Rail Board (C08) to the Tower Legs using (4) Nuts (A1) and (4) Bolts (A1).

