



Freestanding Electric Range


PRODUCT MODEL NUMBERS

MER6875BC	MER6775BC
MER6765BA	MER6875BA
MER6775BA	MER6741BA

Electrical: This range requires a single phase three wire 120/240 or a 120/208 volt, 60 Hz, AC circuit. Wiring codes require a separate circuit be run from the main entrance panel to the range and that it be equipped with separate disconnect switch and fuses, either in the main entrance panel or in a separate switch and fuse box.

Some models are shipped direct from the factory with service cord attached. When using a power supply cord, use only a supply cord with closed loop terminals rated either 240 volts, 40 amps or 240 volts, 50 amps that is marked for use with nominal 1 $\frac{3}{8}$ " (34.94 mm) diameter connection opening and marked for ranges. A 4-conductor cord is to be used on new branch-circuit installations (1996 NEC), mobile homes, recreational vehicles and where local codes prohibit grounding through the neutral conductor. A 3-wire service may be used when permitted by local codes. When a power supply cord is used, a cord no longer than 4 feet should be used.

OVERALL DIMENSIONS

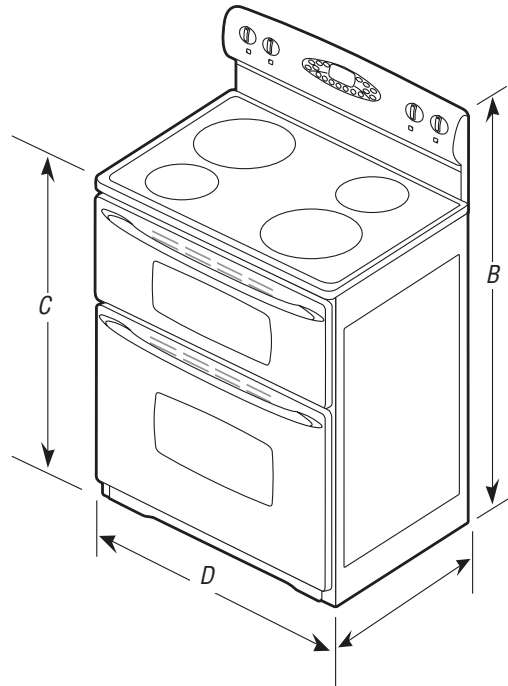


A. 26 $\frac{5}{16}$ " - 27-1/4" (66.8 - 69.2 cm) depth excluding handle

B. 46 $\frac{7}{8}$ " (119.1 cm) overall height

C. 35 $\frac{7}{8}$ " (91.1 cm) cooktop height

D. 29 $\frac{7}{8}$ " (75.9 cm) width

CABINET OPENING DIMENSIONS

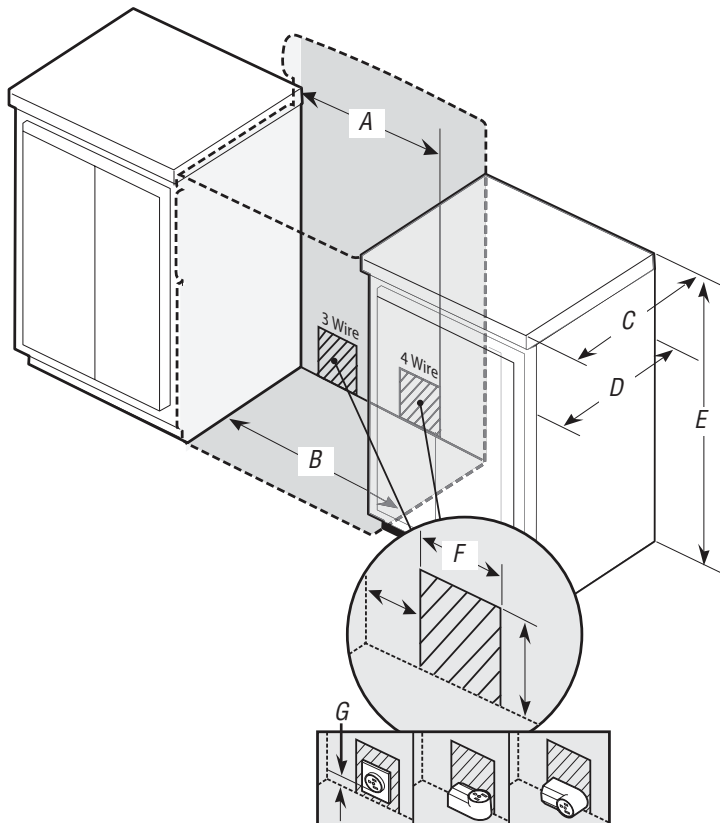

A. 20" (50.8 cm), 20 $\frac{1}{2}$ " (52.1 cm) Canada, min. opening width

B. 30" (76.2 cm), 31" (78.7 cm) Canada, min. opening width

C. 25" (63.5 cm) min. countertop depth

D. 24" (61 cm) min. cabinet depth

E. 36" (91.4 cm) countertop height

F. 6" (15.2 cm) electrical outlet placement

G. 1 $\frac{1}{2}$ " (3.8 cm) min.