
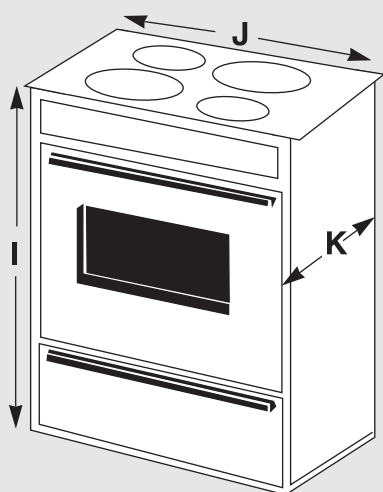


30"

ELECTRIC SLIDE-IN RANGES

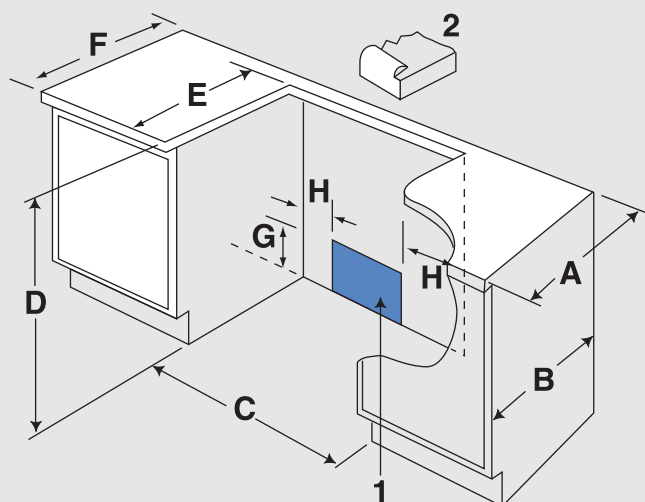

Dimensions

■	Inches	Centimeters
A	25	63.5
B	24	61.0
C	30	76.2
D	36	91.4
E ³	23 1/4	59.1
F	23 3/4 min. flat area	60.3 min. flat area
G	10	25.4
H	5 1/2	14.0
I ⁴	36 7/16	92.5
J	30 3/4	78.1
K ⁵	26 5/16	66.8

Caution: Some white European style cabinets are equipped with delicate white vinyl drawer and door fronts. The vinyl may not be designed to withstand the heat produced by the normal safe operation of a self-cleaning range. Discoloration or delamination may occur. To avoid possible damage, we recommend increasing the 30" cabinet opening to 30 1/4" minimum and using a heat shield kit CABKIT V.

Notes:

1. Electric Models: Provide for 120/208, 120-240 volt outlet per applicable cord in this area.
Slide-in Models: Area is 19"W x 10"H, located 5 1/2" from side wall.
2. On cabinet tops with formed front edge, shave raised section to clear top.
3. Filler strip is not used. Dimension E **MUST** be 23 1/4" when installing slide-in unit in an island or for NEW installation in cabinet (shown). When REPLACING an existing unit in a cabinet installation, a maximum of 23 1/2" is acceptable. For cutout greater than 23 1/2", use filler kit K70FILL.
4. From floor to top of cooking surface. May vary depending on leveling legs.
5. Not including handle. Dimension given is from wall to front of oven door.

Important: Because of continuing product improvements, Maytag reserves the right to change specifications without notice. Dimensional specifications are provided for planning purposes only. For complete details see installation instructions that accompany each product before selecting cabinetry, making cutouts or beginning installation.