



UCONNECT 4/4C/4C NAV WITH 8.4-INCH DISPLAY

TABLE OF CONTENTS

1	INTRODUCTION	5
2	RADIO MODE	9
3	MEDIA MODE	18
4	PHONE MODE	28
5	NAVIGATION MODE — IF EQUIPPED (4C NAV ONLY)	41
6	UCONNECT + SIRIUSXM GUARDIAN™ — IF EQUIPPED (4C/4C NAV ONLY)....	78
7	SAFETY AND GENERAL INFORMATION	104
8	INDEX	111

1

2

3

4

5

6

7

8

INTRODUCTION

IDENTIFYING YOUR RADIO	5
UCONNECT 4/4C/4C NAV WITH 8.4-INCH	
DISPLAY	6
DRAG & DROP MENU BAR	8
UCONNECT 4/4C/4C NAV SETTINGS	8

RADIO MODE

RADIO CONTROLS	9
SETTING PRESETS	10
SIRIUSXM® SATELLITE RADIO MODE — IF	
EQUIPPED	11
Replay	13
Favorites	13
Traffic & Weather — Available On The	
4C NAV (If Equipped)	14
Browse In SXM	14
AUDIO	16

MEDIA MODE

DISC MODE — IF EQUIPPED	18
USB MODE	19
AUX MODE	20
BLUETOOTH® MODE	20
ANDROID AUTO™ & APPLE CARPLAY® —	
IF EQUIPPED	21
Android Auto™	21
Apple CarPlay® Integration	24
Android Auto™ And Apple CarPlay®	
Tips And Tricks	26

PHONE MODE

OVERVIEW	28
----------------	----

PHONE OPERATION.....29

Operation	29
Natural Speech	30
Help Command	30
Cancel Command	30
Pair (Link) Uconnect Phone To A	
Mobile Phone	30
Pair Additional Mobile Phones.....	32
Pair A Bluetooth® Streaming Audio	
Device	32
Connecting To A Particular Mobile	
Phone Or Audio Device After Pairing	33
Disconnecting A Phone Or Audio Device....	33
Deleting A Phone Or Audio Device	33
Making A Phone Or Audio Device	
A Favorite	34
Phonebook Download (Automatic	
Phonebook Transfer From	
Mobile Phone) — If Equipped	34
Managing Your Favorites	35
To Remove A Favorite	35

PHONE CALL FEATURES	35	ADVANCED PHONE CONNECTIVITY	38	Where To? — City Center	60
Ways To Initiate A Phone Call	35	Transfer Call To And From Mobile		Where To? — Closest Cities	60
Dial By Saying A Number	35	Phone	38	Where To? — Phone	61
Call By Saying A Phonebook Name	36	Connect Or Disconnect Link Between		Where To? — GEO-Coordinates	62
Call Controls	36	The Uconnect Phone And Mobile Phone....	38	Where To? — Trails	63
Touch-Tone Number Entry.....	36	THINGS YOU SHOULD KNOW ABOUT YOUR		Before Route Guidance	63
Recent Calls	36	UCONNECT PHONE	39	VIEW MAP	65
Answer Or Ignore An Incoming Call —		Voice Command.....	39	View Map — Main Menu	65
No Call Currently In Progress	37	Far End Audio Performance.....	39	View Map — Settings	66
Answer Or Ignore An Incoming Call —		Bluetooth® Communication Link	40	HOME	71
Call Currently In Progress.....	37	Power-Up.....	40	Navigating Home	71
Do Not Disturb	37	General Information	40	WORK	71
Place/Retrieve A Call From Hold	37			Navigating To Work	71
Making A Second Call While Current		NAVIGATION MODE — IF EQUIPPED		INFORMATION	72
Call Is In Progress	37	(4C NAV ONLY)		Information — Main Menu.....	72
Toggling Between Calls	38	OPERATING NAVIGATION	41	Information — SiriusXM® Traffic Plus	72
Join Calls	38	WHERE TO?	41	Information — Weather	72
Call Termination.....	38	Where To? — Main Menu	41	Information — Where Am I?	73
Redial.....	38	Where To? — Search All.....	43	Information — Country Info	73
Call Continuation	38	Where To? — Address	44	EMERGENCY	74
		Where To? — Recent	45	Emergency — Main Menu.....	74
		Where To? — Favorite Destinations	47	Emergency — Hospital.....	74
		Where To? — Point of Interest	48	Emergency — Police.....	75
		Where To? — Trips	56	Emergency — Fire Department	76
		Where To? — Intersection	57	MAP UPDATES	76
		Where To? — Point on Map	58	SIRIUSXM® TRAFFIC PLUS	77
		Where To? — Home	58	SIRIUSXM® TRAVEL LINK	77
		Where To? — Work.....	59		

UCONNECT + SIRIUSXM GUARDIAN™ — IF EQUIPPED (4C/4C NAV ONLY)

INTRODUCTION TO SIRIUSXM GUARDIAN™78

What Is SiriusXM Guardian™? 78

Included Trial Period For New Vehicles..... 79

Features And Packages..... 79

GETTING STARTED WITH SIRIUSXM

GUARDIAN™80

Activation 80

Download The Uconnect App..... 80

Using Your Owner's Site 80

USING SIRIUSXM GUARDIAN™81

SOS Call 81

Roadside Assistance Call 85

Send & Go 86

Vehicle Finder 87

4G Wi-Fi Hotspot — If Equipped 88

Stolen Vehicle Assistance 89

Remote Door Lock/Unlock 91

Remote Vehicle Start 93

Remote Horn & Lights 95

Monthly Vehicle Health Report 97

Vehicle Health Alert 97

In-Vehicle Notifications — If Equipped 98

Amazon Alexa Skill — If Equipped 98

Family Alerts — If Equipped 99

SmartWatch Integration — If Equipped 99

MANAGE MY SIRIUSXM GUARDIAN™

ACCOUNT.....99

How To Manage My SiriusXM

Guardian™ Account 99

SIRIUSXM GUARDIAN™ AND FAQs100

SiriusXM Guardian™ Business Hours:100

Data Collection & Privacy..... 103

Safety Guidelines..... 103

SAFETY AND GENERAL INFORMATION

SAFETY GUIDELINES 104

Safe Usage Of The Uconnect System..... 104

Care And Maintenance..... 105

CYBERSECURITY 105

SECURITY FEATURES 106

Roadside Assistance Call —

If Equipped 106

SOS Call — If Equipped 106

REMOTE SERVICE FEATURES 110

SOFTWARE LICENSING INFORMATION 110

INTRODUCTION

IDENTIFYING YOUR RADIO

The Uconnect 4, 4C and 4C NAV all share a variety of features. The main differences are listed below:

- Uconnect 4 does not support connectivity (Sirius XM Guardian) or navigation (NAV) features.
- Uconnect 4C supports connectivity but does not support NAV.
- Uconnect 4C NAV supports both connectivity and NAV.

NOTE:

Vehicles equipped with SiriusXM Guardian™ will contain an Assist and an SOS button. These buttons will be located on either the rearview mirror or overhead console, depending on the vehicle. For more information on registering, activating, and using SiriusXM Guardian™, refer to “Uconnect + SiriusXM Guardian™ (4C/4C NAV Only)” in this manual.



M1001000819US

- 1 – SOS Button
2 – ASSIST Button



M1001000818US

- 1 – ASSIST Button
2 – SOS Button

Uconnect 4 With 8.4-inch Display




Uconnect 4C/4C NAV



The Uconnect Voice Command And Uconnect Phone Buttons On Your Steering Wheel

The buttons let you use your voice to give commands, make phone calls hands-free, enter navigation (if equipped) destinations, and control your radio and media devices.

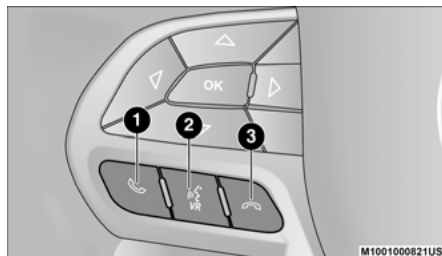

- 1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
- 2 — Push To Begin Radio, Media, Apps, Climate, And Navigation (If Equipped) Functions.
- 3 — Push To End Call



NOTE:
Interior trims may vary.

Uconnect 4/4C/4C NAV WITH 8.4-INCH DISPLAY

NOTE:

Uconnect screen images are for illustration purposes only and may not reflect exact software for your vehicle.



1. Radio/Media (if equipped)

Press the Radio button or Media button on the touchscreen to enter Radio Mode or Radio/Media Mode (if equipped). The different tuner modes, AM, FM, and SXM, can be selected by pressing the corresponding buttons on the touchscreen. Press the Media button on the touchscreen to access media sources such as: Disc (if equipped), USB Device, AUX, and Bluetooth®, as long as the requested media is present.

2. Climate

Refer to “Climate Controls” in “Getting To Know Your Vehicle” in the vehicle’s Owner’s Manual for further details.

3. Apps

Press the Apps  button on the touchscreen to access Smartphone and Connected vehicle options.

4. Controls

Press the Controls button on the touchscreen to adjust the auto-dimming mirror, cameras, heated & vented seats, heated steering wheel & ventilated seat (if equipped).

5. Nav - If Equipped


Press the Nav button on the touchscreen to access the Navigation feature. Refer to “Navigation Mode — If Equipped” in this manual for further details.

6. Phone

Press the Phone button on the touchscreen to access the Uconnect Phone feature.

7. Settings

Press the Settings button on the touchscreen to access the vehicle’s setting list.

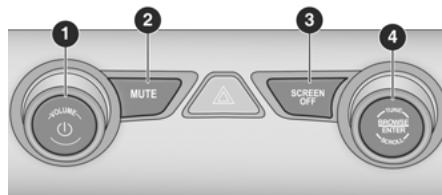

M1001000820US

1. Volume On/Off Button

Rotate the rotary knob to adjust the Volume. Push the Volume On/Off button to turn on and off the system.

2. Mute Button

Push the Mute button to mute the vehicle’s audio. Push it again to unmute it.

3. Screen Off

Push the Screen Off button to turn the screen off.

4. Enter/Browse & Tune/Scroll

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

NOTE:

Interior trims may vary.

DRAG & DROP MENU BAR

The Uconnect features and services in the main menu bar are easily changed for your convenience. Simply follow these steps:




1. Press the Apps  button to open the App screen.
2. Press and hold, then drag the selected App to replace an existing shortcut in the main menu bar.

The new app shortcut, that was dragged down onto the main menu bar, will now be an active App/shortcut.

NOTE:

This feature is only available if the vehicle is in PARK.

UCONNECT 4/4C/4C NAV SETTINGS

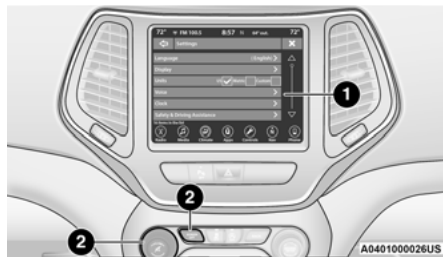

- 1 – Uconnect Buttons On The Touchscreen
2 – Uconnect Buttons On The Faceplate

Press the Apps  button on the touchscreen, then press the Settings button on the touchscreen to display the menu setting screen. In this mode, the Uconnect system allows you to access all of your programmable features.

NOTE:

Depending on the vehicle's options, available feature settings may vary.

When making a selection, press the button on the touchscreen to enter the desired mode. Once in the desired mode, press and release the preferred setting until a check-mark appears next to the setting, showing that setting has been selected. Once the setting is complete, either press the Back Arrow button on the touchscreen to return to the previous menu, or press the X button on the touchscreen to close out of the settings screen. Pressing the Up or Down Arrow button on the right side of the screen will allow you to toggle up or down through the available settings.

Refer to "Uconnect Settings" in "Multimedia" in the Owner's Manual for further information.

RADIO MODE

RADIO CONTROLS

The radio is equipped with the following modes:

- AM
- FM
- SiriusXM® Satellite Radio (if equipped)

Press the RADIO button or MEDIA button on the touchscreen, bottom left corner, to enter the Radio Mode. The different tuner modes, AM, FM, and SXM, can then be selected by pressing the corresponding buttons in the Radio mode.

VOLUME And ON/OFF Control

Push the VOLUME and ON/OFF control knob to turn on and off the Uconnect system.

The electronic volume control turns continuously (360 degrees) in either direction, without stopping. Turning the VOLUME and ON/OFF control knob clockwise increases the volume, and counterclockwise decreases it.

MUTE Button

Push the MUTE button to mute the system. Push the MUTE button again to unmute the system.

TUNE/SCROLL Control

When the audio system is turned on, the sound will be set at the same volume level as last played.

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

Screen Close

The X button on the touchscreen at the top right provides a means to close the Direct Tune Screen. The Direct Tune Screen also auto closes if no activity occurs within 20 seconds.

HD Radio™ — If Equipped

HD Radio™ technology (available only in the U.S. and Canadian markets) works similar to conventional radio except it allows broadcasters to transmit a high-quality digital signal. With an HD Radio™ receiver, the listener is provided with a clear sound that enhances the listening experience. HD Radio™ can also transmit data such as song title or artist.

NOTE:

HD Radio™ is not available for every station.

Seek And Direct Tune Functions

The Seek Up and Down functions are activated by pressing the double arrow buttons on the touchscreen to the right and left of the radio station display, or by pressing the left Steering Wheel Audio Control button up or down.

Seek Up ►►

Press and release the Seek Up ►► button on the touchscreen to tune the radio to the next listenable station or channel. During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Up

Press and hold the Seek Up ►► button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

Seek Down ◀◀

Press and release the Seek Down ◀◀ button on the touchscreen to tune the radio to the next listenable station or channel. During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Down

Press and hold the Seek Down ◀◀ button on the touchscreen to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

Direct Tune

Press the Tune button on the touchscreen located at the bottom of the radio screen. The Direct Tune button on the touchscreen is available in AM, FM and SXM radio modes can be used to direct tune the radio to a desired station or channel.

Press the available number button on the touchscreen to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

Undo

You can backspace an entry by pressing the Back <X> button on the touchscreen.

GO

Once the last digit of a station has been entered, the DIRECT TUNE screen will close, and the system will automatically tune to that station when “GO” is pressed.

The selected Station or Channel number is displayed in the Direct Tune text box.

SETTING PRESETS

The Presets are available for all Radio Modes, and are activated by pressing any of the six Preset buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds.

The Radio stores up to 12 presets in each of the Radio modes. A set of six presets are visible at the top of the radio screen.

You can switch between the two radio presets by pressing the Arrow button located in the upper right of the radio touchscreen.

Browse In AM/FM

When in either AM or FM, the Browse Screen provides a means to edit the Presets List and is entered by pushing the ENTER/BROWSE button.

Scrolling Preset List

Once in the Browse Presets screen, you can scroll the preset list by rotation of the TUNE/SCROLL knob, or by pressing the Up and Down arrow keys, located on the right of the screen.

Preset Selection From List

A Preset can be selected by pressing any of the listed Presets, or by pushing the ENTER/BROWSE button on the TUNE/SCROLL knob to select the currently highlighted Preset.

When selected, the radio tunes to the station stored in the Preset.

Deleting Presets

A Preset can be deleted in the Presets Browse screen by pressing the Trash Can icon for the corresponding Preset.

Return To Main Radio Screen

You can return to the Main Radio Screen, by pressing the X button, or the Back Arrow button, on the touchscreen when in the Browse Presets screen.

Saving Presets To A Driver Memory Profile — If Equipped

Radio presets can be saved to a Driver Memory Profile. After setting the desired radio presets:

1. Push the “S” button on the Driver Memory Switch.
2. Within five seconds of pushing “S”, push the “1” or “2” buttons. The radio presets will be saved to Driver Memory Profile 1 or Driver Memory Profile 2.
3. To recall a Driver Memory Profile, push either the “1” or “2” buttons; the radio will display the preset radio stations.

NOTE:

- If the radio presets are not saved to a Driver Memory Profile and the vehicle is turned OFF, the radio presets may be lost when the vehicle is started.
- If another Driver Memory Profile is selected before saving the radio presets, the presets may be lost.
- For more information on the Driver Memory Profile, refer to Owner’s Manual.

SIRIUSXM® SATELLITE RADIO MODE — IF EQUIPPED

SiriusXM® Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM® is a subscription based service.

SiriusXM® All Access Package

All satellite radio equipped vehicles come with a trial to the SiriusXM® All Access package, providing over 160 channels of the best programming for all the places life takes you.

- In your vehicle — You'll get every channel available on your radio, including all the premium programming like Howard Stern, every NFL® game, every MLB® game, every NASCAR® race, Oprah Radio, and more.
- On the go — With a SiriusXM® Internet Radio subscription included with the All Access trial, you'll get SiriusXM® on your computer, smartphone, or tablet. Including:
 - A huge On Demand catalog
 - Xtra Channels featuring SiriusXM® Latino – a collection of Spanish-language channels
 - MySXM – allowing you to personalize your favorite music channels

Go to siriusxm.com/getallaccess for more information.

SiriusXM® services require subscriptions, sold separately after the trial included with the new vehicle purchase. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM® at 866-635-2349 to cancel. See SiriusXM® Customer Agreement for complete terms at www.siriusxm.com (US Residents) or www.siriusxm.ca (Canadian Residents). All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our SiriusXM® satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK. © 2021 SiriusXM® Radio Inc. SiriusXM® and all related marks and logos are trademarks of SiriusXM® Radio Inc.

This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

No Subscription

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM® Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Pre-View channel only.

Acquiring SiriusXM Subscription

To activate the SiriusXM® Satellite Radio subscription, US residents visit www.UconnectPhone.com or call:

1-800-643-2112

Canadian residents visit www.UconnectPhone.com or call:

1-800-465-2001 (English) 1-800-387-9983 (French)

NOTE:

You will need to provide the SiriusXM® ID (RID) located at the bottom of the Channel 0 screen.

The Satellite Mode is activated by a press of the SXM button on the touchscreen.

When in Satellite mode:

- The SXM button on the touchscreen is highlighted.
- The SiriusXM® Presets are displayed at the top of the screen.
- The SiriusXM® Channel Number is displayed in the center.
- The Program Information is displayed at the bottom of the Channel Number.
- The SiriusXM® function buttons are displayed below the Program Information.

Tuning is done by operating the Tune Knob or by Direct Tune, similar to other Radio Bands, see Presets, browse, Tune Knob, and Direct Tune.

In addition to the tuning Operation functions common to all Radio modes, the replay, Traffic/Weather Jump, and fav button functions are available in SiriusXM® Mode.

REPLAY

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio. Once the channel is switched, content in replay memory is lost.

Press the Replay button on the touchscreen. The play/pause, rewind/forward and live buttons will display at the top of the screen, along with the replay time.

You can exit by pressing the Replay button on the touchscreen, any time during the Replay mode.

Play/Pause

Press the Pause/Play button on the touchscreen to pause the playing of live or rewind content at any time. Play can be resumed again by pressing of the Pause/Play button on the touchscreen.

Rewind

Press the RW button on the touchscreen to rewind the content in steps of five seconds. Pressing the RW button on the touchscreen for more than two seconds rewinds the content. The Radio begins playing the content at the point at which the press is released.

Forward

Each press of the FW button on the touchscreen forwards the content in steps of five seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous press of the FW button on the touchscreen also forwards the content. The Radio begins playing the content at the point at which the press is release.

Live

Press the Live button on the touchscreen to resume playing of Live content.

FAVORITES

Press the Fav. button on the touchscreen to activate the favorites menu, which will time out within 20 seconds in absence of user interaction.

You can exit the Favorites Menu by a press of the X in the top right corner.

The favorites feature enables you to set a favorite artist, or song that is currently playing. The Radio then uses this information to alert you when either the favorite song, or favorite artist are being played at any time by any of the SiriusXM® Channels.

The maximum number of favorites that can be stored in the Radio is 50.

Fav. Artist: While the song is playing to set a Favorite Artist, press the Fav. button on the touchscreen and then the Fav. Artist button on the touchscreen.

Fav. Song: While the song is playing to set a Favorite Song, press the Fav. button on the touchscreen and then the Fav Song button on the touchscreen.

TRAFFIC & WEATHER — AVAILABLE ON THE 4C NAV (IF EQUIPPED)

Press the Traffic & Weather button on the touchscreen to tune to a SiriusXM® Traffic and Weather channel. To set a Traffic & Weather alert for any one of the cities in the Jump Browse list, see Browse in SXM.

When the Traffic & Weather button on the touchscreen is pressed, the Traffic & Weather channel is tuned.

If the Traffic & Weather alert City is not set, you are presented with a pop up to allow you to select the favorite city using the Browse Screen.

BROWSE IN SXM

Press the Browse button on the touchscreen to edit Presets, Favorites, Game Zone, and Jump settings, along with providing the SiriusXM® Channel List.

This Screen contains many sub menus. You can exit a sub menu to return to a parent menu by pressing the Back arrow.

All

Press the All button at the left of the Browse Screen.

Channel List

Press the Channel List, or Genre, to display all the SiriusXM® Channel Numbers. You can scroll the Channel list by pressing the Up and Down arrows, located on the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob.

Genre

Press the Genre button on the touchscreen to display a list of Genres. You can select any desired Genre by pressing the Genre list, the Radio tunes to a channel with the content in the selected Genre.

Presets

Press the Presets button located at the left of the Browse screen.

You can scroll the Presets list pressing the up and down arrows located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob as well.

Preset Selection

A Preset can be selected by pressing any of the listed Presets, or by pushing the ENTER/BROWSE button on the TUNE/SCROLL knob to select the currently highlighted Preset. When selected, the Radio tunes to the station stored in the Preset.

Deleting A Preset

A Preset can be deleted in the Presets Browse screen by pressing the Trash Can Icon for the corresponding Preset.

Favorites

Press the Favorites button located at the left of the Browse screen.

The Favorites menu provides a means to Edit the Favorites list and to configure the Alert Settings, along with providing a list of Channels currently airing any of the items in the Favorites list.

You can scroll the Favorites list by pressing the Up and Down arrows located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob as well.

Remove Favorites

Press the Remove Favorites tab at the top of the screen. Press the Delete All button on the touchscreen to delete all of the Favorites or press the Trash Can icon next to the Favorite to be deleted.

Alert Settings

Press the Alert Settings tab at the top of the Favorites screen. The Alert Settings menu allows you to choose from a Visual alert or Audible and Visual alert when one of your favorites is airing on any of the SiriusXM® channels.

Tune Start

Tune Start begins playing the current song from the beginning when you tune to a music channel using one of the 12 presets, so you can enjoy the complete song. This feature occurs the first time the preset is selected during that current song. Tune Start works in the background, so you will not even realize it's on, except that you will miss the experience of joining your favorite song with only a few seconds left to play. Refer to "Uconnect Settings" in "Multimedia" in your Owner's Manual for further information.

Game Zone

Press the Game Zone button, located at the left of the Browse screen. This feature provides you with the ability to select teams, edit the selection, and set alerts.

On-Air

Press the On-Air tab at the top of the screen. The On-Air list provides a list of Channels currently airing any of the items in the Selections list, and pressing any of the items in the list tunes the radio to that channel.

Select Teams

Press the Select Teams button on the touchscreen to activate the League Scroll list. Press the chosen league and a scroll list of all teams within the league will appear, then you can select a team by pressing the corresponding box. A check mark appears for all teams that are chosen.

Remove Selection

Press the Remove Selection tab at the top of the screen. Press the Delete All button on the touchscreen to delete all of the Selections or press the Trash Can Icon next to the Selection to be deleted.

Alert Settings

Press the Alert Setting tab at the top of the screen. The Alert Settings menu allows you to choose from "Alert me to on-air games upon start" or "Alert upon score update" or both when one or more of your selections is airing on any of the SiriusXM® channels.

AUDIO

Press the Audio Settings button on the touchscreen to activate the Audio settings screen to adjust Balance/Fade, Equalizer, Speed Adjusted Volume, AUX volume Offset, Auto Play, and Surround Sound.

You can return to the Radio screen by pressing the X located at the top right.



- 1 — Balance/Fade
- 2 — Equalizer
- 3 — Speed Adjusted Volume
- 4 — Surround Sound
- 5 — AUX Offset
- 6 — Auto Play
- 7 — Radio Off With Door (If Equipped)

Balance/Fade

Press the Balance/Fade button on the touchscreen to Balance audio between the front speakers or fade the audio between the rear and front speakers.

Pressing the Front, Rear, Left or Right buttons or press and drag the red Speaker Icon to adjust the Balance/Fade.

Equalizer

Press the Equalizer button on the touchscreen to activate the Equalizer screen.

Press the + or - buttons, or by pressing and dragging over the level bar for each of the equalizer bands. The level value, which spans between plus or minus nine, is displayed at the bottom of each of the Bands.

Speed Adjusted Volume

Press the Speed Adjusted Volume button on the touchscreen to activate the Speed Adjusted Volume screen.

The Speed Adjusted Volume is adjusted by selecting from Off, 1, 2, or 3. This alters the automatic adjustment of the audio volume with variation to vehicle speed. Volume increases automatically as speed increases to compensate for normal road noise.

Surround Sound

Press the On button on the touchscreen to activate Surround Sound. Press Off to deactivate this feature.

When Surround Sound is On, you can hear audio coming from every direction as in a movie theatre or home theatre system.

AUX Volume Offset

Press the AUX Volume Offset button on the touchscreen to activate the AUX Volume Offset screen.

The AUX Volume Offset is adjusted by pressing of the + and – buttons. This alters the AUX input audio volume. The level value, which spans between plus or minus three, is displayed above the adjustment bar.

Auto Play

Press the Auto Play button on the touchscreen to activate the Auto Play screen.

The Auto Play feature begins playing music as soon as a USB Media device is connected to one of the vehicle's Media USB ports, when it is turned on. Press Off to turn the setting off.

Radio Off With Door

The Radio Off With Door feature, when activated, keeps the radio on until the driver or passenger door is opened or when the Radio Off Delay selected time has expired.

MEDIA MODE

DISC MODE — IF EQUIPPED

Overview

Disc Mode is entered by either inserting a Disc or pressing the Disc button on the left side of the display. Once in Media Mode, press the CD button on the left side of the screen or under the Source Select button (if equipped).

An “Insert Disc” message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

Seek Up /Seek Down

Press and release the Seek Up button on the touchscreen for the next selection on the Disc. Press and release the Seek Down button on the touchscreen to return to the beginning of the current selection, or to return to the beginning of the previous selection if the Disc is within the first three seconds of the current selection.

Browse

Press the Browse button on the touchscreen to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the Disc. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the touchscreen on the left side of the screen. The center of the browse window shows items and it's sub-functions, which can be scrolled by pressing the Up and Down buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

Media Mode

Press the Media button on the touchscreen to select the desired audio source: Disc.

Repeat

Press the Repeat button on the touchscreen to toggle the repeat functionality. The Repeat button on the touchscreen is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

Shuffle

Press the Shuffle button on the touchscreen to play the selections on the compact disc in random order to provide an interesting change of pace. Press the button on the touchscreen a second time to turn this feature off.

Audio

Refer to “Radio Mode” for adjusting the audio settings.

Info

Press the Info button on the touchscreen to display the current track information. Press the Info button on the touchscreen a second time to cancel this feature.

Tracks

Press the Trks button on the touchscreen to display a pop-up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.

While the pop-up is displayed, pressing the Trks button on the touchscreen will close it.

USB MODE

Overview

USB/iPod® Mode is entered by either inserting a USB device or iPod® and cable into the USB Port or selecting “USB” either on the left side of the touchscreen or under the Source Select button (if equipped).

Seek Up /Seek Down

Press and release the Seek Up ►► button on the touchscreen for the next selection on the USB device/iPod®. Press and release the Seek Down ◄◄ button on the touchscreen to return to the beginning of the current selection, or to return to the beginning of the previous selection if the USB device/iPod® is within the first three seconds of the current selection.

Browse

Press the Browse button on the touchscreen to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the USB device/iPod®. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and it's sub-functions, which can be scrolled by pressing the Up and Down buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

Media Mode

Press the Media button on the touchscreen to select the desired audio source: USB.

Repeat

Press the Repeat button on the touchscreen to toggle the repeat functionality. The Repeat button on the touchscreen is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

Shuffle

Press the Shuffle button on the touchscreen to play the selections on the USB/iPod® device in random order to provide an interesting change of pace. Press the Shuffle button on the touchscreen a second time to turn this feature off.

Info

Press the Info button on the touchscreen to display the current track information. Press the Info button on the touchscreen a second time to cancel this feature.

Tracks

Press the Trks button on the touchscreen to display a pop-up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Trks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then push the ENTER/BROWSE knob to start playing that track.

Pressing the Trks button on the touchscreen while the pop-up is displayed will close the pop up.

Audio

Refer to “Radio Mode” for adjusting the audio settings.

AUX MODE

Overview

Auxiliary Mode (AUX) is entered by inserting an AUX device using a cable with a 3.5 mm audio jack into the AUX port or by pressing the AUX button on the left side of the touchscreen or under the Source Select button (if equipped).

Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert an Auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME And ON/OFF rotary knob, or with the volume of the attached device.

NOTE:

The radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore, if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

Media Mode

Press the Media button on the touchscreen to select the desired audio source: AUX.

Audio

Refer to “Radio Mode” for adjusting the audio settings.

BLUETOOTH® MODE

Overview

Bluetooth® Streaming Audio (BTSA) or Bluetooth® Mode is entered by pairing a Bluetooth® device, containing music, to the Uconnect System.

Before proceeding, the Bluetooth® device must be paired to the Uconnect Phone to communicate with the Uconnect System.

NOTE:

See the pairing procedure in the “Phone Mode” section for more details.

To access Bluetooth® mode, press the Bluetooth® button on the left side of the touchscreen or under the Source Select button (if equipped).



Seek Up/Down

Press and release the Seek Up button on the touchscreen for the next selection on the Bluetooth® device. Press and release the Seek Down button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth® device is within the first second of the current selection.

Media Mode

Press the Media button on the touchscreen to select the desired audio source: Bluetooth®.

Tracks

If the Bluetooth® device supports this feature, press the Trks button on the touchscreen to display a pop-up with the Song List. The currently playing song is indicated by a red arrow and lines above and below the song title.

Pressing the Trks button on the touchscreen while the pop-up is displayed will close the pop up.

Audio

Refer to “Radio Mode” for adjusting the audio settings.

ANDROID AUTO™ & APPLE CARPLAY® — IF EQUIPPED

ANDROID AUTO™

NOTE:

Feature availability depends on your carrier and mobile phone manufacturer. Some Android Auto™ features may or may not be available in every region and/or language.

Android Auto™ is a feature of your Uconnect system, and your Android™ 5.0 or higher powered smartphone with a data plan, that allows you to project your smartphone and a number of its apps onto the touchscreen radio display. Android Auto™ brings you useful information, and organizes it into simple cards that appear just when they are needed. Android Auto™ can be used with Google's best-in-class speech technology, the steering wheel controls, the knobs and buttons on your radio faceplate, and the radio display's touchscreen to control many of your apps. To use Android Auto™ follow the following procedure:

1. Download the Android Auto™ app from the Google Play store on your Android™-powered smartphone.
2. Connect your Android™-powered smartphone to one of the media USB ports in your vehicle. If the Android Auto™ app was not downloaded, the first time you plug your device in, the app begins to download.

NOTE:

Be sure to use the factory-provided USB cable that came with your phone, as aftermarket cables may not work.



- Once the device is connected and recognized, the “Phone” icon on the drag & drop menu bar changes to the Android Auto™ Icon.

Once Android Auto™ is up and running on your Uconnect system, the following features can be utilized using your smartphone's data plan:

- Google Maps™ for navigation
- Google Play Music, Spotify, iHeart Radio, etc. for music
- Hands-free Calling and Texting for communication
- Hundred of compatible apps

NOTE:

To use Android Auto™, make sure you are in an area with cellular coverage. Android Auto™ may use cellular data and your cellular coverage is shown in the upper right corner of the radio screen.

NOTE:

Requires compatible smartphone running Android™ 5.0 or higher and download app on Google Play. Android™, Android Auto™ and Google Play are trademarks of Google Inc.

Maps

Push and hold the Voice Recognition (VR) button on the steering wheel or tap the Microphone icon to ask Google to take you to a desired destination by voice. You can also touch the Navigation icon in Android Auto™ to access Google Maps™.

NOTE:


If the VR button is not held, and is only pushed, the built-in Uconnect VR prompts you and any navigation command said launches the built-in Uconnect navigation system.

While using Android Auto™, Google Maps™ provides voice-guided:

- Navigation
- Live traffic information
- Lane guidance

NOTE:

If you are using the built-in Uconnect navigation system, and you try and start a new route using the Android Auto™, via voice or any other method, a pop-up appears asking if you would like to switch from Uconnect navigation to smartphone navigation. A pop-up also appears, asking if you'd like to switch, if Android Auto™ is currently in use and you attempt to launch a built-in Uconnect route. Selecting "Yes" switches the navigation type to the newly used method of navigation and a route is planned for the new destination. If "No" is selected the navigation type remains unchanged.

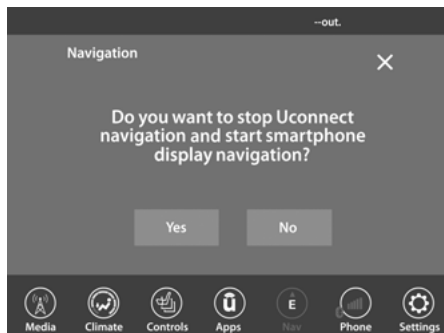

For further information, refer to www.android.com/auto/ (US Residents) or https://www.android.com/intl/en_ca/auto/ (Canadian Residents).

For further information on the navigation function, please refer to <https://support.google.com/android> or <https://support.google.com/androidauto/>.

Music

Android Auto™ allows you to access and stream your favorite music with apps like Google Play Music, iHeartRadio, and Spotify. Using your smartphone's data plan, you can stream endless music on the road.

NOTE:

Music apps, playlists, and stations must be set up on your smartphone prior to using Android Auto™ for them to work with Android Auto™.

NOTE:

To see the metadata for the music playing through Android Auto™, select the Uconnect System's media screen.

For further information, refer to <https://support.google.com/androidauto>.

Communication

With Android Auto™ connected, press and hold the VR button on the steering wheel to activate voice recognition specific to the Android Auto™. This allows you to send and reply to text messages, have incoming text messages read out loud, and place and receive hands-free calls.

Apps

The Android Auto™ App displays all the compatible apps that are available to use with Android Auto™, every time it is launched. You must have the compatible app downloaded, and you must be signed in to the app for it to work with Android Auto™.

Refer to g.co/androidauto to see the latest list of available apps for Android Auto™.

APPLE CARPLAY® INTEGRATION

NOTE:

Feature availability depends on your carrier and mobile phone manufacturer. Some Apple CarPlay® features may or may not be available in every region and/or language.

Uconnect works seamlessly with Apple CarPlay®, the smarter, more secure way to use your iPhone® in the car, and stay focused on the road. Use your Uconnect Touchscreen display, the vehicle's knobs and controls, and your voice with Siri to get access to Apple Music®, Maps, Messages, and more.

To use Apple CarPlay®, make sure you are using iPhone® 5 or later, have Siri enabled in Settings, ensure your iPhone® is unlocked for the very first connection only, and then use the following procedure:

1. Connect your iPhone® to one of the media USB ports in your vehicle.

NOTE:

Be sure to use the factory-provided Lightning cable that came with your phone, as aftermarket cables may not work.

2. Once the device is connected and recognized, the Phone icon on the drag & drop menu bar changes to the Apple CarPlay® Icon.



NOTE:

To use Apple CarPlay®, make sure that cellular data is turned on, and that you are in an area with cellular coverage. Your data and cellular coverage is shown on the left side of the radio screen.

Once Apple CarPlay® is up and running on your Uconnect system, the following features can be utilized using your iPhone's® data plan:

- Phone
- Music
- Messages
- Maps

NOTE:

Requires compatible iPhone®. See dealer for phone compatibility. Data plan rates apply. Vehicle user interface is a product of Apple®. Apple CarPlay® is a trademark of Apple® Inc., iPhone® is a trademark of Apple® Inc. registered in the US and other countries. Apple® terms of use and privacy statements apply.

Phone



With Apple CarPlay®, press and hold the VR button on the steering wheel to activate a Siri voice recognition session. You can also press and hold the Home button within Apple CarPlay® to start talking to Siri. This allows you to make calls or listen to voicemail as you normally would using Siri on your iPhone®.

NOTE:

Only temporarily pushing the VR button on the steering wheel launches a built-in VR session, not a Siri session, and it will not function with Apple CarPlay®.

Music



Apple CarPlay® allows you to access all your artists, playlists, and music from iTunes®. Using your iPhone's® data plan, you can also use select third party audio apps including music, news, sports, podcasts, and more.

Messages



Just like Phone, Apple CarPlay® allows you to use Siri to send or reply to text messages. Siri can also read incoming text messages, but drivers will not be able to read messages, as everything is done via voice.

Maps




To use your Apple® Maps for navigation on your Uconnect system, launch Apple CarPlay®, and push and hold the VR button on the steering wheel to use Siri to set your desired destination. Alternatively, choose a Nearby destination by pressing Destinations and selecting a category, by launching Siri from the destinations page, or even by typing in a destination.

NOTE:

- If the VR button is not held, and is only pushed, the built-in Uconnect VR prompts you and any navigation command said launches the built-in Uconnect navigation system.

- If you are using the built-in Uconnect navigation system, and you try and start a new route using Apple CarPlay®, via voice or any other method, a pop-up appears asking if you would like to switch from Uconnect navigation to iPhone® navigation. A pop-up also appears, asking if you'd like to switch, if an Apple CarPlay® navigation is currently in use and you attempt to launch a built-in Uconnect route. Selecting Yes switches the navigation type to the newly used method of navigation and a route is planned for the new destination. If No is selected the navigation type remains unchanged.

3

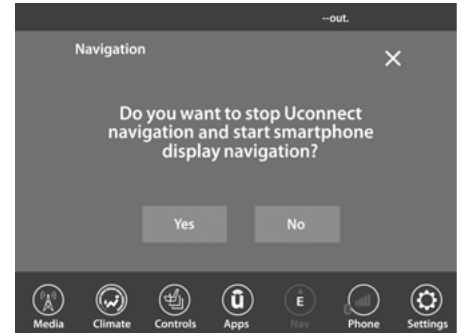

Apps

To use a compatible app with Apple CarPlay®, you must have the compatible app downloaded, and you must be signed in to the app.

Refer to <http://www.apple.com/ios/carplay/> (US Residents) or <https://www.apple.com/ca/ios/carplay/> (Canadian Residents) to see the latest list of available apps for Apple CarPlay®.

ANDROID AUTO™ AND APPLE CARPLAY® TIPS AND TRICKS

Smartphone Device Mirroring



Once downloaded or activated, Android Auto™ and Apple CarPlay® will automatically start when your smartphone is plugged into a USB port. This function can be activated/deactivated through the Smartphone Projection Manager.

To activate/deactivate this feature, connect your smartphone with the manufactures USB cable to the vehicle's USB ports.

1. Press the Phone/Bluetooth® button in the Settings menu, or press the Apps button.
2. Press "Smartphone Projection Manager".
3. The setting, Smartphone Device Mirroring, will display with a check mark. To deactivate Android Auto™ and Apple CarPlay® for all devices, press the check box. To reactivate Android Auto™ and Apple CarPlay® for all devices, press the check box again until a check mark appears.

Android Auto™ and Apple CarPlay® can also be activated/deactivated on specific devices.


1. In Smartphone Projection Manager, select the name of the device you would like to activate/deactivate Android Auto™ and Apple CarPlay®.
2. The setting, "Enable Android Auto™" or "Enable Apple CarPlay®", will display depending on your smartphone. Press the check box to deactivate these features. To reactivate Android Auto™ and Apple CarPlay®, press the check box until a check mark appears.

AutoPlay

AutoPlay is a feature of the Uconnect system that begins playing music off of the connected device as soon as it is connected. This feature can be turned On or Off in the Uconnect Settings within the Audio Settings category. It's default setting is On.

NOTE:

AutoPlay is not supported by Android Auto™.

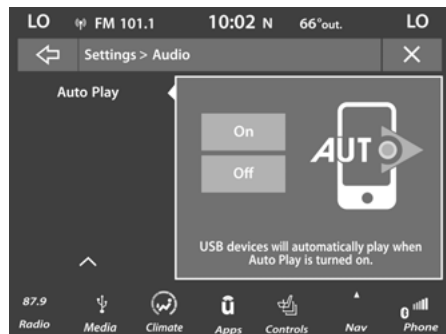

Android Auto™ Automatic Bluetooth® Pairing

After connecting to Android Auto™ for the first time and undergoing the setup procedure, the smartphone pairs to the Uconnect system via Bluetooth® without any setup required every time it is within range, if Bluetooth® is turned on.

NOTE:

Android Auto™ features cannot be used with Bluetooth®, a USB connection is required for its use. Android Auto™ uses both Bluetooth® and USB connections to function, and the connected device is unavailable to other devices when connected using Android Auto™.

Multiple Devices Connecting To The Uconnect System

It is possible to have multiple devices connected to the Uconnect system. For example, if using Android Auto™/Apple CarPlay®, the connected device will be used to place hands-free phone calls or send hands-free text messages. However, another device can also be paired to the Uconnect system, via Bluetooth®, as an audio source, so the passenger can stream music.

NOTE:

If using a Samsung device, every time it is connected to a media USB, and there is another device plugged in, you need to change the configuration of the USB connection in order for the Samsung device to send data.

PHONE MODE

OVERVIEW

Uconnect Phone is a voice-activated, hands-free, in-vehicle communications system. Uconnect Phone allows you to dial a phone number with your mobile phone.

Uconnect Phone supports the following features:

Voice Activated Features:

- Hands-Free dialing via Voice ("Call John Smith Mobile" or, "Dial 248-555-1212").
- Hands-Free text-to-speech listening of your incoming SMS messages.
- Hands-Free Text Message Replying. Forward one of 18 predefined SMS messages to incoming calls/text messages.
- Redialing last dialed numbers ("Redial").
- Calling Back the last incoming call number ("Call Back").
- Viewing Call logs on screen ("Show Incoming Calls," "Show Outgoing Calls," "Show Missed Calls," "Show Recent Calls").

- Searching Contacts phone number ("Search for John Smith Mobile").

Screen Activated Features

- Dialing via Keypad using touchscreen.
- Viewing and Calling contacts from Phone-books displayed on the touchscreen.
- Setting Favorite Contact Phone numbers so they are easily accessible on the Main Phone screen.
- Viewing and Calling contacts from Recent Call logs.
- Reviewing your recent Incoming SMS.
- Listening to Music on your Bluetooth® Device via the touchscreen.
- Pairing up to 10 phones/audio devices for easy access to connect to them quickly.

NOTE:

Your phone must be capable of SMS messaging via Bluetooth® for messaging features to work properly.

Your mobile phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the Uconnect Phone.

For Uconnect customer support:

- US residents - visit UconnectPhone.com or call:
877-855-8400
- Canadian residents - visit UconnectPhone.com or call:
800-465-2001
(English) or (French) call:
800-387-9983
- Visit UconnectPhone.com

Uconnect Phone allows you to transfer calls between the system and your mobile phone as you enter or exit your vehicle and enables you to mute the system's microphone for private conversation.

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

The Uconnect Phone is driven through your Bluetooth® “Hands-Free Profile” mobile phone. Uconnect features Bluetooth® technology - the global standard that enables different electronic devices to connect to each other without wires or a docking station, so Uconnect Phone works no matter where you stow your mobile phone (your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's Uconnect Phone. The Uconnect Phone allows up to 10 mobile phones or audio devices to be linked to the system. Only one linked (or paired) mobile phone and one audio device can be used with the system at a time.

Uconnect Phone Button

The Uconnect Phone button on your steering wheel is used to get into the phone mode and make calls, show recent, incoming, outgoing calls, view phonebook etc., When you push the button you will hear a BEEP. The beep is your signal to give a command.

Uconnect Voice Command Button

The Uconnect Voice Command button on your steering wheel is only used for “barge in” and when you are already in a call and you want to send Tones or make another call.

The button on your steering wheel is also used to access the Voice Commands for the Uconnect Voice Command features if your vehicle is equipped. Please see the Uconnect Voice Command section for direction on how to use the button.

The Uconnect Phone is fully integrated with the vehicle's audio system. The volume of the Uconnect Phone can be adjusted either from the radio volume control knob or from the steering wheel radio control (right switch), if equipped.

PHONE OPERATION**OPERATION**

Voice commands can be used to operate the Uconnect Phone and to navigate through the Uconnect Phone menu structure. Voice commands are required after most Uconnect Phone prompts. There are two general methods for how Voice Command works:

1. Say compound commands like “Call John Smith mobile”.
2. Say the individual commands and allow the system to guide you to complete the task.

You will be prompted for a specific command and then guided through the available options.

- Prior to giving a voice command, one must wait for the beep, which follows the “Listen” prompt or another prompt.
- For certain operations, compound commands can be used. For example, instead of saying “Call” and then “John Smith” and then “mobile”, the following compound command can be said: “Call John Smith mobile.”

- For each feature explanation in this section, only the compound command form of the voice command is given. You can also break the commands into parts and say each part of the command when you are asked for it. For example, you can use the compound command form voice command “Search for John Smith,” or you can break the compound command form into two voice commands: “Search Contact” and when asked “John Smith.” Please remember, the Uconnect Phone works best when you talk in a normal conversational tone, as if speaking to someone sitting a few feet/meters away from you.

NATURAL SPEECH

Your Uconnect Phone Voice system uses a Natural Language Voice Recognition (VR) engine.

Natural speech allows the user to speak commands in phrases or complete sentences. The system filters out certain non-word utterances and sounds such as “ah” and “eh.” The system handles fill-in words such as “I would like to.”

The system handles multiple inputs in the same phrase or sentence such as “make a phone call” and “to Kelly Smith”. For multiple inputs in the same phrase or sentence, the system identifies the topic or context and provides the associated follow-up prompt such as “Who do you want to call?” in the case where a phone call was requested but the specific name was not recognized.

The system utilizes continuous dialog; when the system requires more information from the user it will ask a question to which the user can respond without pushing the Voice Command button on your steering wheel.

HELP COMMAND

If you need assistance at any prompt, or if you want to know your options at any prompt, say “Help” following the beep.

To activate the Uconnect Phone from idle, simply push the Phone button (if active) on your steering wheel and say a command or say “help.” All Uconnect Phone sessions begin with a push of the VR button or the Phone button (if active) on the radio control head.

CANCEL COMMAND


At any prompt, after the beep, you can say “Cancel” and you will be returned to the main menu.

You can also push the VR button or Phone button (if active) on your steering wheel when the system is listening for a command and be returned to the main or previous menu.

PAIR (LINK) UCONNECT PHONE TO A MOBILE PHONE

To begin using your Uconnect Phone, you must pair your compatible Bluetooth® enabled mobile phone. Mobile phone pairing is the process of establishing a wireless connection between a cellular phone and the Uconnect system.

To complete the pairing process, you will need to reference your mobile phone Owner's Manual. Please visit UconnectPhone.com for complete mobile phone compatibility information.

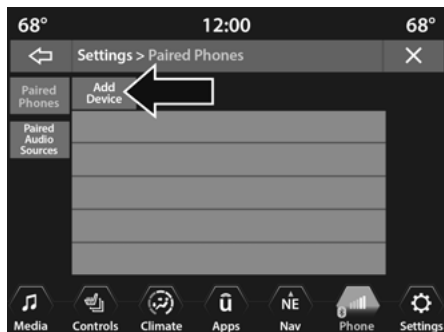**NOTE:**

- You must have Bluetooth® enabled on your phone to complete this procedure.
 - The vehicle must be in PARK.
1. Place the ignition in the ACC or ON/RUN position.
 2. Press the Phone button in the Menu Bar on the touchscreen.

NOTE:

- If there are no phones currently connected with the system, a pop-up will appear asking if you would like to pair a mobile phone.
- This pop-up only appears when the user enters phone mode and no other device(s) have previously been paired. If the system has a phone previously paired, even if no phone is currently connected with the system, this pop-up will not appear.

3. Select “Yes” to begin the pairing process.
4. Search for available devices on your Bluetooth®-enabled mobile phone.
 - Press the Settings button on your mobile phone.
 - Select Bluetooth® and ensure it is enabled. Once enabled, the mobile phone will begin to search for Bluetooth® connections.

5. If “No” is selected, and you still would like to pair a mobile phone, press the Pairing button from the Uconnect Phone main screen.

- Select the Paired Phones and Audio Devices button on the touchscreen and then press “Add Device”
- Search for available devices on your Bluetooth®-enabled mobile phone (see below). When prompted on the phone, select “Uconnect” and accept the connection request.

6. Uconnect Phone will display an in progress screen while the system is connecting.
7. When your mobile phone finds the Uconnect system, select “Uconnect.”
8. When prompted on the mobile phone, accept the connection request from Uconnect Phone.

NOTE:

Some mobile phones will require you to enter the PIN.

9. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting "Yes" will make this phone the highest priority. This phone will take precedence over other paired phones within range and will connect to the Uconnect system automatically when entering the vehicle. Only one mobile phone and/or one Bluetooth® audio device can be connected to the Uconnect system at a time. If "No" is selected, simply select "Uconnect" from the mobile phone/audio device Bluetooth® screen, and the Uconnect system will reconnect to the Bluetooth® device.

NOTE:

During the pairing procedure, you may receive a pop-up on your mobile phone for the Uconnect System to access your "messages" and "contacts". Selecting "Ok" or "Allow" will sync your contacts with the Uconnect System.

NOTE:

Software updates on your phone or the Uconnect system may interfere with the Bluetooth® connection. If this happens, simply repeat the pairing process.

However, first, make sure to delete the device from the list of phones on your Uconnect system. Next, be sure to remove Uconnect from the list of devices in your phone's Bluetooth® settings.

PAIR ADDITIONAL MOBILE PHONES

1. Press the Pairing button on the touchscreen from the Phone main screen.
2. Press the Add Device button on the touchscreen.
3. Search for available devices on your Bluetooth®-enabled mobile phone. When prompted on the phone, enter the name and PIN shown on the Uconnect screen.
4. Uconnect Phone will display an in process screen while the system is connecting.
5. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting "Yes" will make this phone the highest priority. This phone will take precedence over other paired phones within range.

NOTE:

For phones which are not made a favorite, the phone priority is determined by the order in which it was paired. The latest phone paired will have the higher priority.

You can also use a following VR command to bring up the Paired Phone screen from any screen on the radio:

- "Show Paired Phones" or
- "Connect My Phone"

PAIR A BLUETOOTH® STREAMING AUDIO DEVICE

1. Press the Media button on the touchscreen to begin.
2. Change the Source to Bluetooth®.
3. Press the Bluetooth® button on the touchscreen to display the Paired Audio Devices screen.
4. Press the Add Device button on the touchscreen.

NOTE:

If there is no device currently connected with the system, a pop-up will appear.

5. Search for available devices on your Bluetooth®-enabled audio device. When prompted on the device, enter the PIN shown on the Uconnect screen.
6. Uconnect Phone will display an in process screen while the system is connecting.
7. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite device. Selecting "Yes" will make this device the highest priority. This device will take precedence over other paired devices within range.

NOTE:

For devices which are not made a favorite, the device priority is determined by the order in which it was paired. The latest device paired will have the higher priority.

You can also use a following VR command to bring up a list of paired audio devices:

- "Show Paired Phones" or
- "Connect My Phone"

CONNECTING TO A PARTICULAR MOBILE PHONE OR AUDIO DEVICE AFTER PAIRING

Uconnect Phone will automatically connect to the highest priority paired phone and/or Audio Device within range. If you need to choose a particular phone or Audio Device follow these steps:

1. Press the Pairing button on the touchscreen.
2. Press the Paired and Audio Devices button on the touchscreen.
3. Press to select the particular phone or the particular Audio Device. A pop-up menu will appear, press Connect Phone.
4. Press the X to exit out of the Settings screen.

DISCONNECTING A PHONE OR AUDIO DEVICE

1. Press the Pairing button on the touchscreen.
2. Press the Paired Phones and Audio Devices button on the touchscreen.
3. Press the Settings button located to the right of the device name.
4. The option's pop-up will be displayed.
5. Press the Disconnect Phone button on the touchscreen.
6. Press the X to exit out of the Settings screen.

DELETING A PHONE OR AUDIO DEVICE

1. Press the Pairing button on the touchscreen.
2. Press the Paired Phones and Audio Devices button on the touchscreen.
3. Press the Settings button located to the right of the device name for a different Phone or Audio Device than the currently connected device.

4. The option's pop-up will be displayed.
5. Press the Delete Phone button on the touchscreen.
6. Press the X to exit out of the Settings screen.

MAKING A PHONE OR AUDIO DEVICE A FAVORITE

1. Press the Pairing button on the touchscreen.
2. Press the Paired Phones and Audio Devices button on the touchscreen.
3. Press the Settings button located to the right of the device name.
4. The option's pop-up will be displayed.
5. Press the Make Favorite button on the touchscreen; you will see the chosen device move to the top of the list.
6. Press the X to exit out of the Settings screen.

PHONEBOOK DOWNLOAD (AUTOMATIC PHONEBOOK TRANSFER FROM MOBILE PHONE) — IF EQUIPPED

If equipped and specifically supported by your phone, Uconnect Phone has the ability to download names (text names) and number entries from the mobile phone's phonebook. Specific Bluetooth® Phones with Phonebook Access Profile may support this feature. Your mobile phone may receive a pop-up asking for permission for the Uconnect System to access your "messages" and "contacts". Selecting "Ok" or "Allow" will sync your contacts with the Uconnect System.

See Uconnect website, UconnectPhone.com, for supported phones.

- To call a name from a downloaded mobile phone book, follow the procedure in the "Uconnect Voice Recognition Quick Tips" in "Multimedia" in the Owner's Manual.
- Automatic download and update of a phone book, if supported, begins as soon as the Bluetooth® wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.
- A maximum of 5,000 contact names with four numbers per contact will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.
- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

MANAGING YOUR FAVORITES

There are two ways you can add an entry to your Favorites.

1. After loading the mobile phonebook, press the Favorites button on the touchscreen, and then press one of the +Add Favorite Contact buttons that appears on the list.
2. After loading the mobile phonebook, select "Contacts" from the Phone main screen, and then select the appropriate number. Press the Down Arrow button next to the selected number to display the option's pop-up. In the pop-up, select "Add to Favorites".

NOTE:

If the Favorites list is full, you will be asked to remove an existing favorite.

TO REMOVE A FAVORITE

1. To remove a Favorite, select "Favorites" from the Phone main screen.
2. Next select the Down Arrow icon next to the contact you want to remove from your favorites. This will bring up the options for that Favorite contact.
3. Deselect the Star icon to delete the Favorite.

PHONE CALL FEATURES

The following features can be accessed through the Uconnect Phone if the feature(s) are available and supported by Bluetooth® on your mobile service plan. For example, if your mobile service plan provides three-way calling, this feature can be accessed through the Uconnect Phone. Check with your mobile service provider for the features that you have.

WAYS TO INITIATE A PHONE CALL

Listed below are all the ways you can initiate a phone call with Uconnect Phone.

- Redial
- Dial by pressing in the number
- Voice Commands (Dial by Saying a Name, Call by Saying a Phonebook Name, Redial or Call Back)
- Favorites
- Mobile Phonebook
- Recent Call Log
- SMS Message Viewer

DIAL BY SAYING A NUMBER

1. Push the VR button on your steering wheel to begin.
2. After the "Listening" prompt and the following beep, say "Dial 151-123-4444."
3. The Uconnect Phone will dial the number 151-123-4444.

CALL BY SAYING A PHONEBOOK NAME

1. Push the VR button on your steering wheel to begin.
2. After the “Listening” prompt and the following beep, say “Call John Doe Mobile.”
3. The Uconnect Phone will dial the number associated with John Doe, or if there are multiple numbers it will ask which number you want to call for John Doe.

CALL CONTROLS

The touchscreen allows you to control the following call features:

- Answer
- End Call
- Ignore/Decline
- Hold/Unhold/Resume
- Mute/Unmute
- Transfer the call to/from the phone
- Swap two active calls
- Join two active calls together

TOUCH-TONE NUMBER ENTRY

1. Press the Phone button on the touchscreen.
2. Press the Dial/Keypad button on the touchscreen.
3. The Touch-Tone screen will be displayed.
4. Use the numbered buttons on the touchscreens to enter the number and press Dial/Call.

If your vehicle has two buttons on the steering wheel (VR and Phone), press the VR button on your steering wheel to send a touch-tone. If your vehicle has three buttons on the steering wheel (VR, Phone Send, and Phone End), press the Phone Send button on your steering wheel to send a touch-tone and say “Send 1234#” or you can say “Send Voicemail Password” if Voicemail password is stored in your mobile phonebook.

RECENT CALLS

You may browse a list of the most recent of each of the following call types:

- All Calls
- Incoming Calls
- Outgoing Calls
- Missed Calls

These can be accessed by pressing the Recent Calls button on the Phone main screen.

You can also push the VR button on your steering wheel and say “Show my incoming calls” from any screen and the incoming calls will be displayed.

NOTE:

Incoming can also be replaced with “Outgoing,” “Recent”, or “Missed.”

ANSWER OR IGNORE AN INCOMING CALL — NO CALL CURRENTLY IN PROGRESS

When you receive a call on your mobile phone, the Uconnect Phone will interrupt the vehicle audio system. Push the Phone button on the steering wheel to accept the call. You can also press the Answer button on the touchscreen or press the caller ID box.

ANSWER OR IGNORE AN INCOMING CALL — CALL CURRENTLY IN PROGRESS

If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your mobile phone. Press the Uconnect Phone button on the steering wheel, answer button on the touchscreen or caller ID box to place the current call on hold and answer the incoming call.

NOTE:

The Uconnect Phone compatible phones in the market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only answer an incoming call or ignore it.

DO NOT DISTURB

With Do Not Disturb, you can disable notifications from incoming calls and texts, allowing you to keep your eyes on the road and hands on the wheel. For your convenience, there is a counter display to keep track of your missed calls and text messages while you were using Do Not Disturb.

Do Not Disturb can automatically reply with a text message, a call, or both when declining an incoming call and send it to voicemail.

Automatic reply messages can be:

- “I am driving right now, I will get back to you shortly.”
- Create a custom auto reply message up to 160 characters.

NOTE:

Only the first 25 characters can be seen on the touchscreen while typing a custom message.

While in Do Not Disturb, Conference Call can be selected so you can still place a second call without being interrupted by incoming calls.

NOTE:

- Reply with text message is not compatible with iPhones®.
- Auto reply with text message is only available on phones that support Bluetooth® MAP.

PLACE/RETRIEVE A CALL FROM HOLD

During an active call, press the Hold button on the Phone main screen.

MAKING A SECOND CALL WHILE CURRENT CALL IS IN PROGRESS

You can place a call on hold by pressing the Hold button on the Phone main screen, then dial a number from the dialpad, recent calls, SMS Inbox or from the phonebooks. To go back to the first call, refer to “Toggling Between Calls” in this section. To combine two calls, refer to “Join Calls” in this section.

TOGGING BETWEEN CALLS

If two calls are in progress (one active and one on hold), press the Swap button on the Phone main screen. Only one call can be placed on hold at a time.

You can also push the Phone button to toggle between the active and held phone call.

JOIN CALLS

When two calls are in progress (one active and one on hold), press the Join Calls button on the Phone main screen to combine all calls into a Conference Call.

CALL TERMINATION

To end a call in progress, momentarily press the End Call button on the touchscreen or the Phone End button on the steering wheel. Only the active call(s) will be terminated and if there is a call on hold, it will become the new active call.

REDIAL

Press the Redial button on the touchscreen, or push the VR button and after the “Listening” prompt and the following beep, say “Redial.”

The Uconnect Phone will call the last number that was dialed from your mobile phone.

CALL CONTINUATION

Call continuation is the progression of a phone call on the Uconnect Phone after the vehicle ignition has been switched to OFF.

NOTE:

The call will remain within the vehicle audio system until the phone becomes out of range for the Bluetooth® connection. It is recommended to press the Transfer button on the touchscreen when leaving the vehicle.

ADVANCED PHONE CONNECTIVITY

TRANSFER CALL TO AND FROM MOBILE PHONE

The Uconnect Phone allows ongoing calls to be transferred from your mobile phone to the Uconnect Phone without terminating the call. To transfer an ongoing call from your connected mobile phone to the Uconnect Phone or vice versa, press the Transfer button on the Phone main screen.

CONNECT OR DISCONNECT LINK BETWEEN THE UCONNECT PHONE AND MOBILE PHONE

If you would like to connect or disconnect the Bluetooth® connection between a Uconnect Phone paired mobile phone and the Uconnect Phone, follow the instructions described in your mobile phone User's Manual.

THINGS YOU SHOULD KNOW ABOUT YOUR UCONNECT PHONE

VOICE COMMAND

For the best performance:

- Always wait for the beep before speaking.
- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Ensure that no one other than you is speaking during a voice command period.

Performance is maximized under:

- Low-To-Medium Blower Setting
- Low-To-Medium Vehicle Speed
- Low Road Noise
- Smooth Road Surface
- Fully Closed Windows
- Dry Weather Conditions

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Even though the system is designed for many languages and accents, the system may not always work for some.

NOTE:

It is recommended that you do not store names in your favorites phonebook while the vehicle is in motion.

Phonebook (Mobile and Favorites) name recognition rate is optimized when the entries are not similar. You can say “O” (letter “O”) for “0” (zero).

Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.

FAR END AUDIO PERFORMANCE

Audio quality is maximized under:

- Low-To-Medium Blower Setting
- Low-To-Medium Vehicle Speed
- Low Road Noise
- Smooth Road Surface
- Fully Closed Windows
- Dry Weather Conditions
- Operation From The Driver's Seat

Performance such as audio clarity, echo, and loudness to a large degree rely on the phone and network, and not the Uconnect Phone.

Echo at the far end can sometimes be reduced by lowering the in-vehicle audio volume.

BLUETOOTH® COMMUNICATION LINK

Mobile phones have been found to lose connection to the Uconnect Phone. When this happens, the connection can generally be re-established by switching the mobile phone OFF/ON. Your mobile phone is recommended to remain in Bluetooth® ON mode.

POWER-UP

After switching the ignition key from OFF to either the ON/RUN or ACC position, or after a language change, you must wait at least 15 seconds prior to using the system.

GENERAL INFORMATION

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science, and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NAVIGATION MODE — IF EQUIPPED (4C NAV ONLY)

OPERATING NAVIGATION

To access the Navigation system, press the Nav button on the touchscreen.



- Press “Where To?” to find or route to a destination.
- Press “View Map” to view the map.
- Press “Home” to set a home address, if not already set, and to program a route home.
- Press “Work” to set a work address, if not already set, and to program a route to work.
- Press “Information” to view Traffic and Where Am I? information.
- Press “Emergency” to search for Hospitals, Police and Fire Stations near your current location. You can also display your current location and save any Emergency facility location to your Favorites.
- Press the search bar at the top of the screen to search for a specific address to program a route to.

WHERE TO?

WHERE TO? — MAIN MENU



From the Nav Main Menu, press the Where To? button on the touchscreen and select one of the following methods to program a route guidance.

NOTE:

Refer to the individual section of the chosen option for further information.

Search All

Press this button on the touchscreen to search all “Where To?” categories for a location.

Address

Press this button on the touchscreen to search by a street address or a street name with house number.

Recent

Press this button on the touchscreen to access previously routed addresses or locations.

Favorites

Press this button on the touchscreen to access previously saved addresses or locations.

Point of Interest

Press this button on the touchscreen when you want to route to a point of interest. The Point of Interest (POI) database allows you to select a destination from a list of locations and public places, or points of interest.

Trips

Press this button on the touchscreen to program a new trip or recall a saved trip.

Intersection

Press this button on the touchscreen to enter in two street names as a destination.

Point on Map

Press this button on the touchscreen to select a destination directly from the Map screen. By selecting a street segment or icon, you can quickly enter a destination without the need to input the city name or street.

Home

Press this button on the touchscreen to program or confirm a route to the saved home address.

Work

Press this button on the touchscreen to program or confirm a route to the saved work address.

City Center

Press this button on the touchscreen to route to a particular city. The navigation system will calculate a route with the destination at the center of the city.

Closest Cities

Press this button on the touchscreen to route to a nearby city. The screen will display an alphabetical listing of nearby cities. The navigation system will calculate a route with the destination at the center of the nearby city.

Phone Number

Press this button on the touchscreen to route to a location or point of interest by the phone number.

GEO Coordinates

Press this button on the touchscreen to route to a GEO Coordinate. A GEO coordinate is a coordinate used in geography. You can determine a GEO coordinate with the help of a handheld GPS receiver, a map, or the navigation system.

Trails

Press the Trails button on the touchscreen and select the option to start trail recording to track the route you are driving. Select the option to “stop trail recording” to end tracking. This gives you a point of reference for a particular route if needed.

Edit Where To?

Press this button on the touchscreen and select which “Where To?” categories you would like to appear in the “Where To?” menu, and which ones you don’t.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — SEARCH ALL

To search all the “Where To?” categories for a location, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Search All button on the touchscreen.



2. Enter the location name, street address, city, etc. you wish to search for, to search all “Where To?” categories for the entered location, and press “OK”.



3. Select the desired location from the list of locations that appears. Once the correct location has been selected, you will be asked to confirm your route by pressing “Route To”.

- Press the GO! button on the touchscreen to begin your route.



If you are currently on a route guidance and you select Recent, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route” you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — ADDRESS

To enter a destination by Address, follow these steps:

- While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Address button on the touchscreen.



- Press “Spell City” or “Spell Street” to begin entering the address of your destination.



If you press “Spell City”, you will have to enter and select/press the desired city name, followed by the desired street name, and then the house number.

If you press “Spell Street”, you will have to enter and select/press the desired street name in the correct city, and then you will have to enter the house number.

To change the state and/or country, press the state, country button on the touchscreen and follow the prompts to change the state and/or country.



Once the correct City, Street and Number have been entered, you will be asked to confirm your route by pressing “Route To”.

3. Press the GO! button on the touchscreen to confirm your destination and begin your route.

If you are currently on a route guidance and you select Recent, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route” you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.


WHERE TO? — RECENT

To route to a Recent destination, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Recent button on the touchscreen.




- Press the button on the touchscreen with the name of the desired destination.

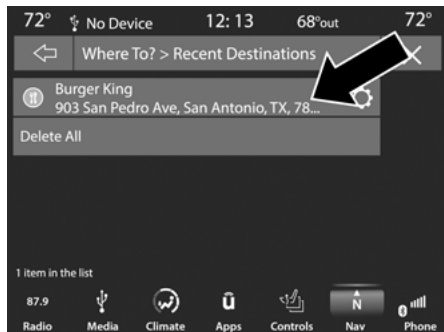

To display the options for a destination from the list, press the Gear Icon button on the touchscreen, which opens a pop-up menu with the options for that destination.

To delete a destination from the list, press “Delete” in that pop-up menu.

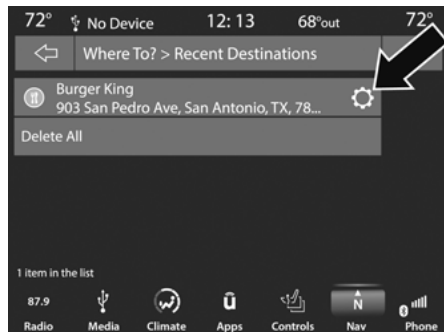

The following options are available for each destination:



- Edit Name
- Phone Number
- Move Up
- Move Down
- Place Pin (saves the spot on the list)
- Delete

3. Select “Route To” to confirm your route.
4. Press “GO!” to confirm your destination, and begin your route.

If you are currently on a route guidance and you select a Recent Destination, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route” you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — FAVORITE DESTINATIONS

To route to a Favorite destination, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Favorites button on the touchscreen.



2. Press the button on the touchscreen with the name of the desired favorite destination and confirm the route with “Route To.” Press “GO!” to confirm the destination, and start the route guidance.

3. To delete a destination from the list, press the Gear Icon button next to the destination and select “Delete” in the pop-up menu on the touchscreen.
4. To save a favorite destination, press the Add Favorite button on the touchscreen and follow the steps to route a destination.
5. To display the options for a favorite destination press the Options button on the touchscreen that looks like a gear.

The following options are available for each favorite destination:

- Edit Name
- Phone Number
- Move Up
- Move Down
- Delete

If you are currently on a route guidance and you select a Favorite, the system will ask you to choose one of the following:

- Cancel Previous Route
- Add to Current Route

Within “Add to Current Route” you can add the destination to the current route, or set it as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — POINT OF INTEREST

To enter a destination by Point of Interest (POI), press the Where To? button from the Nav Main Menu, then press the POI button on the touchscreen.



The Point of Interest database allows you to select a destination from a list of locations and public places, or points of interest.

You have the following POIs to choose from:

- Search By Name
- POI Categories
- Restaurants
- Hotel/Motel
- Gas Stations
- Rest Area
- ATM/Bank



You can also change your POI search area, by pressing any of the category buttons on the touchscreen, and pressing the Search Area button. You will have the following options to change your search area:

- Around Here
- In a City or Zip Code
- Along Route (only available during route guidance)
- Around Destination (only available during route guidance)
- Around Next Waypoint



NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI — Search By Name

To select for a specific POI, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Point of Interest button on the touchscreen.



2. Press the Search By Name button on the touchscreen.



3. A keyboard will appear on the screen. Type in the POI that you want to search and press the List button on the touchscreen to display available items.
4. Press the desired POI and press “Route To” to confirm the route.
5. Press the GO! button to confirm the destination and begin the route.

If you are currently on a route guidance and you select a POI, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to the current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI — POI Categories

To select a POI type, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Point of Interest button on the touchscreen.



2. Press POI Categories button on the touchscreen.



You can search through the available POI categories to find your desired POI.

The available categories are:

- List All POIs
- ATM or Banking
- Automotive
- Coffee Shops
- Community
- Entertainment
- Gas Stations
- Highway Exit
- Hotels or Motels
- Local Services
- Medical
- Parking
- Parks and Recreation
- Restaurants
- Shopping
- Travel and Transportation



3. Select a category and then select a subcategory if necessary. Press the ABC button on the touchscreen to activate a keyboard with Alphabetic characters to search within the POI categories.
4. Press the desired POI and press "Route To" to confirm the route.
5. Press the GO! button to confirm the destination and begin the route.

If you are currently on a route guidance and you select a POI, the system will ask you to choose one of the following:

- Cancel Previous Route
- Add to Current Route

Within "Add to Current Route", you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI — Restaurant

To select a Restaurant POI, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Point of Interest button on the touchscreen.



2. Press the Restaurant button on the touchscreen.



You can search for a restaurant by the following categories, which are button tabs at the top of the screen:

- Name
 - Distance
 - ABC (Search)
3. Press the desired Restaurant and press Route To to confirm the route.
 4. Press the GO! button to confirm the destination and begin route.

If you are currently on a route guidance and you select a Restaurant, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add destination into your current route, or set the destination as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI — Hotel/Motel

To select a Hotel or Motel POI, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, press the Point of Interest button on the touchscreen.



2. Press the Hotel/Motel button on the touchscreen.



You can search for a hotel or motel by the following categories, which are button tabs at the top of the screen:

- Name
 - Distance
 - ABC (Search)
3. Press the desired hotel or motel and press Route To to confirm the route.
 4. Press the GO! button to confirm the destination and begin the route.

If you are currently on a route guidance and you select a Hotel or Motel, the system will ask you to choose one of the following:

- Cancel previous route
- Add to the Current Route

Within “Add to the Current Route”, you can add the destination to your current route, or set it as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI – Gas Stations

To select a Gas Station POI, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Point of Interest button on the touchscreen.



2. Press the Gas Station button on the touchscreen.



You can search for a gas station by the following categories, which are button tabs at the top of the screen:

- Name
- Distance
- ABC (Search)



3. Press the desired Gas Station and press Route To to confirm the route.
4. Press “GO!” to confirm destination and begin route.

If you are currently on a route guidance and you select a gas station, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add destination into your current route, or set the destination as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI — Rest Area

To select a Rest Area POI, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Point of Interest button on the touchscreen.



2. Press the Rest Area button on the touchscreen.



You can search for a rest area by the following categories, which are button tabs at the top of the screen:

- Name
 - Distance
 - ABC (Search)
3. Press the desired Rest Area and press “Route To” to confirm the route.
 4. Press the GO! button to confirm the destination and begin route.

If you are currently on a route guidance and you select a Rest Area, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add destination into your current route, or set the destination as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

POI — ATM/Banking

To select an ATM or Bank POI, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Point of Interest button on the touchscreen.



2. Press the ATM/Bank button on the touchscreen.



You can search for an ATM or Bank by the following categories, which are button tabs at the top of the screen:

- Name
- Distance
- ABC (Search)

3. Press the desired ATM or Bank and press "Route To" to confirm the route.
4. Press the GO! button to confirm the destination and begin the route.

If you are currently on a route guidance and you select an ATM or Bank POI, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within "Add to Current Route" you can add the destination to the current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — TRIPS

To route to a saved Trip, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Trips button on the touchscreen.



2. Press the button on the touchscreen with the name of the desired Trip and press the first destination in the list.
3. Confirm the route by pressing “Route To”, and then press “GO!” to confirm the destination and to start the route guidance.

To add a Trip, follow these steps:

1. Press the Create New Trip button on the touchscreen.
2. Press the Destination button on the touchscreen, and then press “Pick Destination”.
3. Press “Add Destination” or “Insert Final Destination” to add waypoints and destinations to your trip.
4. Choose from the following options to add a destination

- Address
- Recent
- Point of Interest
- Favorites
- Home
- Intersection
- GEO Coordinates
- Point on Map
- City Center

- Closest Cities
- Phone Number

NOTE:

Refer to the individual section of the chosen option for further information.

5. To save your Trip, you must press “Calculate Route” and press “Save”.
6. Your new Trip will appear on the Trips list.

To delete a Trip from the list, press the Gear Icon button on the touchscreen and then select “Delete” from the pop-up menu.

To display the options for a trip press the Gear Icon button on the touchscreen.

The following options are available for each trip:

- Edit Name
- Move Up
- Move Down
- Delete

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — INTERSECTION

To enter a destination by Intersection, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen, then press the Intersection button on the touchscreen.



2. Press the Spell City or Spell Street button to enter the desired city or street name.

NOTE:

If the system automatically recognizes the city, or street, it will populate a list of recognized cities, or streets. If not, press the List button to select from the available options.



3. If “Spell Street” was selected, you must select the correct street, you will then be asked to spell the intersecting street, and then the desired city.

NOTE:

If the system automatically recognizes the street, or city, it will populate a list of recognized streets/cities if not press the List button to select from the available options.

4. Press the Route To button on the touchscreen to confirm your route, and then press “GO!” to confirm the destination and begin your route.

If you are currently on a route guidance and you select a Intersection, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — POINT ON MAP

To enter a destination by Point on Map, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Point on Map button on the touchscreen.



2. Use the touchscreen to drag the center of the cross over the desired destination.



3. Once your cross is where you want it, press "Route To", or select "Places Nearby" to select a nearby destination. Then press "GO!" to confirm the destination and begin route guidance.

If you are currently on a route guidance and you select a Point on Map, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within "Add to Current Route", you can add the destination to the current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — HOME

To enter your Home Address, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Home button on the touchscreen.



If there is no Home Address entered, press "Yes" to enter it now.

2. To set your Home Address choose one of the following options:

NOTE:

Refer to the individual section of the chosen option for further information.

- Spell City
- Spell Street

Once you have generated your Home Address, you will be asked to Save it.

3. Press the Save Home button on the touchscreen to confirm your destination and begin the route to your Home Address.
4. This address will be saved as your Home Address and it can be accessed by pressing the Home button in the Where To? Menu.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

To delete a saved Home location (or other saved locations), so you can save a new Home location, press the Nav button on the touchscreen, and in the “Where To” screen, press “Edit Where To” and then press the

Home button on the touchscreen. Under the Manage screen, press the Reset Location button. A confirmation screen will appear asking, “Are you sure you want to reset this location?”. Press “Reset” to confirm the deletion. Set a new Home location by following the previous instructions.

WHERE TO? — WORK

To enter your Work Address, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Work button on the touchscreen.



If there is no Work Address entered, press “Yes” to enter it now.

2. To set your Work Address, choose one of the following options:

NOTE:

Refer to the individual section of the chosen option for further information.

- Spell City
- Spell Street

Once you have generated your Work Address, you will be asked to Save it.

3. Press the Save Work button on the touchscreen to confirm your destination and begin the route to your Work Address.
4. This address will be saved as your Work Address and it can be accessed by pressing the Work button in the Where To? Menu.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — CITY CENTER

To enter a destination by City Center, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the City Center button on the touchscreen.



2. Enter the name of the City you would like to route to.



3. Press the desired city from the list.
4. Press the Route To button on the touchscreen to confirm your route, and then press "GO!" to confirm your destination and begin your route.

If you are currently on a route guidance and you select a City Center, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within "Add to Current Route", you can add the destination to the current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — CLOSEST CITIES

To enter a destination by Closest City, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Closest Cities button on the touchscreen.



2. Press the desired city from the list.

3. Press the Route To button on the touchscreen to confirm your route and then press “GO!” to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Closest City, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — PHONE

To enter a destination by Phone number, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Phone Number button on the touchscreen.



2. Enter the Phone Number of the destination you would like to route to.
3. Press the desired destination from the list.

4. Press the Route To button on the touchscreen to confirm your route, and then press “GO!” to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Phone number destination, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to your current route, or you can set it as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.


WHERE TO? — GEO-COORDINATES

To route to a GEO-Coordinates, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the GEO-Coordinates button on the touchscreen.



2. Enter the Latitude by typing in the numbers. Use the dial pad to select specific numbers in the location shown.

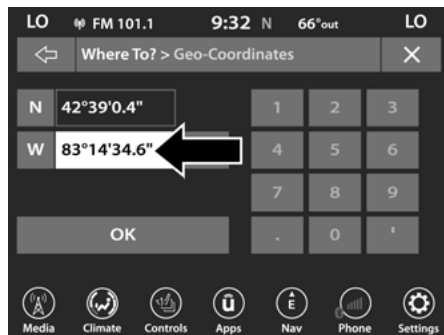

3. Press the OK button on the touchscreen.
4. Enter the Longitude by typing in the numbers. Use the dial pad to select specific numbers in the location shown.
5. Press "OK" to confirm the destination.
6. Press the Route To button on the touchscreen to confirm your route, and then press "GO!" to confirm your destination and begin your route.

If you are currently on a route guidance and you select a Geo-Coordinate, the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within "Add to Current Route", you can add the destination to your current route, or set it as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

WHERE TO? — TRAILS

When starting to drive a trail you want to record, follow these steps:

1. While in the Nav Main Menu, press the Where To? button on the touchscreen then press the Trails button on the touchscreen.



2. Press “Start Recording”.



3. When you want to end the recording of a route, press the Record button, and press “Yes” to confirm.

The trip you recorded will be added to the Recent Trails list.

BEFORE ROUTE GUIDANCE

Before confirming the destination with the GO! button on the touchscreen, it is possible to select options different from the default route settings.

- Route Options – Press the Route Options button on the touchscreen to display a list of options to alter your route. To make a selection press and release the desired setting.





- **Avoid** – Press the Avoid button on the touchscreen to choose road types to avoid during your route. To make a selection press and release the desired setting.

**NOTE:**

Since toll roads, tunnels and ferries are built for the purpose of shortening travel distances, avoiding these road types may increase distance and travel time.

- **Save** – Press the Save button on the touchscreen to save the destination as a Trip.

Press the GO! button on the touchscreen to confirm your destination and to start your route guidance.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.



VIEW MAP

VIEW MAP — MAIN MENU

Press the View Map button from the Nav Main Menu to display a map of your current position.



With the map displayed you have the following features available:

Menu

Press this button on the touchscreen to return to the Nav Main Menu.

Zoom In +/Zoom Out –

Press the Zoom In (+) or Zoom Out (–) buttons on the touchscreen to change the zoom level. Roads with lower functional classification are not shown in higher zoom levels. (e.g. residential streets, lightly-traveled county roads.)

Time of Arrival/Time to Destination/Distance (only during route guidance)

Press the button in the upper right area of the screen to the display items available. Press the desired option button on the touchscreen.

- Time of Arrival
- Time to Destination
- Distance

Turn List (only during route guidance)

Press the area in the upper center part of the screen that displays your next turn to see a Turn List for your current route.

Press a turn in the displayed Turn List for the following options:

- Show on Map
- Avoid Street

Options (only during route guidance)

Press the Options button on the touchscreen to display the following options. Press the desired button on the touchscreen.

- 2D North Up/Map View 2D/Map View 3D

Press this button on the touchscreen to scroll between the three viewing options.

- Repeat Directions

Press this button on the touchscreen to repeat the current voice prompt.

- Mute Guidance

Press this button on the touchscreen to mute the voice prompts.

- Stop Guidance

Press this button on the touchscreen to stop route guidance.

- Settings

Press this button on the touchscreen to view all the available settings. See “View Map — Settings” for more information.

Where Am I?

Press the Current City button, or button that displays the current street name to view the Where Am I? view.

Where Am I? displays the address and GEO-Coordinates of your current location.

- Press the Show GPS Info button on the touchscreen to view the GPS information.
- Press the Save button on the touchscreen to save the location in your Favorites.

You can press the back arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

VIEW MAP — SETTINGS

With the Map displayed, press the button on the bottom right of the map that has three horizontal lines on it. Then press the Settings button on the touchscreen.



The following Map Settings are available:



- **Map Setup** — Press this button on the touchscreen to display items to customize how your map is viewed. Settings – Map Setup for more information.
- **Speed Limit** — Press this button on the touchscreen to turn on/off speed limit warning announcements and to enter a pre-defined speed limit for your route.
- **Guidance** — Press this button on the touchscreen to display items to customize your route guidance. Settings – Guidance Options for more information.

• **Traffic** — Press this button on the touchscreen to set how you receive traffic information updates.

• **Units — If Equipped** — Press this button on the touchscreen to change the units display. Press the desired button on the touchscreen:

- U.S. (mile/feet)
- Imperial (mile/yard)
- Metric (meter)

• **GPS (DMS)** — Press this button on the touchscreen to change the GPS display. Press the desired button on the touchscreen:

- Decimal
- DMS
- DM

Copy device information to USB? —

If Equipped — Press this button on the touchscreen to copy your radio information to a USB jump drive through the available USB port.

Settings — Map Setup

With the Map displayed, press the button in the bottom right corner of the map that has three horizontal bars on it, on the touchscreen, then press the Settings button on the touchscreen and then the Map Setup button on the touchscreen.



The following Map Setup options are available:



Map View

Press this button on the touchscreen to change how the Map View is displayed. Press the desired button on the touchscreen:

- 3D (Must Select 3D City Models Or 3D Landmarks For 3D Map View To Display.)
- 2D
- 2D North Up

Map Appearance

Press this button on the touchscreen to select different themes for your map.

Display Current Street

Press this button on the touchscreen to turn on/off the current street display on the lower center of the Map View. Press and release the button on the touchscreen until a check mark appears, showing the setting has been selected.

Display Current City

Press this button on the touchscreen to turn on/off the current city display in the lower right of the Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

Destination Information

Press this button on the touchscreen to change the Destination Information that is displayed in the upper right corner of the Map View. Press the desired button on the touchscreen:

- Time of Arrival
- Time to Destination
- Distance

Auto Zoom

Press this button on the touchscreen to change how the Auto Zoom feature adjust the zoom level during guidance in Map View. Press the desired button on the touchscreen:

- Far
- Medium
- Low
- Off

Vehicle Icon

Press this button on the touchscreen to change the vehicle icon that is displayed while in Map View. Press Previous or Next to view the available icons. Press the back icon button on the touchscreen when you've made your selection.

Show POI Icons

Press this button on the touchscreen to show the selected Point of Interest icons while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

POI Categories

Press this button on the touchscreen to display the available Point of Interest icons you would like displayed while in Map View. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

Traffic Incidents – If Equipped

Press this button on the touchscreen to show Traffic Message Channel (TMC) Incidents while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

Speed and Flow

Press this button on the touchscreen to show the Speed and Flow of traffic while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

3D City Models

Press this button on the touchscreen to display 3D city models while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

3D Landmarks

Press this button on the touchscreen to display 3D landmarks while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected. Next, change Map View to 3D by selecting Navigation Options - Settings - Map Setup - Map View.

Digital Terrain Model

Press this button on the touchscreen to display the areas terrain while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

Park Areas

Press this button on the touchscreen to display Park Areas while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

Railroads

Press this button on the touchscreen to display Railroad tracks while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

City Areas

Press this button on the touchscreen to display City Areas while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

River Names

Press this button on the touchscreen to display River Names while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

You can press the back arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

Settings — Guidance

With the Map displayed, press the Options button on the touchscreen, then press the Settings button on the touchscreen and then the Guidance button on the touchscreen. You can also access this menu by pressing the Settings button in the lower right of the Nav Main Menu.

The following Guidance options are available:

- **Play Voice Guidance**

Press this button on the touchscreen to enable Voice Guidance Prompts during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- **Nav Guidance Volume**

Press the + or – button on the touchscreen to adjust the Nav Voice Prompt Volume.

- **Lane Recommendation**

Press this button on the touchscreen to enable Lane Recommendation during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- **Junction View**

Press this button on the touchscreen to enable Junction View during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- **TMC Route Mode (If Equipped)**

Press this button on the touchscreen to change how the Traffic Message Channel (TMC) Route Mode functions during route guidance. Select from:

- Automatic
- By Delay Time
- Manual
- Off

- **TMC Avoidance Types (If Equipped)**

Press this button on the touchscreen to display the available Traffic Message Channel (TMC) Avoidance Types you would like displayed while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

- **Sign Posts**

Press this button on the touchscreen to display the Sign Posts types you would like displayed while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

- **Route Progress Bar**

Press this button on the touchscreen to display the Route Progress Bar while in route guidance. Press and release the selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

- **Route Options**

Press this button on the touchscreen to determine which road types are OK to travel on while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

● Offer Highway Services

Press this button on the touchscreen to display Highway Services while in route guidance. Press and release the selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

● Highway Services

Press this button on the touchscreen to display the available Highway Service Types you would like displayed while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

● Use Real Time Traffic

Press this button on the touchscreen to display Real Time Traffic Updates while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

● Provide Detours on Traffic Events

Press this button on the touchscreen to display detours on traffic events while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

● Confirm Detours Manually

Press this button on the touchscreen to make it mandatory for you to have to confirm detours manually while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

● Provide Detours That Save More Than X Min.

Press this button on the touchscreen to allow the navigation system to display the available detours if they save you a predetermined amount of minutes, while in route guidance. Press and release the desired plus or minus button on the touchscreen until you have selected the desired number of minutes saved, from five minutes to one hour in increments of five minutes.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

HOME

NAVIGATING HOME

Refer to “Where To? — Home” in the “Where To?” section of this chapter for information.

WORK

NAVIGATING TO WORK

Refer to “Where To? — Work” in the “Where To?” section of this chapter for information.

INFORMATION

INFORMATION — MAIN MENU

From the Nav Main Menu, press the Information button on the touchscreen and select one of the following options to view additional information:

- Traffic
- Weather
- Where Am I?
- Country Info



INFORMATION — SIRIUSXM® TRAFFIC PLUS

To select SiriusXM® Traffic Plus information, follow these steps:

1. While in the Nav Main Menu, press the Information button on the touchscreen.
2. Press the Traffic button on the touchscreen.

Traffic displays detailed traffic information, refer to SiriusXM® Traffic Plus in this section for further information.



INFORMATION — WEATHER

To select Weather information, follow these steps:

1. While in the Nav Main Menu, press the Information button on the touchscreen.
2. Press the Weather button on the touchscreen.

Weather displays detailed weather information about your current position.



INFORMATION — WHERE AM I?

To select “Where Am I?” information, follow these steps:

1. While in the Nav Main Menu, press the Information button on the touchscreen.
2. Press the Where Am I? button on the touchscreen.

Where Am I? displays the address and GEO Coordinates of your current location.

3. Press the Show GPS Info button on the touchscreen to view the GPS information.
4. Press the Save button on the touchscreen to save the location in your Favorites.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.



INFORMATION — COUNTRY INFO

To select “Country Info” information, follow these steps:

1. While in the Nav Main Menu, press the Information button on the touchscreen.
2. Press the Country Info button on the touchscreen.

3. Select the desired country on the touchscreen. Information, such as average speed limits and specific phone number country codes, will be provided about the selected country.



EMERGENCY

EMERGENCY — MAIN MENU

From the Nav Main Menu, press the Emergency button on the touchscreen and press one of the following options to search and route to a specific location.

- Hospital – Search and route to a Hospital close to your current location
- Police – Search and route to a Police Station close to your current location
- Fire Department – Search and route a Fire Department close to your current location



Press the Where Am I? button on the touchscreen to display your exact current location.

Press the Save button on the touchscreen to save your current location in Favorites.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

EMERGENCY — HOSPITAL

To search for a Hospital close to your current location, follow these steps:

1. While in the Nav Main Menu, press the Emergency button on the touchscreen.
2. Press the Hospital button on the touchscreen.



You can search for a Hospital by the following categories, which are button tabs at the top of the screen:

- Name
- Distance
- ABC (Search)

NOTE:

In case of emergency, please contact the facility to verify their availability before proceeding.

3. Press the desired Hospital and press "Route To" to confirm your route, and then press "GO!" to confirm the destination and begin route guidance.

If you are currently on a route guidance and you select a Hospital the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to your current route, or set it as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

EMERGENCY — POLICE

To search for a Police Station close to your current location, follow these steps:

1. While in the Nav Main Menu, press the Emergency button on the touchscreen.
2. Press the Police button on the touchscreen.



You can search for a Police Station by the following categories, which are button tabs at the top of the screen:

- Name
- Distance
- ABC (Search)

NOTE:

In case of emergency, please contact the facility to verify their availability before proceeding.

3. Press the desired Police Station and press “Route To” to confirm your route, and then press “GO!” to confirm your destination and begin route guidance.

If you are currently on a route guidance and you select a Police Station the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to your current route, or set it as your final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

EMERGENCY — FIRE DEPARTMENT

To search for a Fire Department close to your current location, follow these steps:

1. While in the Nav Main Menu, press the Emergency button on the touchscreen.
2. Press the Fire Department button on the touchscreen.



You can search for a Fire Department by the following categories, which are button tabs at the top of the screen:

- Name
- Distance
- ABC (Search)

NOTE:

In case of emergency, please contact the facility to verify their availability before proceeding.

3. Press the desired Fire Department and press “Route To” to confirm your route, and then press “GO!” to confirm your destination and begin route guidance.

If you are currently on a route guidance and you select a Fire Department the system will ask you to choose one of the following:

- Cancel previous route
- Add to Current Route

Within “Add to Current Route”, you can add the destination to your current route, or set it as the final destination.

NOTE:

You can press the Back Arrow button on the touchscreen to return to the previous screen or the X button on the touchscreen to exit.

MAP UPDATES

The map data available in your vehicle is the most up-to-date information that was available when your vehicle was built. Map data is updated periodically as map information changes. Follow the steps below if you wish to obtain an update for your vehicle.

1. Please visit chryslergroup.navigation.com to obtain your map update. At the top of the page, click the brand of your vehicle. Then, at the drop down menu, select your vehicle model and its model year. You will then be directed to a page that will let you know if your vehicle needs a map date or not.
2. Or, visit DriveUconnect.com (US Residents) or DriveUconnect.ca (Canadian Residents) and follow these steps:
 - Under the “Help & Support” tab, select your vehicle brand, model, and year. Then, click “SYSTEM UPDATES.” Simply follow the steps and place your order.

3. Or, if you wish, you can also visit your dealer or place a phone call to request your Map Update. US/CAN General Consumer Support:

888-628-6277

FCA US LLC Dealer Garmin Support:

877-628-4480

FCA US LLC Consumer FreshMaps:

866-422-8171

SIRIUSXM® TRAFFIC PLUS

Don't drive through traffic. Drive around it.

Avoid congestion before you reach it. By enhancing your vehicle's navigation system with the ability to see detailed traffic information, you can pinpoint traffic incidents, determine average traffic speed and estimate travel time along your route. Since the service is integrated with a vehicle's navigation system, SiriusXM® Traffic Plus can help drivers pick the fastest route based on traffic conditions.

1. Detailed information on traffic speed, accidents, construction, and road closings.
2. Traffic information from multiple sources, including police and emergency services, cameras and road sensors.
3. Coast-to-coast delivery of traffic information.
4. View conditions for points along your route and beyond.

SIRIUSXM® TRAVEL LINK

In addition to delivering over 160 channels of the best sports, entertainment, talk, and commercial-free music, SiriusXM® offers premium data services that work in conjunction with compatible navigation systems. SiriusXM® Travel Link brings a wealth of useful information into your vehicle and right to your fingertips.

- **Weather** — Check variety of local and national weather information from radar maps to current and five day forecast.
- **Fuel Prices** — Check local gas and diesel prices in your area and route to the station of your choice.

- **Sports Scores** — In-game and final scores as well as weekly schedules.
- **Movie Listings** — Check movie theaters and listings in your area and route to the theater of your choice.

SiriusXM® Travel Link feature is completely integrated into your vehicle. A few minutes after you start your vehicle, Travel Link information arrives and updates in the background. You can access the information whenever you like, with no waiting.

- To access SiriusXM® Travel Link, press the Apps button on the touchscreen, then the SiriusXM® Travel Link button on the touchscreen.

NOTE:

SiriusXM® Travel Link requires a subscription, sold separately after the trial subscription included with your vehicle purchase.

UCONNECT + SIRIUSXM GUARDIAN™ — IF EQUIPPED (4C/4C NAV ONLY)

INTRODUCTION TO SIRIUSXM GUARDIAN™

One of the many benefits of your vehicle's Uconnect system is that you can now take advantage of SiriusXM Guardian™ connected vehicle services. To unlock the full potential of SiriusXM Guardian™ in your vehicle, you first need to activate SiriusXM® services.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

SiriusXM Guardian™ involves the collection, transmission and use of data from your vehicle. Refer to “Data Collection and Privacy” in this section for further information.

WHAT IS SIRIUSXM GUARDIAN™?

SiriusXM Guardian™ uses an embedded device in the Uconnect system installed in your vehicle, which receives GPS signals and communicates with the SiriusXM Guardian™ Customer Care center via wireless and landline communications networks. Depending on the type of device in your vehicle, some SiriusXM Guardian™ services require an operable LTE (voice/data) or 3G or 4G (data) network compatible with your device. SiriusXM Guardian™ is available only on equipped vehicles purchased within the continental United States, Alaska, Hawaii, Puerto Rico and Canada.

NOTE:

Certain SiriusXM Guardian™ services are dependent on a properly installed and operational Uconnect device, cellular network availability that is compatible with the device in your vehicle, and GPS network availability. Not all features of SiriusXM Guardian™ are available everywhere at all times, particularly in remote or enclosed areas. Other factors outside the control of SiriusXM Guardian™ that may limit or prevent service delivery are hills, structures, buildings, tunnels, weather, damage to the electrical system or other important parts of your vehicle, network congestion, civil disturbances, actions of third parties or the government, Internet failure, and/or the physical location of your vehicle, such as in an underground parking structure or under a bridge.

For a complete list of available SiriusXM Guardian™ services, please visit:

- US residents: www.driveuconnect.com/sirius-xm-guardian.
- Canadian residents: www.siriusxm.ca/guardian-v1/.

Not all SiriusXM Guardian™ features are available for all models.

SiriusXM Guardian™ provides:

- The ability to remotely lock/unlock your doors using the SiriusXM Guardian™ App, by calling SiriusXM Guardian™ Customer Care, or by logging on to your owner site at www.mopar.com/en-us/care/owners-manual.html (US Residents) or www.mopar.ca (Canadian Residents). You can also remotely start your vehicle (if equipped) from virtually anywhere and activate your horn and lights via the app or owner site.
- Send & Go capability with the SiriusXM Guardian™ App. Use the SiriusXM Guardian™ App to easily search, map and send your locations directly to your Uconnect Navigation.

- The ability to locate your vehicle, when you forget where you parked, using the Vehicle Finder function of the SiriusXM Guardian™ App.

Before you drive, familiarize yourself with the easy-to-use Uconnect System and SiriusXM Guardian™ services.

The ASSIST and SOS Call Buttons On Your Rearview Mirror Or Overhead Console

The ASSIST Button is used for contacting Roadside Assistance, Vehicle Care, Uconnect Care, and SiriusXM Guardian™ Customer Care. The SOS Call button connects you directly to SiriusXM Guardian™ Customer Care for assistance in an emergency.

INCLUDED TRIAL PERIOD FOR NEW VEHICLES

Your new vehicle may come with an included trial period for use of the SiriusXM Guardian™ services starting on the date of vehicle purchase. To get started with your trial, enrollment in SiriusXM Guardian™ is required. The Uconnect 4C/4C NAV includes a trial* of SiriusXM Guardian™ services from your date of purchase.

- * Included Trials apply to new vehicles only.

There are a few quick ways for you to identify your radio. For a more complete description, please refer to DriveUconnect.com (US Residents) or DriveUconnect.ca (Canadian Residents).

- Both the Uconnect 4C and Uconnect 4C NAV feature a large 8.4-inch full color touchscreen.
- Only the Uconnect 4C NAV will have Navigation. You will find the Nav icon on the bottom menu bar of the touchscreen, or listed under the Uconnect Apps icon.

FEATURES AND PACKAGES

After the trial period, you must purchase a subscription to continue your services by visiting the SiriusXM Guardian™ Store or calling a SiriusXM Guardian™ Customer Care agent at:

- US residents call: 1-844-796-4827
- Canadian residents call: 1-877-324-9091

GETTING STARTED WITH SIRIUSXM GUARDIAN™

ACTIVATION

To unlock the full potential of SiriusXM Guardian™ in your vehicle, you must activate your SiriusXM Guardian™ services.

1. Press the Apps icon on the bottom of your in-vehicle touchscreen.
2. Select the Activate Services icon from your list of apps.
3. Select “Customer Care” to speak with a SiriusXM Guardian™ Customer Care agent who will activate services in your vehicle, or select “Enter Email” to activate on the web.

For further information, please visit:

- US residents visit: www.driveuconnect.com/sirius-xm-guardian
- Canadian residents visit: www.siriusxm.ca/guardian-v1/

DOWNLOAD THE UCONNECT APP

Once you have activated your services, you're only a few steps away from using remote commands.



To use the Uconnect app:

- Once you have activated your SiriusXM Guardian™ services, download the Uconnect app to your mobile device. Use your Owner Account login and password to open the app.
- Once on the “Remote” screen, you can begin using Remote Door Lock/Unlock, Remote Vehicle Start, and activate your horn and lights remotely, if equipped.

- Press the Location button on the bottom menu bar of the app to bring up a map to locate your vehicle or send a location to your Uconnect Navigation, if equipped.
- Press the “Settings” side menu in the upper left corner of the app to bring up app settings and access the Assist Call Centers.

NOTE:

For further information:

- US residents visit: www.driveuconnect.com/sirius-xm-guardian
- Canadian residents visit: www.siriusxm.ca/guardian-v1/

USING YOUR OWNER'S SITE

Your Owner's Site website www.mopar.com/en-us/care/owners-manual.html (US Residents), or www.mopar.ca (Canadian Residents) provides you with all the information you need, all in one place. You can track your service history, find recommended accessories for your vehicle, watch videos about your vehicle's features, and easily access your user guides and manuals. It is also where you can manage your SiriusXM Guardian™ account.

This section will familiarize you with the key elements of the website that will help you get the most of your SiriusXM Guardian™ system.

- **Edit Profile:**

To manage the details of your SiriusXM Guardian™ account, such as your contact information, password and SiriusXM Guardian™ PIN, click on the “Edit Profile” button to access the details of your account.

- **Connected Services Status:**

This statement will indicate your SiriusXM Guardian™ equipped vehicle.

- **Remote Commands:**

For vehicles with an active SiriusXM Guardian™ subscription, press one of these icons and enter your four-digit SiriusXM Guardian™ Security PIN to remotely start (if equipped), lock/unlock doors or sound the horn and lights.

Editing Your Notifications

Notifications are an important element of your SiriusXM Guardian™ account. For example, any time you use your remote services (such as Remote Door Unlock), or if your security alarm is set off, you can elect to receive a text message, push notifications, and/or E-mail to notify you of the event. To set up the notifications, please follow these instructions.

1. Log on to your Owner’s Account at www.mopar.com/en-us/care/owners-manual.html (US Residents), or www.mopar.ca (Canadian Residents).
2. Click the Edit Profile button.
3. Once there, you can edit Notification Preferences.
4. You can enter one mobile phone and/or E-mail address to notify you, and you can customize the types of messages.

USING SIRIUSXM GUARDIAN™

SOS CALL

CAUTION!

Some SiriusXM Guardian™ services, including SOS Call and Roadside Assistance Call will NOT work without an operable LTE (voice/data) or 3G or 4G (data) network connection compatible with your device.

Access To Emergency Services At The Push Of A Button

6



M1001000819US

Buttons On The Rearview Mirror

- 1 — SOS Button
- 2 — Assist Button



Buttons On The Overhead Console

1 — Assist Button

2 — SOS Button

SiriusXM Guardian™ In-Vehicle Assistance Features

With SiriusXM Guardian™, your vehicle has on-board assistance features located on the rear view mirror designed to enhance your driving experience if you should ever need assistance or support.

Description

SOS Call is a feature that, at the push of a button, can contact emergency services. It's a convenient way to get in contact with a SiriusXM Guardian™ Customer Care agent in the event of an emergency. When the connection between the vehicle and the live agent is made, your vehicle will automatically transmit location information to SiriusXM Guardian™ Customer Care. In the event of a minor collision, medical or any other emergency, press the SOS button to be connected to a call center agent who can send emergency assistance to your vehicle's location.

NOTE:

Certain SiriusXM Guardian™ services are dependent on a properly installed and operational Uconnect system, cellular network availability that is compatible with the device in your vehicle, and GPS network availability. Not all features of SiriusXM Guardian™ are available everywhere at all times, particularly in remote or enclosed areas.

How It Works

1. Push the SOS Call button on the Rearview Mirror; the indicator light will turn green indicating a call has been placed.

NOTE:

- In case the SOS Call button is accidentally pushed, there is a 10 second delay before the SOS call is placed. The system will verbally alert you that a call is about to be made. To cancel the SOS Call connection, push the SOS Call button on the Rearview Mirror or press the Cancel button on the touchscreen within 10 seconds.
 - During an SOS Call, the Bluetooth® paired phone is disconnected so incoming or outgoing calls will go through mobile versus the hands-free system which is not available due to the SOS Call.
2. Once a connection between the vehicle and a SiriusXM Guardian™ Customer Care agent is made, the SOS Call system will connect your vehicle to a SiriusXM Guardian™ Customer Care agent who will stay on the line with you.

NOTE:

Calls between the vehicle occupants and the SiriusXM Guardian™ Customer Care center may be recorded or monitored for quality assurance purposes. Through your enrollment in and use of the SiriusXM Guardian™ services, you consent to being recorded.

SOS Call System Limitations

Vehicles that have been purchased in the US and that travel into Mexico and Canada may have limited services. In particular, responses to SOS calls or other emergency services may be unavailable or very limited. Vehicles purchased outside the United States and Canada are unable to receive SiriusXM Guardian™ services.

If the SOS Call system detects a malfunction, any of the following may occur at the time the malfunction is detected:

- The Rearview Mirror light will continuously be illuminated red.
- The screen will display the following message “Vehicle phone requires service. Please contact your dealer.”

- An In-Vehicle Audio message will state “Vehicle phone requires service. Please contact your dealer.”

Even if the SOS Call system is fully functional, factors beyond FCA US LLC’s control may prevent or stop SOS Call system operation. These include, but are not limited to, the following factors:

- The ignition key has been removed from the ignition and the delayed accessories mode is active.
- The ignition key is in OFF position.
- The vehicle’s electrical systems are not intact.
- The SOS Call system software and/or hardware is damaged during a vehicle crash.
- The vehicle battery loses power or becomes disconnected during a vehicle crash.
- LTE (voice/data) or 3G or 4G (data) coverage and/or Global Positioning Satellite signals are unavailable or obstructed.
- Network congestion.
- Weather.

- Buildings, structures, geographic terrain, or tunnels.

If your vehicle loses battery power for any reason (including during or after an accident) the SOS Call System, among other vehicle systems, will not operate.

Requirements

- This feature is available only on vehicles sold in the US
- Vehicle must be properly equipped with the SiriusXM Guardian™ System. Vehicle must be registered with SiriusXM Guardian™ and have an active subscription that includes the applicable feature.
- Vehicle must have an operable LTE (voice/data) or 3G or 4G (data) network connection compatible with your device.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.

WARNING!

- Never place anything on or near the vehicle's LTE (voice/data) or 3G or 4G (data) and GPS antennas. You could prevent LTE (voice/data) or 4G (data) and GPS signal reception, which can prevent your vehicle from placing an emergency call.
- Do not add any aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the SOS Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. IF YOUR VEHICLE LOSES POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT), NEITHER THE UCONNECT APPS NOR THE SIRIUSXM GUARDIAN SERVICES WILL NOT OPERATE.

*(Continued)***WARNING! (Continued)**

- The Occupant Restraint Controller (ORC) turns on the Air Bag Warning Light on the instrument panel if a malfunction in any part of the air bag system is detected. If the Air Bag Warning Light is illuminated, the air bag system may not be working properly and the SOS Call system may not be able to send a signal to the SiriusXM Guardian™ Customer Care center. If the Air Bag Warning Light is illuminated, have an authorized dealer service your vehicle immediately.
- Ignoring the Rearview Mirror light could mean you will not have SOS Call services if needed. If the Rearview Mirror light is illuminated, have an authorized dealer service the SOS Call system immediately.
- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from a SiriusXM Guardian™ Customer Care agent. All occupants should exit the vehicle immediately and move to a safe location.

*(Continued)***WARNING! (Continued)**

- Failure to perform scheduled maintenance and regularly inspect your vehicle may result in vehicle damage, accident or injury.

FAQs

- 1. What Happens If I Accidentally Push The SOS Call Button On The Mirror?** You have 10 seconds after pushing the SOS Call button to cancel the call. To cancel the call, either push the SOS Call button again, or press the Cancel button on the in-vehicle touchscreen.
- 2. What Type Of Information Is Sent When I Use The SOS Call Button From My Vehicle?** Certain vehicle information, such as make and model, is transmitted along with the last known GPS location.

NOTE:

Calls between vehicle occupants and the SiriusXM Guardian™ Customer Care center may be monitored or recorded for quality assurance. By using the service, you consent to the collection and sharing of this information.

3. When Could I Use The SOS Call Button?

You can use the SOS Call button to make a call if you or someone else needs emergency assistance.

ROADSIDE ASSISTANCE CALL

Easy Call To Roadside Assistance 24/7 Using ASSIST Button



SiriusXM Guardian™ In-Vehicle Assistance Features

With SiriusXM Guardian™, your vehicle has on-board assistance features located on the rear view mirror designed to enhance your driving experience if you should ever need assistance or support.

Description

Vehicles equipped with the SiriusXM Guardian™ system feature will contain an ASSIST button on the rear view mirror. Once your SiriusXM Guardian™ services have been activated, the ASSIST button can connect you directly to one of four important care centers for support.

- **Roadside Assistance Call** — If you get a flat tire, or need a tow, you'll be connected to someone who can help anytime. Additional fees may apply. (See the Disclaimers section below for more details.)
- **SiriusXM Guardian™ Customer Care** — Contact the SiriusXM Guardian™ Customer Care call center to activate your services, renew after your trial has expired, and for in-vehicle support for your SiriusXM Guardian™ system or help answering any general questions surrounding your connected services.
- **Uconnect Care Call** — In-vehicle support for all non-connected Uconnect system features, such as radio and Bluetooth® connections.
- **Vehicle Care Call** — Total support for your vehicle.

How It Works

You or someone in the vehicle simply presses the ASSIST button located on the rear view mirror and you will be presented with your ASSIST options on the touchscreen. Make your selection by pressing the touchscreen.

Requirements

- This feature is available only on vehicles sold in the U.S.
- Vehicle must be properly equipped with the SiriusXM Guardian™ system.
- Vehicle must have an operable LTE (voice/data) or 3G or 4G (data) network connection.
- Vehicle must be registered with SiriusXM Guardian™ and have an active subscription that includes the applicable feature.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.

Disclaimers

If Roadside Assistance Call is provided to your vehicle, you agree to be responsible for any additional roadside assistance service costs that you may incur. In order to provide SiriusXM Guardian™ services to you, we may record and monitor your conversations with Roadside Assistance Call, Vehicle Care, Uconnect Care, or SiriusXM Guardian™ Customer Care, whether such conversations are initiated through the SiriusXM Guardian™ services in your vehicle, or via a landline or mobile device, and may share information obtained through such recording and monitoring in accordance with regulatory requirements. You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.

FAQs

What Is The Phone Number For Roadside Assistance Call?

The phone number is:

US: 1-800-521-2779

Canada: 1-800-363-4869

If I Am Subscribed To SiriusXM Guardian™, Does It Cover Towing Or Other Expenses Incurred By Using Roadside Assistance?

No, however your new vehicle may include Roadside Assistance Call services.

SEND & GO

Use the mobile app to easily search and send your locations directly to your vehicle navigation system. It's easy to enter and great for quick access on the go.

Description

The Send & Go feature of the Uconnect App allows you to search for a destination on your mobile device, and then send the route to your vehicle's navigation system.

How It Works

1. Use the SiriusXM Guardian™ App to find the destination.
There are multiple ways to find a destination. After selecting the "Location" tab at the bottom of the App, browse through one of the categories provided, or type the name or keyword in the search box at the top of the App. You can also select categories such as Favorites or Contact List.

2. Select your destination from the list that appears. Location information will then be displayed on the map.

From this screen, you will be able to:

- View the location on a map.
 - See the distance from your current location.
 - Send the address by selecting "Send to Vehicle" from the mobile app.
3. Send the destination to the Uconnect Navigation in your vehicle. You can also call the destination by pressing the Call button.
 4. Confirm your destination inside your vehicle by pressing the "Send To Vehicle" option on the pop-up that appears on the radio touchscreen.

Requirements

- Vehicle must be properly equipped with the Uconnect system and a Uconnect 4C or Uconnect 4C NAV unit.
- Vehicle must have an operable LTE (voice/data) or 3G or 4G (data) network connection compatible with your device.
- Vehicle must be registered with SiriusXM Guardian™ and have an active subscription that includes the applicable feature.

FAQs

1. **How long does it take to send the route and destination to my vehicle?** Depending on various conditions, it can take up to three minutes for the request to get through to your vehicle.
2. **Can I cancel a route I sent to my vehicle?** Yes, once you enter your vehicle, and start the engine, the pop-up message stating that you have a new route will appear. There is an exit button on the pop-up that will cancel the route if selected.

3. **Can I select a different route than the most recent one I sent to my vehicle?** Yes, once you enter the vehicle, and start the engine, the pop-message has a “Locations” option. Once “Locations” is selected, you can choose from a list of recently sent destinations.

VEHICLE FINDER

Forget where you parked your car? We'll help you locate it! Simply use the SiriusXM Guardian™ App on your smartphone and you'll be on track.

Description

The Vehicle Finder feature of the Uconnect App allows you to find the location of your stationary vehicle when you have lost it. You can also sound the horn and flash the lights to make finding your vehicle even easier.

How It Works

Use the SiriusXM Guardian™ App to find the location of your vehicle.

1. Select the “Location” tab at the bottom of the App. Then touch the Vehicle icon to find your vehicle.
2. Choose how you want to view the information by pressing the layers button. Three options will appear:
 - Map
 - Satellite
 - Hybrid
3. You can also select the “Person” icon to see your location.
4. Once the vehicle has been located, you can map a route to your vehicle.

NOTE:

- You are responsible for using remote services that sound horn and flash lights in accordance with the laws, rules and ordinances in effect at the location of your vehicle.
- Certain SiriusXM Guardian™ services are dependent on a properly installed and operational Uconnect system, cellular network availability that is compatible with the device in your vehicle, and GPS network availability. Not all features of SiriusXM Guardian™ are available everywhere at all times, particularly in remote or enclosed areas.

Requirements

- Vehicle Finder will not work while vehicle is in motion.
- Vehicle must be properly equipped with the Uconnect System.
- Vehicle must have an operable LTE (voice/data) or 3G or 4G (data) network connection compatible with your device.

- Vehicle must be registered with SiriusXM Guardian™ and have an active subscription that includes the applicable feature.
- Vehicle ignition must have been turned on within 14 days.

FAQs

1. **Can someone else locate my vehicle?** Your vehicle may be located by anyone who has your PIN and access to your account. It is your responsibility to guard your PIN accordingly. See the Uconnect and SiriusXM Guardian™ terms of service for more information.
2. **How long does it take to sound my horn and flash the lights?** Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle.
3. **How do I turn off the horn and lights after I turn them on?** If you are close enough to the vehicle, you can use the Key Fob to turn off the horn and lights by pressing the red “Panic” button.

4G Wi-Fi HOTSPOT — IF EQUIPPED

WiFi
Hotspot

Create A 4G Wi-Fi Hotspot For Use In Your Vehicle**Description**

4G Wi-Fi Hotspot is an in-vehicle service that connects your device to the AT&T LTE (voice/data) or 4G (data) network that is ready to go where ever you are. After you've made your purchase, turn on your device's Wi-Fi and connect your devices.

WARNING!

The driver should NEVER use the 4G Wi-Fi Hotspot while driving the vehicle. Failure to do so may result in an accident involving serious injury or death.

- Enables all your passengers to be simultaneously connected to the web.
- Connect several devices at one time.
- Any Wi-Fi-enabled device — such as a laptop or any other portable enabled media can connect over your private in-vehicle network.

- A high-speed, secured connection lets anyone on your private network access the Web — great for working and relaxing.

How It Works

The 4G Wi-Fi Hotspot feature provides the vehicle passengers with an internet access hotspot in the vehicle, using the radio as an access point. The hotspot will allow Wi-Fi enabled in-vehicle devices (such as a laptop or any other portable enabled media device) to wirelessly connect to the internet. Uconnect offers a complimentary 3-month trial period that includes 1GB of total data. The trial can be activated any time within the first year of new vehicle ownership.

Give it a Try!

Purchase a subscription to the 4G Wi-Fi Hotspot feature 3 different ways:

1. From your in-vehicle touchscreen select the 4G Wi-Fi Hotspot App, and press the “How To Purchase” button and follow the on-screen instructions.
2. Log onto your owner site and click the link to the AT&T portal to get setup.

3. **For existing Connect Car customers:** Press the ASSIST button located on your rearview mirror (if equipped) to be routed to an AT&T Customer Care agent who will assist you.

Once the 4G Wi-Fi Hotspot is purchased you can change its name and the password by selecting the 4G Wi-Fi App and pressing the “Setup Wi-Fi Hotspot” button. You can also view the connected devices from the app screen by pressing the “View Connected Devices” button.

NOTE:

A SiriusXM Guardian™ subscription is not required in order to purchase and use the 4G Wi-Fi Hotspot.

WARNING!

Always drive safely with your hands on the steering wheel and obey all applicable laws. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications in this vehicle when it is safe to do so. Failure to do so may result in an accident involving in serious injury or death.

STOLEN VEHICLE ASSISTANCE

Description

If your vehicle is stolen, the SiriusXM Guardian™ Customer Care agent may be able to locate the stolen vehicle and work with law enforcement to help recover it. You should contact local law enforcement immediately to file a stolen vehicle report. Once the report has been filed with law enforcement, you may notify SiriusXM Guardian™ Customer Care that you have filed the report. The SiriusXM Guardian™ Customer Care agent will ask for the stolen vehicle report number issued by local law enforcement. The vehicle must have an operable LTE (voice/ data) or 3G or 4G (data) network connection and must be registered with SiriusXM Guardian™ with an active subscription that includes this feature. In addition, the vehicle must be within the United States.

How It Works

1. If your vehicle is stolen, contact local law enforcement as soon as possible. They will work with you to file a stolen vehicle report.
2. Next, inform SiriusXM Guardian™ Customer Care that your vehicle has been stolen. SiriusXM Guardian™ Customer Care can be reached by:
 - U.S. residents calling: 1-844-796-4827
 - Canadian residents calling: 1-877-324-9091

The SiriusXM Guardian™ Customer Care Agent will ask for the stolen vehicle report number (as issued by your local law enforcement). If you have downloaded the SiriusXM Guardian™ App, you can push the Settings button on your device, select “ASSIST Call Centers,” and then select “SiriusXM Guardian™ Customer Care” to make the call.

3. SiriusXM Guardian™ Customer Care will authenticate that you are the owner of the vehicle and contact the law enforcement with whom you filed the stolen vehicle report.
4. SiriusXM Guardian™ Customer Care will work with your local law enforcement to locate the vehicle. You will be contacted by law enforcement if your vehicle is recovered. While the investigation is ongoing, you should also contact your insurance company to inform it of the situation.

Requirements

- Vehicle must be properly equipped with the Uconnect System.
- Vehicle must have an operable LTE (voice/data) or 3G or 4G (data) network connection compatible with your device.
- Vehicle must be registered with SiriusXM Guardian™ and have an active subscription that includes the applicable feature.

NOTE:

Certain SiriusXM Guardian™ services are dependent on a properly installed and operational Uconnect system, cellular network availability that is compatible with the device in your vehicle, and GPS network availability. Not all features of SiriusXM Guardian™ are available everywhere at all times, particularly in remote or enclosed areas.

FAQs

1. **What to do if my vehicle is stolen?** First, call local law enforcement as soon as possible. They will work with you to file a stolen vehicle report. Then SiriusXM Guardian™ Customer Care can be contacted by:
 - U.S. residents calling: 1-844-796-4827
 - Canadian residents calling: 1-877-324-9091

Inform SiriusXM Guardian™ Customer Care that your vehicle has been stolen and that you have filed a stolen vehicle report with law enforcement. SiriusXM Guardian™ Customer Care will help you through the process.

2. **Can someone locate my vehicle?** To enhance your privacy, and the privacy of others using your vehicle, a stolen vehicle police report is required for you to activate this service. You must involve local law enforcement to have SiriusXM Guardian™ locate your vehicle. We may also locate the vehicle for other law enforcement or government agencies, subject to a valid court order telling SiriusXM Guardian™ to do so. We will also provide the service for FCA entities to locate a vehicle that you have purchased through them.

3. **How will I know if my vehicle is recovered?** After you provide the SiriusXM Guardian™ Customer Care agent with the stolen vehicle report, the agent will work together with law enforcement to try to locate your vehicle. If your vehicle is recovered, you will be contacted by law enforcement.

4. **Can SiriusXM Guardian™ lower my insurance rates?** Some insurance providers offer lower rates on vehicles equipped with systems that can deter auto theft. When shopping for insurance, be sure to inform the insurance provider of your

SiriusXM Guardian™ services subscription, to find out if the insurance provider can offer you a lower rate.

NOTE:

Neither FCA nor SiriusXM® are insurance companies, and SiriusXM Guardian™ is not an insurance product. You are responsible for obtaining insurance coverage for your vehicle and yourself.

REMOTE DOOR LOCK/UNLOCK

Lock Or Unlock Your Vehicle From Virtually Anywhere Using Your Computer, Mobile Device, Or SiriusXM Guardian™ Customer Care App.

Description

The Remote Door Lock/Unlock feature provides you the ability to lock or unlock the door on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of three ways:

- Using the Uconnect App from a compatible device
- From the your Owner's Site
- Contacting SiriusXM Guardian™ Customer Care

How It Works

Uconnect App:

1. Download the Uconnect App to a compatible device and login using your username and password.
2. To lock the doors, push the button with the Closed Lock icon; to unlock the doors push the button with the Open Lock icon.
3. A pop-up screen will appear asking for your SiriusXM Guardian™ Security PIN (this is the same four-digit code established when you activated your SiriusXM Guardian™ system). Enter the SiriusXM Guardian™ Security PIN on the keypad.
4. The Uconnect App will confirm if your command was sent (or not).
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will let you know if the command was received by your vehicle.

Your Owner's Site website:

1. Log on to your Owner's Site using the username and password you used when activating your SiriusXM Guardian™ system.

NOTE:

If you forgot your username or password, links are provided on the website to help you retrieve them.

2. If you have more than one vehicle registered into your Owner's Site, select the vehicle you want to send the command by clicking on its image along the top.
3. Push the Door Lock icon next to your vehicle information.

ⓘ Your vehicle is ready to accept commands. There may be a slight delay in execution.



4. You will then be asked to enter your SiriusXM Guardian™ Security PIN (this is the same four-digit code established when you activated your SiriusXM Guardian™ system). Please enter your SiriusXM Guardian™ Security PIN.
5. A message will appear on the screen to let you know if the command has been sent to your vehicle.

SiriusXM Guardian™ Customer Care:

1. If you need to unlock the doors of your vehicle, contact SiriusXM Guardian™ Customer Care by:
 - U.S. residents calling: 1-844-796-4827
 - Canadian residents calling: 1-877-324-9091
2. For security purposes, the SiriusXM Guardian™ Customer Care agent will verify your identity by asking for your four-digit SiriusXM Guardian™ Security PIN.

3. After providing your SiriusXM Guardian™ Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

NOTE:

Anyone with access to your PIN may request Remote Door Lock/Unlock. It is your responsibility to protect your PIN appropriately.

Requirements

- Vehicle must be properly equipped with the SiriusXM Guardian™ system.
- Vehicle must have an operable LTE (voice/data) or 3G or 4G (data) network connection. If using the Uconnect App to command your vehicle, your device must be compatible and be connected to an operable LTE (voice/data) or 3G or 4G (data) network connection.
- Vehicle must be registered with SiriusXM Guardian™ and have an active subscription that includes the applicable feature.

- An ignition cycle is required for some remote commands, such as Remote Vehicle Start and Remote Door Lock/ Unlock if following a Remote Horn & Lights activation.
- Your Remote Door Lock/Unlock request will not be processed if the vehicle is in motion, the ignition key is on or during an emergency call.

NOTE:

The SiriusXM Guardian™ Care agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via your Owner's Site or through the Uconnect App on your compatible device.

FAQs

- 1. How long does it take to unlock or lock the door?** Depending on various conditions, it can take up to 3 minutes or more for the request to get to your vehicle.
- 2. Which is faster, my Key Fob or the Uconnect App?** Your key fob will lock/unlock the door more quickly. However, its range is limited and your Uconnect App comes in handy for these and other situations.
- 3. Will my vehicle be safe if I lose my device?** People sometimes lose their mobile devices, which is why security measures have been engineered into the Uconnect App. Asking for your username, password and SiriusXM Guardian™ Security PIN are required for the activation of Remote services through your mobile device. It is your responsibility to protect your passwords and PINs.
- 4. Why can't all mobile devices use the Uconnect App?** The Uconnect App is compatible with most devices with the Apple® and Android™ operating systems. The capabilities of these devices allows us to remotely command your vehicle. Other operating systems may be supported in the future.
- 5. Why is the Uconnect App running slow?** The Uconnect App relies on a mobile network connection from your device to send commands to your vehicle which must have an operable LTE (voice/data) or 3G or 4G (data) network connection. If either your device or your vehicle is in an area with below average coverage, it may take longer to log in and send commands.

REMOTE VEHICLE START

Use Your Computer or Wireless Device App to Start the Engine And Remotely Warm Up or Cool Down the Vehicle

Description

The Remote Vehicle Start feature provides you with the ability to start the engine on your vehicle, without the keys and from virtually any distance. Once started, the preset climate controls in your vehicle can warm up or cool down the interior before you have to get in. You can send a request to your vehicle in one of two ways:

- Using the Uconnect App from a compatible device.
- From the Your Owner Site website.

You can also send a command to turn off an engine that has been started using Remote Vehicle Start. After 15 minutes if you have not entered your vehicle with the key, the engine will shut off automatically.

This remote function requires your vehicle to be equipped with a factory-installed Remote Start system.

You can set up notifications for your account push notifications every time a command is sent to Remote Start or cancel a Remote Start.

How It Works

SiriusXM Guardian™ For Uconnect App:

1. Download the Uconnect App to a compatible device and login using your username and password.
2. To start the engine, press the “circular arrow.” To turn off an engine that has been remote started, press the circular arrow with an X in the middle button.
3. A pop-up screen will appear asking for your SiriusXM Guardian™ Security PIN (this is the same four-digit code established when your registered your SiriusXM Guardian™ system). Enter the SiriusXM Guardian™ Security PIN on the keypad.

4. The Uconnect App will confirm if your command was sent (or not).
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will let you know if the command was received by your vehicle.

Your Owner Site website:

1. Log on to your Owner Site using the username and password you used when activating your SiriusXM Guardian™ services in your vehicle.

NOTE:

If you forgot your username or password, links are provided on the website to help you retrieve them.

2. If you have more than one vehicle registered into your Owner's Site, select the vehicle you want to send the command by clicking on its image along the top.

3. Beneath the image of a vehicle like yours, you will see a row of icons. On your dashboard you will see remote command icons. To start the engine, press the “circular arrow,” to turn-off an engine that has been remote started press the Cancel button.
4. You will then be asked to enter your SiriusXM Guardian™ Security PIN (this is the same four-digit code established when you activated your SiriusXM Guardian™ system). Please enter your SiriusXM Guardian™ Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

NOTE:

The SiriusXM Guardian™ Customer Care agents are not trained for Remote Vehicle Start services.

FAQs

1. **How long does it take to remotely start my vehicle?** Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle.
2. **Which is faster, my Key Fob or the Uconnect App?** Your Key Fob will remote start your vehicle more quickly. However its range is limited. For example, when you are leaving the stadium after the game, you can use the Uconnect App to remote start your vehicle and have the inside of your vehicle comfortable by the time you get to it.
3. **Will my vehicle be safe if I lose my wireless device?** People sometimes lose their wireless devices, which is why security measures have been engineered into the Uconnect App. Asking for your username, password and SiriusXM Guardian™ Security PIN help to ensure that nobody can start your vehicle if they happen to find your device.
4. **Can someone drive off with my vehicle using the App?** No. Driving your vehicle still requires the keys to be in the vehicle. The Remote Start feature simply starts the engine to warm up or cool down the interior before you arrive.
5. **Can I stop a vehicle that is being driven with the cancel Remote Vehicle Start command?** No. If the vehicle is in motion, the cancel Remote Vehicle Start button will not stop the vehicle.
6. **Why can't all mobile devices use the Uconnect App?** The Uconnect App has been designed to work on most devices with the Apple® and Android™ operating systems. The capabilities of these devices allow us to remotely command your vehicle. Other operating systems may be supported in the future.

REMOTE HORN & LIGHTS

Can't Find Your Vehicle In The Parking Lot? Sound The Horn And Flash The Lights On Your Vehicle To Locate It

Description

It is easy to locate a vehicle in a dark, crowded or noisy parking area by activating the horn and lights. It may also help if you need to draw attention to your vehicle for any reason. You can send a request to your vehicle in one of two ways:

- Using the Uconnect App from a compatible device.
- From your Owner's Site website.

If you want, you can set up, push notifications every time a command is sent to turn on the horn and lights.

Uconnect App:**How It Works**

1. Download the Uconnect App to a compatible device and login using your username and password.
2. To turn on the horn and lights, press the Trumpet icon.
3. A pop-up screen will appear asking for your SiriusXM Guardian™ Security PIN (this is the same four-digit code established when you activated your SiriusXM Guardian™ system). Enter the SiriusXM Guardian™ Security PIN on the keypad.
4. The Uconnect App will confirm if your command was sent (or not).
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will let you know if the command was received by your vehicle.

Your Owner Site website:

1. Log on to your Owner's Site website using the username and password you used when registering your SiriusXM Guardian™ system.
 - If you forgot your username or password, links are provided on the website to help you retrieve them.
2. If you have more than one vehicle registered into your Owner's Site, select the vehicle you want to send the command by clicking on its image along the top.
3. Beneath the image of a vehicle like yours, you will see a row of icons. To turn on the horn and lights, press the Trumpet icon. To turn off the horn and lights, press the Trumpet icon again.

NOTE:

A quicker way to turn off your Remote Horn & Lights would be to push the Panic button on your Key Fob if you are near the vehicle.

4. You will then be asked to enter your SiriusXM Guardian™ Security PIN (this is the same four-digit code established when you activated your SiriusXM Guardian™ system). Please enter your SiriusXM Guardian™ Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

NOTE:

The Remote Horn & Lights feature is designed to be loud and get noticed. Please keep in mind the surroundings when using this feature. You are responsible for compliance with local laws, rules and ordinances in the location of your vehicle when using Remote Horn & Lights.

FAQs

1. **How long does it take to sound my horn and flash the lights?** Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle.
2. **Which is faster, my Key Fob or the Uconnect App?** Your Key Fob will sound the horn and flash the lights quicker; however its range is limited.
3. **How do I turn off the horn and lights after I turn them on?** If you are close enough to the vehicle, you can use the Key Fob to turn off the horn and lights by pressing the red Panic button. Otherwise, Remote Horn & Lights will continue for 20 seconds.
4. **Why can't all mobile devices use the Uconnect App?** The Uconnect App has been designed to work on most devices with the Apple® and Android™ operating systems. The capabilities of these devices allow us to remotely command your vehicle. Other operating systems may be supported in the future.

MONTHLY VEHICLE HEALTH REPORT

Monthly Vehicle Health Report is a Uconnect service through which a summary of the performance of your vehicle's key systems will be sent to you every month so you can stay on top of your vehicle's maintenance needs. This is provided as a convenience to you and does not substitute for your regular maintenance to your vehicle.

In order to provide the monthly Vehicle Health Report, the Uconnect System in your vehicle may collect and transmit vehicle data to SiriusXM Guardian™ and to FCA, such as your vehicle's health and performance, your vehicle's location, your utilization of the features in your vehicle, and other data.

This data collection and transmission begins when you enroll in SiriusXM Guardian™ and will continue even if you cancel your SiriusXM Guardian™ subscription unless and until you call SiriusXM Guardian™ Customer Care and tell us to deactivate your Uconnect system at:

- US residents call: 1-844-796-4827
- Canadian residents call: 1-877-324-9091

Please see the Uconnect Privacy Policy for more information, located at www.driveuconnect.com/sirius-xm-guardian/privacy.html (US Residents) or www.driveuconnect.ca (Canadian Residents).

VEHICLE HEALTH ALERT

Your vehicle will send you an email alert if it senses a problem under the hood with one of your vehicle's key systems. For further information, go to your Owner's Site website.

NOTE:

Vehicle Health Alert emails require you to register, and activate services. During this process you will be asked to provide an email address to which the reports will be sent.

IN-VEHICLE NOTIFICATIONS — IF EQUIPPED

Your vehicle will send you notifications to remind you when services are needed, or to alert you of other important information, such as recall notices. When you receive a notification through your touchscreen, press OK to dismiss the message, or press Call Care to speak with a SiriusXM Guardian™ Customer Care agent.

NOTE:

Pressing OK or the X button on the pop-up screen will dismiss or close the pop-up, and the In-Vehicle Messages mailbox will display. In the Mailbox, you can reopen messages, or delete messages.

AMAZON ALEXA SKILL — IF EQUIPPED

Enjoy the convenience of using your voice to command your vehicle with Amazon Alexa!

With Amazon Alexa, you can connect to your vehicle and remotely access key services and features.

If your vehicle is equipped with Uconnect Navigation, you can send a destination directly to your vehicle using Alexa.

If you need assistance, you can always ask Alexa for help, or complete a list of commands by saying: "Alexa, ask <vehicle name> for help with my car."

Here are a few of the many questions you can ask Alexa@:

- "Alexa, ask Jeep Wrangler to lock my car."
- "Alexa, ask Dodge Challenger to start my car."
- "Alexa, ask Chrysler Pacifica to drive to 1000 Chrysler Dr, Auburn Hills, MI."
- "Alexa, what's the traffic like in Detroit?"

An activate subscription to SiriusXM Guardian™ is required. To use Amazon Alexa, first, register for SiriusXM Guardian™ using the following steps:

1. Press the apps icon on the bottom bar of your in-vehicle touchscreen.
2. Select the Activate Services icon from your list of apps.
3. Select "Customer Care" to speak with a SiriusXM Guardian™ Customer Care agent who will activate services in your vehicle, or select "Enter Email" to activate on the web.

Next, link the Uconnect system on your vehicle to Amazon Alexa:

1. Download the Amazon Alexa app on your mobile device (Apple® or Android™).
2. Once in the app, tap MENU and go to SKILLS.
3. Search for Uconnect, then tap Enable.
4. Tap SAVE SETTINGS when prompted.
5. Link Uconnect to the Skill by tapping LINK ACCOUNT.
6. Log In using your Owner Account credentials. This will be the same user name and password you used when registering for Uconnect Access.
7. CONFIRM account to return to the Uconnect Skill.

You can now begin using the Uconnect Skill on Alexa!

FAMILY ALERTS — IF EQUIPPED

Family Alerts helps promote safer driving and gives you peace of mind when your loved ones are out on the road. You can set boundary limits, monitor driving speed, and pinpoint your vehicle's location any time, any place. Use the Uconnect app to set alerts:

- **Boundary Alert**

Boundary Alert lets you know the moment your vehicle is driven either out of or into a geographic boundary that you set.

- **Curfew Alert**

Curfew Alerts lets you know when your car is being driven outside of the curfew time.

- **Speed Alert**

Receive a notification whenever your car exceeds a speed limit you set.

- **Valet Alert**

Valet Alerts lets you know if and when your vehicle is driven outside a quarter-mile radius of a valet drop-off zone.

SMARTWATCH INTEGRATION — IF EQUIPPED

SmartWatch Integration puts the Uconnect app right on your Apple® Watch or Android™ Wear. To get started, follow these steps:

1. Download the Uconnect app from the App Store® or Google Play.
2. Log onto the app from your smartphone using the username and password you created when you first set up your account.
3. Make sure your watch and smartphone are connected through Bluetooth®.
4. The Uconnect app should appear on your SmartWatch.

Once the app is downloaded on your SmartWatch, you can enjoy these features:

- Lock or unlock your vehicle by tapping the remote lock button in the app and entering your security pin.
- Remote start or stop your vehicle.
- View important vehicle stats, such as fuel level, vehicle location, tire pressure warning, and more.

For help, refer to the Uconnect YouTube channel for SmartWatch integration.

MANAGE MY SIRIUSXM GUARDIAN™ ACCOUNT

HOW TO MANAGE MY SIRIUSXM GUARDIAN™ ACCOUNT

To manage your SiriusXM Guardian™ account, press the ASSIST button in your vehicle, or call SiriusXM Guardian™ Customer Care.

NOTE:

It is recommended, when selling your vehicle, or turning in your lease, to call SiriusXM Guardian™ Care to remove your personal data.

For further assistance call SiriusXM Guardian™ Customer Care:

- US residents call: 1-844-796-4827
- Canadian residents call: 1-877-324-9091

SIRIUSXM GUARDIAN™ AND FAQS

For additional information about SiriusXM Guardian™ if you have an active subscription, push the ASSIST button on the rear view mirror and then select SiriusXM Guardian™ Call on your in-vehicle touchscreen to contact SiriusXM Guardian™. Your call will be directed to a SiriusXM Guardian™ agent or held in a queue until an agent is available or go to your Owner's Site website. If you do not have an active subscription, push the ASSIST button and click the Activate button to activate services.

You can also phone SiriusXM Guardian™ directly by:

- US residents calling: 1-844-796-4827
- Canadian residents calling: 1-877-324-9091

SIRIUSXM GUARDIAN™ BUSINESS HOURS:

Central Time

- Monday through Friday – 7:00 am to 10:00 pm
- Saturday – 8:00 am to 9:00 pm

1. **How Do I Register For My SiriusXM Guardian™ Account?** Push the ASSIST button on your rearview mirror. Press the Activate button on the touchscreen. Select “Call Care” to speak with a SiriusXM Guardian™ Customer Care agent or select “Enter Email” to activate on the web. If you choose to enter your email address, you will then confirm your email address. You will receive an email with an activation link that will be good for 72 hours. Once you click the activation link, you will be prompted to fill out your information and accept Terms and Conditions. Then, you will be directed to the SiriusXM Guardian™ home page to complete your profile and demo the remote services.
2. **Why Do I Need An Email Address?** Without an email address, customers cannot register for SiriusXM Guardian™. Customers need to register so they can subscribe to receive additional services and create a SiriusXM Guardian™ Security PIN for remote command requests.
3. **How Do I Create A SiriusXM Guardian™ Security PIN?** Set up your SiriusXM Guardian™ Security PIN during the registration process. The SiriusXM Guardian™ Security PIN will be required to authenticate you when accessing your account via SiriusXM Guardian™ Call or performing any remote services, such as Remote Door Lock/Unlock, Remote Horn & Lights, or Remote Vehicle Start.
4. **What If I Forgot My SiriusXM Guardian™ Security PIN?** If you've already activated services and forgot your SiriusXM Guardian™ Security PIN, you can reset the PIN by selecting Edit Profile on your Owner Site.

You can also call SiriusXM Guardian™ Customer Care:

- US residents call: 1-844-796-4827
- Canadian residents call: 1-877-324-9091

5. **How Do I Update My SiriusXM Guardian™ Payment Account Address?** Your SiriusXM Guardian™ Payment Account address can be updated online, or by calling SiriusXM Guardian™ Customer Care from ASSIST in your vehicle. To update online: Login to your Owner's Site, and select Edit Profile > SiriusXM Guardian™ Payment Account.
6. **How Do I Update My SiriusXM Guardian™ Profile?** Your name, home address, phone number, email address and SiriusXM Guardian™ Security PIN can be updated online on your Owner's Site. Log in to your Owner's Site then select Edit Profile to edit your personal information. Make your edits and click Save.
7. **Can I Try Features Or Packages Before I Buy Them?** Your new vehicle purchase may have come with an included trial period for certain Apps and services. For more information, please contact SiriusXM Guardian™:
 - US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091
8. **Can I Access Every App And Service While Driving?** No, some applications and services are not available while driving. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion (e.g. key pad).
9. **What Happens When My Subscription Comes Up For Renewal?** If you have added a credit card to your account information, your subscription will be automatically renewed for a term length in accordance with the service plan that you have selected at the then current subscription rate and on every renewal date thereafter, unless you cancel your subscription by calling SiriusXM Guardian™ Care. If you have not added a credit card to your account, SiriusXM Guardian™ will send you an email or letter in advance of your expiration date to remind you that your subscription is ending soon.
10. **How Do I Manage My SiriusXM Guardian™ Notification Preferences?** Contact SiriusXM Guardian™ Customer Care, or go to your Owner's Site and then update your preferences on the SiriusXM Guardian™ customer web portal.
11. **How Do I Purchase A Subscription?** Contact SiriusXM Guardian™ Customer Care by pushing the ASSIST button on your rearview mirror.
12. **How Do I Update My Credit Card Information?** Login to your Owner's Site, and select Edit Profile, then select SiriusXM Guardian™ Payment Account, or call SiriusXM Guardian™ Customer Care:
 - US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091
13. **How Do I Find Out How Much Longer I Have On My Subscription?** Contact SiriusXM Guardian™ Customer Care at:
 - US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091

You also can visit your Owner's Site and choose a subscription to view its expiration date. When your subscription is about to expire, you will receive an email or letter notification.

14. **Can I Get A Refund If I Have Not Used The Entire Subscription?** Pro rata refunds are provided from the date of cancellation for annual plans or longer. Please see the Uconnect and SiriusXM Guardian™ Terms & Conditions for refunds related to billing plans of other lengths and other circumstances. Or, for more information, call SiriusXM Guardian™ Customer Care at:
- US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091
15. **Can I Cancel A Subscription Before It Expires?** Yes. If you have an annual subscription, your subscription will be canceled the day you cancel. If you have a monthly subscription, your subscription will be canceled on the last day of the month in which you choose to cancel. For other subscriptions, please call SiriusXM Guardian™ Customer Care at:
- US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091
16. **What Should I Do If I Want To Sell My Vehicle?** Before your vehicle is sold to a new owner, you'll want to remove your account information. This process removes all personal information, returns the Uconnect system to its original factory settings, removes all SiriusXM Guardian™ services and account information. To remove your account information from the Uconnect system, contact SiriusXM Guardian™ Customer Care at:
- US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091
17. **What If I Forgot To Remove My Account Information Before I Returned My Lease Vehicle Or Sold It?** Contact SiriusXM Guardian™ Customer Care:
- US residents call: 1-844-796-4827
 - Canadian residents call: 1-877-324-9091
18. **What will happen if an operable LTE (voice/data) or 4G (data) network connection compatible with my device is temporarily unavailable?** The SOS Call and ASSIST buttons will NOT function if you are not connected to an operable LTE (voice/data) or 3G or 4G (data) network. Services that required your smartphone only direct calls to Roadside Assistance Call may be functioning if you have an operable network.

DATA COLLECTION & PRIVACY

The Uconnect System collects and transmits data which may include information about your vehicle, your vehicle's health and performance, your vehicle's location, your utilization of the features in your vehicle, and other data. The collection, use and sharing of this information is required to provide the SiriusXM Guardian™ services and is further described by the Uconnect Privacy Policy, which can be found at www.driveuconnect.com/sirius-xm-guardian/privacy.html (US Residents) or www.driveuconnect.ca (Canadian Residents). This information may be collected by SiriusXM® Connected Vehicle Services Inc. and shared with FCA US LLC for the purposes stated in the Uconnect Privacy Policy. Vehicle health and diagnostic information including location data may be used by Uconnect to provide a Vehicle Health Report to you.

Even if you cancel your SiriusXM Guardian™ subscription, this vehicle diagnostic health information, including location data, may still be transmitted from your vehicle and you may still have a Vehicle Health Report sent to you.

Use of any of the Uconnect Services including SiriusXM Guardian™ is deemed to be your consent to the collection, use and disclosure of this information in accordance with the Uconnect Privacy Policy. If you do not want this information to be collected, used, or shared, you must cancel your Uconnect services in their entirety by contacting us as referenced in the Uconnect Privacy Policy.

SAFETY GUIDELINES

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use of the system immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

SAFETY AND GENERAL INFORMATION

SAFETY GUIDELINES

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Ensure that all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

Do NOT attach any object to the touchscreen. Doing so can result in damage to the touchscreen.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to an authorized dealer for repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

SAFE USAGE OF THE UCONNECT SYSTEM

- Read all instructions in this manual carefully before using your system to ensure proper usage.
- The Uconnect system is a sophisticated electronic device. Do not let young children use the system.
- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on the system.
- Keep drinks, rain and other sources of moisture away from the system. Besides damage to the system, moisture can cause electric shocks as with any electronic device.

NOTE:

Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

Exposure To Radio Frequency Radiation

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

CARE AND MAINTENANCE

Touchscreen

- Do not press the touchscreen with any hard or sharp objects (pen, USB stick, jewelry, etc.), which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry microfiber lens cleaning cloth in order to clean the touchscreen.

- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

CYBERSECURITY

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

WARNING!

- It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.
- ONLY insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

NOTE:

- FCA US LLC or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
 - Routinely check www.driveuconnect.com/support/software-update.html (U.S. Residents) or www.driveuconnect.ca (Canadian Residents) to learn about available Uconnect software updates.
 - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).

SECURITY FEATURES**ROADSIDE ASSISTANCE CALL — IF EQUIPPED**

If your vehicle is equipped with this feature and within cellular range, you may be able to connect to Roadside Assistance Call, SiriusXM Guardian™ Customer Care, Uconnect Care Call and Vehicle Care Call by pressing the “ASSIST” button on the Rearview Mirror of your vehicle. To the extent any such calls incur additional costs, you are responsible for them. If Roadside Assistance Call is provided to your vehicle, you agree to be responsible for any additional roadside assistance service costs that you may incur.

To provide SiriusXM Guardian™ services to you, we may record and monitor your conversations with Roadside Assistance Call, SiriusXM Guardian™ Customer Care, Uconnect Care Call or Vehicle Care Call, whether such conversations are initiated through the SiriusXM Guardian™ services in your vehicle, or via a landline or mobile telephone, and may share information obtained through such recording and monitoring in accordance with regulatory requirements.

You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.

SOS CALL — IF EQUIPPED

The SOS Call system is an embedded phone system that allows you to connect to an Emergency Services Agent in an emergency. You can choose to press the “SOS Call” button on the Rearview Mirror to contact an Emergency Services Agent.

SOS Call Operating Instructions

1. Push the SOS Call button on the Rearview Mirror;

NOTE:

In case the SOS Call button is pushed in error, there will be a ten second delay before the SOS Call system initiates a call to an Emergency Services Agent. To cancel the SOS Call connection, push the SOS Call button on the Rearview Mirror or press the Cancellation button on the Phone Screen. Termination of the SOS Call will turn the green LED light on the Rearview Mirror off.

2. The LED light on the Rearview Mirror will turn green once a connection to an Emergency Services Agent has been made.
3. Once a connection between the vehicle and an Emergency Services Agent is made, the SOS Call system may transmit the following important vehicle information to a Emergency Services Agent:
 - Indication that the occupant placed a SOS Call.
 - The vehicle brand.
 - The last known GPS coordinates of the vehicle – if equipped.
4. You should be able to speak with the Emergency Services Agent through the vehicle audio system to determine if additional help is needed.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Once a connection is made between the vehicle's SOS Call system and the Emergency Services Agent, the Emergency Services Agent may be able to open a voice connection with the vehicle to determine if additional help is needed. Once the Emergency Services Agent opens a voice connection with the vehicle's SOS Call system, the operator should be able to speak with you or other vehicle occupants and hear sounds occurring in the vehicle.

The vehicle's SOS Call system will attempt to remain connected with the Emergency Services Agent until the Emergency Services Agent terminates the connection.

5. The Emergency Services Agent may attempt to contact appropriate emergency responders and provide them with important vehicle information and GPS coordinates.

WARNING!

- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from an Emergency Services Agent. All occupants should exit the vehicle immediately and move to a safe location.
- Never place anything on or near the vehicle's operable network and GPS antennas. You could prevent operable network and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable network and GPS signal reception is required for the SOS Call system to function properly.

WARNING!

- The SOS Call system is embedded into the vehicle's electrical system. Do not add aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the SOS Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. **IF YOUR VEHICLE LOSES BATTERY POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT), THE UCONNECT FEATURES, APPS AND SERVICES, AMONG OTHERS, WILL NOT OPERATE.**
- Modifications to any part of the SOS Call system could cause the air bag system to fail when you need it. You could be injured if the air bag system is not there to help protect you.

SOS Call System Limitations

If the SOS Call system detects a malfunction, any of the following may occur at the time the malfunction is detected, and at the beginning of each ignition cycle:

- The Rearview Mirror light will continuously be illuminated red.
- The Phone Screen will display the following message "Vehicle phone requires service. Please contact your dealer."
- An In-Vehicle Audio message will state "Vehicle phone requires service. Please contact your dealer."

WARNING!

- Ignoring the Rearview Mirror light could mean you will not have SOS Call services. If the Rearview Mirror light is illuminated, have an authorized dealer service the SOS Call system immediately.
- The Occupant Restraint Control module turns on the Air Bag Warning Light on the instrument panel if a malfunction in any part of the system is detected. If the Air Bag Warning Light is illuminated, have an authorized dealer service the Occupant Restraint Control system immediately.

Even if the SOS Call system is fully functional, factors beyond FCA US LLC's control may prevent or stop SOS Call system operation.

These include, but are not limited to, the following factors:

- Delayed accessories mode is active.
- The ignition key is in OFF position.
- The vehicle's electrical systems are not intact.
- The SOS Call system software and/or hardware are damaged during a crash.
- The vehicle battery loses power or becomes disconnected during a vehicle crash.
- LTE (voice/data) or 3G or 4G (data) coverage and/or Global Positioning Satellite signals are unavailable or obstructed.
- Network congestion.
- Weather.
- Buildings, structures, geographic terrain, or tunnels.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Never place anything on or near the vehicle's and GPS antennas. You could prevent a GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable network connection and a GPS signal is required for the SOS Call system to function properly.

General Information

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

REMOTE SERVICE FEATURES

For further information regarding Remote Service Features, refer to "Using SiriusXM Guardian™" in the "Uconnect + SiriusXM Guardian™ — If Equipped" chapter in this manual or go to your Owner Site.

SOFTWARE LICENSING INFORMATION

For software licensing information, please visit: <http://business.panasonic.com/solutions-automotivesolutions-opensource-fca>.

A	Advance Phone Connectivity 38	C	Cable, Auxiliary 20	M	Main Menu..... 8
	Alexa 98		CD 18		Media Mode..... 18
	Amazon Alexa 98		Controls 9	N	Navigation
	Android Auto 21		Customer Programmable Features 8		Before Route Guidance 63
	Apple CarPlay 24		Cybersecurity 105		Emergency 74
	Audio Settings 16	D			Emergency — Fire Department 76
	AUX 20		Disc Drive 18		Emergency — Hospital 74
	Aux Mode 20		Disc Mode 18		Emergency — Police 75
	Auxiliary Cable 20		Disturb 37		Information 72
B			Drag & Drop Main Menu 8		Information — Where Am I? 73
	Bluetooth 20		Driver Memory Presets 10		Map Updates 76
	Connect Or Disconnect Link Between	F			View Map 65
	the Uconnect Phone And Mobile		Family Alerts 99		View Map — Main Menu..... 65
	Phone 38	G			View Map — Settings..... 66
	Connecting To A Particular Mobile Phone		General Information..... 104		View Map — Settings — Guidance 70
	Or Audio Device After Pairing 33	I			View Map — Settings — Map Setup 67
	Bluetooth Mode 20		Identifying Your Radio..... 5		Where To? 41
			Introduction 5		Where To? — Address 44
					Where To? — City Center 60
					Where To? — Closest City..... 60

Where To? — Favorite Destinations	47
Where To? — GEO Coordinate	62
Where To? — Go Home	58, 59
Where To? — Intersection	57
Where To? — Main Menu	41
Where To? — Phone	61
Where To? — Point of Interest	48
Where To? — Point on Map	58
Where To? — Recent	45
Where To? — Trails	63
Where To? — Trips	56
Navigation Mode	41
Navigation, Emergency	74
Navigation, Home	71
Navigation, Information Menu	72
Navigation, Work	71
O	
Operating Navigation	41
P	
Phone Mode	28
Point of Interest	
All Points of Interest	50
ATM Banking	55
Gas Stations	53
Hotels Motels	52
Restaurants	51, 54
Spell Name	49
Presets	10

R

Radio	
Presets	10
Radio Controls	9
Radio Mode	9
Radio Operation	9
Registering SiriusXM Guardian	80
Remote Features, Door Lock/Unlock	91
Remote Features, Horn And Lights	95
Remote Features, Starting	93
Remote Services	110
Removing SiriusXM Guardian	99
Roadside Assistance	85, 106

S

Safety	104
Satellite Radio	11
Saved Radio Stations	10
Security Features	106
Roadside Assistance	106
Send & Go	86
Settings, Audio	16
Sirius Satellite Radio	11
Favorites	13
Replay	13
SiriusXM Traffic	77
SiriusXM Travel Link	77
Traffic & Weather	14
SiriusXM Guardian	78
SiriusXM Guardian FAQ	100

SiriusXM Guardian Features	81
SiriusXM Guardian, Getting Started	80
SiriusXM Guardian, Introduction	78
SiriusXM Satellite Radio	
Browse in SXM	14
Favorites	13
Replay	13
Traffic and Weather	14
Smart Watch	99
SOS Call	81, 106
Stolen Vehicle Assistance	89
Store Radio Presets	10

U

Uconnect	
Phone Call Features	35
Things You Should Know About Your	
Uconnect Phone	39
Uconnect 8.4 Settings	8
Uconnect App	80
Uconnect Phone	30, 32, 33
Answer Or Ignore An Incoming Call —	
Call Currently In Progress	37
Answer Or Ignore An Incoming Call —	
No Call Currently In Progress	37
Bluetooth Communication Link	40
Call By Saying A Phonebook Name	36
Call Continuation	38
Call Controls	36
Call Termination	38

Cancel Command	30
Connect Or Disconnect Link Between The Uconnect Phone And Mobile Phone	38
Connecting To A Particular Mobile Phone Or Audio Device After Pairing	33
Deleting A Phone Or Audio Device	33
Dial By Saying A Number	35
Disconnecting A Phone Or Audio Device	33
Far End Audio Performance	39
General Information	40
Help Command	30
Join Calls	38
Making A Phone Or Audio Device A Favorite	34
Making A Second Call While Current Call Is In Progress	37
Managing Your Favorites	35
Natural Speech	30
Operation	29
Overview	28
Pair (Link) Uconnect Phone To A Mobile Phone	30

Pair A Bluetooth Streaming Audio Device	32
Pair Additional Mobile Phones	32
Phonebook Download	34
Place/Retrieve A Call From Hold	37
Power-Up	40
Recent Calls	36
Redial	38
To Remove A Favorite	35
Toggling Between Calls	38
Touch-Tone Number Entry	36
Transfer Call To And From Mobile Phone	38
Voice Command	39
Ways To Initiate A Phone Call	35
Uconnect System	6
USB Mode	19

V

Vehicle Finder	87
Vehicle Health Alert	97
Vehicle Health Report	97
Vehicle Notifications	98

W

Wi-fi	88
-------------	----









P68491514AA

Fifth Edition V2
Uconnect 4/4C/4C NAV with
8.4-inch Display



©2021 FCA US LLC. All Rights Reserved.

Chrysler, Dodge, Jeep, Ram, Mopar and Uconnect are trademarks of FCA US LLC.

FIAT is a registered trademark of FCA Group Marketing S.p.A.,
used under license by FCA US LLC. App Store is a registered trademark of
Apple Inc. Google Play Store is a registered trademark of Google