


Key Functions of LCD Display Screen

The LCD Display Screen is used to tailor your massage exactly to your needs.

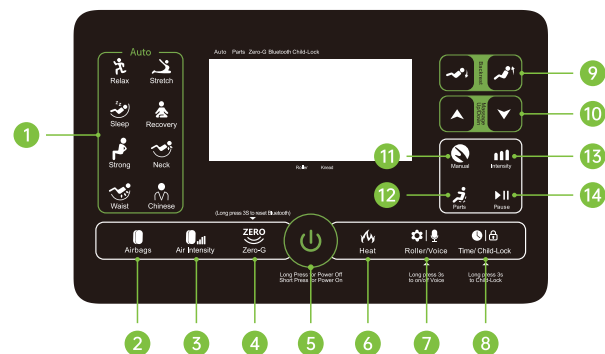

- 1 **Auto Modes:** Choose from 8 auto programs namely Relax, Stretch, Sleep, Recovery, Strong, Neck, Waist and Chinese based on your preferences.
- 2 **Airbags:** Press the button to switch the airbag massage parts: full-body massage>upper body massage>lower body massage>airbags function turned off.
- 3 **Air Intensity:** Press the button to adjust the airbag intensity level from 1 to 3. The default setting is level 2.
- 4 **Zero-G:** Short press to turn on/off zero gravity function; long press for 3s to reset Bluetooth and disconnect the connected Bluetooth device.
- 5 **Power:** Short press to turn the massage chair on; long press to turn the massage chair off.
- 6 **Heat function:** Press the button to turn on or off the heating function.
- 7 **Foot Roller/Voice:** Short press to turn on/off the foot rollers and adjust its intensity from level 1 to level 3; long press to turn on/off the voice broadcast.
- 8 **Time/Child-Lock:** Short press to adjust the massage duration (10min/15min/20min/25min/30min); long press to turn on or off the child lock.
- 9 **Backrest:** Long press the button to manually adjust the backrest up or down separately.

- 10 **Massage Up/Down:** Upon shoulder detection, press the button to move the massage rollers up or down until they align with your shoulders; during manual partial or full-body massage, press the button to move the massage rollers up or down to your desired massage position.
- 11 **Manual:** Switch automatic mode to manual mode
- 12 **Parts:** Short press to switch the massage parts: partial>full-body massage in Knead mode.
- 13 **Intensity:** Press the button to manually adjust the massage intensity from 1 to 3. The default setting is level 2.
- 14 **Pause:** Short press to pause or resume massage when the chair is in operation.



How to contact us

Tel: (800) 513-5727

Email: service@realrelaxmassage.com




FAVOR-03

MESSAGE CHAIR Quick Start Guide




Installation Method

01

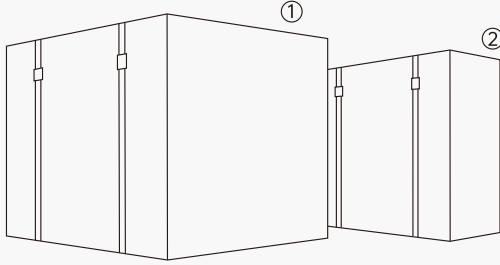


- Unpack the two packages and take out the main unit and shoulder side panels from the carton carefully.

04

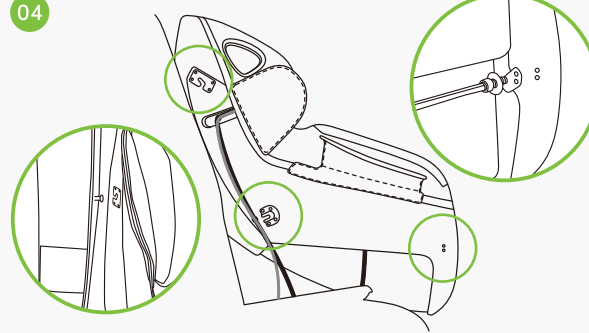


- Hang each shoulder side panel to the main unit in place and tighten screws to fix the panels.

07

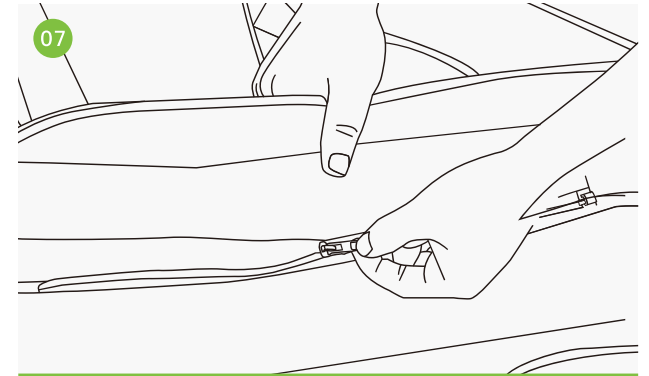


- Then zip up pad.

02

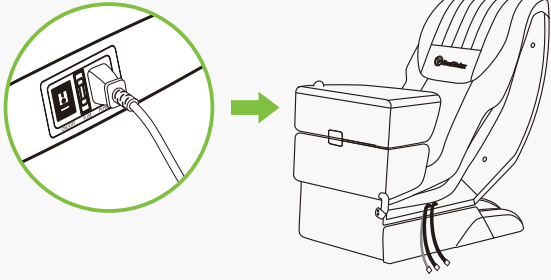


- Plug in and press the Power switch on the back of the chair to let it self-reset.

05

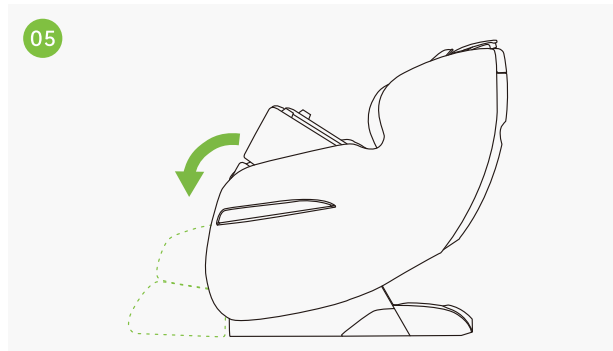


- Flip down the footrest and place it on the floor.

08

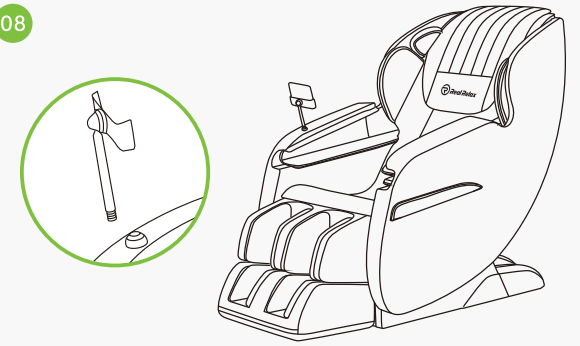


- Assemble the LCD display screen holder tightly with hand. Place the display screen into the holder.

03

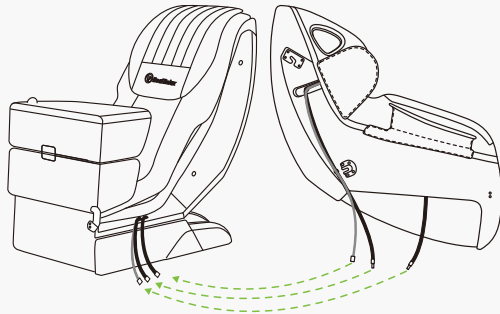

- Connect the color-coded air hoses and keep the hoses kink-free.

06

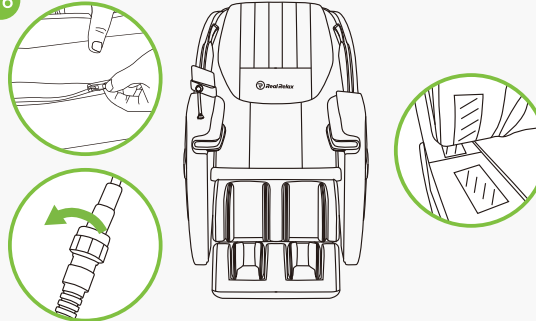

- Zip the top of the seat back pad to the chair, plug in its hose, peel off the Hook & Loop fastener and press the pad firmly onto the matching strip.

Connect to Power

Plug into a 110V grounded outlet.



- Connect the power and turn on the power switch to reset the chair.

When your chair is plugged in and the power button on the rear lower panel is switched on, you can begin using your massage chair. Just press the power button on the massage chair to begin.