



Use & care manual

HEATED MASSAGE FOOT REST

SL-535BLK



Go Green & Get Smarter

Scan for full HD manual

Safety Instructions



Please read the following instructions carefully before putting your massage footrest use. Please retain these operating instructions for further use!

1. Read all instructions.
2. Never leave this appliance unattended when it is plugged in, close supervision is necessary when this appliance is used by ,on or near children or disabled persons.
3. Do not use on infants.
4. Do not use on animals.
5. This machine is not to be used on or by an invalid,sleeping or unconscious person,or a person with poor blood circulation unless carefully attended.
6. Do not use on sensitive skin areas.
7. Burns can occur regardless of control setting,check skin under pad frequently.
8. Do not use in an oxygen enriched environment.
9. Do not use pins or other metallic means to fasten this machine in place.
10. Do not sit on or crush the machine.
11. Never use the heating with liniments,ointments or salves,especially those containing heat-producing ingredients,as skin burns could result.
12. Never pull this machine by the supply cord.
13. Never unplug the machine from electrical outlet with a wet hand.
14. Unplug when not in use.
15. Do not use the cord as a handle.
16. Do not bend or pinch the cord and not use this machine if it has damaged power cord or plug,if it malfunctions,has been dropped,or is damaged.
This machine has no user-serviceable parts.If for any reason this machine does not function satisfactorily,see warranty for service information.
17. Do not tamper with this machine in any way.
18. Loop cord loosely when storing,tight wrapping may damage cord and internal parts.
19. This product is intended solely for non-commercial,non-industrial,personal use. Do not use this product for any other purpose.
20. Do not use with infants, a helpless person or a person insensitive to heat.
21. Overlong application can result in skin burns.
22. The device is not to be used for commercial use or medical purposes.

Have question ?



Tel: 734-709-6982

Monday-Friday 9:00AM-4:30PM



Email: support@snailax.com

Instruction


Thank you for purchasing SNAILAX Heated massage foot rest.
With normal care and proper treatment, it will provide years of reliable service.

Please read all instructions carefully before use this product.

FEATURES

- 3 vibration massage modes
- 3 heat settings (113°F~131°F)
- 3 timing settings for heat (1H,2H,4H)
- 2 Adjustable Height
- Non-slip rubber fabric bottom

CONTENTS

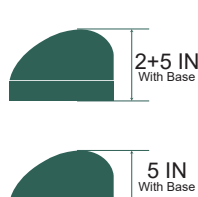

Massage footrest



Home adapter




User manual

TECHNICAL DATA

Measurements:	15.7x10.6x6.3inches
Weight:	1.5 lbs
Voltage:	Input: AC 100-240V ~50/60Hz Output: 12VDC 1.5A
Nominal Power:	max. 18Watt
Automatic runtime:	1,2,4 hours

Operation and controller instructions

1. Place the heated massage foot rest on the flat floor.
2. Connect the adapter cable to the corresponding cable on the device.

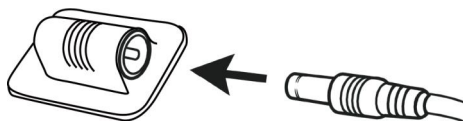

Device Side

Adaptor Side


Operation and controller instructions

3. Plug the home adapter into a 100~240V electric outlet.
4. Turn on the device by operating the control panel (Refer to controller instructions below).



- The device will automatically turn off after the set timer runs out.
- Do not setup or use the device in a bathroom or similiary wet / damp areas.
- For your own safety we equip the device with a protection against over-heating. The device will switch off automatically and will only allow switching on again after an appropriate downtime.

Controller Instructions

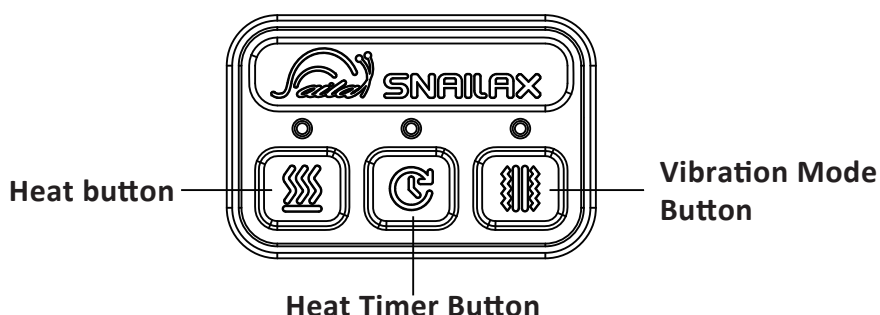

Heat button

Press this button to activate the heating function. It starts at low heat by default with a 1-hour timer.

Press again to cycle through heat levels in the following order: Low (Yellow light)-Medium (Orange light)- High (Red light)-Off.

Heat Timer Button:

The default timer for heat is 1 hour; After the heat is turned on, Press this button to switch the timer between 1h(Green light)/2h(Yellow light)/4h(Red light) ; The corresponding indicator will light up.

Vibration Mode Button:

After the device is turn on, press this button to activate the vibration massage and enter the default vibration Mode 1. Pressing the button again will switch the vibration mode in a cycle of mode1 (green light), mode2 (yellow light), mode3 (red light) and off. The timer for Vibration massage is 15 minutes, the vibration function will be automatically turned off after the timer runs out.

When not in use

Remove the plug from the power supply socket.

CARE AND MAINTENANCE

- Always unplug the unit before cleaning it. Never touch the power plug with wet hands.
- Before cleaning, allow unit to cool.
- Wipe the unit with a soft, dry cloth. Do not use cloths containing any kind of chemical or alcohol and solvent liquids.
- Never submerge any part of the unit in liquid.
- If the unit is particularly dirty, use the following instructions:
 1. Dampen a cloth in water or a 3%–5% mild detergent solution.
 2. Wipe the dirty areas with the wet cloth.
 3. Wipe the areas with a soft, dry cloth.
 4. Wait for the unit to become fully dry before use.
- Place the device in a safe, dry, and cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the surface.

TROUBLESHOOTING

Problem	Solution
Device switches off suddenly.	Device may have been in use for 1 hour. Auto-shutoff function activated. Continue using by pressing the 'Power' button after resting the unit for 15 minutes.
	Over-heat protection function activated. Device is switched off for your safety. Please rest device for 15-30 minutes before restarting.
Device fails to start.	Check if device has been used for more than 1 hour. If so, let device rest for 15 minutes before continuing. Device may require longer time to cool in warmer environments.
	Check if adaptor output is connected to device power inlet wire.

WARRANTY & CUSTOMER SERVICE

Standard Warranty:

This product is covered by a standard one-year limited warranty starting from the **date of purchase**.

The warranty covers manufacturing defects in materials and workmanship under normal use. This warranty does not cover normal wear and tear, accidental damage, misuse, unauthorized modification or repair, or non-product-related issues.

For detailed warranty terms, conditions, and reference information, please visit:

<https://www.snailax.com/pages/warranty-policy>

Proof of Purchase:

Please retain your order ID or receipt from an authorized seller to validate your claim.

Extend Your Warranty Coverage

Register your product within **30 days of purchase** to receive an **additional 1-year warranty extension**.

You may register in either of the following ways:

1) Visit <https://support.snailax.com> or scan the QR code to submit your order details.



2) You may also contact us on Facebook at <https://facebook.com/snailax> and send us your purchase information.



Need Help? Please Contact Us First

If you have any questions or encounter any issues, please contact our support team. We are here to help and ensure your comfort.

 **Tel: 734-709-6982** (Monday-Friday 9:00AM-4:30PM)

 **Email: support@snailax.com**

Our team will reply as soon as possible during business hours.

Defective Products & Returns

If your product is found to be defective within the warranty period, please contact us. Please **do not dispose of any product parts**, as they may be required for inspection or replacement.

We are committed to providing a suitable solution for every customer.

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Know more about Snailax



@Snailax



@snailax.us



@snailaxcorporation



@snailax.us

SNAILAX CORPORATION



3914 Bestech Dr, Suite A,Ypsilanti, MI 48197, USA
Tel: 734-709-6982 (Monday-Friday 9:00AM-4:30PM)
Email: support@snailax.com
Web: www.snailax.com

*Please provide your order number before contacting customer support