



Use & care manual

Foot spa bath massager

SL-548



Go Green & Get Smarter

Scan for full HD manual

Safety Instructions



Please read the following instructions carefully before putting your massage device into use to ensure trouble-free operation and optimum efficiency.

Please retain these instructions for further reference!

- Please read the user manual carefully before use.
- Check the product before use. Do not use if damaged.
- The product should be placed horizontally during and after use.
- Choose a suitable power source, Ensure the power cord and plug remain dry and are kept away from heat sources during use.
- Do not pull the power cord forcefully or hang the product by the power cord to avoid damage.
- Do not use this product when there is no water in the tub. After use, please disconnect the power supply, unplug the power cord, and promptly pour out the water.
- Do not stand or place heavy objects in the tub.
- It is strictly forbidden to press or step on the upper cover or the edge of the upper cover in the presence of water..
- Do not put your feet on the edge of the basin or on the basin panel during a foot massage, so as not to cause the basin body to fold and the foot bath water to overflow.
- Add warm water between the minimum and maximum water level lines. The water temperature should not exceed 110 °F (43.3 °C) to avoid burns.
- Do not fill the product with corrosive liquids or liquids containing particulates or flocculants.
- Do not use this product within 30 minutes before or after eating a meal.
- The remote control and control box contain magnets, which may interfere with electronic devices or medical implants.
- This product is not suitable for individuals with medical implants like pacemakers, artificial heart-lung devices, ECG machines, or other medical implants, as it may cause malfunction or damage to the medical equipment and may even pose a life-threatening risk.
- This product is not suitable for individuals with abnormal heart, cardiovascular, brain nerve, or blood pressure conditions, pregnant women, those on their period, or advanced-stage diabetes patients.
- The product should not be used by individuals with foot inflammation, wounds, broken skin, ulcers, or varicose veins.
- Post-surgery patients, those with high fever, malignant tumors, critical conditions, excessive fatigue, or those who are intoxicated should only use this product after consulting a doctor. It is strictly prohibited to use it without the doctor's approval.
- Individuals with skin sensory disorders, inability to express their intentions, slow movement, or lack of self-care or self-control should use this product only with assistance from others.
- If you feel uncomfortable during use, immediately stop using the product. If discomfort occurs during or after use, consult a doctor.
- If abnormal conditions occur during use, immediately stop using the product.
- Non-professional individuals should not disassemble the product.
- It is recommended that each person use this product individually. If multiple people need to use it, turn off the device and disinfect it before use

Failure to observe the above instructions may constitute misuse of the product and can cause serious injury or burns.

Have question ?

☎ **Tel:** 734-709-6982
Monday-Friday 9:00AM-4:30PM
✉ **Email:** support@snailax.com

Introduction

Thanks for purchasing Foot Spa Bath Massager. Please read the user manual carefully before use, and keep it in a safe place for future reference. If you need any support, please feel free to contact our customer service.

Package Included

Foot spa bath massager x1


User manual x1

Remote control x1


Parameter

Model	SL-548
Measurements	15.6*13.2*10inches(open)
Rated Voltage	120V ~
Rated Frequency	60Hz
Rated Power	500W

Product Diagram

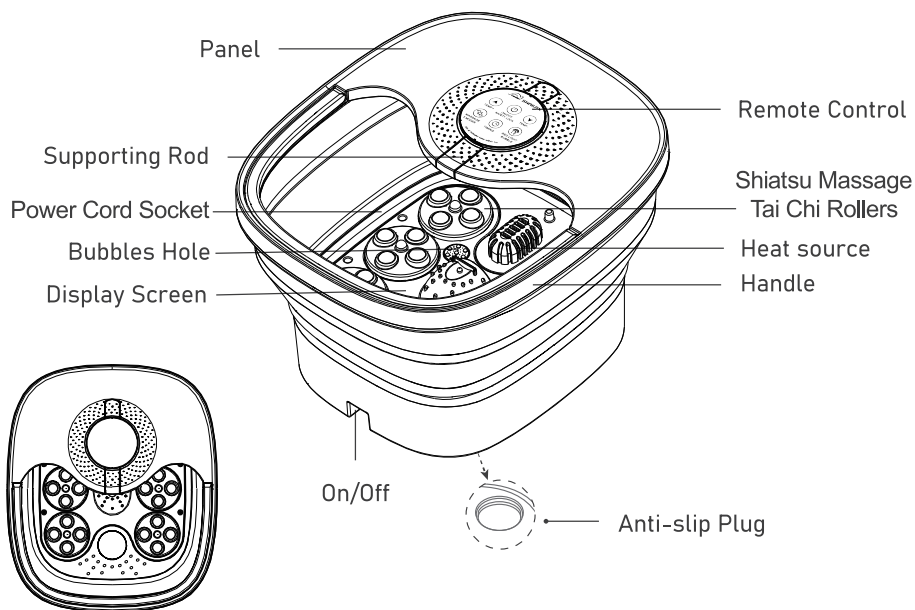

Remote control

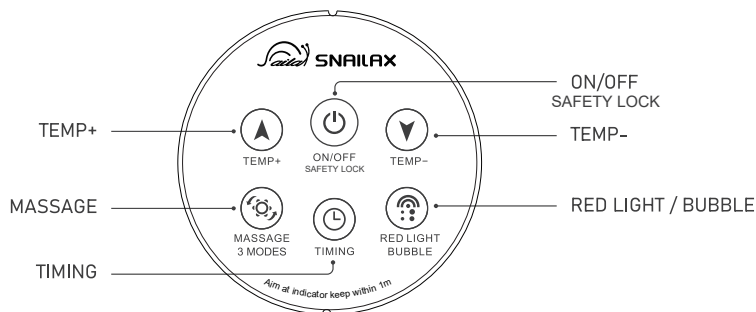


Note: remove the insulating plastic sheet on the remote control before use.


Product Operation Guide

Open the Collapsible Foot Spa Bath Massager.

- Remove the remote control, put the foot bath flat, press the middle of the foot bath with one hand, and pull up the front end with the other hand.
- After pulling the front, press the middle part of the tub with one hand and then pull up the rear end of the foot bath with the other hand.
- Lightly press the tail of the support rod, rotate the support rod, make the support rod to the supporting position.

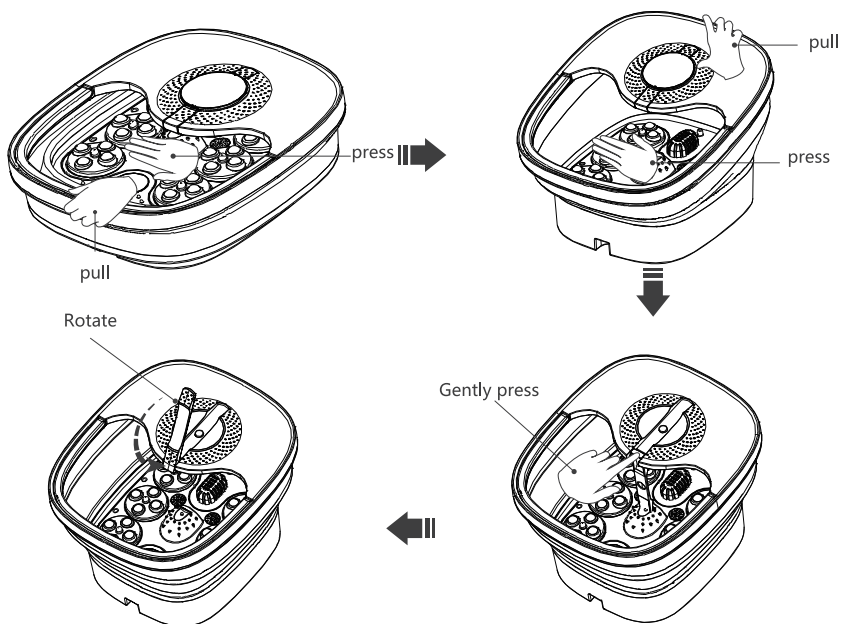

Connect the power cord

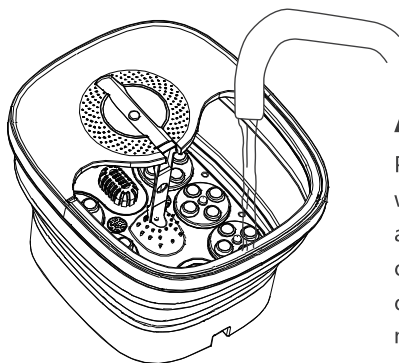

Add water & power up

Place the machine flat, fill in a proper amount of water (it is recommended to fill in warm water around 95°F to reduce your waiting time), turn on the household power supply(120V/60Hz), turn on the power foot bath, it will enter the standby mode.

Remote control

1. The remote control power-on button part:

- a. Press the remote power-on button to turn on; press the remote power-on button again to turn off ;
- b. When the machine is power-on, the current temperature is displayed; when the machine is power-off, it is displayed as OF ;
- c. In the power-on mode, the heating system works as follows: when the water temperature is $\geq 125^{\circ}\text{F}$, it will enter the over-heat protection mode, at this time, it will automatically shut down, and the prompt sound will be issued "di di di".

2. The remote control temperature setting part:

- a. The default temperature at startup is 106°F ;
- b. Press to set the temperature; each press to the button of the temperature "+" can only increase by 1, and the maximum can only be up to 118°F ; the button "-" can only be reduced by 1 per press, and the minimum can only reach 95°F ;
- c. Perform corresponding actions in real time according to the difference between the water temperature and the preset temperature;
- d. When the water temperature is lower than the preset temperature, the heating function will be automatically turned on;
- e. When the water temperature reaches the preset temperature, the heating function will be automatically turned off; And there will be a prompt sound "di di di".

3. The timing button of the remote control:

- a. The default time of booting is 60 minutes countdown;
- b. The lowest setting to highest setting is 10, 20, 30, 40, 50, 60 minutes;
- c. The system will shut down immediately after the setting time countdown and a beep "di" is issued;
- 4. The bubble/red-light function part of the remote control:
 - a. The red-light function and bubble function will be automatically turned on after opening the machine;
 - b. Press the button to turn off the red-light function and bubble function;
- 5. The massage function part of the remote control:
 - a. Press the button to turn on the massage function;
 - b. Press the button to switch from mode 1, 2, 3 and off;
 - c. The massage function will automatically turn off after 30 minutes;

On/Off Button


1. When the machine is power-off, press the power button one time to turn on, and the default temperature is set to 106°F. The red-light function and bubble function will be automatically turned on at the same time;
2. When the machine is power-on, press the power button one time to turn on the massage function, press the button for the second time to adjust the temperature to 109°F and turn off the massage function, press the button for the third time to turn on the massage function again, press the button for the fourth time to power off;
3. In the power-on mode, the heating system works as follows: when the water temperature is $\geq 125^{\circ}\text{F}$, it will enter the over-heat protection mode, at this time, it will automatically shut down, and the prompt sound will be issued "di di di".

Water temperature Control

When the water temperature $\leq$ the set temperature 4°F , it will reheat. When the water temperature $\geq$ the set temperature, the heating will be stopped, and the water temperature will be maintained by circulating heating;

Replace the control battery

- a. Press position ① and remove the battery box from the remote control to take out the original battery.
- b. Install the CR2025 button battery on the battery box, please pay attention to the positive and negative poles of the battery (**Positive electrode down**). Install the battery box with the battery on the remote control.
- c. The remote control with a new battery.

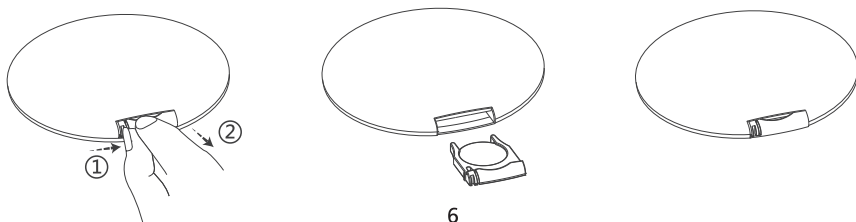


Range of remote control:

Within 1 meter

When using, the infrared transmitter on the remote control shall aim at the display screen, within a distance of one meter and at an angle of 90 ° to the red light. There can be no obstruction in between.

 WARNING	
● INGESTION HAZARD: This product contains a button cell or coin battery. ● DEATH or serious injury can occur if ingested. ● A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. ● KEEP new and used batteries OUT OF REACH of CHILDREN ● Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

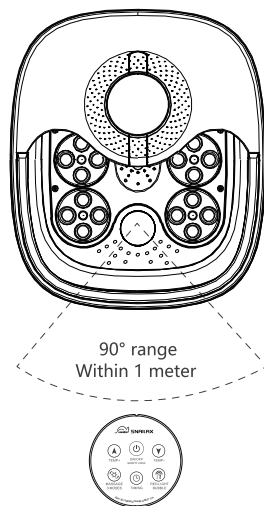

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2025.
- Nominal battery voltage: 3 V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 140 °F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

When finishing foot massage

Power off the footbath into standby mode, unplug the power supply, and pour out the water; Pull the support rod back by hand to move the support rod, rotate it and install it on the panel, and then press to fold the front and back ends of the footbath, and place the folded footbath.

Clean

- Ensure the power is turned off before cleaning.
- Pour out **all** the water from the tub.
- Wipe the surface with a soft, dry cloth.
- Do not use corrosive liquids to clean the foot spa.
- After cleaning, air dry the foot spa in a well-ventilated, dry, and cool place before storing.

Storage

- a. Turn off the power and pour out **all** the water.
- b. Place the foot bath in a safe, ventilated, dry, and cool area to drain.
- c. Fold the foot bath and arrange the power cord neatly. Store it in its packaging box in a safe, ventilated, dry, and cool place.

Questions & Answers

Problem	Cause	Solution
No power	The product is not connected to the power supply properly.	Please check and make sure that the product has been connected to the power supply.
The product does not heat.	Power is not turned on.	Please check and make sure that the product has been connected to the power supply.
The product does not work	The product is not operated properly after being connected to the power supply.	Please use strictly following the user manual.
The product stops working during the use.	The product has worked beyond the preset working time.	Please press the "ON/OFF" button to restart it.
Can not turn on	The water temperature exceeds 125°F.	Change warm or cold water.

WARRANTY & CUSTOMER SERVICE

Standard Warranty:

This product is covered by a standard one-year limited warranty starting from the **date of purchase**.

The warranty covers manufacturing defects in materials and workmanship under normal use. This warranty does not cover normal wear and tear, accidental damage, misuse, unauthorized modification or repair, or non-product-related issues.

For detailed warranty terms, conditions, and reference information, please visit:

<https://www.snailax.com/pages/warranty-policy>

Proof of Purchase:

Please retain your order ID or receipt from an authorized seller to validate your claim.

Extend Your Warranty Coverage

Register your product within **30 days of purchase** to receive an **additional 1-year warranty extension**.

You may register in either of the following ways:

- 1) Visit <https://support.snailax.com> or scan the QR code to submit your order details.
- 2) You may also contact us on Facebook at <https://facebook.com/snailax> and send us your purchase information.



Need Help? Please Contact Us First

If you have any questions or encounter any issues, please contact our support team. We are here to help and ensure your comfort.

 **Tel: 734-709-6982** (Monday-Friday 9:00AM-4:30PM)

 **Email: support@snailax.com**

Our team will reply as soon as possible during business hours.

Defective Products & Returns

If your product is found to be defective within the warranty period, please contact us. Please **do not dispose of any product parts**, as they may be required for inspection or replacement.

We are committed to providing a suitable solution for every customer.

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Know more about Snailax



@Snailax



@snailax.us



@snailaxcorporation



@snailax.us

SNAILAX CORPORATION



3914 Bestech Dr, Suite A,Ypsilanti, MI 48197, USA
Tel: 734-709-6982 (Monday-Friday 9:00AM-4:30PM)
Email: support@snailax.com
Web: www.snailax.com

*Please provide your order number before contacting customer support