

140 mm

190 mm

sodastream

FOUNTAIN^{TM/MC}



user
guide







quick start guide



01 initial set up

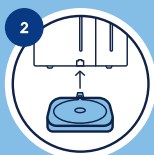

02 insert CO₂ cylinder

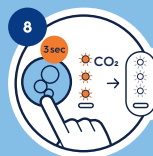

03 fill cold water



04 install flavor bottle





05 run rinse cycle & prime flavor




making your drink


01 select preferences

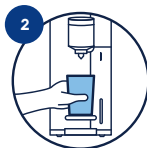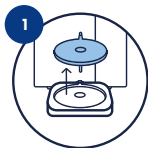

02 make drink

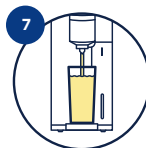

optional boost drink

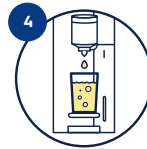

make it yours

	Classic Soda	Flavored Sparkling Water	Plain Sparkling Water	Still Drink
Carbonation Level				
Flavor Intensity	4	1 - 3	0	1 - 4

user manual



USER LICENSE

**FOR ONE SODASTREAM QUICK CONNECT Cylinder NOT FOR SALE.
PROPERTY OF SODASTREAM INDUSTRIES LTD. OR ITS AFFILIATES PROVIDED UNDER LICENSE AND PATENTED IN EU.**

This is a legally binding document between Sodastream Industries Ltd. or its affiliates ("Sodastream") and the consumer regarding the right to use a Sodastream CO₂ Quick Connect Cylinder (the "Cylinder"). The Cylinder is proprietary to Sodastream, patented and protected by other intellectual property rights. Sodastream possesses the legally required knowledge and expertise to be responsible for strict legal compliance that can only be guaranteed if the Cylinder is maintained, examined, retested and refilled by it. Thus, the Cylinder remains the property of Sodastream and is provided under License.

1. When empty, please return the Cylinder to either Sodastream or an authorized Sodastream distributor in exchange for a full Cylinder, for the price of the gas refill only.
2. Refilling an empty Cylinder by third parties may infringe Sodastream's intellectual property rights, including patents and other proprietary rights, may be risky and may violate certain laws. Sodastream only warrants the safety of Cylinders refilled by it, bearing a Sodastream tamper proof valve seal.
3. If you return the Cylinder to Sodastream or an authorized Sodastream distributor, without exchanging it for a full one, you will be entitled to a return fee of US\$ 2 or local equivalent.
4. The Cylinder, together with this User License, may be transferred to a third party provided the third party agrees to be bound by the conditions and ownership rights expressed herein.

For questions, please contact Sodastream International BV, Dongenseweg 200, 5047 SH Tilburg, The Netherlands.

Please keep in a safe place www.sodastream.com


BEFORE FIRST USE

For your safety, please read the set up and safety instructions on pages 5-10 before using the Sparkling Drink Maker. Save these instructions and provide them to any subsequent users. For more details and information regarding our Sparkling Drink Maker, including how to use and trouble-shooting guide, please go to support at sodastream.com.

1. Remove and properly discard any packaging and tape from the Sparkling Drink Maker.
2. Place the Sparkling Drink Maker on a flat stable surface.
3. Assemble the Drip Tray into place.
4. Rinse the Flavor Connect Cap and Water Tank.




Note: Only fill still water in the Water Tank. Use ice cold water for best results.

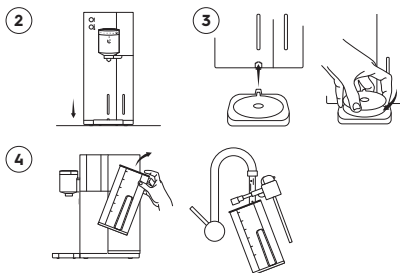

FIRST TIME SETUP

CONNECTING THE POWER ADAPTER

1. Connect the pronged plug that fits your local outlet to the power adapter.
2. Check the power cord placement at the back of the Sparkling Drink Maker and insert the plug.
3. Insert the adapter into a power outlet. The Status Light will animate and fill white, then turn off.

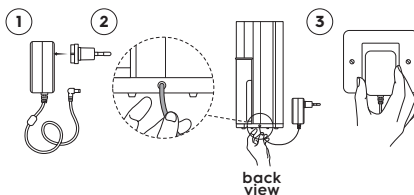

System Check: The system will display the installation status of the following components:



WATER TANK: DRINK BUTTON LIGHTS	CO₂ CYLINDER: CARBONATION LEVEL BUTTON LIGHTS	FLAVOR BOTTLE: FLAVOR DIAL LIGHT
Orange: Water Tank is missing White: Water Tank is installed	Orange: CO ₂ Cylinder is missing / low CO ₂ level – be ready with a new and full CO ₂ Cylinder on hand! White: CO ₂ Cylinder is installed and set	Off: Flavor Bottle is missing On: Flavor Bottle is installed

SODASTREAM® CO₂ QUICK CONNECT CYLINDER

Please note that the Sparkling Drink Maker is only compatible with the CO₂ Quick Connect Cylinder and is NOT compatible with the Sodastream® CO₂ Screw System Cylinder or other cylinders.

INSTALLING THE CO₂ QUICK CONNECT CYLINDER

1. Remove seal and cap from the Sodastream® CO₂ Quick Connect Cylinder.
2. Open the CO₂ Cylinder Door on the left side of the Sparkling Drink Maker.
3. Raise the Quick Connect Cylinder handle to the "open" position.
4. Insert the CO₂ Quick Connect Cylinder, **bottom first**.
5. Lower the Quick Connect cylinder handle to the "locked" position. Close the CO₂ Cylinder Door.
6. **Press and hold the Carbonation Level Button for 3 seconds to reset the CO₂ Cylinder status** – the button light should change from orange to white to recognize a new cylinder has been successfully installed. **Reset is required any time a new CO₂ Cylinder is installed.**

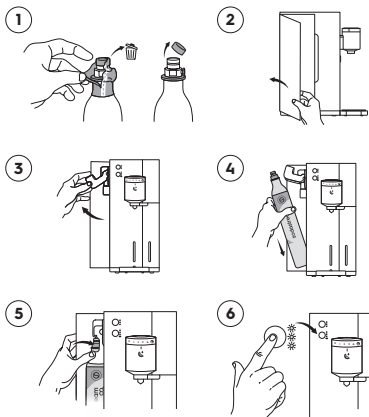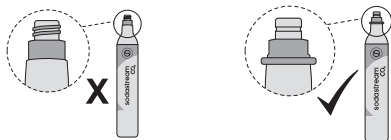


Note: When the CO₂ Level Indicator turns to orange, the CO₂ Cylinder is about to run out. This is the time to have a full refillable CO₂ Cylinder on hand. Replacement of the CO₂ Cylinder is required only when you notice a significant decrease in your beverage carbonation. One CO₂ cylinder in Sodastream Fountain makes up to 120 8 oz glasses of drink.

FILLING THE WATER TANK

1. Fill the Water Tank with very cold water or water with ice.
2. Place the Water Tank back on its dock.
3. When successful, the Drink Size Button lights will change from orange to white, and the Drink Size Button will become enabled.




Note: It is recommended to store the Water Tank in the fridge when not in use.

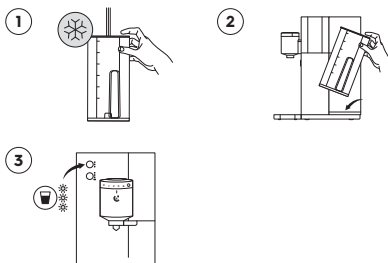

WARNING: Do not fill with any liquid aside for water. Other liquids can contaminate and clog internal parts resulting in excessive pressure, machine failure and possible personal injury.

CONNECTING THE FLAVOR BOTTLE


1. Select your desired Flavor Bottle*.
2. Remove the Flavor Bottle Cap (set a side for future use or recycle) and seal.
3. Tightly screw on the Flavor Connect Cap to the Flavor Bottle.
4. Open the Flavor Bottle Door on the front face of the unit.
5. Attach the Flavor Bottle by pushing the top of the Flavor Connect Cap up and into the Flavor Bottle slot.
6. Once the Flavor Connect Cap is in the slot, turn its Nozzle left until it clicks and locks into place.
7. When successful, the Flavor Indicator will light up.

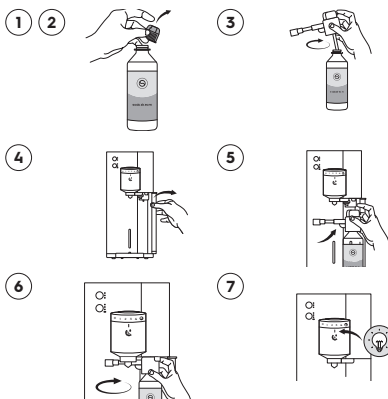

RINSE CYCLE & FLAVOR PRIMING

For first-time use of your new Sparkling Drink Maker, run a rinse cycle before making your first drink.


- 1. Place an appropriately sized vessel below the Dispense Nozzle. Press the Carbonation Level Button repeatedly until the light indicator lands on Still (no carbonation).
- 2. Set the Flavor Dial on setting #2.
- 3. Start the rinse cycle by pressing the Activation Button once.
- 4. Dispose the liquid and continue to MAKE YOUR DRINK. Priming steps below are for future Flavor Bottle installation.

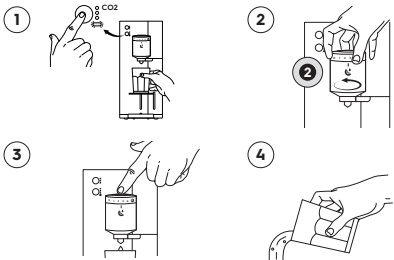

FLAVOR PRIMING

For best results, whenever attaching a new Flavor Connect Cap to a Flavor Bottle, follow the priming steps to remove any air from the pipeline**.

- 1. Place a glass under the Dispense Nozzle.
- 2. Set the Flavor Dial to "Boost" (B).
- 3. Press the Activation Button x 1 or 2 until flavor is dispensed: Boost x 1 for Zero Sugar and Diet flavors. Boost x 2 for all other flavors.
- 4. Dispose the liquid and continue to drink making.

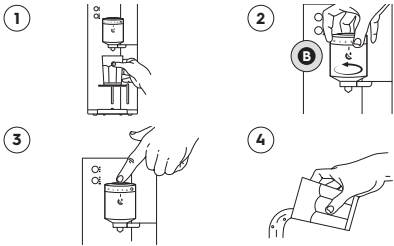

**Subsequent uses of a primed flavor bottle, even when switched out, should not require repeated priming.

MAKE YOUR DRINK

Before making your first drink, check you have completed these steps:

- INSTALL CO₂ [see p 06](#)
- FILL AND INSTALL WATER TANK [see p 06](#)
- INSTALL FLAVOR BOTTLE [see p 06](#)

- 1. Select a drink size by pressing the Drink Size Button repeatedly until the light indicator lands on your desired selection. Refer to the chart below.

SELECT DRINK SIZE*		
S	M	L
8oz (236ml)	16oz (473ml)	24oz (710ml)

*The listed dosages are intended as targets and may vary depending on differences between individual units. Based on recommended serving size = dosing stage 4 (classic soda dose).

- 2. Place an appropriately sized vessel below the Dispense Nozzle. For best carbonation level results, keep the glass as close to the Dispense Nozzle as possible. For taller vessels, like a bottle, the Drip Tray may need to be removed to fit under the Dispense Nozzle.
- 3. Select a carbonation level by pressing the Carbonation Level Button repeatedly until the light indicator lands on your desired selection. Refer to the chart below.



SELECT CARBONATION LEVEL			
○	● ○ ○	● ● ○	● ● ●
Still (no carbonation)	Light	Medium	Strong Recommended Serving

4. Start the drink making process by pressing the Activation Button once*. The Status Light ring will animate while the drink is dispensing.

SELECT FLAVOR LEVEL					
0	1	2	3	4	B
Unflavored Water	Hint 25%	Light 50%	Medium 75%	Classic Soda 100%	Boost (see below)
				Recommended Serving	

5. Start the drink making process by pressing the Activation Button once. The Status Light ring will animate while the drink is dispensing.
6. Once the drink is ready the Light ring will be fully illuminated and blinking. Enjoy your drink!




Pause / cancel the drink making process

- Pressing the Activation Button within 5 seconds will pause the process (Light ring blinks in White). Another press on the Activation Button will continue the process.
- Pressing the Activation Button after 5 seconds will cancel the drink making process and indicate that a reset is required (Light ring blinks in Orange):
 - Place an empty glass below the Dispense Nozzle.
 - Press the Activation Button to let the system drain out the water left inside.
 - Dispose the water and make a new drink.

BOOST YOUR DRINK

Use the “Boost” preset to add a touch of flavor to a drink already made, or to add a splash of a different flavor.

- Place your drink below the Dispense Nozzle.
- Turn the Flavor Dial to the Boost setting. The Status Light ring will illuminate Purple.
- Press the Activation Button, for a boost of flavor!

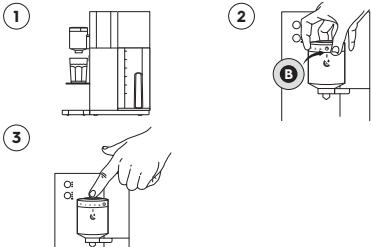

FLAVOR DOSING CHART*

Flavor Dial Setting	S		M		L	
	oz	ml	oz	ml	oz	ml
4	0.4	12	0.8	24	1.2	35
3	0.3	9	0.6	18	0.9	27
2	0.2	6	0.4	12	0.6	18
1	0.1	3	0.2	6	0.3	9
0	0	0	0	0	0	0
Boost	0.1	3	0.2	6	0.3	9

*The listed dosages are intended as targets and may vary depending on differences between individual units.


SPARKLING DRINK MAKER CARE

CLEANING FLAVOR CONNECT CAP

1. Remove Flavor Connect Cap from Flavor Bottle.
2. **Inside the sink**, disassemble Flavor Connect Cap into 4 parts: Straw, Nozzle, Pump, and Cap.
3. Wash each part with warm water to dissolve any left-over flavor.

For a deeper clean: Soak in warm soapy water or use a small bottle brush to reach hard-to-clean areas.

Optional: Wash in dishwasher (small parts may not clean thoroughly). Allow to dry fully before installing on new Flavor Bottle.

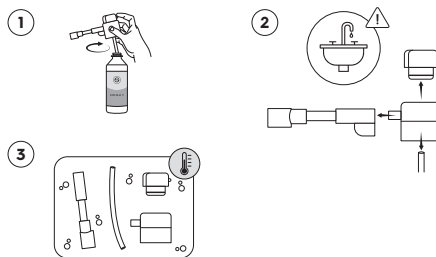

SPARKLING DRINK MAKER CARE

Never use abrasive cleaners or sharp tools to clean. If needed, use a mild liquid dish soap and a soft damp cloth to gently clean. Wipe spills to keep base dry. Do not place in water or wash in a dishwasher, doing so will seriously damage your Sparkling Drink Maker.

DETACHABLE PARTS CARE

The Drip Tray Base and Cover, Adjustable Base and Flavor Connect Caps are dishwasher safe. To clean “dishwasher safe” parts, either wash in dishwasher or rinse with cold or lukewarm water.

WARNING! Do not expose to heat above 70°C / 158°F.

TROUBLESHOOTING GUIDE

Issue	Possible cause	Solution
No carbonation	Carbonation Level Button is on “still” setting, CO ₂ Cylinder is empty or not properly installed.	Check the Carbonation Level Button setting. Ensure the CO ₂ Cylinder is securely connected. Check the CO ₂ Level Indicator, if low, replace the CO ₂ Cylinder.
Weak carbonation	Low CO ₂ level, warm water, or incorrect carbonation setting.	Make sure the Water Tank is filled with refrigerated cold water or tap water with ice. Ensure carbonation level is set to desired carbonation level. Replace CO ₂ Cylinder if CO ₂ Level Indicator shows orange. Run one large cycle to cool down the machine.
No flavor dispensing	Flavor Bottle not attached or empty, priming was not performed after Flavor Bottle change, clogged Dispense Nozzle.	Ensure Flavor Dial is not set on 0. Ensure the Flavor Bottle is securely connected using the Flavor Connect Cap. Replace if empty. Run a priming cycle after every new Flavor Bottle replacement. Wash the Flavor Connect Cap following user instructions.
Flavor too weak	Low flavor setting, Flavor Bottle is empty, or priming was not performed after Flavor Bottle change, clogged Dispense Nozzle.	Turn the Flavor Dial to a higher setting. Replace the Flavor Bottle and follow install instruction. Run a priming cycle after every new Flavor Bottle replacement. Wash the Flavor Connect Cap following user instructions.
Flavor too strong	Wrong flavor setting.	Turn the Flavor Dial to correct setting and taste again.
Flavor variation between drinks	Slight differences in flavor strength are normal.	Slight differences in flavor strength are expected. Ensure all your setting are according to your taste. Ensure Flavor Connect Cap is cleaned, priming was done and Flavor Bottle is properly connected.
Machine dispenses only water	No Flavor Bottle attached or flavor intensity set to 0.	Attach a Flavor Bottle and check the Flavor Dial is not set to 0.
Flavor Boost not working	Boost feature not activated correctly.	Activate the Flavor Boost option after the drink is dispensed.

Issue	Possible cause	Solution
Flavor Boost not working	Boost feature not activated correctly.	Activate the Flavor Boost option after the drink is dispensed.
Water not dispensing	Water Tank is empty or not properly seated.	Refill the Water Tank and ensure it clicks into place. Check for visible water level.
Machine does not respond and / or buttons not responding	Power cord unplugged or outlet issue, or system glitch or power issue.	Ensure the power cord is plugged in. Try a different outlet. Press any button and check if the device lights are on. Unplug the Sparkling Drink Maker for 30 seconds, then plug it back in. Try again.
Leaking during Flavor Bottle change	Flavor Connect Cap not sealed or swapped incorrectly.	Use only clean Flavor Connect Caps. Ensure the Flavor Connect Cap mechanism is fully locked before removing or storing.
Display or buttons not responding	System glitch or power issue.	Unplug the Sparkling Drink Maker for 30 seconds, then plug it back in. Try again.
Overflow or splashing	Wrong glass size or glass not centered. Glass is too far from the Dispense Nozzle.	Use recommended glass sizes (8oz, 16oz, 24oz). Center the glass under the Dispense Nozzle. Adjust the Adjustable Base location.
Flavor Bottle won't attach	Misaligned Flavor Connect Cap's Pump or incorrect Flavor Bottle type.	Use the correct 440ml Flavor Bottle. Assemble the Flavor Connect Cap according to instructions.
Drink / Boost / Prime process stopped in the middle	Pressed the activation button by mistake, user wanted to prevent overflow, out of water / flavor in the middle of drink making.	Pause / cancel the drink making process instructions under MAKE YOUR DRINK section.

FOR YOUR SAFETY

SAVE THESE INSTRUCTIONS AND PROVIDE THEM TO ANY SUBSEQUENT USERS. WARNING! Before using the Sparkling Drink Maker, to reduce risk of personal injury and damage to your product, please read this important safety information. Before allowing anyone to use your Sparkling Drink Maker, please be sure they understand how to do so safely. Any servicing or repair should be performed by a Sodastream® authorized service representative. The Sparkling Drink Maker is only intended for use by people over the age of 12. People with reduced physical or mental capabilities should only use the product if they are supervised by an adult responsible for their safety and after they have been given instruction concerning the safe use of the product.

TO REDUCE THE RISK OF EITHER SERIOUS INJURY OR DAMAGE TO THE SPARKLING DRINK MAKER DURING CARBONATION

- Only use your Sparkling Drink Maker in its upright position, on a flat, stable surface.
- Do not place your Sparkling Drink Maker on a hot surface (e.g., kitchen oven/stove) and never use it near a heat source (e.g., close to an open flame) or leave in direct sunlight.
- Only use water in the Water Tank.

CARBON DIOXIDE CO₂ CYLINDER

To reduce the risk of a CO₂ leak, personal injury and property damage:

- Do not use any cylinder other than the Sodastream® CO₂ Quick Connect Cylinder.
- Do not use if damaged. Inspect the CO₂ Cylinder and CO₂ Cylinder valve prior to use for dents, punctures, or other damage.
If damaged, contact a Sodastream authorized service representative.
- Do not tamper with the CO₂ Cylinder in any way, including puncturing, incinerating or removing the valve.
- Do not expose the CO₂ Cylinder to heat above 50°C / 120°F or near a heat source. Protect from sunlight.
Store in a well ventilated area.
- Do not remove a CO₂ Cylinder from the Sparkling Drink Maker when it is being operated.
- Do not handle or remove a CO₂ Cylinder while it is discharging CO₂.
- In the event of a CO₂ leak, ventilate the area, breathe fresh air and if feeling unwell seek immediate medical attention.

SAFE USE OF ELECTRICAL APPLIANCES

When using electrical appliances the following safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury:

- To protect against electric shock DO NOT place the cord, plug or Sparkling Drink Maker in water or in any liquids;
- Do not operate the Sodastream Fountain™ Sparkling Drink Maker with a damaged cord or plug;
- Do not let the cord hang over the edge of the table or counter or touch hot surfaces;
- Do not use the Sodastream Fountain™ Sparkling Drink Maker outdoors.

Only use the power adapter and power lead supplied with the Sodastream Fountain™ Sparkling Drink Maker. Using a different power adapter or lead may cause damage to the Sodastream Fountain™ Sparkling Drink Maker and to the power adapter.

If the power adapter (including the power lead and plug) becomes damaged, contact your local Sodastream® Customer Service to obtain a replacement.

SODASTREAM LIMITED WARRANTY

SODASTREAM® SPARKLING DRINK MAKERS

Great care has been taken to ensure that your Sparkling Drink Maker was delivered to you in good condition. Sodastream® warrants, subject to the terms and conditions set forth in this limited warranty, that your Sparkling Drink Maker will be free of defects in materials and workmanship under normal home use for 2 (two) years following the date of purchase. It is recommended that you register your Sparkling Drink Maker online by visiting www.sodastream.com and completing the product registration form available on the website. If your Sparkling Drink Maker malfunctions within the warranty period, and we determine the problem is due to faulty workmanship or materials, Sodastream will repair or replace it free of charge at Sodastream's discretion within the limitations set out in this warranty. Sodastream may replace your Sparkling Drink Maker with a reconditioned Sparkling Drink Maker, or an equivalent one if the model you purchased is no longer available. No refunds shall be given. This limited warranty is available to consumers who purchased the Sparkling Drink Maker for personal, family or household use.

This warranty DOES NOT cover damages to Sparkling Drink Maker resulting from:

- Abuse, misuse, alteration of the Sparkling Drink Maker, or commercial use.
- Carbonating liquids other than water.
- Normal wear and tear (e.g., discoloration).
- Product malfunctions that were a result, in whole or in part, by alteration, disassembly, or repair of the Sparkling Drink Maker by a servicer other than an authorized Sodastream Service Center.
- The use of CO₂ Cylinders or carbonating bottles other than those approved by Sodastream for use with your Sparkling Drink Maker.
- The use of the Sparkling Drink Maker with an adapter connected to the Cylinder valve or to the Sparkling Drink Maker.
- The use of an expired plastic carbonating bottle.
- Accident, shipment, or anything other than normal household use.

This warranty DOES NOT cover CO₂ Cylinders. Sodastream is not liable for incidental or consequential damages. The consumer's sole and exclusive remedy shall be repair or replacement according to the terms and conditions of this warranty. Some local laws do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. To the extent that this warranty is inconsistent with local law, this warranty shall be deemed modified to be consistent with such local law. You may also have other rights, which vary in accordance with local laws. The benefits given to the consumer by this warranty are in addition to other rights and remedies that may be afforded to the consumer by law in relation to this Sparkling Drink Maker.

TO OBTAIN WARRANTY SERVICE FOR YOUR SPARKLING DRINK MAKER

If your Sparkling Drink Maker is in need of warranty service, please contact Sodastream Customer Service by visiting www.sodastream.com. A Sodastream representative will give you specific instructions on how to arrange for the shipment of your Sparkling Drink Maker, at your expense, to one of our authorized service centers. Only Sodastream, or its agents, are authorized to provide warranty repairs or service to your Sparkling Drink Maker.

NON-WARRANTY SERVICE

If Sodastream or its authorized agents determine that the malfunction or damage to your Sparkling Drink Maker is not covered by the warranty, Sodastream will repair the Sparkling Drink Maker only upon payment of the determined repair charge.

FOR CALIFORNIA RESIDENTS

California residents may also obtain warranty service by returning any malfunctioning Sparkling Drink Maker directly to a retail store that sells similar Sodastream products. At the retail store's discretion, it may either replace the Sparkling Drink Maker or arrange for shipment to a Sodastream repair facility. Sparkling Drink Maker registration is not a prerequisite for warranty protection.

SODASTREAM® CO₂ QUICK CONNECT CYLINDERS

Your Sparkling Drink Maker has been designed to operate with a Sodastream CO₂ Quick Connect Cylinder. The use of other CO₂ Cylinders is not recommended as they may not be compatible with a Sodastream Sparkling Drink Maker. Damages resulting from the use of a cylinder other than a the Sodastream CO₂ Quick Connect Cylinder or use of the Sodastream CO₂ Quick Connect Cylinder not in accordance with the instructions included in this User Guide are not covered by the warranty. The Sodastream CO₂ Quick Connect Cylinder is provided to you under license. The license allows you to exchange your empty Cylinder for a full one for the price of the CO₂ only.

FCC CLASS B NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

ICES-003 CLASS B NOTICE

This Class B digital apparatus complies with Canadian ICES-003.

TERMS AND CONDITIONS FOR ALL EXCEPT U.S.A. CONSUMERS

Any and all claims, complaints, demands for judgment or legal actions brought hereunder relating in any way to your Sparkling Drink Maker, plastic carbonating bottle or CO₂ Cylinder shall be governed by, and construed in accordance with, the laws of the local Country in which the Sodastream Sparkling Drink Maker was purchased.

TERMS AND CONDITIONS [FOR U.S.A. CONSUMERS ONLY]

Any and all claims, complaints, demands for judgment or legal actions brought hereunder relating in any way to your Sparkling Drink Maker, plastic carbonating bottle or CO₂ Cylinder shall be governed by, and construed in accordance with, the local laws of the State in which the Sodastream® Sparkling Drink Maker was purchased and will be subject to binding arbitration as set out under the heading "Dispute Resolution by Binding Arbitration".

[THE FOLLOWING PARAGRAPH FOR U.S.A. CONSUMERS ONLY] DISPUTE RESOLUTION BY BINDING ARBITRATION PLEASE READ CAREFULLY. IT AFFECTS YOUR RIGHTS.

Any dispute, controversy or claim arising out of or relating to any Sodastream product including, but not limited to, claims of personal injury and/or property damage, shall be submitted to arbitration administered by the American Arbitration Association in accordance to its then existing Consumer Arbitration Rules. The AAA Rules are available online at [HYPERLINK "http://www.adr.org/"](http://www.adr.org/)www.adr.org, or by calling the AAA at 800.778.7879. The Federal Arbitration Act (Title 9 of the U.S. Code) shall govern the interpretation, enforcement, and proceedings relating to this arbitration. Arbitration is more informal than a lawsuit in court. It uses a neutral arbitrator instead of a judge or jury, allows for more limited discovery than in court, and is subject to very limited review by courts. Arbitrators can award the same damages and relief that a court can award. By agreeing to arbitration, the parties understand and agree that they are waiving their rights to maintain other available resolution processes, such as a court action or administrative proceeding, to settle their disputes. Any claim shall be brought only in the party's individual capacity, and shall not in any case be brought by the party as a plaintiff or class member in any purported class or representative proceeding. A party who intends to seek arbitration must first send to the other, by certified mail, a written Notice of Dispute ("Notice"). The Notice to Sodastream should be addressed to Sodastream's Corporate Office set out on www.sodastream.com ("Notice Address"). The Notice must (a) describe the nature and basis of the claim or dispute; and (b) set forth the specific relief sought. If an agreement to resolve the claim is not reached within 30 days after the Notice is received, any party may commence an arbitration proceeding. During the arbitration, the amount of any settlement offer made by a party shall not be disclosed to the arbitrator. There shall be one arbitrator. The arbitrator shall have the power to rule on his or her own jurisdiction, including, but not limited to, any objections with respect to the existence, scope, or validity of the arbitration provision or to the arbitrability of any claim or counterclaim. The arbitrator's award shall be binding on all parties, and judgment upon the award may be entered by any court of competent jurisdiction.

PRODUCT DISPOSAL INSTRUCTIONS

Please recycle your expired and damaged Plastic Carbonating Bottles in accordance with local recycling laws. The packaging in which Sodastream products are supplied is made of recyclable materials. Contact your local authority for further information on recycling.

MACHINE RATING INFORMATION

Maximum Working Pressure: 87 psi / 7.2 bar

Maximum Allowed Operating Temperature: 40°C/104°F

ELECTRICAL

Input: 24V DC

Max Current: 1.0 Amp

Max Power Consumption: 24W

Only use the power adapter and power cord supplied with the Sodastream Fountain™ Sparkling Drink Maker.


Using a different power adapter or cord may cause damage to the Sparkling Drink Maker and to the power adapter. If the power adapter (including the power cord and plug) becomes damaged, contact your local Sodastream Customer Service to obtain a replacement.

Sodastream® is a registered trademark of Sodastream (Switzerland) GmbH or its affiliates.





**we make it easy for you
to keep things bubbly**

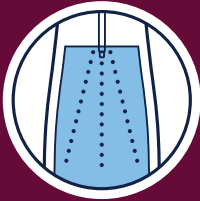

fizz

enjoy easily made fizzy
drinks at home



swap

exchange your empty
cylinders in-store or online





save

save up to 50% on
swapped cylinders*

*compared to new spare SodaStream cylinders, actual savings may vary by country



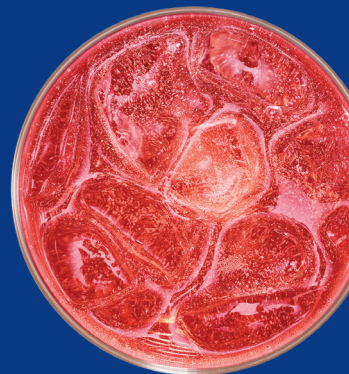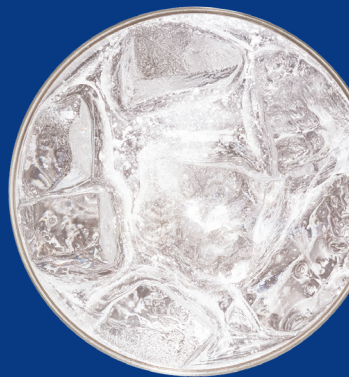

sodastream[®]

drink better. push for better.[®]

Welcome to a world of flavors freshly made by you,
while replacing over a thousand single-use plastic bottles.

4011880010 - 12/25